

[www.alcatelonetouch.com](http://www.alcatelonetouch.com)



For more information about how to use the phone, please go to [www.alcatelonetouch.com](http://www.alcatelonetouch.com) to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade, etc.

ALCATEL **onetouch.**

*my world in one touch*

ALCATEL **onetouch.**

# Introduction.....

TCT Mobile Limited would like to thank you for purchasing this cellphone.

## Home screen

- Convenient at-a-glance view of Widget applications
- Menu shortcuts for quick access
- Neat organization of applications along any edge

## Power media applications

- Music player & Radio
- Video player & Streaming
- Webcam

The 2.0 Megapixel camera is a good companion for PC instant message.

## Bluetooth

With Bluetooth 2.1 supporting A2DP profiles, enjoy handsfree conversations.

## My friends

Popular websites (like Bebo, Friendster, hi5, Myspace, etc.) to stay in touch with your friends wherever you are, whenever you want.

# Table of contents

<b>Safety and use.....</b>	<b>6</b>
<b>General information .....</b>	<b>11</b>
<b>1 Getting started.....</b>	<b>13</b>
1.1 Set-up .....	13
1.2 Power on your cellphone.....	15
1.3 Power off your cellphone.....	15
1.4 Using the touchscreen .....	16
<b>2 Your cellphone .....</b>	<b>17</b>
2.1 Keys and connectors .....	18
2.2 Home screen.....	19
<b>3 Making a call.....</b>	<b>24</b>
3.1 Placing a call .....	24
3.2 Calling your voicemail .....	25
3.3 Receiving a call.....	25
3.4 During a call .....	26
3.5 Conference calls .....	28
3.6 Line switching.....	28
<b>4 Menu arrange .....</b>	<b>29</b>
<b>5 Messages .....</b>	<b>30</b>
5.1 Access .....	30
5.2 Conversational On (Off) mode .....	30
5.3 Write message .....	31
5.4 Search.....	32
5.5 Alerts.....	32
5.6 Delete threads .....	33
5.7 Available options.....	33
<b>6 Email.....</b>	<b>35</b>
6.1 Access .....	35
6.2 Email account set-up.....	35
6.3 Write email.....	36

6.4	Inbox.....	36
6.5	Outbox.....	36
6.6	Sent.....	36
6.7	Drafts.....	36
6.8	Available options.....	37
<b>7</b>	<b>Palringo.....</b>	<b>38</b>
7.1	Access.....	38
7.2	Open a Palringo account online.....	38
7.3	Sign in/Sign out.....	38
7.4	Add service.....	39
7.5	Chat.....	39
7.6	Contacts.....	39
7.7	Groups.....	39
<b>8</b>	<b>Contacts.....</b>	<b>40</b>
8.1	Consulting your contacts.....	40
8.2	Adding a contact.....	42
8.3	Contacts importing, exporting and grouping.....	42
8.4	Available options.....	43
<b>9</b>	<b>Call log.....</b>	<b>44</b>
9.1	Access.....	44
9.2	Available options.....	44
<b>10</b>	<b>Media applications.....</b>	<b>48</b>
10.1	Music player.....	48
10.2	Image viewer.....	51
10.3	Video player.....	52
10.4	Radio.....	53
<b>11</b>	<b>Internet.....</b>	<b>55</b>
11.1	My friends.....	55
11.2	Opera.....	55
11.3	Wap.....	55
11.4	News.....	57
11.5	Weather.....	58
11.6	Facebook.....	59
11.7	mTweet.....	59

<b>12</b>	<b>Entertainment.....</b>	<b>60</b>
12.1	Stopwatch.....	60
12.2	Ebook.....	60
12.3	Java.....	61
<b>13</b>	<b>Camera.....</b>	<b>63</b>
13.1	Access.....	63
13.2	Camera.....	63
13.3	Video.....	64
<b>14</b>	<b>Profiles.....</b>	<b>66</b>
14.1	General.....	66
14.2	Meeting.....	67
14.3	Outdoor.....	67
14.4	Indoor.....	67
14.5	Silence.....	67
14.6	Flight mode.....	67
<b>15</b>	<b>File manager.....</b>	<b>68</b>
15.1	My audios.....	68
15.2	My images.....	69
15.3	My videos.....	69
15.4	Ebook.....	69
15.5	My creations.....	69
15.6	Others.....	69
15.7	Phone.....	69
15.8	SD card.....	70
15.9	Managing audios, images, videos and others.....	71
15.10	Formats and compatibility.....	72
15.11	Memory status.....	72
<b>16</b>	<b>Bluetooth.....</b>	<b>73</b>
<b>17</b>	<b>Others.....</b>	<b>75</b>
17.1	Calendar.....	75
17.2	Calculator.....	76
17.3	Notes.....	76
17.4	Tasks.....	77
17.5	Clock.....	78

17.6	Converter.....	79
17.7	Voice recorder.....	79
<b>18</b>	<b>Settings .....</b>	<b>80</b>
18.1	Phone settings .....	80
18.2	Call settings .....	83
18.3	Security .....	83
18.4	Network.....	84
18.5	Connectivity.....	85
18.6	Default browser.....	85
<b>19</b>	<b>Making the most of your cellphone .....</b>	<b>86</b>
19.1	PC suite .....	86
19.2	Webcam .....	87
<b>20</b>	<b>Latin input mode/character table.....</b>	<b>88</b>
<b>21</b>	<b>Alcatel Mobile Phones Limited Warranty.....</b>	<b>91</b>
<b>22</b>	<b>Accessories .....</b>	<b>93</b>
<b>23</b>	<b>Troubleshooting.....</b>	<b>94</b>

## Safety and use.....

We recommend that you read this chapter carefully before using your cellphone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

### • TRAFFIC SAFETY:

Given that studies show that using a cellphone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their cellphone when the vehicle is not parked. Check the laws and regulations on the use of wireless cellphones and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas.

When driving, do not use your cellphone and headphones to listen to music or to the radio. Using headphones can be dangerous and forbidden in some areas.

When switched on, your cellphone emits electromagnetic waves that can interfere with the vehicle's electronic systems such as ABS anti-lock brakes or airbags. To ensure that there is no problem:

- do not place your cellphone on top of the dashboard or within an airbag deployment area.
- check with your car dealer or the car manufacturer to make sure that the car's electronic devices are shielded from cellphone RF energy.

### • CONDITIONS OF USE:

You are advised to switch off the cellphone from time to time to optimize its performance.

Remember to abide by local authority rules of cellphone use on aircrafts.

Operational Warnings: Obey all posted signs when using mobile devices in public areas.

Follow Instructions to Avoid Interference Problems: Turn off your mobile device in any location where posted notices instruct you to do so. In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

Switch the cellphone off when you are in health care facilities, except in designated areas. As with many other types of equipment now in regular use, cellphones can interfere with other electrical or electronic devices, or equipment using radio frequency.

Switch the cellphone off when you are near gas or flammable liquids. Strictly obey all signs and instructions posted in a fuel depot, gas station, or chemical plant, or in any potentially explosive atmosphere.

When the cellphone is switched on, it should be kept at least 15 cm from any medical device such as a pacemaker, a hearing aid or insulin pump. In particular when using the cellphone you should hold it against the ear on the opposite side to the device, if any.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using your mobile device with your implantable medical device, consult your healthcare provider.

To avoid hearing impairment, answer the call before holding your cellphone to your ear. Also move the handset away from your ear while using the "hands-free" option because the amplified volume might cause hearing damage. It is recommended to have proper supervision while small children use your cellphone.

When replacing the cover please note that your cellphone may contain substances that could create an allergic reaction.

Always handle your cellphone with care and keep it in a clean and dust-free place.

Do not allow your cellphone to be exposed to adverse weather or environmental conditions (moisture, humidity, rain, infiltration of liquids, dust, sea air, etc.). The manufacturer's recommended operating temperature range is -10°C (14°F) to +55°C (131°F) (the max value depends on device, materials and housing paint/texture).

Over 55°C (131°F) the legibility of the cellphone's display may be impaired, though this is temporary and not serious.

Do not open or attempt to repair your cellphone yourself.

Do not drop, throw or try to bend your cellphone.

Do not use the cellphone if the glass made screen, is damaged, cracked or broken to avoid any injury.

Do not paint it.

Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your cellphone model.

TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.

Your cellphone should not be disposed of in a municipal waste. Please check local regulations for disposal of electronic products.

Remember to make back-up copies or keep a written record of all important information stored in your cellphone.

Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or when playing video games. These seizures or blackouts may occur even if a person never had a previous seizure or blackout. If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult your doctor before playing video games on your cellphone or enabling a flashing-lights feature on your cellphone. Parents should monitor their children's use of video games or other features that incorporate flashing lights on the cellphones.

All persons should discontinue use and consult a doctor if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation.

To limit the likelihood of such symptoms, please take the following safety precautions:

- Play at the farthest distance possible from the screen.

When you play games on your cellphone, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. Follow these instructions to avoid problems such as tendinitis, carpal tunnel syndrome, or other musculoskeletal disorders:

- Take a minimum of a 15-minute break every hour of game playing.

- If your hands, wrists, or arms become tired or sore while playing, stop and rest for several hours before playing again.

- If you continue to have sore hands, wrists, or arms during or after playing, stop the game and see a doctor.



Prolonged exposure to music at full volume using the music player may damage your hearing. Set your cellphone's volume to its lowest setting prior to inserting headphones in your ears and adjust the volume to your preference. Only use headphones that are recommended by TCT Mobile Limited and its affiliates.

## • PRIVACY:

Please note that you must respect the laws and regulations in force in your jurisdiction or other jurisdiction(s) where you will use your cellphone regarding taking photographs and recording sounds with your cellphone. Pursuant to such laws and regulations, it may be strictly forbidden to take photographs and/or to record the voices of other people or any of their personal attributes, and reproduce or distribute them, as this may be considered to be an invasion of privacy.

It is the user's sole responsibility to ensure that prior authorization be obtained, if necessary, in order to record private or confidential conversations or take a photograph of another person; the manufacturer, the seller or vendor of your cellphone (including the operator) disclaim any liability which may result from the improper use of the cellphone.

## • BATTERY AND ACCESSORIES:

Before removing the battery from your cellphone, please make sure that the cellphone is switched off.

Observe the following precautions for battery use:

- Do not attempt to open the battery (due to the risk of toxic fumes and burns).

- Do not puncture, disassemble or cause a short-circuit in a battery,

- Do not burn or dispose of a used battery in the garbage or store it at temperatures above 60°C (140°F).

Batteries must be disposed of in accordance with locally applicable environmental regulations. Only use the battery for the purpose for which it was designed. Never use damaged batteries or those not recommended by TCT Mobile Limited and/or its affiliates.



This symbol on your cellphone, the battery and the accessories means that these products must be taken to collection points at the end of their life:

- Municipal waste disposal centers with specific bins for these items of equipment

- Collection bins at points of sale.

They will then be recycled, preventing substances being disposed of in the environment, so that their components can be reused.

### In European Union countries:

These collection points are accessible free of charge. All products with this sign must be brought to these collection points.

### In non European Union jurisdictions:

Items of equipment with this symbol are not to be thrown into ordinary bins if your jurisdiction or your region has suitable recycling and collection facilities; instead they are to be taken to collection points for them to be recycled.

In the United States you may learn more about CTIA's Recycling Program at [www.recyclewirelessphones.com](http://www.recyclewirelessphones.com)

**CAUTION: RISK OF EXPLOSION IF BATTERY IS REPLACED BY AN INCORRECT TYPE. DISPOSE OF USED BATTERIES ACCORDING TO THE INSTRUCTIONS**

## • CHARGERS

Home A.C./ Travel chargers will operate within the temperature range of: 0°C (32°F) to 40°C (104°F). The chargers designed for your cellphone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

Characteristics of power supply (depending on the country):

Travel charger: Input: 100-240 V, 50/60 Hz, 0.15 A

Output: 5 V, 400/550 mA

Battery: Lithium 850 mAh

## • RADIO WAVES:

**THIS CELLPHONE MEETS THE GOVERNMENT'S REQUIREMENTS FOR EXPOSURE TO RADIO WAVES.**

Your cellphone is a radio transmitter and receiver. It is designed and manufactured not to exceed the emission limits for exposure to radio-frequency (RF) energy.

These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. These guidelines include a substantial safety margin designed to ensure the safety of all persons, regardless of age and health.

The exposure standard for cellphones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by public authorities such as the Federal Communications Commission of the US Government (FCC), or by Industry Canada, is 1.6 W/kg averaged over 1 gram of body tissue. Tests for SAR are conducted using standard operating positions with the cellphone transmitting at its highest certified power level in all tested frequency bands.

Although the SAR is determined at the highest certified power level, the actual SAR level of the cellphone while operating can be well below the maximum value. This is because the cellphone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station antenna, the lower the power output of the cellphone.

Before a cellphone model is available for sale to the public, compliance with national regulations and standards must be shown.

The highest SAR value for this model cellphone when tested is 0.689 W/Kg for use at the ear and 1.16 W/Kg, for use close to the body.

While there may be differences between the SAR levels of various cellphones and at various positions, they all meet the government requirement for RF exposure. For body-worn operation, the cellphone meets FCC RF exposure guidelines provided that it is used with a non-metallic accessory with the handset at least 1.5 cm from the body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines.

Additional information on SAR can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site: <http://www.phonefacts.net>

The World Health Organization (WHO) considers that present scientific information does not indicate the need for any special precautions for use of cellphones. If individuals are concerned, they might choose to limit their own or their children's RF exposure by limiting the length of calls, or using "hands-free" devices to keep cellphones away from the head and body. (fact sheet n°193).

Additional WHO information about electromagnetic fields and public health are available on the following website: <http://www.who.int/peh-emf>.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.

- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

- Consult the dealer or an experienced radio/ TV technician for help.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

For the receiver devices associated with the operation of a licensed radio service (e.g. FM broadcast), they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the condition that this device does not cause harmful interference.

For other devices, they bear the following statement:

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

(1) this device may not cause harmful interference

(2) this device must accept any interference received, including interference that may cause undesired operation.

Your cellphone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it.

As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the cellphone at least 1.5 cm away from the body.

## • LICENCES

Obigo®



is a registered trademark of Obigo AB.

microSD Logo is a trademark.



The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

## one touch 888A Bluetooth QD ID B017652

TouchPal™ and CooTek™ are trademarks of Shanghai HanXiang (CooTek) Information Technology Co., Ltd. and/or its Affiliates.

Java™ and all Java™ based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the U.S. and other countries.



Opera Mini™

is a registered trademark of Opera Mini.



Facebook and the f Logo are trademarks of Facebook, Inc., and are used under license.



Twitter and the T Logo are trademarks of Twitter, Inc., and are used under license.

## Hearing Aid Compatibility

Your cellphone is rated: "For Hearing Aid", to assist hearing device users in finding cellphones that may be compatible with their hearing devices.

This device is HAC M3/T3 compatible.

For more information please refer to "Hearing Aid Compatibility with Mobile Phones" leaflet or visit our website <http://www.alcatelonetouch.com>

## General information .....

- **Website:** [www.alcatelonetouch.com](http://www.alcatelonetouch.com)
- **Facebook:** <http://www.facebook.com/alcatelonetouchusa>
- **Twitter:** <http://www.twitter.com/alcatelI touch>
- **Hot Line Number:** In the United States, call 877-702-3444 for technical support.

On our Internet site, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: [www.alcatelonetouch.com](http://www.alcatelonetouch.com)

Your cellphone is a transceiver that operates on GSM/GPRS/EDGE in quad-band with 850/900/1800/1900 MHz.

## Protection against theft <sup>(1)</sup>

Your cellphone is identified by an IMEI (cellphone serial number) shown on the packaging label and in the product's memory. We recommend that you note the number the first time you use your cellphone by entering \*#06# and keep it in a safe place. It may be requested by the police or your operator if your cellphone is stolen.

## Disclaimer

There may be certain differences between the user manual description and the cellphone's operation, depending on the software release of your cellphone or specific operator services.

 
TCT Mobile shall not be held legally responsible for such differences, if any, nor for their potential consequences, which responsibility shall be borne by the operator exclusively.

<sup>(1)</sup> Contact your network operator for service availability.

# Getting started .....


## 1.1 Set-up

### Removing or installing the back cover

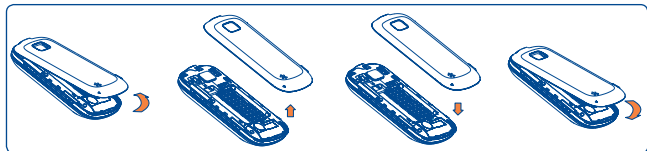

### Inserting or removing the SIM card <sup>(1)</sup>

 You must insert your SIM card to make phone calls. Please power off your cellphone and remove battery before inserting or removing the SIM card.

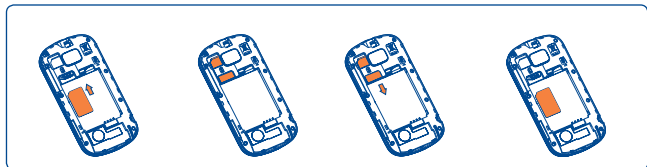

After removing the back cover, insert your SIM card according to the graphics on the back of the cellphone. Make sure that it is correctly inserted. To remove the card, press and slide it out.


<sup>(1)</sup> Check with your network operator to make sure that your SIM card is 3V or 1.8V compatible. The old 5 Volt cards can no longer be used. Please contact your operator.

### Installing or removing the battery



 - Insert and click the battery into place, then close the cellphone cover.
- Unclip the cover, then remove the battery.

### Charging the battery

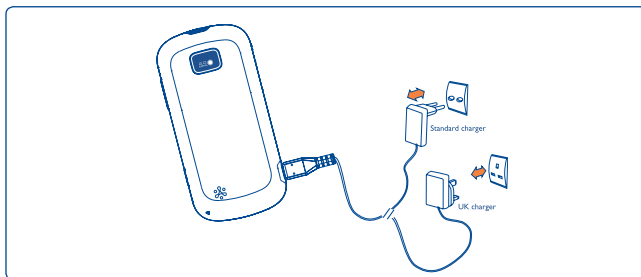

Connect the battery charger to your cellphone and outlet respectively.

- Charging may take about 20 minutes to start if the battery is flat.
- Be careful not to force the plug into the socket.
- Make sure the battery is correctly inserted before connecting the charger.
- The outlet must be near to the cellphone and easily accessible (avoid electric extension cables).
- When using your cellphone for the first time, charge the battery fully (approximately 3 hours). You are advised to fully charge the battery (🔋).



To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the outlet; switch off Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

## 1.2 Power on your cellphone

Hold down the  key until the cellphone powers on, type in your PIN code if necessary and then confirm. The Home screen is displayed.

If you do not know your PIN code or if you have forgotten it, contact your network operator. Do not leave your PIN code with your cellphone. Store this information in a safe place when not in use.

If Broadcast SMS are displayed, touch to browse through them or press  to return to the Home screen.

While the cellphone is searching for a network, "**Searching/Emergency**" will be displayed.

## 1.3 Power off your cellphone

Hold down the  key until the cellphone powers off.

## 1.4 Using the touchscreen

### Touch



To access an application, touch it with your finger.

### Drag



 
Place your finger on the screen to drag the object to the destination.

### Scroll



Slide the screen to scroll up and down the applications, images, web pages...at your convenience.

## 2 Your cellphone.....

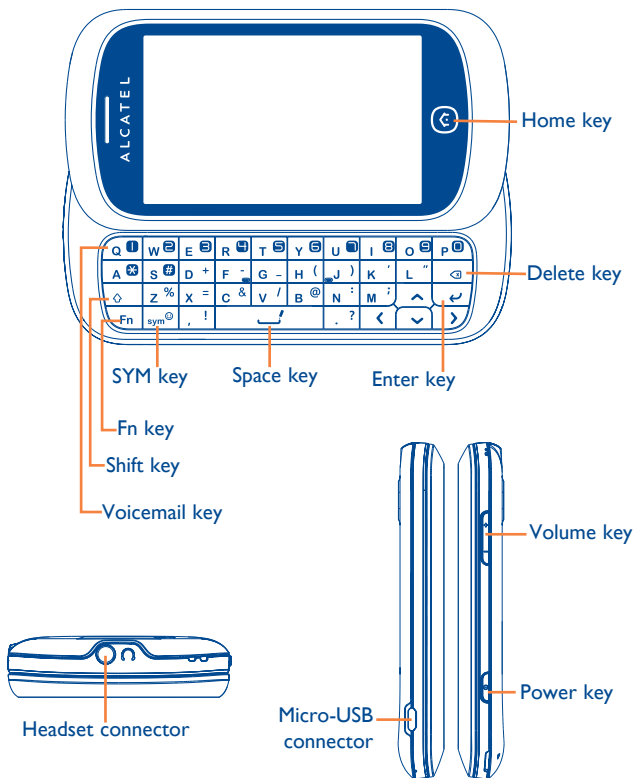

### 2.1 Keys and connectors



- Return to the Home screen



- Press: Reject a call  
Lock/unlock the screen
- Press and hold: Power on/off



- Press and hold: Access your voicemail



- Press once: Input a capitalized character
- Press twice: Lock the keyboard in capital letter input mode



- Press: Press once: Input a top-half character  
Press twice: Lock the keyboard in top-half key input mode
- Fn+ B: Access Bluetooth
- Fn+ M: Access Music player
- Fn + P: Access Profiles
- Fn + J: Access Java applications



- Press: Enter a space (on edit mode)
- Press and hold: Access language list (on edit mode)
- Hold down Fn key, then press Space key to select input mode (on edit mode)



- Enter symbol table
- Hold down Fn key, then press sym key to enter emoticon table



 
- Confirm an option
- Enter the next line



- Press: Volume up/down  
Zoom in/out
- Press and hold: Launch touch screen calibration

## 2.2 Home screen

You can bring all the items (shortcuts and widgets) you love or use most frequently to your Home screen for quick access.

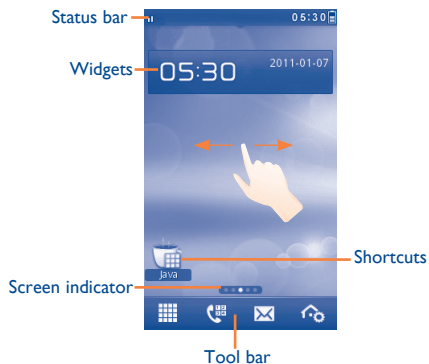

The Home screen is provided in an extended format to provide you with more space for adding widgets and shortcuts. Slide the Home screen horizontally left and right to get a complete view of the Home screen. Small dots at the bottom of the screen indicate which screen you are viewing.

### 2.2.1 Status bar icons <sup>(1)</sup>



#### Battery charge level



**Vibrate alert:** your cellphone vibrates, but does not ring or beep with the exception of the alarm (see page 66).



**Silence mode:** your cellphone does not ring, beep or vibrate with the exception of the alarm (see page 67).



**Flight mode.**



**Bluetooth status (Activated).**



**Bluetooth status (Connected to an audio device).**



**Java status (Activated).**



**Headset connected.**



**Keypad & LCD touch locked.**



**Keypad & LCD touch unlocked.**



**Voicemail message arrived.**




















**Missed calls.**



**Call in progress.**


<sup>(1)</sup> The icons and illustrations in this guide are provided for information purposes only.

-  **Call forwarding activated:** your calls are forwarded (see page 46).
-  **Stopwatch is active.**
-  **Radio is on.**
-  **Alarm or appointments programmed** (see page 75, 78).
-  **Music player active.**
-  **Email unread.**
-  **WAP messages** <sup>(1)</sup>.
-  **SD card scanning completed.**
-  **SIM card unavailable.**
-  **Line switching** <sup>(1)</sup>; indicates the selected line.
-  **Level of network reception.**
-  **Roaming.**
-  **GPRS connection status** (Activated).
-  **GPRS connecting.**
-  **EDGE connecting.**
-  **EDGE attached.**
-  **Sending message.**

 **Receiving message.**

 **SMS unread.**

 **MMS unread.**

 **(Flickering) Message list is full:** your cellphone cannot accept any new messages. You must access the message list and delete at least one message.

### 2.2.2 Status list

The Status list contains information about significant events, like Missed calls, Unread messages, E-mails as well as the Radio & Music player current playing information, etc. The purpose is to allow you faster access to the interactive applications.

Touch the status bar and drag down to open, drag up to close.

To open an application, touch it from the list.

### 2.2.3 Toolbar


Toolbar with 4 fixed shortcuts to access **main menu**, **making a call (Call log/Contacts)**, **Messages**, **edit the Home screen**.

<sup>(1)</sup> Depending on your network operator.



## 2.2.4 Personalize the Homescreen

### Adding items

To add an item from the main menu, you can select one of the following ways:


- Touch and hold an item from the main menu list.
- Touch  from the tool bar and select **"Add widgets/Add shortcuts"**.
- Touch and hold an empty area from the main screen, select **"Add widgets/Add shortcuts"** from the window that opens, then touch the item you want to add to the Home screen.

### Editing/Removing/Re-organizing items

Press and hold the application on the Home screen to edit/remove/re-organize it, touch  to edit (only for my favorites), touch  to remove. Touch and hold the application until location frames show up on the Homescreen, then drag it to the location you desire.

### Customizing wallpaper

To personalize your wallpaper, you can select one of the following two ways:






- Touch and hold an empty area from the Home screen, select **"Wallpaper"**, then touch a folder to select an image as your wallpaper.
- Touch  from the tool bar, select **"Wallpaper"**, then touch a folder to select an image as your wallpaper (See page 51).



# 3 Making a call.....

## 3.1 Placing a call

To place a call, you can either type the desired number directly on the hardware keypad, or you can touch  on the tool bar.




Enter the desired number on the on-screen keypad directly or select a contact from Call log or Contacts by touching  or  respectively, then touch  to place the call. Press  to return to the Home screen. If you want to return to the call screen, touch .



The number you entered can be saved to Contacts by selecting . If you make a mistake, you can delete the incorrect digits by touching .

To hang up the call, press the  key.

## Making an emergency call

If your cellphone has network coverage, dial emergency number and touch  to make an emergency call. This works even without a SIM card and without typing the PIN code.

### 3.2 Calling your voicemail <sup>(1)</sup>




Your voicemail is provided by your network to avoid missing calls. It works like an answering machine that you can consult at any time. To access your voicemail, hold down  on the on-screen keypad or press and hold .


If the access number for your operator's voicemail service does not work, dial the number that you were given. To change this number at a later date, refer to "**My numbers**" (see page 44).



To use your voicemail service from abroad, contact your network operator before leaving.

### 3.3 Receiving a call

When you receive an incoming call, drag the green cellphone icon  to the right to answer. Press  to return to the Home screen. If you want to return to the call screen, touch .

If the  icon is displayed, the vibrator is activated and there is no ringtone.

If the  icon is displayed, the cellphone neither rings nor vibrates.



The caller's number is displayed if it is transmitted by the network (contact your network operator to check service availability).

<sup>(1)</sup> Contact your network operator to check service availability.

## Muting the ringtone




You may mute ringtone of current incoming call by press Volume key.

### Rejecting a call

 
Press the  key or drag the red cellphone icon  to the left to reject the call. Or, to reject an SMS call, drag down the yellow message icon .

### 3.4 During a call <sup>(1)</sup>

#### Available functions

During a call, touch  to use your contacts, calendar, short messages etc. without losing your caller. Press  to return to the Home screen. If you want to return to the call screen, touch .

<sup>(1)</sup> Contact your network operator to check service availability.

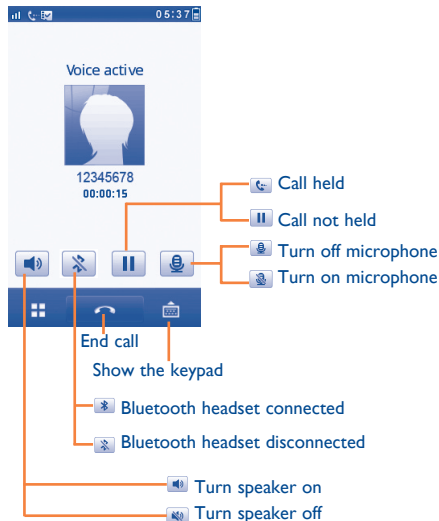


Move the handset away from your ear while turn on the speaker because the amplified volume might cause hearing damage.

You can switch the audio function from handset to Bluetooth device when connected.



### Adjusting the volume

You can adjust the sound level during a call using the Volume key.

### Handling two calls

- Answering a second call (ensure that "Call waiting" is activated, see page 45).
- To call a second party during a call, you may touch  and select "New call".

### 3.5 Conference calls <sup>(1)</sup>

Your cellphone allows you to talk to several people at the same time (up to five). If you are on a double call, touch  and select "Conference call". If a third call comes in, answer it by dragging the green cellphone icon  to the right and speak with your new caller.

This caller becomes a member of the conference if you press  and select "Conference call".

### 3.6 Line switching <sup>(1)</sup>

Your SIM card can contain two distinct cellphone numbers. Under "Call log\Options\Call settings", choose "Line switching" and then select a default line; all your outgoing calls will be made from this number. Incoming calls, however, will continue to use either of the two lines.

The services programmed on the default line do not impact those selected on the other line.


<sup>(1)</sup> Contact your network operator to check service availability.

## 4 Menu arrange.....



The main menu can be altered according to your preference.

To access this function, first select  to enter the main menu.

### Change the order

Select "**Move**" via , which will take you to the main menu option mode. Focusing on the main menu item you want to move will place a tick "✓" next to it, then release it at your preferred location. When finished, touch "**Done**" to save the operation.

### Add and remove

Select "**Add and remove**" via , touch the left check box of the selected menu once to add/remove. When finished, touch  to save the operation.

## 5 Messages.....



You can create, edit and receive SMS and MMS with this cellphone.




MMS enables you to send video clips, images, photos, animations and sounds to other compatible mobiles and e-mail addresses.




The MMS function can only be used if the service is provided by your operator, and if your contract includes the MMS option and if all the parameters for MMS have been entered (see page 34).

### 5.1 Access







You may access this menu using the following options:

- Touch  to enter the main menu screen, and then select .
- Access from tool bar by selecting .

### 5.2 Conversational On (Off) mode



In conversational on mode, you can view chat history in chronological order. In conversational off mode, you can access the following folders: **Inbox, Outbox, Sent, Broadcast SMS, Voicemail, Drafts**, etc. You can switch between these two modes by selecting "**Switch view mode**" via . Conversational on mode is set as the default mode and the following instructions are based on this mode.

## Useful icons:


-  Options
-  Compose new message
-  Search for a thread
-  Delete threads
-  Reply to the message
-  Back

## 5.3 Write message

Touch  to create text/multimedia messages (See page 88).


One or more recipients can be added from the contact list. To remove a recipient, move the cursor to the end of the recipient's name, and touch . You can select a recipient from Contacts by touching .

An SMS will be converted to MMS automatically when: images, videos, audio, slides or attachments are inserted; Subject, CC/BCC/email address is added; or the message contains more than 8 pages of text.

 Specific letters (accent) will increase the size of the SMS, this may cause multiple SMS to be sent to your recipient.

## Timer send

Schedule an SMS/MMS to be sent out at predefined time (select "Timer send" via .

 An SMS message of more than a certain number of characters (the number of characters depends on your language) will be charged as several SMS. An MMS message containing photos and/or sounds may also be billed as more than one message.

## 5.4 Search

To search for a thread, you may touch  and input the initial of a contact name. Subsequent letters may be added to refine the search.

## 5.5 Alerts

### 5.5.1 WAP messages

Folder for WAP push messages.

### 5.5.2 Setting messages

Folder for provisioning messages.



### 5.5.3 Voicemail

View and edit your voicemail number.

### 5.5.4 Broadcast SMS

Folder for broadcast SMS.

## 5.6 Delete threads

To delete threads (containing all conversations), touch  and multi-select the threads you want to delete and then touch .

## 5.7 Available options

### 5.7.1 Switch view mode

You can switch message view mode between conversational on and off modes.

### 5.7.2 Settings

#### Text messages

<b>Profile settings</b>	Profiles can be retrieved directly from SIM card. Alternatively, you can create your own profile.
<b>Common settings</b>	Delivery report, request for acknowledgement of delivery report On/Off. Reply path <sup>(1)</sup> : show reply path.
<b>Alphabet management</b>	Enables the definition of SMS data coding for SMS sending.
<b>Memory status</b>	Memory used on the cellphone.
<b>Preferred storage</b>	Select default message storage, SIM or cellphone.
<b>Preferred bearer</b>	Bearer preference.

<sup>(1)</sup> Depending on your network operator.

#### Multimedia messages

<b>Edit</b>	Set slide timing, edit mode, image size, signature, etc.
<b>Send</b>	Set the values for validity period, Read report, etc.
<b>Retrieve</b>	Set the values for Home network, Roaming network, etc.
<b>Edit profiles</b>	Follow the same procedure as for setting your WAP connection.
<b>MMS memory status</b>	Memory used on the cellphone.

#### Broadcast SMS <sup>(1)</sup>

<b>Receiving mode</b>	Enable to receive Broadcast SMS.
<b>Languages</b>	Language selection.
<b>Channel settings</b>	Select/Add/Edit/Delete channels.

### 5.7.3 Memory status

This records total memory usage for both cellphone and SIM card.

<sup>(1)</sup> Depending on your network operator.

# 6 Email .....




Your cellphone has an email client with the settings predefined for a few popular email services like – GoogleMail, Yahoo, AOL, etc. Besides this, you can set up other POP3 or IMAP4 email accounts that you may be using.

## 6.1 Access

Touch  from tool bar to enter the main menu, select "Email".



## 6.2 Email account set-up

### Pre-defined email service

If you own an email account of predefined services, you can install it to your cellphone by selecting the service (GoogleMail, yahoo, etc.), entering the username, password and account name, and then confirming with by touching .

### New email service

To set up a new email account other than the predefined email services, touch  and then "Other Email accounts".

You are required to enter your email address, display name, password, account name, then confirm by touching  After you'll need to select protocol<sup>(1)</sup> (POP3 or IMAP4) and network, then enter your incoming server address and outgoing server address, select by touching .

## 6.3 Write email

Touch  to enter write email interface.

You can add recipient by entering Email address from enter bar, or selecting contact from Contacts.

## 6.4 Inbox

Folder of all received Emails.

## 6.5 Outbox

Folder of all unsent Emails.

## 6.6 Sent

Folder of all sent Emails.

## 6.7 Drafts

Folder of all draft Emails.

<sup>(1)</sup> Consult your email service provider for more information about protocol.

## 6.8 Available options

<b>Signature</b>	To attach your signature when sending emails.
<b>Check interval</b>	To check for new emails at a pre-set interval.
<b>Edit account</b>	To edit the detailed configuration information of the selected account.
<b>Delete account</b>	To delete the current selected account.
<b>Online/Offline</b> <sup>(1)</sup>	To connect or disconnect from your mail server.
<b>Sync with server</b> <sup>(1)</sup> <sup>(2)</sup>	To synchronize mail flags (Read, Replied, Deleted etc.) and other user defined tags (Work, Social etc.) with your mail sever.
<b>Refresh</b> <sup>(1)</sup>	To check the latest status of your mail server.

<sup>(1)</sup> For IMAP4 accounts only.

<sup>(2)</sup> Only available when **Offline** is selected.

## 7 Palringo <sup>(1)</sup>

Palringo Instant message (IM) allows you to chat with other people using Palringo account. You can also connect to other popular IM services through Palringo, like Yahoo, AIM, GG, ICQ, GTalk, iChat etc.

Please note that the services accessible to you will depend on your client version and dynamic Palringo server options.

### 7.1 Access

To access Palringo, touch  to enter the main menu, select .

### 7.2 Open a Palringo account online

Before activating this service, you are required to open a Palringo account online. There are two ways to do this:

- Select "**Create an Account**" tab to open an account via cellphone.
- You can also open account directly on website:  
<http://www.palringo.com/>

### 7.3 Sign in/Sign out

To connect to Palringo instant message server, please select "**Sign in**" tab. You are required to input your Palringo account information, like username (Email address), password, sign in status, etc.

To sign out, touch "**Menu**", then "**Sign out**".

<sup>(1)</sup> Depending on your network operator.

## 7.4 Add service

Various services (Yahoo, GTalk, ICQ etc.) can be added by "**Menu\Add Service**".

## 7.5 Chat

To start a chat, select one online contact, then touch "**Private chat**".

During chat, you can also exchange voice or photo messages with your community.

## 7.6 Contacts

### Add a contact

To add a contact, click "**Menu**", then select "**Add contact**".

First, you need to specify which service, Yahoo for example, you want to add the new contact to. Then input the contact's email address or ID.



Your request will be sent to the contact for approval. Once accepted, the contact's name and status will appear on your contact list.

### Delete a contact

To delete a contact, select one contact, then touch "**Delete contact**".

The selected contact will be removed from your contact list.

## 7.7 Groups




With this menu, you can "**Join a group**" or "**Create a new group**". You can begin chatting with all members in the group simultaneously.

# 8 Contacts .....



## 8.1 Consulting your contacts

To access the Contacts, touch  from tool bar to enter the main menu, and select "**Contacts**".

The whole contact list is categorized by all contacts , phone contacts  and SIM contacts .

Your favorite contacts are at the top of the entire contact list.




Favorite



For the first time consulting your contacts, you are required to import contact from SIM card to your cellphone.

### Searching for a contact

Touch  to search for a contact by inputting the initial of his/her name. Subsequent letters may be added to refine the search. Alternatively scroll up/down to find the contact you need after reaching the initial letter within the contact list (A-Z) section. Or you just type on the hardware keyboard and you input will instantly appear in the search box.

 
### Viewing a contact

Select a name from your contacts to read the contact information.

## Phone contact



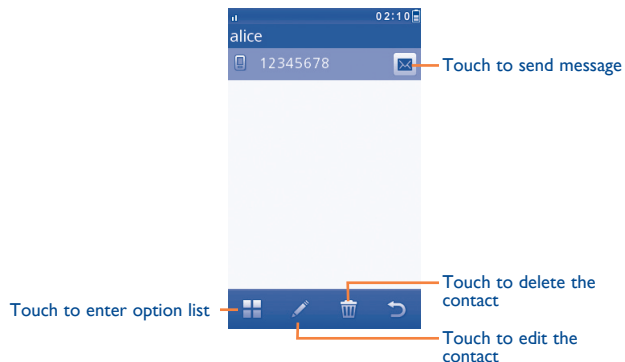

## SIM contact




## 8.2 Adding a contact

You can add a new contact by touching .

Following fields are accessible when you create a new contact in the Contacts by touching : **Name, Image, Save to phone/To SIM, Mobile, Work, Home, Email, Birthday, URL, Ringtone, Group** and **Address**. You can also add the contact to **My favorites** by tapping .

### Birthday reminder

You can set a birthday reminder when editing contact information. This will remind you 1 day in advance prior to the set date.


 If you use your cellphone abroad, store the numbers in your Contacts in international format "+" followed by the country code (see page 24).


## 8.3 Contacts importing, exporting and grouping

In **Contacts**, you can import/export selected contact from/to a SIM card and assign the selected contact to a group.

When viewing a phone contact's information, select "**Export to SIM card**" using .

When viewing a SIM contact, select "**Import to phone**" using .

To group contacts, you need to create a group first. Go to the All contacts or Phone contacts tab, tap  and select **Group**.

After you have created a group, go to the All contacts or Phone contacts tab, select a contact and enter its details screen, tap  and select **Assign to group**.

## 8.4 Available options




From the contact list, you can access the following options:

- Send message** Send an SMS/MMS to a contact you selected from the Contacts.
- Delete contact** Delete the selected contact.
- Copy to cellphone** Copy the contact you selected from SIM card to cellphone if there is sufficient memory.
- Copy to SIM card** Copy the contact you selected from cellphone to SIM card if there is sufficient memory.
- Group** You can view, send messages or e-mails to the group you select or you can create, delete groups as you want.
- Hide favorite contacts/Show favorite contacts** Hide or show your favorite contacts at the top of entire contact list in your phone contacts.
- My number** Type in, modify or send the user's own number by SMS/MMS/Email/Bluetooth.
- Preferred storage** Select the preferred storage location for messages.
- Memory status** View used and available space in SIM and Phone memory for contacts.
- Synchronization** Synchronize with the account you've set.

## 9 Call log.....

### 9.1 Access

You may access this function from the main menu "Call log".

-  Missed calls/Calls rejected by SMS
-  Outgoing calls (Redial)
-  Answered calls/Rejected calls

### 9.2 Available options

When you touch , you can have access to **Delete, Send message, Edit before call**, etc.

#### 9.2.1 My number

Type in or modify your cellphone number or the number to access your voicemail. Your cellphone number is usually written on your SIM card.

### 9.2.2 Billing <sup>(1)</sup>

You can access different items with this option:

**Last call cost/Total cost/Max cost/Reset cost/Price per unit** You can view the last call cost/total cost/max cost/reset cost/price per unit of charged calls, modify or reset them.

**Duration** You can view the total duration of all outgoing calls or reset it.

**GPRS counter** Management of data usage volume (in Byte).

**Beep duration** You can activate or cancel the beep emitted during a call with a specified frequency.

### 9.2.3 Call settings <sup>(1)</sup>

You can access a number of items with this option:

#### Call waiting

Activate/deactivate the notification of a second incoming call by a beep.

#### Call forwarding

You can activate, cancel or verify the status of the call forwarding to the voicemail or to a specified number.

#### Call barring

You can activate or deactivate the call barring for outgoing and incoming calls. The various options are:

##### Outgoing calls

The following configurations are possible:

- **All calls** All outgoing calls are barred.
- **All Calls Except SIM <sup>(1)</sup>** Outgoing calls to numbers other than those stored in your SIM card or cellphone are barred.
- **International calls** Outgoing international calls are barred.
- **International except home** Outgoing international calls except those to your country of subscription are barred.

##### Incoming calls

The following configurations are possible:

- **All calls** All incoming calls are barred.
- **All Calls Except SIM** Incoming calls from numbers other than those stored in your SIM card or cellphone are barred.
- **Roaming** Incoming calls are barred when you are abroad.

<sup>(1)</sup> Contact your network operator to check service availability.

- Cancel all barring** Deactivate all call barring.
- Change barring password** Change the original Password for activating call barring.

### Caller ID

Activate/deactivate CLIR.

### Line switching <sup>(1)</sup>

Line switch between line 1 and line 2.

### Auto redial

You can activate or deactivate the automatic callback of your party for calls that do not get through the first time.

### Reject by SMS

Choose how you reject a call by an SMS, e.g., by selecting and sending an SMS template or by sending a preset SMS template directly. You can also view and edit SMS templates under this option.

<sup>(1)</sup> Depending on your SIM card.

# 10 Media applications.....


## 10.1 Music player .....



 
To access this function, touch  to enter the main menu and select .

You will have full flexibility of managing music both on your cellphone and SD card.

You can have access to your music files through one of the following:

- All songs** Contains all songs both on phone memory and SD card.
- My star list** You can simply add your favorite songs to "**My star list**" by touching  on the song playback screen (max 100).
- Folders** Category of songs in folder.
- Album/Artist/Genre** Music files are categorized by Album, Artist or Genre based on information stored in the tags. Those missing such information will be classified as "**Others**".
- Update songs** Update the information of songs saved in cellphone or SD card.

### 10.1.1 Music playing mode

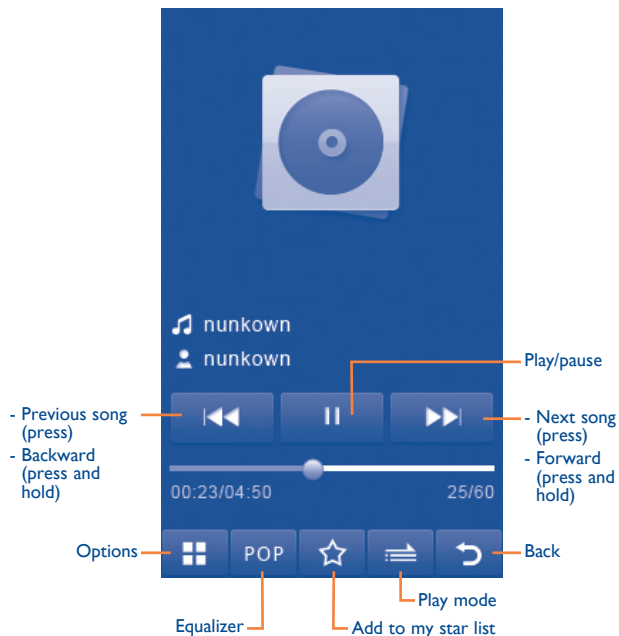



To adjust the volume, use the Volume key.

### Available options

<b>All songs</b>	See page 48
<b>My star list</b>	See page 48
<b>Bluetooth settings</b>	Set to play music in a Bluetooth device
<b>Delete</b>	Delete the song
<b>Setting</b>	See page 50
<b>Properties</b>	Song information
<b>Set as ringtone</b>	Set the song as ringtone





### 10.1.2 Settings

<b>Play mode</b>	Normal, Repeat, Repeat all, Shuffle and Repeat shuffle. You may also customize it simply by touching  on the screen.
<b>Equalizer</b>	Different music styles preset in the cellphone for your selection. You may also customize it simply by touching  on the screen.
<b>Display</b>	Enable your player to display song information, lyric, etc.


## 10.2 Image viewer.....

A library links to the images stored in your cellphone or SD card to be shown in list, or slide, set as wallpaper, power on/off display and incoming call image or sent by MMS, Email, Bluetooth.

### Useful icons:

-  Set as wallpaper
-  List view
-  Delete
-  Back

 Touch a image once to view it in full screen:

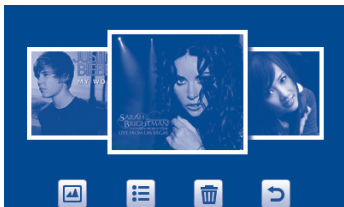






## 10.3 Video player .....

"My videos" album contains video clips recorded, received or downloaded. All supported video clips in this folder can be played, set as power on/off display, sent, deleted, renamed, sorted.

### Streaming URL

This feature enables the user to start watching video almost as soon as it begins downloading from internet.

Useful icons/keys:

-  Switch between Normal screen and Full screen display.
-  Set as play/pause/resume
-  Set the volume level
-  Previous/next video (press), forward/backward (press and hold)
-  Back to previous menu.

 
## 10.4 Radio .....



Your cellphone is equipped with a radio <sup>(1)</sup> with RDS <sup>(2)</sup> functionality. You can use the application as a traditional radio with saved channels or with parallel visual information related to the radio program on the display if you tune to stations that offer Visual Radio service. You can listen to it while running other applications.



To use it, you must plug in your headset, which works as an antenna connected with your cellphone.

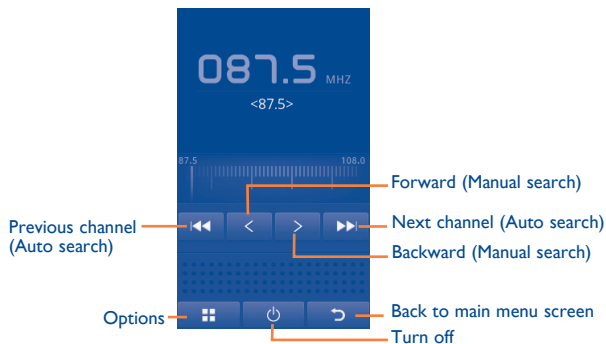

### Available options:

- Channel list** Open the list of saved stations.
- Auto search** Start auto search and stations will be automatically saved to "**Channel list**".
- Enter the frequency** Enter the frequency manually.
- Save channel** Save the current tuned station to the "**Channel list**".
- Record** Record the radio: files will be automatically saved to "**File Manager\My audios\Recorded**".
- Settings** Scroll up and down to manage settings.
- Activate loudspeaker/Play in headset** Listen to the radio using loudspeaker or headset.

<sup>(1)</sup> The quality of the radio depends on the coverage of the radio station in that particular area.

<sup>(2)</sup> Depending on your network operator and market.

# Internet <sup>(1)</sup> .....

## 11.1 My friends .....

It migrates self-contained sub-trees of the websites to let you stay in touch with your friends by flicking through Bebo, Friendster, Hi5, Myspace and Flickr.

## 11.2 Opera .....

Not only does Opera Mini give you the full Web experience where you stay in touch with your friends, obtain information, do your online banking etc., but it is also designed to save time by using compressed web pages.

## 11.3 Wap .....

### 11.3.1 Homepage

Launch the Wap browser with the preset homepage.

### 11.3.2 Bookmarks

Access your favorite sites.

### 11.3.3 Go to URL

Enter the URL of website.

### 11.3.4 Open file

A link to File manager to open WML, HTML, HTM and XHTML files.

### 11.3.5 Last web address

Last visited URL.

### 11.3.6 Recent pages

Pages which you recently browsed.

### 11.3.7 Offline pages

Pages available for offline viewing.

### 11.3.8 Service inbox

Store WAP push messages.

### 11.3.9 Settings

Customize your browser preferences.

<sup>(1)</sup> Depending on your network operator. May cause additional network charges for data flow to provide this service. Extra fees might also be charged in roaming states.

## 11.4 News

It is a huge time saver providing news updates from a website in a simple form.

Once subscribed to a channel, it gives you the ability to track and manage all your favorite RSS content on your cellphone at anytime, anywhere!

### Available options:

<b>Update</b>	Refresh the content of a channel.
<b>Create channel</b>	Create a new channel with name and URL.
<b>Delete</b>	Delete the channel.
<b>Edit</b>	Edit the name or URL of a channel.
<b>Update all</b>	Refresh all channels.
<b>Enable/Disable auto-update all</b>	Activate auto-update or not to all channels.
<b>Settings</b>	Select a regular interval to retrieve updates automatically, set to show images or not, as well as a WAP account to connect to.
<b>Send</b>	Share a channel with your friend by sending it via SMS, MMS or Email.

## 11.5 Weather

Your cellphone is equipped with a weather function for consulting up to 3-day forecasts of favorite cities.

To access the function from the Home screen, touch  from tool bar to access the main menu and select .

Touch /scroll left or right  to switch the cities.



Touch "**AccuWeather.com**" to access online website, which may charge extra fee.

### Available options:

<b>More information</b>	Search more weather information online.
<b>Forecast</b>	Display 3-day weather forecast.
<b>Update</b>	Refresh weather information.
<b>My cities</b>	List all my cities, you can add new city, set my favorite city, delete the selected city, etc.
<b>Settings</b>	Set unit, update mode and network.

## 11.6 Facebook

Facebook is a social utility that connects people with friends and others who work, study and live around them. It provides a number of features with which users may interact: Wall, a space on every user's profile page that allows friends to post messages for the user to see; Pokes, which allow users to send a virtual "poke" to each other; Gifts, a feature allowing users to send virtual gifts which appear on the recipient's profile; Market places, which lets users post free classified goods, etc.

To open an account online, please go to: <http://www.facebook.com/>.

## 11.7 mTweet

Twitter is a social networking and microblogging service that has gained notability and popularity worldwide. This feature enables cellphone users to exchange news updates and ideas with a community in the form of messages or posts. Posts are displayed on the author's profile page and delivered to the author's subscribers or followers.



To open an account online, please go to: <http://twitter.com/>.

# 12 Entertainment .....

## 12.1 Stopwatch

The stopwatch is a simple application for measuring time with the possibility to register several results and suspend/resume measurement.

## 12.2 Ebook

A bookshelf contains the electronic books (.txt file only). While reading the book, you may add bookmark by touching  or go to bookmark by touching , or reach the text by searching words, phrases (**Options\Find, Options\Jump to**).

### Available options:

- Clean up bookshelf** Delete cookies from browsing history.
- Book information** Display the detailed information (title, size and format) about the book.
- Delete** Delete the current book.
- Sort** Sort the books by name, type, time or size.
- Global settings** Set the font, scroll mode, display format, etc.
- Apply global settings** Select to apply global settings.

 To avoid character corruption, please ensure that the encoding format is correct (**Settings or Settings\Encoding format**).

## 12.3 Java.....

### 12.3.1 Launch an application

Select "**Java applications**" to launch applications.

### 12.3.2 Java downloading

You can download new Java™ applications in the "**Java**" menu by selecting "**Download application**". The list of available Web bookmarks dedicated to the application download will then be displayed.

### 12.3.3 Java settings

This menu allows you to manage Java settings, in which you may set Java audio, vibration, backlight and identify how much Heap size is available.



Each downloaded java game can be assigned as a main menu display for quick access.

### 12.3.4 Java network

Select a network.

### 12.3.5 Trusted certificates

View detailed information of the trusted certificates supported by your cellphone.

#### Disclaimer

Downloading or running applications will not damage or alter any software already in your cellphone designed to support Java™ technology. TCT Mobile Limited and its affiliates waive any responsibility and refuse to guarantee applications that are subsequently used, as well as for all applications not embedded in the handset upon purchase. The purchaser alone bears the risk of loss, damage or defect of the handset, or of applications/software, and generally of any damage or consequence resulting from the use of the said applications/software. In the event that the said applications/software, or the subsequent setup of any function are lost due to technical reasons resulting from the handset being replaced/ repaired, the cellphone owner should repeat the operation and download or set up again. TCT Mobile Limited and its affiliates grant no guarantee and disclaim any responsibility if the operation cannot be repeated or cannot be performed without incurring some cost.

### 12.3.6 Java task manager

Select to resume or terminate Java applications.

# 13 Camera.....



Your cellphone is fitted with a camera for taking photos and shooting videos that you can use in different ways:



- store them in your "**File manager\My creations**".
- send them in a multimedia message (MMS) to a cellphone or an email address.
- send them directly by Email or Bluetooth.
- personalize your Home screen (see page 80).
- select them as incoming call image to a contact in your contacts.
- transfer them by data cable or microSD card to your computer.

## 13.1 Access


To access the function from the Home screen, touch  from tool bar to access the main menu and select the  icon.

## 13.2 Camera

### 13.2.1 Take a photo, save or delete

The screen acts as the viewfinder. Position the object or landscape in the viewfinder and touch  to take the image and the images will be automatically saved. If you don't want it, you may directly delete it by touching .

### 13.2.2 Settings in framing mode

Before taking the photo, you can adjust a number of settings by touching .



Touch  to access **My creations** to view the photos you have taken.

Touch  or  to switch between camera mode and video mode.


### 13.2.3 Options available after taking the photo

Once you have taken a photo, a number of icons appear on the photo so you can choose to set it as contact image, set as wallpaper, view it in **My creations**, or send by MMS, Bluetooth or Email and more.

## 13.3 Video

You can record a video clip of unlimited length, as long as the battery sustains and there is sufficient memory.



### 13.3.1 Framing mode

When you enter the "**Video**" function, you are in framing mode. Use the cellphone screen as a viewfinder and touch  for the **EV**, **Capture mode**, **Night mode**, **Quality**, **Record audio**, **Color mode**, and **Storage** settings.

Touch  to access **My Videos** to view the videos you have taken.

Touch  or  to switch between camera mode and video mode.

### 13.3.2 Recording mode

Once you have chosen your settings, you can launch the recording of your video-clip by touching  on the screen. Save the video by touching .



If a call comes in while you are recording, the recording process will be automatically stopped and you will be prompted after the call if you want to save the recorded clip.

### 13.3.3 Further operations after shooting a video

After shooting a video, four icons will appear on the screen so you can choose to send your video by Email/MMS/Bluetooth or access "My videos".

In the list of "My videos", touch  to the video, set as power on/off screen, Rename, etc.


## 14 Profiles.....



With this menu, you may personalize ringtones for different events and environments.

### 14.1 General

You can modify the sound settings within any profile.

<b>Ringtone</b>	Select a melody from the list by scrolling up and down.
<b>Mode</b>	You may set your cellphone ringtone to Normal, Discreet (ring with beep), Vibration (all sounds are replaced by vibrations except for alarms), Vibration and Melody, Vibration then Melody, Beep and Vibration, Silence (no sounds except for alarms, the  icon will be displayed).
<b>Volume</b>	Adjust the volume level.
<b>Key beep</b>	Select the type of key beep.
<b>Message beep</b>	Select a melody for a new incoming message.
<b>Power on beep</b>	Select a Power on melody for your cellphone.
<b>Power off beep</b>	Select a Power off melody for your cellphone.

## 14.2 Meeting

When this is selected the cellphone will not ring or beep unless an alarm has been set. A new event will cause it to vibrate.

## 14.3 Outdoor

It is a profile designed for outdoor users who require louder ringtones.

## 14.4 Indoor

Ringtone/beep volume will be slightly lower than General mode volume.

## 14.5 Silence

This profile will turn off all ringtones, including notification sounds.

## 14.6 Flight mode

Voice calls, Bluetooth and Messages functions are barred. It can be used to increase standby duration.

# 15 File manager .....



You will have access to all audio and visual files stored in cellphone or SD card in File manager.

Two icons behind will indicate the saving locations of each file:

 Saved in cellphone

 Saved in SD card

## 15.1 My audios

Choose an audio file for an incoming call ringtone, a message alert beep, power on/off ringtone, incoming call ringtone, etc.

The "My audios" album contains the following folders <sup>(1)</sup>:

- Music: full track music.
- Melodies: melodies that can be set as ringtone.
- Recorded: all recorded sounds.
- General: contains all audio files stored in cellphone or SD card.



DRM: Digital Rights Management feature allows sounds and images to be played while protecting the associated copyright. DRM counter-based files and files with expired rights will not be automatically played when scrolling the list.

<sup>(1)</sup> The embedded folder names cannot be modified. However, in certain cases, you can modify, delete and add items included in these folders.

## 15.2 My images

You can select an image or a photo as wallpaper, power on/off screen, or assign it as incoming call image in the contacts.



The images will be displayed in alphabetical order.

## 15.3 My videos

"My videos" album contains video clips recorded, received or downloaded

## 15.4 Ebook

A bookshelf containing the electronic books (.txt files only).

## 15.5 My creations

This feature stores all the photos captured by your cellphone.

## 15.6 Others

Store files of unsupported format.

## 15.7 Phone

An access point for all files in all folders stored in cellphone.

 
## 15.8 SD card

You can access all files stored in the SD card here.



When a SD card is inserted for the first time, it will be scanned and default folders will be created.

### Inserting and removing the SD card:

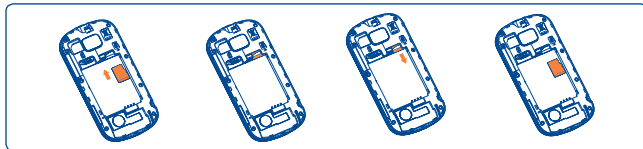

Place the MicroSD card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

### Available options

<b>Open</b>	Open a folder.
<b>Create folder</b>	Create more folders.
<b>Delete folder</b>	Remove folders.
<b>Rename folder</b>	Edit folder's name.
<b>Empty folder</b>	Delete all files in one folder.
<b>SD card</b>	To format or to query its memory status.

## 15.9 Managing audios, images, videos and others

According to the item chosen, you can access some of the functions below:

<b>View</b>	View the selected image by tapping it.
<b>Play</b>	Play the selected video/audio by tapping it.
<b>Send</b> <sup>(1)</sup>	Send the audio/image/video/Java.
<b>Delete</b>	Delete the audio/image/video selected (not applicable for embedded items).
<b>Set as</b>	<ul style="list-style-type: none"><li>• Image → wallpaper, power on/off, assign it to a contact.</li><li>• Sound → ringtone, message beep, power on/off, assign it to a contact.</li></ul>
<b>Mark/Unmark</b>	Mark/Unmark a tick on a file for further operation.  Touch " <b>Mark all</b> " on Mark menu to mark all directly.
<b>Download</b>	Download new items.
<b>Rename</b>	Rename the audio/image/video.
<b>Sort</b>	Sort the files by name, type, time or size, or select <b>None</b> to return to the previous screen.
<b>Move to cellphone/ SD card</b>	Move a file from the phone memory to the SD card and vice-versa
<b>Copy to cellphone/ SD card</b>	Copy a file from the phone memory to the SD card and vice-versa.
<b>Properties</b>	Display part of the ID3 Tag content of an MP3 file.

<sup>(1)</sup> Files marked with  cannot be sent.

**Activate**

DRM file option.

**Capture**

Go to **Camera**.

**Streaming URL**

View or download new video stream from streaming URLs.

## 15.10 Formats and compatibility <sup>(1)</sup>

- Sounds: mp3, m4a, aac, midi, wav, amr, wma
- Images: jpg, gif, bmp, png, wbmp
- Videos: 3gp, H.263, MPEG4

### 15.11 Memory status

Indicates how much space is used and how much is currently free on your cellphone and SD card (if any).

#### 15.11.1 Cellphone

View available memory space.

Your cellphone's memory is shared among several functions: contacts, calendar, messages, images, melodies, games and video clips.

#### 15.11.2 MicroSD card

View the memory available on your MicroSD card.

You are advised to save large files (like songs) on your microSD card.

<sup>(1)</sup> Depending on product and market on m4a, aac, wma, mp4 formats.

# 16 Bluetooth™ (1) .....




Access this feature by touching  to enter the main menu, then selecting "Bluetooth".

To use your cellphone with a Bluetooth device, you need to proceed in two steps:

- Pair and register the device to your cellphone,
- Select it to use hands-free communication. Only one Bluetooth audio device (your Bluetooth headset or your Bluetooth car kit) can be connected during the communication.

## Pair and register your Bluetooth device

Activate the Bluetooth feature by selecting the "Bluetooth\Activation\On" option. Then enter the "Device list\Search" menu to search for connectable Bluetooth devices. From the list, touch the device you want to pair directly or locate the device then touch  to connect. If the Bluetooth device has very limited I/O capabilities, such as a headset, you may need to enter a fixed PIN to register it with your cellphone, or you may simply get prompted to confirm the connection. If the device has a display and can accept a binary Yes/No input, such as a cellphone, you cellphone and the device will display a numeric code for comparison. Confirm the connection if the codes are identical and the devices will be connected. Or if the device has no display but has numeric keypad entry, such as a keyboard, your cellphone will display a numeric code. You may need to enter the code on both devices to get them connected, or you may just need to confirm the connection on your cellphone and enter the code on the other device.

(1) You are recommended to use Alcatel Bluetooth headsets, which have been tested and proved compatible with cellphone. You can go to [www.alcatelonetouch.com](http://www.alcatelonetouch.com) for more information about Alcatel Bluetooth headset.

Touch  to show service, rename, authorization, delete and delete all from the connected list.



Don't forget to turn on your Bluetooth device and activate the pairing mode while pairing it with your cellphone.

## Visibility

Select whether you want to hide or show to all.

## My cellphone's name

You may change your cellphone name, which is visible to the others.

## Available functions

<b>Data transmit</b>	Exchange files with another bluetooth device.
<b>Handle a call</b>	Initiate or receive a phone call with a Bluetooth headset.
<b>Listen to music</b>	Support A2DP profile.
<b>PBAP (Phonebook access profile)</b>	Make contacts in Contacts & Call log easily accessible and even directly operated on car kit or Bluetooth headset if PBAP supported.
<b>Dialup networking profile</b>	Network connection can be activated via bluetooth.





 
Always activate Bluetooth in your cellphone first before connecting it to a Bluetooth device. Be aware that Bluetooth activation will slightly affect battery life of your cellphone.

Bluetooth technology allows free wireless connections between all Bluetooth-compliant devices within short range. Please make sure that the Bluetooth headset or the Bluetooth car kit and your cellphone are in this range and set as visible.

# 17 Others.....

## 17.1 Calendar ..... 15

To access this function, touch  to enter the main menu and select , there is a monthly-view calendar for you to keep track of important meetings, appointments, etc. Days with events entered will be marked in color.

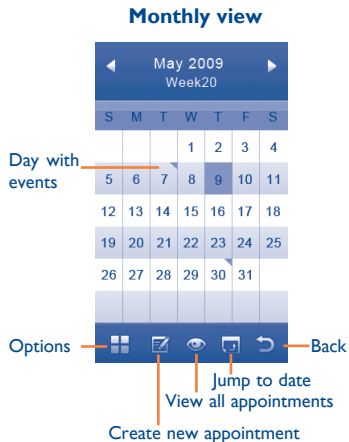


### Available options:

- Synchronization** Synchronize with the account you've set.
- 1st day of 1 week** You can select any day as the first day of one week.
- 1st week of 1 year** You can select any week as the first week of one year.

## 17.2 Calculator .....

Access this feature by selecting "**Calculator**" from the main menu.

Enter a number, select the type of operation to be performed, and enter the second number, then touch "=" to display the result.

Once an operation is complete, you can select " " to clear numbers and carry out a new operation.





To return the main menu, touch .

To return to the Home screen, press .

## 17.3 Notes.....

You can create a note in text format by accessing "**Notes**" from the main menu.







### Useful icons:

-  Send by SMS, MMS, Email or Bluetooth.
-  Create text note.
-  Edit the note
-  Delete the current note or selected notes

## 17.4 Tasks

Enables you to easily manage and track the progress of a task with priorities. All the tasks will be sorted by due date.

### Useful icons:

-  Edit the task
-  Add new task
-  Save the task
-  Delete the current task
-  Mark as done
-  Mark as undone

## 17.5 Clock

### 17.5.1 Alarm



Your cellphone has a built-in alarm clock with a snooze feature. You can set up to five separate alarms and choose whether or not the alarm should repeat.

- Repeat** You may select **Once** (default)/**Every day/Days** or customize to your desire.
- Snooze Mode** The alarm will repeat at regular intervals. You may select the mode of Ringtone: **Ring**, **Vibration only**, **Radio**<sup>(1)</sup> or **Vibration and Ring**.
- Melody** You may choose one melody as the alarm ringtone.

### 17.5.2 World clock

The World clock shows current local time and the time zone in different cities. You may view up to 3 cities at one time.

### Useful icons:

-  Return to the list of **My cities**
-  View the list of all cities




### 17.5.3 Date and time

Allows you to have settings of date and time, including 12/24h format.

You can also set the daylight saving adjustment.








<sup>(1)</sup> In Radio mode, you are required to plug in headset first. Your cellphone will power on automatically before Radio is on.

## 17.6 Converter.....


You can use the Weight and Length conversion by selecting the unit you wish to convert via  , then touch to input the digits. Finally confirm with "".

## 17.7 Voice recorder.....

Accessing "**Voice recorder**" from the main menu allows you to make voice or sound recordings.

-  Create a new voice/sound recording.
-  Set storage, file format and audio quality.
-  Send by MMS, Email or Bluetooth.
-  Delete the current voice/sound or selected voice/sound.
-  Set as start/play
-  Set as stop
-  Set as pause/resume

# 18 Settings.....

From the main menu, select the menu icon  and select the function of your choice in order to customize your cellphone.

## 18.1 Phone settings

### 18.1.1 Display

#### Wallpaper

The wallpaper is displayed when you switch on your cellphone.

By selecting "**Wallpaper**" you can customize it by replacing the default image or animation displayed on your cellphone.

#### Screen saver

If you activate this option, the screen saver will be displayed a little while after the wallpaper. You can choose a image or an animation as your screen saver.

#### Theme

This function enables you to customize the graphic style and the colours of your cellphone.

#### Power On/Off

You can customize your welcome animation or image that appears when you switch on your cellphone.

You can also customize your OFF screen with an image or animation.

## Brightness

You may adjust black level with respect to LCD display by touching the key



## Backlight

**Screen** Allows you to reduce brightness for enhanced battery performance and to save power during periods of expected inactivity.

**Keypad** You may customize your keypad light by selecting **Always on/Always off** or inputting your preferred duration directly.

### 18.1.2 Profiles

See page 66.

### 18.1.3 Date and time

See page 78.

### 18.1.4 Languages <sup>(1)</sup>

Display language for cellphone display. The "**Automatic**" option selects the language according to the home network (if available).

<sup>(1)</sup> Contact your network operator to check service availability.

### 18.1.5 Headset mode

Switch audio play (incoming call, message beep, alarm beep...) between **Headset only** and **Phone & Headset**.

### 18.1.6 Touch settings


**LCD touch calibration** To calibrate the touch screen, touch anywhere on the screen to start calibration.

**Touch vibration** When "**On**", the cellphone vibrates when the screen is touched.

### 18.1.7 Numeric key

By customising your keys, you can access any function directly from the Home screen.

### 18.1.8 Auto lock

Your touchscreen will be locked automatically if the cellphone has been closed and idle for a certain length of time set by you or you may lock it manually with a press  key.

### Unlock the screen

You may drag down on the locked screen.

### 18.1.9 Screen lock during call

Select "**On**"/"**Off**" to activate/deactivate screen locked during call.

### 18.1.10 Input method

Please see chapter "Latin input method", page 88. In addition to the specific characters table for Cyrillic, Chinese, other data input modes are also available in your cellphone. This feature allows you to write short messages and add names with special characters to your contacts.

## 18.2 Call settings

See 9.2 Available options, page 44.

## 18.3 Security

**Activate PIN** The SIM card protection code is requested each time the cellphone is powered on if this code is activated.

**Change PIN** Change PIN code.

**Change PIN2** A protection code for certain SIM card features (Billing/Cost/FDN, etc.) will be requested if you attempt to access it, if the code is activated. Select to update it with a new one (between 4 and 8 digits).

**Activate cellphone code** Code is requested each time the cellphone is powered on.

**Change cellphone code** Change cellphone password, its initial one is 1234.

**Fixed dial number** Allows the cellphone to be "locked" so that it can only dial certain numbers, or numbers with certain prefixes. To activate this function, PIN2 code is mandatory.

## 18.4 Network

### Network selection

**Preferred network** List of networks to which you wish to be connected in order of priority.

**Select network** The choice of network connection is left up to the user.

**Search mode** Network connection can be switched between "Manual" and "Automatic".

### GPRS connection <sup>(1)</sup>

**When needed** GPRS mode active depending on connection requirements.

**Always** GPRS mode continuously active.

### GPRS international roaming

GPRS data services can be used while roaming overseas.

<sup>(1)</sup> Depending on network availability.

## 18.5 Connectivity

A set of profile settings for message (MMS, Email...) and Web connection.

## 18.6 Default browser

You can select the browser of your choice as the default browser.

# 19 Making the most of your cellphone .....

## 19.1 PC suite

You can download PC Suite for free from the website. The PC suite includes:

- **Backup/restore**

You can backup the important data in your cellphone and restore them when needed.

- **EDGE/GPRS modem**

Use your cellphone to connect PC to the internet.

- **Multimedia Personalization**

Customize your cellphone with images, animations and melodies.

- **Messages**

You can compose SMS/MMS easily on your PC and transfer them to your cellphone.

### Supported Operating Systems

Windows XP/Vista/Windows 7.

## One Touch Upgrade

Using One Touch Upgrade tool you can update your cellphone's software from your PC.

Download One Touch Upgrade from ALCATEL website ([www.alcatelonetouch.com](http://www.alcatelonetouch.com)) and install it on your PC. Launch the tool and update your cellphone by following the step by step instructions (refer to the User Guide provided together with the tool).

Your cellphone's software will now have the latest software.



All personal information will be permanently lost following the update process. We recommend you backup your personal data using PC Suite before upgrading.

## 19.2 Webcam <sup>(1)</sup>

You can use your cellphone as a webcam for instant messaging on your PC.

- Connect your cellphone to PC via USB cable.
- Go to "**My computer**" folder on your PC and find USB video device (Under Scanners & Cameras).

<sup>(1)</sup> The using of webcam may vary according to the operating system of your PC.

# 20 Latin input mode/ character table .....

There are two text entry methods that can be used to write messages

- Normal
- Predictive mode

 
### Normal







This mode allows you to type text by choosing a letter or a sequence of characters.
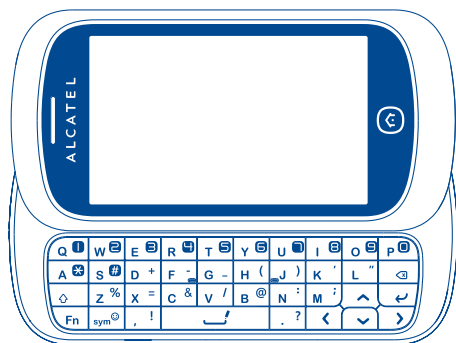
### Predictive mode

This mode can perform predictive input in virtual keypad and supports multi-language input.

## Keyboard inputting



-  Key:
  - Press once: Input a capitalized character
  - Press twice: Lock the keyboard in capital letter input mode
-  Key:
  - Press once: Input a top-half character
  - Press twice: Lock the keyboard in top-half key input mode
-  Key:
  - Enter symbol table
  - Hold down Fn key, then press sym key to enter emoticon table
-  Key:
  - Press: Enter a space
  - Press and hold: Access language list
  - Hold down Fn key, then press Space key to select input mode
-  key:
  - Press: Delete one by one
  - Press and hold: Delete all
-  key:
  - Confirm an option
  - Enter the next line

## Touching inputting

 
### 3\*4 virtual keypad



### Qwerty virtual keypad



(Slide horizontally to switch between the two types of keypad)

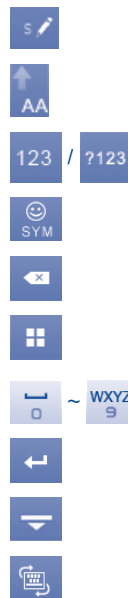

Switch mode of input method.

Switch between ABC/abc/Abc.

Access to the symbol and number table.

Access to all symbols.

- Touch once to delete one by one.
- Long touch to delete all.

Options for more operations.

Press and hold 0-9 to input number.

Switch to a new line (in SMS, Email, etc.).

Close input keypad.

Switch between 3\*4 virtual keypad and Qwerty virtual keypad.

# 2 | Alcatel Mobile Phones Limited Warranty .....

TCT Mobile North America LTD warrants to the original retail purchaser of this wireless device, that should this product or part thereof during normal consumer usage and condition, be proven to be defective in material or workmanship that results in product failure within the first twelve (12) months from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) at the company's option without charge for parts or labor directly related to the defect(s).

Batteries, power adapters, and other accessories sold as in box items are also warranted against defects and workmanship that results in product failure within the first six (6) months period from the date of purchase as shown on your original sales receipt. Such defect(s) will be repaired or replaced (with new or rebuilt parts) and the company's option without charge for parts or labor directly related to the defect(s).

The limited warranty for your wireless device will be voided if any of the following conditions occur:

- Non-compliance with the instructions for use or installation, or with technical and safety standards applicable in the geographical area where your cellphone is used;
- Connection to any equipment not supplied or not recommended by TCT Mobile;
- Modification or repair performed by individuals not authorized by TCT Mobile or its affiliates;
- Acts of god such as Inclement weather, lightning, power surges, fire, humidity, infiltration of liquids or foods, chemical products, download of files, crash, high voltage, corrosion, oxidation;
- Removal or altering of the wireless devices event labels or serial numbers (IMEI);

- Damage from exposure to water or other liquids, moisture, humidity, excessive temperatures or extreme environmental conditions, sand, excess dust and any condition outside the operating guidelines;
- Defects in appearance, cosmetic, decorative or structural items such as framing and non-operative parts.

There are no express warranties, whether written, oral or implied, other than this printed limited warranty or the mandatory warranty provided by your jurisdiction. In no event shall TCT Mobile or any of its affiliates be liable for incidental or consequential damages of any nature whatsoever, including but not limited to commercial loss, to the full extent those damages can be disclaimed by law. Some states do not allow the exclusion or limitation of incidental or consequential damages, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

**How to obtain Support:** Contact the customer care center by calling (877-702-3444) or going to [www.alcatelonetouch.com](http://www.alcatelonetouch.com). We have placed many self-help tools that may help you to isolate the problem and eliminate the need to send your wireless device in for service. In the case that your wireless device is no longer covered by this limited warranty due to time or condition we have other options that you may utilize our out of warranty repair options.

To obtain hardware repairs or replacement within the terms of this warranty, contact TCT Mobile to get an RMA number, include a copy of the original proof of warranty coverage (e.g. original copy of the dated bill of sale, invoice), the consumer's return address, your wireless carrier's name, alternate daytime cellphone number, and email address with a complete problem description. Only ship the wireless device. Do not ship the SIM card, memory cards, or any other accessories such as the power adapter. You must properly package and ship the wireless device to the repair center. TCT Mobile is not responsible for wireless devices that do not arrive at the service center. Upon receipt, the service center will verify the warranty conditions, repair, and return your wireless device to the address provided.

## 22 Accessories (1).....

 
The latest generation of Alcatel GSM cellphone offers a built-in handsfree feature that allows you to use the cellphone from a distance, placed on a table for example. For those who prefer to keep their conversations confidential, an earpiece is also available known as the headset.




Standard charger



UK charger



Battery

 

USB cable



Stereo headset




Only use your cellphone with Alcatel batteries, chargers and accessories in your box.

(1) Images for reference only.

## 23 Troubleshooting.....

Before contacting the service center, you are advised to follow the instructions below:


- You are advised to fully charge  the battery for optimal operation.
- Avoid storing large amounts of data in your cellphone as this may affect its performance.
- Use User Data Format and the One Touch Upgrade tool to perform cellphone formatting or software upgrading, (to reset User Data format, hold down # while simultaneously pressing the power on/off key). ALL User cellphone data: contacts, photos, messages and files, downloaded applications like Java games will be lost permanently. It is strongly advised to fully backup the cellphone data and profile via PC suite before doing formatting and upgrading.

and carry out the following checks:

### My cellphone is frozen or cannot switch on

- Check the battery contacts, remove and reinstall your battery, then turn your cellphone on
- Check the battery power level, charge for at least 20 minutes
- If it still does not work, please use User Data Format to reset the cellphone

### My cellphone has not responded for several minutes

- Restart your cellphone by pressing and holding the  key
- Remove the battery and re-insert it, then restart the cellphone

### My cellphone turns off by itself

- Check whether your cellphone is locked when not in use, and make sure you don't accidentally turn off your cellphone when locking it by pressing the power key.
- Check the battery charge level

### My cellphone cannot charge properly

- Make sure you are using an Alcatel battery and the charger from the box
- Make sure your battery is inserted properly and clean the battery contact if it's dirty. It must be inserted before plugging in the charger

- Make sure that your battery is not completely discharged; if the battery power is empty for a long time, it may take around 20 minutes to display the battery charger indicator on the screen.
- Make sure charging is carried out under normal conditions (0°C (32°F) to +40°C (104°F))
- When abroad, check that the voltage input is compatible

### **My cellphone cannot connect to a network or “No service” is displayed**

- Try connecting in another location
- Verify the network coverage with your operator
- Check with your operator that your SIM card is valid
- Try selecting the available network(s) manually (see page 84)
- Try connecting at a later time if the network is overloaded

### **My cellphone cannot connect to the Internet**

- Check that the IMEI number (press \*#06#) is the same as the one printed on your warranty card or box.
- Make sure that the internet access service of your SIM card is available.
- Check your cellphone's Internet connecting settings
- Make sure you are in a place with network coverage
- Try connecting at a later time or another location


### **Invalid SIM card**

- Make sure the SIM card has been correctly inserted (see page 13)
- Make sure the chip on your SIM card is not damaged or scratched
- Make sure the service of your SIM card is available

### **Touch screen does not respond accurately**

- Make sure your cellphone is not locked
- Launch touch screen calibration by pressing and holding the volume up/down key, or alternatively, touch Settings\Touch settings\LCD touch calibration.

### **Unable to make outgoing calls**

- Make sure you have dialed a valid number and touch 
- For international calls, check the country and area codes
- Make sure your cellphone is connected to a network, and the network is not overloaded or unavailable
- Check your subscription status with your operator (credit, SIM card valid, etc.)

- Make sure you have not barred outgoing calls (see page 46)
- Make sure that your cellphone is not in flight mode

### **Unable to receive incoming calls**

- Make sure your cellphone is switched on and connected to a network (check for overloaded or unavailable network)
- Check your subscription status with your operator (credit, SIM card valid, etc.)
- Make sure you have not forwarded incoming calls (see page 46)
- Make sure that you have not barred certain calls
- Make sure that your cellphone is not in flight mode



### **The caller's name/number does not appear when a call is received**

- Check that you have subscribed to this service with your operator
- Your caller has concealed his/her name or number

### **I cannot find my contacts**

- Make sure your SIM card is not broken
- Make sure your SIM card is inserted properly
- Import all contacts stored in SIM card to cellphone

### **The sound quality of the calls is poor**

- You can adjust the volume during a call by pressing the  key
- Check the network strength 
- Make sure that the receiver, connector or speaker on your cellphone is clean

### **I am unable to use the features described in the manual**

- Check with your operator to make sure that your subscription includes this service
- Make sure this feature does not require an Alcatel accessory

### **When I select a number from my contacts, the number cannot be dialed**

- Make sure that you have correctly recorded the number in your file
- Make sure that you have selected the country prefix when calling a foreign country

### **I am unable to add a contact in my contacts**

- Make sure that your SIM card contacts are not full; delete some files or save the files in the phone contacts (i.e. your professional or personal directories)

### **My callers are unable to leave messages on my voicemail**

- Contact your network operator to check service availability

### **I cannot access my voicemail**

- Make sure your operator's voicemail number is correctly entered in "My numbers"
- Try later if the network is busy

### **I am unable to send and receive MMS**

- Check your phone memory availability as it might be full
- Contact your network operator to check service availability and check MMS parameters (see page 34)
- Verify the server center number or your MMS profile with your operator
- The server center may be swamped, try again later

### **The flickering icon is displayed on my standby screen**

- You have saved too many short messages on your SIM card; delete some of them or archive them in the phone memory

### **SIM card PIN locked**

- Contact your network operator to obtain the PUK code (Personal Unlocking Key)

### **I am unable to connect my cellphone to my computer**

- Install Alcatel's PC suite first of all
- Check that your computer meets the requirements for Alcatel's PC Suite installation
- Make sure that you're using the right cable from the box.

### **I am unable to download new files**

- Make sure there is sufficient phone memory for your download
- Select the Micro-SD card as the location to store downloaded files
- Check your subscription status with your operator

### **The cellphone cannot be detected by others via Bluetooth**

- Make sure that Bluetooth is turned on and your cellphone is visible to other users (see page 73)
- Make sure that the two cellphones are within Bluetooth's detection range

### **How to make your battery last longer**

- Make sure you follow the complete charge time (minimum 3 hours)
- After a partial charge, the battery level indicator may not be exact. Wait for at least 20 minutes after removing the charger to obtain an exact indication
- Switch on the backlight upon request.
- Extend the email auto-check interval for as long as possible.
- Update news and weather information on manual demand, or increase their auto-check interval.
- Exit background-running Java applications if they are not being used for a long time.
- Deactivate Bluetooth when not in use.

ALCATEL is a trademark of Alcatel-Lucent  
and is used under license by  
TCT Mobile Limited.

All rights reserved © Copyright 2011  
TCT Mobile Limited.

TCT Mobile Limited reserves  
the right to alter material or technical  
specification without prior notice.