

For more information about how to use the phone, please go to www.alcatelone touch.com to download complete user manual. Moreover, from the website you can also consult FAQ, realize software upgrade .etc.



www.sar-tick.com

This product meets applicable national SAR limits of 2.0 W/kg. The specific maximum SAR values can be found on page 31 of this user guide.

When carrying the product or using it while worn on your body, either use an approved accessory such as a holster or otherwise maintain a distance of 1.5 cm from the body to ensure compliance with RF exposure requirements. Note that the product may be transmitting even if you are not making a phone call.


⚠ Prolonged exposure to music at full volume on the music player may damage the listener's hearing. Set your phone volume safely. Use only headphones recommended by TCT Mobile Limited and its affiliates.

ALCATELone touch.

English - CJB14P1ALAAA

Table of contents

 - 1 Your mobile..... 3
- 2 Text input..... 14
- 3 Phone call..... 15
- 4 Contacts..... 16
- 5 Messaging..... 18
- 6 Email..... 20
- 7 Getting connected..... 21
- 8 Locate my location using GPS satellites..... 23
- 9 Data backup..... 24
- 10 Factory data reset..... 24
- 11 Applications..... 25
- 12 Making the most of your phone..... 25

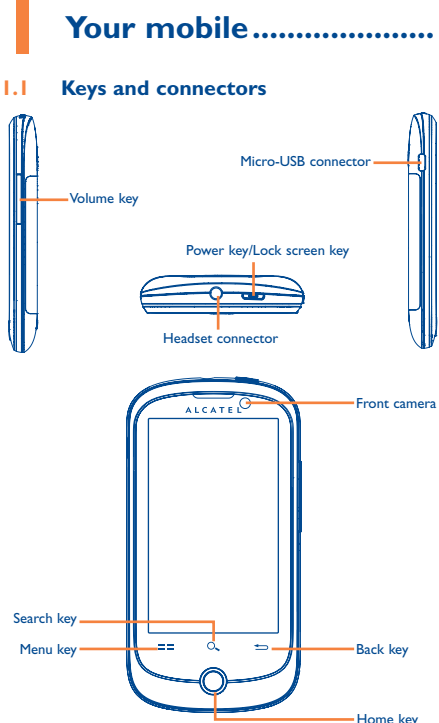

- On Home screen, press to quick access to **Settings** menu or Notification panel; to launch quick search; to customize your Home screen by adding applications or changing wallpaper.
- On other screens, press to view options list.
- Short press: Return to the Home screen or back to the central Home screen if it is extended.
- Long press: Enter the recently used applications list.
- Go back to the previous menu or screen.
- Press to adjust the Volume (in call/media playing mode)
- Open Search bar for searching within an application, the phone or web.

1.2 Getting started

1.2.1 Set-up

Removing or installing the back cover



Inserting or removing the SIM card



Place the SIM card with the chip facing downwards and slide it into its housing. Make sure that it is correctly inserted. To remove the card, press and slide it out.

Installing or removing the battery



- Insert and click the battery into place, then close the phone cover.
- Unclip the cover, then remove the battery.

Installing and removing the memory card (MicroSD card)



To release the microSD card holder, slide it in the direction of the arrow and lift it. Then insert the microSD card with the golden contact downward. Finally, turn down the microSD holder and slide it in the opposite direction to lock it.

Charging the battery



Connect the battery charger to your phone and mains socket respectively.

 
- To reduce power consumption and energy waste, when battery is fully charged, disconnect your charger from the plug; switch off Wi-Fi, GPS, Bluetooth or background-running applications when not in use; reduce the backlight time, etc.

1.2.2 Power on your phone

Hold down the **End key** until the phone powers on. It will take some seconds before the screen lights up.

Set up your phone for the first time

The first time you power on the phone, you are required to touch the Android logo to begin and then sign into your Google account to synchronize email, contacts, calendar and other Google applications (1).

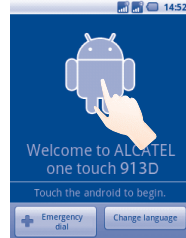

- Enter your user name and password, then touch **Sign in**. If you forget your password, you can go to <http://www.google.com/> to retrieve it. If you don't own a Google Account, you are prompted to create one by touching **Create**.
 - Read the setup information on the screen.
 - Mark/Unmark the check box to choose whether you want to take advantage of Google's location service, then touch **Next**.
 - Mark/Unmark the check box to choose whether you want to back up data with your Google account, then touch **Next**.
 - Set up the date and time, then touch **Next**.
 - Touch **Finish setup**.
- This initial set up can be skipped and enabled via **Settings** Accounts & sync.

In power on screen without SIM card inserted, you can also connect to a Wi-Fi network to sign into your Google account and to use some features.

(1) Application availability depends on country and operator.

1.2.3 Power off your phone

Hold down the **End key** from the Home screen until the phone options appear, select **Power off**.

1.3 Home screen

You can bring all the items (applications, shortcuts, folders and widgets) you love or use most frequently to your home screen for quick access. Press **Home** key to switch to Home screen.



- **Status bar**
 - Status/Notification indicators
 - Touch and Drag down to open notification panel.
- **Search bar**
 - Touch to enter text search screen.
 - Touch to enter voice search screen.
 - Touch to enter Search options: All, Web, Apps, Contacts, etc.
 - Touch an icon to open an application, folder, etc.
- Touch to access **Browser**.
- **Application tab**
 - Touch to open applications list.
 - Touch to access **Call log** if you have missed call(s), or access the tab you exit last time.

Home screen is provided in an extended format to allow more space for adding applications, shortcuts etc. Slide the Home screen horizontally left and right to get a complete view of the Home screen. Small dots at the lower left and right of the screen indicate which screen you are viewing.

Touch & hold the small dots or application tab can display the thumbnails of extended home screen, touch the thumbnail to open it. Press **Back** key or touch an empty area to return to Home screen.

1.3.1 Using the touchscreen

Touch
To access an application, touch it with your finger.

Touch and Hold
To enter the available options for an item, touch and hold the item. For example, select a contact in **Contacts**, touch and hold this contact, options list will then appear on screen.

Drag
Place your finger on the screen to drag an object to another location.

Slide/Swipe
Slide the screen to scroll up and down the applications, images, web pages... at your convenience.

Flick
Similar to swiping, but flicking makes it move quicker.

Rotate
Automatically change the screen orientation from portrait to landscape by turning the phone sideways to have a better screen view.

1.3.2 Status bar

From status bar you can view both phone status (to the right side) and notification information (to the left side). When the status bar is full, " " icon will appear, touch to display hidden icons.

Status icons

	GPRS connected		Speakerphone is on
	GPRS in use		Roaming
	EDGE connected		No signal
	EDGE in use		Vibrate mode
	Connected to a Wi-Fi network		Ringer is silenced
	Bluetooth is on		Phone microphone is mute
	Connected to a Bluetooth device		Battery is very low
	Airplane mode		Battery is low
	Alarm is set		Battery is partially drained
	Signal strength		Battery is full
	GPS is on		Battery is charging
	Receiving location data from GPS		Headset connected

Notification icons

	New Gmail message		More notifications are hidden
	New text or multimedia message		Call in progress (green)
	Problem with text or multimedia message delivery		Call in progress using Bluetooth headset (blue)
	New Google Talk message		Missed call
	New voicemail		Call on hold
	Upcoming event		Call forwarding is on
	Data is synchronizing		Uploading data
	Problem with sign-in or synchronization		Downloading data
	microSD card is full		Download finished
	Connected to VPN		An open Wi-Fi network is available
	Disconnected from VPN		Phone is connected via USB cable
	Song is playing		Radio is on
	USB tethering is on		System update available

Notification panel

Touch and drag down the Status bar or press **Menu** key and touch **Notifications** to open the notification panel. Touch and drag up to close it. From Notification panel, you can open items and other reminders indicated by notification icons or view wireless service information.



Touch **Clear** to clear all event-based notifications (other ongoing notifications will remain).

1.3.3 Search bar

The phone provides a Search function which can be used to locate information within applications, the phone or the web.

1.3.4 Lock/Unlock your screen

To protect your phone and privacy, you can lock the phone screen by creating a variety of patterns, PIN or password etc.

1.3.5 Personalize your home screen

Add
Touch and hold an empty area or press **Menu** key and touch **Add** on the Home screen, you can add shortcuts, widgets or folders to the Home screen.

Reposition.

Touch and hold the item to be repositioned to activate the Move mode, drag the item to desired position, then release. Hold the icon on the left or right edge of the screen to drag the item to another Home screen page.

Remove

Touch and hold the item to be removed to activate the Move mode, drag the item to the top of the Application tab, which will then turn red, and release.

Wallpaper customization

 
Touch and hold an empty area or press **Menu** key and touch **Wallpaper** on the Home screen to customize wallpaper.

1.3.6 Application tab

Touch from Home screen to enter applications list. To return to the Home screen, press **Home** key.

Consult recently-used applications

To consult recently-used applications, you can press and hold the **Home** key from Home screen. Touch an icon in the window to open the related application.




1.3.7 Volume adjustment

You can set ringer, media and phone ringtone volume to your preference by **Volume up/down** key while related application is running, or **Settings** menu.

2 Text input

2.1 Using Onscreen Keyboard

 Onscreen keyboard will display automatically when a program requires entering text or numbers.

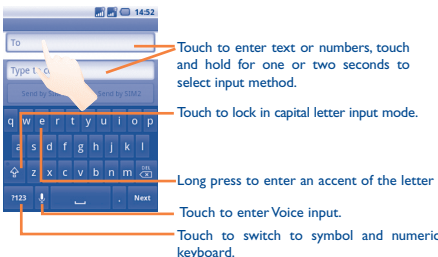

Onscreen keyboard settings

Press **Menu** key from Home screen, select **Settings** Language & keyboard Android keyboard, a series of settings are available for your selection.

Adjust the onscreen keyboard orientation

Turn the phone sideways or upright to adjust the onscreen keyboard orientation. You can mark/unmark **Auto-rotate screen** check box in **Settings** to adjust. (Press **Menu** key on Home screen Settings Display).

2.2 Text editing

- You can edit the text you have entered.
- Touch and hold text you have entered
- Options list pops up
- Select the operation you need (**Select all**, **Select text**, **Cut all**, **Copy all**, etc.)

3 Phone call

3.1 Placing a call

User can easily launch a call using **Phone**. Enter this menu using one of the following two ways:

- Touch Application tab from Home screen and select **Phone**.
- Press **Call** key, then select **Phone** tab.



 
Enter the desired number from keyboard directly or select a contact from **Contacts**, **Call log** or **Favorites** by touching tabs, then press **Call** key or touch **Call** or **Call** to place the call. When you place a call by press **Call** key, the default SIM card will perform the action (1). The number you entered can be saved to **Contacts** by pressing **Menu** key and touching **Add to Contacts**.

If you make a mistake, you can delete the incorrect digits by touching **Call**.

To hang up a call, press **End** key.

(1) The SIM setting will vary depending on the changes made to the default settings in **Settings** Dual-SIM settings.

3.2 Answering or rejecting a call

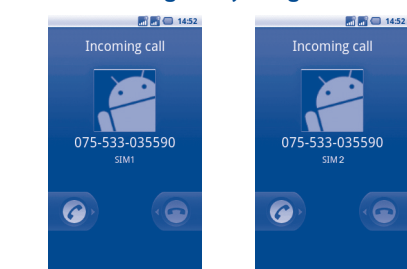

When you receive an incoming call, drag the green phone icon to the right to answer. Hang up the call by dragging the red phone to left or pressing **Back** key.

3.3 Consulting your call memory

You can access your call memory by pressing the **Call** key from the Home screen and touching **Call log** tab to view call history in categories of **Missed call**, **Dialed call** and **Received call**.

4 Contacts.....

You can view and create contacts on your phone or both SIMs and synchronize these with your Gmail contacts or other applications on the web or on your phone.

When using **Contacts** for the first time you are required to add new contacts to phone, import contacts from SIM card to phone, or synchronize contacts from other application accounts to phone.

4.1 Adding a contact

Touch **Application** tab on the Home screen, select **Contacts**, then press **Menu** key from contacts list screen and touch **New contact**.

4.2 Importing and exporting contacts

From **Contacts** screen, press **Menu** key to open contacts list option menu, touch **Import/Export**, then select **Import from SIM1/SIM2**, **Import from SD card** or **Export to SD card**.

To import a single contact from SIM card, touch the contact you want to import.

To import all contacts from SIM card, press **Menu** key and touch **Import** all to confirm.

4.3 Synchronizing contacts in multiple accounts

Contacts, data or other information can be synchronized from multiple accounts, depending on the applications installed on your phone.

4.4 Add to/remove from favorites

Touch and hold a contact , then touch **Add to favorites**. Or touch a contact to view details then touch to add the contact to favorites (the star will turn gold in color).

Select **Remove from favorites** on the contact's option menu or touch gold star on contact details screen.

4.5 Quick contact

Touch a contact's picture to open Quick Contact, then touch the icon for the way to connect. The icons available on Quick contact bar depend on the information you have for the contact and the applications and accounts on your phone.

5 Messaging.....

 
You can create, edit and receive SMS and MMS with this mobile phone.

To access this feature, touch Application tab from Home screen, then select **Messaging**.

All messages you receive or send out can only be saved in phone memory. To consult messages stored in SIM card, press **Menu** key from Messaging screen, then touch **Settings** Manage SIM card messages. For dual SIM model, touch either SIM1 or SIM2 on the above tabs to complete the operation.

5.1 Write message

On message list screen, touch **New message** to write text/multimedia messages.

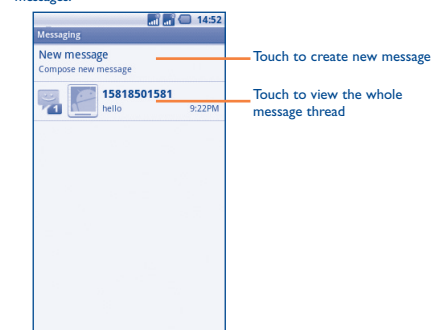

6 Email

Besides your Gmail account, you can also set-up external POP3 or IMAP email accounts in your phone.

To access this function, touch Application tab from Home screen, then select **Email**.

An email wizard will guide you through the steps to set-up an email account.

Enter the email address and password of the account you want to set-up.

Touch **Next**. If the account you entered is not provided by your service provider in the phone, you will be prompted to go to the email account settings screen to enter settings manually. Or you can touch **Manual setup** to directly enter the incoming and outgoing settings for the email account you are setting up.

Enter the account name and display name in outgoing emails.

Touch **Done**.

To add another email account, you can press **Menu** key and touch **Add account** to create.

5.2 Adjust message settings

Adjust message settings from Messaging application screen and press **Menu** key then touch **Settings**.

Storage settings

To manage messages quantities limit per conversation of text message and multimedia message.

Text message settings

You can request a delivery report for each message you send while the mark is green. Messages stored on SIM card can be delete or copy by the management.

Multimedia message settings

Pressing the right mark to green, you can request a delivery report and read report for each message you send, automatically retrieve messages. You also can set the maximum message size.

To create and send emails

- Press **Menu** key from Inbox screen, and touch **Compose**.
- Enter recipient(s)'s email address in **To** field, and if necessary, press **Menu** key and touch **Add Cc/Bcc** to include a copy or a blind copy to the message.
- Enter the subject and content of the message.
- Press **Menu** key, touch **Add attachment** to send an attachment to the receiver.
- Finally, touch **Send**.
- If you do not want to send the mail right away, you can touch **Save as draft** or press **Back** key to save a copy.

7 Getting connected.....

To connect to the internet with this phone, you can use GPRS/HSDPA/3G networks or Wi-Fi, whichever is most convenient.

7.1 Connecting to the Internet

7.1.1 GPRS/HSDPA/3G

The first time you turn on your phone with SIM card inserted, it will automatically configure network service: GPRS, HSDPA or 3G.

To check the network connection you are using, press **Menu** key on Home screen, then touch **Settings|Wireless & networks|Mobile networks|Network operators** or **Access Point Names**. For dual SIM model, touch either SIM1 or SIM2 on the above tabs to complete the operation.

7.1.2 Wi-Fi

Using Wi-Fi, you can connect to the Internet when your phone is within range of a wireless network. Wi-Fi can be used on phone even without a SIM card inserted.

To turn Wi-Fi on and connect to a wireless network

- Press **Menu** key from Home screen.
- Touch **Settings|Wireless & networks|Wi-Fi**.
- Mark/Unmark the checkbox to turn on/off Wi-Fi.
- Touch **Wi-Fi settings**. The detailed information of detected Wi-Fi networks is displayed in the Wi-Fi networks section.
- Touch a Wi-Fi network to connect. If the network you selected is secured, you are required to enter a password or other credentials (you may contact network operator for details). When finished, touch **Connect**.

To locate data you have transferred or downloaded in your MicroSD card:

- Touch Application tab from Home screen to open the applications list.
- Touch **FileManager**.

All data you have downloaded are stored in **FileManager**, where you can view media files (videos, photos, music and others), rename files, install applications into your phone, etc.

21 22

• CHARGERS

Main powered chargers will operate within the temperature range of 0°C to 40°C.

The chargers designed for your mobile phone meet with the standard for safety of information technology equipment and office equipment use. Due to different applicable electrical specifications, a charger you purchased in one jurisdiction may not work in another jurisdiction. They should be used for this purpose only.

• RADIO WAVES:

Proof of compliance with international standards (ICNIRP) or with European Directive 1999/5/EC (R&TTE) is required of all mobile phone models before they can be put on the market. The protection of the health and safety for the user and any other person is an essential requirement of these standards or this directive.

THIS DEVICE MEETS INTERNATIONAL GUIDELINES FOR EXPOSURE TO RADIO WAVES
Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves (radio frequency electromagnetic fields) recommended by international guidelines. The guidelines were developed by an independent scientific organization (ICNIRP) and include a substantial safety margin designed to assure the safety of all persons, regardless of age and health.

The radio wave exposure guidelines use a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 2 W/kg.

Tests for SAR are conducted using standard operating positions with the device transmitting at its highest certified power level in all tested frequency bands. The highest SAR values under the ICNIRP guidelines for this device model are:

Maximum SAR for this model and conditions under which it was recorded.		
Head SAR	WCDMA 2100MHz Band	0.624 W/kg
Body-worn SAR	EGSM 900MHz Band	0.526 W/kg

During use, the actual SAR values for this device are usually well below the values stated above. This is because, for purposes of system efficiency and to minimize interference on the network, the operating power of your mobile device is automatically decreased when full power is not needed for the call. The lower the power output of the device, the lower its SAR value.

100%
TouchPal
CooTek
Wi-Fi
CERTIFIED

100%
TouchPal
CooTek
Wi-Fi
CERTIFIED

100%
TouchPal
CooTek
Wi-Fi
CERTIFIED

100%
TouchPal
CooTek
Wi-Fi
CERTIFIED

100%
TouchPal
CooTek
Wi-Fi
CERTIFIED

100%
TouchPal
CooTek
Wi-Fi
CERTIFIED

7.2 Browser.....

Using Browser, you can enjoy surfing the Web.

To access this function, touch Application tab from Home screen, then touch **Browser**.

To go to a web page

On Browser screen, touch the URL box at the top, enter the address of the web page, then touch **Go**.

More options on the web page

Touch the **Menu**, you have more options, such as, add new window, add bookmark, select text, and so on.

7.3 Connecting to a computer via USB

With the USB cable, you can transfer media files and other files between your phone's MicroSD card and the computer.

To connect/disconnect your phone to/from the computer

- To connect your phone to the computer:
 - Use the USB cable that came with your phone to connect the phone to a USB port on your computer. You will receive a notification that the USB is connected.
 - Open the Notifications panel and touch **USB connected**.
 - Touch **Mount** in the dialog that opens to confirm that you want to transfer files.
- To disconnect:
 - Unmount the MicroSD card on your computer.
 - Open the Notifications panel and touch **Turn off USB storage**.
 - Touch **Turn off** in the dialog that opens.

To locate data you have transferred or downloaded in your MicroSD card:

- Touch Application tab from Home screen to open the applications list.
- Touch **FileManager**.

All data you have downloaded are stored in **FileManager**, where you can view media files (videos, photos, music and others), rename files, install applications into your phone, etc.

21 22

Body-worn SAR testing has been carried out at a separation distance of 1.5 cm. To meet RF exposure guidelines during body-worn operation, the device should be positioned at least this distance away from the body. If you are not using an approved accessory ensure that whatever product is used is free of any metal and that it positions the phone the indicated distance away from the body. Organizations such as the World Health Organization and the US Food and Drug Administration have stated that if people are concerned and want to reduce their exposure they could use a hands-free device to keep the phone away from the head and body during phone calls, or reduce the amount of time spent on the phone.

For more information you can go to www.alcatelone-touch.com. Additional information about electromagnetic fields and public health are available on the following site: <http://www.who.int/peh-emf>. Your telephone is equipped with a built-in antenna. For optimal operation, you should avoid touching it or degrading it. As mobile devices offer a range of functions, they can be used in positions other than against your ear. In such circumstances the device will be compliant with the guidelines when used with headset or usb data cable. If you are using another accessory ensure that whatever product is used is free of any metal and that it positions the phone at least 1.5 cm away from the body.

• **LICENCES**
microSD Logo is a trademark.
The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by TCT Mobile Limited and its affiliates is under license. Other trademarks and trade names are those of their respective owners.

• **one touch 913D Bluetooth QD ID B017760**
TouchPal™ and CooTek™ are trademarks of Shanghai HanXiang (CooTek) Information Technology Co., Ltd. and/or its Affiliates.

• **The Wi-Fi Logo is a certification mark of the Wi-Fi Alliance.**
Your device uses non-harmonised frequency and is intended for use in all European countries. The WLAN can be operated in the EU without restriction indoors, but cannot be operated outdoors in France.

• **Google, the Google logo, Android, the Android logo, Google Search, Google Maps, Gmail, YouTube, Android Market, Google latitude and Google Talk are trademarks of Google Inc.**

• **© Copyright 2011 TCT Mobile Limited**
All rights reserved
TCT Mobile Limited reserves the right to alter material or technical specification without prior notice.

• **21**

• **22**

• **23**

• **24**

• **25**

• **26**

• **27**

• **28**

7.4 Sharing your phone's mobile data connection

You can share your phone's mobile data connection with a single computer via a USB cable(USB tethering).

To share your phone's data connection via USB

- Use the USB cable that along with your phone to connect the phone to a USB port on your computer.
- Press **Menu** key from Home screen.
- Touch **Settings|Wireless & networks|Tethering**.
- Mark/Unmark the check box of **USB tethering** to activate/deactivate this function.


The functions may incur additional network charges from your network operator. Extra fees may also be charged in roaming areas.

8 Locate my location using GPS satellites.....

To activate your phone's global positioning system (GPS) satellite Receiver:

- Press **Menu** key from Home screen
- Touch **Settings|Location & security|Use GPS satellites**
- Mark the checkbox

 When open Maps, you can find your location:

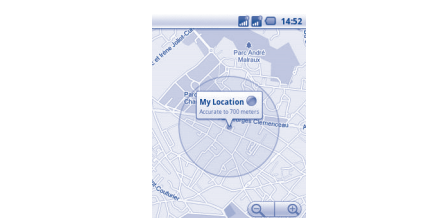

21 22

General information

• **Internet address:** www.alcatelone-touch.com

• **Hot Line Number:** see "TCT Mobile Services" leaflet or go to our website.

On our website, you will find our FAQ (Frequently Asked Questions) section. You can also contact us by e-mail to ask any questions you may have.

An electronic version of this user guide is available in English and other languages according to availability on our server: www.alcatelone-touch.com

Your telephone is a transceiver that operates on GSM/GPRS/EDGE in quad-band (850/900/1800/1900 MHz).

• **CE 1588**
This equipment is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The entire copy of the Declaration of Conformity for your telephone can be obtained through our website: www.alcatelone-touch.com.

• **Protection against theft (1)**
Your telephone is identified by an IMEI (phone serial number) shown on the packaging label and in the phone's memory. We recommend that you note the number the first time you use your telephone by entering * # 0 6 # and keep it in a safe place. It may be requested by the police or your operator if your telephone is stolen. This number allows your mobile telephone to be blocked preventing a third person from using it, even with a different SIM card.

• **Disclaimer**
There may be certain differences between the user manual description and the phone's operation, depending on the software release of your telephone or specific operator services.

• **21**

• **22**

• **23**

• **24**

• **25**

• **26**

• **27**

Use your phone's GPS satellites receiver to pinpoint your location within an accuracy as close as several meters ("street level"). The process of accessing the GPS satellite and setting your phone's precise location for the first time will require up to 5 minutes. You will need to stand in a place with a clear view of the sky and avoid moving. After this, GPS will only need 20-40 seconds to identify your precise location.

9 Data backup.....

This phone enables you to back up your phone's settings to Google Servers, with your Google Account.

If you replace your phone, the settings you've backed up are restored onto the new phone the first time you sign in with your Google Account. To activate this function:

- Press **Menu** key from Home screen
- Touch **Settings|Privacy|Back up my data**
- Mark the checkbox

Activated this function, a wide variety of settings are backed up, including your Wi-Fi passwords, bookmarks, a list of the applications you've installed, the words you've added to the dictionary used by the onscreen keyboard, and most of the settings that you configure with the Settings application. If you deactivated this option, you stop backing up your settings, and any existing backups are deleted from Google Servers.

For more information about these applications, please check user manual online: www.alcatelone-touch.com.

10 Making the most of your phone

To activate factory data reset:

- Press **Menu** key from Home screen
- Touch **Settings|Privacy|Factory data reset**

21 22

23 24

25 26

27 28

29 30

31 32

33 34

35 36

37 38

39 40

41 42

43 44

45 46

47 48

49 50

51 52

53 54

55 56

57 58

59 60

61 62

63 64

65 66

67 68

69 70

Phone reset will erase all of your personal data from internal phone storage, including information about your Google Account, any other accounts, your system and application settings, and any downloaded applications. Resetting the phone does not erase any system software updates you've downloaded or any files on your microSD card, such as music or photos. If you reset the phone in this way, you're prompted to re-enter the same kind of information as when you first started Android.

11 Applications.....

With this phone, some built-in Google applications and other third party applications are available for your convenience.

With the built-in applications, you can

- Communicate with friends
- Exchange messages or emails with friends
- Track your location, view traffic situations, search for locations and get navigation information to your destination
- Download more applications from Android Market and more.

For more information about these applications, please check user manual online: www.alcatelone-touch.com.

12 Making the most of your phone

To activate factory data reset:

- Press **Menu** key from Home screen
- Touch **Settings|Privacy|Factory data reset**

21 22

23 24

25 26

27 28

29 30

31 32

33 34

35 36

37 38

39 40

41 42

43 44

45 46

47 48

49 50

51 52

53 54

55 56

57 58

59 60

61 62

63 64

65 66

67 68

12.1 Android Manager

The Android Manager includes:

- **Contacts**
It allows you to back up contact entries so that you don't have to worry about losing, breaking, switching phone or changing service providers.
- **Messages**
It frees you from painstakingly inputting text on the keypads. All of your messages are easily accessible and well-organized.
- **Photos**
It allows you to easily import photos from PC or the handset and organize them in different albums for better management.

• **Videos**
It allows you to insert video files from PC for playback and then upload to handset folder.

• **Music**
It allows you to quickly search your favorites in PC, manage the ultimate Library, and enjoy the easiest digital jukebox in your own mobile way.

• **Application**
It allows you to import downloaded mobile applications and have them installed into your handset upon synchronization.

• **File**
It allows you to organize Handset files with just a few clicks and files on the Handset can be at where you want them to be.

• **Sync**
It allows you to synchronize the Contacts and Calendar in Outlook/Outlook Express and handset.

Supported Operating Systems
Windows XP/Vista/Windows 7.

21 22

23 24

25 26

27 28

29 30

31 32

33 34

35 36

37 38

39 40

41 42

43 44

45 46

47 48

49 50

51 52

53 54

55 56

57 58

59 60

61 62

63 64

65 66

67 68

69 70

71 72

73 74

75 76

12.2 One Touch Upgrade

Using One Touch Upgrade tool you can update your phone's software from your PC.

Downloading One Touch Upgrade from ALCATEL website (<http://www.alcatelone-touch.com/>) and install it on your PC. Launch the tool and update your phone by following the step by step instructions (refer to the User Guide provided together with the tool). Your phone's software will now have the latest software.

All personal information will be permanently lost following the update process. We recommend you backup your personal data using Android Manager before upgrading.

21 22

23 24

25 26

27 28

29 30

31 32

33 34

35 36

37 38

39 40

41 42

43 44

45 46

47 48

49 50

51 52

53 54

55 56

57 58

59 60

61 62

63 64

65 66

67 68

69 70

71 72

73 74

75 76

77 78

79 80

81 82

83 84

85 86

87 88

Safety and use.....

We recommend that you read this chapter carefully before using your phone. The manufacturer disclaims any liability for damage, which may result as a consequence of improper use or use contrary to the instructions contained herein.

• **TRAFFIC SAFETY:**
Given that studies show that using a mobile phone while driving a vehicle constitutes a real risk, even when the hands-free kit is used (car kit, headset...), drivers are requested to refrain from using their mobile when the vehicle is not parked.
Do not drop, throw or bend your mobile phone.
Do not use the phone if the glass made screen, is damaged, cracked or broken to avoid any injury.
Do not point it.
Use only batteries, battery chargers, and accessories which are recommended by TCT Mobile Limited and its affiliates and are compatible with your phone model. TCT Mobile Limited and its affiliates disclaim any liability for damage caused by the use of other chargers or batteries.
Remember to make backup copies or keep a written record of all important information stored in your phone.
Some people may suffer epileptic seizures or blackouts when exposed to flashing lights, or