 



Your Phone

This section introduces you to the hardware of the device.

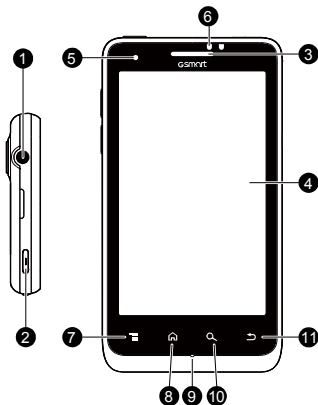

No.	Items	Functions
1	Earphone jack	Use a headset for hands-free conversation or listening to music.
2	Power	<ul style="list-style-type: none">• Press and hold for several seconds to turn the phone on or off.• To set your phone to the sleep mode, press the power button briefly. Press again to turn on the display.
3	Receiver	The source of voice.
4	Touch screen	Display screen.
5	LED	<ul style="list-style-type: none">• Power status notification.• Other notification. (New message / New email / Missed call).
6	P-sensor / Light sensor	<ul style="list-style-type: none">• P-Sensor: The screen will turn off automatically when the device is close to the face during a phone call.• Light Sensor: Adjust the brightness of the screen according to the environment.


No.	Items	Functions
7	Menu	Press to view the options of the menu.
8	Home	<ul style="list-style-type: none"> • Go back to Home Screen. • Press and hold to bring up recent activities.
9	MIC	Sound Receiver.
10	Search	Connect to the website or find features in the phone.
11	Return	Return to the previous page.
12	Volume	Press upward or downward to turn louder or down volume. Press down key fully to enter vibrate mode.
13	Micro USB port	<ul style="list-style-type: none"> • Connect USB cable to PC, share your phone's mobile network with PC / USB mass storage. • Connect USB cable and the AC adapter to charge the battery.
14	Flash LED	Help photo shooting.

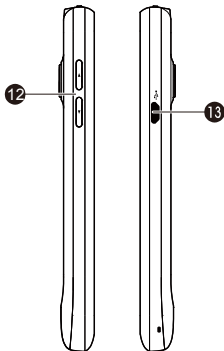 

No.	Items	Functions
15	5 Megapixels Camera	The camera on the back of the device supports 5-mega-pixel photo and high-quality video.
16	Back cover	You need to open the cover to install or uninstall the battery and the SIM card.
17	Speaker	The source of music and voice.

NOTE:

 
The battery can also be charged while connecting to a computer.

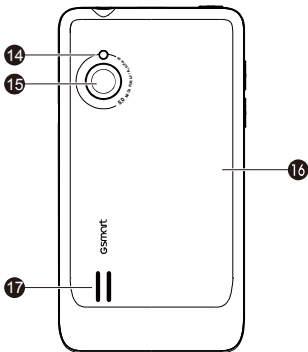


Installing or uninstalling SIM Card, Battery, and Memory Card

To remove the back cover

 
1. Please turn over your phone with the back cover facing up.

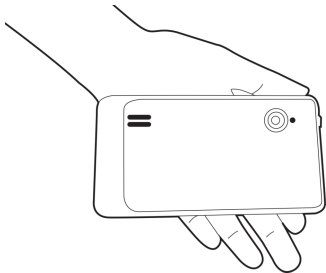

 2. Please remove the back cover from the top.

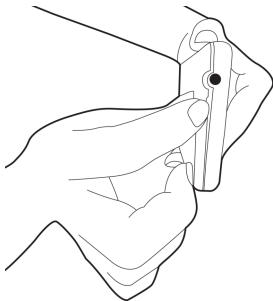

 3. Pull the back cover with your fingertip and remove it.

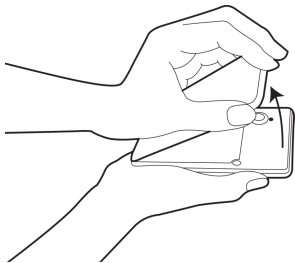


SIM card

The SIM card contains your phone number, memory storage, and details of network service.

To install the SIM card

 Make sure the gold contacts are facing down and the cut-off corner is facing toward the SIM card slot. There are two slots for SIM cards. Upper slot is for SIM2, and SIM1 slot is on the underside.

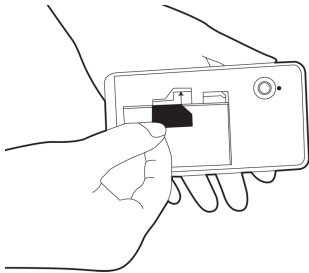

To remove the SIM card

 
1. First, remove battery.
2. Use your finger to slide the SIM card out of card slot.

Battery

Your phone comes with a rechargeable battery. Battery life varies depending on the network, used applications, and the type of connections attached to your phone.

To install the battery

Make sure the contact of the battery is close to connectors in the battery slot.

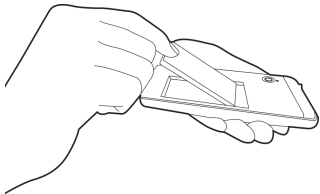

To remove the battery

Use your fingertip to lift the battery, then remove it.

 
NOTE:

To ensure battery performance and avoid risk from fire:


- Use only the original battery designated for the phone.
- Do not store the battery in temperature lower than -10°C or higher than 45°C

To replace the back cover

1. Please insert the hook on the bottom of back cover into the slot.

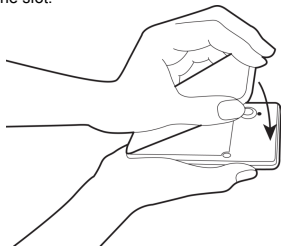

 2. Then, press four points of back cover fully until hear clicks.

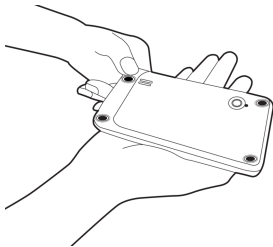


Memory card

You may need a microSD card to store photos, music, videos and other data.

To install the memory card

 1. Insert the memory card with the gold contact facing down.
2. Push the memory card until it clicks into slot.

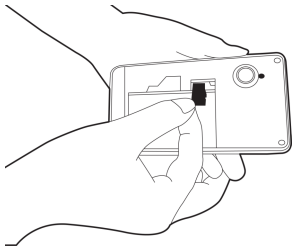


To remove the memory card

1. For safe removal, tap Application Drawer > Settings > Storage > Unmount SD card.
2. Push the memory card to eject it from the slot.

Charging the Battery

When you take your phone out of box for the first time, the battery isn't at full of power. Please charge the battery fully before using.

 1. Connect the USB cable to the AC adapter, and then, connect to the device via the USB cable.
2. Plug the AC adapter to a socket start to charge.

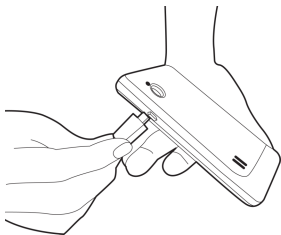

NOTE:

- The battery can also be charged when you connect your phone to a computer.
- To ensure safety, do not remove the battery from the phone while the AC adapter is connected or while it is being charged.

Turning the Phone On or Off

After installing the SIM card and charging the battery, you are now ready to turn your phone on.

To turn on your phone

Press and hold the power button until the phone shortly vibrates.

To turn off your phone

1. Press and hold the power button for several seconds.
2. A pop-up window appears, and then tap Power off.
3. Select OK to confirm.

To set your phone to the sleep mode

To set your phone to sleep mode, press the power button briefly. It will turn the display off. To turn the display on, press the power button briefly again.

Notification LED

Types	Descriptions
Solid red light	Battery is charging.
Solid green light	Battery is full.
Flashing red light	Battery is low.
Flashing green light	Notification (New message / Missed call / New email)
Flashing blue light once	Turning the device on while charging.

Using Headset

For hands-free conversation or listening to music, plug a headset into the headset jack.

NOTE:

- When using a headset, your ability to hear outside sounds may be limited. Do not use the headset if it will endanger you.
- Do not set the volume to its maximum with a headset as it may damage your hearing.

The following instructions are only provided with the original headset of the original manufacturer:






Types	Descriptions
Press the button on the headset	<ul style="list-style-type: none"> • When you receive an incoming call, press the button to answer the call. If you are having a call conversation, press the button to mute, and press again to un-mute. • In music mode, press the button to play, and press again to pause music. • When you are listening to music, press twice quickly, forward to next music.
Press and hold the button on the headset	<ul style="list-style-type: none"> • If you are having a call, press and hold the button to end the call. • If there is an incoming call, press and hold the button to end the call. • Press and hold the button to launch music player. • When you are listening to music, press and hold the button back to Playlist.









 
 
The Home Screen











On Home screen, you can quickly access common features and view notifications of missed calls, received messages, battery, and the status of the connection.












Status Bar Icons

The icons of the status bar indicate different types of information. Tap the status bar and scroll down to view notifications or view system information.

Types	Icons	Descriptions
Volume		Mute the call.
		Vibration is on.
		Wired headset connected.
		Wired microphone headset connected.
		Speaker is on.

Battery		Battery is full.
		Battery is low.
		Battery is very low.
		Battery is charging.
Network and Connection		No network signal / No SIM card inserted.
		Maximum signal strength. Fewer bars indicate lower signal strength.
		Wi-Fi is connected.
		Wi-Fi Network is activated.
		GPRS is in progress.
		EDGE is in progress.

	3G is in progress.
	HSDPA is in progress.
	Airplane mode.
	Call is in progress.
	Your call is on hold.
	Portable Wi-Fi hotspot is activated.
	USB tethering is activated.
	Both USB tethering and Portable hotspot are activated.
	GPS is on.
	Bluetooth is on.

		The device is connected to PC via the USB cable.
Notification		New text message.
		New e-mail.
		Alarm.
		Event notification.
		Missed call.
		USB debugging is connected.
		Data is Syncing.
		General notification.
		FM radio is on.
		Playing a song.

		Downloading an application.
--	--	-----------------------------

Android Manager

You can use Android Manager on your PC to synchronize data in your device. Please download Android Manager from GSmart's official website and install it in your PC.

NOTE:

Only Windows XP, Windows Vista, and Windows 7 (32/64 bit) support the function.

Synchronization Procedure

1. Connect your device to your PC with the USB cable.
2. After you connect your device to your PC with a USB cable, USB Manager will pop up. Tap PC Sync on your phone.
3. Android Manager will synchronize with your phone automatically.
4. Android Manager's connection status:



: Connection between PC and your device has been established.



: Connection between PC and your device is being established.



: Connection between PC and your device is disconnected.

Use Android Manager on your PC

Contacts: Allows you to back up contacts, as well as organize your contacts.

Messages: Allows you to edit and send messages.

Photos: Allows you to import photos from PC or the device and to organize them in different albums.


Videos: Allows you to add and to play videos.

Music: Allows you to add, to delete, to edit and to play music.

Application: Allows you to manage the downloaded applications.

Files: Allows you to organize and to manage files in both of your PC and your device.

Sync: Allows you to synchronize the following items: Contacts, Calendar, Camera, Camcorder, and Folders. Conflict resolutions include Skip this item, Computer will overwrite handset, and Handset overwrite computer.

Finally, tap  to synchronize the selected items between your PC and your device.

USB Manager

There are 4 modes of USB Manager after your device connects to PC with the USB cable:

1. **Data Storage:** Insert the memory card, and then, tap Data Storage on your phone. Your PC will pop-up a message to ask if you want to use data storage. It can help you save the files.
2. **PC Sync:** Tap PC Sync on your phone, your device will connect and access Android Manager. Android Manager on your PC will synchronize with your device.
3. **Internet Sharing:** Share your phone's mobile network with PC.
4. **Charge Only:** Tap Charge Only on your phone to start charging.

Install USB Driver

1. Connect your device to the PC with the USB cable, and then, your PC will pop-up a message. Select "Open folder to view files."
2. Tap the "Setup.exe" in the USB Driver Installer folder in your PC.
3. Pop up the installing windows of GSmart Driver. Wait for a few seconds for the process, then tap "Done" to have the process completed.

NOTE:
Only Windows XP Service Pack 3 and higher versions support the installation.

Specifications

System Information	
Platform	Android 2.3
Processor	Qualcomm 7227-T at 800 MHz
Memory	ROM 1 GB RAM 512MB
Display	
Size	4.3"
Resolutions	800 x 480 WVGA
Size	
Dimensions (L x W x H)	129.8 x 69.8 x 11.5 mm
Weight	163 grams with battery
Power	
Battery Rechargeable	Li-ion pack 1500 mAh
Power Adapter AC input	100-240V, 50 / 60Hz, 0.3A max.
DC output	5V, 1A

Standby time	Up to 105 hours (It may vary depending on the availability of local networks and the individual usage.)
Talk time	Up to 6 hours (It may vary depending on the availability of local networks and the individual usage.)
Radio Band & Standard	
GSM/GPRS/EDGE	850 / 900 / 1800 / 1900 MHz
WCDMA/HSDPA	900 / 2100 MHz
Connectivity	
GPS	GPS
Wi-Fi	IEEE 802.11 b/g/n
Bluetooth	Bluetooth 2.1 + EDR
USB	Micro USB
Audio Jack	3.5 mm stereo audio jack
Digital Camera	
Digital Camera	5.0 Megapixel Color Camera with AF and Video Recording

External Memory	
Memory Card	microSD supports up to 32GB
Temperature	
Operating	-15°C to 55°C
SIM Card Slot	
Dual SIM card slot.	

NOTE:

Specifications are subject to change without the prior notice. They may vary in some regions also.

NOTE: Network supporting:

(a). SIM 1: 3G/2G(WCDMA/GSM)

(b). SIM 2: 2G (GSM)

If this document is modified, please download the latest version on GSmart's official website. You can download the user manual on GSmart's official website also.

GIGA-BYTE COMMUNICATIONS INC.
 B2, No.207, Sec.3, Pai-Hsin Road,
 Hsin-Tien Dist., New Taipei City 231, Taiwan
 +886-2-89132220
www.gigabytecm.com