

**GMC**

# GETTING TO KNOW YOUR **2015 YUKON DENALI/ YUKON XL DENALI**



Review this Quick Reference Guide for an overview of some important features in your GMC Yukon Denali or Yukon XL Denali. More detailed information can be found in your Owner Manual. Some optional equipment<sup>†</sup> described in this guide may not be included in your vehicle. For easy reference, keep this guide with your Owner Manual in your glove box.

[www.gmc.com](http://www.gmc.com)

## INSTRUMENT PANEL

Instrument Panel  
Illumination  
Control/Exterior  
Lamp Control

4WD  
Control

Integrated  
Trailer  
Brake  
Control

Traction Control and StabiliTrak/  
Front and Rear Parking Assist/  
Lane Departure Warning/Adjustable  
Pedals/Power Assist Step Buttons

Turn Signal/  
Windshield  
Wipers  
Lever

Driver  
Information  
Center



Cruise Control/  
Collision Alert/  
Heated Steering  
Wheel Buttons

Audio Next/  
Previous Favorite  
Station Controls  
(behind steering  
wheel)

Tilt/Telescopic  
Steering Wheel  
Control

Voice  
Recognition  
Buttons/Driver  
Information  
Center Controls

Audio Volume  
Controls  
(behind steering  
wheel)

### Instrument Cluster Symbols

	Low Fuel		Cruise Control Set		Lights On Reminder
	Traction Control Off		StabiliTrak Active		Airbag Readiness
	Lane Departure Warning		StabiliTrak Off		Check Engine
	BRAKE Brake System		Security		Antilock Brake System
			Tow/Haul Mode		Low Tire Pressure

Tow/Haul  
Button

Infotainment  
System

Climate  
Controls



Engine  
Start/Stop  
Button

Driver's Heated/  
Cooled Seat/  
Buttons

Storage  
Compartment with  
Accessory Power  
Outlet/USB Ports

Rear  
Climate  
Controls

Passenger's  
Heated/Cooled  
Seat Buttons



Door Ajar



Oil Pressure



Charging System



Safety Belt Reminder

*Refer to your Owner Manual to learn about the information being relayed by the lights, gauges and indicators on the instrument cluster.*

*See In Brief in your Owner Manual.*

## REMOTE KEYLESS ENTRY TRANSMITTER (KEY FOB)

### Unlock

Press to unlock the driver's door.  
Press again to unlock all doors.

### Lock

Press to lock all doors.

**Note:** Press and hold the Lock/Unlock buttons to automatically fold/unfold the power mirrors. To change the Auto Mirror Folding setting, go to Comfort and Convenience in the Vehicle Settings menu.

### Liftglass

Press twice to open the liftglass.

### Power Liftgate



Press twice to open or close the power liftgate.


### Vehicle Locator/Panic Alarm

Press and release to locate your vehicle. The turn signal lamps will flash and the horn will sound.

Press and hold to activate the alarm. The turn signal lamps will flash and the horn will sound until the button is pressed again or the ignition is turned on.

### Remote Vehicle Start

Press and release the  Lock button and then press and hold the  button until the turn signal lamps flash (about 4 seconds) to start the engine from outside the vehicle. After entering the vehicle, turn on the ignition.



- During a remote start, the engine will run for 10 minutes.
- Remote Start can be extended once by repeating the remote start procedure.
- Press and hold the  button until the parking lamps turn off to cancel a remote start.
- The heated/cooled seats will turn on during a remote start (if selected in the Vehicle Settings menu) when outside temperatures warrant.

**Note:** To change the remote lock, unlock, and remote start settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

## POWER LIFTGATE

### Open/Close the Power Liftgate

- ▶ Press the  Power Liftgate button on the RKE transmitter twice.
- ▶ Press the  Power Liftgate knob on the overhead console.
- ▶ Press the touchpad (A) on the liftgate handle to open the liftgate.
- ▶ Press the button (B) next to the liftgate latch to close the liftgate.



### Programming the Liftgate Height

1. Turn the **Power Liftgate** knob to the 3/4 mode position.
2. Open the liftgate.
3. Adjust the liftgate manually to the desired height.
4. To save the setting, press and hold the button next to the liftgate latch for 3 seconds. The tail lamps will flash when the setting is saved.



## KEYLESS ACCESS SYSTEM

The Keyless Access System enables operation of the doors and ignition without removing the Remote Keyless Entry transmitter from a pocket or purse. The transmitter must be within three feet of the door being unlocked or the liftgate.

### Keyless Unlocking

With the transmitter within range:

- ▶ Press the lock button on the driver's door handle to unlock the driver's door; press it again within 5 seconds to unlock all doors.
- ▶ Press the lock button on a passenger door handle to unlock all doors.
- ▶ Press the touchpad on the liftgate handle to open the liftgate.



### Keyless Locking

With the ignition off, the transmitter out of the vehicle, and all doors closed:

- ▶ Press the lock button on any door handle to lock all doors immediately.
- ▶ If Passive Locking is turned on, all doors will lock automatically after a short delay once all doors are closed.

**Note:** To change the door lock and unlock settings, go to Remote Lock, Unlock, Start in the Vehicle Settings menu.

See Keys, Doors and Windows in your Owner Manual.

## KEYLESS ACCESS START

### Starting the Engine

- ▶ With the vehicle in Park or Neutral, press the brake pedal and then press and hold the **ENGINE START/STOP** button to start the engine.

**Note:** The transmitter must be in the vehicle to turn on the ignition. If the transmitter battery is weak, place the transmitter in the pocket in the center console to enable the engine to start. Replace the transmitter battery as soon as possible.



### Stopping the Engine

- ▶ Shift to Park and press the **ENGINE START/STOP** button to turn off the engine.


### Accessory

- ▶ With the engine off and the brake pedal NOT depressed, press the **ENGINE START/STOP** button to place the ignition system in the accessory position.

See Driving and Operating in your Owner Manual.

## POWER FRONT SEATS

### Seat Adjustments

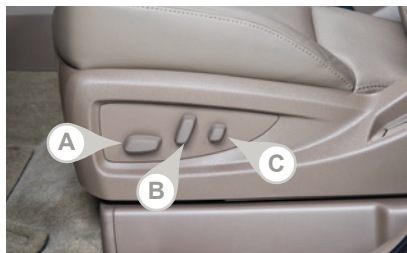

#### A. Seat Cushion Adjustment

Move the front horizontal control to move the seat forward or rearward, or to tilt, raise or lower the seat.

#### B. Seatback Adjustment

Move the vertical control to recline or raise the seatback.

#### C. Lumbar Adjustment


Move the rear control fore/aft to increase/decrease lumbar support or up/down to raise/lower the lumbar location.

### Set Memory Positions





1. With the vehicle in Park, adjust the power driver's seat, power adjustable pedals, power outside mirrors, and power tilt/telescopic steering column to the desired positions.
2. Press and release the **SET** button and then press and hold button **1** on the driver's door until a beep sounds.
3. Repeat the steps using button **2** for a second driver.

### Set Exit Position

1. Adjust the power driver's seat, power adjustable pedals, and power tilt/telescopic steering column to the desired positions.
2. Press and release the **SET** button and then press and hold the  **Exit** button on the driver's door until a beep sounds.

### Recall Positions

- ▶ With the ignition on and the vehicle in Park, press and release button **1** or **2** or the  **Exit** button to recall the stored position.
- ▶ With the vehicle off or not in Park, press and hold button **1** or **2** or the  **Exit** button until the stored position is reached. Releasing the button before the stored position is reached cancels the recall.

**Note:** To change the memory recall and exit settings, go to *Comfort and Convenience* in the *Vehicle Settings* menu.

See *Seats and Restraints* in your *Owner Manual*.



### Folding 2nd-Row Seats

The 2nd-row seats fold and tumble to provide more cargo space and access to the 3rd-row seats.

1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Lift the lever on the lower outboard side of the 2nd-row seat. The seatback will fold forward.
3. Lift the lever again to tumble the seat forward.



### Power Folding 2nd-Row Seats



1. Lower the head restraint, unbuckle the safety belt, make sure nothing is under or in front of the seat, and move the front seat forward enough to allow room for the folded seat.
2. Press the  **Seat Release** button (A) on the panel behind the rear doors or the  button (B) in the rear cargo area to fold the seat forward. Press either button again to tumble the seat forward.



### Unfolding 2nd-Row Seats

1. Pull down the seat until it latches to the floor.
2. Lift up the seatback until it locks in place.

### Power Folding/Unfolding 3rd-Row Seats

1. With the vehicle in Park, lower the head restraint, unbuckle the safety belt, and make sure nothing is on the seat.
2. Press and hold the bottom of the  **Seat Release** button (C) in the rear cargo area to fold the seat flat.
3. Press and hold the top of the  button to raise the seatback.



See Seats and Restraints in your Owner Manual.

## CUSTOMIZABLE DRIVER DISPLAY



The Customizable Driver Display on the instrument cluster displays a variety of vehicle system information and warning messages.

### Menu Items

Use the control pad on the right side of the steering wheel to view the following menus:

**Info** – display trip and fuel information

**Audio** – browse music or change the audio source

**Phone** – view active call or recent calls and scroll through contacts

**Navigation** – view active route or change voice prompts

**Settings** – display units, info pages settings and set a speed warning

### Display/Select Menu Items

- ▶ Press the ◀ or ▶ button to move between the display zones.
- ▶ Press the ▲ or ▼ button to move through the menus.
- ▶ Press ✓ to open a menu or select/deselect a setting.

### Reset an Item

1. Use the control pad to display the item.
2. Press and hold ✓ to reset or clear the item.

### Changing Display Themes

The Customizable Driver Display features three display themes: Standard, Technology, and Media. The style of the display will change depending on the selected theme.

1. Use the control pad to display the Settings menu.
2. Select Display Theme.
3. Select the desired theme.

## HEAD-UP DISPLAY

The Head-Up Display (HUD) projects some operating information onto the windshield. The HUD controls are located on the left side of the instrument panel.



### HUD

Lift up or press down to adjust the position of the image on the windshield. It cannot be adjusted side-to-side.

### INFO

Press to select a display view.



Lift up or press down to brighten or dim the display. Hold down to turn off the display.

*See Instruments and Controls in your Owner Manual.*

## AUDIO STEERING WHEEL CONTROLS



### Push to Talk

Press to answer an incoming call or to use natural voice recognition with the audio, Bluetooth, navigation or OnStar® system.

### End Call/Mute

Press to end or reject a call.

Press to mute/unmute the vehicle speakers.

### Next/Previous

With the Audio screen displayed on the DIC, press  $\nabla$  or  $\triangle$  to seek the previous or next radio station or track.

### Volume (behind right side of steering wheel)

Press the top or bottom button to adjust the volume.

### Next/Previous Favorite Station (behind left side of steering wheel)

Press the top or bottom button to display the current station or track. Press the top or bottom button again to go to the next or previous favorite radio station or track.



*Next/Previous Favorite Station button shown. Volume button is located behind the right side of the steering wheel.*

*See your Infotainment System Owner Manual.*

## GMC INTELLILINK RADIO WITH 8-INCH\* COLOR SCREEN

Refer to your Owner Manual for important safety information about using the infotainment system while driving.

The GMC IntelliLink radio is controlled by using the audio system buttons and touch screen.



See your Infotainment System Owner Manual.

## Setting the Time

1. Touch **Settings** on the home page.
2. Touch **Time and Date**.
3. Touch **Set Time**.
4. Touch the arrows to adjust the hours, minutes and AM or PM.
5. Touch **BACK** to exit the menu.



## Storing Favorites

Up to 60 radio stations from all bands (AM, FM or XM<sup>+</sup>), media (song, artist, album, and genre with device connected to a USB port), phone contacts and navigation destinations can be stored in any order.

1. Display or select the desired radio station, media favorite, navigation destination or contact.
  2. Touch and drag up the **Interaction Selector** at the bottom of the screen to display the favorite screen buttons.
  3. Touch and hold one of the favorite screen buttons until a beep is heard, indicating it is stored.
  4. Repeat the steps to store another favorite item.
- To change the number of favorites displayed, go to Radio in the Settings menu.

## Home Page

### Managing Home Page Icons

The home page icons (A) can be arranged in any order.

1. Press the **Home** button.
2. To enter edit mode, touch and hold the home page icon to move.
3. Continue holding the icon and drag it to the desired position, and then release.
4. Press the **Home** button to exit edit mode.

### Add Favorites to the Applications Tray

For quick access, 3–5 favorite applications can be displayed in the applications tray (B) at the top of the screen.

1. Press the **Home** button.
  2. Touch and hold the desired icon on the home page.
  3. Continue holding the icon and drag it to the applications tray at the top of the screen.
  4. Press the **Home** button to exit.
- To remove an item from the applications tray, enter the edit mode and then touch and drag the icon down from the tray.




See your Infotainment System Owner Manual.

## BLUETOOTH® SYSTEM

Refer to your Owner Manual for important safety information about using the Bluetooth system while driving.

Before using a Bluetooth-enabled device in the vehicle, it must be paired with the in-vehicle Bluetooth system. The pairing process is disabled when the vehicle is moving. Not all devices will support all functions. Visit [www.gmtotalconnect.com](http://www.gmtotalconnect.com) for more information.

### Pair a Phone


1. To use voice recognition, press the  **Push to Talk** button; after the beep, say "Pair phone," or  
Use the **MENU** knob or the touch screen to select the Phone icon > Phones > Pair Device.
2. Start the pairing process on the phone. Locate GMC IntelliLink on the phone.
3. Enter the four-digit code that appears on the touch screen into the phone or, if a six-digit code appears on the phone, confirm it on the touch screen.
4. If your phone prompts you to accept the connection or phone book download, click "yes" and always allow.

### Streaming Audio

With a paired device connected via Bluetooth, press the **MEDIA** button until Bluetooth is displayed on the touch screen to stream audio from the device. Control audio operation using the device controls. For full control of the mobile device, it may be necessary to connect the device to the USB port.

See your Infotainment System Owner Manual.

## PORTABLE AUDIO DEVICES

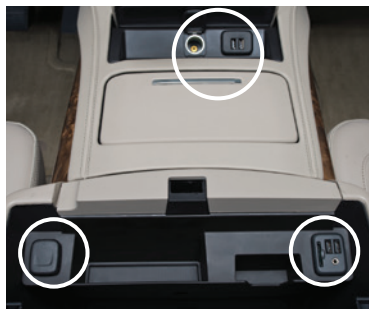

An accessory power outlet, dual USB ports, an auxiliary jack and an SD card reader are located in the center console storage compartment.

An accessory power outlet and dual USB ports also are located in the center console front compartment.

- ▶ An iPod®, iPhone®, MP3 Player, a USB flash drive or a USB mass storage device can be connected to the USB port. GMC IntelliLink will read the device and build a list of songs. Search for music on-screen or by voice commands.
- ▶ Press the **MEDIA** button to select a portable device as the audio source.

**Note:** Connect a mobile device USB cord after starting the vehicle for optimum performance.


See your Infotainment System Owner Manual.

GMC IntelliLink uses a Bluetooth or USB connection to link a compatible device, such as a smartphone, cell phone, USB flash drive or portable audio player/iPod®. IntelliLink enables streaming audio through a smartphone and hands-free voice control. Music also can be played from a USB flash drive.

For assistance with the IntelliLink system, contact Customer Assistance at 1-855-4-SUPPORT (1-855-478-7767) or visit [www.gmc.com/intellilink](http://www.gmc.com/intellilink).

### Natural Voice Recognition

Control the music source and make phone calls hands-free (after pairing your Bluetooth-enabled phone) using the natural voice recognition system.

1. Press the  **Push to Talk** button on the steering wheel.
2. The radio will say "Command please," followed by a beep.
3. After the beep, say what you want it to do using natural speech.

- **Phone (using your paired phone):**

Example command: "Call Amanda" or "Dial 555-1212"

- **Media Music Device Search (when connected to USB only):**

Example command: "Play artist [name]" or "Play song [name]"

- **Radio control:**

Example command: "Tune FM 104.3" or "Tune XM Classic Vinyl"

- **Help:**

Say "Help" for voice recognition assistance

### PANDORA® Internet Radio

Listen to personalized radio stations based on favorite artists or genres.

- ▶ Download the Pandora app to your smartphone. Restart the smartphone and sign in to Pandora.
- ▶ Create a station on your phone to listen to a customized song list in the vehicle.
- ▶ Connect your smartphone/device to the system by Bluetooth or, for Apple devices, by a USB cable.
- ▶ Touch the Pandora icon on the touch screen to access Pandora. A slight delay may occur when loading a song or changing a station.

### Voice Pass-Thru and Siri® Eyes Free

Voice pass-thru allows access to the voice recognition commands on a paired cell phone, i.e. Siri or Voice Command. See the cell phone manufacturer's user guide to determine whether the cell phone supports this feature.

- ▶ To activate voice pass-thru, touch the  microphone icon on the touch screen.

*See your Infotainment System Owner Manual.*

## VEHICLE PERSONALIZATION

Some vehicle features can be customized using the audio controls and menus or the touch screen buttons.



### Changing Vehicle Settings

The Vehicle Settings menu may include **Climate and Air Quality, Collision/ Detection Systems, Comfort and Convenience, Lighting, Power Door Locks, and Remote Lock/Unlock/Start.**

Use the **MENU** knob or the touch screen to:



1. Select **Settings** on the home page.
2. Select **Vehicle**.
3. Select the desired menu item.
4. Select the desired feature and setting. Settings are saved automatically.
5. Select **BACK** to exit each menu.


See *Instruments and Controls in your Owner Manual.*

## DRIVER ASSISTANCE SYSTEMS

The driver assistance systems use advanced technologies to help avoid collisions by providing visual and audible alerts under some imminent collision conditions.

**Forward Collision Alert** – When approaching a vehicle directly ahead too quickly, the system flashes a visual alert and pulses the Safety Alert Seat. See Safety Alert Seat.

The  **Vehicle Ahead** indicator will illuminate in green on the instrument cluster when a vehicle is detected and will illuminate in amber when following a vehicle ahead too closely. If your vehicle approaches another vehicle too rapidly, the  will flash, a visual alert will flash on the windshield and the Safety Alert Seat will pulse. See Safety Alert Seat.

- ▶ Press the  **Collision Alert** button on the left side of the steering wheel to set the alert sensitivity to Far, Medium, Near, or Off. The setting is displayed in the Driver Information Center.



**Lane Departure Warning** – When crossing a detected lane marking without using a turn signal, the system flashes an amber  visual alert on the instrument cluster and pulses the left or right side of the Safety Alert Seat. See Safety Alert Seat.

- ▶ Press the  **Lane Departure Warning** button on the left side of the instrument panel to turn the system on or off.

**Safety Alert Seat** – The driver’s seat pulses, left side, right side, or simultaneously, to alert the driver of potential hazards.

- ▶ Audible notification may be selected instead of Safety Alert Seat pulsing notification. To change the alert setting, go to Settings > Vehicle > Collision/Detection > Alert Type.

**Rear Vision Camera** – Provides a view directly behind the vehicle when backing up.

- ▶ To turn the Rear Vision Camera Guidelines or Rear Park Assist Symbols on or off, go to Settings > Rear Camera.



**Rear Cross Traffic Alert** – Warns of traffic coming in either direction behind the vehicle by displaying a visual alert on the Rear Vision Camera display and pulses the left or right side of the Safety Alert Seat. See Safety Alert Seat.


- ▶ To turn the system on or off, go to Settings > Rear Camera > Rear Cross Traffic Alert.

**Automatic Collision Preparation** ♦ – Prepares the brakes or applies the brakes and slows the vehicle if an emergency collision appears imminent or the driver does not react to previous alerts.

**Side Blind Zone Alert/Lane Change Alert** – While driving, the Side Blind Zone Alert/Lane Change Alert displays a warning symbol on the left or right side mirror when a vehicle is detected in that side blind zone area or rapidly approaching that side blind zone area. The warning symbol flashes if a turn signal is activated when a vehicle has been detected.

- ▶ To turn the system on or off, go to Settings > Vehicle > Collision/Detection Systems > Side Blind Zone Alert.

**Front and/or Rear Parking Assist** – During low-speed parking maneuvers, the system provides “distance to closest object” information in the Driver Information Center and a caution symbol on the Rear Vision Camera. When the vehicle should be stopped immediately to avoid a collision, a continuous audible tone sounds or the Safety Alert Seat pulses. See Safety Alert Seat.

- ▶ To turn the system on or off, press the  **Parking Assist** button on the left side of the instrument panel.



See *Driving and Operating in your Owner Manual*.

## AUTOMATIC CLIMATE CONTROLS

- |   |  |                                       |  |   |  |   |
|---|--|---------------------------------------|--|---|--|---|
| AUTO:<br>Driver's Temp.<br>Control/<br>Automatic<br>Operation | A/C/👤<br>Air Conditioning<br>Control/<br>Recirculation<br>Mode | 🌀/🌀<br>Vent<br>Mode/<br>Floor<br>Mode | 🌀🔌<br>Fan<br>Speed<br>Control/<br>On/Off | 🌀/🌀<br>Defog<br>Mode/<br>Bi-level<br>Mode | 🌨️/🌨️<br>Defrost Mode/<br>Rear Window/<br>Outside Mirror<br>Defogger | SYNC:<br>Passenger's<br>Temp. Control/<br>Link setting to<br>driver's setting |
|---|--|---------------------------------------|--|---|--|---|



- |  |                               |   |                        |                           |                           |   |   |
|--|-------------------------------|---|------------------------|---------------------------|---------------------------|---|---|
| 👤/👤<br>Driver's<br>Heated/<br>Cooled Seat<br>Buttons | 🔌<br>Rear<br>Power<br>Control | AUTO:<br>Rear<br>Automatic<br>Operation | 🌀<br>Rear Fan<br>Speed | 👤<br>Rear Air<br>Delivery | 🌡️<br>Rear<br>Temperature | R CTRL 🚫<br>Rear<br>Control<br>Lock-out | 👤/👤<br>Passenger's<br>Heated/<br>Cooled Seat<br>Buttons |
|--|-------------------------------|---|------------------------|---------------------------|---------------------------|---|---|

### Automatic Operation

1. Press **AUTO**.
2. Set the temperature. The system automatically controls the fan speed, air delivery, air conditioning and recirculation to reach the set temperature. Allow time for the system to reach the desired temperature.

If the air delivery mode or fan speed is manually adjusted, automatic operation is turned off.

### Sync Temperature Settings

- ▶ Press **SYNC** to link the passenger's temperature setting to the driver's setting. When the passenger's setting is adjusted, the different passenger's temperature setting is displayed.

### Rear Climate Controls

- ▶ Press the 🔌 **Power** button to turn the rear climate controls on/off.
- ▶ Press the R CTRL 🚫 button to lock out the rear controls. Rear climate control operation is controlled using the front controls.

See *Climate Controls* in your Owner Manual.

### Windshield Wipers

Rotate the band on the lever to activate the wipers.



### Rear Wiper

Slide the switch to activate the rear wipers.

**Fast Wipes**

**Slow Wipes**

**INT Intermittent**

Rotate the band to adjust the delay between wipes. The wipers activate more often as the band is rotated upward.

**AUTO – Rainsense™ On/Off**

Press to turn the Rainsense wipers on/off. Use the **INT** band to adjust the wiper cycling based on the amount of moisture on the windshield. Rotate the band upward to increase the moisture sensitivity setting and the wipers will cycle more frequently.

**OFF**

**Mist Single wipe.**

**Washer Fluid**

Push the paddle forward to spray washer fluid on the windshield.

**OFF – INT Intermittent – ON**

*See Instruments and Controls in your Owner Manual.*

## LIGHTING

### Dome Lamps



**OFF**

Press to turn off the lamps at all times, even when a door is open.


**DOOR**

Press to have the lamps turn on automatically when a door is open.

**ON**

Press to turn on all dome lamps.

### Instrument Panel Lighting

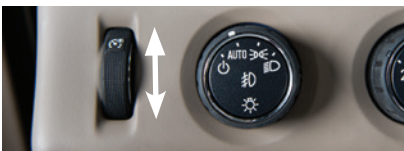




**Instrument Panel Brightness**

Rotate the thumbwheel on the left side of the instrument panel to adjust the instrument panel lighting.

*See Lighting in your Owner Manual.*

## CRUISE CONTROL

### Setting Cruise Control

1. Press the  **On/Off** button. The  **Cruise Control** symbol will illuminate in white on the instrument cluster.
2. When traveling at the desired speed, press the **SET-** button to set the speed. The  symbol will illuminate in green on the instrument cluster.

### Adjusting Cruise Control

#### RES+ Resume/Accelerate

Press to resume a set speed.

When the system is active, press once to increase speed 1 mph; press and hold to continue increasing speed.

#### SET- Set/Coast

When the system is active, press once to decrease speed 1 mph; press and hold to continue decreasing speed.

#### **Cancel**


Press to cancel the cruise control without erasing the set speed from memory.

Pressing the brake pedal also will cancel the cruise control.


The set speed is erased when cruise control or the vehicle ignition is turned off.

### Adaptive Cruise Control<sup>†</sup>

Adaptive Cruise Control enhances traditional cruise control by maintaining a driver-selected following gap between your vehicle and a vehicle detected directly ahead. Once a speed is set, the vehicle will maintain the selected gap distance by braking or accelerating.

When a slower vehicle is detected ahead, the  **Vehicle Ahead** symbol is displayed and the vehicle brakes moderately to maintain the selected following gap. If driver action is required to apply sufficient braking, a visual alert flashes on the windshield and the Safety Alert Seat pulses.



### Selecting the Following Gap

- ▶ Press the  **Collision Alert** button on the left side of the steering wheel to set a following gap of Far, Medium or Near.

*See Driving and Operating in your Owner Manual.*

## POWER ASSIST STEPS<sup>†</sup>

The power assist steps lower automatically when a door is opened and retract after the doors are closed.



- ▶ With the ignition on and the vehicle in Park or with the vehicle running and in Neutral, press the  **Power Assist Steps** button on the left side of the instrument panel to deploy the steps for cleaning and car washes. Press the button again to retract the steps.
- ▶ With the ignition on and the vehicle in Park or Neutral, press and hold the  button for 4 seconds to lock/disable the steps or to unlock/enable the steps.



## TRACTION CONTROL AND STABILITRAK SYSTEMS

The traction control system limits wheelspin and the StabiliTrak® stability control system assists with directional control of the vehicle in difficult driving conditions. Both systems turn on automatically every time the vehicle is started.

**Turn off traction control if the vehicle is stuck and rocking the vehicle is required.**

- ▶ Press the  **Traction Control/StabiliTrak Off** button on the left side of the instrument panel to turn traction control off or back on. The  Traction Control Off light will illuminate on the instrument cluster when the system is off.

*See Driving and Operating in your Owner Manual.*

## INTEGRATED TRAILER BRAKE CONTROL (ITBC)

The ITBC system can be used to adjust the amount of power output, or Trailer Gain, available to the trailer brakes. The control panel is located on the left side of the instrument panel. ITBC information is displayed on the Driver Information Center.

- ▶ Adjust the Trailer Gain by pressing the +/- adjustment buttons on the control panel.
- ▶ Slide the lever to the left on the control panel to manually apply the trailer brakes.



*See Driving and Operating in your Owner Manual.*


## TOW/HAUL MODE

The Tow/Haul Mode adjusts the transmission shifts to reduce shift cycling, such as when towing or hauling heavy loads or driving on steep grades.

- ▶ Press the  **Tow/Haul Mode** button on the end of the shift lever to turn the system on or off.

*See Driving and Operating in your Owner Manual.*

## TIRE PRESSURE MONITOR

The  **Low Tire Pressure** warning light on the instrument cluster illuminates when one or more of the vehicle's tires is significantly underinflated. Fill the tires to the proper tire pressures. The proper tire pressures for the vehicle are listed on the Tire and Loading Information label, located below the driver's door latch. **Current tire pressures can be viewed in the Driver Information Center.**

Tire pressure is affected by cold weather and distance driven. If the low tire pressure warning light illuminates when the vehicle is first started in cooler temperatures and then turns off as the vehicle is driven, check for the proper tire pressures.

*Refer to your Owner Manual for additional information about normal monthly tire maintenance.*

*See Vehicle Care in your Owner Manual.*

## ROADSIDE ASSISTANCE

**1-800-GMC-8782**  
**(1-800-462-8782)**

**TTY Users: 1-888-889-2438**

As the owner of a new GMC, you are automatically enrolled in the GMC Roadside Assistance program for up to 5 years/100,000 miles, whichever occurs first, at no expense to you. This value-added service is intended to provide you with peace of mind as you drive across town or travel the open road.

GMC's Roadside Assistance toll-free number is staffed by a team of trained advisors who are available 24 hours a day, 365 days a year, to contact a service provider for light services (fuel delivery, jump-starts, flat tire and lock-outs) or make arrangements to tow your vehicle to the nearest GMC dealer for any repairs.

### **Roadside Assistance and OnStar®**

If you require roadside service and have a current OnStar subscription, press the OnStar button and the vehicle will send your current GPS location to an OnStar Advisor who will speak to you, assess your problem, contact Roadside Assistance and relay your exact location so you will get the help you need.

## MYGMC AND ONSTAR® MOBILE APPS



The myGMC and OnStar RemoteLink mobile apps connect owners to a variety of vehicle information and services, such as a searchable Owner Manual, real-time fuel information and Roadside Assistance, as well as enabling users to perform Remote Keyless Entry transmitter commands, including locking and unlocking the doors and starting the vehicle.



An active OnStar account is required to use the OnStar mobile app. Download the mobile apps from your mobile device's app store. To learn more about OnStar services, press the OnStar button, refer to your Owner Manual, call 1-888-466-7827 or visit **OnStar.com**.

## GMC OWNER CENTER

The GMC Owner Center, a complimentary service for GMC owners, is a one-stop resource designed to enhance your GMC ownership experience. Exclusive member benefits include online service reminders, vehicle maintenance tips, online owner manual, special privileges and more. Sign up today at **my.gmc.com**.

### **We recommend always using ACDelco or genuine GM service parts.**

Certain restrictions, precautions and safety procedures apply to your vehicle. Please read your Owner Manual for complete instructions. All information contained herein is based on the latest information available at the time of printing and is subject to change without notice. Copyright 2014 by General Motors. All rights reserved.



23458250 A