

2 Press [Select].

The selection menu will appear.



3 Press or to highlight the desired selection, then press [Select].

To turn on the greeting message function, select "Enable". To turn it off, select "Disable". To personalize the greeting message, select "Edit Message".

When "Enable" or "Disable" is selected, "Greeting Message has been Enabled" or "Greeting Message has been Disabled" will appear.

When "Edit Message" is selected, the current message will appear.



4 Edit the message.

Note

If no characters are on the display, "OK" will not appear.


5 After editing the message, press [OK].

"New Greeting Message Stored" will appear.

Answering the Phone by Pressing Any Key

You can answer a call by pressing any key except , , and [Busy].


1 Press or from "Change Phone Settings" (page 54) until "Any Key Answer" appears with the current setting.

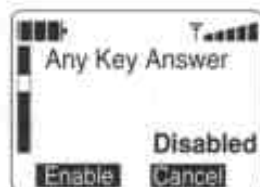

2 To turn Any Key Answer on or off, press [Enable] or [Disable].



"Any Key Answer has been Enabled" or "Any Key Answer has been Disabled" will appear.


Note

If keypad lock is enabled, you can only answer a call by pressing  or [Accept].

Selecting a Menu Language

You can select a language manually from the menu. If you select "Automatic", the language will depend on the SIM card.

- 1 Press  or  from "Change Phone Settings" (page 54) until "Menu Language" appears with the current setting.

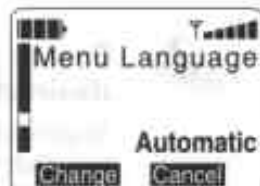

- 2 Press [Change].

- 3 Press  or  to display the desired language.



- 4 When the desired language is displayed, press [Select].

"XXXX Selected Manually" or "XXXX Selected Automatically" will appear (XXXX represents a language name).

Performing the following key sequences from Idle mode will also allow you to change languages:



English: *#0000#	German: *#0001#
French: *#0002#	Italian: *#0003#
Greek: *#0004#	Turkish: *#0005#
Spanish: *#0006#	Dutch: *#0007#
Portuguese: *#0008#	Traditional Chinese: *#0010#
Simplified Chinese: *#0011	


Note

Some languages may not be available on your phone.

Setting the Character Mode

Character Mode allows you to select the type of characters you can enter. If you select "Automatic", the characters depend on the selected language. If you select "Extended", you can enter all the characters this phone offers (page 85).

- 1 Press  or  from "Change Phone Settings" (page 54) until "Character Mode" appears with the current setting.

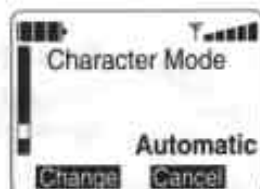



- 2 Press [Change].

"Character Mode has been set to Extended" or "Character Mode has been set to Automatic" will appear.

Setting the Time and Date

The time and date are displayed on the Idle screen.

- 1 Press  or  from "Change Phone Settings" (page 54) until "Time & Date" appears with the current settings.



- 2 Press [Change].

"Set Time" will appear.



- 3 Enter the time.

Note

The hour value must be between 00 and 23, and the minute value between 00 and 59.

- 4 Press [OK].

"Set Date" will appear.



5 Enter the day, month, and year.

Note

The day must be between 1 and 31 (depending on the month and year), the month must be between 1 and 12, and the year must be between 99 and 14.

6 Press [OK].

"Time and Date have been set to nn:nn XXXX" will appear (nn:nn represents the time, and XXXX represents the date).

Changing the Call Waiting Settings

Call Waiting informs you of an incoming call while you are already engaged in a call.

Note


- This feature is dependent on your subscription as well as your network operator.
- This feature may not work when you are outside your network's service area.

1 Press or from "Change Phone Settings" (page 54) until "Change Call Waiting Settings" appears.



2 Press [Select].

The function selection menu will appear.

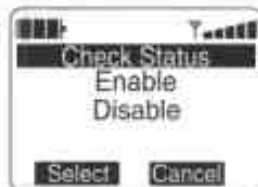

● Check Status

You can check the current setting of the Call Waiting feature.


Press or to highlight "Check Status", then press [Select].

"Call Waiting has been Enabled" or "Call Waiting has been Disabled" will appear.

● Enable/ Disable

Turn Call Waiting off if you do not want to be disturbed by another call while talking on the phone.

Turn Call Waiting on if you want to be informed of another call while talking on the phone.

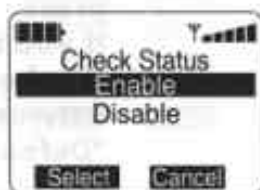

1 To turn Call Waiting on, press or to highlight "Enable". To turn Call Waiting off, highlight "Disable".

2 Press [Select].

"Call Waiting has been Enabled" or "Call Waiting has been Disabled" will appear.

Restricting the Disclosing of Your Phone Number

Note


This feature is dependent on your subscription as well as your network operator.

If you do not want to reveal your phone number to the called party, you can use this feature to prevent the disclosing of your number with the call.

1 Press or from "Change Phone Settings" (page 54) until "Send My Number" appears with the current setting.



2 Press [Change].
The selection menu will appear.

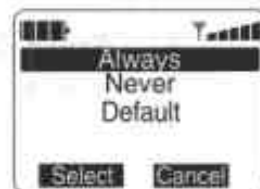

- 3** If you want to reveal your number, press **[Up]** or **[Down]** to highlight "Always". If you do not want to reveal your number, highlight "Never". To use the network default setting, highlight "Default".

The default setting is network dependent.

- 4** Press **[Select]**.

"Send My Number Always", "Send My Number Never", or "Send My Number Default" will appear.

Changing Your Answering Machine Number

The answering service provided by the network works like a home answering machine; it allows callers to leave a message when you cannot or do not want to answer a call.

Your answering service phone number is stored on the SIM card. If the network changes the number, you can change the number in the phone memory.

Note

- This feature is dependent on your subscription as well as your network operator.
- Not all SIM cards are provided with the answering service phone number stored.

- 1** Press **[Up]** or **[Down]** from "Change Phone Settings" (page 54) until "Answering Machine Number" appears with the current number.



- 2** Press **[Select]**.
"Enter Number:" will appear.



- 3** Edit the number then press **[OK]**.
"New Call Answering Machine Number Stored" will appear.

Setting Cell Information


This function allows you to monitor text messages which are broadcasted by the network.

Note

This function is dependent on your subscription as well as your network operator.

- 1 Press **▲** or **▼** from "Change Phone Settings" (page 54) until "Cell Info" appears with the current setting.
- 2 To turn Cell Info on or off, press [Enable] or [Disable].

"Cell Info has been Enabled" or "Cell Info has been Disabled" will appear.

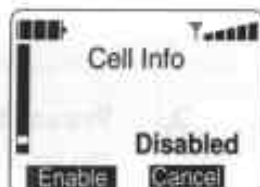

Selecting a Compatible Network

When you switch the phone on, it normally selects your home network. However, if your home network is not available (while using the phone overseas, for example), your phone will find a compatible network that you are permitted to roam in. The SIM card contains a list of networks that the phone can connect to. You can configure your phone to select a network automatically (networks in the list with an acceptable signal strength) or manually. You can also add and remove networks from the provided list.

- 1 Press **▲** or **▼** from "Change Phone Settings" (page 54) until "Network Selection" appears with the current setting.
- 2 Press [Change].
The network selection menu will appear.



- 3 Press **▲** or **▼** to highlight "Automatic", "Manual", or "Edit List".





Phone Settings


● Automatic/Manual/Edit List

- Automatic allows you to automatically search for a network.
- Manual allows you to select a network manually.
- You can view the network list, remove a network from the list, or add a network to the list. When adding a network to the list, you must enter the mobile country code (MCC) and the mobile network code (MNC). These codes are used by the network for identification.


View the Current Phone Settings



You can view the current phone settings.

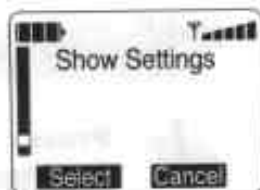- 1 Press  or  from "Change Phone Settings" (page 54) until "Show Settings" appears.

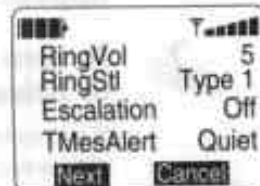

- 2 Press [Select].
The list of current phone settings will appear.



- 3 To view the following pages, press [Next] or . To view the previous page, press .

Reset the Phone Settings to Default

Note

Reset does not affect any network features.

- 1 Press  or  from "Change Phone Settings" (page 54) until "Reset Phone Settings to Factory Default" appears.



- 2 Press [Select].
"Enter Handset Code" will appear.

Note

"OK" will appear after you enter 4 digits.



- 3 Enter the handset code, then press [OK].
If Call Restrictions have been activated, you also must enter your PIN2 code.
- 4 Turn the handphone power off and then on again to implement the reset.

Security Features

Security features protect your phone from unauthorized use and misuse, and limits the type of calls that can be made from your phone according to your needs.

This phone provides the following security features:

- Locking the keypad so that keys cannot be pressed accidentally.
- Locking your handphone so that it cannot be used unless the PIN is entered at power-up.
- Locking the SIM to the handphone so that it cannot be used unless the Handset Code is entered when a new SIM is installed.
- Barring outgoing and incoming voice calls, data calls, and fax calls.
- Restricting outgoing calls except from the Fixed Number Dialling list.
- Restricting outgoing calls except from the Phonebook.
- Restricting outgoing calls except from the Speed Dialling list.

Locking the Handphone

Your phone has a single 4-digit security code called the Handset code. The SIM card has two security codes called PIN and PIN2. The phone can be configured to request input of PIN and/or the Handset code when the phone is switched on. The Handset code is only requested the first time a new SIM is installed.

● Cancelling a Blocked Code

If you enter an incorrect PIN 3 times in succession, "PIN blocked" will appear. To cancel the block:

- 1 Enter the PUK at the "Enter PUK" prompt, then press [OK].**

Note

"OK" will appear after you enter a digit.

"Enter New PIN" will appear.

- 2 Enter a new PIN, then press [OK].**

Note

The PIN can be between 4 and 8 digits.

"Re-enter New PIN" will appear.

- 3 Enter the PIN again, then press [OK].**

Note

"OK" will appear after you enter 4 digits.



"PIN Changed" will appear.

If you enter an incorrect PUK more than 10 times, "PUK blocked Contact Service Provider" will appear. The SIM card is now blocked. Please contact your service provider.



● Locking/ Unlocking the Keypad

When keypad lock is "Enabled",  will appear and no keys can be used.


Note

Nothing will happen when you press a key. However, you can make calls to emergency numbers and you can answer calls by pressing . During a call, the keypad and phone operate normally. To end the call, press . When the call is ended, the keypad will lock again.

To lock the keypad:

- 1 Press [Menu].
- 2 Press  or  until "Change Security Settings" appears.
- 3 Press [Select].

"Keypad Lock Disabled" will appear.

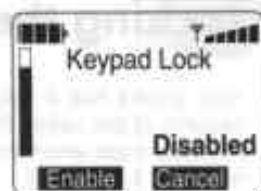

- 4 Press [Enable] to lock the keypad.

"Keypad locked. Press Up key and then press * key to unlock" will appear.

To unlock the keypad:

Press , then .

The keypad will automatically unlock when you connect it to a mini car kit (ECK15) or desktop charger (EDC14). When you remove the phone from the car kit or desktop charger, the keypad will automatically lock again.

● Keypad Lock/Unlock Shortcut

- 1 Press , then .

"Keypad locked. Press Up key and then press * key to unlock" and  will appear.

- 2 Repeat step 1 to unlock the keypad.



"Keypad Unlocked" will appear and  disappears.

● Turning the PIN Check On/Off

If this feature is "Enabled", you must enter your PIN each time you switch the phone on.

- 1 Press [Menu].

- 2 Press  or  until "Change Security Settings" appears.

- 3** Press [Select] then press  or  until "PIN Entry During Power Up" appears with the current setting.



- 4** Press [Disable] or [Enable] to change the status.

"Enter PIN" will appear.

- 5** Enter PIN.

Note

"OK" will appear after you enter 4 digits.

- 6** Press [OK].

"PIN Entry has been disabled" or "PIN Entry has been enabled" will appear.

● Changing the Security Codes

Follow the instructions below to change PIN, PIN2, and/or the Handset code.

- 1** Press [Menu].



- 2** Press  or  until "Change Security Settings" appears.

- 3** Press [Select], then press  or  until "Change Security Codes" appears.

- 4a** To change PIN:
Press [Select].

"Change PIN" appears only if "PIN Entry During Power Up" is enabled.

- 4b** To change PIN2 or the Handset code:

Press [Select], then press  or  until "Change PIN2" or "Change Handset Code" appears.

- 5** Press [Select].

"Enter PIN", "Enter PIN2", or "Enter Handset Code" will appear.

- 6** Enter PIN, PIN2, or the Handset code.

Note

"OK" will appear after you enter 4 digits.

- 7** Press [OK].

"Enter New PIN", "Enter New PIN2", or "Enter New Handset Code" will appear.




8 Enter a new PIN, PIN2, or Handset code.

Note

"OK" will appear after you enter 4 digits.

9 Press [OK].

"Re-enter New PIN", "Re-enter New PIN2", or "Re-enter New Handset Code" will appear.

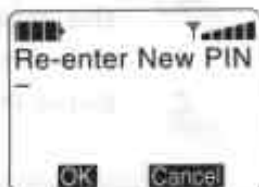

10 Enter PIN, PIN2, or the Handset code again.

Note

"OK" will appear after you enter 4 digits.

11 Press [OK].



"PIN Changed", "PIN2 Changed", or "Handset Code Changed" will appear.

● Locking the SIM to the Handphone

When "Lock SIM to Phone" is enabled, you must enter the Handset code each time a new SIM is installed (including the original SIM).

1 Press [Menu].

2 Press  or  until "Change Security Settings" appears.

3 Press [Select], then press  or  until "Lock SIM to Phone" appears with the current status.



4 Press [Enable] or [Disable] to change the status.

"Enter Handset Code" will appear.

5 Enter the Handset code.

Note

"OK" will appear after you enter 4 digits.

6 Press [OK].

"SIM lock to phone has been disabled" or "SIM lock to phone has been enabled" will appear.

Call Barring

Note

- These features are dependent on your subscription and your network operator.
- These features may not work when you are outside your network's service area.

Bar Outgoing Voice Calls, Incoming Voice Calls, Data Calls, and Fax Calls

You can set the barring function for outgoing and incoming voice calls, data calls, and fax calls according to your needs.


The table below summarizes the functions available.

Call Type	Options
Outgoing Voice Calls	• Get Status
	• Allow All Outgoing Voice Calls
	• Bar International Outgoing Voice Calls Except Home
	• Bar International Outgoing Voice Calls
	• Bar All Outgoing Voice Calls
Incoming Voice Calls	• Get Status
	• Allow All Incoming Voice Calls
	• Bar Incoming Voice Calls When Roaming
	• Bar All Incoming Voice Calls
All Voice Calls	• Allow All Voice Calls
Data Calls	• Get Status
	• Allow All Data Calls
	• Bar All Outgoing Data Calls
	• Bar All Incoming Data Calls
Fax Calls	• Get Status
	• Allow All Fax Calls
	• Bar All Outgoing Fax Calls
	• Bar All Incoming Fax Calls

1 Press [Menu].




2 Press  or  until "Change Security Settings" appears.

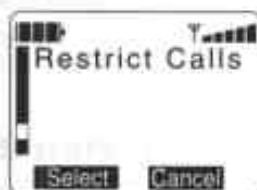3 Press [Select], then press  or  until "Restrict Calls" appears.



4**Press [Select].**

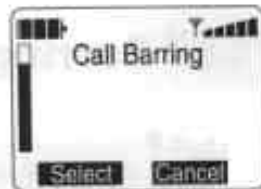
"Call Barring" will appear.

**5****Press [Select], then press  or  until the desired call barring function appears.**

- To change outgoing voice calls, select "Bar Outgoing Voice Calls".
- To change incoming voice calls, select "Bar Incoming Voice Calls".
- To allow all voice calls, select "Allow All Voice Calls".
- To change data calls, select "Bar Data Calls".
- To change fax calls, select "Bar Fax Calls".

To check the currently selected barring function, see "Checking the current status" (below).


To change the selected barring function, see "Setting the barring function" (below).

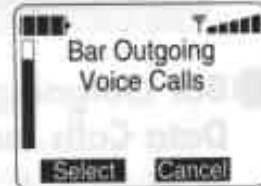**Checking the current status:****1 Select the desired call barring function.**


For example, select "Bar Outgoing Voice Calls".

2 Press [Select].

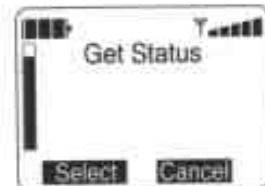

"Get Status" will appear.

**3 Press [Select].**

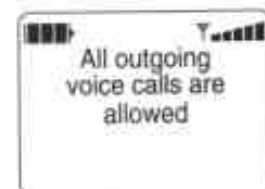
The current setting of the barring restrictions will appear.

**Setting the barring function:****1 Select the desired call barring function.**

For example, select "Bar Outgoing Voice Calls".

2 Press [Select], then press  or  until the desired option appears.

For example, if you want to allow all outgoing voice calls, select "Allow All Outgoing Voice Calls".

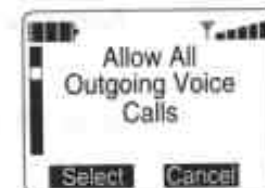**3 Press [Select].**

"Enter Barring Password" will appear.


4 Enter the barring password.

Note

"OK" will appear after you enter 4 digits.

5 Press [OK].

"Please wait" will appear. If the correct password is entered, the new setting is confirmed.

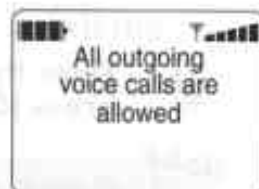

● Changing the Barring Password

Use the following procedure to change the barring password.

1 Press [Menu].

2 Press or until "Change Security Settings" appears.

3 Press [Select], then press or until "Restrict Calls" appears.

4 Press [Select]. "Call Barring" will appear.

5 Press [Select], then press or until "Change Barring Password" appears.



6 Press [Select].

If the password is not blocked, "Enter Barring Password" will appear.

Note

"OK" will appear after you enter 4 digits.



7 Enter the barring password, then press [OK].

Note

"OK" will appear after you enter 4 digits.

"Enter New Barring Password" will appear.



8 Enter a new 4-digit barring password, then press [OK].

Note

"OK" will appear after you enter 4 digits.

"Re-Enter New Barring Password" will appear.



9 Enter the barring password again, then press [OK].

Note

"OK" will appear after you enter 4 digits.

"Please Wait" will appear. If the new barring password is accepted, "Barring Password Changed" will appear. If you entered the barring password incorrectly, "Incorrect Barring Password" will appear.

Fixed Number Dialling (FND)


Note

The number of entries in the Fixed Number Dialling list depends on the capacity of the SIM card.

● Adding, Editing, and Erasing an Entry

You can add a new entry to the Fixed Number Dialling list or edit and erase existing entries. You can use wild cards ("?") when entering or editing FND numbers. Wild cards allow you to dial several different phone numbers that contain most of the same numbers. For example, you can enter an area code ("1 2 3 4") and the first few digits of the phone number ("5 6 7"), then enter wild cards for the remaining digits ("? ? ?"). Doing this, you would be able to call any number beginning with "1 2 3 4 5 6 7". The numbers would range from "1 2 3 4 5 6 7 0 0 0" to "1 2 3 4 5 6 7 9 9 9".

Note

- To insert a wild card ("?"), press and hold  for approximately 1 second.
- When this feature is enabled, you cannot modify the list. To add a new entry or modify the list, you must first disable this feature.

1 Press [Menu].

2 Press or until "Change Security Settings" appears.

3 Press [Select], then press or until "Restrict Calls" appears.

4 Press [Select], then press or until "Only outgoing calls from Fixed Number Dialling list" appears.



5 Press [Select].

"Fixed Number Dialling" will appear with the current status.

6 If fixed number dialling is enabled, press [Disable]. If fixed number dialling is disabled, press [Options].

"Enter PIN2" will appear.

7 Enter PIN2.

Note

"OK" will appear after you enter 4 digits.

8 Press [OK].

If fixed number dialling was enabled in step 6, "Fixed Number Dialling List" will appear. If fixed number dialling was disabled in step 6, "Fixed Number Dialling" appears with the current status. Press [Options] to enter the "Fixed Number Dialling List" display.

Perform the required function:

- To add a new entry to the Fixed Number Dialling list, see "Adding a New Entry" (below).
- To edit or erase entries in the Fixed Number Dialling list, see "Editing and Erasing an Entry" (page 78).
- To erase all entries in the Fixed Number Dialling list, see "Erasing All Entries" (page 79).

Adding a New Entry

1 Select "Fixed Number Dialling List".

See steps 1 to 8 of "Adding, Editing, and Erasing an Entry" (page 76).

2 Press [Select].

The Fixed Number Dialling list will appear.

3 Press or to highlight an empty location.

Note

If an empty location is not available, you can edit or erase an existing number in the list.

4a Manually entering a number:


1 Press [Select].

"Add New Entry" will appear.



2 Press [Select].

"Enter Name:" will appear.

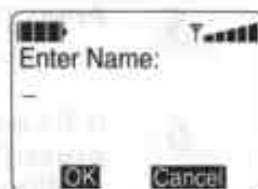

3 Enter a name of the new entry, then press [OK].

"Enter Number:" will appear.

4 Enter the phone number, then press [OK].



Note

"OK" will appear after you enter a digit.



"Entry Saved" will appear.

4b

Using the phonebook:

1 Press [Select], then press  or  until "Add New Entry From Phonebook" appears.

2 Press [Select].

"Find Name" will appear. If you want to use "Character Search", press  or  until "Character Search" appears. (See "Dialling a Phone Number by Finding a Name" or "Dialling a Phone Number by Character Search" on pages 17 and 18).

Editing and Erasing an Entry:

1

Select "Fixed Number Dialling List".

See steps 1 to 8 of "Adding, Editing, and Erasing an Entry" (page 76).

2

Press [Select].

The Fixed Number Dialling list will appear.



3

Press  or  to highlight the desired entry.

4


Press [Select].

The name you selected will appear with the phone number.



5 Press [Options].

The selection menu will appear.

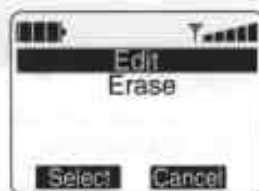

6 Press or to highlight "Edit" or "Erase".

7a Edit:

1 Press [Select].

The name and phone number will reappear.

2 Edit the name and number.

3 Press [Save] to save the new data.

"Entry Saved" will appear.

7b Erase:

1 Press [Select].

The name and phone number will reappear.

2 Press [Erase].

"Entry Erased" will appear.

Erasing All Entries:

1 Select "Fixed Number Dialling List".

See steps 1 to 8 of "Adding, Editing, and Erasing an Entry" (page 76).

2 Press or until "Erase all the entries in the Fixed dial list" appears.

3 Press [OK] to erase all the entries.

"Fixed Number Dialling list has been erased" will appear.

Turning Fixed Number Dialling On

1 Select "Fixed Number Dialling List".

See steps 1 to 8 of "Adding, Editing, and Erasing an Entry" (page 76).

2 Press or until "Fixed Number Dialling Disabled" appears.

3 Press [Enable].

"Only outgoing calls from fixed number dialling list are allowed" will appear.

Outgoing Call Restrictions

You can set outgoing calls to be made only to numbers in the Phonebook or in the Speed Dialling list. The numbers in these lists cannot be modified unless you first remove this restriction.



1 Press [Menu].

2 Press  or  until "Change Security Settings" appears.

3 Press [Select], then press  or  until "Restrict Calls" appears.

4 Press [Select].

5a To change the current status of the outgoing calls from the Phonebook restriction:

1 Press  or  until "Only outgoing calls from Phonebook" appears with the current status.



2 Press [Enable] or [Disable] to change the status.

"Enter PIN2" will appear.



3 Enter PIN2, then press [OK].

Note

"OK" will appear after you enter 4 digits.

"Only outgoing calls from phonebook are allowed" or "Restriction removed" will appear.

5b To change the current status of the outgoing calls from Speed Dial list restriction:

1 Press  or  until "Only outgoing calls from Speed Dial list" appears with the current status.

2 Press [Enable] or [Disable] to change the status.

"Enter PIN2" will appear.



3 Enter PIN2, then press [OK].

Note

"OK" will appear after you enter 4 digits.

"Only outgoing calls from Speed Dial list are allowed" or "Restriction removed" will appear.

Troubleshooting

If the phone is not working properly, check the following list of problems and solutions. If you are still unable to resolve the problem, contact your dealer or service provider.

Problem	Solution
Cannot make or receive calls.	<ul style="list-style-type: none">• Make sure the phone is turned on.• Make sure the battery is charged.• Make sure the Signal Strength icon is visible on the display.• Make sure calls have not been restricted by security features such as Call Barring and Fixed Number Dialling.• Make sure your calls have not been redirected.• Make sure the proper SIM card is inserted correctly.
The battery icon does not turn on when the battery is being recharged.	<ul style="list-style-type: none">• Make sure the travel AC charger is properly connected to the phone and AC outlet.• Make sure the battery and charger contacts are clean.
The audio sounds weak.	<ul style="list-style-type: none">• Make sure the volume is not set too low.
The phone does not ring.	<ul style="list-style-type: none">• Make sure the silent or vibrator settings are not selected.• Move the phone away from external noise sources.• Make sure you have not diverted incoming calls.
The LCD is not clear.	<ul style="list-style-type: none">• Make sure the contrast setting is not too low.
The keypad doesn't function.	<ul style="list-style-type: none">• Make sure the keypad is not locked.• Reset the handphone by removing and reinstalling the battery pack. If possible, first turn off the handphone power.


Care and Maintenance

Your handphone is a product of superior design and craftsmanship and should be treated with care. The following suggestions will help you fulfill the warranty obligations and enjoy this product for many years.

- Keep the phone and its accessories out of the reach of small children.
- The phone is not water resistant; keep it dry. If the phone gets wet, wipe it off immediately.
- Do not use or store the phone in dusty or dirty areas; parts can be damaged.
- Do not use or store the phone in hot environments; high temperatures can shorten the life of electronic parts, damage the battery, and warp or melt certain plastics.
- Do not use or store the phone in cold environments; low temperatures can shorten the life of electronic parts, and damage the battery.
- Do not use the phone in cool environments when the phone gets hot; condensation may occur and internal electronics can be damaged.
- Do not open the phone; you may damage it.
- Do not drop or shake the phone; rough handling can damage internal circuitry.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean the phone.
- Use only accessories recommended by **KENWOOD**. Using other accessories may damage the phone.

Appendix A: Menu Directory

Main Menu

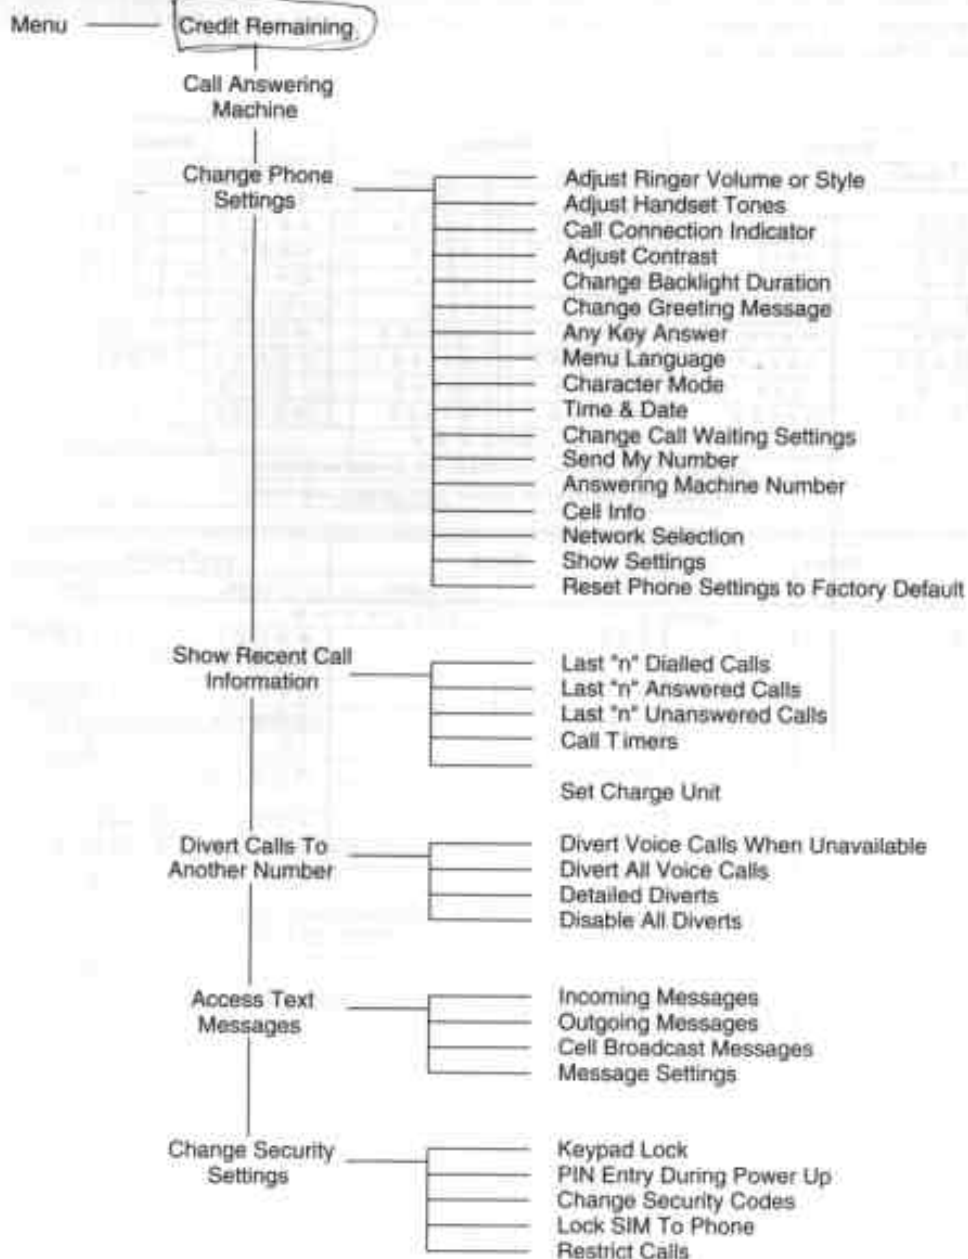

Phonebook



Appendix B: Character Sets

When the character set is set to "Automatic", the characters assigned to any key are appropriate to the current language. You may select an "Extended" character set to use any of the GSM characters, irrespective of the current language.

Key	English		German		French	
	Upper	Lower	Upper	Lower	Upper	Lower
1	space 1 7 - ! , . : ; ' " { } < > = & /					
2	A B C 2	a b c 2	Ä Ä B C 2	ä ä b c 2	A B C Ç 2	a b b c 2
3	D E F 3	d e f 3	D E F 3	d e f 3	D E É F 3	d e é f 3
4	G H I 4	g h i 4	G H I 4	g h i 4	G H I 4	g h i 4
5	J K L 5	j k l 5	J K L 5	j k l 5	J K L 5	j k l 5
6	M N O 6	m n o 6	M N O Ö 6	m n o ö 6	M N O 6	m n o 6
7	P Q R S 7	p q r s 7	P Q R S 7	p q r s 7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8	T U Ö V 8	t u ö v 8	T U Ü V 8	t u ü v 8
9	W X Y Z 9	w x y z 9	W X Y Z 9	w x y z 9	W X Y Z 9	w x y z 9
0	0 + @ % £ \$ ¥					
*	* (press and release) or cursor left (press and hold)					
#	# (press and release) or cursor right (press and hold)					

Key	Italian		Greek		Turkish	
	Upper	Lower	Upper	Lower	Upper	Lower
1	space 1 7 - ! , . : ; ' " { } < > = & /					
2	A B C 2	a b c 2 à	A B Γ 2		A B C Ç 2	a b c ç 2
3	D E F 3	d e f 3 è	Δ E Z 3		D E F 3	d e f 3
4	G H I 4	g h i 4 ì	H Θ I 4		G Ğ H İ I 4	g ğ h i İ 4
5	J K L 5	j k l 5	K Λ M 5		J K L 5	j k l 5
6	M N O 6	m n o 6 ó	N Ξ O 6		M N Ö Ö 6	m n ö ö 6
7	P Q R S 7	p q r s 7	Π Ρ Σ 7		P R S Ş 7	p r s ş 7
8	T U V 8	t u v 8 ù	T Υ Φ 8		T U Ü V 8	t u ü v 8
9	W X Y Z 9	w x y z 9	X Ψ Ω 9		Y Z 9	y z 9
0	0 + @ % £ \$ ¥					
*	* (press and release) or cursor left (press and hold)					
#	# (press and release) or cursor right (press and hold)					

Appendix C: Optional Accessories

Key	Spanish		Dutch		Portuguese	
	Upper	Lower	Upper	Lower	Upper	Lower
1	space 1 2 - ! , . : ; ' " () < > = & /					
2	A B C 2	a á b c 2	A B C 2	a á b c c 2	A B C 2	a á á b c c 2
3	D E E F 3	d e é f 3	D E F 3	d e e e f 3	D E F 3	d e e f 3
4	G H I 4	g h i 4	G H I 4	g h i i 4	G H I 4	g h i 4
5	J K L 5	j k l 5	J K L 5	j k l 5	J K L 5	j k l 5
6	M N N O 6	m n ñ o 6	M N O 6	m n ñ o o 6	M N N O 6	m n ñ o 6
7	P Q R S 7	p q r s 7	P Q R S 7	p q r s 7	P Q R S 7	p q r s 7
8	T U V 8	t u v 8	T U V 8	t u ú v 8	T U V 8	t u ú v 8
9	W X Y Z 9	w x y z 9	W X Y Z 9	w x y z 9	W X Y Z 9	w x y z 9
0	0 + @ % € \$ ¥					
⌫	⌫ (press and release) or cursor left (press and hold)					
⌵	⌵ (press and release) or cursor right (press and hold)					

Key	Extended	
	Upper	Lower
1	space 1 2 - ! , . : ; ' " () < > = & / 0 1 2 3 4 5 6 7 8 9	
2	A A A Æ B C C	a á á ð b c c
3	D E E F 3 4 5	d e é f 3 4 5
4	G H I 4	g h i i 4
5	J K L A 5	j k l A 5
6	M N N O O 6 8	m n ñ o o 6 8
7	P Q R S B 2 7	p q r s 2 7
8	T U Ú V 8	t u ú v 8
9	W X Y Z 9	w x y z 9
0	0 + @ % € \$ ¥	
⌫	⌫ (press and release) or cursor left (press and hold)	
⌵	⌵ (press and release) or cursor right (press and hold)	

Appendix C: Optional Accessories

Desktop Charger (EDC14)

Lithium Ion battery charger. This charger can be used to charge the battery when attached to the handphone as well as a spare EEB18 Li-Ion battery.

Cigar Lighter Cable (ECC11)

Lithium Ion battery vehicle charger. This charger will fully charge the EEB18 Li-Ion battery on the handphone in approximately 3 hours.

Mini Car Kit (ECK15)

Handphone holder and ECC11 Cigar Lighter Cable combination kit.

Data Cable (EIC12)

Data cable for connecting the handphone to a personal computer. Connect this cable directly to the serial port of a PC without using the PCMCIA card.

Desktop Stand (EDS12)

Use this stand with the AC adaptor

Soft Case (ELC11)

Case for protecting your phone.

Hands Free Kit (EHF11)

Simple hands-free operation kit which allows you to make and receive calls without having to hold the phone.





 










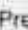






External Antenna Cable (EEX11)

Conversion cable for connecting the phone to an external antenna.

Travel AC Adaptor (EEC11)

Lightweight adapter that can be used with a mains AC ranging between 100 V AC and 250 V AC.

Appendix D: Quick Reference

To	Do this
Turn the phone on/off	Press and hold the Power key for approximately 2 seconds.
Make a call - Full number dialling	1. Enter the phone number. 2. Press  .
Make a call - Abbreviated number dialling	1. Enter the location number. 2. Press  3. Press  .
Make a call - Speed dialling	1. Press an assigned key (1 to 9). 2. Press  .
Make a call - Dialling by Name Search	1. Press [Phonebook] . 2. Press  or  until "Find Name" appears. 3. Press [Select] . 4. Either enter the first character of the target name or press  or  to search the names in the phonebook. 5. Highlight the target name, then press [Select] . 6. Press [Options] . 7. Highlight "Dial". 8. Press [Select] .
End a call	Press  .
Redial the last number called	Press  twice.
Display the recent dialled numbers list	Press  .
Answer a call	The Incoming Call LED flashes. Press  .
Reject a call	The Incoming Call LED flashes. Press  or [Busy] .
Lock/ unlock the keypad	1. Press  2. Press  .
Adjust the speaker volume during a call	Press  to increase the volume. Press  to decrease the volume.
Clear the display	Press and hold  for approximately 1 second.
Vibration setting shortcut	1. Press  2. Press  .
Enter the Guided Tour	1. Press  2. Press  .