

All information contained in this Lincoln Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information.

For detailed operating and safety information, please see your Owner's Guide.

June 2007
First Printing
Quick Reference Guide
Litho in U.S.A.

Lincoln Mark LT



LINCOLN
Reach Higher

lincoln.com



8L3J 19G217 CA

ESSENTIAL INFORMATION

FUEL: Your vehicle is designed to use "Regular" unleaded gasoline with a pump (R+M)/2 octane rating of 87. Note: When "Low Fuel Level" appears in the message center display, you must push the RESET button to clear this warning. Until fuel is added, "Low Fuel Level" will reappear at 10 minute intervals. **TIRE PRESSURE:** Your tire pressure is properly set at the dealership to the recommended specifications found on the Tire Label or Safety Compliance Certification Label located inside on the edge of the driver's door pillar. Please check your tire pressure during routine maintenance and seasonal changes. Please see your Owner's Guide for important safety information. **TIRE PRESSURE MONITORING SYSTEM:** This system monitors tire pressure on all road tires and provides the driver with a yellow warning light when air needs to be added. Message center equipped vehicles provide additional warning messages. The TPMS warning light will reset itself (turn off) after the tires are set to specification and the vehicle is driven above 20 mph (32 km/h) for at least 2 minutes. Please Note: Outside temperature affects tire pressure. Please refer to your Owner's Guide for important safety information. **FUSES:** If electrical components in the vehicle are not working, a fuse may have blown. For more information about changing a fuse, please see your Owner's Guide. **FUEL PUMP SHUT-OFF SWITCH:** After a collision, if the engine cranks but does not start, the fuel pump shut-off switch may have to be reset. The switch is located in the front passenger's footwell, behind the kick panel access cover, to the left of the fuse box. For complete details on resetting the switch, please see your Owner's Guide. **CHANGING THE TIRES:** For information on changing the tires, please see your Owner's Guide. **LOCATION OF THE SPARE TIRE AND TOOLS:** The spare tire is located under the vehicle, just forward of the rear bumper. The jack, jack handle and wheel nut wrench are located under the rear seat on the passenger side of the vehicle. **ROADSIDE EMERGENCIES:** To fully assist you if you should have a vehicle concern, Ford offers a complimentary Roadside Assistance Program. This program is separate from the New Vehicle Limited Warranty. The service is available 24 hours a day, seven days a week for the New Vehicle Limited Warranty period (U.S.) or Basic Warranty period (Canada). Roadside Assistance will cover: Changing a flat tire, jump-starts, limited fuel delivery, lock-out assistance, winch out and towing of your vehicle. Roadside Assistance Centers: **UNITED STATES** (800) 521-4140 **CANADA** (800) 665-2006. For complete details on any roadside assistance concern, see the Roadside Emergencies chapter in your Owner's Guide.

AUDIOPHILE IN-DASH SIX CD / MP3 / SATELLITE COMPATIBLE SOUND SYSTEM

.1 EJECTING CDS:

Press to eject a CD. For the In-dash Six CD /MP3 system, press and hold to auto-eject all CDs present in the system.

.2 LOADING CDS:

Press the LOAD button and then a preset number to load a CD. Press and hold LOAD to autoloop up to 6 CDs.

.3 ON / OFF / VOLUME CONTROL:

Press to turn ON or OFF. Turn to increase or decrease volume.

.4 AM / FM AND CD SELECT:

In radio mode, press AM/FM to select AM,FM1 or FM2 frequency bands. Press CD to begin CD play. In CD mode, press AM/FM to stop play and begin radio play.

.5 SETTING MEMORY PRESETS:

To set a station: Select a frequency band with the AM/FM button,

then select a station. Press and hold a numbered preset button (1-6) until the sound returns.

.6 FOLDERS: Press to access previous or next folder on MP3 discs, if folders are available.

.7 SEEK FUNCTION:

Press to access the next listenable station or CD track.


.8 TEXT / SCAN FUNCTION:

Press and hold for a brief sampling of radio stations or CD tracks. Press again to stop. In CD/MP3 mode, press and release to display track title, artist name, disc title and file name (if available).

.9 SHUFFLE FUNCTION:

SHUFFLE plays tracks in random order.

.10 MUTE :

 

Pressing the  button will mute the playing media. Pressing it again will return to the playing media.

SATELLITE RADIO FEATURES AND CONTROLS (IF EQUIPPED):

.11 AUX:

Press to cycle through FES/DVD (if equipped), SAT1, SAT2, SAT3 (satellite mode, if equipped) or LINE IN (auxiliary mode, if equipped). Once Satellite Radio mode is activated you may use the following functions:

Press MENU until SATELLITE RADIO MENU is displayed.

Press OK, then press / to cycle through the following options: Category, Save Song, Delete Song, Delete All Songs and Enable/Disable Alerts.

 

Satellite radio is available only with a valid SIRIUS radio subscription. Check with your authorized dealer for availability.

.12 TUNE / DISC SELECTOR:





Press to go up or down the radio frequency or to select a

desired disc. Also, use in menu mode to select various settings.

SPEED SENSITIVE VOLUME (IF EQUIPPED):

The volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Press MENU to access and use  SEEK  to adjust. Press OK to close and return to the main menu.

SETTING THE CLOCK:

Press MENU until SELECT HOUR or SELECT MINS is displayed. Press /,  SEEK  to adjust the hours/minutes.



AUTOMATIC TEMPERATURE CONTROL (ATC) SYSTEM WITH HEATED SEATS

.13 TEMPERATURE CONTROL: Increases/decreases the temperature in the cabin.

.14 DRIVER HEATED SEAT CONTROL: Press once to activate high heat; press a second time to activate low heat. Press a third time to deactivate.

.15 AUTO: The system will automatically determine fan speed, airflow location, A/C on or off, and outside or recirculated air, to heat or cool the vehicle to the desired temperature.

.16 A/C: Activates/deactivates the air conditioning.

AIRFLOW DIRECTION CONTROLS: These controls allow you to choose the air distribution mode you desire.

.17 Distributes air through the instrument panel and center console registers.

.18 Distributes air through the windshield defroster ducts, demister outlets, and the front and rear seat floor ducts.

.19 Distributes air through the floor and rear seat floor vents.

.20 Recirculates air in the cabin, thereby reducing the amount of time needed to cool down the interior of the vehicle when used with A/C.

.21 Distributes air through the windshield defroster vents, demister outlets, and the front and rear seat floor vents. The system will automatically provide outside air to reduce window fogging.

.22 DEFROST: Use to clear ice or fog from the windshield by distributing air through the windshield defroster and demister vents.

.23 REAR DEFROST/ HEATED MIRRORS (IF EQUIPPED): Use to defrost your rear windshield of fog and thin ice. It also operates the heated mirrors to remove snow and thin ice from the side mirrors. If your vehicle is equipped with a power sliding rear window, rear defrost is not available and the rear defrost symbol on this button will be replaced by the symbol for heated mirrors.

.24 PASSENGER HEATED SEAT CONTROL: Press once to activate high heat; press a second time to activate low heat. Press a third time to deactivate.

.25 FAN SPEED CONTROL: Increases/decreases the fan speed.

MAX A/C OVERRIDE OF AUTO FUNCTION: Select panel mode. Then select A/C and recirculated air. Set the temperature setting to 60°F. Adjust fan speed to maintain comfort.



2008 LINCOLN MARK LT
QUICK REFERENCE GUIDE

If your vehicle is equipped with the navigation system, please see your Owner's Guide.

Welcome to the unparalleled luxury, extraordinary functionality and incredible comfort that is your new Lincoln Mark LT.


This Quick Reference Guide was designed to help you quickly get to know your vehicle. It will help you get acquainted with many of your new Mark LT's features and functions.

For more detailed information, please see your Owner's Guide. Welcome to the perfect balance of elegant design and highly functional engineering. Let's get to know your Lincoln Mark LT better.

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.



.1 HEADLAMP AND PANEL DIMMER CONTROL:

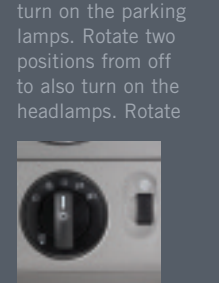

Rotate the control clockwise one position from off to turn on the parking lamps. Rotate two positions from off to also turn on the headlamps. Rotate

counterclockwise from off to activate the autolamp, which provides light-sensitive automatic on/off control of the exterior lights and keeps them on for a short period of time after the ignition is turned off. When the control is in any position except high beams or off, pull the control toward you to activate the fog lamps.

.2 POWER ADJUSTABLE PEDALS (IF EQUIPPED): Press and hold the top end of rocker control to adjust the accelerator




pedals toward you. Adjust the pedals only when the vehicle is stopped and the gearshift lever is in the P (Park) position. If equipped with the memory function, the

and brake pedal away from you. Hold the lower end of the control to move the adjustable pedals, power mirrors, and the driver's seat, can be automatically positioned in two programmable positions using the control located on the driver's door. Please see your Owner's Guide for instructions on how to use this memory feature.

.3 SPEED CONTROL: To set the speed control, press the ON button and release. Accelerate to the desired speed and


press the SET button and release. Once the system is engaged, an icon will appear in the instrument cluster. To increase speed, tap the SET button and the speed will increase in small

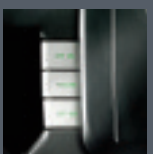

increments each time, or use the accelerator pedal to reach desired speed and then press


SET. To reduce speed, press and hold CST until desired speed is reached. Press and release the CST button and speed will decrease in small increments. Also, you can depress the brake pedal until desired speed is reached and press SET. Press RESUME to return the vehicle to a previously set speed.

.4 TILT STEERING COLUMN: To adjust the steering wheel, push the adjustment

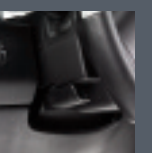


lever down to unlock the steering column. While the lever is in the down position, tilt the steering column to your desired position. Then, while holding the steering column in place, pull the lever up to its original position to lock the steering column.


.5 MESSAGE CENTER: With the ignition in the ON position, the message center, located on your instrument cluster, displays important vehicle information through a constant monitor of vehicle systems. You may select display features on the message center for a display of status, preceded by a brief indicator chime. The system will also notify you of potential vehicle problems with a display of system

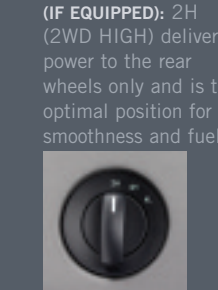


economy. 4H (4WD HIGH) provides mechanically locked four-wheel drive power to all four wheels. 4L (4WD LOW) provides mechanically locked four-wheel drive

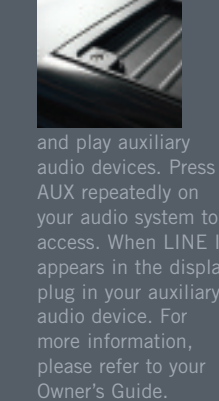


warnings, followed by a long indicator chime. For more detailed information, please see your Owner's Guide.

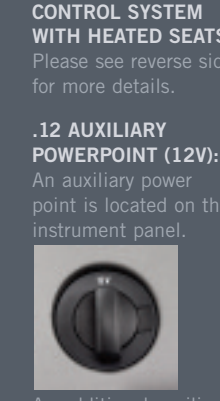


.6 STEERING WHEEL CONTROLS: These controls allow you to operate features of the radio and climate control systems. Press Δ to select the different audio modes. Press and release SEEK to: Select the next preset radio station, the next CD track or advance through the preset satellite channels (if equipped). In any mode, press VOL + or - to adjust volume. Press TEMP + or - to adjust temperature and FAN + or - to adjust fan speed.

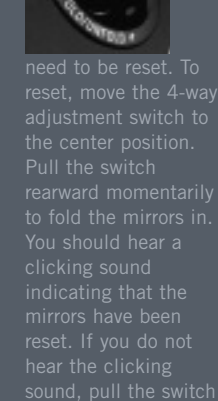


.7 FOUR-WHEEL DRIVE CONTROL (IF EQUIPPED): 2H (2WD HIGH) delivers power to the rear wheels only and is the optimal position for smoothness and fuel

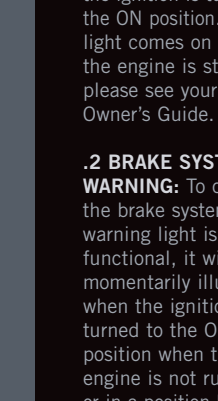


.8 AUXILIARY INPUT JACK: Your vehicle is equipped with an Auxiliary Input Jack located in the instrument panel tray. This allows you to plug

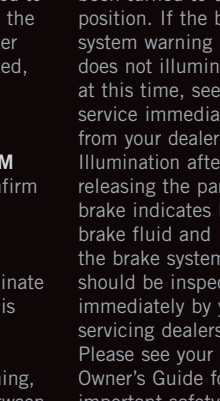


.9 AUDIOPHILE IN-DASH SIX CD / MP3 SOUND SYSTEM: Please see reverse side for more details.

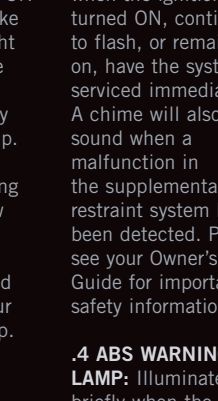


.10 TRACTION CONTROL™ (IF EQUIPPED): Your vehicle may be equipped with Traction Control™. The TCS switch has an indicator light that illuminates when the system is off. The system will automatically turn on every time the ignition is turned off and on. For important safety information, please see your Owner's Guide.

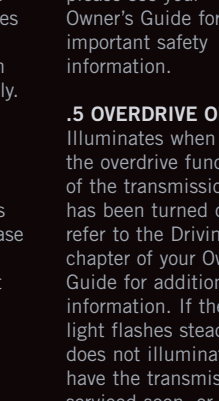


.11 AUTOMATIC TEMPERATURE CONTROL SYSTEM WITH HEATED SEATS: Please see reverse side for more details.

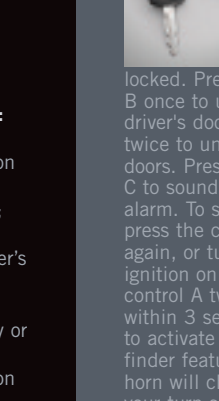


.12 AUXILIARY POWERPOINT (12V): An auxiliary power point is located on the instrument panel.

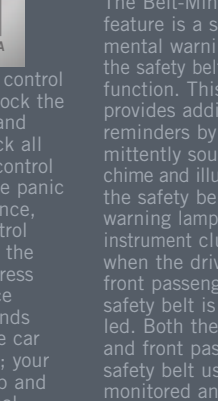


.13 POWERFOLD MIRRORS (IF EQUIPPED): Rotate the 4-way adjustment switch, located on the driver's door, to the center position. Pull the switch rearward to fold in the mirrors. Pull again to fold them back to the original position. Fold the side mirrors in carefully when driving through a narrow space, like an automatic car wash. If you fold in a mirror manually, the powerfold mirrors will

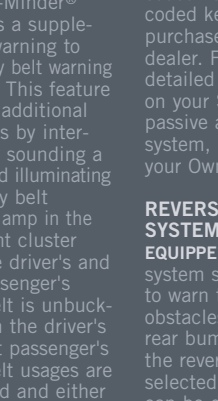


.14 SERVICE ENGINE SOON LIGHT: Illuminates briefly when the ignition is turned to the ON position. If the light comes on after the engine is started, please see your Owner's Guide.

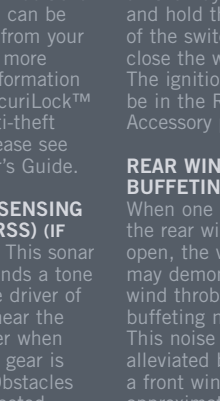


.15 BRAKE SYSTEM WARNING: To confirm the brake system warning light is functional, it will momentarily illuminate when the ignition is turned to the ON position when the engine is not running, or in a position between the ON and START

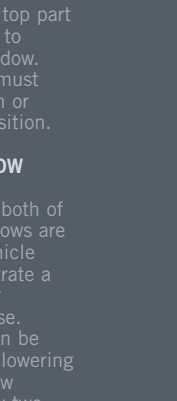

positions, or by applying the parking brake when the ignition has been turned to the ON position. If the brake system warning light does not illuminate at this time, seek service immediately from your dealership. Illumination after releasing the parking brake indicates low brake fluid and the brake system should be inspected immediately by your servicing dealership. Please see your Owner's Guide for important safety information.

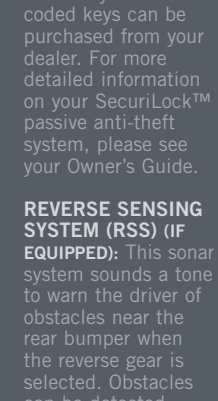

.16 OVERDRIVE OFF: Illuminates when the overdrive function of the transmission has been turned off; refer to the Driving chapter of your Owner's Guide for additional information. If the light flashes steadily or does not illuminate, have the transmission serviced soon, or damage may occur.

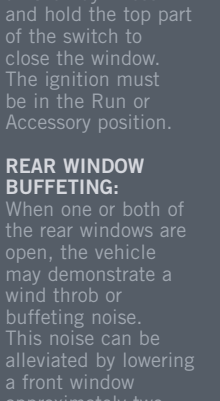

.17 BELT-MINDER®: The Belt-Minder® feature is a supplemental warning to the safety belt warning function. This feature provides additional reminders by intermittently sounding a chime and illuminating the safety belt warning lamp in the instrument cluster when the driver's and front passenger's safety belt is unbuckled. Both the driver's and front passenger's safety belt usages are monitored and either may activate the Belt-Minder® feature. It is recommended that this method be used to locate your vehicle, rather than



.18 REAR WINDOW BUFFETING: When one or both of the rear windows are open, the vehicle may demonstrate a wind throb or buffeting noise. This noise can be alleviated by lowering a front window approximately two to three inches.

.19 REMOTE ENTRY SYSTEM: Press control A once to lock all doors. The parking lamps will flash. Pressing the control a second time will chirp the horn and the parking lamps will flash once more to confirm that all doors are closed and

locked. Press control B once to unlock the driver's door and twice to unlock all doors. Press control C to sound the panic alarm. To silence, press the control again, or turn the ignition on. Press control A twice within 3 seconds to activate the car finder feature; your horn will chirp and your turn signal lamps will flash. It is recommended that this method be used to locate your vehicle, rather than

using the panic alarm. The remote entry system can also control the memory feature (if equipped). Please see your Owner's Guide for instructions on how to activate.

.20 KEYLESS ENTRY SYSTEM: With this control you can lock or unlock all doors without using a key.

.21 REMOTE ENTRY SYSTEM: Press control A once to lock all doors. The parking lamps will flash. Pressing the control a second time will chirp the horn and the parking lamps will flash once more to confirm that all doors are closed and

locked. Press control B once to unlock the driver's door and twice to unlock all doors. Press control C to sound the panic alarm. To silence, press the control again, or turn the ignition on. Press control A twice within 3 seconds to activate the car finder feature; your horn will chirp and your turn signal lamps will flash. It is recommended that this method be used to locate your vehicle, rather than

using the panic alarm. The remote entry system can also control the memory feature (if equipped). Please see your Owner's Guide for instructions on how to activate.

.22 SECURILOCK™ PASSIVE ANTI-THEFT SYSTEM: SecuriLock™ passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded key programmed to your vehicle is used. Your SecuriLock™ system is armed immediately after switching the ignition to the OFF/LOCK position. The theft indicator will flash every two seconds when the vehicle is armed. Switching the ignition to the ON position with a coded key disarms the system. The theft indicator will illuminate for three seconds and then go out. Your vehicle comes with two coded keys. Additional coded keys can be purchased from your dealer. For more detailed information on your SecuriLock™ passive anti-theft system, please see your Owner's Guide.

.23 REVERSE SENSING SYSTEM (RSS) (IF EQUIPPED): This sonar system sounds a tone to warn the driver of obstacles near the rear bumper when the reverse gear is selected. Obstacles can be detected within approximately 6 feet (2 m) behind the rear bumper while the vehicle moves in reverse at

speeds less than 3 mph (5 km/h). The reverse sensing system defaults to on, but can be disabled by turning the ignition on, placing the gearshift in (R) Reverse and pressing the RSS control. An indicator light on the control, located next to the cigarette lighter, will illuminate when the system is turned off.

.24 POWER SLIDING BACK WINDOW: If your vehicle is equipped with a power sliding back window, press and hold the bottom part of the rocker switch

to open the window all the way. Press and hold the top part of the switch to close the window. The ignition must be in the Run or Accessory position.

.25 REAR WINDOW BUFFETING: When one or both of the rear windows are open, the vehicle may demonstrate a wind throb or buffeting noise. This noise can be alleviated by lowering a front window approximately two to three inches.

.26 SERVICE ENGINE SOON LIGHT: Illuminates briefly when the ignition is turned to the ON position. If the light comes on after the engine is started, please see your Owner's Guide.

.27 BRAKE SYSTEM WARNING: To confirm the brake system warning light is functional, it will momentarily illuminate when the ignition is turned to the ON position when the engine is not running, or in a position between the ON and START

positions, or by applying the parking brake when the ignition has been turned to the ON position. If the brake system warning light does not illuminate at this time, seek service immediately from your dealership. Illumination after releasing the parking brake indicates low brake fluid and the brake system should be inspected immediately by your servicing dealership. Please see your Owner's Guide for important safety information.

.28 OVERDRIVE OFF: Illuminates when the overdrive function of the transmission has been turned off; refer to the Driving chapter of your Owner's Guide for additional information. If the light flashes steadily or does not illuminate, have the transmission serviced soon, or damage may occur.

.29 BELT-MINDER®: The Belt-Minder® feature is a supplemental warning to the safety belt warning function. This feature provides additional reminders by intermittently sounding a chime and illuminating the safety belt warning lamp in the instrument cluster when the driver's and front passenger's safety belt is unbuckled. Both the driver's and front passenger's safety belt usages are monitored and either may activate the Belt-Minder® feature. It is recommended that this method be used to locate your vehicle, rather than

using the panic alarm. The remote entry system can also control the memory feature (if equipped). Please see your Owner's Guide for instructions on how to activate.

.30 KEYLESS ENTRY SYSTEM: With this control you can lock or unlock all doors without using a key.

.31 REMOTE ENTRY SYSTEM: Press control A once to lock all doors. The parking lamps will flash. Pressing the control a second time will chirp the horn and the parking lamps will flash once more to confirm that all doors are closed and

WARNING LIGHTS



1. SERVICE ENGINE SOON LIGHT
2. BRAKE SYSTEM WARNING
3. AIRBAG READINESS
4. ABS WARNING LAMP
5. OVERDRIVE OFF

.1 SERVICE ENGINE SOON LIGHT: Illuminates briefly when the ignition is turned to the ON position. If the light comes on after the engine is started, please see your Owner's Guide.

.2 BRAKE SYSTEM WARNING: To confirm the brake system warning light is functional, it will momentarily illuminate when the ignition is turned to the ON position when the engine is not running, or in a position between the ON and START

positions, or by applying the parking brake when the ignition has been turned to the ON position. If the brake system warning light does not illuminate at this time, seek service immediately from your dealership. Illumination after releasing the parking brake indicates low brake fluid and the brake system should be inspected immediately by your servicing dealership. Please see your Owner's Guide for important safety information.

.3 AIRBAG READINESS: If this light fails to illuminate when the ignition is turned ON, continues to flash, or remains on, have the system serviced immediately. A chime will also sound when a malfunction in the supplemental restraint system has been detected. Please see your Owner's Guide for important safety information.

.4 ABS WARNING LAMP: Illuminates briefly when the ignition is turned to the ON

position. If the light comes on after the engine is started, please see your Owner's Guide for important safety information.

FEATURES

AUTO DIMMING REAR VIEW MIRRORS: The rear and driver's side view mirrors are equipped with a feature that will reduce glare in the mirror when bright lights are detected. It automatically returns to normal/clear when the vehicle is placed in R (Reverse). For more information, please see your Owner's Guide.

KEYLESS ENTRY SYSTEM: With this control you can lock or unlock all doors without using a key.

REMOTE ENTRY SYSTEM: Press control A once to lock all doors. The parking lamps will flash. Pressing the control a second time will chirp the horn and the parking lamps will flash once more to confirm that all doors are closed and

locked. Press control B once to unlock the driver's door and twice to unlock all doors. Press control C to sound the panic alarm. To silence, press the control again, or turn the ignition on. Press control A twice within 3 seconds to activate the car finder feature; your horn will chirp and your turn signal lamps will flash. It is recommended that this method be used to locate your vehicle, rather than

using the panic alarm. The remote entry system can also control the memory feature (if equipped). Please see your Owner's Guide for instructions on how to activate.

KEYLESS ENTRY SYSTEM: With this control you can lock or unlock all doors without using a key.

REMOTE ENTRY SYSTEM: Press control A once to lock all doors. The parking lamps will flash. Pressing the control a second time will chirp the horn and the parking lamps will flash once more to confirm that all doors are closed and

locked. Press control B once to unlock the driver's door and twice to unlock all doors. Press control C to sound the panic alarm. To silence, press the control again, or turn the ignition on. Press control A twice within 3 seconds to activate the car finder feature; your horn will chirp and your turn signal lamps will flash. It is recommended that this method be used to locate your vehicle, rather than

using the panic alarm. The remote entry system can also control the memory feature (if equipped). Please see your Owner's Guide for instructions on how to activate.

SECURILOCK™ PASSIVE ANTI-THEFT SYSTEM:

SecuriLock™ passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded key programmed to your vehicle is used. Your SecuriLock™ system is armed immediately after switching the ignition to the OFF/LOCK position. The theft indicator will flash every two seconds when the vehicle is armed. Switching the ignition to the ON position with a coded key disarms the system. The theft indicator will illuminate for three seconds and then go out. Your vehicle comes with two coded keys. Additional coded keys can be purchased from your dealer. For more detailed information on your SecuriLock™ passive anti-theft system, please see your Owner's Guide.

REVERSE SENSING SYSTEM (RSS) (IF EQUIPPED): This sonar system sounds a tone to warn the driver of obstacles near the rear bumper when the reverse gear is selected. Obstacles can be detected within approximately 6 feet (2 m) behind the rear bumper while the vehicle moves in reverse at

speeds less than 3 mph (5 km/h). The reverse sensing system defaults to on, but can be disabled by turning the ignition on, placing the gearshift in (R) Reverse and pressing the RSS control. An indicator light on the control, located next to the cigarette lighter, will illuminate when the system is turned off.

POWER SLIDING BACK WINDOW: If your vehicle is equipped with a power sliding back window, press and hold the bottom part of the rocker switch

to open the window all the way. Press and hold the top part of the switch to close the window. The ignition must be in the Run or Accessory position.

REAR WINDOW BUFFETING: When one or both of the rear windows are open, the vehicle may demonstrate a wind throb or buffeting noise. This noise can be alleviated by lowering a front window approximately two to three inches.

SECURILOCK™ PASSIVE ANTI-THEFT SYSTEM: SecuriLock™ passive anti-theft system is an engine immobilization system. This system is designed to help prevent the engine from being started unless a coded key programmed to your vehicle is used. Your SecuriLock™ system is armed immediately after switching the ignition to the OFF/LOCK position. The theft indicator will flash every two seconds when the vehicle is armed. Switching the ignition to the ON position with a coded key disarms the system. The theft indicator will illuminate for three seconds and then go out. Your vehicle comes with two coded keys. Additional coded keys can be purchased from your dealer. For more detailed information on your SecuriLock™ passive anti-theft system, please see your Owner's Guide.

REVERSE SENSING SYSTEM (RSS) (IF EQUIPPED): This sonar system sounds a tone to warn the driver of obstacles near the rear bumper when the reverse gear is selected. Obstacles can be detected within approximately 6 feet (2 m) behind the rear bumper while the vehicle moves in reverse at

speeds less than 3 mph (5 km/h). The reverse sensing system defaults to on, but can be disabled by turning the ignition on, placing the gearshift in (R) Reverse and pressing the RSS control. An indicator light on the control, located next to the cigarette lighter, will illuminate when the system is turned off.