

# INSTRUMENT Panel

Use extreme caution when using any device or feature that may take your attention off the road. Ford recommends against the use of any hand-held device while driving and that you comply with all applicable laws. Your primary responsibility is the safe operation of the vehicle.

## 1 HEADLAMPS

- Turns the headlamps off.
- ☾ Turns on parking, instrument panel, license plate and tail lamps.
- ☀ Turns on headlamps.
- ☀ Automatically turns the exterior lamps on/off based on available daylight.

☾ Turns on fog lamps by pulling the control towards you.

**Adaptive Headlamps (if equipped):** These headlamps move in the same direction as your steering wheel to provide added visibility around curves.

## 2 PANEL DIMMER CONTROL

Press and hold the top or bottom of the control until the desired lighting level is reached. Press and hold the top of the control to turn on the interior courtesy lights. Press the bottom of the control to turn off.

## 3 AMBIENT LIGHTING (if equipped)

Press repeatedly to turn the feature on, cycle through your color options and turn the feature off. When activated, the foot well areas, cup holders and center console bin illuminates with the chosen color.

## 4 INTERIOR TRUNK RELEASE

## 5 MULTI-FUNCTION LEVER

Rotate the end of the control up/down to increase/decrease the speed of the wipers.

**Push the end of the stalk:**

- quickly for a single swipe without fluid.
- and hold briefly for three swipes with washer fluid.
- and hold for a longer wash cycle.

**Rain sensing wipers (if equipped):** These wipers automatically activate when moisture is present on the windshield and the control is set to any setting except OFF. The wiper speed will vary based on the amount of moisture detected on the windshield as well as the current interval setting. Ensure that the control is turned to OFF prior to entering a car wash.

For better visibility, your vehicle will also automatically turn on your headlights if your windshield wipers and auto lamps are on. **Note:** For optimal wiper performance, clean blades and glass regularly. Refer to your Owner's Guide for more information.

## 6 TILT/TELESCOPE STEERING WHEEL

## 7 STEERING WHEEL CONTROLS

**To set the speed:**

1. Press ON.
2. Accelerate to the desired speed.
3. Press SET + or SET - and take your foot off the accelerator.

- To set a higher speed, press and hold SET + or, press SET + repeatedly until the desired speed is reached.
- To set a lower speed, press and hold SET - or, press SET - repeatedly until the desired speed is reached.
- To return to a previously set speed, press RESUME.
- To turn off, press OFF or turn the ignition off.

VOL +/- : Press to increase/decrease volume levels.

◀ ▶ : Press to access the previous/next radio station, CD track or preset satellite radio channel.

MEDIA: Press repeatedly to access all possible media sources.

☺ : Press to access voice recognition.

☺ : Press to access SYNC® phone features.

For a complete list of all possible options, please refer to your Owner's Guide.

## 8 MESSAGE CENTER

Displays important vehicle information through a constant monitoring of vehicle systems. The system will notify you of potential problems with a display of warnings followed by a long indicator chime. Use the INFO, SETUP and RESET buttons to access various menus and settings within the message center. Refer to your Owner's Guide for more information.

## 9 NAVIGATION SYSTEM (if equipped)

The Mobile Media Navigation System allows you to record CDs, listen to your saved music, play DVDs and access climate control options in addition to navigating the vehicle. Refer to your Navigation supplement for more information.

## 10 HEATED AND COOLED DRIVER/PASSENGER SEATS

Push once to activate high heat/cool (three indicator lights), press twice to activate medium heat/cool (two indicator lights), press again to activate low heat/cool and press again to deactivate.

## 11 HAZARD FLASHER

## 12 ADVANCETRAC® STABILITY ENHANCEMENT SYSTEM

Helps you maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck, try turning off the AdvanceTrac® system (by pressing the control) to allow wheel spin and help increase momentum to help dig the vehicle out. Refer to your Owner's Guide for more information.

## 13 PASSENGER AIRBAG OFF

Illuminates when the passenger airbag has been turned off due to the system detecting light to medium weight in the front passenger seat. For complete information, refer to the Front Passenger Sensing System in the Seating and Safety Restraints chapter of your Owner's Guide.



# INSTRUMENT Cluster



## SERVICE ENGINE SOON LIGHT

Illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the on-board diagnostics system (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

## ABS (ANTI-LOCK BRAKE SYSTEM) LIGHT

Illuminates briefly when the ignition is turned on. If the light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible and have the system serviced. Normal braking (less ABS) is still functional unless the brake warning light is also illuminated.

## ADVANCETRAC®/TRACTION CONTROL LIGHT

Illuminates when AdvanceTrac®/Traction Control is active. If the light remains on, contact your authorized dealer as soon as possible.

## AIRBAG READINESS LIGHT

Illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer for service as soon as possible. A chime will also sound if there is a malfunction in the indicator light.

## THROTTLE CONTROL/TRANSMISSION LIGHT

Illuminates when a powertrain or AWD fault is detected. If the light remains on or continues to come on, contact your authorized dealer for service as soon as possible.

## LOW TIRE PRESSURE WARNING

Illuminates when your tire pressure is low. If the light remains on, the tire pressure should be checked. If the light does not turn on or begins to flash when the ignition is first turned on or while driving, contact your authorized dealer as soon as possible.

# AUDIO System



**Note:** The system illustrated here is the navigation based audio system. Please refer to your navigation supplement for complete information on this system.

IN-DASH CD6/MP3 SATELLITE COMPATIBLE SOUND SYSTEM

**VOL/PUSH** – Push to turn the system on/off. Turn to increase/decrease the volume.

**CD** – Press to enter CD/MP3 mode. If a disc is already present in the system, CD play will begin where it last ended.

**AM/FM** – Press repeatedly to cycle through AM, FM1 or FM2 frequency bands.

**SIRIUS** – Press repeatedly to cycle through SAT1, SAT2 and SAT3 (satellite radio modes, if equipped). Press MENU when active and then OK to enter the satellite radio menu and access more options. Refer to your Owner's Guide for more information.

**SOUND** – Press repeatedly to access: Bass, Treble, Balance, Fade, Speed compensated volume and All seats (Occupancy mode, if equipped) menu options. Press SEEK to make adjustments.

**CLOCK** – To set the time, press CLOCK. Use the memory preset numbers (0-9) to enter the desired time and press OK.

**TUNE/SCAN** – Turn to go to the next/previous satellite radio channel, or to go up/down the radio band frequency in individual increments.

**DIRECT** – Press DIRECT and then, using the memory presets (0-9), enter in the desired radio station, track number, MP3 folder number (if in MP3 mode), or satellite radio channel.

SIRIUS® satellite radio broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS® satellite radio channels, visit [www.sirius.com](http://www.sirius.com) in the United States, [www.sirius-canada.ca](http://www.sirius-canada.ca) in Canada, or call SIRIUS® at 1-888-539-7474. Satellite radio is only available with a valid SIRIUS® radio subscription.

**For more information on this system, please refer to your Owner's Guide.**



BH6J 19G217 AA



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please refer to your Owner's Guide.

FORD MOTOR COMPANY  
CUSTOMER RELATIONSHIP CENTER  
P.O. BOX 6248  
DEARBORN, MI 48121  
1-800-392-3673 (FORD)  
(TDD for the hearing impaired: 1-800-232-5952)  
lincolnowner.com  
www.ford.ca



## CLIMATE Control



**Note:** The system illustrated here is the navigation based climate system. Please refer to your Owner's Guide for complete information on this system.

### DUAL AUTOMATIC TEMPERATURE CONTROL WITH HEATED AND COOLED SEATS

Press to turn on/off.

### DRIVER SIDE TEMPERATURE

Turn to increase/decrease the temperature on the driver side of the vehicle (when PASS TEMP is active) or for the entire vehicle cabin (when PASS TEMP is not active).

### PASS TEMP

Press to activate the passenger side climate control (Dual Zone). Turn the control to increase/decrease temperature on the passenger side. Press again to turn off and return to Single Zone where the driver side temperature control determines the temperature for the entire vehicle.

### AUTO

Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature. Press again to deactivate.

### MAX A/C

Distributes recirculated air through the instrument panel vents to cool the vehicle. This mode is more economical and efficient. May also help reduce undesirable odors from entering the vehicle.

### FAN SPEED

Press + to increase or - to decrease fan speed.

Distributes outside air through the windshield defroster and demister vents. Can be used to clear thin ice or fog from the windshield.

Recirculated air may reduce the amount of time needed to cool down the interior of the vehicle and may also help reduce undesirable odors from reaching the interior of the vehicle.

Press to activate and clear the rear window and side heated mirrors of thin ice and fog. Press again to deactivate.

Press repeatedly to cycle through various airflow options.

## ADDITIONAL Features

### REARVIEW CAMERA (if equipped)

This system provides a visual display of the area behind the vehicle. The display automatically appears on the navigation screen (if equipped) when the vehicle is in R (Reverse) and uses colors (green, yellow and red) to alert you of your proximity to objects. **Note:** Visibility aids do not replace the need watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail, and limitations.

### BLIND SPOT INFORMATION SYSTEM (BLIS®) WITH CROSS TRAFFIC ALERT (CTA) (if equipped)

BLIS® uses radar sensors to help you determine if a vehicle may be in your blind spot zone when driving on roads and freeways. The CTA feature alerts you if a car is coming toward you when you are backing out of a parking space. **Note:** Visibility aids do not replace the need watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail, and limitations.



### SYNC®

SYNC® is a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC® Supplement, the SYNC® section in the Navigation Supplement (if equipped) or visit [www.SYNCMYride.com](http://www.SYNCMYride.com).

### INTEGRATED KEYHEAD TRANSMITTER (IKT)

• Press once to lock all doors. Press again to confirm all doors are closed.

• Press once to unlock the driver's door. Press again within five seconds to unlock all doors.

• Press to activate the panic alarm. Press again or turn the ignition on to deactivate.

• Press twice within three seconds to open the trunk.

• **Car finder:** Press twice within three seconds to locate your vehicle. The horn will chirp and the turn lamps will flash.

• Press and hold for more than two seconds to begin opening the two front windows and venting the moon roof (if equipped). **Note:** This feature is configured to on. To turn this feature off (or on), contact your authorized dealer. Refer to your Owner's Guide for more information.

### ADJUSTABLE HEAD RESTRAINTS

Your vehicle's front row head restraints can be adjusted to suit your needs. Simply pull up or down on the head restraint to select the desired position. You may also be able to tilt the head restraint forward or backward for additional comfort.

### REVERSE SENSING SYSTEM (if equipped)

The reverse sensing system may warn you if there is an object behind the vehicle. A warning tone will sound which increases in frequency as the object gets closer and then will sound continuously when the object is less than 10 inches away. The system is active when the vehicle is in R (Reverse) and traveling less than 3 mph (5 km/h). **Note:** Visibility aids do not replace the need watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail, and limitations.

### MOON ROOF (if equipped)

Your moon roof is equipped with an automatic one-touch express opening, closing and venting feature.

• **To open:** Press and release the rear portion of the control.

• **To close:** Press and release the front portion of the control.

• **To vent:** When the glass panel is closed, press and release the front portion of the control.

• **To close from a venting position:** Press and hold the rear portion of the control until the glass stops moving.

### SECURICODE™ KEYLESS ENTRY SYSTEM

Allows you to lock or unlock the doors as well as open the trunk without a key. Ensure that you have your five digit factory code located on your owner's wallet card in the glove box.

• To unlock the driver's door, enter your five digit factory code.

• To unlock all doors, enter your five digit factory code and, within five seconds, press 3-4.

• To open the trunk, enter your five digit factory code and, within five seconds, press 5-6.

• To lock all vehicle doors, press 7-8 and 9-0 at the same time (you do not need to enter your factory code first).

### ALL-WHEEL DRIVE (AWD, if equipped)

AWD is always active and uses all four wheels to power the vehicle, thereby increasing traction and enabling you to drive over terrain and in road conditions that a conventional two-wheel drive vehicle cannot. Your vehicle is not intended for off-road use. **Note:** Use only the provided spare tire. Using a different size could cause the AWD system to stop functioning and default to front-wheel drive. Your AWD vehicle has special towing instructions. Refer to your Owner's Guide for more information.

## ESSENTIAL Information

### EASY FUEL® FUEL SYSTEM

With this system, you simply open the fuel filler door, insert the nozzle and begin fueling. Wait five seconds from the time the refueling nozzle is shut-off until the nozzle is pulled back out of the fill pipe to allow residual fuel in the nozzle to drain into the tank. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. To use a portable fuel container, slowly insert the fuel funnel (attached to the underside of the spare tire cover or included with the tire changing tools), and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. **Do not** use aftermarket funnels as they will not work with the Easy Fuel® system and may cause damage.

### FUEL TANK CAPACITY/FUEL INFO

All-wheel drive vehicles have a fuel tank capacity of 16.5 gallons (62.5L) while front wheel drive vehicles have a fuel tank capacity of 17.5 gallons (66.2L). Use only "Regular" gasoline with an octane rating of 87. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol.

### LOCATION OF SPARE TIRE AND TOOLS

Your spare tire and tools are located in the trunk, under the floor panel. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on how to change your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.

### TIRE PRESSURE

Check your tire pressure at least once a month and before long trips (including spare, if equipped). The recommended specifications are on the Safety Compliance Certification Label or Tire Label located on the B-Pillar or the edge of the driver's door. As an added safety feature, your vehicle has been equipped with a **tire pressure monitoring system (TPMS)** that illuminates a low tire pressure warning light when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

### ROADSIDE ASSISTANCE

Your new Lincoln MKZ comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

### SOS POST-CRASH ALERT SYSTEM™

This system provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or on your remote transmitter.

## Quick Reference Guide



LINCOLN MKZ  
2011