

INSTRUMENT PANEL

Use extreme caution when using any device or feature that may take your attention off the road. Ford recommends against the use of any hand-held devices while driving and that you comply with all applicable laws. Your primary responsibility is the safe operation of the vehicle.

MULTI-FUNCTION LEVER

Rotate the end of the control up/down to increase/decrease the speed of the wipers.

HEADLAMP CONTROLS

- Turns the headlamps off.
- Turns on parking, instrument panel, license plate and tail lamps.
- Turns on low beam headlamps.
- Autolamps: Automatically turns the exterior lamps on/off based on available daylight.
- Turns on fog lamps by pulling the control towards you.

PANEL DIMMER CONTROL

Press the control up or down until the desired lighting level is reached. Press the control up to the second detent to turn on the interior courtesy lights. The lights will remain on until the second detent is pressed.

ADAPTIVE HEADLAMPS

These headlamps move in the same direction as your steering wheel to provide added visibility around curves.

AUTOMATIC HIGH BEAMS

During nighttime driving, the automatic high beam system automatically turns on your high beams if it is dark enough and no other traffic is present. When it detects an approaching vehicle's headlights or a preceding vehicle's tail lamps, the system turns off the high beams (low beams remain on) before they distract other drivers.

WARNING LIGHTS

SERVICE ENGINE SOON Illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the on-board diagnostics system (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

ABS WARNING Illuminates briefly when the ignition is turned on. If the light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible and have the system serviced. Normal braking (less ABS) is still functional unless the brake warning light  is also illuminated.

AIRBAG READINESS Illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer for service as soon as possible. A chime will also sound if there is a malfunction in the indicator light.

LOW TIRE PRESSURE WARNING Illuminates when your tire pressure is low. If the light remains on, the tire pressure should be checked. If the light does not turn on at ignition or begins to flash, contact your authorized dealer as soon as possible.

 
 
ADVANCETRAC[®] STABILITY ENHANCEMENT SYSTEM WITH ROLL STABILITY CONTROL[™] Helps you maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck, try turning off the AdvanceTrac[®] system (by pressing the control) to allow wheel spin and help increase momentum to help dig the vehicle out. Refer to your Owner's Guide for more information.

NAVIGATION SYSTEM (if equipped)


HAZARD FLASHER

MESSAGE CENTER Displays important vehicle information through a constant monitoring of vehicle systems. The system will notify you of potential problems with a display of warnings followed by a long indicator chime. Use the INFO, SETUP and RESET buttons to access various menus and settings within the message center. Refer to your Owner's Guide for more information.

RAIN-SENSING WIPERS These wipers automatically activate when moisture is present on the windshield and the control is set to any setting except OFF. The wiper speed will vary based on the amount of moisture detected on the windshield as well as the current interval setting. Ensure that the control is turned to OFF prior to entering a car wash. **Note:** For optimal wiper performance, clean your blades and glass regularly. Refer to your Owner's Guide for more information.

 
POWER ADJUSTABLE FOOT PEDALS Press the bottom of the control  to move the pedals closer to you or the top of the control  to move the pedals further away from you. The pedals should only be adjusted when the vehicle is stopped and in P (Park).

AMBIENT LIGHTING Press repeatedly to turn the feature on, cycle through your color options and turn the feature off.

MEDIA CONTROLS Press **+ VOL**  to increase/decrease volume levels.

Press **PREV**  to access the previous/next radio station, CD track or preset satellite radio preset.

Press **MEDIA**  repeatedly to scroll through all available audio modes.

Press **VOICE**  to access voice recognition.

Press **SYNC** to access SYNC[®] phone features.

STEERING WHEEL CONTROLS

PADDLE SHIFTERS Your SelectShift Automatic[™] transmission (SST) gives you the ability to manually change gears without using a clutch. To use, move the gearshift lever from the D (drive) position to the M (manual) position. To upshift, pull the paddle shifters on the steering wheel towards you. To downshift, push the paddle shifters on the steering wheel control forward. The current gear will display in the instrument cluster. For more information, refer to your Owner's Guide.

AUDIO SYSTEM

Your mobile media system allows you to listen to, record and save music, play DVDs (audio and video) and also access some climate control functions.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.


Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

ESSENTIAL INFORMATION

EASY FUEL[®] FUEL SYSTEM With this system, you simply press open the fuel filler door, insert the nozzle and begin fueling. Wait five seconds from the time the refueling nozzle is shut-off until the nozzle is pulled back out of the fill pipe to allow residual fuel in the nozzle to drain into the tank. It is self-sealing and therefore protected against dust, dirt, water, snow and ice. To use a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. **Do not** use aftermarket funnels as they will not work with the Easy Fuel[®] system and may cause damage.

HARD BUTTONS Press the hard buttons on the system face (such as RADIO or MEDIA) to access corresponding menus on the touchscreen.

VOL  - Push to turn the system on/off. Turn to increase/decrease the volume.

MEDIA - Press to access available media sources of CD/DVD, Jukebox and User Device (SYNC[®]). Select the desired tab on the touchscreen.

RADIO - Press to access available radio sources of AM, FM1, FM2, as well as SAT1, 2, 3 (SIRIUS[®] satellite radio, if activated). Select the desired tab on the touchscreen.

MENU - Press to access Display settings, Feedback settings, System settings and Valet mode.

PHONE - Press to access SYNC[®] phone features. Refer to your SYNC[®] supplement for more information.

CLOCK - Press to access the clock screen and set the time.

CLIMATE - Press to access some climate control options on the touchscreen such as Front Zone, Rear Zone, Dual (zone) and Max A/C.

JUKEBOX - This feature allows you to record and save your music to the 10 GB hard drive for later access. You can then access and play your music by specific tracks, artists, albums or genres. You can even choose to create and access your own playlists.

SYNC[®] - This is a hands-free communications and entertainment system with special phone and media features including 911 Assist[™] and Vehicle Health Reports. For more information, please refer to the SYNC[®] Supplement, the SYNC[®] section in the Navigation Supplement (if equipped) or visit www.SyncMyRide.com.

SIRIUS[®] satellite radio broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS[®] satellite radio channels, visit www.sirius.com in the United States, www.siriuscanada.ca in Canada, or call SIRIUS[®] at 1-888-539-7474. Satellite radio is only available with a valid SIRIUS[®] radio subscription.

HOME SCREEN Your mobile media system has a homescreen where you can load, save and view up to 32 of your favorite pictures as well as view your current audio and climate control settings and the audio visualizer. To access, press the house icon at the bottom left hand corner of any screen.

 
LOCATION OF SPARE TIRE AND TOOLS Your vehicle is equipped with a temporary spare tire. The spare tire and jack are located under the carpeted floor panel in the rear of the vehicle. (Your vehicle is equipped with a third row seat that is stowed in the floor; you will need to unstow the seat in order to access the tire and jack.)

The tire is designed for emergency use only and should be replaced as soon as possible. For more information, refer to the Roadside Emergencies chapter in your Owner's Guide.

For more information on this system, please refer to your Owner's Guide.

FUEL TANK CAPACITY/FUEL INFO Your vehicle has a fuel tank capacity of 18.6 gallons (70.4L). Your vehicle will run normally on 87 octane regular fuel. Premium fuel will provide improved performance. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol. If you have a 3.5L V6 EcoBoost[™] engine, your vehicle is designed to run on regular fuel with an octane rating of 87 or higher. For best overall performance, premium fuel with an octane rating of 91 or higher is recommended. The performance gained by using premium fuel will be most noticeable in hot weather or in severe duty applications such as towing a trailer. Some stations offer fuels posted as "Regular" with an octane rating below 87, particularly in high altitude areas. Fuels with octane levels below 87 are not recommended for either engine. Do not be concerned if your engine sometimes knocks lightly. However, if it knocks heavily while you are using fuel with the recommended octane rating, see your authorized dealer to prevent any engine damage.

ROADSIDE ASSISTANCE Your new Lincoln MKT comes with the assurance and support of 24-hour emergency roadside assistance in the United States, call 1 (800) 521-4140. In Canada, call 1 (800) 665-2006.

TIRE PRESSURE Check your tire pressure at least once a month and before long trips (including spare). The recommended specifications are on the Safety Compliance Certification Label or Tire Label located on the B-Pillar or the edge of the driver's door. As an added safety feature, your vehicle has been equipped with a **Tire Pressure Monitoring System (TPMS)** that illuminates a low tire pressure warning light  when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the vehicle in front of you in the same lane, while your cruise control is active. Press **<-->** on the steering wheel to select one of three possible gap distances (Sporty, Normal or Comfort); the vehicle will then automatically apply the brakes when necessary to ensure that the specified distance is kept. For complete information on setting and using the adaptive cruise control as well as detection issues, refer to Adaptive cruise control in the Driver Controls chapter of your Owner's Guide.

TO SET THE SPEED: Press **ON**. Accelerate to the desired speed. Press **SET +** or **SET -** and take your foot off the accelerator.

TO SET A HIGHER SPEED: Press and hold **SET +** or press **SET +** repeatedly until the desired speed is reached.

TO SET A LOWER SPEED: Press and hold **SET -** or press **SET -** repeatedly until the desired speed is reached.

TO RETURN TO A PREVIOUSLY SET SPEED: Press **RESUME**.

TO TURN OFF: Press **OFF** or turn off the ignition.

ADAPTIVE CRUISE CONTROL (if equipped)

Allows you to set a "gap distance" between yourself and the



lincolnowner.com
www.lincolncanada.com

Ford Motor Company, Customer Relationship Center
P.O. Box 6248 Dearborn, MI 48121 1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

CE9J 19G217 AA



Lincoln MKT
May 2011
First Printing
Quick Reference Guide
Litho in USA



CLIMATE CONTROL

Power – Press to turn on/off.

Driver Temperature – Press to activate, turn to increase/decrease the temperature on the driver side of the vehicle (when the passenger temperature control is active) or for the entire vehicle cabin (when the passenger temperature control is not active).

Heated and Cooled Driver/Passenger Seats – Push once to activate high heat/cool (three indicator lights), press twice for medium heat/cool (two indicator lights), press three times for low heat/cool (one indicator light) and press again to deactivate.

Passenger Temperature – Press to activate the passenger side climate control (dual zone). Turn the control to increase/decrease temperature on the passenger

side. Press again to turn off and return to single zone where the driver side temperature control determines the temperature for the entire vehicle.

AUTO – Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature.

Fan Speed – Press + to increase or – to decrease fan speed.

: Distributes outside air through the windshield defroster and demister vents. Can be used to clear thin ice or fog from the windshield.

: Using recirculated air may reduce the amount of time

needed to cool down the interior of the vehicle and may also help reduce undesirable odors from reaching the interior of the vehicle.

R : Press to activate and clear the rear window and side heated mirrors of thin ice and fog. Press again to deactivate.

Second Row Heated and Cooled Seats (if equipped) – These controls are located on the rear of the floor console. Press once to activate high heat/cool (three indicator lights), twice for medium heat/cool (two indicator lights) and three times for low heat/cool (one indicator light). Press again to turn off.

Note: You can also access many of your climate features via the touchscreen. Simply press the CLIMATE hard button and then make your selection on the touchscreen. Refer to your Owner's Guide for more information.



KEYLESS ENTRY

SECURICODE™ KEYLESS ENTRY SYSTEM

Allows you to lock or unlock the doors without using a key. Ensure that you have your five digit factory code located on your owner's wallet card in the glove box.

INTELLIGENT ACCESS (IA) KEY

Intelligent access keys allow you to unlock the vehicle door(s) or liftgate and start the car without using a key (provided your intelligent access key is within range).

TO UNLOCK THE DRIVER'S DOOR: Simply have the intelligent key within approximately three feet (in your pocket or purse, for example) and press any button on the keyless entry keypad.

TO UNLOCK THE LIFTGATE: Have the intelligent key within approximately three feet and press the exterior liftgate release button located just above the license plate.

TO START THE CAR: Have the intelligent key inside the vehicle, press the brake pedal and press the ENGINE START button next to the steering wheel.



Press once to lock all doors.
Press again to confirm all doors are closed.

Press once to unlock the driver's door.
Press again within three seconds to unlock all doors.

Press to activate the panic alarm.
Press again or turn on the ignition to deactivate.

Press twice within three seconds to open the liftgate.

CAR FINDER: Press twice within three seconds to locate your vehicle.
The horn will chirp and the turn lamps will flash.

The intelligent access key also contains a mechanical key blade which can be used to unlock the driver door. Simply press the release button on the back of the transmitter and slide the key blade out.

ADDITIONAL FEATURES

REARVIEW CAMERA

This system provides a visual display of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in R (Reverse) and uses colors (green, yellow and red) to alert you of your proximity to objects. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.



MyKey®

Allows you to program certain driving restrictions on any standard key in order to promote good driving habits.

When MyKey® is programmed:

- Belt-Minder® cannot be disabled and will sound continuously and the audio will be muted until the safety belt is buckled.
- Audible and visual low fuel warnings are provided.
- Audio volume can be limited.
- Vehicle speed can be limited.
- Audible and visual speed warnings can be configured at preselected speeds.
- Certain features cannot be turned off such as, Blind Spot Information System® (BLIS®) with Cross Traffic Alert and collision warning.
- AdvanceTrac® cannot be programmed off.

For complete information, refer to MyKey® in the Locks and Security chapter in your Owner's Guide.

BLIND SPOT INFORMATION SYSTEM® (BLIS®) WITH CROSS TRAFFIC ALERT (CTA) (if equipped)

BLIS® uses radar sensors to help you determine if a vehicle may be in your blind spot zone (extending rearward from the front outside mirrors to approximately 10 ft. beyond the bumper) when driving on roads and freeways. The CTA feature alerts you if a car is coming towards you when you are backing out of a parking space. Refer to your Owner's Guide for more information.

REVERSE SENSING SYSTEM

The reverse sensing system may warn you if there is an object behind the vehicle. A warning tone will sound which increases in frequency as the object gets closer and then will sound continuously when the object is less than 10 inches away. The system is active when the vehicle is in Reverse (R) and traveling less than 3 mph (5 km/h). **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

ACTIVE PARK ASSIST (if equipped)

The active park assist system can detect an available parallel parking space and automatically steer the vehicle into that space (hands-free). The system instructs the driver with visual and/or audible instructions with regard to braking, accelerating and shifting gears in order to safely park the vehicle. To initiate active park assist, press the Auto P control on the center console and follow the system instructions as prompted by the message center. Use the turn signal to designate which side of the street to search for a spot. If the turn signal is not on, the system will automatically search the passenger side. To stop the parking procedure, grab the steering wheel or press the control again. **Note:** Park Assist does not replace the need

to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

ADJUSTABLE HEAD RESTRAINTS

Your vehicle's head restraints can be adjusted to suit your needs. Simply pull up or down on the head restraint to select the desired position. You may also be able to tilt the head restraint forward or backward for additional comfort.

IMPROVED FUEL ECONOMY WHILE COASTING OR DECELERATING

Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This

may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

SOS POST-CRASH ALERT SYSTEM™

This system provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or on your remote transmitter.

CONSOLE REFRIGERATOR/FREEZER (if equipped)

Your vehicle may be equipped with a refrigerator/freezer located in the second row console.

To access, flip the console lid forward and then lift off the cover. (Ensure that you replace the cover after you are done as it helps maintain a consistent cooling temperature.)

TO USE THE SYSTEM AS A REFRIGERATOR:

Press the COOL side of the control. The indicator light will illuminate when the refrigerator is active. In this mode, the system will cool to approximately 41° F (5° C). Press COOL again to turn off the refrigerator mode or press FREEZE to change to freezer mode. **Note:** The system will only work when the vehicle's ignition is on.

TO USE THE SYSTEM AS A FREEZER:

Press the FREEZE side of the control. The indicator light will illuminate when the freezer is active. The system will cool to approximately 23° F (-5° C). Press FREEZE again to turn off the freezer or COOL to switch to refrigerator mode.



LINCOLN • MKT QUICK REFERENCE GUIDE

