



# LINCOLN MKX

2009 QUICK REFERENCE GUIDE

This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you

begin learning about your new vehicle and refer to the appropriate sections when questions arise. All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the

best source for the most current information. For detailed operating and safety information, please refer to your Owner's Guide. Ford Motor Company, Customer Relationship Center, P.O. Box 6248, Dearborn, MI 48121 1-800-392-3673 (FORD), (TDD for the hearing impaired: 1-800-232-5952)



AUGUST 2008  
FIRST PRINTING  
QUICK REFERENCE GUIDE  
MKX  
LITHO IN U.S.A.

9A1J 19G217 AA

## ESSENTIAL INFORMATION

### Fuel Type and Tank Capacity

Front wheel drive vehicles have a fuel tank capacity of 19.2 gallons (72.7 L) while All Wheel drive vehicles have a fuel tank capacity of 20.8 gallons (78.7L). Your vehicle is designed to use "Regular" unleaded gasoline with an octane rating of 87. Do not use gasoline labeled as "Regular" in high altitude areas that are sold with Octane ratings less than 87. Do not use E85 fuels that are blended with a maximum of 85% ethanol.

### Location of Spare Tire

If you get a flat tire while driving, do not apply the brake heavily. Instead, gradually decrease your speed. Hold the steering wheel firmly and slowly move to a safe place on the side of the road. Your spare tire and tools are located in the rear cargo area of the vehicle, under the carpeted floor panel. The temporary spare is designed for emergency use only and should be replaced as soon as possible. For complete details on how to change your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.

### Fuses

If the vehicle's electrical components are not operating, a fuse may have blown. For fusing information, refer to the Roadside Emergencies chapter of your Owner's Guide.

### Tire Pressure

Your tire pressure is properly set at the dealership according to the recommended specifications found on the Safety

Compliance Certification Label or Tire Label located on the on the B-Pillar or the edge of the driver's door. Check your tire pressure at least once a month and before long trips (including spare). As an added safety feature, your vehicle is equipped with a Tire Pressure Monitoring System (TPMS) that illuminates a low tire pressure warning light when one or more of your tires is significantly under-inflated. Improperly inflated tires can affect vehicle handling and can fail suddenly, possibly resulting in loss of vehicle control. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

### Fuel Pump Shut-Off Switch

The fuel pump shut-off switch stops the electric fuel pump from sending fuel to your engine when your vehicle has sustained a substantial jolt. The switch is located behind the panel on the left side of the cargo area. For more information regarding the fuel pump shut-off switch, refer to the Roadside Emergencies chapter of your Owner's Guide.

### S.O.S. Post Crash Alert System

Your vehicle is equipped with the S.O.S. Post Crash Alert system. This system provides audible and visual alarms in the event of a crash which causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate the system, press the hazard flasher control, or you can press on your remote transmitter.

### Roadside Assistance

Your new Lincoln MKX comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006. For more information on coverage period and details of service, refer to your roadside assistance information.

### All Wheel Drive (AWD, if equipped)

Your vehicle may be equipped with All Wheel Drive (AWD). The AWD system is always active and uses all four wheels to power the vehicle. This increases traction, enabling you to drive over terrain and road conditions that a conventional two-wheel drive vehicle cannot. Refer to your Owner's Guide for more information. **Note:** If your vehicle is equipped with AWD, a spare tire of a different size (other than the tire provided) should never be used. Using a different size could cause the AWD system to stop functioning and default to front wheel drive. Your vehicle is not intended for off-road use.

## SEATING CONTROLS

### 1 2nd Row Fold Flat Seatback

To fold down the rear seat, pull up on the lever on the outboard side of the seat cushion and let the seatback rotate downward into the load floor position. To return to the upright position, rotate the seatback upward until the seatback latches. The seatback will click when it is locked into position.

### 2 2nd Row Seat Recline

To adjust the second row seatback to the desired position, while seated, pull the release lever up and push the seatback rearward.

### 2 2nd Row EasyFold™ Seatback Release (if equipped)

The control buttons are located on the left-hand rear quarter trim panel (accessible from the liftgate area). Press and hold the control to lower the seat. The top portion lowers the right (40%) seatback, and the bottom portion lowers the left (60%) seatback.

### 3 Front Heated and Cooled Seats

To activate these functions, press the buttons located on the climate control panel. Press once for full heat or once for full cool (three lights), twice for medium heat or medium cool (two lights) and a third time for low heat or low cool (one light).

### 4 Rear Heated Seats (if equipped)

The rear seat heat controls are located on the rear door panels. To operate the heated seats, push the top of the control for maximum heat, bottom of the control for minimum heat. Push again to deactivate.



## ADDITIONAL FEATURES

### HomeLink® Wireless Control System

 


Located on the driver's visor, the HomeLink® Wireless Control System is a convenient way to replace up to three hand-held transmitters with a single built-in device. This system learns the radio frequency codes of most transmitters to operate garage doors, entry gates, security systems, entry door locks, and home or office lighting. Refer to your Owner's Guide for more information, including programming instructions.

### Panoramic Vista Roof™ with Dual Power Sunshades (if equipped)

The panoramic Vista Roof™ and power sunshade are equipped with an automatic one-touch, express opening feature. To open, press and release . The front and rear sunshades will open simultaneously. Press again and the panoramic Vista Roof will open to the 'comfort' position. Press once more for the roof to fully open.

### Integrated Keyhead Transmitter (IKT) and Remote Entry System Features




Your vehicle comes equipped with two specially programmed Integrated Keyhead Transmitters (IKTs). IKTs are both a programmed ignition key and a remote keyless entry transmitter. Handle the IKT carefully when starting the car to avoid accidentally pressing any of the remote entry buttons. Press once to unlock the driver's door. The interior lamps will illuminate.

You can open your front windows and vent the Vista Roof™ (if equipped)

simultaneously using your Integrated Keyhead Transmitter (IKT). Press and hold until the two front windows and panoramic roof begin to open. If any other remote entry transmitter control is pressed during the opening operation, both windows and the panoramic roof will stop opening.

### Keyless Entry Keypad

 

You can use the keyless entry keypad to lock or unlock the doors without a key. To unlock the driver's door, enter your five digit factory code (available on the owner's wallet card in the glove box or from your authorized dealer.) To unlock all doors, enter your five digit factory code and, within five seconds, press 3-4.

To lock all doors, simply press 7-8 and 9-0 at the same time (you do not need to enter your factory code first). Refer to your Owner's Guide for more information.

### Integrated Keyhead Transmitter (IKT) and Remote Entry System Features



Your vehicle comes equipped with two specially programmed Integrated Keyhead Transmitters (IKTs). IKTs are both a programmed ignition key and a remote keyless entry transmitter. Handle the IKT carefully when starting the car to avoid accidentally pressing any of the remote entry buttons. Press once to unlock the driver's door. The interior lamps will illuminate.

Press twice to unlock all the doors.

Press once to lock all the doors and activate the perimeter alarm system.

Press twice to confirm all the doors and liftgate are closed. The horn will chirp and the turn signal lamps will flash once if all the doors and the liftgate are closed.

Press to activate the panic alarm. The horn will sound and the turn lamps will flash. Press again or turn the ignition on to deactivate the panic alarm.

 
Press twice within three seconds to activate the car finder. The horn will chirp and the turn lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm.

Press (if equipped) twice to open the power liftgate (if equipped).

Ensure that you keep the IKT adhesive security label in a safe place for future reference.

Replacement Integrated Keyhead Transmitters are only available through an authorized dealer.

### Auxiliary Input Jack



Your vehicle is equipped with an Auxiliary Input Jack located inside the console bin. This allows you to plug and play auxiliary audio devices, including MP3 players. Press AUX repeatedly on your audio system to access. When LINE IN appears in the display, plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.

### Memory Feature


The memory feature enables your vehicle to 'remember' the position of your seats and mirrors. To activate, set your seat and mirrors to the desired position. Press and hold either 1 or 2 on the driver's door until two tones are heard. Then, within three seconds, press on your Integrated Keyhead transmitter (IKT). Another tone will sound when the activation is complete. Now when you press on your IKT, the seats and mirrors will automatically move to the desired position.

### Reverse Sensing System

Your vehicle is equipped with a reverse sensing system which can warn you if there is a large object behind the vehicle that may be too low for you to see. The system will sound a warning tone that increases in frequency as the object gets closer and will sound continuously when the object is less than 10 inches away. Refer to your Owner's Guide for more information.

### Power Liftgate

To open the power liftgate, press on the instrument panel, or press twice within three seconds on your remote entry transmitter, or press and release the control button located on the liftgate.

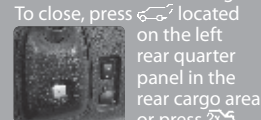


To close, press on the left rear quarter panel in the rear cargo area or press twice on your remote entry transmitter. Keep clear of the liftgate when operating the rear switch. Your power liftgate is equipped with an obstacle detection feature which will either stop or revert to a full open position when it encounters a solid object. For complete information, please refer to your Owner's Guide.

### SYNC®

Your vehicle is equipped with SYNC® - a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC® Supplement or to the SYNC® section in the Navigation Supplement. Please also feel free to visit [www.SyncMyRide.com](http://www.SyncMyRide.com).

### Ambient Lighting (if equipped)

Your vehicle may be equipped with an ambient lighting feature. The control is located on the center console and, when activated, illuminates footwells, storage

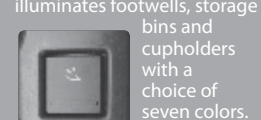

bins and cupholders with a choice of seven colors. Ambient lighting is operational when the ignition is on or in the accessory position. Press the control repeatedly to turn on, cycle through your color choices, and turn off.

### Overdrive Control/Cancel with Grade Assist

Drive with the vehicle in Overdrive (D) for the best fuel economy. You can deactivate overdrive by pressing the transmission control switch on the side of the shift handle. Your vehicle is equipped with a special Grade Assist feature which is automatically activated when overdrive is turned off. Grade assist helps to provide optimal gear selection and additional engine braking on hilly terrain. It is recommended that you return to O/D (Overdrive) once you return to flat terrain. To return to overdrive, simply press the transmission control switch again.

### USB Port


Your vehicle is equipped with a USB port inside the center console. This feature allows you to plug in media playing devices, memory sticks, and also to charge devices if they support this feature. For more information, please refer to Accessing and Using your USB port in the SYNC® supplement or the Navigation system supplement.



# LINCOLN MKX

2009 QUICK REFERENCE GUIDE

## INSTRUMENT PANEL

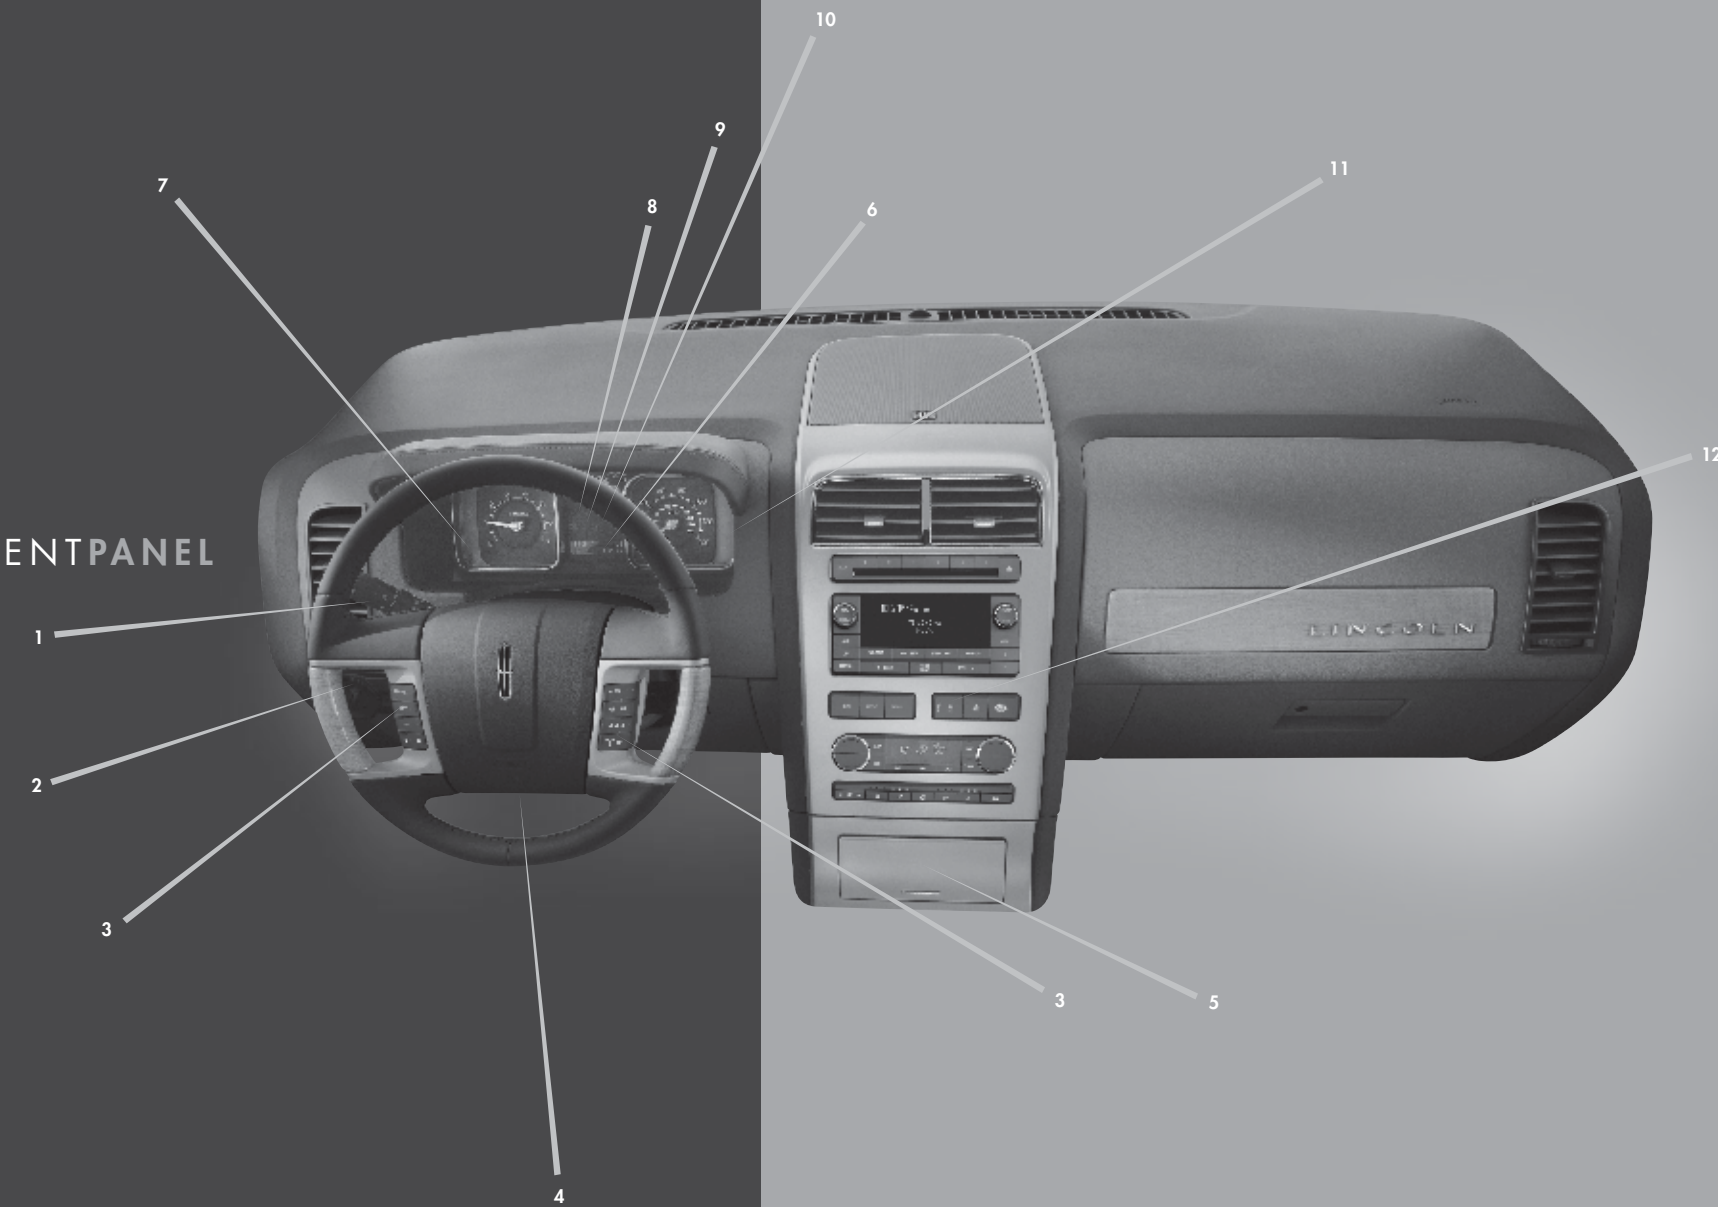

### 1 Multi-function Lever

Rotate the end of the control up to increase the speed of the wipers and rotate down to decrease the speed of the wipers. Briefly press the end of the stalk for a single swipe of the wipers without washer fluid. A quick push and hold results in three swipes with washer fluid while a longer push and hold activates the wash pattern for up to five seconds. For better visibility, your vehicle will also automatically turn on your headlights if your windshield wipers and auto lamps are on. To operate your rear window wiper, turn the rear wiper control to 1 (intermittent speed), 2 (normal speed), or 0 (off). For a rear wash cycle, turn the rear wiper control to the position.

### 2 Headlamps, Fog Lamps and Panel Dimmer Control

Turn the control one position to the right to turn on the parking lamps, instrument panel lamps, license plate lamps and tail lamps. Turn the control to the second position on the right to turn on the headlamps. Turn the control one position to the left to activate the autolamp feature, which automatically turns the exterior lamps on and off, based on available daylight. Pull the control towards you to activate the fog lamps (if equipped). (The fog lamps will not operate when the headlamps are turned off or when the high beams are on). Use the panel dimmer control to adjust the level of brightness on the instrument panel during parking lamp and headlamp operation. Move the control to the full right position, past the detent, to turn on the interior lamps.

### 3 Steering Wheel Controls

The appearance and functionality of your vehicle's steering wheel controls may vary

according to your option package. Refer to your Owner's Guide for a complete description of all possible options. To set the speed control, press and release **ON**. Accelerate to the desired speed. Press and release the **SET +** or **SET -** control. Take your foot off the accelerator pedal. The speed control indicator light will illuminate in the cluster. To set a higher speed: press and hold **SET +** until the desired speed is reached, or briefly press **SET +** to increase the speed by small amounts. To set a lower speed: press and hold **SET -** until the desired speed is reached, or briefly press **SET -** to decrease the speed by small amounts. Press **RESUME** to return to the previously set speed. To turn speed control off, depress the brake pedal or press **OFF**.

Press **- VOL +** to decrease/increase the volume. Press to access the previous/next preset radio station, CD track or preset satellite radio channel. Press to activate the Voice recognition system. Refer to your SYNC<sup>®</sup> or Navigation supplement (if equipped) for more information. Press **MEDIA** repeatedly to scroll through all possible media sources (AM, FM1, FM2, CD ...etc.). Press to answer a call if equipped with SYNC<sup>®</sup>. Press and hold to end a call. Refer to your SYNC<sup>®</sup> supplement for more information.

### 4 Tilt/Telescopic Steering Wheel Lever

Pull the lever down to unlock the steering column. Move the steering wheel to the desired position. While holding the steering wheel in place, pull the lever up to lock the steering column.

### 5 Auxiliary Power Points

Your vehicle is equipped with four auxiliary power points. One on the instrument panel, one in the center console utility compartment, one on the back of the center console and a rear auxiliary power point located on the left rear quarter panel. Do not use power points over the capacity of 12VDC/180W.

### 6 Message Center

The message center displays important vehicle information through a constant monitoring of vehicle systems. The system will also notify you of potential vehicle problems with a display of system warnings followed by long indicator chime. Refer to your Owner's Guide for more information.

### 7 Powertrain Malfunction/Reduced Power Light

This light illuminates when a powertrain or an AWD malfunction has been detected. Contact an authorized dealer as soon as possible.

### 8 Service Engine Soon Light

This light illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

### 9 Airbag Readiness Light

The airbag readiness light illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer as soon as possible. A chime will also sound if a malfunction in the supplemental restraint system is detected.

### 10 ABS Warning Light

The ABS light illuminates briefly when the ignition is turned on. If the ABS light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible. Normal braking (less ABS) is still functional unless the brake warning light is also illuminated.

### 11 Check Fuel Cap Light

This light illuminates when the fuel cap may not be properly installed. When you are able, check to ensure that the cap is properly closed. If you continue to drive with this light illuminated, it may cause the service engine soon light to illuminate also.

### 12 AdvanceTrac<sup>®</sup> with Roll Stability Control<sup>™</sup> Stability Enhancement System

Your vehicle is equipped with an AdvanceTrac<sup>®</sup> stability system. This system focuses on three main areas: Traction Control<sup>™</sup> (which helps avoid wheel spin and loss of traction), Electronic Stability Control (which helps avoid skids or lateral slides), and Roll Stability Control<sup>™</sup> (which helps avoid a vehicle roll-over). These features work together to help you to maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck in the snow, mud or sand, try turning off the AdvanceTrac<sup>®</sup> system to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control will illuminate when turned off. Refer to your Owner's Guide for safety information and more details.

### 13 Text/Scan

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

### 14 Seek

Press to access the previous/next strong station or CD track.

### 15 Shuffle

Press to play all tracks on the current CD/MP3 disc in random order.

### 16 AUX

Press repeatedly to cycle through SAT1, SAT2, SAT3 (satellite radio mode if equipped), LINE IN (auxiliary audio mode) or SYNC<sup>®</sup>.

### 17 On/Off/Volume

Press to turn on/off. Turn to increase/decrease volume.

### 18 Load

Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 19 Play/Pause

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media.

### 20 Menu

The following is a list of some of the Menu features. Press repeatedly to cycle through:

### 21 Tune

Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder or satellite radio channel (if equipped).

### Navigation System (if equipped)

Your vehicle may be equipped with a Mobile Media Navigation system which allows you to record CDs, listen to your saved music and play DVDs in addition to navigating the vehicle. SIRIUS Travel Link<sup>®</sup> is an extra subscription feature, which, if activated, allows you to locate the best gas prices, find movie listings, get current traffic alerts, access the current weather map, get accurate ski conditions and access scores to current sports games. **Note:** Some features are unavailable while driving. Refer to your Navigation supplement for more information.

## CLIMATE SYSTEM

Dual Automatic Temperature Control (DATC) System with Heated and Cooled Seats (if equipped)

### 1 Auto

Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air based on your temperature selection.

### 2 Driver/Passenger Temperature Controls

Press to increase or decrease the temperature on the driver or passenger side of the vehicle. Pressing the passenger side control will activate dual zone where the driver and passenger are able to select their own individual settings. If the passenger side controls are not activated, the driver side controls will determine the temperature setting for the entire vehicle (single zone).

### 3 Off

Outside air is shut out and the fan will not operate.

### 4 A/C

Press to activate/deactivate air conditioning. For a MAX A/C setting, press A/C, and set the temperature to 60°F (16°C) and the highest blower setting.

### 5 Driver/Passenger Cooled Seats

Press to activate. Press once for full cool (three lights), twice for medium cool (two lights) and a third time (one light) for low cool. Press again to deactivate (no lights).

### 6 Driver/Passenger Heated Seats

Press to activate. Press once for full heat (three lights), twice for medium heat (two lights) and a third time (one light) for low heat. Press again to deactivate (no lights).

### 7 EXT

Press to display the outside air temperature. Press again to return to interior temperature.

### 8 Manual Override Controls

Allows you to manually determine where airflow is directed (floor vents, instrument panel vents, rear seat floor vents or a combination). To return to fully automatic control, press AUTO.

### 9 Recirculation Control

Press to recirculate cabin air. Recirculated air may reduce the amount of time to cool down the interior of the vehicle and may also help reduce undesired odors from reaching the interior of the vehicle.

### 10 Dual

Press to activate dual zone mode where the driver and passenger have control of their individual temperature settings. Press again to return to single zone where the driver's settings will determine the temperature for the entire vehicle.

### 11 Rear Window Defroster

Press to clear the rear window of thin ice and fog. Press again to deactivate. The defroster will turn off automatically after 10 minutes.

### 12 Defrost

Distributes outside air through the windshield defroster and vents to clear fog or thin ice from the windshield.

## AUDIOSYSTEM

AM/FM In-Dash Six CD/MP3 Satellite Compatible Sound System

### 14 SEEK

Press to access the previous/next strong station or CD track.

### 15 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

### 16 AUX

Press repeatedly to cycle through SAT1, SAT2, SAT3 (satellite radio mode if equipped), LINE IN (auxiliary audio mode) or SYNC<sup>®</sup>.

### 17 ON/OFF/VOLUME

Press to turn on/off. Turn to increase/decrease volume.

### 18 LOAD

Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 19 PLAY/PAUSE

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media.

### 20 MENU

The following is a list of some of the Menu features. Press repeatedly to cycle through:

### THX<sup>®</sup> II (if equipped)

The THX<sup>®</sup> II certified premium audio system creates optimal acoustic quality for all seating positions and road conditions. The system offers an advanced speaker system, amplifiers, subwoofer and equalization.

### 13 TEXT/SCAN

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

### 14 SEEK

Press to access the previous/next strong station or CD track.

### 15 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

### 16 AUX

Press repeatedly to cycle through SAT1, SAT2, SAT3 (satellite radio mode if equipped), LINE IN (auxiliary audio mode) or SYNC<sup>®</sup>.

### 17 ON/OFF/VOLUME

Press to turn on/off. Turn to increase/decrease volume.

### 18 LOAD

Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 19 PLAY/PAUSE

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media.

### 20 MENU

The following is a list of some of the Menu features. Press repeatedly to cycle through:

### 21 TUNE

Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder or satellite radio channel (if equipped).

### Navigation System (if equipped)

Your vehicle may be equipped with a Mobile Media Navigation system which allows you to record CDs, listen to your saved music and play DVDs in addition to navigating the vehicle. SIRIUS Travel Link<sup>®</sup> is an extra subscription feature, which, if activated, allows you to locate the best gas prices, find movie listings, get current traffic alerts, access the current weather map, get accurate ski conditions and access scores to current sports games. **Note:** Some features are unavailable while driving. Refer to your Navigation supplement for more information.

the satellite radio menu. Press / to cycle through the following options: Category, Save Song, Delete Song, Delete All Songs and Enable Alerts/Disable Alerts. SIRIUS Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS satellite radio channels, visit [www.sirius.com](http://www.sirius.com) in the United States, [www.sirius-canada.ca](http://www.sirius-canada.ca) in Canada, or call SIRIUS at 1-888-539-7474.

**17 ON/OFF/VOLUME**  
Press to turn on/off. Turn to increase/decrease volume.

**18 LOAD**  
Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

**19 PLAY/PAUSE**  
In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media.

**20 MENU**  
The following is a list of some of the Menu features. Press repeatedly to cycle through:

**Setting the clock** – Press MENU until SET HOURS, SET MINUTES and SET AM/FM is displayed. Press / to adjust.

**Autoset** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the / buttons to turn on/off. When the

satellite radio menu. Press / to cycle through the following options: Category, Save Song, Delete Song, Delete All Songs and Enable Alerts/Disable Alerts. SIRIUS Satellite Radio is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS satellite radio channels, visit [www.sirius.com](http://www.sirius.com) in the United States, [www.sirius-canada.ca](http://www.sirius-canada.ca) in Canada, or call SIRIUS at 1-888-539-7474.

**Occupancy mode** – Use the / buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.

**Speed sensitive volume** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.

**21 TUNE**  
Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder or satellite radio channel (if equipped).

six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.

**Occupancy mode** – Use the / buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.

**Speed sensitive volume** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.

**21 TUNE**  
Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder or satellite radio channel (if equipped).

**Navigation System (if equipped)**  
Your vehicle may be equipped with a Mobile Media Navigation system which allows you to record CDs, listen to your saved music and play DVDs in addition to navigating the vehicle. SIRIUS Travel Link<sup>®</sup> is an extra subscription feature, which, if activated, allows you to locate the best gas prices, find movie listings, get current traffic alerts, access the current weather map, get accurate ski conditions and access scores to current sports games. **Note:** Some features are unavailable while driving. Refer to your Navigation supplement for more information.