

### POWER TILT/TELESCOPE STEERING WHEEL COLUMN (if equipped):

Your power steering wheel column has a four-way rocker control which allows you to telescope the wheel towards or away from you as well as tilt it up or down.

### LOW TIRE PRESSURE WARNING (!):

Illuminates when your tire pressure is low. If the light remains on, the tire pressure should be checked. If the light does not turn on at ignition or begins to flash, contact your authorized dealer as soon as possible.

### MULTIFUNCTION DISPLAY:

Displays information such as the fuel gauge, tachometer, engine coolant temperature, the odometer and trip meter as well as the Information menu, Settings menu and the System check. Use the OK and arrow buttons on the left side of your steering wheel to scroll through various menu options and make selections.

### AIRBAG READINESS

Illuminates briefly when the ignition is turned on. If this light fails to illuminate, remains on or continues to flash after the engine is started, contact your authorized dealer for service as soon as possible. A chime will also sound if there is a malfunction in the indicator light.

### INFOTAINMENT DISPLAY:

Use the OK and arrow buttons on the right side of your steering wheel to scroll through available modes of Entertainment, Phone, Navigation (if equipped) and Climate. You can also perform other functions such as answering a call, setting the driver side temperature and more. Refer to your MyLincoln Touch™ supplement for more information.

### SERVICE ENGINE SOON

Illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the on-board diagnostics system (OBD-II) has detected a malfunction. Drive in a moderate fashion and contact your authorized dealer as soon as possible.

### PUSH BUTTON START:

Allows you to start your vehicle without a key by pressing the ENGINE START/STOP button while pressing the brake pedal, provided your intelligent access key (IA) is inside the vehicle. If necessary, you can also start your car by inserting the IA key into the slot with

the buttons facing out and the key ring up. Then, press the ENGINE START/STOP button and brake pedal to start your vehicle as usual. You can remove the IA key from the backup slot once the vehicle is started, if desired.

### HAZARD CONTROL

### SPEED CONTROLS (if equipped):

To set the speed:  
1. Press ON.  
2. Accelerate to the desired speed.  
3. Push the SET button up and take your foot off the accelerator.  
• To set a higher speed, press and hold the SET button up or press SET up repeatedly until the desired speed is reached.

• To set a lower speed, press and hold the SET button down or press SET down repeatedly until the desired speed is reached.  
• To return to a previously set speed, press RES.  
• To turn off, push the OFF button down or turn the ignition off.

### ADAPTIVE CRUISE CONTROL (if equipped):

Allows you to set a 'gap distance' between yourself and the vehicle in front of you in the same lane when your cruise control is active. Press GAP up or down to select from four available gap distances. The selected gap distance will appear in the message center as a graphic display. Once you select the desired gap distance, the vehicle speed will adjust automatically to maintain a preset gap distance.  
**Note:** Driving aids do not replace the need to watch where the vehicle is moving and brake where necessary. Refer to your Owner's Guide for safety information, more detail and limitations.

### COLLISION WARNING SYSTEM (if equipped):

Uses a radar sensor to detect if vehicles ahead of you which are moving in the same direction may be a collision risk. The system will alert you with an audible chime and red warning light which will appear above the dash. If the risk of collision increases, the system will increase brake support to help reduce collision speed. The collision warning system is active at speeds above approximately 5 mph (8 km/h). For more information on activating and deactivating the system, refer to *Message center* in the *Instrument Cluster* chapter. For more information on the collision warning system and limitations, refer to *Collision warning system* in the *Driving* chapter of your Owner's Guide.

### AUDIO CONTROLS:

**VOL:** Press up/down to increase/decrease volume levels.  
**SEEK:** Press up/down to access the next/previous radio station preset, CD track or preset satellite radio channel (if equipped).  
☞: Press to access voice recognition.  
☞: Press to access SYNC® phone features.

### VOLUME AND FAN SPEED:

To adjust, lightly slide your finger over the rear slider area.

## COMFORT

### SELECTSHIFT AUTOMATIC™ TRANSMISSION:

Your selectshift automatic™ transmission gives you the ability to manually change gears. To use, move the gearshift lever from D (Drive) to M (Manual). Then, simply press the + or - buttons on the gearshift toggle. Press + to upshift and - to downshift.

### RAIN SENSING WIPERS (if equipped):

These wipers automatically activate when moisture is present on the windshield and the control is set to any setting except off. The wiper speed will vary based on the amount of moisture detected on the windshield as well as the current interval setting. Ensure that the control is turned to off prior to entering a car wash.

### HEATED AND COOLED FRONT SEATS:

To access, press the lower right corner (blue area) on the touchscreen. For heated front seats, press ☞ repeatedly to cycle through the various settings and off. For cooled front seats, press ☞ repeatedly to cycle through the various settings and off.

### HEATED STEERING WHEEL (if equipped):

Your vehicle may be equipped with a heated steering wheel. To access, press the lower right corner of the touchscreen (blue area). If available the icon ☞ will appear in the touchscreen. Press to activate. **Note:** The wood trim will not heat between the 10 and 2 o'clock positions.

## COMFORT

### SELECTSHIFT AUTOMATIC™ TRANSMISSION:

Your selectshift automatic™ transmission gives you the ability to manually change gears. To use, move the gearshift lever from D (Drive) to M (Manual). Then, simply press the + or - buttons on the gearshift toggle. Press + to upshift and - to downshift.

### RAIN SENSING WIPERS (if equipped):

These wipers automatically activate when moisture is present on the windshield and the control is set to any setting except off. The wiper speed will vary based on the amount of moisture detected on the windshield as well as the current interval setting. Ensure that the control is turned to off prior to entering a car wash.

### HEATED AND COOLED FRONT SEATS:

To access, press the lower right corner (blue area) on the touchscreen. For heated front seats, press ☞ repeatedly to cycle through the various settings and off. For cooled front seats, press ☞ repeatedly to cycle through the various settings and off.

### HEATED STEERING WHEEL (if equipped):

Your vehicle may be equipped with a heated steering wheel. To access, press the lower right corner of the touchscreen (blue area). If available the icon ☞ will appear in the touchscreen. Press to activate. **Note:** The wood trim will not heat between the 10 and 2 o'clock positions.

### PANORAMIC VISTA ROOF™ AND POWER SUNSHADES (if equipped):

Your panoramic Vista Roof™ and power sunshades are equipped with an automatic one-touch, express opening feature. To stop motion at any time, simply press the control again.

- To open, press the ☞ button. The front and rear sunshades will open, then the roof will open to the first position. Press again to fully open.
- To close, pull the ☞ button towards you. The glass panel will stop at the first position. Pull again and hold to fully close the glass panel and the sunshades.
- To vent from a closed position, press the TILT button.
- To close from a venting position, pull the TILT button towards you.

### REMOTE START:

Remote start allows you to start the engine from outside the vehicle. To use, press ☞ and then press ☞ twice within three seconds. When you are ready to leave, simply push the ENGINE START/STOP button while applying the brake. To turn the engine off using remote start, press ☞ once. The parking lamps will turn off. Refer to Remote start in your Locks and Security chapter for more information.

## FUNCTION

### REARVIEW CAMERA (if equipped):

This system provides a visual display of the area behind the vehicle. The display automatically appears in the touchscreen when the vehicle is in R (Reverse) and uses colors (green, yellow and red) to alert you of your proximity to objects. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

### BLIND SPOT INFORMATION SYSTEM (BLIS®) WITH CROSS TRAFFIC ALERT (CTA), (if equipped):

BLIS® uses radar sensors to help you determine if a vehicle may be in your blind spot zone when driving on roads and freeways. The CTA feature alerts you if a car is coming towards you when you are backing out of a parking space. BLIS® and CTA will display a yellow indicator light ☞ in your exterior mirrors and the CTA will also sound tones and display messages to warn you which direction vehicles are approaching. Refer to the Driving chapter in your Owner's Guide for more information.

### REVERSE SENSING SYSTEM:

This system sounds a warning tone if there is an obstacle near the vehicle's rear bumper when the vehicle is in R (Reverse) and is traveling less than 3 mph (5 km/h). The warning tone will increase in frequency as the object gets closer and then will sound continuously when the object is less than 10 inches away. **Note:** Visibility aids do not replace the need

to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

**MYKEY™:** Allows you to program certain driving restrictions on any standard key in order to promote good driving habits. When MyKey™ is programmed:

- Belt-Minder® cannot be disabled and a chime will sound continuously and the audio will be muted until the safety belt is buckled.
- Audible and visual low fuel warnings can be set.
- Certain features cannot be turned off such as blind spot information system (BLIS®) with cross traffic Alert (CTA).
- Audio volume can be limited
- Vehicle speed can be limited
- Audible and visual speed warnings can be configured at preselected speeds
- AdvanceTrac® cannot be programmed off

For complete information, refer to *MyKey™* in the *Locks and Security* chapter in your Owner's Guide.

### BLIND SPOT MIRRORS (if equipped):

Blind spot mirrors have an integrated convex spotter mirror built into the upper corner on the outside mirrors. They are designed to help you see a vehicle that may be in your blind spot. As a vehicle approaches, its image will transition from the large mirror to the smaller convex spotter mirror. For more information, refer to your Owner's Guide.



## INSTRUMENT PANEL



This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your passengers. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate sections when questions arise.

All information contained in this Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Ford dealer is the best source for the most current information. For detailed operating and safety information, please consult your Owner's Guide.

Ford Motor Company, Customer Relationship Center, P.O. Box 6248, Dearborn, MI 48121  
1-800-392-3673 (FORD), (TDD for the hearing impaired: 1-800-232-5952)

www.lincolnowner.com  
www.ford.ca



Lincoln MKX  
November 2010  
Second Printing  
Quick Reference Guide  
Litho in USA



BA1J 19G217 AA



**MYLINCOLN TOUCH™:**  
Your MyLincoln Touch™ system uses a four corner strategy and dynamic menu listings to provide quick access to features and settings.

1. Press this area to access SYNC® phone features such as pairing and using your cellular phone.
2. Press MENU to access settings for: Clock, Sound, Display, Vehicle and Help.
3. Press this area to access the navigation features (if equipped).  
**Note:** If your vehicle is not equipped with navigation, the *i* button will be here instead.
4. Press this area to access your Climate control touchscreen features.
5. Press to access your home screen. Press again to select from three pop-up choices.
6. Press *i* to access settings for SYNC® Services (Traffic, Directions and Information), SYNC® Apps (911 Assist™ and Vehicle Health Report), SIRIUS® Travel Link™ (if equipped), Calendar and Notifications.

7. Press this area to access your media features such as radio, SIRIUS, USB, etc.

**Setting the clock:**  
Press Menu > Clock. Press +/- to increase/decrease the time.

**For a list of available voice commands:**  
Press Menu > Help > Voice command list.

**To access SYNC® features such as 911 Assist™ and Vehicle Health Report:**  
Press *i* > SYNC Apps.

**To access your wallpaper settings:**  
Press Menu > Display > Edit Wallpaper.

**To access your ambient light settings:**  
Press Menu > Vehicle > Ambient lighting.

## CONVENIENCE



### INTELLIGENT ACCESS:

Your intelligent access system allows you to unlock/lock the vehicle door(s) or liftgate and start the car without using a key (provided your intelligent access key is within approximately three feet). To perform these tasks, simply have the key within range (in your pocket or purse, for example) and:

- To unlock the front doors, simply pull on the front exterior door handle.
- To lock the doors, press the lock area on the door (black button on chrome or the small bump on the painted door handles).
- To unlock the liftgate, press the exterior liftgate release button on top of the liftgate pull-cup handle.
- To start the car, press the ENGINE START/STOP button while applying the brake pedal.

The intelligent access key also contains a mechanical key blade which can be used to unlock the driver door if necessary. Simply slide the release on the back of the transmitter and pull the key blade out.



To put QR Tags to work for you, use your mobile phone's browser or App store link to download a QR Tag reader, like the free one at [gettag.mobi](http://gettag.mobi), or text TAG to 4FORD. Then follow the directions to scan the TAG and see your vehicle's features come to life.

<http://film.ownersonmobile.com/mkx/2011>

### SECURICODE™ KEYLESS ENTRY SYSTEM:

Allows you to lock or unlock the doors without using a key. Ensure that you have your five digit factory code located on your owner's wallet card in the glove box.

- To unlock the driver's door, enter your five digit factory code.
- To unlock all doors, enter your five digit factory code and, within five seconds, press 3-4.
- To lock all vehicle doors, press 7-8 and 9-0 at the same time with the driver's door closed. You do not need to enter your factory code first.

### SYNC® VOICE RECOGNITION SYSTEM:

Your vehicle has an advanced voice recognition system. This system allows you to perform many functions in your vehicle simply by speaking certain commands to the system. Press to begin a voice session. The system will prompt you for a command. You can say, "Help" or "What can I say?" and the system will audibly give you a list of possible voice commands. You can also press Menu > Help > Voice command list for a visual list on the touchscreen, or you can refer to your MyLincoln Touch™ supplement.

### SIRIUS® SATELLITE RADIO

broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS® satellite radio channels, visit [www.sirius.com](http://www.sirius.com) in the United States, [www.sirius-canada.ca](http://www.sirius-canada.ca) in Canada, or call SIRIUS at 1-888-539-7474. To access, press the lower left corner (red area) of your touchscreen and then select the SIRIUS tab. **Note:** Satellite radio is only available with a valid SIRIUS® radio subscription.

### HD RADIO™ (if equipped)

is the digital evolution of analog radio. Your MyLincoln Touch™ system has a special receiver which allows it to receive digital broadcasts (where available) in addition to the analog broadcasts it already receives. Digital broadcasts provide a better sound quality than analog broadcasts with free, crystal clear audio and no static or distortion. Press the lower left corner (red area) of your touchscreen to access. Then, press AM/FM > Options > HD Radio > On. For more information, refer to your MyLincoln Touch™ supplement or visit [www.hdradio.com](http://www.hdradio.com).

## ESSENTIAL INFORMATION

### ROADSIDE ASSISTANCE:

Your new Lincoln MKX comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006.

### SOS POST-CRASH ALERT SYSTEM™:

Provides audible and visual alarms when a crash causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate, press the hazard flasher control, or on your remote transmitter.

### FUEL TANK CAPACITY/FUEL INFO:

All wheel drive vehicles have a 19.2 gallon (72.7L) fuel tank capacity and front wheel drive vehicles have a 18.3 gallon (69.3L) fuel tank capacity. Use only "Regular" unleaded gasoline with an octane rating of 87. Do not use E85 fuels because your vehicle was not designed to run on fuels with more than 10% ethanol.

### EASY FUEL™ SYSTEM:

With this system, you simply open the fuel filler door, insert the nozzle and begin fueling.

It is self-sealing and therefore protected against dust, dirt, water, snow and ice. Wait five seconds from the time the refueling nozzle is shut-off until the nozzle is pulled back out of the fill pipe to allow residual fuel in the nozzle to drain into the tank. To use a portable fuel container, slowly insert the fuel funnel (located in the spare tire compartment), and pour the fuel into the funnel. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. **Do not** use aftermarket funnels as they will not work with the Easy Fuel™ system and may cause damage.

### LOCATION OF SPARE TIRE AND TOOLS:

Your spare tire and tools are located beneath the carpeted floor panel in the rear of your vehicle. The spare tire is designed for emergency use only and should be replaced as soon as possible. For complete details on changing your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.

### REAR WINDOW BUFFETING:

When one or both of your rear windows are open, you may hear a wind throb or buffeting noise. To alleviate this, simply lower a front window approximately 2-3 inches (5-8 cm).

## 2011 QUICK REFERENCE GUIDE

LINCOLN MKX

