

This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Lincoln Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information.

For detailed operating and safety information, please refer to your Owner's Guide.

May 2009  
First Printing  
Quick Reference Guide

LINCOLN  
Lincoln Navigator  
Litho in U.S.A.

This vehicle handles differently from an ordinary passenger car in driving conditions which may occur on streets and highways and off-road. DRIVE WITH CARE AND WEAR A SAFETY BELT AT ALL TIMES. Lincoln urges you to read the Owner's Guide and Driving Your SUV or Truck Supplement for further information on safe driving precautions and instructions.

Ford Motor Company Customer Relationship Center  
P.O. Box 6248  
Dearborn, MI 48121  
1-800-392-3673 (FORD)  
(TDD for the hearing impaired: 1-800-232-5952)



AL7J 19G217 AA

## ADDITIONAL INFORMATION

### INTEGRATED KEYHEAD TRANSMITTER (IKT) REMOTE ENTRY SYSTEM FEATURES –

- Press once to lock all doors. Press again to confirm all doors are closed.
- Press once to unlock the driver's door. Press again within three seconds to unlock all doors.
- Press to activate the panic alarm. Press again or turn the ignition on to deactivate.
- Press twice within three seconds to open the liftgate.
- Car finder: Press twice within three seconds to locate your vehicle. The horn will chirp and the turn lamps will flash.

**SECURICODE™ KEYLESS ENTRY SYSTEM** – The keyless entry keypad allows you to lock or unlock all doors and the liftgate without using a key. Simply enter your five digit program and press 3+4 within five seconds to unlock all doors and the liftgate. Press 5+6 to open the liftgate glass. To lock all doors and the liftgate, press 7+8 and 9+0 at the same time. **Note:** You do not have to enter your five digit code first.


 
**MyKey™** – Allows you to program certain driving restrictions on any standard key in order to promote good driving habits. When MyKey™ is programmed:

- Belt-Minder® cannot be disabled and the audio system will be muted until the safety belt is buckled.
- Early low fuel warnings are displayed.
- Audio volume can be limited.
- Vehicle speed can be limited.
- Audible and visual speed warnings can be configured at preselected speeds.
- AdvanceTrac® cannot be programmed off.

For complete information, refer to MyKey™ in the Locks and Security chapter in your Owner's Guide.

**REARVIEW CAMERA** – Your vehicle is equipped with a rearview camera system located on the liftgate (Figure A) which provides a visual display of the area behind the vehicle. The display will automatically appear on the navigation system screen (if equipped) or in the rearview mirror (Figure B) whenever the vehicle is in Reverse (R) and uses colors (green, yellow and red) to alert you of your proximity to objects. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail and limitations.

**SOS POST-CRASH ALERT SYSTEM™** – The SOS Post-Crash Alert System™ provides audible and visual alarms in the event of a crash which causes the deployment of airbags or the activation of the safety belt pretensioners. The turn signals will flash and the horn will sound. To deactivate the system, press the hazard flasher control, or you can press on your remote transmitter.

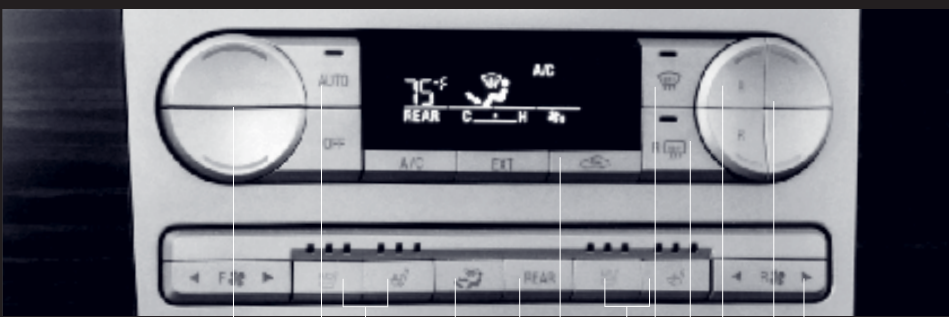

## CLIMATE CONTROL

**DUAL AUTOMATIC TEMPERATURE CONTROL WITH HEATED AND COOLED SEATS AND REAR PASSENGER COMPARTMENT CLIMATE CONTROL (IF EQUIPPED)**

### 1. DRIVER/PASSENGER TEMPERATURE CONTROLS

- Press to increase or decrease the temperature on the driver or passenger side of the vehicle. Pressing the passenger side control will activate dual zone where the driver and passenger are able to select their own individual settings. If the passenger side controls are not activated, the driver side controls will determine the temperature setting for the entire vehicle (single zone).

**2. AUTO** - Press to activate automatic temperature control. The system will automatically determine fan speed, airflow location, A/C (on or off) and outside or recirculated air, to heat or cool the vehicle to reach the desired temperature. Press again to deactivate.

**3. HEATED AND COOLED DRIVER AND PASSENGER SEATS** - Press once to activate high heat/cool (three indicator lights), twice to activate medium heat/cool (two indicator lights), three times to activate low heat/cool (one indicator light) or press again to turn off.

**4. AIRFLOW DIRECTION CONTROL**  - Press repeatedly to cycle through all possible air distribution modes. Refer to your Owner's Guide for more information.

**5. REAR** - Press to enable the auxiliary climate system (if equipped). Press again to disable.

**6. RECIRCULATED AIR**  - Press to recirculate the cabin air. Recirculated air may reduce the amount of time needed to cool down the interior of the vehicle and may also help reduce undesirable odors from reaching the interior of the vehicle.

**7. DEFROST**  - Distributes outside air through the windshield defroster and demister vents to clear thin ice or fog from the windshield.

**8. REAR WINDOW DEFROSTER**  - Press to activate and clear the rear window and side heated mirrors (if equipped) of thin ice and fog. Press again to deactivate. The defroster will turn off automatically after 10 minutes.

 
**9. REAR TEMPERATURE CONTROL** - Press to enable the auxiliary climate system (if equipped) as well as increase/decrease the desired rear cabin temperature.

**10. REAR FAN SPEED CONTROL** - Press to enable the auxiliary climate system (if equipped) as well as to increase/decrease the fan speed for the rear cabin.


## SEATING

**IMPORTANT:** Before folding the second row seats, ensure that the head restraints are fully flipped down by pulling on the strap and that all items have been removed from the floor and off the seats.

**ENTERING THE THIRD ROW** – Fold head restraint forward. Pull up on the lever (**Lever 1**) located on the side of either outboard second row seat until the seatback folds forward to the cushion (**Pos. 2**). Pull the lever fully upward (**Lever 1**). The seat will then flip forward (**Pos. 3**).



**EXITING THE THIRD ROW** – Fold head restraint forward. Pull up on the strap located at the back of the second row seat by the outboard side shield (**Pull Strap**). The seatback will fold forward onto the seat cushion. Continue pulling up on the pull strap and the seat will flip forward. **To return the seat to the upright position**, push the seat down until it is latched to the floor strikers. Then, lift the seatback to the upright position and flip the head restraint to the upright position.

 

**FOLDING THE OUTBOARD SEATBACKS TO A LOAD FLOOR POSITION** – (REFER TO IMPORTANT NOTE ABOVE)

Lift the lever (**Lever 1**) located on the outboard side of the seat cushion. Pull the lever (**Lever 2**) to release the seat into the kneel-down floor position. A moderate force may be required to move the seat forward and down.



**RETURNING THE SEATS TO THE UPRIGHT POSITION FROM THE FULLY-LOWERED FLOOR POSITION** – Lift and pull the seat rearward until the latch is fully-engaged. Lift up on the seatback until a click is heard, locking it into the upright position.



## ESSENTIAL INFORMATION

**EASY FUEL™ 'NO CAP' FUEL SYSTEM** – Your vehicle has a 'no cap' fuel system which allows you to simply open the fuel filler door, insert the nozzle and start fueling. Wait five seconds from the time the refueling nozzle is shut off until the nozzle is pulled back out of the fill pipe tube to allow residual fuel in the nozzle to drain into the tank. The Easy Fuel™ System is self-sealing and therefore protected against dust, dirt, water, snow and ice. If you need to fill your fuel tank with a portable fuel container, use the fuel funnel which is attached to the underside of the spare tire cover or is included with the tire changing tools. Slowly insert the funnel into the Easy Fuel™ system and fill the tank with fuel from the container. When done, clean the funnel or properly dispose of it. Extra funnels can be purchased from your authorized dealer. **Do not** use aftermarket funnels as they will not work with the Easy Fuel™ system and may cause damage.

**TIRE PRESSURE** – Your tire pressure is properly set at the dealership according to the recommended specifications found on the Safety Compliance Certification Label or Tire Label located on the B-Pillar or the edge of the driver's door. Check your tire pressure at least once a month and before long trips (including the spare). As an added safety feature, your vehicle has been equipped with a **Tire Pressure Monitoring System (TPMS)** that illuminates a low tire pressure warning light () when one or more of your tires is significantly under-inflated. Refer to the Tires, Wheels and Loading chapter in your Owner's Guide for more information.

**LOCATION OF SPARE TIRE** – Your vehicle is equipped with a temporary spare tire located under the vehicle, just forward of the rear bumper. The temporary spare is designed for emergency use only and should be replaced as soon as possible. The jack and tools are located in the access panel on the floor behind the 3rd row seat. Ensure that you turn off the deployable running boards (if equipped) as well as the air suspension system (if equipped) prior to jacking, hoisting or towing your vehicle. For complete details on how to change your tire, refer to the Roadside Emergencies chapter in your Owner's Guide.


**FUEL PUMP SHUT-OFF SWITCH** – After a collision, if the engine cranks but does not start, the fuel pump shut-off switch may have to be reset. The switch is located on the left rear quarter trim panel, near the liftgate, behind an access panel. For complete details on resetting the switch, please consult your Owner's Guide.

**FUEL TYPE AND FUEL TANK CAPACITY** – Depending on your vehicle, your fuel tank has a capacity of either 28 gallons (106L) or 33.5 gallons (126.8L). You have a **Flex Fuel** Vehicle. Flex Fuel vehicles have a yellow ring around the top of the fuel filler inlet (tube) and can use either Regular unleaded fuel, E85 Ethanol Fuel or any mixture of the two.

**IMPROVED FUEL ECONOMY WHILE COASTING OR DECELERATING** – Your vehicle has been designed to improve fuel economy by reducing fuel usage while coasting or decelerating. This may be perceived as a light to medium braking sensation when removing your foot from the accelerator pedal.

**ROADSIDE ASSISTANCE** – Your new Lincoln Navigator comes with the assurance and support of 24-hour emergency roadside assistance. Roadside assistance includes such services as: lockout assistance, limited fuel delivery, battery jump starts, changing a flat tire, towing, and winch out. To receive roadside assistance in the United States, call 1 (800) 241-3673. In Canada, call 1 (800) 665-2006. For more information on coverage period and details of service, refer to your roadside assistance information.

2010  
**LINCOLN**

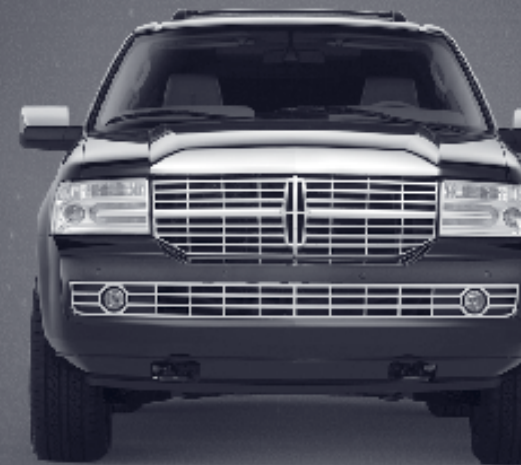

**NAVIGATOR**

QUICK REFERENCE GUIDE



LINCOLN  
Reach Higher  
lincoln.com

Use extreme caution with any device or feature that may take your attention off the road. Your primary concern is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.



## COCKPIT

### 1. HEADLAMPS CONTROLS:

○: Turns the headlamps off.  
 ☞: Turns on the parking lamps.  
 ☞: Turns on the headlamps.  
 ☞: Autolamps: Automatically turns the exterior lamps on/off based on available daylight.

☞: Turns on fog lamps by pulling the control towards you.  
**2. POWER ADJUSTABLE FOOT PEDALS:** Press the top of the control ▲ to move the pedals closer to you or the bottom of the control ▼ to move the pedals further away from you. The pedals should only

be adjusted when the vehicle is stopped and in Park (P).  
**3. PARKING BRAKE**  
**4. MULTI-FUNCTION LEVER:** Rotate the end of the control up/down to increase/decrease the speed of the wipers. Push the end of the stalk:  
 • quickly for a single swipe without fluid.

• and hold briefly for three swipes with washer fluid.  
 • and hold for a longer wash cycle.  
**Rain sensing wipers (if equipped):** These wipers automatically activate when moisture is present on the windshield and the control is set to any setting except OFF.

The wiper speed will vary based on the amount of moisture detected on the windshield as well as the current interval setting. Ensure that the control is turned to OFF prior to entering a car wash.  
**To operate your rear window wiper,** turn the rear wiper control to 1

(intermittent speed), 2 (normal speed) or O (off). For a rear wash cycle, rotate and hold the rear wiper control to either ☞ position.  
**Note:** For optimal wiper performance, clean your blades and glass regularly. Refer to your Owner's Guide for more information.

**5. HOOD RELEASE**  
**6. SPEED CONTROL:** To set the speed:  
 1. Press ON.  
 2. Accelerate to the desired speed.  
 3. Press SET + and take your foot off the accelerator.  
 • To set a higher speed, press and hold SET + or press SET + repeatedly until the desired

speed is reached.  
 • To set a lower speed, press and hold SET - or press SET - repeatedly until the desired speed is reached.  
 • To return to a previously set speed, press RESUME.  
 • To turn off, press the brake pedal or press OFF.

**7. MESSAGE CENTER:** The message center displays important vehicle information through a constant monitor of vehicle systems. The system will notify you of potential vehicle problems by displaying system warnings followed by a long indicator chime. For more information about your message center functions, please consult your Owner's Guide.

**8. ABS WARNING LIGHT (☞):** The ABS light illuminates briefly when the ignition is turned on. If the ABS light remains on or continues to flash, a malfunction has been detected. Contact your authorized dealer as soon as possible. Normal braking (less ABS) is still functional unless the brake warning light ☞ is also illuminated.

**9. SERVICE ENGINE SOON LIGHT:** The service engine soon

light ☞ illuminates briefly when the ignition is turned on. If it remains on or is blinking after the engine is started, the On Board Diagnostics System (OBD-II) has detected a malfunction.  
 Drive in a moderate fashion and contact your authorized dealer as soon as possible.

**10. FRONT HEATED AND COOLED SEATS:** Press once to activate the high heat/cool setting (three indicator lights), twice for medium heat/cool (two indicator lights), three times for low heat/cool (one indicator light) and again to turn off.

**11. OVERDRIVE CONTROL WITH TOW HAUL FEATURE:** The Tow Haul feature improves transmission operation when towing a trailer or a heavy load. To activate Tow Haul, press the button on the side of the gearshift lever. The

TOW HAUL indicator light will illuminate in the instrument cluster. To deactivate, press the button. Drive with the vehicle in Overdrive (D) with Tow Haul off for the best fuel economy. Refer to your Owner's Guide for more information.

**12. CONTROL TRAC FOUR-WHEEL DRIVE (4X4) OPERATION (if equipped):** 4X2 (2WD) delivers power to the rear wheels only. This is appropriate for normal on-road driving on dry pavement.  
**4X4 AUTO** provides electronic control four-wheel drive with power delivered to all four wheels, as required, for increased traction. The message center will display "4X4 AUTO" when this position is selected. This mode is appropriate for all on-road driving conditions, such as dry road surfaces, wet pavement, snow, and gravel.  
**4X4** provides electronically locked four-wheel drive power to all four wheels. The message center will display "4X4" when this position is selected. This position is not recommended for use on dry pavement. This position is only intended for severe winter or off-road

conditions, such as deep snow, ice or shallow sand.  
 Refer to your Owner's Guide for more information including shifting instructions.  
**13. ADVANCETRAC® WITH ROLL STABILITY CONTROL™ (RSC®) STABILITY ENHANCEMENT SYSTEM (if equipped):** The AdvanceTrac® stability system helps you to maintain stability and steerability of your vehicle during a variety of road conditions. If your vehicle becomes stuck in the snow, mud or sand, try turning off the AdvanceTrac® system to allow wheel spin and help increase momentum to dig the vehicle out. The system defaults to on and the control will illuminate when turned off. Refer to your Owner's Guide for safety information and more details.  
**TRAILER SWAY CONTROL (if equipped):** This control uses the vehicle's AdvanceTrac® system to detect and help reduce trailer sway by applying brake force at individual wheels and, if necessary, reducing engine power. If this happens, TRAILER SWAY REDUCE SPEED will display in the instrument cluster with the AdvanceTrac® icon ☞. For more information, please refer to your Owner's Guide.

**14. HAZARD FLASHER CONTROL**  
**15. REAR WINDOW DEFROSTER:** Press to clear the rear window of fog and thin ice. Press again to turn off.  
**16. POWER LIFTGATE:** Press ☞ to open the power liftgate. You can also press ☞ twice within three seconds on your remote entry transmitter, or press and release the control button located on the liftgate (figure A). To close, press ☞ located on the left rear quarter panel in the rear cargo area or press ☞ twice on your remote entry transmitter. Keep clear of the liftgate when operating the rear switch. To open the liftgate window, push the button to the left side of the tailgate above the license plate (figure B). Your power liftgate is equipped with an obstacle detection feature which will either stop or revert to a full open position when it encounters a solid object. For complete information, please refer to your Owner's Guide.

**FORWARD AND REVERSE SENSING**  
 Your vehicle is equipped with forward and reverse sensing systems which may warn you if there is an object in front of or behind the vehicle. The system will sound a warning tone that increases in frequency as the object gets closer and will sound continuously when the object is less than 10 inches away. **Note:** Visibility aids do not replace the need to watch where the vehicle is moving. Refer to your Owner's Guide for safety information, more detail, and limitations.

**17. AUDIO**  
**AM/FM IN-DASH SIX CD/MP3 SATELLITE COMPATIBLE SOUND SYSTEM**  
**THX® II** – The THX® II certified premium audio system creates optimal acoustic quality for all seating positions and road conditions. The system offers an advanced speaker system, amplifiers, subwoofer and equalization.  
**1 LOAD** – Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.  
**2 On/Off/VOLUME** – Press to turn on/off. Turn to increase/decrease volume.  
**SATELLITE RADIO CONTROLS:**  
**3 AUX** – Press repeatedly to cycle through FES/DVD (if equipped), SYNC®, SAT1, SAT2, SAT3 (satellite radio mode, if activated) or LINE IN (auxiliary audio mode).  
 Press MENU when satellite radio mode is active to access. Press OK to enter into the SATELLITE RADIO MENU. Press ▲/▼ to cycle through the following options: Category, Save Song, Delete Song, Delete All Songs and Enable Alerts/Disable Alerts.  
**8 MENU** – Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.  
**9 TUNE** – Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.  
**AUXILIARY INPUT JACK** – Your vehicle is equipped with an Auxiliary Input Jack located

inside the console bin. This allows you to plug and play auxiliary audio devices. Press AUX repeatedly on your audio system to access. When LINE IN appears in the display, plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.  
**SYNC®** – Your vehicle is equipped with SYNC® – a hands-free communications and entertainment system with special phone and media features. For more information, please refer to the SYNC® Supplement or to the SYNC® section in the Navigation Supplement. Please also feel free to visit [www.SyncMyRide.com](http://www.SyncMyRide.com).  
**USB PORT** – Your vehicle is equipped with SYNC® and you have a USB port inside your center console. This feature allows you to plug in media playing devices, memory sticks, and also charge devices if they support this feature. Refer to your SYNC® supplement or the SYNC® section in your Navigation supplement for more information.  
**NAVIGATION SYSTEM (if equipped)** – Please refer to the Navigation Supplement for more detailed information.

**18. NAVIGATION SYSTEM (if equipped):** The navigation system provides turn-by-turn directions and traffic information. For more information, please refer to the Navigation Supplement.

**19. SYNC®**  
**20. SYNC® Supplement**  
**21. SYNC® section in the Navigation Supplement**

**22. SYNC® section in the Navigation Supplement**

**23. SYNC® section in the Navigation Supplement**

**24. SYNC® section in the Navigation Supplement**



## AUDIO



### AM/FM IN-DASH SIX CD/MP3 SATELLITE COMPATIBLE SOUND SYSTEM

#### THX® II

The THX® II certified premium audio system creates optimal acoustic quality for all seating positions and road conditions. The system offers an advanced speaker system, amplifiers, subwoofer and equalization.

#### 1 LOAD

Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

#### 2 On/Off/VOLUME

Press to turn on/off. Turn to increase/decrease volume.

#### SATELLITE RADIO CONTROLS:

#### 3 AUX

Press repeatedly to cycle through FES/DVD (if equipped), SYNC®, SAT1, SAT2, SAT3 (satellite radio mode, if activated) or LINE IN (auxiliary audio mode).

### SIRIUS® Satellite Radio

is a subscription based satellite radio service that broadcasts music, sports, news and entertainment programming. For more information and a complete list of SIRIUS® satellite radio channels, visit [www.sirius.com](http://www.sirius.com) in the United States, [www.sirius-canada.ca](http://www.sirius-canada.ca) in Canada, or call SIRIUS® at 1-888-539-7474.

#### Satellite radio is available only with a valid SIRIUS® radio subscription. Check with your authorized dealer for availability.

#### 4 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

#### 5 SEEK

Press to access the previous/next strong station, CD track or satellite radio channel.

#### 6 TEXT/SCAN

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

#### 7 PLAY/PAUSE/OK

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media. **OK** – Use in various menu selections.

### 8 MENU

Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.  
**9 TUNE** – Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.  
**AUXILIARY INPUT JACK** – Your vehicle is equipped with an Auxiliary Input Jack located

### 9 TUNE

Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.

### 10 AUX

Press repeatedly to cycle through FES/DVD (if equipped), SYNC®, SAT1, SAT2, SAT3 (satellite radio mode, if activated) or LINE IN (auxiliary audio mode).

### 11 MENU

Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.  
**9 TUNE** – Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.  
**AUXILIARY INPUT JACK** – Your vehicle is equipped with an Auxiliary Input Jack located

### 12 LOAD

Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 13 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

### 14 SEEK

Press to access the previous/next strong station, CD track or satellite radio channel.

### 15 TEXT/SCAN

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

### 16 PLAY/PAUSE/OK

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media. **OK** – Use in various menu selections.

### 17 MENU

Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.  
**9 TUNE** – Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.  
**AUXILIARY INPUT JACK** – Your vehicle is equipped with an Auxiliary Input Jack located

### 18 LOAD

Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 19 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

### 20 SEEK

Press to access the previous/next strong station, CD track or satellite radio channel.

### 21 TEXT/SCAN

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

### 22 PLAY/PAUSE/OK

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media. **OK** – Use in various menu selections.

### 23 MENU

Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.  
**9 TUNE** – Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.  
**AUXILIARY INPUT JACK** – Your vehicle is equipped with an Auxiliary Input Jack located

### 24 LOAD

Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 25 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

### 26 SEEK

Press to access the previous/next strong station, CD track or satellite radio channel.

### 27 TEXT/SCAN

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

### 28 PLAY/PAUSE/OK

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media. **OK** – Use in various menu selections.

### 29 MENU

Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.  
**9 TUNE** – Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.  
**AUXILIARY INPUT JACK** – Your vehicle is equipped with an Auxiliary Input Jack located

### 30 LOAD

Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 31 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

### 32 SEEK

Press to access the previous/next strong station, CD track or satellite radio channel.

### 33 TEXT/SCAN

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

### 34 PLAY/PAUSE/OK

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media. **OK** – Use in various menu selections.

### 35 MENU

Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.  
**9 TUNE** – Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.  
**AUXILIARY INPUT JACK** – Your vehicle is equipped with an Auxiliary Input Jack located

### 36 LOAD

Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 37 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

### 38 SEEK

Press to access the previous/next strong station, CD track or satellite radio channel.

### 39 TEXT/SCAN

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

### 40 PLAY/PAUSE/OK

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media. **OK** – Use in various menu selections.

### 41 MENU

Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.  
**9 TUNE** – Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.  
**AUXILIARY INPUT JACK** – Your vehicle is equipped with an Auxiliary Input Jack located

### 42 LOAD

Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 43 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

### 44 SEEK

Press to access the previous/next strong station, CD track or satellite radio channel.

### 45 TEXT/SCAN

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

### 46 PLAY/PAUSE/OK

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media. **OK** – Use in various menu selections.

### 47 MENU

Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.  
**9 TUNE** – Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.  
**AUXILIARY INPUT JACK** – Your vehicle is equipped with an Auxiliary Input Jack located

### 48 LOAD

Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

### 49 SHUFFLE

Press to play all tracks on the current CD/MP3 disc in random order.

### 50 SEEK

Press to access the previous/next strong station, CD track or satellite radio channel.

### 51 TEXT/SCAN

In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

### 52 PLAY/PAUSE/OK

In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media. **OK** – Use in various menu selections.

### 53 MENU

Press menu repeatedly to cycle through the following features among others:  
**AUTOSET** – Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.  
**OCCUPANCY MODE** – Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.  
**SPEED SENSITIVE VOLUME** – Radio volume automatically changes slightly with vehicle speed to compensate