

ADDITIONAL INFORMATION

This Quick Reference Guide is not intended to replace your vehicle Owner's Guide which contains more detailed information concerning the features of your vehicle, as well as important safety warnings designed to help reduce the risk of injury to you and your occupants. Please read your entire Owner's Guide carefully as you begin learning about your new vehicle and refer to the appropriate chapters when questions arise.

All information contained in this Lincoln Quick Reference Guide was accurate at the time of duplication. We reserve the right to change features, operation and/or functionality of any vehicle specification at any time. Your Lincoln dealer is the best source for the most current information.

For detailed operating and safety information, please refer to your Owner's Guide.

October 2007
Second Printing
Quick Reference Guide



This vehicle handles differently from an ordinary passenger car in driving conditions which may occur on streets and highways and off-road. DRIVE WITH CARE AND WEAR A SAFETY BELT AT ALL TIMES. Lincoln urges you to read the Owners' Guide and Driving Your SUV or Truck Supplement for further information on safe driving precautions and instructions.

Ford Motor Company Customer Relationship Center
P.O. Box 6248
Dearborn, MI 48121
1-800-392-3673 (FORD)
(TDD for the hearing impaired: 1-800-232-5952)



8L7J 19G217 AB

REMOTE ENTRY SYSTEM – Press control **B** once to unlock the driver's door and twice to unlock all doors and liftgate. Press control **A** once to lock all doors and liftgate. Pressing the control a second time within three seconds will flash the park/turn signal lamps and will cause the horn to chirp to confirm that all the doors and liftgate are closed and locked. If a door is still ajar, your vehicle will chirp twice. Press control **C** to unlatch the liftgate window. Press control **D** (if equipped) twice to automatically fully unlatch and open the liftgate, or automatically close the liftgate. Press control **E** to sound the panic alarm. To silence, press the control again, or turn the ignition ON.



CAR FINDER – Press control **A** twice within 3 seconds. The horn will chirp and the turn lamps will flash. It is recommended that this method be used to locate your vehicle, rather than using the panic alarm.

KEYLESS ENTRY SYSTEM – With this control you can lock or unlock all doors and the liftgate without using a key. First, enter your five-digit program code and then press the corresponding quick key: **Unlock All Doors and Liftgate:** Press 3-4 within 5 seconds. **Lock All Doors and Liftgate:** Press buttons 7-8 and 9-0 simultaneously.

 


ADVANCETRAC® WITH RSC STABILITY ENHANCEMENT SYSTEM – The AdvanceTrac® with Roll Stability Control™ (RSC) system provides stability enhancement features for certain driving situations when driver assistance is needed. It helps your vehicle maintain traction when driving on slippery and/or hilly road surfaces. If your vehicle should become stuck, try switching the system off by momentarily pressing and holding the AdvanceTrac® with RSC button on the instrument panel. Remember to switch the AdvanceTrac® with RSC system back on once the vehicle is no longer stuck.

MESSAGE CENTER – With the ignition in the ON position, the message center displays important vehicle information through a constant monitor of vehicle systems. The system will notify you of potential vehicle problems by displaying system warnings followed by a long indicator chime. You may select the INFO button on the message center to display trip odometer, odometer, compass, distance to empty, average fuel economy and trip elapsed drive time. The RESET button may be used to reset selected functions in the INFO and SETUP menus. For more information about your message center functions, please consult your Owner's Guide.



REVERSE CAMERA SYSTEM – The reverse camera system (**Figure A**) provides a video image of the area behind the vehicle. The reverse camera system will automatically provide an image in the rear view mirror (**Figure B**), when the vehicle is placed in R (Reverse) gear. This image will continue to be displayed on the mirror for a few seconds, once the vehicle has been shifted out of R (Reverse) gear.



Note: The reverse camera system is a reverse aid supplement device that still requires the driver to use it in conjunction with the rear view and side view mirrors for maximum coverage. For complete details on the reverse camera system, please consult your Owner's Guide.

TIRE PRESSURE MONITORING SYSTEM – This system monitors tire pressure on all road tires and provides the driver with a yellow warning light when one or more of your tires is significantly under-inflated. Message center equipped vehicles provide additional warning messages. The TPMS warning light will reset itself (turn off) after the tires are inflated to the proper pressure and the vehicle is driven above 20 mph (32 km / h) for at least 2 minutes.

SEATING


SECOND ROW SEATS

IMPORTANT: Before folding the second row seats, ensure that the head restraints are fully flipped down by pulling on the strap and that all items have been removed from the floor and off the seats.

ENTERING THE THIRD ROW SEAT – Fold head restraint forward (**Pos. 1**). Pull up on the lever (**Lever 1**) located on the side of either outboard second row seat until the seatback folds forward to the cushion (**Pos. 2**). Pull lever fully upward (**Lever 1**). The seat will then flip forward (**Pos. 3**).



EXITING THE THIRD ROW SEAT – Fold head restraint forward (**Pos. 4**). Pull up on the strap located at the back of the second row seat by the outboard side shield (**Pull Strap**). The seatback will fold forward to the cushion (**Pos. 5**). Continue pulling up on the pull strap and the seat will flip forward (**Pos. 6**). To return the seat to the upright position, push the seat down until it is latched to the floor strikers. Then, lift the seatback to the upright position and flip the head restraint to the upright position.

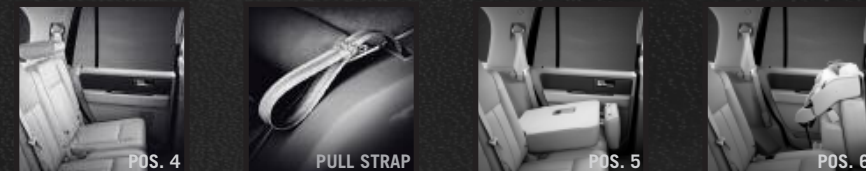

FOLDING THE OUTBOARD SEATBACKS TO A LOAD FLOOR POSITION – (REFER TO IMPORTANT NOTE ABOVE)

To fold the seats to a load floor position, lift the lever (**Lever 1**) located on the outboard side of the seat to release the seatback. To lower the seat further to the fully-lowered position for maximum cargo capacity, locate (**Lever 2**) on the seatback. Pulling the lever releases the seat into the kneel-down floor position. A moderate force may be required to move the seat forward and down.



RETURNING THE SEATS TO THE UPRIGHT POSITION FROM THE FULLY-LOWERED FLOOR POSITION – The seatback cannot be returned to the upright position until the seat is returned from the kneel-down position. To return the seat from the kneel-down position, lift and pull the seat rearward until the latch is fully-engaged. Do not attempt to unlatch the rear floor hooks while the seat is in the kneel-down position. With the seatback in the folded down position, lift up on the seatback until a click is heard, locking it into the upright position.




FOLDING THE 20% MIDDLE SEAT (if equipped) TO A LOAD FLOOR POSITION – To fold the seat, pull the lever (**Lever 3**) located on the seatback to release the folding seat latch. With the latch released, the seatback can be lowered into the load floor position. A moderate force may be required to move the seat forward and down.



RETURNING THE 20% MIDDLE SEAT TO THE UPRIGHT POSITION FROM THE FULLY-LOWERED FLOOR POSITION – To return the seat to the upright position, lift and pull the seatback until the seat latch is fully engaged.

POWER LIFTGATE OPERATION – To open the power liftgate, push the button on the instrument panel (**Figure A**), press on your five-button key fob, or press and release the control button located on the liftgate (**Figure B**). The power system will take over when you release the button. To close the liftgate, press and release the control located in the left rear quarter panel (**Figure C**) or press on your five-button key fob. Keep clear of the liftgate when operating the rear switch. To unlatch the liftgate window, push the button (**Figure D**) on the left side of the liftgate above the license plate or press on your five-button key fob. Do not open the liftgate or the liftgate window in a garage or other enclosed area with a low ceiling. To close, make certain the rear window is closed, and then pull down the liftgate a few inches to activate power closing.

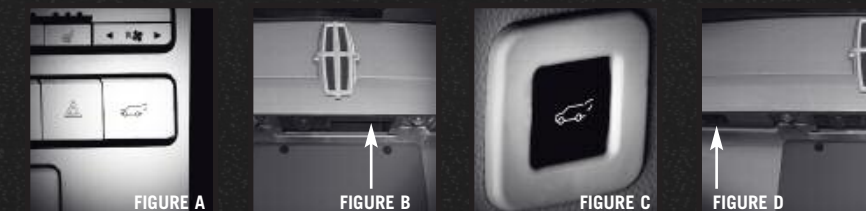

ESSENTIAL INFORMATION

FUEL TANK CAPACITY – Your vehicle's fuel tank can accommodate 28 gallons (106L) of gasoline. (Navigator L accommodates 33.5 gallons (126.8 L) of gasoline.) Your vehicle is designed to use "Regular" unleaded gasoline with pump (R+M)/2 octane rating of 87. The use of gasoline with lower octane ratings may degrade performance.

TIRE PRESSURE – Your tire pressure is properly set at the dealership according to the recommended specifications found on the Safety Compliance Certification Label or Tire Label located on the driver's door latch pillar or the edge of the driver's door. The tire pressure should be checked at least once a month or before long trips using an accurate tire gauge. Please see "Additional Features" on reverse side for information on the TPMS. **Warning:** Improperly inflated tires can affect vehicle handling and tire performance.

FUSES – If electrical components in the vehicle are not working, a fuse may have blown. For more information about changing a fuse, please consult your Owner's Guide.

FUEL PUMP SHUT-OFF SWITCH – After a collision, if the engine cranks but does not start, the fuel pump shut-off switch may have to be reset. The switch is located in the left rear quarter trim panel, near the liftgate, behind an access panel. For complete details on resetting the switch, please consult your Owner's Guide.

CHANGING THE TIRES – If you get a flat tire while driving, do not apply the brake heavily. Instead, gradually decrease your speed. Hold the steering wheel firmly and slowly move to a safe place on the side of the road. Prior to jacking, hoisting or towing your vehicle, be sure to turn OFF the running boards (if equipped), and the optional rear load leveling suspension. Your vehicle may be equipped with a conventional spare tire that is different in one or more of the following: type, brand, size, speed rating and tread design. Your vehicle may be equipped with a spare wheel that may not match the road wheels and is not equipped with a Tire Pressure Monitor System (TPMS) sensor.

LOCATION OF THE SPARE TIRE AND TOOLS – The spare tire is located under the vehicle, just forward of the rear bumper. The Jack Tools and Jacking Instructions reside under the access panel, located in the floor compartment behind the rear seat.

ROADSIDE EMERGENCIES – To fully assist if you should have a vehicle concern, Lincoln offers a complimentary roadside assistance program. This program is separate from the New Vehicle Limited Warranty. The service is available 24 hours a day, seven days a week for the New Vehicle Limited Warranty period (U.S.) or Basic Warranty period (Canada). Roadside assistance will cover changing a flat tire, jump-starts, limited fuel delivery, lockout assistance, winch out and towing of your vehicle.

ROADSIDE ASSISTANCE CENTERS
United States: (800) 521-4140 | Canada: (800) 665-2006

For complete details on any roadside assistance concern, consult the Roadside Emergencies chapter or the Customer Assistance chapter in your Owner's Guide.

2008

LINCOLN




NAVIGATOR

QUICK REFERENCE GUIDE



LINCOLN
Reach Higher
lincoln.com

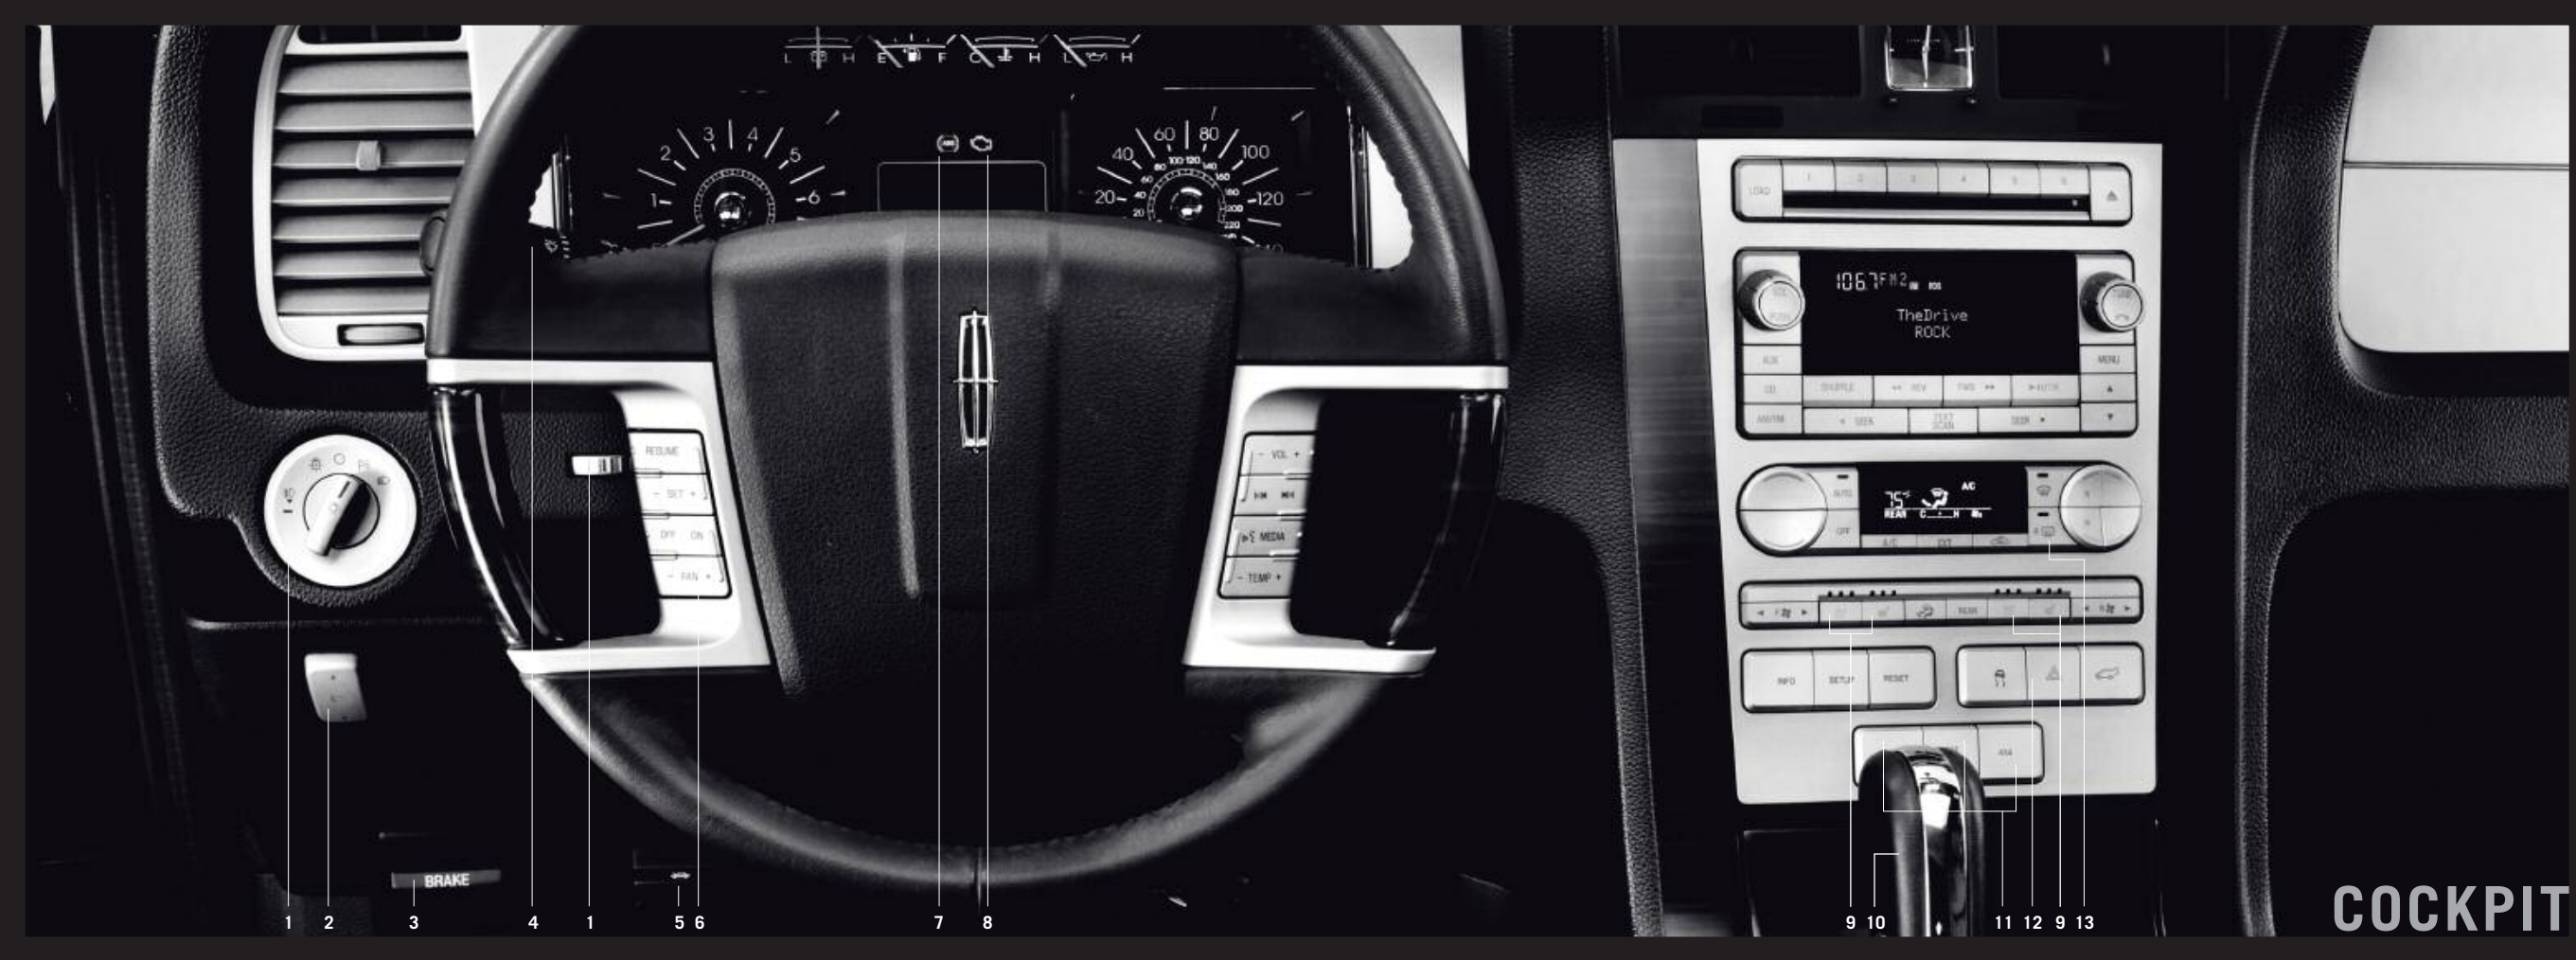

COCKPIT

1. HEADLAMP AND PANEL DIMMER CONTROL: Rotate clockwise one position from off to turn on the parking lamps. Rotate two positions from off to also turn on the headlamps. Rotate counterclockwise to activate the autolamp, which provides light sensitive automatic

on-off control of the exterior lights and keeps them on for a short period of time after the ignition is turned OFF. When the control is in any position except high beams or off, pull the control toward you to activate the foglamps. Use the panel dimmer control, located to the

right of the headlamp control, to adjust the brightness of the instrument panel

during headlamp and parklamp operation. Rotate to the full right position to turn on the interior lamps.

2. POWER ADJUSTABLE FOOT PEDALS: Press and hold the rocker control to adjust the accelerator and brake pedal toward you or away from you.

3. PARKING BRAKE: To set the parking brake, press the parking brake pedal down until the pedal stops. The BRAKE warning lamp in the

instrument cluster will illuminate (when the ignition is turned ON) until the parking brake is released. Pull the release lever to release the parking brake. Driving with the parking brake on will cause the brakes to wear out quickly and reduce fuel economy.

4. WIPER / WASHER CONTROL: For front wiper operation, rotate the end of the control away from you to increase the speed and toward you to decrease the speed. When the wiper control is on, the speed dependent feature automatically adjusts the wipers as



the vehicle's speed changes. Push in the end of the stalk briefly for a single wipe (no

wash). Push in and hold to activate the washer and wipers. The inner ring on the right operates the rear window wiper. Rotate the control to 1 (intermittent operation) or 2 (normal speed).

5. HOOD RELEASE: Pull the hood release handle. Next, release the auxiliary latch located under the front center of the hood. Lift the hood until the lift cylinders hold it open.

6. SPEED CONTROL: To operate, the speed control must be ON. To set a speed, press SET +. Once the system is engaged, an



icon will illuminate. To set a higher speed, press SET + again. To set a lower speed, icon will illuminate.

press SET -. Pressing RESUME will return to a previously set speed. To disengage the speed control without erasing the previously programmed set speed, depress the brake pedal. To turn the speed control off, press the OFF button or turn off the ignition.

7. ABS WARNING LAMP (ABS): Illuminates briefly when the ignition is turned to the ON position. In an emergency, apply continuous force on the brake to prevent wheel lockup when braking on slippery surfaces - do not pump your brakes. Any pulsation or noise you may feel or hear is not abnormal.

8. SERVICE ENGINE SOON LAMP (SES): Illuminates briefly when the ignition is turned to the ON position to ensure the system is functional. If the light comes on after the engine is started, please consult your Owner's Guide. To help prevent activation, always secure your fuel cap by turning it clockwise 1/4 of a turn until at least a few clicks are heard. If the fuel cap is not properly secured, a warning icon will be displayed on the message center. Upon restarting the

vehicle, it may take a few driving cycles (mileage accumulation) for the lamp to clear.

9. HEATED AND COOLED SEATS
The driver and passenger heated and cooled seat buttons are located on the climate control. Press the heated seat button once for full heat, twice for medium heat and three times for low heat. Pressing a fourth time will turn off this feature.

Press the cooled seat button once for full cool, twice for medium cool and a third time for low cool. Pressing a fourth time will turn off this feature.

10. GEARSHIFT / OVERDRIVE CONTROL: D (drive) with overdrive in the normal position for the best fuel economy. Only deactivate overdrive when: driving with a heavy load, towing a trailer up or down steep hills, or when additional engine braking is desired. To deactivate, press the transmission control switch on the side of the gearshift lever. The O/D OFF lamp will be illuminated. To return to overdrive, press the transmission control switch. The O/D OFF lamp will not be

illuminated. Overdrive is automatically returned each time the key is turned off.

11. CONTROL TRAC FOUR-WHEEL DRIVE (4X4) OPERATION (IF EQUIPPED):

4X2 (2WD) delivers power to the rear wheels only. This is appropriate for normal on-road driving on dry pavement.

4X4 AUTO provides electronic control four-wheel drive with power delivered to all four wheels, as required, for increased traction. The message center will display "4X4 AUTO" when this position is selected. This mode is appropriate for all on-road driving conditions, such as dry road surfaces, wet pavement, snow, and gravel.

4X4 provides electronically locked four-wheel drive power to all four wheels. The message center will display "4X4" when this position is selected. This position is not recommended for use on dry pavement. This position is only intended for severe winter or off-road conditions, such as deep snow, ice or shallow sand.

To shift between modes, press any button (4X2, 4X4



AUTO or 4X4) at any forward speed up to 55 mph (88km/h). The message center may display "4X4 SHIFT IN PROGRESS" during the system shift. The message center will then display "4X4 AUTO" if 4X4 AUTO is selected or "4X4" if 4X4 is selected. **Note:** Some noise may be heard as the system shifts or engages.

12. HAZARD FLASHER CONTROL: Press to activate hazard flashers in an emergency to warn traffic of vehicle breakdown, approaching danger, etc. Press again to turn the flashers off. The hazard flashers can be operated when the ignition is off.

13. REAR WINDOW DEFROSTER: Press to activate rear window defrost. The indicator light on the control will illuminate. When in operation, the rear window defroster also defrosts the side view mirrors. The rear window defroster will automatically turn off after approximately 15 minutes of

operation. Press the control again to re-engage if needed.

POWER FOLD MIRRORS: Rotate the 4-way adjustment switch, located on the driver's door, to the center position. Press the switch down to fold the mirrors. Press again to fold them back to the original position. Fold the side mirrors in carefully when driving through a narrow space, like an automatic car wash. If you fold in a mirror manually, the power fold mirrors will need to be reset. To reset, move the 4-way adjustment switch to the center position. Press the switch down to fold the mirrors in and wait for approximately 8 seconds. You should hear a click indicating that the mirrors have been reset. If you do not hear a click, press

the switch to fold the mirrors back out, and repeat the reset procedure.

THX II - The THX II certified premium audio system creates optimal acoustic quality for all seating positions and road conditions. The system offers an advanced speaker system, amplifiers, subwoofer and equalization.

1 LOAD - Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.



2 ON/OFF/VOLUME - Press to turn ON/OFF. Turn to increase/decrease volume. If the volume is set above a certain level and the ignition is turned off, the volume will come back on at a "nominal" listening level when the ignition switch is turned back on.

SATELLITE RADIO CONTROLS:
3 AUX - Press repeatedly to cycle through FES/DVD (if equipped), SAT1, SAT2, SAT3 or LINE IN (auxiliary audio mode). Press AM/FM to return to radio mode.



AUDIO

Use extreme caution when using any device or feature that may take your attention off the road. Your primary responsibility is the safe operation of the vehicle. Only use non-essential features and devices when it is safe to do so.

1 LOAD - Press to load a CD/MP3. Press Load and a memory preset to load a specific slot. Press and hold to auto load up to six CD/MP3s.

2 ON/OFF/VOLUME - Press to turn ON/OFF. Turn to increase/decrease volume. If the volume is set above a certain level and the ignition is turned off, the volume will come back on at a "nominal" listening level when the ignition switch is turned back on.

3 AUX - Press repeatedly to cycle through FES/DVD (if equipped), SAT1, SAT2, SAT3 or LINE IN (auxiliary audio mode). Press AM/FM to return to radio mode.

4 SHUFFLE - Press to play all tracks on the current CD/MP3 disc in random order.

5 SEEK - Press to access the previous/next strong station or CD track.

6 TEXT/SCAN - In radio mode, when listening to a RBDS-equipped station, press and hold for a brief sampling of radio stations. In CD/MP3 mode, press and release to view the track title, artist name or disc title. Press and hold for a brief sampling of all tracks on the current disc.

7 PLAY/PAUSE/OK - In CD/MP3 mode, press to pause the playing media. Press again to return to the playing media. **OK** - Use in various menu selections.

8 MENU - The following is a list of some of the Menu features. Press repeatedly to cycle through:

AUTOSSET - Allows you to set the strongest local radio stations without losing your original stored stations in AM/FM1/FM2. Use the ▲/▼ buttons to turn on/off. When the six strongest stations are filled, the station stored in preset 1 will begin playing. If there are less than six strong stations, the system will store the last one in the remaining presets.

OCCUPANCY MODE - Use the ▲/▼ buttons to select and optimize sound for ALL SEATS, DRIVERS SEAT or REAR SEATS.

SPEED SENSITIVE VOLUME - Radio volume automatically changes slightly with vehicle speed to compensate for road and wind noise. Recommended level is 1-3. Level 7 is the maximum setting.

NAVIGATION SYSTEM (if equipped) - Please refer to the Navigation Supplement for more information on the navigation system.

Press MENU when satellite radio mode is active to access. Press OK to enter into the SATELLITE RADIO MENU. Press ▲/▼ to cycle through the following options: Category, Save Song, Delete Song, Delete All Songs and Enable Alerts/Disable Alerts.

Satellite radio is available only with a valid SIRIUS radio subscription. Check with your authorized dealer for availability.

9 TUNE - Turn to go up/down the frequency band in individual increments, or to advance to the next/previous MP3 folder.

AUXILIARY INPUT JACK - Your vehicle is equipped with an Auxiliary Input Jack located inside the console bin. This allows you to plug and play auxiliary audio devices. Press AUX repeatedly on your audio system to access. When LINE IN appears in the display, plug in your auxiliary audio device. For more detailed information, please refer to your Owner's Guide.

COMPRESSION - Brings soft and loud CD passages together for a more consistent listening level when in CD mode. Press MENU until compression status is displayed. Press ▲/▼ to turn the feature on/off.

RBDS (RADIO BROADCAST DATA SYSTEM) - In FM mode, this feature allows you to search for certain categories of music or announcements. For more information, refer to your Owner's Guide.