


DIGITAL GRAND PIANO

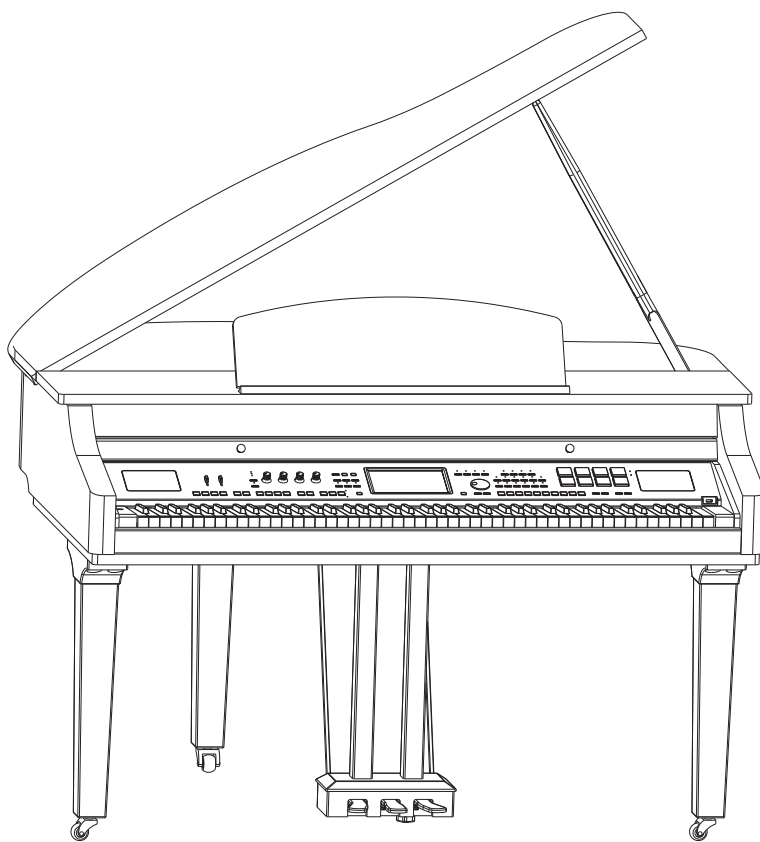

Owner's Manual



100
95
75
25
5
0

INFORMATION FOR YOUR SAFETY!

THE FCC REGULATION WARNING (for USA)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Unauthorized changes or modification to this system can void the user's authority to operate this equipment.

CAUTION

The normal function of the product may be disturbed by Strong Electro Magnetic Interference. If so, simply reset the product to resume normal operation by following the owner's manual. In case the function could not resume, please use the product in other location.

Regarding the display

This instrument display is a precision device created using extremely high technology, and careful attention has been paid to its product quality. Although you may notice some of the issues listed below, please be aware that these are due to the characteristics of LCD displays, and are not malfunctions.

- There may be pixels in the display that are always dark (unlit) or always bright (lit).
- Depending on the displayed content, the brightness of the display may appear uneven.
- Depending on the displayed content, horizontal stripes of shading may be visible.
- Depending on the displayed content, flickering or moire patterns may be visible.

PRECAUTIONS

PLEASE READ CAREFULLY BEFORE PROCEEDING

Please keep this manual in a safe place for future reference.

Power Supply

Please connect the designated Power Cord to an AC outlet of the correct voltage.

Do not connect it to an AC outlet of voltage other than that for which your instrument is intended.

Unplug the Power Cord when not using the instrument, or during electrical storms.

Connections

Before connecting the instrument to other devices, turn off the power to all units. This will help prevent malfunction and / or damage to other devices.

Location

Do not expose the instrument to the following conditions to avoid deformation, discoloration, or more serious damage:

- Direct sunlight
- Extreme temperature or humidity
- Excessive dusty or dirty location
- Strong vibrations or shocks
- Close to magnetic fields

Interference with other electrical devices

Radios and televisions placed nearby may experience reception interference. Operate this unit at a suitable distance from radios and televisions.

Cleaning

Clean only with a soft, dry cloth.

Do not use paint thinners, solvents, cleaning fluids, or chemical-impregnated wiping cloths.

Handling

Do not apply excessive force to the switches or controls.

Do not let paper, metallic, or other objects into the instrument. If this happens, unplug the Power Cord from the wall outlet. Then have the instrument inspected by qualified service personnel.

Disconnect all cables before moving the instrument.

Introduction

Panel & Display Description

Front Panel.....	6
Rear Panel.....	7
Main Display.....	8

Setup

Part List.....	9
Setup Guide.....	10

Connections

Power Supply.....	14
Connecting a pair of Headphones.....	14
Connecting an Audio Equipment.....	14
Connecting an MP3/CD Player.....	14
Connecting a Microphone.....	15
Connecting a Computer.....	15
Connecting External MIDI Devices.....	15

Quick Start

Basic Operations

Selection Operation.....	16
Soft Keyboard Operation.....	16
Setting Operation.....	17

Playing the Demos.....	18
-------------------------------	-----------

Playing Voices.....	19
----------------------------	-----------

Playing with a Style.....	20
----------------------------------	-----------

Playing Songs.....	21
---------------------------	-----------

Recording Your Performance to MIDI.....	22
--	-----------

Recording Your Performance as Audio...23	
---	--

Using a USB Storage Device.....	24
--	-----------

Downloading Data from the Computer....25	
---	--



Contents

Voice

Playing Various Voices.....	26
Keyboard Parts.....	26
Playing a single Voice (Right1).....	26
Playing Two or Three Voices Simultaneously (R 1, 2, 3).....	26
Playing Different Voices with the Left and Right Hands.....	27
Setting the touch sensitivity of the keyboard.....	27
Changing Pitch.....	28
Master Tuning.....	28
Transpose.....	28
Octave.....	29
Scale Tune.....	29
Adjusting the Volume of Voices.....	31
Adding Effects to Voices.....	31
Arpeggiator.....	32
Harmony.....	35
Chopper.....	35
Global Effect.....	36
Reverb and Chorus.....	36
EQ.....	37
Editing Voice.....	37
Editable Parameters.....	38
Saving the Edited Voice.....	39
Saving, Deleting or Renaming the User Voice.....	39

Style

Selecting Various Styles.....	40
Playing Only the Rhythm Tracks of a Style.....	40
Playing All Tracks of a Style.....	40
Adjusting the Volume Balance.....	41
Muting the tracks of a style.....	42
Split Point Settings.....	42
Selecting a Chord Fingering Type.....	43
Chord Basics.....	43
Single Finger.....	44
Multi Finger.....	44
Chord Dictionary.....	44
Operations for Style Playback.....	45
Style Variations.....	45
The Function Description of Control Buttons.....	45
Adjusting the Tempo.....	46
Using the Metronome.....	46
One Touch Setting.....	47
Saving, Deleting or Renaming the User Style.....	47

Song

Playing Various Songs.....	48
Operations for Song Playback.....	48
Adjusting the Volume of the Song.....	49
Displaying Music Notation (Score).....	50

Piano Mode

Entering the Piano Mode.....	52
The Setting of this Mode.....	52

Song Recording

MIDI Recording.....	54
Quick Recording.....	45
Multi Track Recording.....	55
Editing the Recorded MIDI Song.....	56
Audio Recording.....	57
Saving, Deleting or Renaming the User Song.....	57

Global Setting

Keyboard.....	58
Style & Song.....	58
Controllers.....	59
Knob.....	59
Multi Pad.....	60
Pedal.....	61
Effect.....	62
MIDI I/O.....	62
Utility.....	62

Performance Memory

Selecting a Performance Bank.....	64
Recalling a Performance Memory Settings.....	64
Freezing the Specific Item.....	65
Registering the Performance Memory Settings.....	65
Saving, Deleting or Renaming the User Performance.....	66

USB Device

File Operations in the File Selection Display.....	67
Creating a New Folder.....	68
Formatting the USB Device.....	68

MIDI

What's MIDI?.....	69
Midi Terminals.....	69
Downloading Data from the Computer.....	69

Appendices

Troubleshooting.....70

Specification.....70

Appendices

Voice List.....71

Style List.....77

Song List.....78

Demo List.....78

Chord List.....79

MIDI Implementation List.....80

Introduction



Quick Start

Advanced Use

Appendices

Panel & Display Description

Front Panel

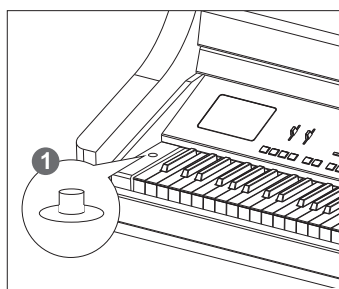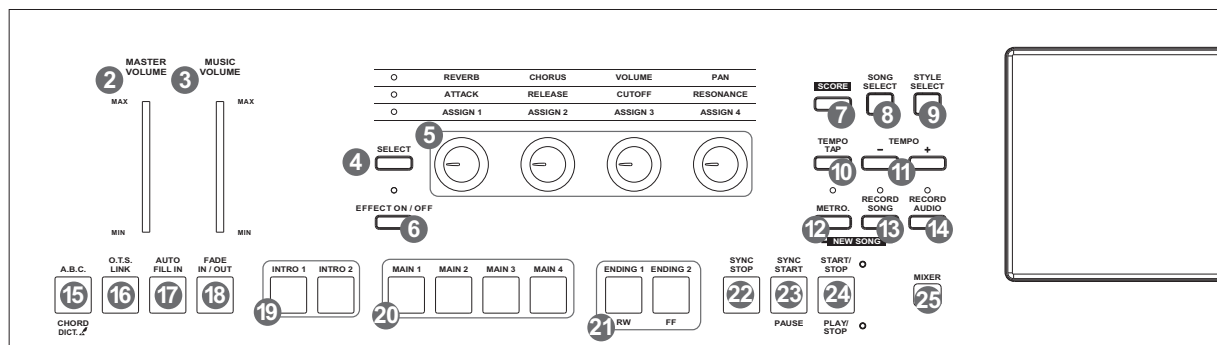

1. POWER ON/OFF BUTTON

Turn the power on or off.

2. MASTER VOLUME SLIDER

Adjust the master volume.

3. MUSIC VOLUME SLIDER

Adjust the volume of the playing style or the playing song.

4. SELECT BUTTON

Select the three effect combinations of GROUP KNOBS sequentially.

5. GROUP KNOBS

Effect1: Adjust reverb level, chorus level, volume, pan of the RIGHT 1 voice.

Effect2: Adjust attack time, release time, the filter cut off frequency, the amount of resonance applied at the filter cutoff frequency of the RIGHT 1 voice.

Effect3: The knob effect can be assigned separately. See "Controller".

6. EFFECT ON/OFF BUTTON

Turns the keyboard effect (arpeggio, harmony, chopper) on or off.

7. SCORE BUTTON

Show the staff of the current song (SMF).

8. SONG SELECT BUTTON

Enter the SONG SELECT interface.

9. STYLE SELECT BUTTON

Enter the STYLE SELECT interface.

10. TEMPO TAP BUTTON

Change the tempo by "tapping" out the tempo with this button.

11. TEMPO+, TEMPO- BUTTONS

Adjust the current tempo.

12. METRO. BUTTON

Turn the Metronome on or off.

13. RECORD SONG BUTTON

Enter the RECORD SONG interface. You'll record your performance in SMF format.

14. RECORD AUDIO BUTTON

Enter the audio recording is in ready state. You'll record your performance in WAV format.

15. A.B.C. BUTTON

Turn the A.B.C. MODE on or off.

16. O.T.S. LINK BUTTON

Turn the O.T.S. LINK on or off. If it is turned on, the One Touch Settings can be changed when you select different style.

17. AUTO FILL IN BUTTON

Turn the AUTO FILL IN on or off.

18. FADE IN/OUT BUTTON

Turn the FADE IN or OUT on or off.

19. INTRO 1, 2 BUTTONS

Play the intro.

20. MAIN 1, 2, 3, 4 BUTTONS

Play the main part.

STYLE CONTROL

21. ENDING 1, 2 BUTTONS

Play the ending.

22. SYNC. STOP BUTTON

Turn the SYNC. STOP on or off.

23. SYNC. START BUTTON

Turn the SYNC. START on or off.

24. START/STOP BUTTON

Start or stop playing the style.

SONG

21. RW, FF BUTTONS

Rewind and fast forward the song.

23. PAUSE BUTTON

Pause the song playback.


24. PLAY/STOP BUTTON

Start playing the song or stop the song playback.

25. MIXER BUTTON

Enter the MIXER interface.

Panel & Display Description

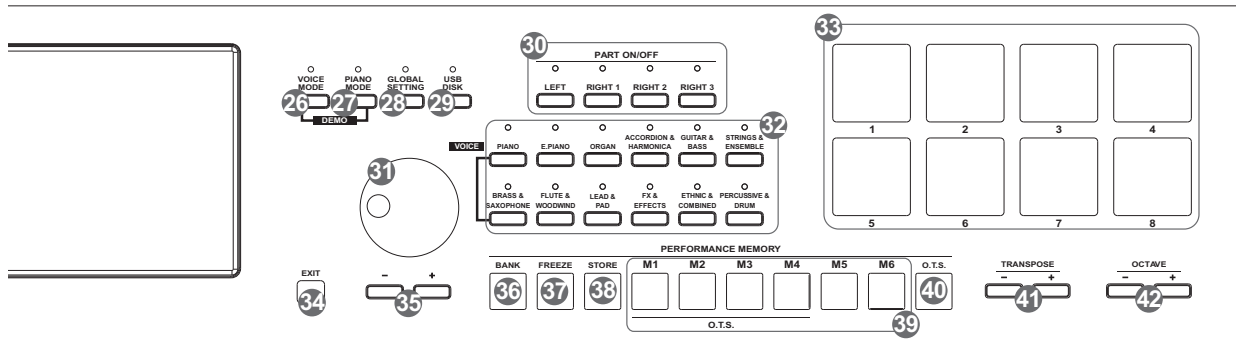

26. VOICE MODE BUTTON

Enter the VOICE mode.

27. PIANO MODE BUTTON

Enter the PIANO mode.

28. GLOBAL SETTING BUTTON

Enter the GLOBAL SETTING interface.

29. USB DISK BUTTON

Enter the USB DISK interface.

30. PART ON/OFF BUTTONS

Turn LEFT, RIGHT1, RIGHT2, RIGHT3 on and off individually.

31. DATA DIAL

Increase and decrease the value.

32. VOICE BUTTONS

Enter the VOICE SELECT interface. You'll select a voice category.

33. MULTI PADS

Add spice to your performance with special dynamic phrases by pressing them.

34. EXIT BUTTON

Exit the current interface and return to the previous display.

35. +, - BUTTONS

Increase and decrease the value by 1.

36. BANK BUTTON

Enter the PERFORMANCE SELECT interface.

37. FREEZE BUTTON

Turn the FREEZE function on or off.

38. STORE BUTTON

Save the panel setups to one of the performance memories.

39. M1-M6 BUTTONS

PERFORMANCE MEMROY:

Recall the panel setups from one of the performance memroys.

O.T.S (M1-M4):

Call up all the settings (voice, effect, etc) that match the current style.

40. O.T.S. BUTTON

Switch to the O.T.S. function.

41. TRANSPOSE+, TRANSPOSE-BUTTONS

 
Adjust the TRANSPOSE value.

42. OCTAVE+, OCTAVE-BUTTONS


Adjust the OCTAVE value.

43. USB PORT

Connect the USB storage device.



Rear Panel

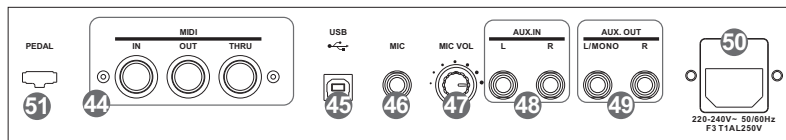

44. MIDI IN/OUT/THRU JACKS

Connect other products equipped with a MIDI interface.

45. USB JACK

Connect to a computer.

46. MIC JACK

Connect a microphone.

47. MIC VOL KNOB

Adjust the input volume of the microphone.

48. AUX IN JACKS

Connect any external audio source, such as an MP3 or CD player.

49. AUX OUT JACKS


Connect to your amp/audion system. For monaural output, use the L/MONO jack.

50. AC POWER INLET

Connect the AC power cable to this inlet.

51. PEDAL JACK

Connect pedals.

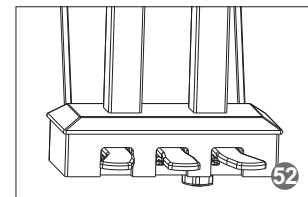

52. PEDALS

The function of pedal can be set. The default settings are soft, sostenuto, sustain from left to right.

Panel & Display Description

Main Display



1. Voice

Display voice name and octave data of each part.
(Right1, Right2, Right3, Left)

How to select the voice for each part?

For example:

1. Pressing anywhere in the R1 display area makes the R1 part selected.
2. Pressing again will call up the Voice Selection display. Now, you can select the voice for R1.

2. Style&Song

Display the currently selected style name, for example "8Beat Ballad". Pressing this name will call up the Style Selection.

Pressing song tab will display the currently selected song name, for example "Brahms Waltz". Pressing this name will call up the Song Selection display.

3. Performance

Display the currently selected performance name. Pressing this name will call up the Performance Selection display.

4. Chord

Display the chord name and related information.

- A. Chord Name
- B. Chord Mode
- C. Split

5. Shortcut to setup pages

- Pressing "Split Point" will call up the Split Setting quickly.
- Pressing "Effect" will call up the Effect Setting quickly.
- Pressing "Controllers" will call up the Controllers display quickly.

6. Others

- The amount of transposition in semitone units.
- Current tempo.
- Current playback position.
- Current time signature.


Setup

This section contains information about setting up your instrument and preparing to play. Please go through this section carefully before turning the power on.

Part List

Before you proceeding to assemble the stand, get a Philip's screwdriver (not supplied). Make sure you have the following parts, which are supplied into package.


A	Pedal component
B	Right leg component
C	Left leg component
D	Rear leg component
E	Piano body
F	Slice
G	M12X45mm hexagonal bolt
H	3x15mm screw
I	Copper pole
J	Wrench

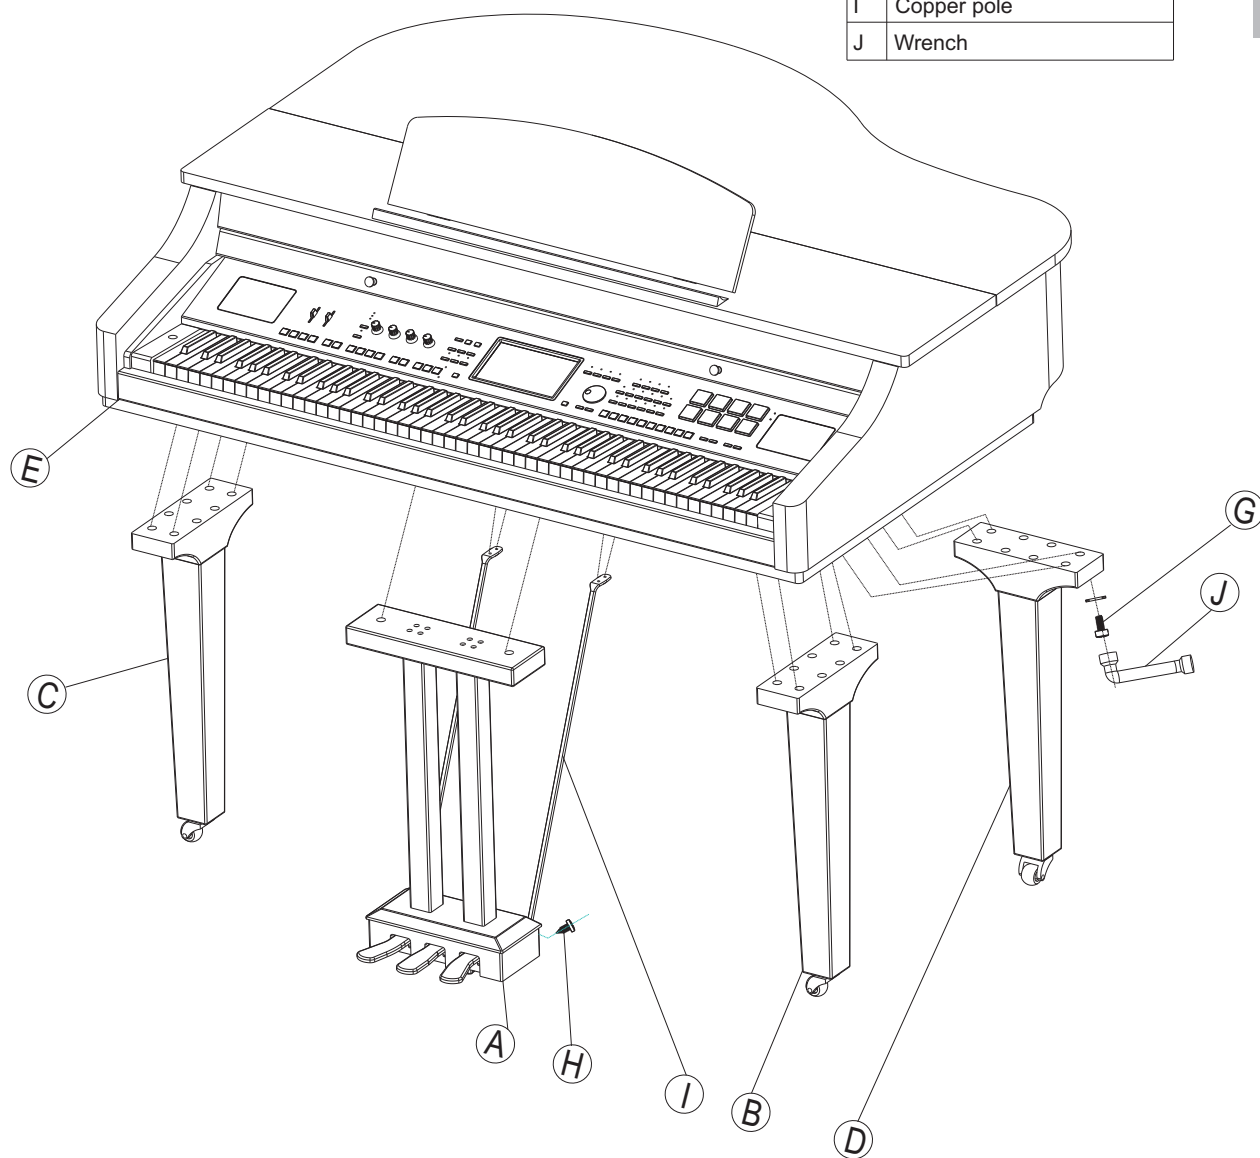

Setup

Setup Guide


A. Please reverse the carton to upside down and place it in the horizontal before you initial assembly the piano. Make sure the bottom surface of carton is up. Then open the box, take off the foams which used for protected piano body.

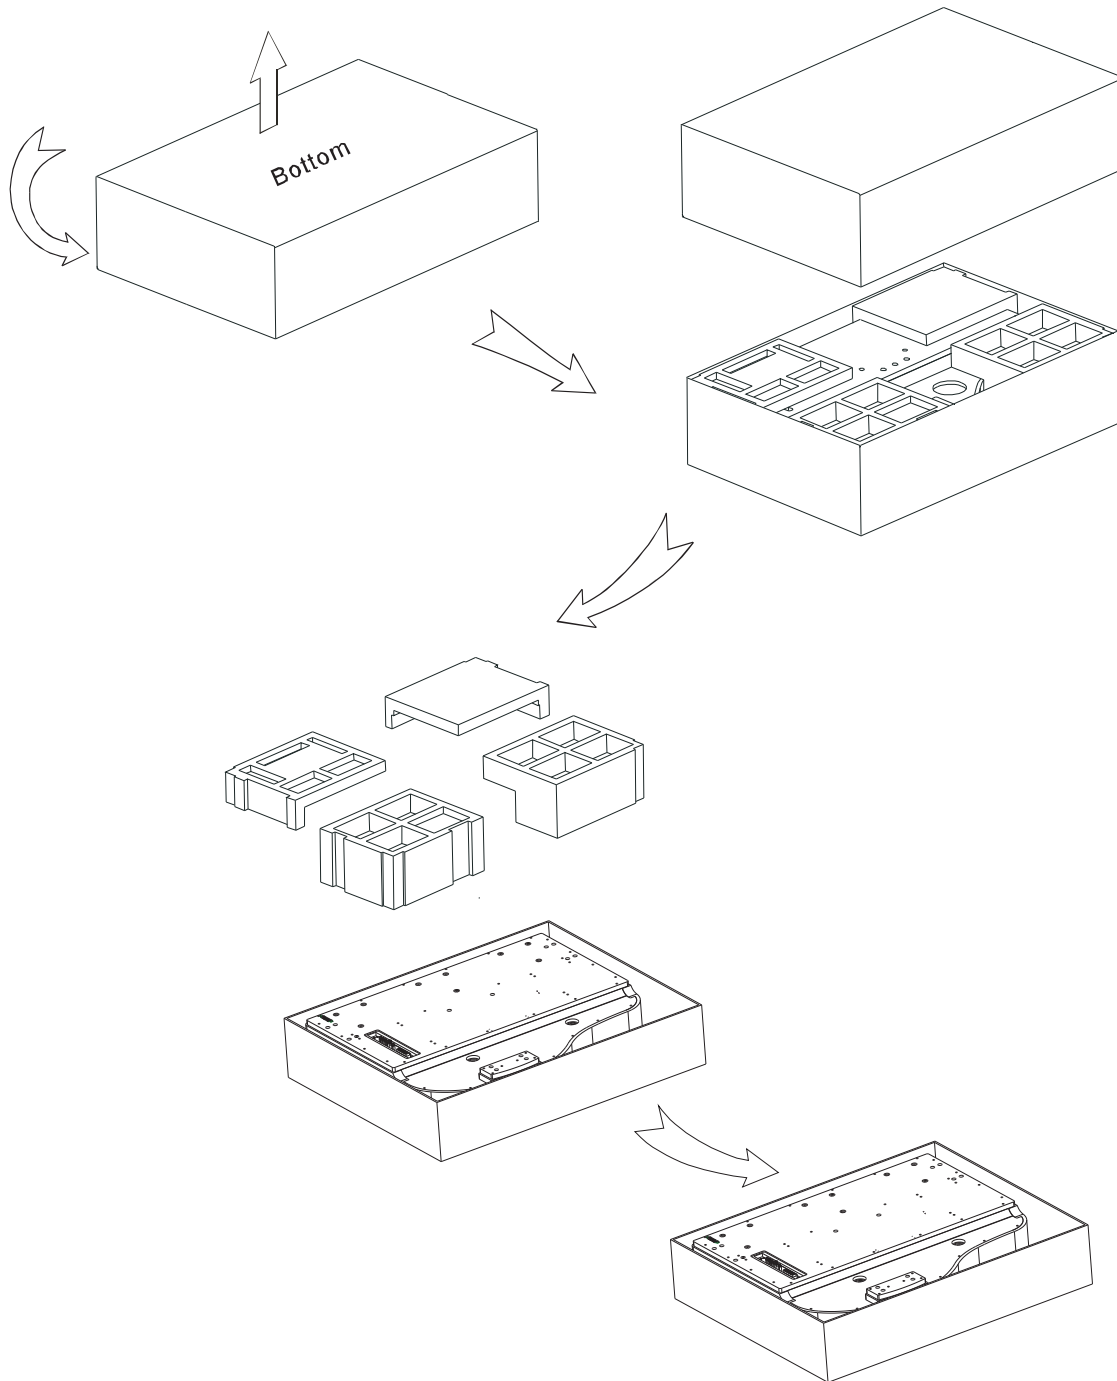


B. Put the left leg component(C) on the left of piano body. Find the sunken hole on the leg component and correspond the hole on the piano body. Then place a washer into this sunken hole, Use Wrench (J) to tighten 4 pieces of hexagonal bolt (2 on each side) by clockwise turn.

Please see below illustrator for you detail reference.
(Make sure the direction of the placement is correct before screwing)



Fix the Right leg component(B) and Rear leg component(D) to Piano body (E) with Hexagonal bolt(G) according finished assembly in left leg component.

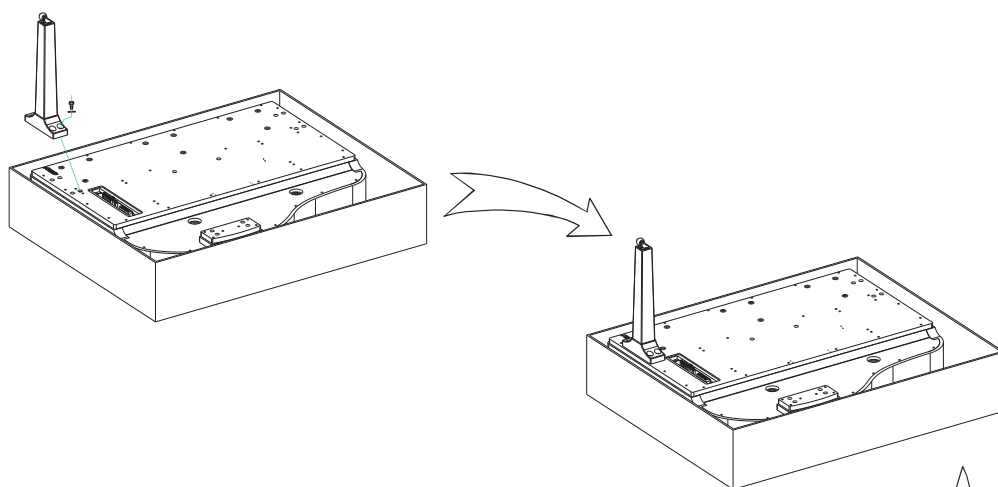

How to screwing the hexagonal bolt?

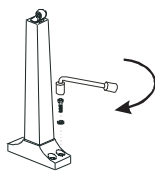


Put a Washer into the sunken hole on the leg component.
* Put the hexagonal bolt into the sunken hole, then screwing it
* Use the Wrench snapped the cap of Hexagonal bolt, put together the leg component and the piano body by clockwise turn the wrench.

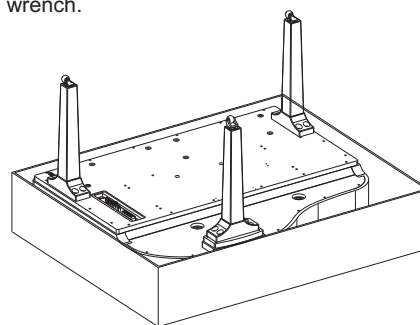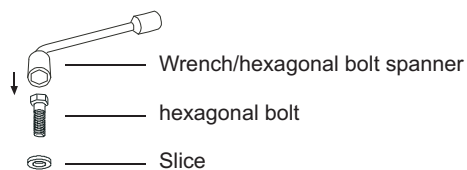


Setup

- C. Use screws(H) to tighten the two copper poles (I) onto the back of Pedal component(A). Make sure the direction of the placement is correct before screwing.






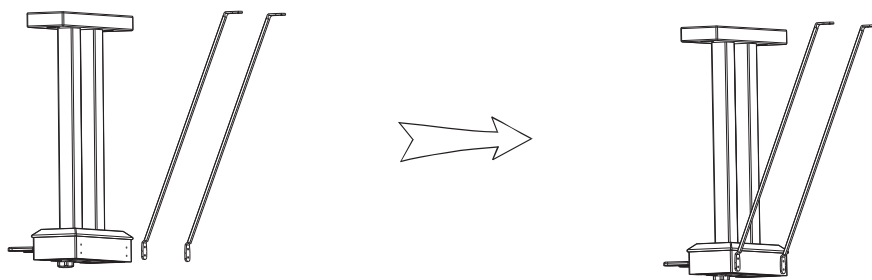


- D. Then reserved the Pedal component with two copper poles(I), and use the hexagonal bolt(G) to tightly settled it with the piano body according finished assembly in left leg component, fix the other side of copper Pole onto the piano body (E). The assembly are finished.

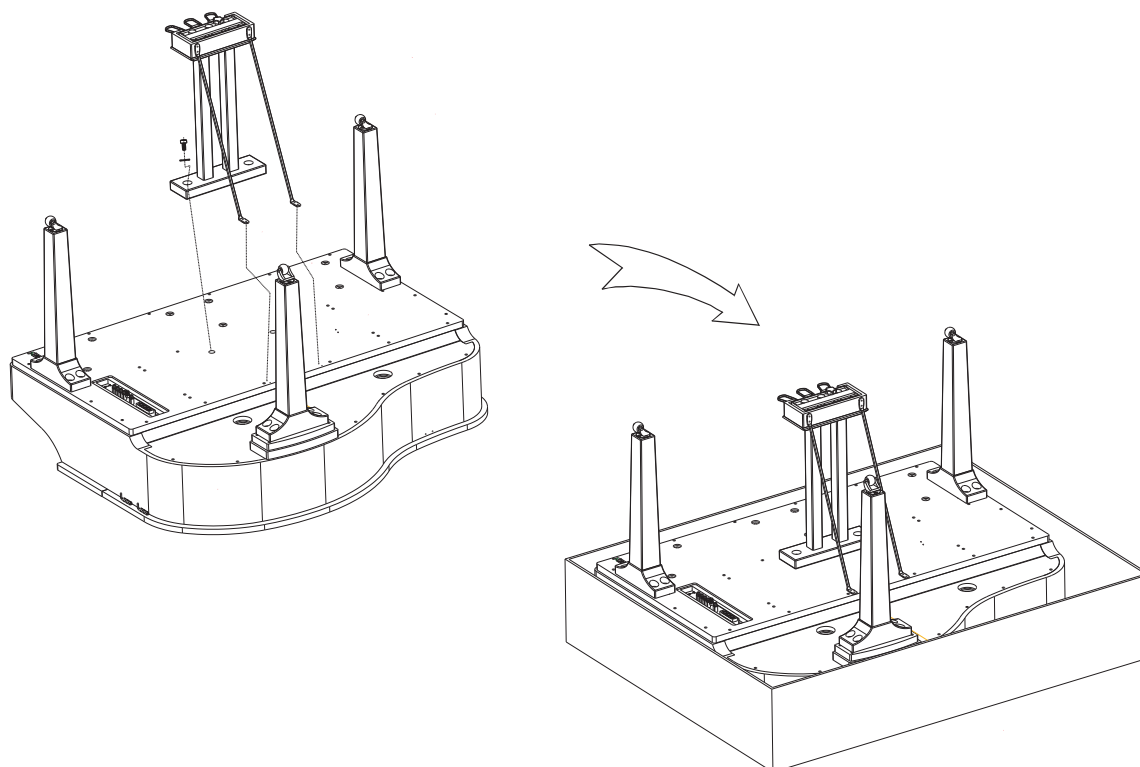

100
95
75
25
5
0

- E. Reverse the piano after finished assembly.
Please carefully reverse the piano avoid touched floor cause damaged or broke any leg components or pedal component. Then moved the carton box and all package goods.
You can enjoy play the piano now.

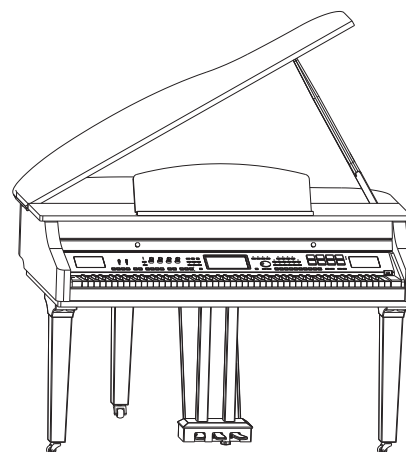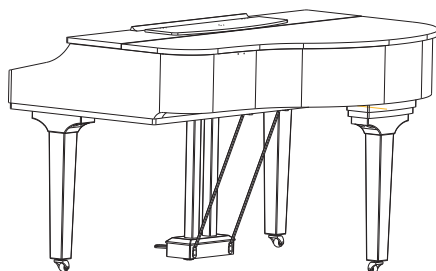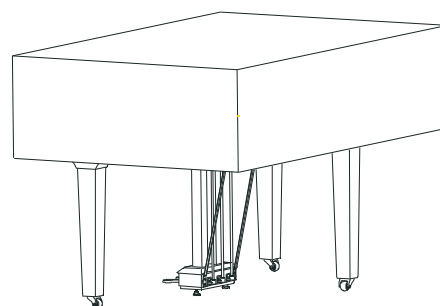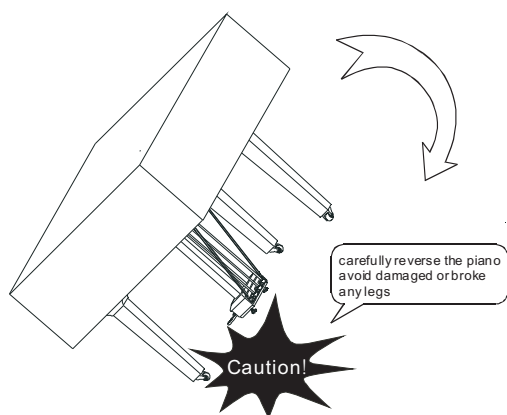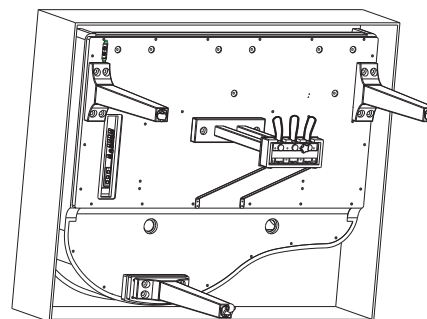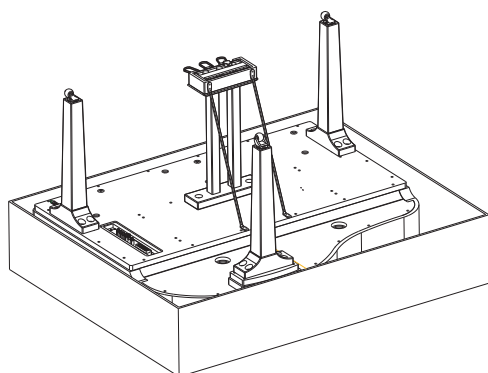


Connections

Power Supply

1. Connect the AC power cable to AC power inlet on the underside of the piano body.
2. Plug the AC power cable into an AC outlet.
3. Turn the power ON. The LCD on the panel will light up.

Note:

When the keyboard is not in use or in the time of thunderstorm, please disconnect the power for safety purpose.

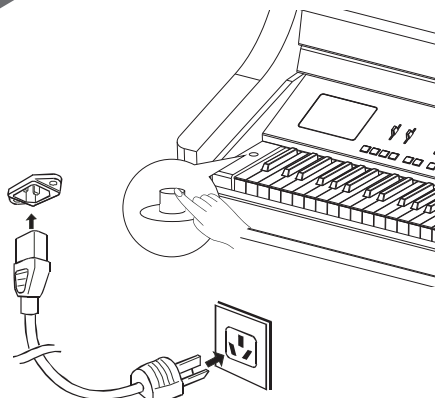


Connecting a pair of Headphones

There are two headphones jacks on the left underneath the piano body.

1. When an optional pair of stereo headphones is connected with the headphones jack 2, the sound from speakers will switch off automatically resulting in only the sound from headphone to be heard.
2. When jack 1 is connected with the stereo headphones, the sound can be heard from both headphones and speakers of the piano.
3. Connect two pairs of headphones to jack1 and jack 2, it helps the user play with the teacher or friend in a quiet surrounding.

Note:

Do not listen with the headphones at high volume for long periods of time. Doing so may cause hearing loss.

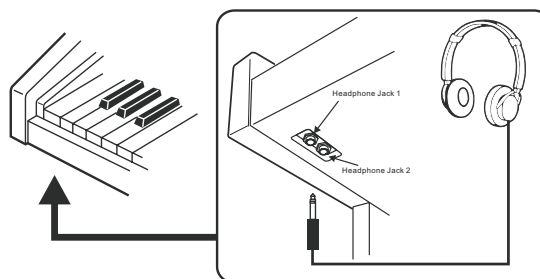


Connecting an Audio Equipment

Connect the rear-panel AUX.OUT jack to amplified speakers, amplifiers or domestic hi-fi units for external amplification. For monaural output, use the L/MONO jack.

Note:


To avoid damaging the speakers, please ensure that the volume has been set to the minimum level before connecting the power and other devices.

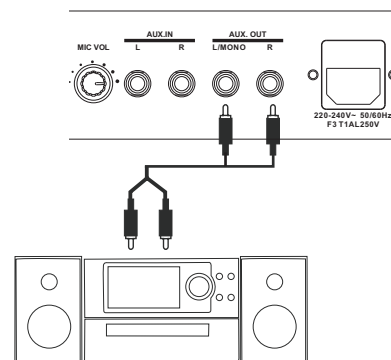

Connecting an MP3/CD Player

Connect the audio output of an MP3/CD player or other audio source to the stereo AUX IN jacks on the rear panel.

The input signal is mixed with the instrument signal, allowing you to play along.

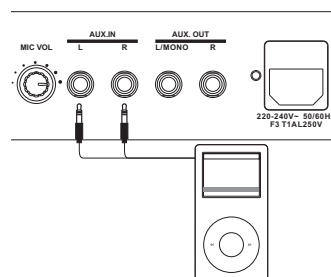


Connecting a Microphone

You can connect an external microphone to MIC IN jack. Adjust the input volume of the microphone by using MIC VOLUME knob.

Note:

Turn the volume switch counter-clockwise to reach the minimum volume level when connecting or disconnecting a microphone.

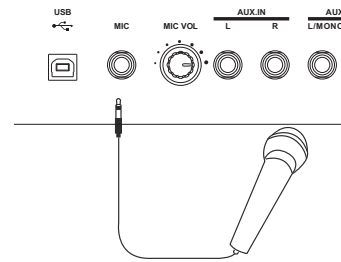


Connecting a Computer

You can simply connect the computer with USB cable via the USB connector. You can use a commercially available MIDI interface to connect the piano to the computer via the MIDI connectors.

After the driver is installed and initialization is finished, you can choose USB Audio Device in the device menu of the software to transfer midi data.

Note:

Do not select USB audio device in both of input and output setting together, otherwise the sound overlaps.

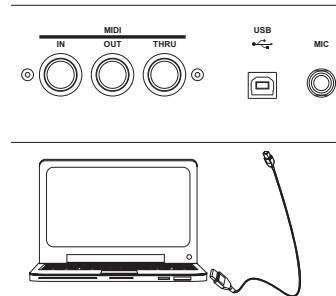


Connecting External MIDI Devices

You can use standard MIDI cables to connect external MIDI devices.

- MIDI IN: Receive MIDI message from an external MIDI device.
- MIDI OUT: Transmits MIDI message generated by the instrument.
- MIDI THRU: Simply relays the MIDI message received at MIDI IN.

Note:

To avoid damages, please be sure to turn off the power switches before you disconnect the related devices from the piano.

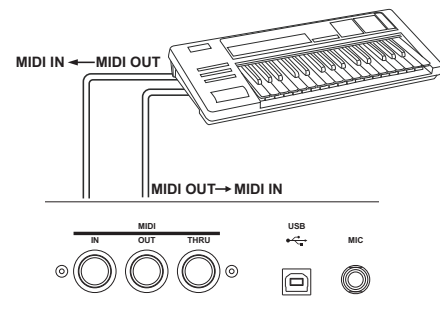

Basic Operations

Selection Operation

There are some selection interfaces: voice selection, style selection, song selection, performance selection, etc.
How to select the file in these selection interfaces?

For example:

1. Location of data

Preset: Location where pre-programmed (preset) data is stored.

User: Location where recorded or edited data is saved.

USB: Location where data on USB storage device is saved.

2. Category of data


The files are divided into categories according to their types. The categorization will be selected by pressing this categorization name on LCD. For example: The voice file (Grand Piano) is in the Piano categorization. Pressing "Piano" will select the Piano categorization.

3. Flip and File Browsing

If there are too many files in one category, the files will be on paging show. You can select your desired page by pressing the cursor button on LCD.

4. File Selecting

Select the desired file by pressing the file name on the current page.

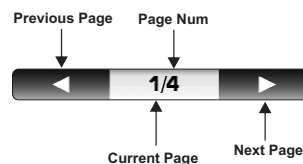

Using the Soft Keyboard

When you name or rename a file or a folder, you should call up soft keyboard display.

1. Deleting characters:

Press the delete button.

2. Moving the cursor:

Press the right or left cursor button.

3. Entering capital characters:

Press the CAPS button, the capital characters will be displayed.

4. Entering space:

Press the space button.

5. Entering numbers or marks:

Press the numbers button, the numbers and marks will be displayed.

Enter the number or mark by pressing its button.

Press the OK button to actually enter the new name and return to the previous display.


Press the CANCEL button to cancel operations and return to the previous display.




Setting Operation

There are three types on parameter setting.

- 1. ON/OFF** (as in the picture: On/Off)
Press this "ON/OFF" button to switch the keyboard touch response ON (orange font display) or OFF (gray font display).

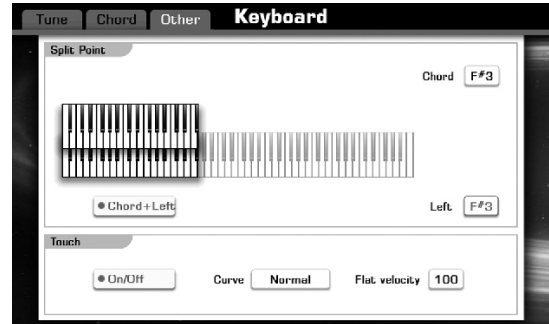



- 2. LIST** (as in the picture: Curve)
Press this "Normal" button, all available parameters would be listed.
You can choose any one of 3 ways below:
 1. Press your desired parameter on LCD to select it.
 2. Use the DATA DIAL to select your desired parameter.
 3. Press the [+] or [-] button to select your desired parameter.

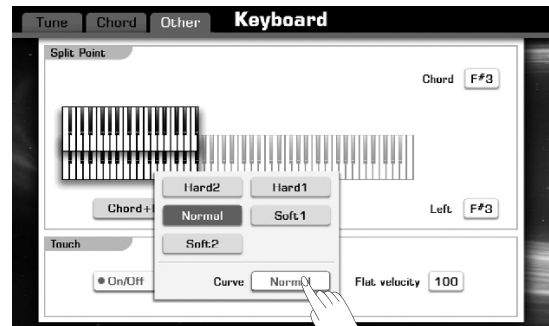

The selected parameter will be highlighted.





- 3. DATA** (as in the picture: Flat velocity)
Press this "100" button to display a pop-up box.
You can choose any one of 3 ways below:
 1. Press the "+" or "-" button to adjust the data.
 2. Use the DATA DIAL to adjust the data.
 3. Press the [+] or [-] button to adjust the data.

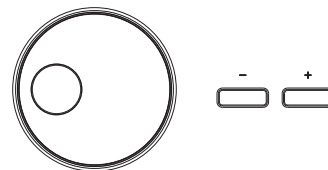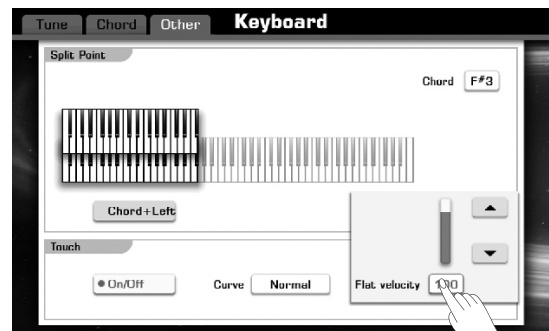

Playing the Demos


The instrument features 9 wonderful demos. Please refer to **DEMO LIST**.

Press the [VOICE MODE] and [PIANO MODE] buttons simultaneously to start playing the demo.

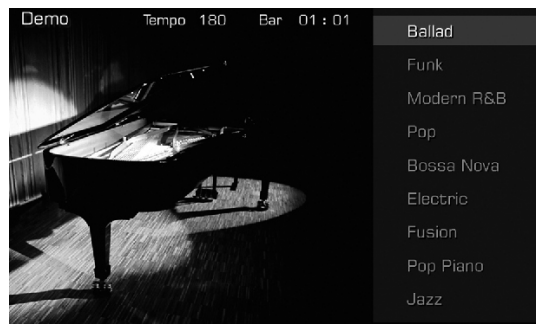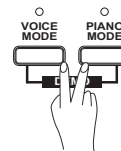

Select your desired demo

Press the Demo name on LCD or use the DATA DIAL, the [+] or the [-] button to select your desired demo.

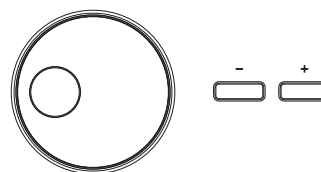

Pause the demo

Press the [PAUSE] button to pause the demo playing or continue playing the demo.



Stop the demo

Press the [PLAY/STOP] button to stop the demo playback.



Adjust the tempo of the demo playback

Press the [TEMPO+] or [TEMPO-] button to adjust the tempo of the playback demo.



Exit the demo

Press the [EXIT] button to stop the demo playback and return to the main display.




Playing Voices

The instrument features exceptionally realistic 672 voices, including piano, guitar, strings, brass and many more. Please refer to **Voice List**.

Turn the R1 PART on


Press the PART ON/OFF [RIGHT 1] button to turn the R1 part on.

You can play different voices simultaneously or play different voices with the left and right hands. First, turn on the corresponding part.

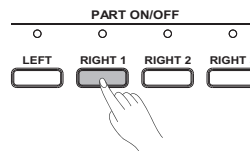

Select a Voice for R1 PART

- There are 2 methods to select the voice category.
 - Press one of the VOICE buttons to select a voice category and call up the Voice Selection display.
 - Press the R1 display area on Main Display to call up the Voice Selection display. Press one of the voice categories NAME on the Voice Selection display.
- Press the cursor button on LCD to select your desired voice page.
- Press the voice NAME to select the desired voice on the current page display.

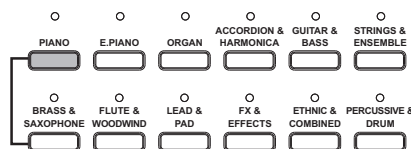

You can also select the user voice, details see **Voice**.



Play the Voice Demo


Press the "Voice Demo" on the Voice Selection display to start the demo for the selected voice. Press the "Voice Demo" again to stop it.

Note:

If there isn't voice demo for the selected voice, "Voice Demo" will not be displayed.



Play the keyboard and listen to the selected voice.

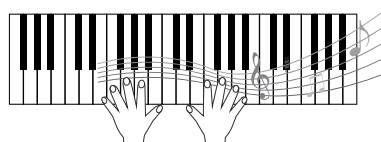

Playing with a Style

The instrument features 240 styles in a variety of different musical genres. Try selecting some of the different styles (Refer to **Style List**) and play with the auto accompaniment.

Select a style


1. There are 2 methods to call up the Style Selection display.
 - Press the [STYLE SELECT] button.
 - Press STYLE Name on the Main Display.
2. Press one of the style categories NAME on the Style Selection display to select the style category.
3. Press the cursor button on LCD to select your desired style page.
4. Press the style NAME to select the desired style on the current page display.

You can also select the user style, details see **Style**.



Start a style

1. Press the [A.B.C.] button, the specified left-hand section of the keyboard becomes the “Auto Accompaniment” section, and chords played in this section are automatically detected and used as a basis for fully automatic accompaniment with the selected style.
2. Press the [SYNC START] button to set Auto Accompaniment to standby—letting you simultaneously start the accompaniment as soon as you start playing.
3. As soon as you play a chord with your left hand, the accompaniment starts.
4. Press the [START/STOP] button to stop the accompaniment.

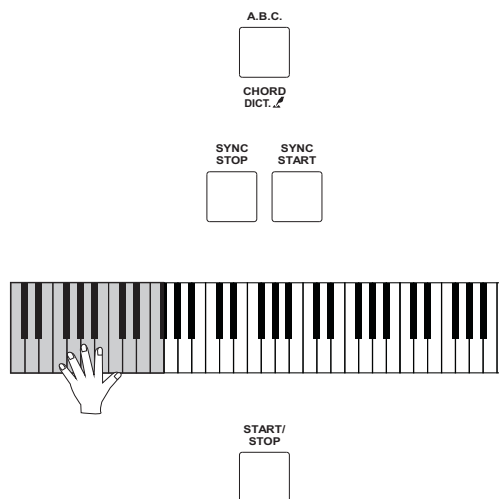

Playing Songs

The instrument features 10 songs.

Select a Song

 
 
1. There are 2 methods to call up the Song Selection display.
 - Press the [SONG SELECT] button.
 - Press Song Name on the Main Display.
2. Press the song NAME to select the desired song on the current page display.



You can also select the user song, details see **Song**.



Playback a Song

1. Press the [PLAY/STOP] button to start playback the selected song. The LED of [PLAY/STOP] will light up.
2. Press the [PAUSE] button to pause the playing song, Press the [PAUSE] button again to continue it.
3. Press the [PLAY/STOP] button to stop the playing song.




Record Your Performance to MIDI


1. Press the [METRO] and [RECORD SONG] buttons simultaneously to call up the Recording Display. A blank song ("New Song") is called up for recording. The LED of [RECORD SONG] is flashing that means it is in the recording standby mode.

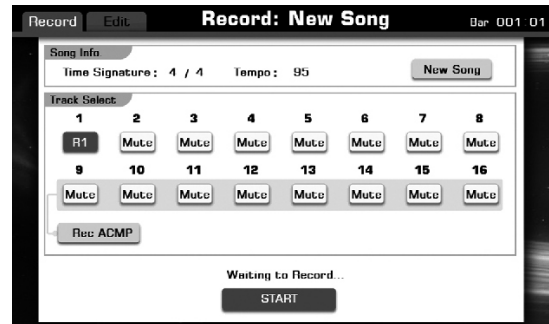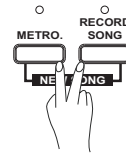


2. Press the [PLAY/STOP] button or play the keyboard to start recording. The LED of [RECORD SONG] will light up.

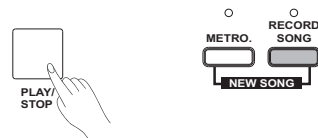

3. Press the "STOP" button on the Recording Display or press the [RECORD SONG] button to stop recording and call up soft keyboard display. The LED of [RECORD SONG] will be turned off.

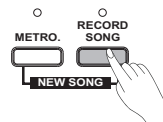

4. Enter the new name and press "OK" to save the new user song.

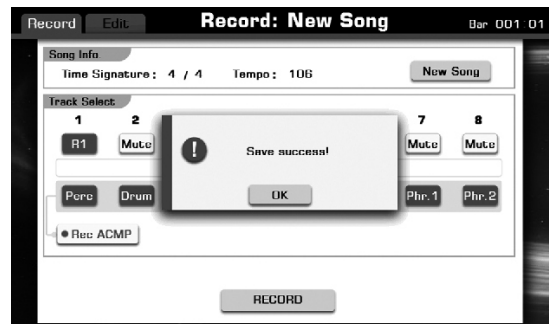

5. Press the [PLAY/STOP] button to playback the recorded user song.


If you want to record R1, R2, R3, L simultaneously or record melody and accompaniment simultaneously, you may refer to **MIDI RECORDING** for details.



Recording Your Performance as Audio

You can record your performance as CD quality audio file to a USB device.

1. Please connect your USB storage device drive to the keyboard.
2. Press the [RECORD AUDIO] button to start recording your performance. The LED of [RECORD AUDIO] will light up.
3. Press the [RECORD AUDIO] button again to stop recording your performance and call up soft keyboard display. The LED of [RECORD AUDIO] will be turned off.

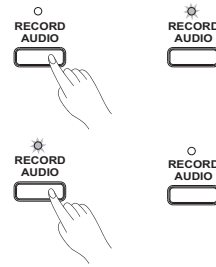

3. Enter the name and press "OK" to save the audio file you just recorded.



4. Press the [PLAY/STOP] button to play the recorded audio song.



For details see **Audio Recording**.

Using a USB Storage Device


By connecting a USB storage device to your instrument, you can save data you've created to the connected device, as well as read data from the connected device.

Compatible USB device

Recommended Brand: KINGSTON, SANDISK, SONY, LEXAR, TRANSCEND

Format: FAT 16/32

Capacity: 1G,2G,4G,8G,16G,32G

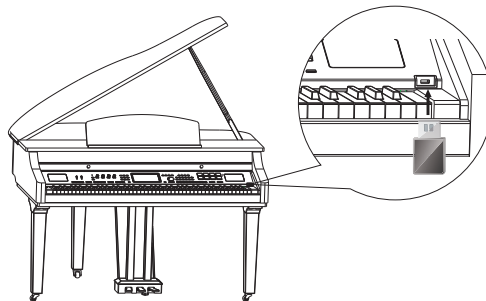

Using the USB device

1. Connect the USB storage device to the USB port.
2. Press the [USB DISK] button to display the folders and files under the root directory of USB device.

Press the USB tab on each selection display (such as voice, style, song, performance), enter the relevant folder directly, and save, rename or delete the user files from USB device.




Note

If you save your files to your USB storage device in file selection displays (like VOICE Selection or Song Selection), the files would be saved into folder "PianoUser" in the root directory of your USB storage device.




Downloading Data from the Computer


Connect a standard USB cable between the rear-panel of the USB jack of the instrument and the USB jack on your computer.

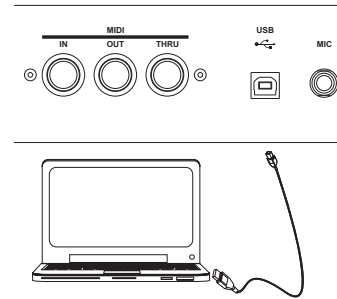

Power on the instrument first, and then open the GrandSuite software in your computer. The GrandSuite has been connect successfully with the instrument as shown.

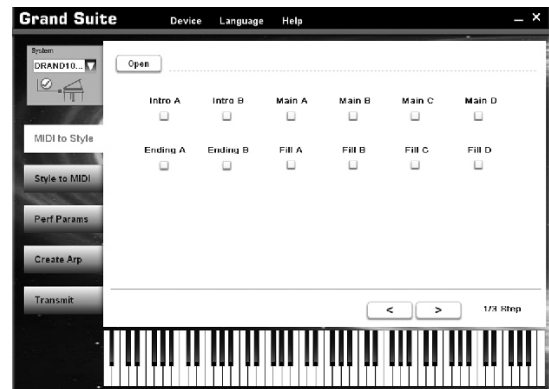

You can download SMF MIDI files to the keyboard as user songs or upload the user songs. You can upload user styles to the computer as a backup or download them to the keyboard. You can upload user voices to the computer as a backup or download them to the keyboard. You can upload memory files to the computer as a backup or download them to the keyboard.

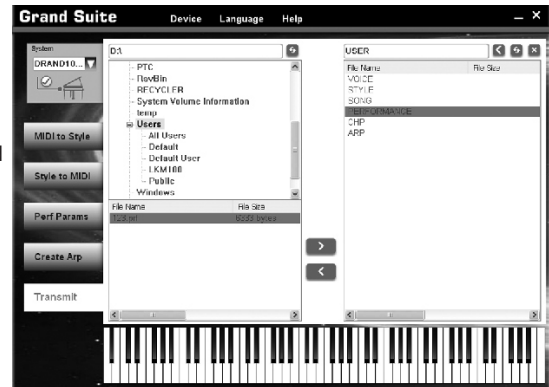

Concrete operational methods see software operating instructions!

Voice

The instrument has a huge selection of various musical instrument voices which you can play. Try out the different voices referring to the voice list in the appendix.

Playing Various Voices

The instrument allows you to play several different voices together in a layer, or play one voice with your left hand while you play a different voice (or even three layered voices!) with your right.

 

Keyboard Parts

Voices can be assigned independently to each keyboard part: Right 1, Right 2, Right3, and Left. You can combine these parts by using the PART ON/OFF buttons to create a rich, ensemble sound.

Playing a single Voice (Right 1)

You can play a single voice over the entire keyboard range.



1. Press the PART ON/OFF [RIGHT 1] button to turn the R1 part on. Use the other PART ON/OFF buttons to turn R2 part, R3 part, L part off.
2. Select a voice for R1. Press one of the VOICE buttons to call up the Voice selection display for the R1 part. If you want to select the user voice, press the "User" to select the USER display or press the "USB" to select the USB display. Press the cursor button on LCD to select your desired voice page. Press the voice NAME to select the desired voice on the current page display.
3. Play the keyboard and listen to the voice.

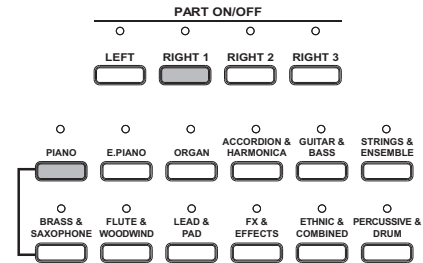

Playing Two or Three Voices Simultaneously (Right 1, 2, 3)

You can simulate a melody duet or trio.

  1. Turn on all the keyboard parts you need by using the PART ON/OFF buttons on the panel.
2. Open the voice selection screen by voice buttons, choose a keyboard part in the top left corner of the screen to select its voice. You can select voices for different parts by doing so.
3. Play the keyboard and listen to the performance.




100
95
75
25
5
0



Playing Different Voices with the Left and Right Hands

You can combine these four parts to create a rich, ensemble sound.

1. Make sure one or more right hand parts are turned on.
2. Press the PART ON/OFF [LEFT] button to turn it on.
3. Select a voice for LEFT.
Press one of the VOICE buttons to call up the voice selection display for the Left part.
Press the cursor button on LCD to select your desired voice page.
Press the voice NAME to select the desired voice on the current page display.
4. Set split point.
The point on the keyboard that separates L and R1/R2/R3 is called the "split point". The split point is set to F#3 at the factory setting, however you can set this to any key you wish.
Pressing "SPLIT POINT" on main display or pressing "Split" on voice selection display will call up the Split Setting display.
Press Left area and make the left split point selected. Use the DATA DIAL, the [+] or the [-] button or press the key directly to set your desired split point.

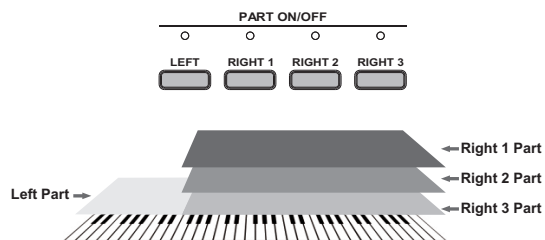



5. Play the keyboard with your hands.

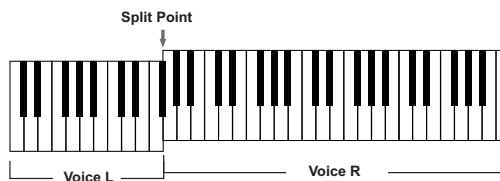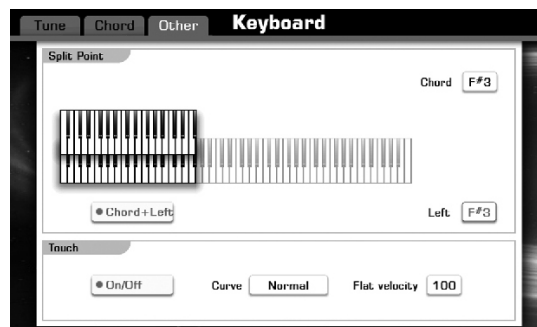

Setting the touch sensitivity of the keyboard


Pressing "SPLIT POINT" on main display or pressing "Split" on voice selection display will call up the Touch Sensitivity Setting display.

1. Press this "ON/OFF" button to switch the keyboard touch response ON (orange font display) or OFF (gray font display).
2. Press this "Normal" button to call up a pop-up box showing the other velocity curves.
Use the DATA DIAL, the [+] or the [-] button to select the other curve.
Play the keyboard and select your desired curve.
3. Press this "64" button to call up a pop-up box showing the adjustable range of parameters.
Use the DATA DIAL, the [+] or the [-] button to adjust the data.
If the keyboard touch response is OFF, this parameter will be at work.

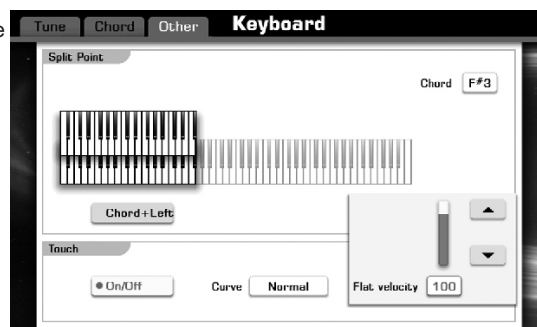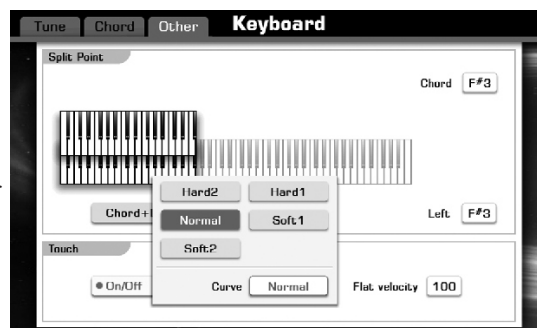

Changing Pitch


Pressing the [GLOBAL SETTING] button will call up the Global Setting display quickly.
Pressing "Keyboard" on the Global Setting display will call up the Tune Setting display.

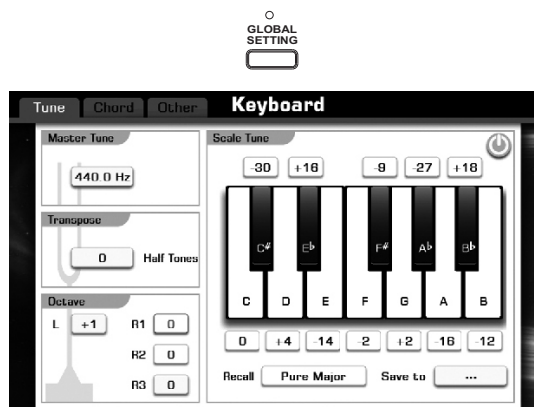

Master Tuning

The Master Tuning function sets the overall pitch of the instrument.

1. Press the Master Tune "440.0Hz" button on the Tune Setting display to call up a pop-up box showing the adjustable range of parameter.
2. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data, you can set the parameter from 415.4Hz to 466.2Hz.
3. Press the [+] button and the [-] button simultaneously to set the default value 440.0Hz.

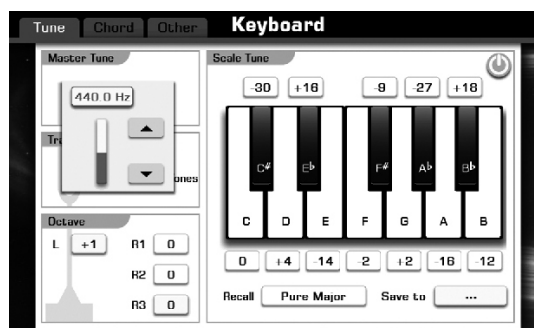


Transpose

This function allows the overall pitch of the instrument to be transposed up or down by a maximum of one octave in semitone increments.


Method1:

1. Press the Transpose "0" button on the Tune Setting display to call up a pop-up box showing the adjustable range of parameter.
2. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.

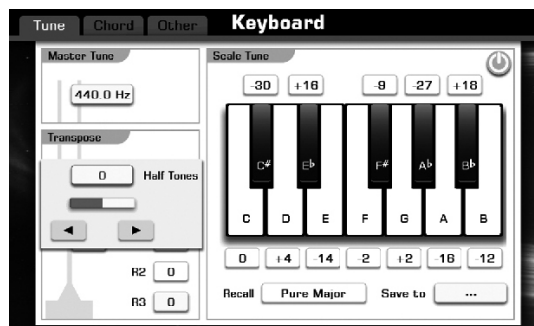

Method2:

1. Press the [TRANPOSE +] button or the [TRANPOSE-] button to set the value, the range of parameter is from -12~+12.
2. Press the [TRANPOSE +] button and the [TRANPOSE-] button simultaneously to set the default value 0.

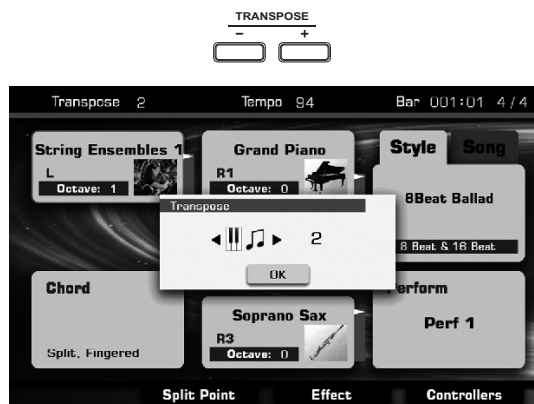


Octave

Shifts the pitch of the specified voice or track up or down by octaves. A setting of "0" produces normal pitch. You can adjust the range of the pitch change in octaves for each keyboard part (R1, R2, R3, L).

Method1:

1. Press the R1 "0" button on the Tune Setting display to call up a pop-up box showing the adjustable range of octave.
2. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.

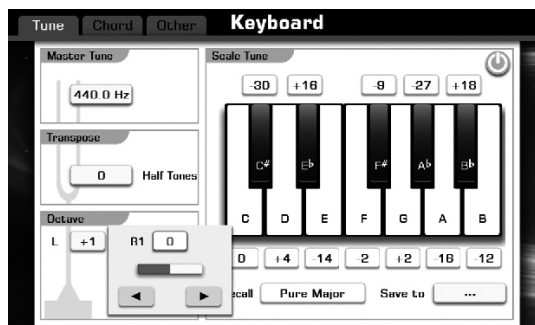

Method2:

1. Select a keyboard part in the main screen by pressing the corresponding area.
2. Press the [OCTAVE +] button or the [OCTAVE -] button to set the relative octave, ranging from -1~+1.
3. Press the [OCTAVE +] button and the [OCTAVE -] button simultaneously to set the default octave 0.




Scale Tune

Scale tune allows each individual note of the octave to be tuned over range from -50 to +50 cents in 1-cent increments (1 cent = 1/100th of a semitone). This makes it possible to produce subtle tuning variations, or tune the instrument to totally different scales (e.g. classic or Arabic scales).

Turn on Scale Tune

Press the button on the Scale Tune Setting display to turn on or off this function. When Scale Tune is ON, the box and the button will be changed from gray to orange.

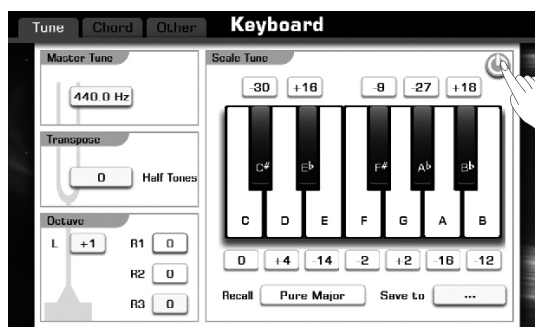

Voice

Select Preset Scale Types

1. Press the Recall "Pure Major" on the Scale Tune Setting display to call up a pop-up box showing the scale types.
2. Press the scale name on pop-up box or use the DATA DIAL, the [+] or the [-] button to select your desired scale type.

Pure Major & Pure Minor

These tunings preserve the pure mathematical intervals of each scale, especially for triad chords (root, third, fifth). You can hear this best in actual vocal harmonies – such as choirs and a cappella singing.

Pythagorean

This scale was devised by the famous Greek philosopher and is created from a series of perfect fifths, which are collapsed into a single octave. The 3rd in this tuning are slightly unstable, but the 4th and 5th are beautiful and suitable for some leads.

Meantone


This scale was created as an improvement on the Pythagorean scale, by making the major third interval more "in tune." It was especially popular from the 16th century to the 18th century. Handel, among others, used this scale.

Werckmeister

The main feature of this scale is that each key has its own unique character. The scale was used extensively during the time of Bach and Beethoven, and even now it is often used when performing period music on the harpsichord.


Arabic

Use these tunings when playing Arabic music.

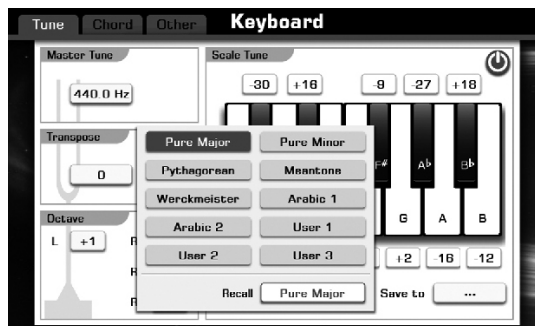


Tune the individual note

1. Press the C "0" button on the Scale Tune Setting display to select the note to be tuned and call up a pop-up box showing the adjustable range of tune.
2. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.

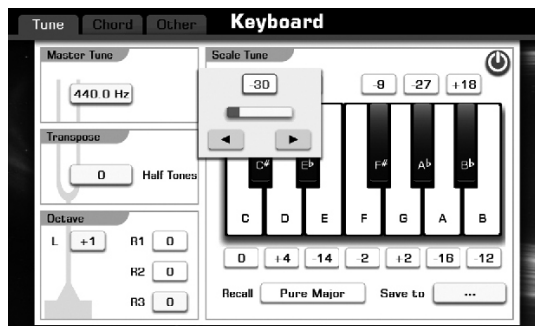

Save to User Scale

1. Press the Save to "..." button on the Scale Tune Setting display to call up a pop-up box as picture.
2. Press the dot in front of user scale name to select the user scale. There are 3 user scales: User 1, User 2, User 3.
3. Press "OK" to confirm saving to the selected user scale.

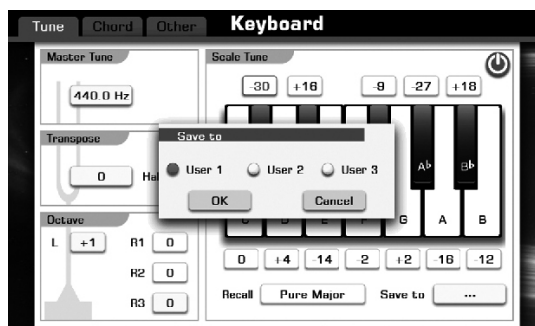


Adjusting the Volume of Voices

In the mixer interface, you can adjust the levels and stereo position (pan) of each voice.

1. Press the [MIXER] button to call up the Mixer display.
2. Press "Master" to call up the relevant setting display.
3. Press R1 "120" button in the volume box to call up a pop-up box showing the adjustable range of volume.
4. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.
5. Press R1 "0" button in the pan box to call up a pop-up box showing the adjustable range of pan.
6. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.

If you want to adjust the volume of other parts (R2, R3, L, Style, Song) or the pan of other parts (R2, R3, L), just press the relevant button and operate according to the above steps.

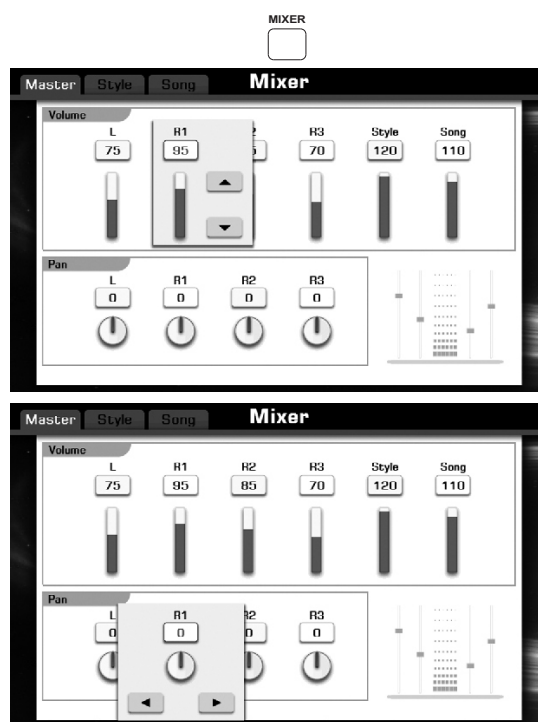

Adding Effects to Voices

There are three effects: Arpeggiator, Harmony, Chopper. You can apply various effects to your voice.

Pressing "EFFECT" on main display or pressing "Effect" on voice selection display will call up the Effect display.

Select the desired part

Press the "R1" button to call up a pop-up box as shown to the right. Press the relevant button (R1,R2,R3,L) to select your desired part for which you want to add effects.


Turn On/Off Effects

Press the "⏻" button on Effect display to turn on/off all effects you've set them on. When effects are ON, the box and the ⏻ button will be changed from gray to orange.

Press this "Arpeggiator" button to switch the arpeggiator effect ON or OFF.

Press this "Harmony" button to switch the harmony effect ON or OFF.

Press this "Chopper" button to switch the chopper effect ON or OFF.

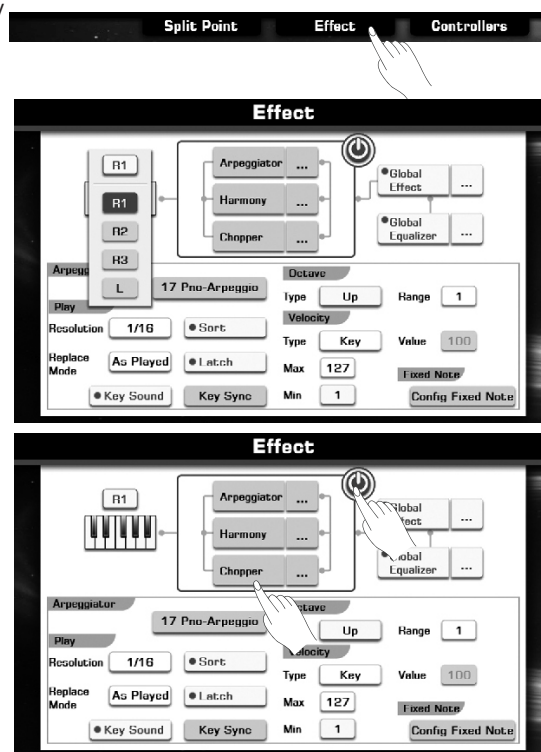


Voice

Arpeggiator

The arpeggiator is a function that automatically generates arpeggios (playing the notes of the chord individually, with a constant tempo). You can make settings for the arpeggiator used in the voice. There are more than 70 internal Arp patterns you can select. You can also select your original Arp patterns that are made by GrandSuit software on PC and saved to USB Storage Device.

Press the “Arpeggiator ...” button on the Effect display to call up the Arpeggiator Setting display.

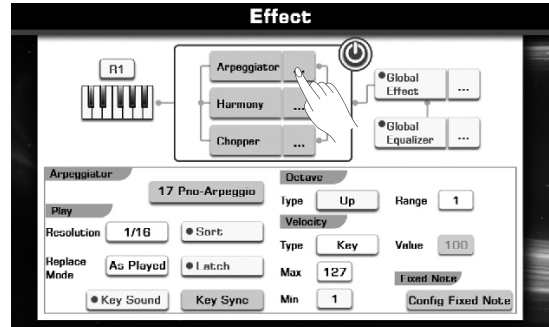

Arpeggiator parameters:

1. Pattern

Press the Arp pattern name (Ex.17 Pno-rpeggio) to call up the Arp Pattern Selection display.

Press the Arp Pattern name to select your desired Arp Pattern. Press the [EXIT] button to exit to the Effect display.




2. Resolution

Specify the timing resolution of the arpeggio. The notes of the arpeggio will be played at the interval you specify: 1/16^3, 1/16, 1/8^3, 1/8, 1/4^3, 1/4.

Press the “Resolution 1/16” button to call up a pop-up box showing the timing resolutions of the arpeggio.

Press the resolution button or use the DATA DIAL, the [+] or the [-] button to select the resolution.

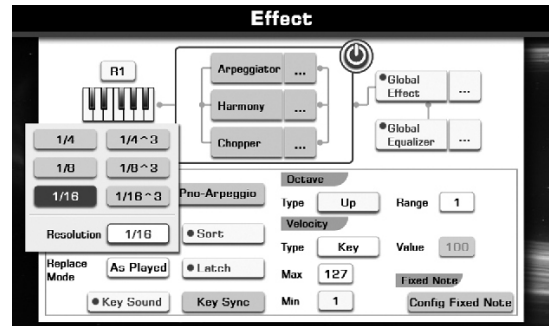


3. Sort

This specifies the order in which the notes you press will be arpeggiated.

Press the “Sort” button to switch this function ON or OFF.

ON: Notes will be arpeggiated in the order of their pitch, regardless of the order in which you pressed them.

OFF: Notes will be arpeggiated in the order in which you pressed them.

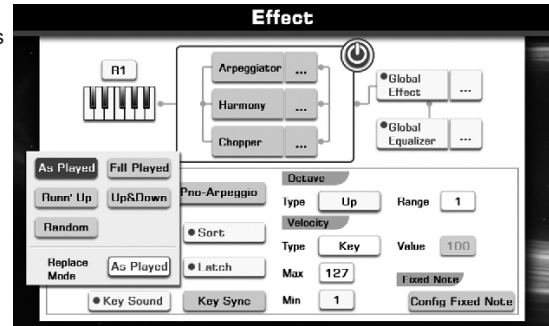


4. Replace Mode

Press the “As Played” button to call up a pop-up box showing the replace modes.

Example 1:

Preset Arp Pattern: 01 Up Down; Sort:On; Resolution:1/16






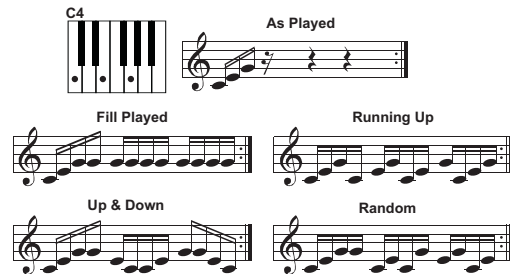


- 5. Latch**
 Press the "LATCH" button to switch this function ON or OFF.
 ON: The arpeggio will continue playing after you remove your hand from the keyboard.
 OFF: The arpeggio will stop when you remove your hand from the keyboard.

- 6. Key Sound**
 Press the "KEY SOUND" button to switch this function ON or OFF.
 ON: The notes you played will be sounded, in addition to being sounded as part of the arpeggio.
 OFF: Only the arpeggiated notes will be heard.

- 7. Key Sync**
 Press the "KEY SYNC" button to switch this function ON or OFF.
 ON: The arpeggio pattern will start playing once a note is played on the keyboard.
 OFF: The arpeggio pattern will always play according to the tempo.

 - 8. Octave**
 Press the "Range 1" button to call up a pop-up box showing the numbers of octaves in which the arpeggio will be played.
 Press the "Type UP" button to call up a pop-up box showing the arpeggio playing type in the octave ranges.
 Example1:
 Preset Arp Pattern: 01 Up Down; Sort: On; Resolution: 1/16;
 Replace Mode: As played; Key Sound: On; Octave Range: 3

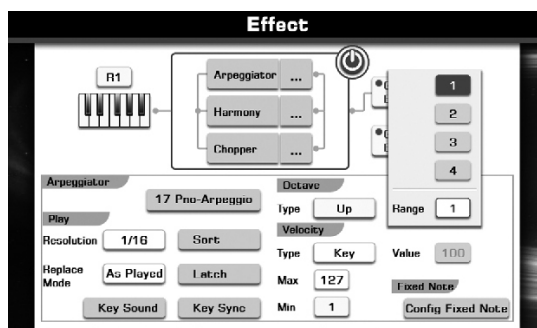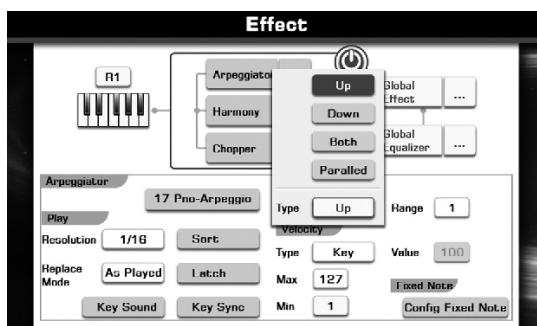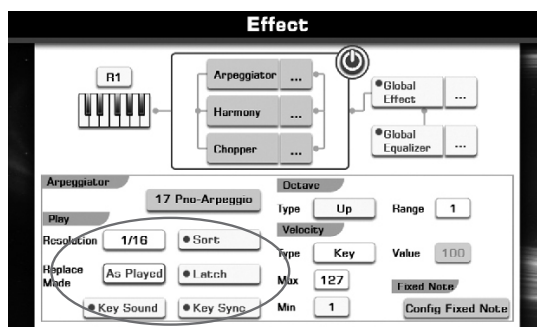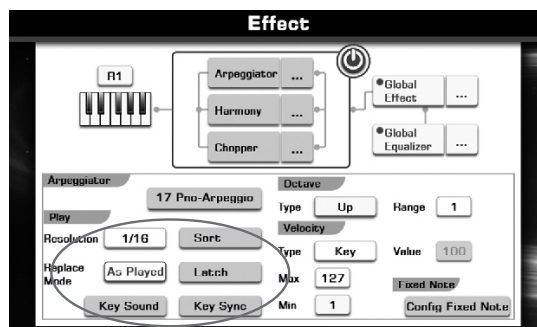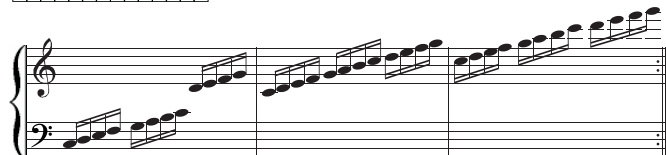

Voice

9. Velocity



Specifies the velocity of the notes in the arpeggio.

Press the Type "Key" button to call up a pop-up box showing the velocity types.

Key: Each note will sound with the velocity value at which it was actually played. You can also set the range of the velocity. "Min" and "Max". If the velocity value is not in the range of the specified velocity, the arpeggio pattern will not play.

Value: Each note will sound with the specified velocity values.

Step: Each note will sound with the velocity specified for each step.

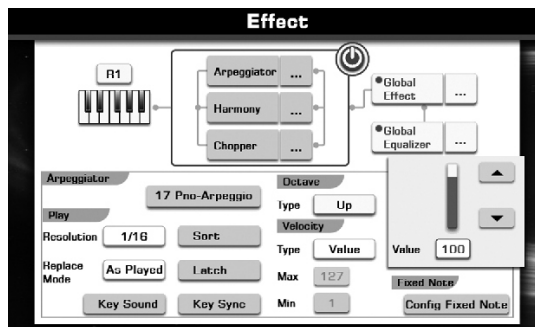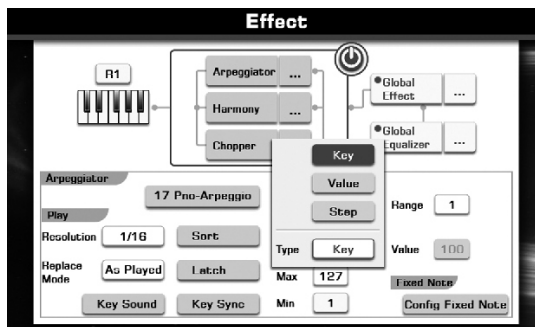

10. Fixed Note

With this Fixed Note setting, the arpeggio pattern will always play the specified pitches regardless of the note numbers received from the keyboard.

Press the "Configure Fixed Note" button to call up the Fixed Note Setting display.



Press this "Fixed Note" button to switch the function ON or OFF.

You can also select the different mode to trigger the arpeggio pattern.

Trigger Note: Play the first specified pitch if you play one key on the keyboard.

Trigger All: Play all 12 specified pitches if you play one key on the keyboard.

Specifying the Note: Press this "C4" button to display a pop-up box.

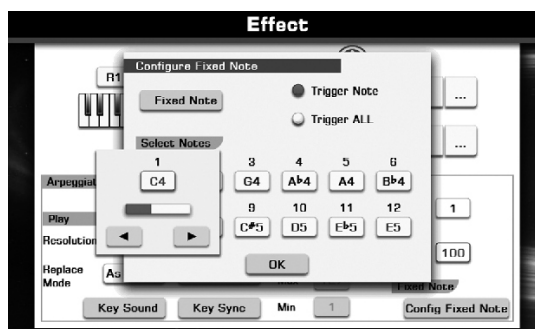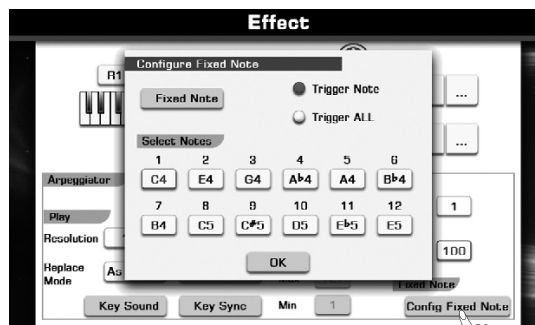


100
95
75
25
5
0

Harmony

If you turn the harmony on, it automatically adds harmony parts to the notes you play with your right hand—immediately giving you a more full and professional sound.

In this example, harmony notes in the scale of C major (the chord played in the left hand) are automatically added to the notes played in the Chord section right-hand range of the keyboard.

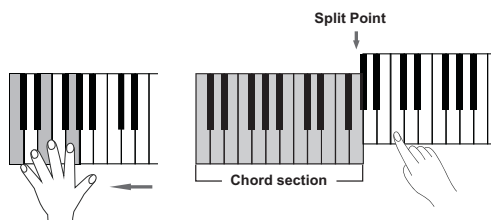


Press the “Harmony...” button on the Effect display to call up the Harmony Setting display.

There are nine harmony types: Duet, Trio, Octave 1+5, Country Duet, Block, 4 Close 1, 4 Close 2, 4 Open. Octave or 1+5 effect is always added by playing a melody with your right hand. The others effect is added by playing chords with your left hand and melodies with your right hand.

Ratio: 20%、40%、80%、100%.
You can adjust the volume level of harmony parts.

Touch Limit: 0-127
You can set the minimum of the response velocity. If you play a melody with your right hand at a velocity less than the setting value, the Harmony part will not be added to the notes.

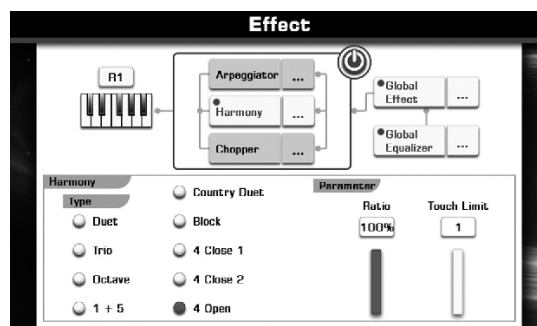

Chopper

If you turn the chopper on, it automatically adds chopping effect to the notes you hold down. Since the Chopper effect is added by detecting pressed keys. If you release the key, it automatically turns the chopper effect off.



Press the “Chopper...” button on the Effect display to call up the Chopper Setting display.

There are two play modes: Use Pattern or Real-Time.
Mode 1: Use Pattern

There are 10 user patterns you can select. Press the Pattern “001” on the Chopper Setting display to call up a pop-up box showing the available patterns for selection.

Mode 2: Real Time
There are 2 parameters you can change.
Interval: 1/1, 1/2, 1/4, 1/8, 1/16
Pull-up Time: 5-100

Press the Interval “1/16” on the Chopper Setting display to call up a pop-up box showing the available interval values for selection.

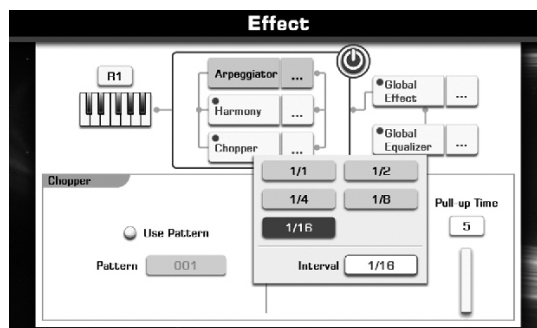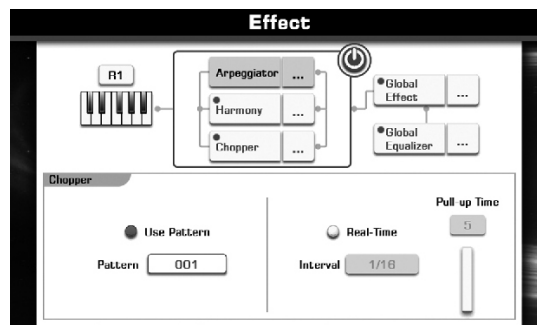

Global Effect

Reverb and Chorus

Reverb: You can create a reverb effect that makes you sound like you are playing in places like a concert hall, or live in a club.

Chorus: You can add a chorus effect that makes your playing sound as though multiple parts were being played together at the same time.





You can select the reverb type and adjust the master reverb level and the channel reverb level.

You can also select chorus type and adjust the master chorus level and the channel chorus level.

Turn On/Off Global Effect and Adjust the Parameter

1. Press the "EFFECT" button on main display to call up the Effect display.
2. Press the "Global Effect" button on the Effect display to turn on Global Effect. This applies the reverb and chorus effects to the entire sound of the instrument.
3. Press the "Global Effect..." button on the Effect display to call up the Global Effect Setting display.
4. Press the Type relevant button (ex. "Hall") to call up a pop-up box showing the reverb types.
5. Press the relevant type button or use the DATA DIAL, the [+] or the [-] button to select the reverb type.
6. Press the Master Level relevant button (ex. "64") to call up a pop-up box showing the adjustable range of reverb master level.
7. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.
8. Press the channel level relevant button (ex. R1 send "40") to call up a pop-up box showing the adjustable range of reverb channel level.
9. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.

If you want to adjust the parameter of chorus, just press the relevant button and operate according to the above steps.

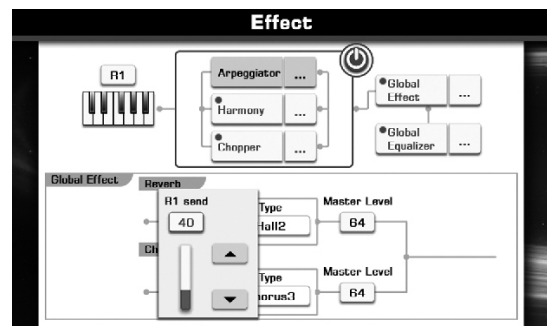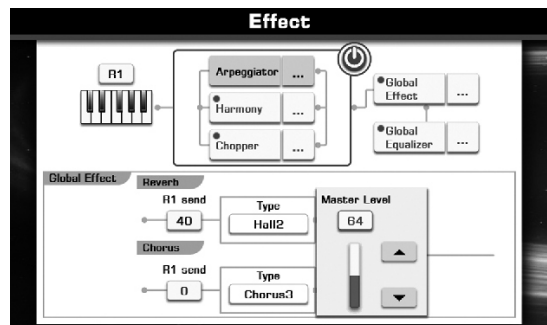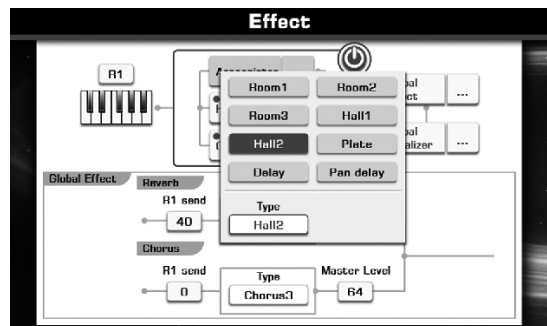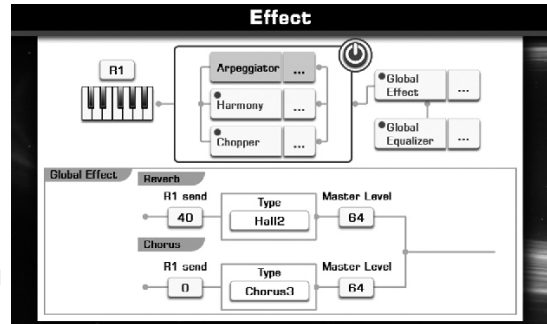

EQ

The instrument possesses a four-band digital equalizer function.




Frequency Bands (4 bands)

Low
Low-Mid
High-Mid
High

You can adjust the FREQ (center frequency) of every band and adjust the gain (amplitude change) in each of the four frequency bands within a range of -12 to 0 to +12 decibels [dB].

Turn On/Off Global EQ and Adjust the Parameter

1. Press the "EFFECT" button on main display to call up the Effect display.
2. Press the "Global Effect" button on the Effect display to turn on Global EQ.
This applies the equalizer effect to the entire sound of the instrument.
3. Press the "Global Effect..." button on the Effect display to call up the EQ Setting display.
4. Press the relevant button (ex. Freq. low "400Hz") to call up a pop-up box showing the adjustable range of frequency.
5. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.
6. Press the relevant button (ex. Gain low "6dB") to call up a pop-up box showing the adjustable range of gain.
7. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.

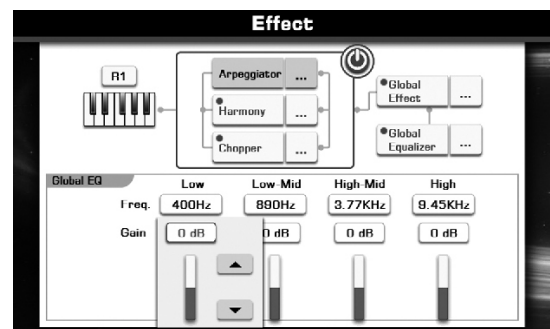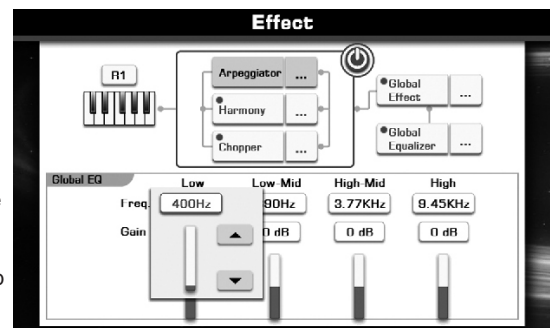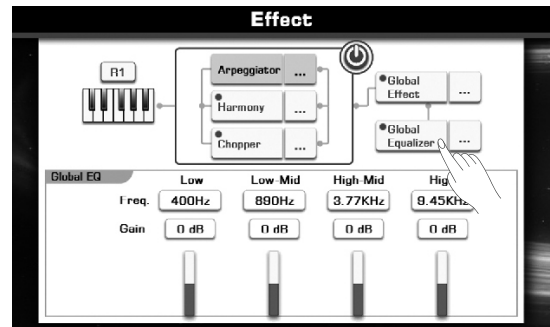

Editing Voice

You can create your own voice by editing some parameters of the existing voices and save it as a user voice to the USER display for future recall.

1. Select the desired voice for editing.
2. Press the "EDIT" on the Voice Selection display to call up the Voice Editing display.
3. Press the "Common" or "Envelope" on the Voice Editing display to call up the relevant editing display.
4. Press the relevant button to select the item (parameter) to be edited.
5. Use the DATA DIAL, [+] or [-] button to adjust the data.




Voice

Editable Parameters

Common

Default Volume	Adjusts the volume of the current edited voice.	0-127
MONO/POLY	Determines whether the edited voice is played monophonically or polyphonically.	
Portamento Time	Portamento is a function that creates a smooth transition in pitch from the first note played on the keyboard to the next.	0-3
Left Octave	Shifts the octave range of the edited voice up or down in octaves. When the edited voice is used as the LEFT part, this parameter is available.	-1,0,1
Right Octave	Shifts the octave range of the edited voice up or down in octaves. When the edited voice is used as any of the RIGHT 1-3 parts, this parameter is available.	-1,0,1

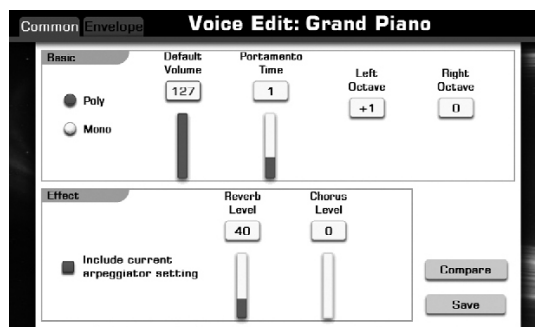


Effect

Arpeggiator	Including the current arpeggiator setting or not.	
Reverb Level	Adjust the reverb level of the edited voice.	0-127
Chorus Level	Adjust the chorus level of the edited voice.	0-127


Envelope

Attack	Determines how quickly the sound reaches its maximum level after the key is played. The lower the value, the quicker the attack.	0-127
Decay	Determines how quickly the sound reaches its sustain level (a slightly lower level than maximum). The lower the value, the quicker the decay.	0-127
Release	Determines how quickly the sound decays to silence after the key is released. The lower the value, the quicker the decay.	0-127

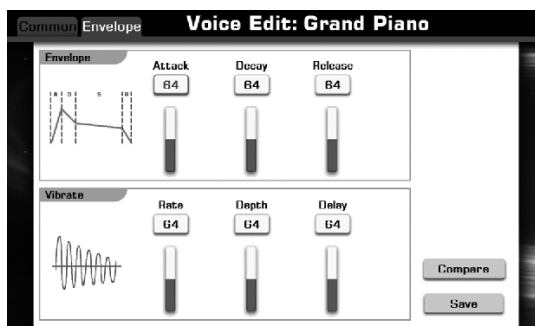

Vibrato

Rate	Determines the speed of the vibrato effect.	0-127
Depth	Determines the intensity of the vibrato effect.	0-127
Delay	Determines the amount of time that elapses between the playing of a key and the start of the Vibrato effect.	0-127

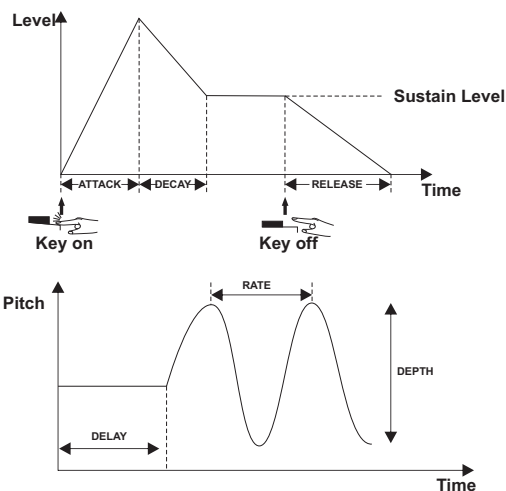


Saving the Edited Voice

Press the “COMPARE” on the editing display to compare the sound of the edited voice with the original voice.

If you are satisfied with your edited voice, please press the “SAVE” on the editing display to call up soft keyboard display.

Name the edited voice and press “OK” to save it as a user voice on the USER Voice selection display.

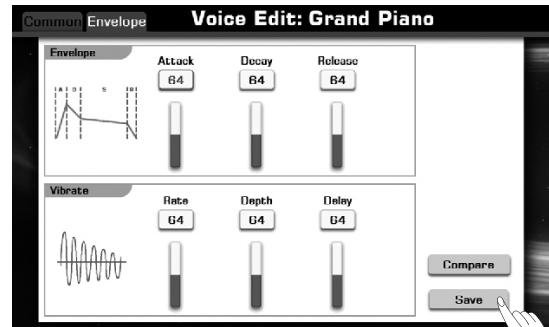

Saving, Deleting or Renaming the User Voice

 
1. Press “USER” or “USB” tab on Voice Selection display to call up the relevant display for user voices.
2. Select your desired user voice by pressing the relevant name of user voice.
3. Press the “Menu” button to display the relevant buttons on the current display.
4. Press “SAVE TO USER” to call up soft keyboard display, enter the new name and press “OK” to save as a new user voice to the internal memory.
5. Press “SAVE TO USB” to call up soft keyboard display, enter the new name and press “OK” to save as a new user voice to the USB device memory.
6. Press “DELETE” to display the pop-up box, press “OK” to delete the current user voice.
7. Press “RENAME” to call up soft keyboard display, enter the new name and press “OK” to rename the current user voice.



Note:

If the new name you entered is same as the name of existed user voice, a pop-up box will appear.

Please press “OK” and rename the file again.



Style

The instrument has a huge selection of various musical genre styles which you can play. Try out the different styles referring to the style list in the appendix.

Selecting Various Styles

Press the [STYLE SELECT] button or press STYLE NAME on the Main Display to call up the Style Selection display.

Press one of the style categories NAME on the Style Selection display to select the style category.

Press the cursor button on LCD to select your desired style page.

Press the style NAME to select the desired style on the current page display.

Note:

If you want to select the user style, press the "User" tab to display the available user styles or press the "USB" tab to display the user styles on your USB device.




Playing Only the Rhythm Tracks of a Style

Rhythm is one of the most important parts of a Style. Try to play the melody along with just the rhythm. You can sound different rhythms for each Style. Keep in mind, however, that not all Styles contain rhythm channels. (Piano category)

1. Select your desired style.
2. Press the [A.B.C] button to turn auto accompaniment off.
3. Press the [START/STOP] button to play back the rhythm channels.
4. Press the [START/STOP] button to stop the rhythm.

Note:

You can also start the rhythm simply by playing a key if SYNC START is enabled.

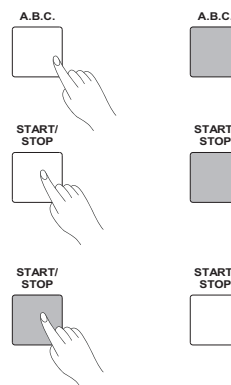


Playing All Tracks of a Style

The auto accompaniment feature puts a full backing band at your fingertips. To use it, all you have to do is play the chords with your left hand as you perform and the selected accompaniment style matching your music will automatically play along, instantly following the chords you play. With auto accompaniment, even a solo performer can enjoy playing with the backing of entire band or orchestra.

Track Name
Percussion
Drum
Bass
Chord 1
Chord 2
Chord 3
Phrase 1
Phrase 2


100
95
75
25
5
0

1. Select your desired style.
2. Press the [A.B.C] button to turn auto accompaniment on.
3. Press the [SYNC START] button to turn SYNC START on.
4. Play a chord with your left hand to start the auto accompaniment.
5. Press the [START/STOP] button or press any of the [ENDING] button to stop the auto accompaniment.

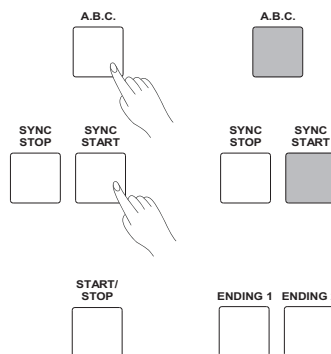

Note:

You can also stop the auto accompaniment simply by releasing the chord keys if SYNC STOP is enabled.

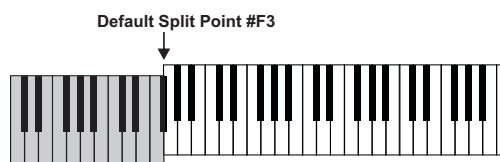


Adjusting the Volume Balance

Press the [MIXER] button to call up the Mixer Display.

Adjusting the Volume Balance between the style and the keyboard

1. Press "Master" tab to call up the relevant setting display.
2. Press Style "120" button in the volume box to call up a pop-up box showing the adjustable range of volume.
3. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.
4. Adjust the keyboard volume by pressing the relevant button and operating according to the above steps.
5. Press the [EXIT] button to exit the Mixer Display.

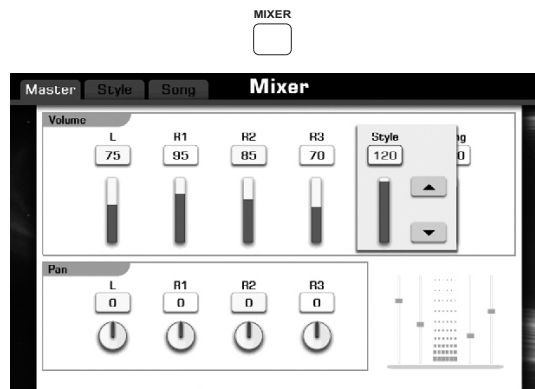


Note:

If you turn on the Chord velocity control, the style volume changes in response to your playing strength in the chord section of the keyboard. Details see *Global Setting-Style & Song*.

Adjusting the Volume Balance for style


1. Press "Style" tab to call up the relevant setting display.
2. Press Drum "110" button in the volume box to call up a pop-up box showing the adjustable range of volume.
3. Press the "+" or "-" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.
4. Adjust the volume of other tracks by pressing the relevant button and operating according to the above steps.
5. Press the [EXIT] button to exit the Mixer Display.

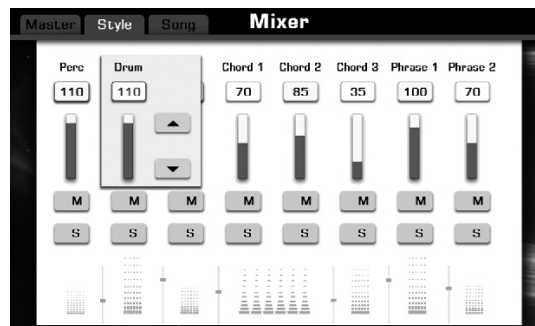

Style

Muting the tracks of a style

1. Press the [MIXER] button to call up the Mixer Display.
2. Press "Style" tab to call up the relevant style setting display.
3. Press the "S" button to set the channel to SOLO (orange font display). You listen to only one instrument of this track. Press the "S" button again to cancel SOLO (gray font display).
4. Press the "M" button to mute the channel (orange font display). You can listen to the playback of the style except this track. Press the "M" button again to cancel MUTE (gray font display).
5. Press the [EXIT] button to exit the Mixer Display.

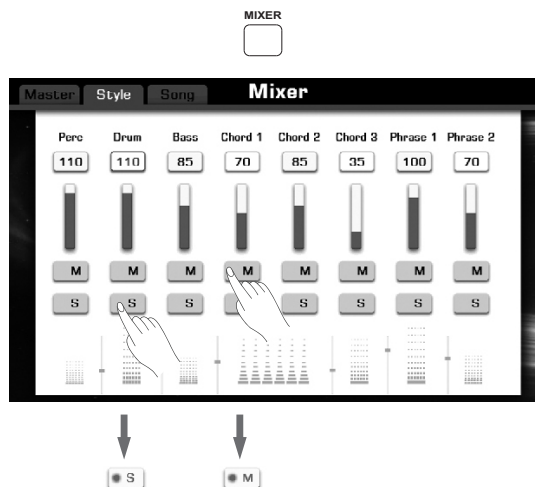



Split Point Settings

There are two Split Points that separate the different sections of the keyboard: the Chord section, the LEFT part section and the RIGHT 1 and 2 sections. The two Split Point settings (below) are specified as note names.

Split Point (Chord)—separates the Chord section for Style playback from the section(s) for playing Voices (RIGHT 1, 2,3 and LEFT).

Split Point (Left)—separates the two sections for playing Voices, LEFT and RIGHT 1- 3.

1. Pressing "SPLIT POINT" on main display or pressing "Split" on voice selection display will call up the Split Setting display.
2. Set the Split Point (Chord) and the Split Point (Left) to the same note
 - Press "Chord + Left" to turn it on.
 - Use the DATA DIAL, the [+] or the [-] button or press the key directly to set your desired split point.
3. Set the Split Point (Chord) and the Split Point (Left) to different notes.
 - Press "Chord + Left" to turn it off.
 - Press Chord Note Name and make the chord split point selected. Use the DATA DIAL, the [+] or the [-] button or press the key directly to set your desired chord split point.
 - Press Left Note Name and make the left split point selected. Use the DATA DIAL, the [+] or the [-] button or press the key directly to set your desired left split point.

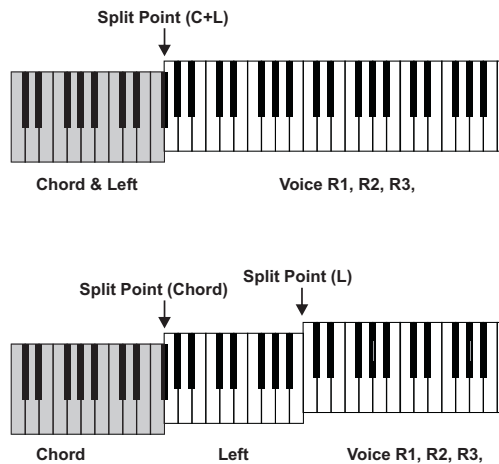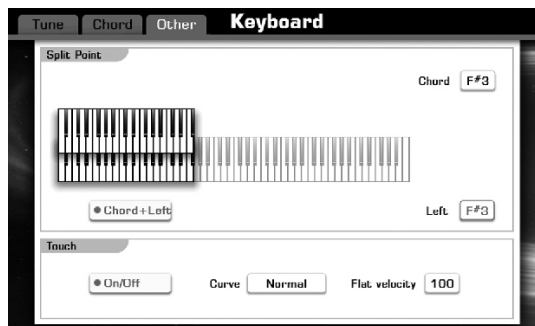

Note:


Split Point(Left) cannot be set lower than Split Point(Chord), and Split Point(Chord) cannot be set higher than Split Point(Left).

Selecting a Chord Fingering Type

Style playback can be controlled by the chords you play in the chord section of the keyboard. There are two types of fingering. Holding down [A.B.C] button will call up the Chord Setting display. Press the Fingering type name to select your desired Chord Fingering type.


Press "Full Range" to turn it on (orange font display). Detect chords in the entire key range. Chords are detected in a way similar to Multi Finger, even if you split the notes between your left and right hands.

Finger	Automatically detects Single Finger or Multi Finger chord types.
Multi Finger	Only detects Multi Finger chord type.

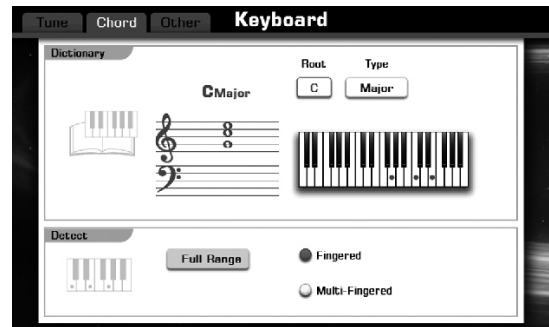


Chord Basics


Three or more notes played together is defined as a "chord". The most basic chord type is the "triad" consisting three notes: the root, third and fifth degree of the corresponding scale. A "C major triad", for example, is made up of the notes C (the root), E (the third note of the C major scale) and G (the fifth note of the C major scale).

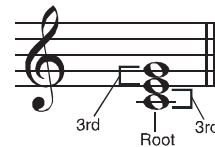

In the C major triad shown, the lowest note is the "root" of the chord (this is the chord's "root position" using other chord notes for the lowest note results in "inversion"). The root is the central sound of the chord, which supports and anchors the other chord notes. The distance (interval) between adjacent notes of triad in root position is either a major or minor third.

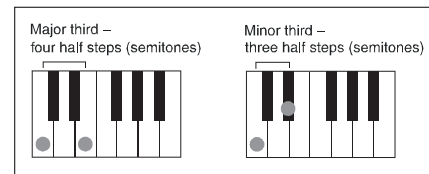


The lowest interval in our root-position triad (between the root and the third) determines whether the triad is a major or minor chord, and we can shift the highest note up or down by a semitone to produce two additional chords, as shown.

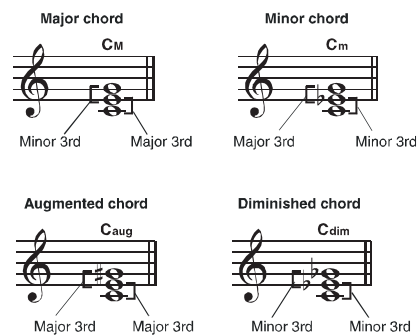

The basic characteristics of the chord sound remain intact even if we change the order of the notes to create different inversions. Successive chords in a chord progression can be smoothly connected, for example, by choosing the appropriate inversions.

Reading Chord Names

 Chord names tell you just about everything you need to know about a chord (other than the inversion/voicing). The chord name tells you what the root of a chord is, whether it is major, minor or diminished, whether it requires a major or flatted seventh, what alterations or tension does it use...all at a glance.



Style

Single Finger

Single-finger accompaniment makes it simple to produce beautifully orchestrated accompaniment using major, seventh, minor and minor-seventh chord by pressing a minimum number of keys on the auto accompaniment section of the keyboard.

C		<ul style="list-style-type: none"> • To play a major chord Press the root note of the chord
Cm		<ul style="list-style-type: none"> • To play a minor chord Press the root note together with the nearest black key to the left of it .
C7		<ul style="list-style-type: none"> • To play a seventh chord Press the root note together with the nearest white key to the left of it .
Cm7		<ul style="list-style-type: none"> • To play a minor seventh chord Press the root notes together with the nearest white and black keys to the left of it (three keys altogether) .

Multi Finger

The Fingered type recognizes the various chord types (Details See the chord list) and can be looked up using the Chord Dictionary function.

0 C	1 C6	2 CM7	3 CM7(#11)	4 CM(9)	5 CM7(9)
6 C6(9)	7 Caug	8 Cm	9 Cm6	10 Cm7	11 Cm7(b5)
12 Cm(9)	13 Cm7(9)	14 Cm7(11)	15 CmM7	16 CmM7(9)	17 Cdim
18 Cdim7	19 C7	20 C7sus4	21 C7(b5)	22 C7(9)	23 C7(#11)
24 C7(13)	25 C7(b9)	26 C7(b13)	27 C7(#9)	28 CM7aug	29 C7aug
30 Csus4	31 sus2	Notes enclosed in parentheses • are optional; the chords could be recognized without them.			

Chord Dictionary

If you know the name of a chord but don't know how to play it, you can use the Chord Dictionary function.

1. Holding down [A.B.C] button will call up the Chord Setting display.
2. Press "Root C" button to select the root note.
3. Press "Type Major" button to select the chord type.

The notes you need to play to make the selected chord are shown in the display. (Music Score and Keyboard)

A.B.C.



CHORD
DICT.

Operations for Style Playback

Style Variations

While you play, you can automatically add specially created intros and endings, as well as variations in the rhythm/chord patterns, for more dynamic, professional-sounding performances.

 
INTRO

This is used for the beginning of the song. Each preset style features two different intros. When the intro finished playing, accompaniment shifts to the Main section. Press one of the INTRO [A]–[B] buttons before starting style playback. Now the LED of INTRO flashes, the style is ready to play. Press the [START/STOP] button or play a chord (SYNC START is enabled) to start playing intro.




MAIN

This is used for playing the main part of the song. It plays an accompaniment pattern of several measures, and repeats indefinitely. Each preset style features four different patterns. Press one of the MAIN [A]–[D] buttons during style playback, your desired MAIN section will start playing at the next measure.




FILL IN

The fill-in sections let you add dynamic variations and breaks in the rhythm of the accompaniment, to make your performance sound even more professional. Turn on the [AUTO FILL IN] button, the LED of the [AUTO FILL IN] button will light up. Simply press one of the MAIN (A, B, C, D) buttons as you play, and the selected fill-in section plays automatically (the relevant LED of MAIN flashes). When the fill-in is finished, accompaniment shifts to the Main section.

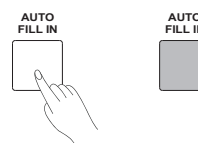

ENDING

 This is used for the ending of the song. Each preset Style features two different endings. When the ending is finished, the style stops automatically. Press one of the ENDING [A]–[B] buttons during style playback (the relevant LED of MAIN flashes). The ending will start playing at the next measure.



The Function Description of Control Buttons

 
START/STOP

Start or stop playing back the style. When the style is playing, the LED of [START/STOP] button flashes according to the current tempo.



SYNC START

This lets you start playback as soon as you play the keyboard.




SYNC STOP

This lets you stop the Style anytime you want by simply releasing the chord notes.

O.T.S LINK


This lets you automatically have One Touch Settings change when you select a different Main section (A–D). To use the OTS Link function, press the [OTS LINK] button. The LED of the [OTS LINK] button will light up.

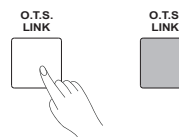

Style

FADE IN

The Fade In produces smooth fade-ins when starting the Style. Press the [FADE IN/OUT] button when Style playback is stopped, the LED of the [FADE IN/OUT] button will light up. When the Fade In is finished, the LED of the [FADE IN/OUT] button will light off.

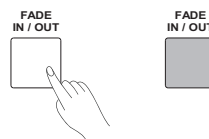

FADE OUT

The Fade Out produces smooth fade-outs when stopping the Style. Press the [FADE IN/OUT] button during Style playback, the LED of the [FADE IN/OUT] button will light up. When the Fade Out is finished, the style will be stopped automatically and the LED of the [FADE IN/OUT] button will light off.

Note:

You can set the fade-in and fade-out time, Details see Global Setting-Utility.

Adjusting the Tempo


1. Press the [TEMPO+] or [TEMPO-] button to call up the pop-up tempo setting display.
2. Press the [TEMPO+] or [TEMPO-] button to set the tempo. Pressing and holding either button lets you continuously increase or decrease the tempo value when the tempo dialog is popped up. Press the [TEMPO+] and [TEMPO-] buttons simultaneously to reset the tempo.

The number in the display indicates how many quarter note beats there are in one minute. The range is between 30 and 280.

3. Press the [EXIT] button to close the Tempo display.


Note:

When you select another style during style playback, the selected style will start playing at next measure by current tempo. If you turn off the Lock Tempo function, it will use the new style's default tempo when the style changes. How to turn off the Lock Tempo? Details see *Global Setting-Style & Song*.

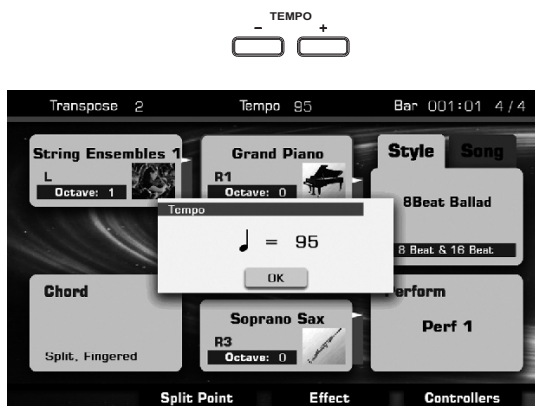

Using the Metronome

1. Press the [METRO] button to turn the metronome on. The LED of [METRO] button flashes according to the current tempo.
2. Press the [METRO] button again to turn the metronome off.

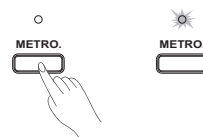

Adjusting the metronome tempo is same as adjusting the tempo. The metronome parameters:


VOLUME	Determines the level of the metronome sound.
Bell ON/OFF	Conventional metronome sound, with bell or no bell.
TIME SIGNATURE	Determines the time signature of the metronome sound.

How to set these parameters? Details see *Global Setting-Utility-Metronome*.

One Touch Setting

One Touch Setting is a powerful and convenient function that lets you instantly recognize virtually all Auto-accompaniment-related panel settings with the touch of a single button.

1. Press the [O.T.S.] button to turn on the One Touch Setting for the current style. The LED of the [O.T.S.] button will light up.
2. Press one of the [ONE TOUCH SETTING] buttons [M1]-[M4], the relevant LED will light up, A.B.C and SYNC START are automatically turned on. Various panel settings (such as voice, effect, etc.) that match the selected style can be instantly recalled with just a single button press.

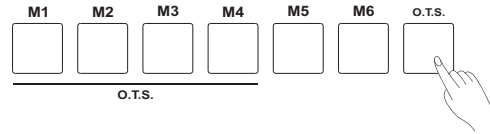

One Touch Setting Parameters:

Part ON/OFF (VOICER1,R2,R3,L)
 Voice Selection (VOICER1,R2,R3,L)
 Octave (VOICER1,R2,R3,L)
 Volume (VOICER1,R2,R3,L)
 Reverb Level (VOICER1,R2,R3,L)
 Chorus Level (VOICER1,R2,R3,L)

Note:

If the OTS LINK is turned on, various panel settings (such as voice, effect, etc.) that match the selected Main Section will be instantly recalled when you select the Main Section. The relevant O.T.S LED will light up to hint.

Saving, Deleting or Renaming the User Style

1. Press "USER" or "USB" tab on Style Selection display to call up the relevant display for user styles.
2. Select your desired user style by pressing the relevant name of user style.
3. Press the "Menu" button to display the relevant buttons on the current display.
4. Press "SAVE TO USER" to call up soft keyboard display, enter the new name and press "OK" to save as a new user style to the internal memory.
5. Press "SAVE TO USB" to call up soft keyboard display, enter the new name and press "OK" to save as a new user style to the USB device memory.
6. Press "DELETE" to display the pop-up box, press "OK" to delete the current user style.
7. Press "RENAME" to call up soft keyboard display, enter the new name and press "OK" to rename the current user style.



Note:

If the new name you entered is same as the name of existed user style, a pop-up box will appear.

Please press "OK" and rename the file again.

Song

The instrument can play back the following Song types.

Preset Songs

Songs in the Song Selection PRESET display. Try out the different songs referring to the song list in the appendix.

Your Own Recorded Songs

These are MIDI Songs which you've recorded and saved to the USER display.

These are Audio Songs which you've recorded and saved to the USB display. (USB is available when you connect USB device)

External Songs

- SMF (Standard MIDI file)
Standard MIDI Files are generally available as one of two types:
Format 0 or Format 1.
- Audio File (MP3/WMA /WAV)

Playing Various Songs

1. Press the [SONG SELECT] button or press SONG display area on the Main Display to call up the Song Selection display.
2. Press one of the song categories NAME in the screen to select the song category.
3. Press the cursor button on LCD to select your desired song page.
4. Press the song NAME to select the desired song on the current page display.
5. Press the [PLAY/STOP] button to start playback.
6. Press the [PLAY/STOP] button again to stop playback.

Note:

If you want to select the user song, press the "USER" tab to select the USER display or press the "USB" tab to select the USB display.

Playing Songs from USB device in sequence

1. Select a song in the desired folder.
 2. Turn on the Loop On function in the top right corner of the screen.
 3. Select Folder/Group playing mode.
- Now, you can play all Songs in a folder continuously.

How to turn on Loop On and select playing mode in Global Setting menu? Details see **Global Setting-Style & Song**.



 
Operations for Song Playback

PLAY/STOP

Start or stop playing back the song. When the song is playing, the LED of [PLAY/STOP] button flashes according to the current tempo.

PAUSE

Press this button during song playback to pause the current song. Press it again and the song will resume from the current position.




REWIND and FAST FORWARD

Pressing the [REW] or [FF] button automatically calls up a pop-up window showing the current measure number in the current display.

Press the [REW] or [FF] button to move back or forth.

Pressing and holding either button lets you continuously move back or forth.

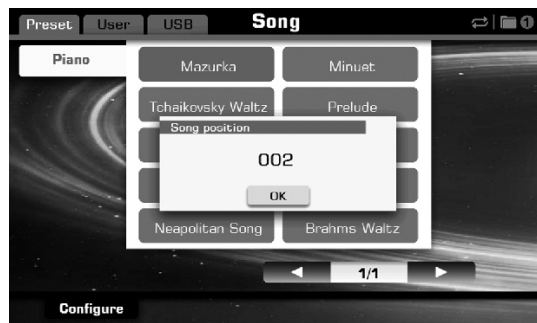


Adjusting the Volume of the Song

Press the [MIXER] button to call up the Mixer Display.

Adjusting the volume balance between the Song and the keyboard

This lets you adjust the volume balance between Song playback and the sound you play on the keyboard.


1. Press "Master" tab to call up the relevant setting display.
2. Press Song "110" button in the volume box to call up a pop-up box showing the adjustable range of volume.
3. Press the "▲" or "▼" button in screen or use the DATA DIAL, the [+] or the [-] button to adjust the data.
4. Adjust the keyboard volume by pressing the relevant button and operating according to the above steps.

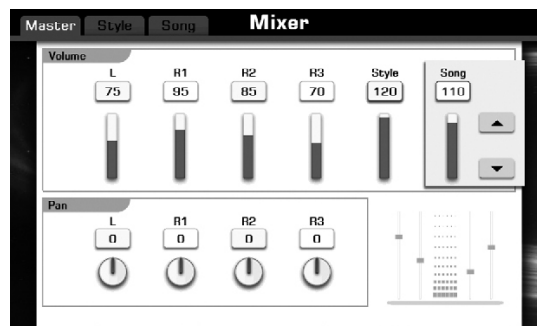

Adjusting the Volume of each Channel of the MIDI Song


A MIDI song may contain up to sixteen MIDI channels. You can adjust the volume of each channel and mute or solo each track.

1. Select a Song.
2. Press the [MIXER] button to call up the Mixer Display.
3. Press "Song" tab to call up the relevant setting display.
4. Press 1 "100" button in the volume box to call up a pop-up box showing the adjustable range of volume.
5. Press the "▲" or "▼" button or use the DATA DIAL, the [+] or the [-] button to adjust the data.
6. Adjust the volume of other tracks by pressing the relevant button and operating according to the above steps.

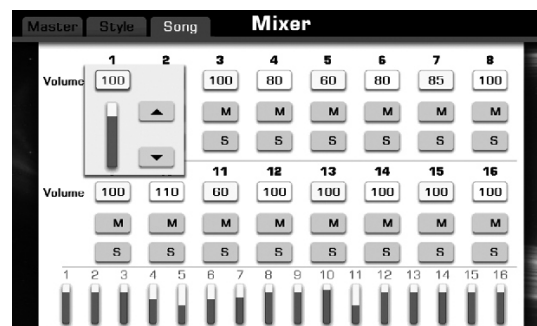

Song

7. Press the “S” button to set the channel to SOLO. You listen to only one instrument of this track. Press the “S” button again to cancel SOLO.
8. Press the “M” button to mute the channel. You can listen to the playback of the song except this track. Press the “M” button again to cancel MUTE.
9. Press the [EXIT] button to exit the Mixer Display.

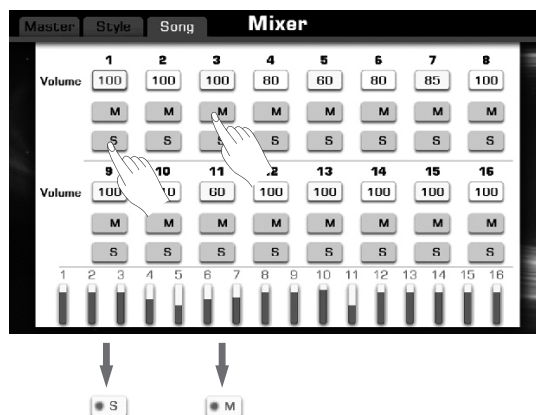

Displaying Music Notation (Score)

You can view the music notation of the selected Song.

1. Select a Song.
2. Press the [SCORE] button to display the music notation.
Hint:
Look through the entire score before playing back the Song.
3. Press the [PLAY/STOP] button to start playback. The position indicator moves through the score, indicating the current position.

Operation for Score Display

Left On/Off: Turn on or off the score of left hand.
Right On/Off: Turn on or off the score of right hand.

Page Up: Goes to the previous page of the score.
Page Down: Goes to the next page of the score.

Set Up

Set the detailed parameters of the view type as desired.


1. Press the “Set Up” button to call up the detailed setting display.
2. Press the relevant button to set the view type.
3. Press the “OK” button to apply the setting.



100
95
75
25
5
0

LEFT CH	Determines which MIDI channel in the Song data is used for the left-hand part. Note: This setting returns to Auto when a different song is selected.
RIGHT CH	Determines which MIDI channel in the Song data is used for the right-hand part. Note: This setting returns to Auto when a different song is selected.
Auto: The MIDI channels in the Song data for the right- and left-hand parts are assigned automatically.	
1-16: Assigns the specified MIDI hannel (1–16) to each of the left- and right-hand parts.	


Mute: Press the Right Ch "M" button to mute the right channel and press the Left Ch "M" button to mute the left channel . Press the "M" button again to cancel MUTE.

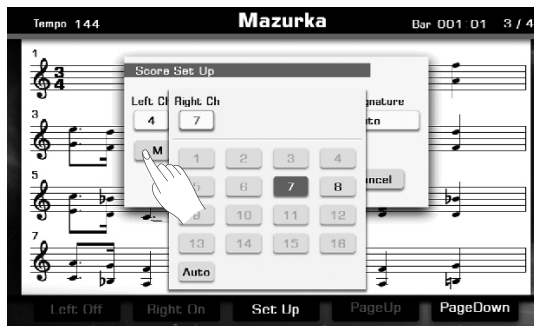

QUANTIZE	This gives you control over the note resolution in the notation, letting you shift or correct the timing of all displayed notes so that they line up to a particular note value. Make sure to select the smallest note value used in the song.
1/4, 1/8, 1/16, 1/32	



KEY SIGNATURE	This lets you enter key signature changes in the middle of a song, at the stopped position. This menu is useful when the selected song contains no key signature settings for displaying notation.
Auto: Select the key signature that has been assigned in the song data.	

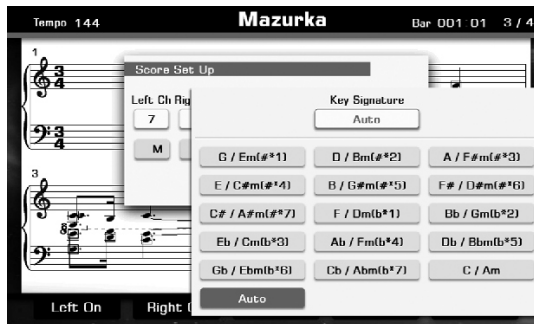

100
95
75
25
5
0


Piano Mode

The instrument possesses a piano mode for piano player specially. In this mode, you can select various piano voice and different ambience for your performance. You can also adjust brightness, pitch, velocity curve, envelope, EQ of the selected piano voice. You can turn on/off the metronome and adjust the parameter of the metronome in this mode.

Entering the Piano Mode

Press the [PIANO MODE] button to enter the piano mode and call up the Piano Setting display.

1. Press the piano picture of left column on piano setting display to select your desired piano voice.
2. Press the ambience picture of right column on piano setting display to change the ambience of performance.
3. Press the [TRANPOSE +] button or the [TRANPOSE -] button to set the transpose value, the range of parameter is from -12~+12. Press these two buttons simultaneously to set the default value 0.
4. Press the [OCTAVE +] button or the [OCTAVE -] button to set the octave value, the range of parameter is from -1~+1. Press these two buttons simultaneously to set the default value 0.

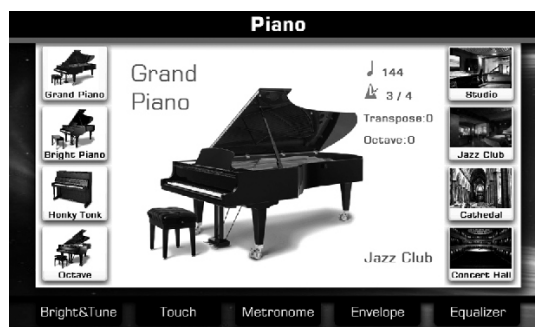


The Setting of this Mode

Item	Parameter
Bright & Tune	Brightness Tune
Touch	Soft Medium Hard
Metronome	Time Signature Volume Bell On
Envelope	Attack Decay Sustain Release
Equalizer	Low Low-Mid High-Mid High

Brightness & Tune


1. Press the "Bright & Tune" icon on piano setting display to call up the Brightness&Tune Setting display.
2. Press the brightness data icon to call up a pop-up box showing the adjustable range of brightness.
3. Press the "+" or "-" icon or use the DATA DIAL, the [+] or the [-] button to adjust the data.
4. Press the tune relevant icon (ex. 440.0Hz) to call up a pop-up box showing the adjustable range of tune.
5. Press the "+" or "-" icon or use the DATA DIAL, the [+] or the [-] button to adjust the data.
6. Press the "close" button icon to return to piano setting display.

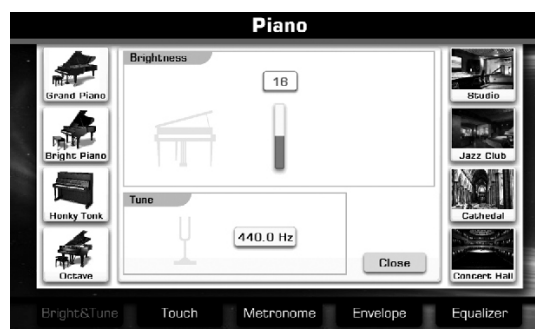

Piano Mode


Touch

1. Press the "Touch" icon on piano setting display to call up the velocity curve selection display.
2. Press the relevant icon to select your desired velocity curve.
3. Press the "close" button icon to return to piano setting display.

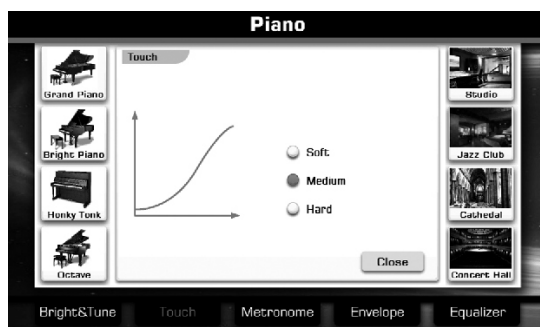


Metronome

1. Press the "Metronome" icon on piano setting display to call up the Metronome Setting display.
2. Same operations as Global Setting-Utility-Metronome adjustment.
3. Press the "close" button icon to return to piano setting display.

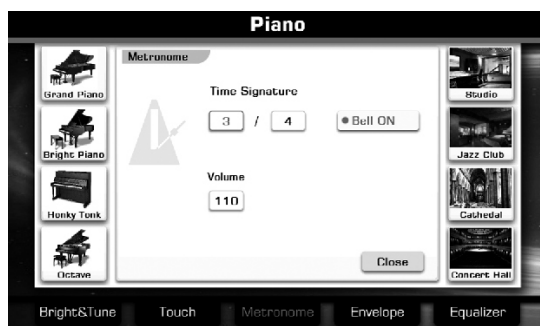


Envelope

1. Press the "Envelope" icon on piano setting display to call up the Envelope Setting display.
2. Same operation as Editing Voice-Envelope adjustment.
3. Press the "close" button icon to return to piano setting display.

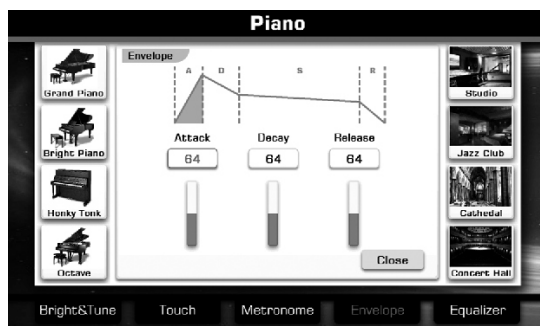

Equalizer

1. Press the "Equalizer" icon on piano setting display to call up the Equalizer Setting display.
2. Same operation as Global EQ adjustment.
3. Press the "close" button icon to return to piano setting display.

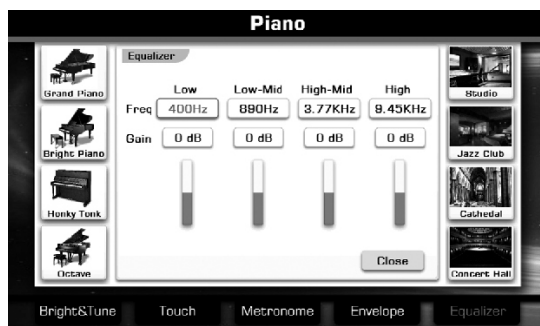

Song Recording

You can record your own performances to MIDI and save them to the User tab display.
You can record your own performances as Audios and save them to an external storage device.


MIDI Recording

Two different MIDI recording methods are available:
Quick Recording which lets you record performance conveniently and quickly, Multi track Recording which lets you record several different parts to multiple channels.
You can also edit Songs after they've been recorded.

Quick Recording

This lets you record your performance conveniently and quickly.

1. Press the [METRO] and [RECORD SONG] buttons simultaneously to call up the Recording Display. A blank Song ("New Song") is called up for recording. The LED of [RECORD SONG] is flashing that means it is in the recording standby mode.

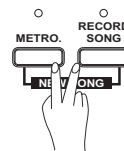


2. Make the desired panel setting for your keyboard performance.

Recording the RIGHT2, RIGHT3, and LEFT parts

Pressing the "ch mute" button and selecting the relevant part or pressing the relevant part button directly to turn on the relevant part and record them.

 Select the voice for each keyboard part. Details see *Voice-Playing Various Voices*.



Recording Styles

Press the "Rec ACMP" button to switch recording accompaniment on or off.

Select a style. Details see *Style- Selecting Various Styles*.
Set the tempo for recording by pressing the [TEMPO+] or [TEMPO-] buttons.

Using Performance Memories

Press one of the PERFORMANCE MEMORY [1-6] buttons.

3. Start recording.
Press the [PLAY/STOP] button or Press the [RECORD SONG] button.
The LED of [RECORD SONG] will light up.

Playing the keyboard.
Recording begins automatically as soon as you play a note on the keyboard.

Note:

You can turn on the metronome during recording. The metronome sound will not be recorded.



 
4. Stop recording
Press the "STOP" button on the Record Display or press the [RECORD SONG] button. The LED of [RECORD SONG] will go out.

If you are recording style, press the [ENDING] button, when the Ending is finished, the recording would also stop automatically.

5. Save recording data.
When the soft keyboard is called up, please enter the new name and press "OK" to save the new user song.

Note:

The recorded song data will be lost without executing the save operation.




6. Press the [PLAY/STOP] button to playback the song you just recorded.



Multi Track Recording

A song consists of 16 separate channels. With this method, you can record data to each channel independently, one by one. Both Keyboard and Style parts can be recorded.

You can also record over already-recorded parts of an existing User Song.

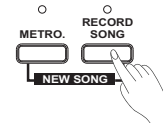

1. Press the [RECORD SONG] button to call up the Recording Display.

If the current song is user song, this user song is called up for new recording.


If the current song is preset song, a blank song ("New Song") is called up for recording.

2. Set the desired channels to record.

Normally, the keyboard parts (R1, R2, R3, L) should be recorded to channels 1-4, and the styles should be recorded to channels 9-16.

Note:

Press the "Rec ACMP" button to switch accompaniment recording on.

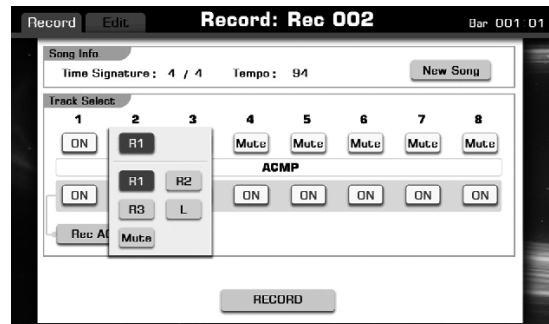

3. Select voices for keyboard parts and select a style.



4. Press the [RECORD SONG] button or press the "RECORD" button on the Recording Display to enter recording standby mode.

5. Press the [RECORD SONG] button or press the "START" button on the Recording Display to start recording.

6. Press the [RECORD SONG] button or press the "STOP" button on the Recording Display to stop recording.

7. Press the [PLAY/STOP] button to listen to your newly recorded performance.


8. To record another channel, repeat steps 2-7.

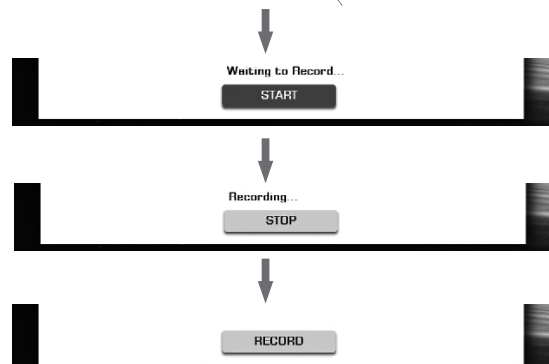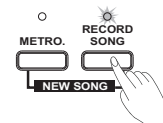

Song Recording

Editing the Recorded MIDI Song

Press the "Edit" tab on the Recording Display or press the "Edit" button on the User Song Selection Display to call up the Song Editing Display.

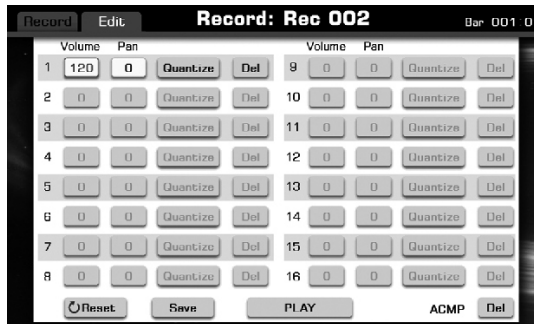


Press the Volume "100" button to call up a pop-up box showing the adjustable range of volume values. Use the DATA DIAL, the [+] or the [-] button to adjust the volume.



Press the Pan "0" button to call up a pop-up box showing the adjustable range of pan values. Use the DATA DIAL, the [+] or the [-] button to adjust the pan.



Press the "Quantize" button to call up a pop-up box showing the quantize accuracy. Use the DATA DIAL, the [+] or the [-] button to adjust the parameter. Press "OK" to confirm executing quantize.

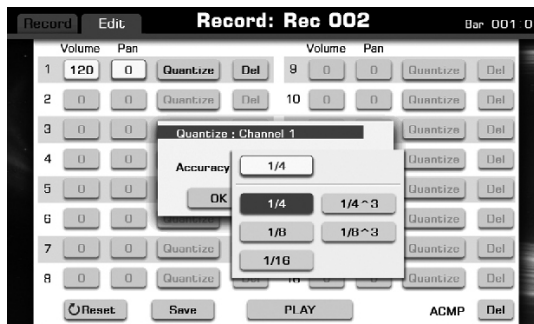

Press the "Del" button to delete the relevant channel.

Press the "PLAY" button to playback the current edited song before saving.

Press the "Reset" button to reset all operations.

Press the "Save" button to call up a pop-up box. Press "OK" to confirm saving.

100
95
75
25
5
0

Audio Recording

Audio recording will record your performance into a CD quality WAV file to your USB storage drive.


The following sounds can be recorded.

- Keyboard parts (R1, R2, R3, L), MIDI Song parts, Style parts
- Input from another audio device, such as a CD player, MP3 player or other audio inputs via the [AUX IN] jack.

1. Connect your USB storage device to the instrument. Press the [RECORD AUDIO] button to start recording your performance. The LED of [RECORD AUDIO] will light up.
2. Press the [RECORD AUDIO] button again to stop recording your performance and call up soft keyboard display. The LED of [RECORD AUDIO] will go out.
3. Enter the new name and press "OK" to save the new audio song. The recorded data using this function is saved as:
 - Stereo WAV data
 - 44.1 kHz sample rate/16 bit resolution

Note:

- The recorded audio file size is depending on the capacity of your USB storage device.
- When you are recording a midi song or playing a audio file from USB device, you can't start audio recording.

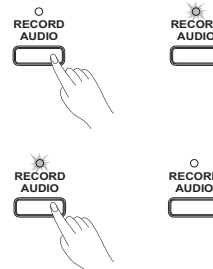

Saving, Deleting or Renaming the User Song

1. Press "USER" or "USB" tab on Song Selection display to call up the relevant display for user songs.
2. Select your desired user song by pressing the relevant name of user song.
3. Press the "Menu" button to display the relevant buttons on the current display.
4. Press "SAVE TO USER" to call up soft keyboard display, enter the new name and press "OK" to save as a new user song to the internal memory.
5. Press "SAVE TO USB" to call up soft keyboard display, enter the new name and press "OK" to save as a new user song to the USB device memory.
6. Press "DELETE" to display the pop-up box, press "OK" to delete the current user song.
7. Press "RENAME" to call up soft keyboard display, enter the new name and press "OK" to rename the current user song.

Note:


If the new name you entered is same as the name of exited user song, a pop-up box will appear.

Please press "OK" and rename the file again.



Global Setting

Press the [Global Setting] button to call up the Global Setting display. The relevant LED will light up.

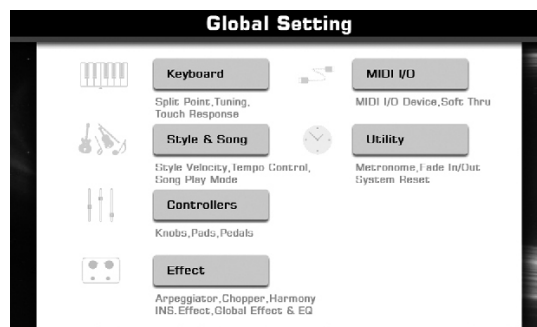


Keyboard

Pressing “Keyboard” on the Global Setting display will call up the Keyboard Setting display.

You can adjust the master tune, transpose, Octave and switch scale tune on or off, etc. Details see **Voice-Changing Pitch**.

Pressing “Chord” tab on the Keyboard Setting display will call up the Chord Setting display. Details see **Style-Selecting a Chord Fingering Type**.

Pressing “Split & Touch” tab on the Keyboard Setting display will call up the Split and Touch Setting display. Details about setting the split point see **Style-Split Point Settings**. Details about setting touch sensitivity see **Voice-Setting the touch sensitivity of the keyboard**.

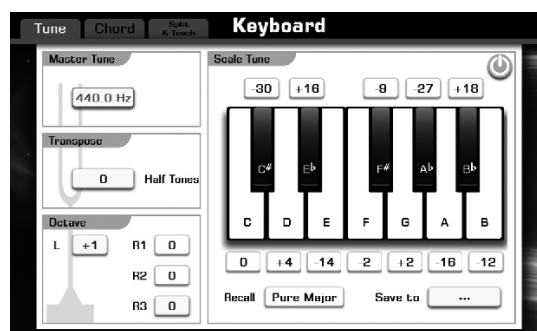

EXIT



Press the [EXIT] button to exit to Global Setting display.

Style & Song


Pressing “Style & Song” on the Global Setting display will call up the Style and Song Setting display.

Press Chord Velocity Control “ON” to turn it on (orange font display). This function let you control the style volume by your playing strength in the chord section of the keyboard.

Press Lock Tempo “ON” to turn it on (orange font display). This function let you change style without changing the tempo during style playback.

Press “LOOP ON” to turn it on (orange font display).

Single	Loop ON	Playback the current song repeatedly until pressing the [PLAY/STOP] button to stop playing.
Single	Loop OFF	The playback will be stopped once the current playing song is finished.
Folder/Group	Loop ON	Playback the songs in one folder from USB device or in one group from User song in sequence repeatedly until pressing the [PLAY/STOP] button to stop playing.
Folder/Group	Loop OFF	The playback will be stopped once all songs in the folder of your USB device or one group of USER song is finished.

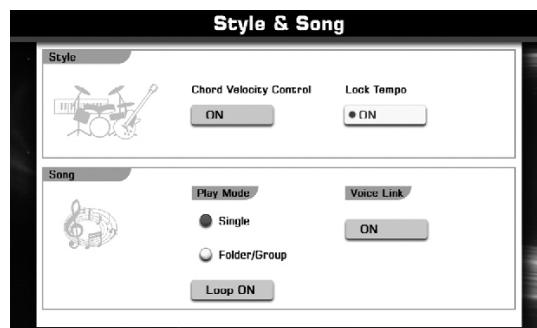

100

95


75

25

5

0

Press Voice Link "ON" to turn it on (orange font display). When this function is ON, if the song is changed when playing preset songs, the voice R1 is changed according to the melody of selected song automatically.

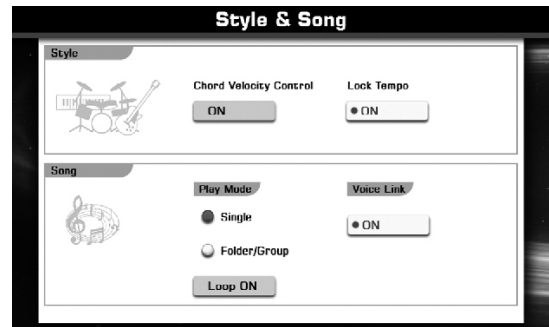

Press the [EXIT] button to exit to Global Setting display.



Controllers

Pressing "Controller" on the Global Setting display or pressing "Controller" on Main Display will call up the Controller Setting display. This instrument has 4 knobs, 8 Multi pads, 3 pedal that can be assigned to various functions.


Knob

These knobs let you change various aspects of the sound in real time while you play. Turn a knob to the right to increase the value, and the left to decrease it.

Press the [SELECT] button to select your desired group, the relevant LED will light up.

The groups (1-2) only effect to the current part. The group 3 lets you control a group of user-assignable functions.

Group 1	Reverb	Chorus	Volume	Pan
Group 2	Attack	Release	Cutoff	Resonance
Group 3	Assign1	Assign2	Assign3	Assign4

 

Pressing "Knob" tab on the Controller Setting display will call up the Knob Setting display.


Turning the knob or pressing the "knob" on the Knob Setting display to select the knob.

These parameters can be assigned to the knob. Press the relevant parameter button to select it.

The parameters (Volume, Pan, Reverb level, Chorus level, Envelope Attack, Envelope Release, Cutoff, Resonance) can be applied to the keyboard part. Press the relevant part button to switch the assigned function of the part on or off.

The parameters (EQ LOW, EQ LOW MID, EQ HIGH MID, EQ HIGH, ARP GAE, ARP VELOCITY, ARP RESO, TEMPO) are applied to the entire system.

How about the effect of these parameters? Details see **VOICE**.

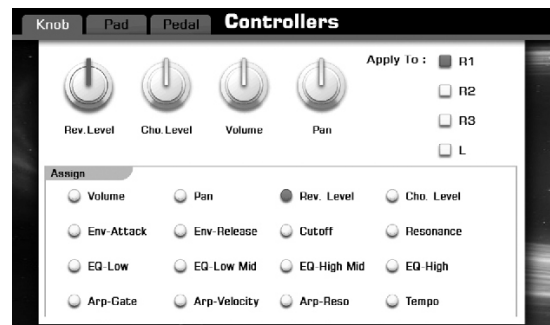

Global Setting


Multi Pad

The Multi Pads can be used to play percussion and pre-recorded chord that can be used to add impact and variety to your keyboard performances.

Press any of the MULTI PADS to play the Multi Pad phrase.

Pressing "Pad" tab on the Controller Setting display will call up the Pad Setting display.

Press the [MULTI PAD] button or press the pad button to select a pad to be edited.

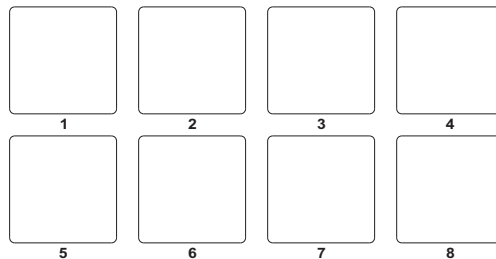


Assign PLAY DRUM function to the pad

You can assign the pad to PLAY DRUM function.

1. Press the "drum" button to select.
2. Press the "voice" button to call up the Drum Set Selection Display.
3. Press the "Assign" button to start assigning.
4. Play any key and listen until you satisfied with this percussion.
5. Press the "Assign" button again to finish assigning.

Now, Press the pad to play the assigned percussion.

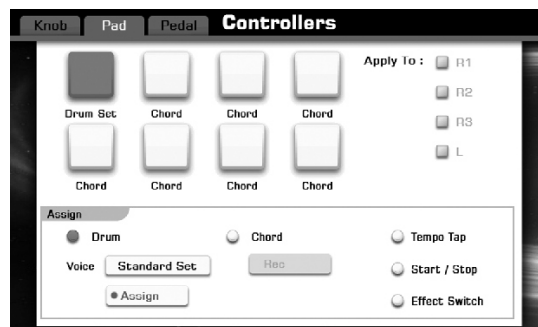


Assign PLAY CHORD function to the pad

You can assign the pad to PLAY CHORD function.

1. Press the "Chord" button to select.
2. Press the "Rec" button to start recording.
3. Play the notes on the keyboard that you want to record.
4. Press the "Rec" button again to stop recording.

Now, Press the pad to play the recorded chord.

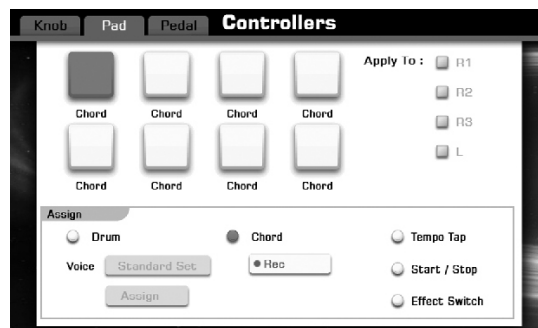


Assign other functions to the pad

You can assign the pad to START/STOP function. Press the pad to start or stop playing the current song or style.

You can assign the pad to TEMPO TAP function. Press the pad four times to automatically start the song or style at that tapped speed.

You can assign the pad to EFFECT SWITCH function, and press the relevant button to select the applied keyboard part.

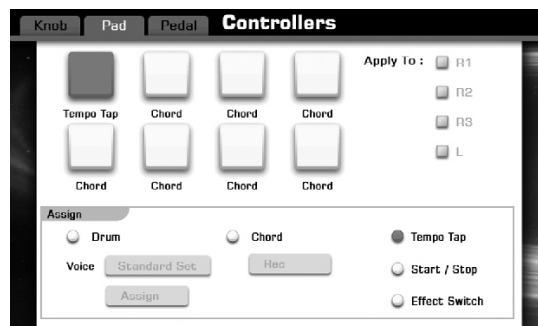



Pedal

Pressing "Pedal" tab on the Controller Setting display will call up the Pedal Setting display.

Assign specific functions to the pedal

Press the relevant button to select.

SOFT	Press this pedal to reduce the volume of the notes you play.	
SOSTENUTO	If you play a note or chord on the keyboard and press the pedal while holding the note(s), the notes will sustain as long as the pedal is held. However, all subsequent notes will not sustain.	
SUSTAIN	When you press and hold the pedal, all notes played on the keyboard have a longer sustain. Releasing the pedal immediately stops (damps) any sustained notes.	
Pitch Bend	UP/DOWN	Determine whether the pitch change is raised or lowered.
	RANGE	Determine the range of the pitch change, in semitones.(0-12)
PORTAMENTO	The portamento effect (a smooth slide between notes) can be produced while the pedal is pressed.	
Next Perf	Press this pedal to select the next performance memory.	
Prev. Perf	Press this pedal to select the previous performance memory.	
Modulation	Press this pedal to apply a vibrato effect.	
Score PgUp	While the song is stopped, you can turn to the previous score page.	
Score PgDn	While the song is stopped, you can turn to the next score page.	
Start/Stop	Same as the [START/STOP] button. Press this pedal to start or stop Style/Song playback.	
Fade In/Out	Same as the [FADE IN/OUT] button.	
Tap Tempo	Press the pedal four times to automatically start the song or style at that tapped speed.	

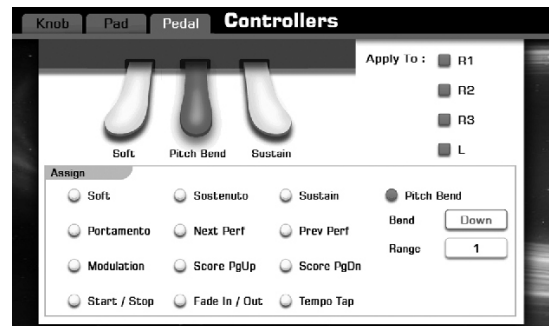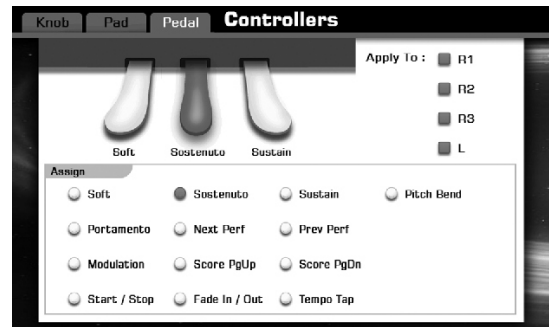


Global Setting

Effect

Pressing “Effect” on the Global Setting display will call up the Effect Setting display.

Details see **Voice**.

Press the [EXIT] button to exit to Global Setting display.

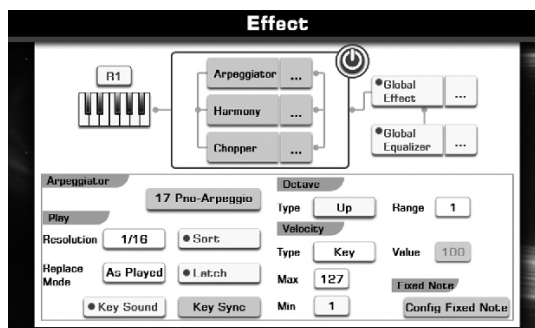

MIDI I/O

Pressing “MIDI I/O” on the Global Setting display will call up the MIDI Setting display.

MIDI IN

Press the relevant button to select the midi data that receive from the MIDI port or the USB port.

Press the channel button to select the channel that receives the midi data.



MIDI OUT

Press the relevant button to select the midi data that transmit to the MIDI port or the USB port.

Press the channel button to select the channel that transmits the midi data.

Press the “Soft Thru” button to switch the Soft Thru function ON or OFF.

Press the [EXIT] button to exit to Global Setting display.

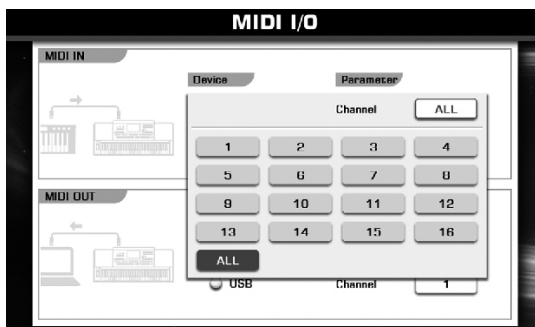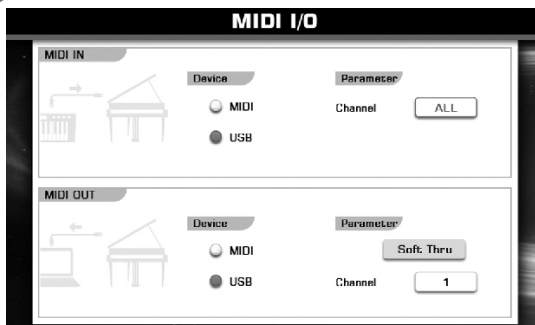

Utility

Pressing “Utility” on the Global Setting display will call up the Utility display.

Metronome

Setting the Time Signature


Press the time signature button1 button to display a pop-up box. Use the DATA DIAL or Press the [+] and [-] buttons to select your desired parameter.

Press the time signature button2 button to display a pop-up box. Use the DATA DIAL or Press the [+] and [-] buttons to select your desired parameter.

Press this “BELL ON” button to add the bell sound to the metronome sound or not.

Adjusting the volume

Press the volume button to display a pop-up box. Use the DATA DIAL or Press the [+] and [-] buttons to adjust the volume of the metronome.

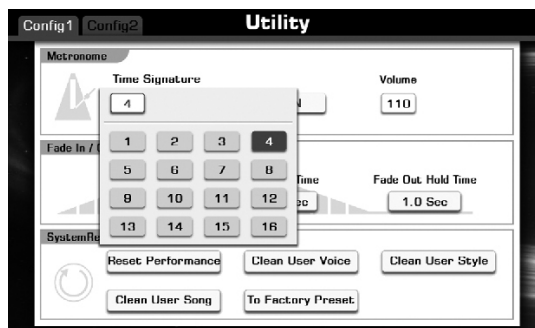


Fade In/Out

FADE IN TIME	Determines the time it takes for the volume to fade in.
FADE OUT TIME	Determines the time it takes for the volume to fade out.
FADE OUT HOLD TIME	Determines the time the volume is held at 0 following the fade out.

Press the relevant time button to display a pop-up box.


Use the DATA DIAL or Press the [+] and [-] buttons to select your desired time.

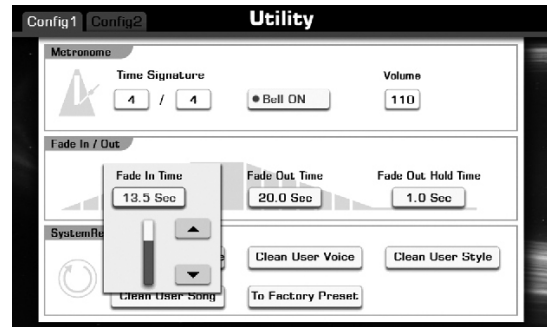

System Reset

Reset Performance	Restores the all performance memory setting to the original factory settings.
Clean User Voice	Delete all user voices.
Clean User Style	Delete all user styles.
Clean User Song	Delete all user songs.
To Factory Reset	Restores the all data to the original factory settings. (user voice, user style, user song, user performance, utility setting, etc.)

Press the relevant button to execute the operation.

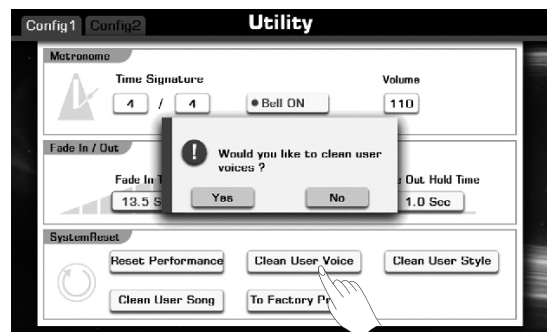


Press the "config2" tab to call up the relevant setting display.

Setting the Date and Time

Press the relevant button to display a pop-up box.

Use the DATA DIAL or Press the [+] and [-] buttons to select your desired parameter.

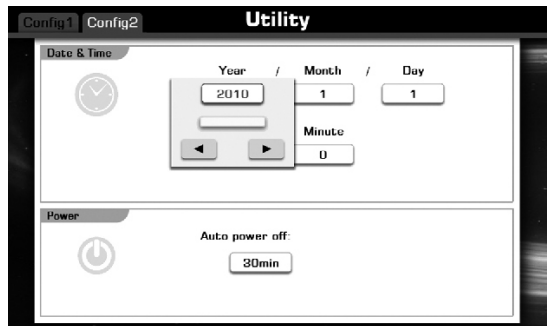


Auto Power Off

Press the relevant button to display a pop-up box.

Use the DATA DIAL or Press the [+] and [-] buttons to select your desired time.

Press the [EXIT] button to exit to Global Setting display.

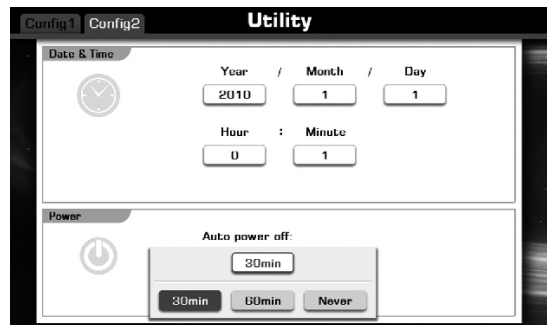

Performance Memory


The Performance Memory feature can make your performance more easily and efficiently. It allows you to save panel settings to a Performance Memory button, and then instantly recall your custom panel settings by pressing a single button (M1-M6). The saved settings for six Memory buttons should be saved as a single Bank (Performance file).

Selecting a Performance Bank

Press the [BANK] button or press PERFORMANCE display area on the Main Display to call up the Performance Selection display. Press the cursor button on LCD to select your desired performance page. Press the performance NAME to select the desired performance on the current page display.

Note:

If you want to select the user performance, press the "User" to select the USER display or press the "USB" to select the USB display. You can edit the preset performance memory and save to user, or create new user performance by the GrandSuite software.

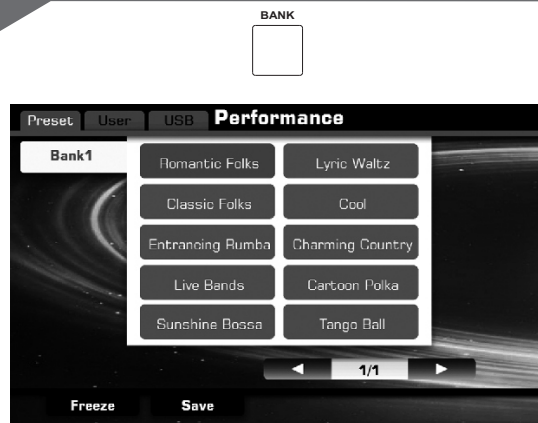


Recalling a Performance Memory Settings


Press one of the Performance Memory buttons ([M1]-[M6]). In this example, the panel settings stored in the memory 3 of performance bank 1 are recalled.

The parameters about the panel settings:

Voice	R1/R2/R3/Left Part ON/OFF R1/R2/R3/Left voice selection R1/R2/R3/Left settings (Volume/Pan/Reverb Level/Chorus Level) Pitch (Transpose/Master Tune /Octave Scale/Tune) Left Split & touch
Style	Style selection Variations Mixer settings about style Chord Split The settings about chord Control button status(SYNC, O.T.S LINK, AUTO FILL, A.B.C) Tempo and the relevant settings
Song	Song selection Play mode Mixer settings about song
Effect	Reverb & Chorus EQ Effect (Arpeggiator, Harmony, Chopper)
Controller	Knob Settings Multi Pad Settings Pedal Settings
Others	Fade and Fade time settings Metronome settings

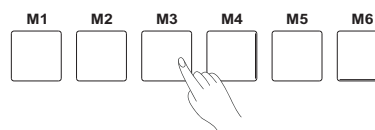


You can use a pedal to select the Performance Memory numbers in order. The pedal is assigned as Next Perf. or Prev. Perf. function.

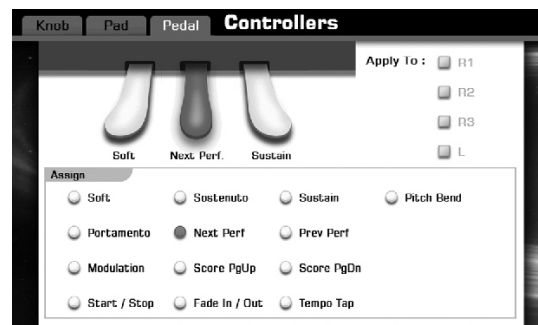

Freezing the Specific Item

The freezing function lets you maintain the settings of certain items and leave them unchanged, even when selecting other Performance Memory buttons.

 Press the [FREEZE] button to turn the FREEZE function on or off.



How to select the frozen item?

1. Press the [BANK] button or press PERFORMANCE display area on the Main Display to call up the Performance Selection display.
2. Press the [FREEZE] button on the Performance Selection display to call up a pop-up box.
3. Press the relevant button to select the frozen items. The parameters about the frozen item see the above parameter form.
4. Press the "OK" button to confirm it.




Note:

The Settings about the FREEZE function are automatically saved to the instrument when you exit from this display. However, if you turn the power off, the settings will be lost.

Registering the Performance Memory Settings

1. Set up the panel controls (such as Voice, Style, effect, and so on) as desired.
2. Press and hold the [STORE] button, then press one of the Performance Memory buttons ([M1]-[M6]). All panel setup will be registered to the selected Performance Memory.

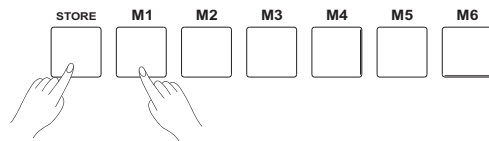

Note:

Any panel setup previously registered to the selected Performance Memory will be erased and replaced by the new settings.

Saving the Preset Performance

1. Press the [BANK] button or press PERFORMANCE display area on the Main Display to call up the Performance Selection display.
2. Press the [SAVE] button on the Performance Selection display to call up a pop-up box.
3. Press the relevant button to select saving to user or saving to USB.
4. Press the [OK] button to call up soft keyboard display, enter the new name and press "OK" to save as a new user performance to the internal memory or USB device.



 
Performance Memory

Saving, Deleting or Renaming the User Performance

1. Press "USER" or "USB" tab on Performance Selection display to call up the relevant display for user Performances.
2. Select your desired user performance by pressing the relevant name of user performance.
3. Press the "Menu" button to display the relevant buttons on the current display.
4. Press "SAVE TO USER" to call up soft keyboard display, enter the new name and press "OK" to save as a new user performance to the internal memory.
5. Press "SAVE TO USB" to display a pop-up box, you can save a single performance file (*.prf) or save a packing performance file (*.tpf) to the USB device memory. Press "OK" button to call up soft keyboard display, enter the new name and press "OK" to save it.
6. Press "DELETE" to display the pop-up box, press "OK" to delete the current user performance.
7. Press "RENAME" to call up soft keyboard display, enter the new name and press "OK" to rename the current user performance.

Note:

If the new name you entered is same as the name of exited user performance, a pop-up box will appear. Please press "OK" and rename the file again.



USB Device

By connecting a USB storage device to your instrument, you can save data you've created to the connected device, as well as read data from the connected device.


Compatible USB device

Recommended Brand: KINGSTON, SANDISK, SONY, LEXAR, TRANSCEND
 Format: FAT 16/32
 Capacity: 1G,2G,4G,8G,16G,32G

Using the USB device

1. Connect the USB storage device to the USB port.
2. Press the [USB DISK] button to display the folders and files under the root directory of USB device.

Press the USB tab on each selection display (such as voice, style, song, performance), enter the relevant folder directly, and save, rename or delete the user files from USB device.

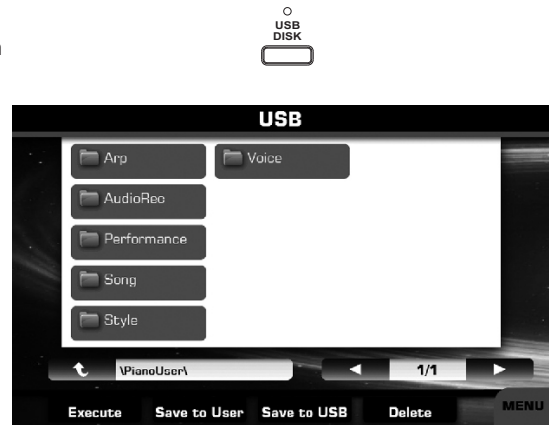

Note

If you save your files to your USB storage device in file selection displays (like VOICE Selection or Song Selection), the files would be saved into folder "PianoUser" in the root directory of your USB storage device.

File Operations in the File Selection Display

Caution:

While the instrument is accessing data (like during the Save, Copy and Delete operations), do not unplug the USB device, and do not turn off the instrument power. Doing so may corrupt the data on either or both devices.

Executing a file

Press the "Execute" button to executing the operation for the selected file.

File Format	Executing Operation
Voice	Select the voice file for the current part
Style	Same as [START/STOP] button
Song (midi file)	Same as [PLAY/STOP] button
Audio file	Same as [PLAY/STOP] button
Performance(*.tpf)	Save to internal user performance memory

Saving a file

Press the "Save to User" button to save the selected file to internal user memory.

Note:

Storage path depends on the file type.

Press the "Save to Usb" button to save the selected file to external USB device.

Deleting a file

Press the "Delete" button to call up a pop-up box.

Press the "OK" button to delete the selected file.

Renaming a file

Press the "Menu" button to display the relevant buttons on the current display.

Press "RENAME" to call up soft keyboard display, enter the new name and press "OK" to rename the selected file.

Note:

If the new name you entered is same as the name of existed user voice, a pop-up box will appear. Please press "OK" and rename the file again.




100
95
75
25
5
0

USB Device

Viewing the file information

Press the "Menu" button to display the relevant buttons on the current display.

Press "File Info" to call up a pop-up box about the file information (EX. Full name, size, etc.).

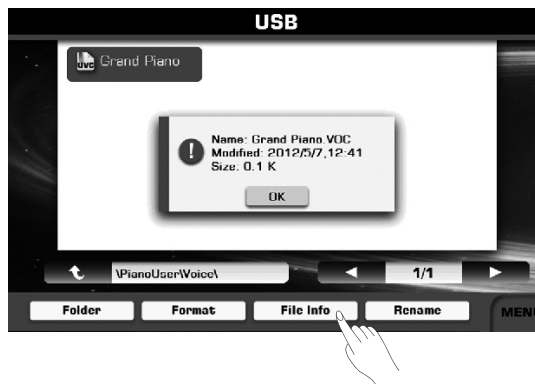


Creating a New Folder

Press the "Menu" button to display the relevant buttons on the current display.

Press "Folder" to call up soft keyboard display, enter the new folder name and press "OK" to create it.

If the name you entered is same as the name of existed folder, a pop-up box will appear.

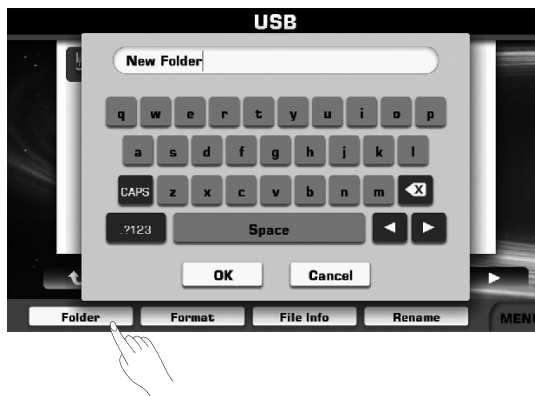

Formatting the USB Device

It is better to use the USB Storage Device which is formatted by the instrument.

Note:

The format operation overwrites any previously existing data. Proceed with caution.

Press the "Menu" button to display the relevant buttons on the current display.

Press "Format" to call up a pop-up box.

Press the "OK" button to format the connected USB device.



By using the MIDI functions you can expand your musical possibilities. This section explains what MIDI is, and what it can do, as well as how you can use MIDI on your instrument.

What's MIDI?

MIDI is an acronym that stands for Musical Instrument Digital Interface, which allows electronic musical instruments to communicate with each other, by sending and receiving compatible Note, Control Change, Program Change and various other types of MIDI data, or messages. The instrument can control a MIDI device by transmitting note related data and various types of controller data. The instrument can be controlled by the incoming MIDI messages which automatically determine tone generator mode, select MIDI channels, voices and effects, change parameter values and of course play the voices specified for the various parts. MIDI messages can be divided into two groups: Channel messages and System messages.

MIDI Terminals

In order to exchange MIDI data between multiple devices, each device must be connected by a cable.


MIDI IN: Receives MIDI data from a computer.

MIDI OUT: Transmits the instrument information as MIDI data to another MIDI device.

MIDI THRU PORT: You can use MIDI cable to link the MIDI THRU port to other MIDI instrument MIDI IN port. The message that the MIDI IN port receives will be auto sent to the MIDI THRU port, so that one MIDI instrument can control many MIDI instrument at the same time.

Connect the MIDI OUT of other Device to the MIDI IN jack on the rear panel, this instrument will as sound module.

Connect the MIDI IN of other Device to the MIDI OUT jack on the rear panel. this instrument will as Midi Controller.

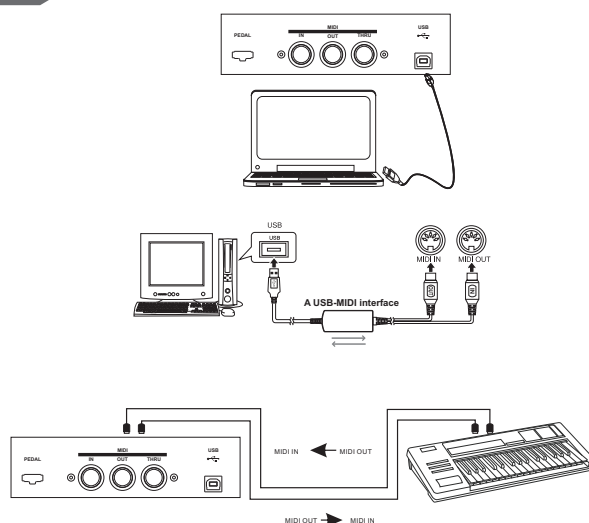

Downloading Data from the Computer

Connect a standard USB cable between the rear-panel of the USB jack of the instrument and the USB jack on your computer.

Power on the instrument first, and then open the GrandSuit software in your computer. The GrandSuit has been connect successfully with the instrument as shown.


You can download SMF MIDI files to the keyboard as user songs or upload the user songs.

You can upload user styles to the computer as a backup or download them to the keyboard.

You can upload user voices to the computer as a backup or download them to the keyboard.

You can upload memory files to the computer as a backup or download them to the keyboard.

Concrete operational methods see software operating instructions!

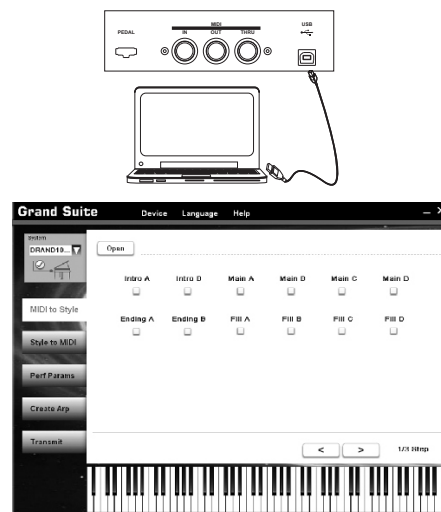

Troubleshooting

Problem	Possible Cause and Solution
The speakers produce a "pop" sound whenever the power is turned ON or OFF.	This is normal and is no cause for alarm.
No sound when the keyboard is played.	The R1/R2/R3/L voice volume (Mixer) settings could be set to low. Make sure the voice volumes are set at appropriate levels.
When using a mobile phone, noise is produced.	Using a mobile phone in close proximity to the instrument may produce interference. To prevent this, turn off the mobile phone or use it further away from the instrument.
The auto accompaniment does not play back even Sync is in standby condition and a key is pressed.	You may be trying to start accompaniment by playing a key in the right-hand range of the keyboard. To start the accompaniment with Sync Start, make sure to play a key in the left-hand range of the keyboard.
Certain notes sound at wrong pitch.	Make sure that the Master Tune is set to "440.1hz" and turn off the Scale Tune.
The Harmony function does not operate.	Harmony cannot be turned on when the Full Keyboard fingering mode is selected. And Harmony cannot be turned on when a drum kit is selected for the voice R1.

Specifications

Keyboard

88 keys

Display

7" TFT , 800 x 480 color touch screen

Polyphony

128

Voice

672 (including 256 GM2 instrument voices and 17 drum kits)

Effect

Reverb, Chorus, Master EQ, Arpeggio, Harmony, Chopper

Style

240

Style Control

STYLE SELECT, START/STOP, SYNC STOP, SYNC START, INTRO A, INTRO B, MAIN A, MAIN B, MAIN C, MAIN D, ENDING A, ENDING B, A.B.C., AUTO FILL IN, O.T.S. LINK, FADE IN/OUT

Song

10 Preset Songs

Song Control

SONG SELECT, PLAY/STOP, PAUSE, RW, FF

SCORE

Display the Music Notation

Record

MIDI Recorder and USB Audio Recorder

Demo

9

Tempo

30-280, Tap Tempo

Performance Memory

10(BANK)*6(M1-M6), FREEZE, STORE

Multi Pad

8

Other Control

MASTER VOLUME SLIDER, SELECT, 4 KNOBS, EFFECT ON/OFF, GLOBAL SETTING, MIXER, VOICE DIRECT BUTTONS, DATA DIAL, +, -, PART ON/OFF BUTTONS, EXIT, SUSTAIN, TRANSPOSE+, TRANSPOSE-, OCTAVE+, OCTAVE-, O.T.S., MODULATION, PITCH BEND

USB Device

Save the user data (Ex: User voices, User Song, User Memory, etc.)

Play the User Song (Format: SMF/WAV/MP3/WMA)

Connectors

MIC IN, AC IN, Headphones, AUX. IN, AUX. OUT, Soft Pedal, Sustain Pedal, Sostenuto Pedal, USB, MIDI IN, MIDI OUT, MIDI THRU, USB PORT.

Speaker

40W+40W, 70W+70W, 15W+15W

Dimensions

1476mm(W) x 1200mm(D) x 937.5mm(H)

Weight

141Kg

* All specifications and appearances are subject to change without notice.

Voice List

No.	Name	LCD Name
PIANO		
1	Acoustic Grand Piano	Grand Piano
2	Acoustic Grand Piano (wide)	Grand Piano/Wide
3	Acoustic Grand Piano (dark)	Grand Piano/Dark
4	Bright Acoustic Piano	Bright Piano
5	Bright Acoustic Piano (wide)	Bright Piano/Wide
6	Electric Grand Piano	Electric Grand
7	Electric Grand Piano (wide)	Elec.Grand/Wide
8	Honky Tonk Piano	Honky Tonk
9	Honky Tonk Piano (wide)	Honky Tonk/Wide
10	Harpsichord	Harpsichord
11	Harpsichord (octave mix)	Harpsichord/Octave
12	Harpsichord (wide)	Harpsichord/Wide
13	Acoustic Grand Piano (stereo)	Stereo Grand Piano
14	Octave Grand Piano 1	Octave Piano 1
15	Octave Grand Piano 2	Octave Piano 2
16	Piano & Strings 1	Piano&Strings 1
17	Piano & Pad 1	Piano&Pad 1
18	Piano & Choir 1	Piano&Choir 1
19	Piano & EP 1	Piano&EP 1
20	Piano & Vibraphone 1	Piano&Vibra 1
21	Jazz Piano	Jazz Piano 1
22	Pop Piano	Pop Piano
23	Rock Piano	Rock Piano
24	Club Piano	Club Piano 1
25	Piano & Strings 2	Piano&Strings 2
26	Piano & Pad 2	Piano&Pad 2
27	Piano & Choir 2	Piano&Choir 2
28	Piano & EP 2	Piano&EP 2
29	Piano & Vibraphone 2	Piano&Vibra 2
30	Electric Grand Piano (dark)	Elec.Grand/Dark
31	Fusion Electric Grand Piano	Fusion Piano
32	Club Electric Grand Piano	Club Piano 2
33	Wah Electric Grand Piano	Wah Piano
34	Honky Tonk Piano (dark)	Honky Tonk/Dark
35	Honky Tonk Piano (stereo)	Honky Tonk/Stereo
36	Harpsichord (with key off)	Harpsichord/KeyOff
37	Harpsichord 2	Harpsichord 2
E.PIANO		
38	Electric Piano 1	E.Piano 1
39	Electric Piano 2	E.Piano 2
40	Detuned Electric Piano 1	Detuned EP 1
41	Electric Piano 1 (velocity mix)	Velocity EP 1
42	60's Electric Piano	60's EP
43	Detuned Electric Piano 2	Detuned EP 2
44	Electric Piano 2 (velocity mix)	Velocity EP 2
45	EP Legend	EP Legend
46	Phase EP 1	Phase EP 1
47	Clavi	Clavi
48	Pulse Clavi	Pulse Clavi
49	Fusion Electric Piano	Fusion EP
50	Club Electric Piano	Club EP
51	Jazz Electric Piano	Jazz EP
52	Phase EP 2	Phase EP 2
53	Tremolo EP 1	Tremolo EP 1
54	Funk EP 1	Funk EP 1
55	Modern EP 1	Modern EP 1

56	Warm EP 1	Warm EP 1
57	Choir EP 1	Choir EP 1
58	Wah EP 1	Wah EP 1
59	EP & Strings 1	EP&Strings 1
60	Tremolo EP 2	Tremolo EP 2
61	Funk EP 2	Funk EP 2
62	Modern EP 2	Modern EP 2
63	Warm EP 2	Warm EP 2
64	Choir EP 2	Choir EP 2
65	Wah EP 2	Wah EP 2
66	EP & Strings 2	EP&Strings 2
67	Clavi 2	Clavi 2
68	Phase Clavi	Phase Clavi
69	Wah Clavi	Wah Clavi
70	E.Clavi	E.Clavi
Organ		
71	Drawbar Organ	Drawbar Organ
72	Detuned Drawbar Organ	Detuned DrawOrg
73	Italian 60's Organ	60's Organ
74	Drawbar Organ 2	Drawbar Organ 2
75	Percussive Organ	Percussive Organ
76	Detuned Percussive Organ	Detuned PercOrgan
77	Percussive Organ 2	Percussive Organ 2
78	Rock Organ	Rock Organ
79	Church Organ	Church Organ
80	Church Organ (octave mix)	ChurchOrg/Octave
81	Detuned Church Organ	Detune ChurchOrg
82	Reed Organ	Reed Organ
83	Soft Stereo Drawbar Organ	Soft St DrawOrg
84	Mellow Drawbar Organ	Mellow DrawOrg
85	Detuned Drawbar Organ 2	Detuned DrawOrg 2
86	Bright Drawbar Organ 1	Bright DrawOrg 1
87	Bright Drawbar Organ 2	Bright DrawOrg 2
88	70's Percussive Organ	70's PercOrgan
89	Light Click Organ 1	Light Click Org 1
90	Light Click Organ 2	Light Click Org 2
91	Detuned Percussive Organ 2	Detuned PercOrg 2
92	Stereo Rotary Organ	Stereo RotaryOrg
93	Rock Organ 2	Rock Organ 2
94	Rotary Organ 1	Rotary Organ 1
95	Rotary Organ 2	Rotary Organ 2
96	Slow Rotary Organ	Slow Rotary Organ
97	Church Organ 2	Church Organ 2
98	Detuned Church Organ 2	Detune ChurchOrg 2
99	Church Organ 3	Church Organ 3
100	Puff Organ	Puff Organ
Accordion & Harmonica		
101	Accordion	Accordion
102	Accordion 2	Accordion 2
103	Harmonica	Harmonica
104	Tango Accordion	Tango Accordion
105	Accordion 3	Accordion 3
106	Chorus Accordion	Chorus Accordion
107	Musette	Musette
108	Accord It Solo	Accord It Solo
109	Sweet Harmonica	Sweet Harmonica
110	Harmonica 2	Harmonica 2
111	Wah Harmonica	Wah Harmonica

Voice List

112	Tango Accordion 2	Tango Accordion 2
Guitar & Bass		
113	Acoustic Guitar (nylon)	Nylon Guitar
114	Ukulele	Ukulele
115	Acoustic Guitar (nylon + key off)	NylonGtr/KeyOff
116	Acoustic Guitar (nylon 2)	Nylon Guitar 2
117	Acoustic Guitar (steel)	Steel Guitar
118	12-Strings Guitar	12Strings Guitar
119	Mandolin	Mandolin
120	Steel Guitar with Body Sound	SteelGtr/BodySd
121	Electric Guitar (jazz)	Jazz Guitar
122	Electric Guitar (pedal steel)	Pedal Guitar
123	Electric Guitar (clean)	Clean Guitar
124	Electric Guitar (detuned clean)	Detuned CleanGtr
125	Mid Tone Guitar	Mid Tone Guitar
126	Electric Guitar (muted)	Muted Guitar
127	Electric Guitar (funky cutting)	Funk Guitar
128	Electric Guitar (muted velo-sw)	Velocity MutedGtr
129	Jazz Man	Jazz Man
130	Overdriven Guitar	OverdrivenGtr
131	Guitar Pinch	Guitar Pinch
132	Distortion Guitar	DistortionGtr 1
133	Distortion Guitar (with feedback)	Feedback Guitar
134	Distorted Rhythm Guitar	Rhythm DistGtr
135	Guitar Harmonics	Guitar Harmonics
136	Guitar Feedback	Feedback Guitar 3
137	Velocity Nylon Guitar	Velocity NylonGtr
138	Chorus Nylon Guitar	Chorus NylonGtr
139	Bright Nylon Guitar	Bright NylonGtr
140	Steel Guitar 2	Steel Guitar 2
141	Tremolo Steel Guitar 1	Tremolo SteelGtr 1
142	Tremolo Steel Guitar 2	Tremolo SteelGtr 2
143	Velocity Steel Guitar	Velocity SteelGtr
144	Mandolin 2	Mandolin 2
145	12-Strings Guitar 2	12Strings Guitar 2
146	Chorus Steel Guitar	Chorus SteelGtr
147	Nylon & Steel Guitar	Nylon&SteelGtr
148	Pedal Steel Guitar	Pedal Steel Guitar
149	Electric Guitar (jazz) 2	Jazz Guitar 2
150	Mellow Guitar	Mellow Guitar
151	Velocity Jazz Guitar	Velocity JazzGtr
152	Detuned Jazz Guitar	Detuned JazzGtr
153	Stereo Clean Guitar	Stereo CleanGtr
154	Velocity Clean Guitar	Velocity CleanGtr
155	Stereo Muted Guitar	Stereo MutedGtr.
156	Overdriven Guitar 2	OverdrivenGtr 2
157	Distortion Guitar 2	DistortionGtr 2
158	Distortion Guitar (with feedback) 2	Feedback Guitar 2
159	5th Distortion	5th Distortion
160	Distortion Guitar Octave	Octave DistGtr
161	Stereo Distorted Guitar	Stereo DistGtr
162	Guitar Harmonics 2	Guitar Harmonics 2
163	Acoustic Bass	Acoustic Bass
164	Electric Bass (finger)	Finger Bass
165	Finger Slap Bass	Finger Slap Bass
166	Electric Bass (pick)	Pick Bass
167	Fretless Bass	Fretless Bass
168	Slap Bass 1	Slap Bass 1

169	Slap Bass 2	Slap Bass 2
170	Synth Bass 1	Synth Bass 1
171	Synth Bass 2	Synth Bass 2
172	Acoustic Bass 2	Acoustic Bass 2
173	Acoustic Bass 3	Acoustic Bass 3
174	Acoustic Bass Detuned	Detuned AcousBass
175	Acoustic Bass Filter	Filter AcousBass
176	Jazz Style	Jazz Style
177	Acoustic Bass & Mute Guitar	AcoBass&MuteGtr
178	Electric Bass (finger) 2	Finger Bass 2
179	Detuned Finger Bass	Detuned FngrBass
180	Dark Finger Bass	Dark Finger Bass
181	Finger Slap Bass 2	Finger Slap Bass 2
182	Resonant Finger Bass	Resonant FngrBass
183	Wah Finger Bass	Wah Finger Bass
184	Bass & Distorted Electric Guitar	Bass&DistortedGtr
185	Electric Bass (pick) 2	Pick Bass 2
186	Mute Pick Bass	Mute Pick Bass
187	Detuned Pick Bass	Detuned Pick Bass
188	Fretless Bass 2	Fretless Bass 2
189	90's Bass	90's Bass
190	Fretless Bass & Sine	Fretless&Sine
191	Fretless Bass Detuned 1	Detuned Fretless 1
192	Fretless Bass Detuned 2	Detuned Fretless 2
193	Fretless Bass Detuned 3	Detuned Fretless 3
194	Slap Bass 3	Slap Bass 3
195	Slap Bass 4	Slap Bass 4
196	Power Slap Bass	Power Slap Bass
197	Lash Thumb Bass	Lash Thumb Bass
198	Resonant Slap Bass	Resonant SlapBass
199	Wah Slap Bass 1	Wah Slap Bass 1
200	Velocity Switch Slap Bass	Velocity SlapBass
201	Wah Slap Bass 2	Wah Slap Bass 2
202	Synth Bass (warm)	Warm Synth Bass
203	Synth Bass 3 (resonance)	Resonance SynBass
204	Clavi Bass	Clavi Bass
205	Hammer	Hammer
206	Synth Bass 4 (attack)	Attack Bass
207	Synth Bass (rubber)	Rubber Bass
208	Attack Pulse	Attack Pulse
Strings & Ensemble		
209	Violin	Violin
210	Violin (slow attack)	Slow Violin
211	Viola	Viola
212	Cello	Cello
213	Contrabass	Contrabass
214	Tremolo Strings	Tremolo Strings
215	Pizzicato Strings	PizzicatoStr
216	Orchestral Harp	Orchestral Harp
217	Yang Chin	Yang Chin
218	Timpani 1	Timpani 1
219	String Ensembles 1	String Ensembles 1
220	String Ensembles 2	String Ensembles 2
221	Strings & Brass	Strings&Brass
222	60's Strings	60's Strings
223	Synth Strings 1	Synth Strings 1
224	Synth Strings 2	Synth Strings 2
225	Synth Strings 3	Synth Strings 3

Voice List

226	Choir Aahs	Choir Aahs
227	Choir Aahs 2	Choir Aahs 2
228	Voice Oohs	Voice Oohs
229	Humming	Humming
230	Anlong Voice	Anlong Voice
231	Synth Voice	Synth Voice
232	Orchestra Hit	Orchestra Hit
233	The Violin	The Violin
234	Violin 2	Violin 2
235	Mono Violin	Mono Violin
236	Octave Violin	Octave Violin
237	Electric Violin	Electric Violin
238	Violin & Viola	Violin&Viola
239	Two Violin	Two Violin
240	Soft Violin	Soft Violin
241	Velocity Violin	Velocity Violin
242	Viola 2	Viola 2
243	Viola 3	Viola 3
244	Dark Viola	Dark Viola
245	Cello 2	Cello 2
246	Cello 3	Cello 3
247	Cello 4	Cello 4
248	Celloen 16'	Celloen 16'
249	Chamber Music	Chamber Music
250	Contrabass 2	Contrabass 2
251	Tremolo Strings 2	Tremolo Strings 2
252	Slow Tremolo Strings 1	Slow TremoloStr 1
253	Slow Tremolo Strings 2	Slow TremoloStr 2
254	Pizzicato Strings 2	PizzicatoStr 2
255	Octave Pizzicato	Octave Pizzicato
256	Orchestral Harp 2	Orchestral Harp 2
257	Yang Chin 2	Yang Chin 2
258	Africa 1	Africa 1
259	Africa 2	Africa 2
260	Timpani 2	Timpani 2
261	Stereo Slow Strings	Stereo SlowStr
262	Slow Strings	Slow Strings
263	Legato Strings	Legato Strings
264	Orchestra 1	Orchestra 1
265	Arco Strings	Arco Strings
266	Resonant Strings	Resonant Strings
267	The Strings	The Strings
268	70's Strings	70's Strings
269	Solo Strings	Solo Strings
270	Synth Strings 4	Synth Strings 4
271	Synth Strings 5	Synth Strings 5
272	Choir Aahs 3	Choir Aahs 3
273	Choir Aahs 4	Choir Aahs 4
274	Mellow Choir	Mellow Choir
275	Stereo Choir Aahs	Stereo Choir Aahs
276	Strings & Choir 1	Strings&Choir 1
277	Strings & Choir 2	Strings&Choir 2
278	Strings & Voice 1	Strings&Voice 1
279	Strings & Voice 2	Strings&Voice 2
280	Analog Voice	Analog Voice
281	Bass Hit Plus	Bass Hit Plus
282	6th Hit	6th Hit
283	Euro Hit	Euro Hit

284	Octave Orchestra Hit	Octave OrchHit
Brass & Saxophone		
285	Trumpet	Trumpet
286	Dark Trumpet Soft	DarkTrump Soft
287	Trombone	Trombone
288	Trombone 2	Trombone 2
289	Bright Trombone	Bright Trombone
290	Tuba	Tuba
291	Muted Trumpet	Muted Trumpet
292	Muted Trumpet 2	Muted Trumpet 2
293	French Horn	French Horn
294	French Horn 2 (warm)	French Horn 2
295	Brass Section	Brass Section
296	Brass Section 2 (octave mix)	Brass Section 2
297	Synth Brass 1	Synth Brass 1
298	Synth Brass 2	Synth Brass 2
299	Synth Brass 3	Synth Brass 3
300	Synth Brass 4	Synth Brass 4
301	Trumpet 2	Trumpet 2
302	Dark Trumpet Soft 2	DarkTrump Soft 2
303	Resonant Trumpet	Resonant Trumpet
304	Sweet Trumpet	Sweet Trumpet
305	Wah Trumpet	Wah Trumpet
306	Dark Trombone	Dark Trombone
307	Dark Trombone 2	Dark Trombone 2
308	Strings & Trombone	Strings&Tromb
309	Tuba 2	Tuba 2
310	Tuba 3	Tuba 3
311	Tuba Solo	Tuba Solo
312	Soft Tuba	Soft Tuba
313	Muted Trumpet 3	Muted Trumpet 3
314	French Horn 3	French Horn 3
315	French Horn 4	French Horn 4
316	Stereo French Horn	Stereo FrHorn
317	Fifth Horn Orchestra	Fifth HornOrch
318	Brass Section 3	Brass Section 3
319	Brass Section 4	Brass Section 4
320	Dark Brass 1	Dark Brass 1
321	Brassband	Brassband
322	Bright Brass Section	Bright Brass
323	Dark Brass 2	Dark Brass 2
324	Mute Brass Ensemble	Mute BrassEns
325	Sforzato Brass	Sforzato Brass
326	Brass & Strings	Brass&Strings 1
327	Analog Synth Brass 1	Analog SynBrass 1
328	Analog Synth Brass 2	Analog SynBrass 2
329	Jump Brass	Jump Brass
330	Octave Synth Brass	Octave SynBrass
331	Synth Brass & Strings 1	Brass&Strings 2
332	Synth Brass & Strings 2	Brass&Strings 3
333	Echo Brass	Echo Brass
334	Soprano Sax	Soprano Sax
335	Alto Sax	Alto Sax
336	Tenor Sax	Tenor Sax
337	Baritone Sax	Baritone Sax
338	Soprano Sax 2	Soprano Sax 2
339	Soprano Sax Soft	Soprano Sax Soft
340	Slow Soprano Sax	Slow Soprano Sax

Voice List

341	Sweet Soprano Sax	Sweet Soprano Sax
342	Alto Sax 2	Alto Sax 2
343	Soft Alto Sax	Soft Alto Sax
344	Super Alto Sax	Super Alto Sax
345	Sax Band	Sax Band
346	Tenor Sax 2	Tenor Sax 2
347	Baritone Sax 2	Baritone Sax 2
348	Soft Baritone Sax	Soft Baritone Sax
Flute & Woodwind		
349	Oboe	Oboe
350	English Horn	English Horn
351	Bassoon	Bassoon
352	Clarinet	Clarinet
353	Piccolo	Piccolo
354	Flute	Flute
355	Recorder	Recorder
356	Pan Flute	Pan Flute
357	Blown Bottle	Blown Bottle
358	Shakuhachi	Shakuhachi
359	Whistle	Whistle
360	Ocarina	Ocarina
361	Oboe 2	Oboe 2
362	Sweet Oboe	Sweet Oboe
363	English Horn 2	English Horn 2
364	Analog Horns	Analog Horns
365	Woodwinds	Woodwinds
366	Bassoon 2	Bassoon 2
367	Clarinet 2	Clarinet 2
368	Piccolo 2	Piccolo 2
369	Flute 2	Flute 2
370	Sweet Flute	Sweet Flute
371	Recorder 2	Recorder 2
372	Sweet Pan Flute	Sweet Pan Flute
373	Pan Flute 2	Pan Flute 2
374	Dark Pan Flute	Dark Pan Flute
375	Blown Bottle 2	Blown Bottle 2
376	Shakuhachi 2	Shakuhachi 2
377	Whistle 2	Whistle 2
378	Ocarina 2	Ocarina 2
Lead & Pad		
379	Lead 1 (square)	Square Lead
380	Lead 1a (square 2)	Square Lead 2
381	Lead 1b (sine)	Sine Lead
382	Lead 2 (sawtooth)	Sawtooth
383	Lead 2a (sawtooth 2)	Sawtooth 2
384	Lead 2b (saw + pulse)	Sawtooth&Pulse
385	Lead 2c (double sawtooth)	Double Sawtooth
386	Lead 2d (sequenced analog)	Sequenced analog
387	Lead 3 (calliope)	Calliope
388	Lead 4 (chiff)	Chiffer Lead
389	Lead 5 (charang)	Charang Lead
390	Lead 5a (wire lead)	Wire Lead
391	Lead 6 (voice)	Voice Lead
392	Lead 7 (fifths)	Fifths Lead
393	Lead 8 (bass + lead)	Bass&Lead
394	Lead 8a (soft wrt)	Soft wrt
395	Pad 1 (new age)	New age Pad
396	Pad 2 (warm)	Warm Pad

397	Pad 2a (sine pad)	Sine pad
398	Pad 3 (polysynth)	Poly Synth
399	Pad 4 (choir)	Choir Pad
400	Pad 4a (itopia)	Itopia Pad
401	Pad 5 (bowed)	Bowed Pad
402	Pad 6 (metallic)	Metallic Pad
403	Pad 7 (halo)	Halo Pad
404	Pad 8 (sweep)	Sweep Pad
405	Square	Square
406	Slow Square Lead	Slow Square Lead
407	Sine Solo	Sine Solo
408	Square Lead	Square Lead 3
409	Thick Square	Thick Square
410	Corrie	Corrie
411	Quint	Quint
412	2Oscillators Lead	2Oscillators Lead
413	Wavy Sawtooth	Wavy Sawtooth
414	Super Analog	Super Analog
415	Big Lead	Big Lead
416	Bauble Lead	Bauble Lead
417	PWM 4th	PWM 4th
418	PWM 4th Soft	PWM 4th Soft
419	Synth Calliope Soft	SynCalliope Soft
420	Chiffer Lead 2	Chiffer Lead 2
421	Chiffer Lead 3	Chiffer Lead 3
422	Charang 2	Charang 2
423	Wire Lead 2	Wire Lead 2
424	Charang 3	Charang 3
425	Soft Vox	Soft Vox
426	5th SawWave 2	5th SawWave
427	Fifth Lead Soft	Fifth Lead Soft
428	Fifth Lead	Fifth Lead 2
429	Massiness	Massiness
430	Delayed Lead 2	Delayed Lead 2
431	Delayed Lead 3	Delayed Lead 3
432	New Age Pad 2	New Age Pad 2
433	New Age Pad 3	New Age Pad 3
434	Slow Square	Slow Square
435	New Year Pad	New Year Pad
436	Warm Pad 2	Warm Pad 2
437	PWM Pad	PWM Pad
438	Warmly Pad	Warmly Pad
439	Horn Pad	Horn Pad
440	Poly Synth 2	Poly Synth 2
441	Click Pad	Click Pad
442	Analog Pad	Analog Pad
443	Poly Pad	Poly Pad
444	Poly Synth 3	Poly Synth 3
445	Space Voice	Space Voice
446	Bowed Pad 2	Bowed Pad 2
447	Bowed Pad 3	Bowed Pad 3
448	Metallic Pad 2	Metallic Pad 2
449	Pan Pad 1	Pan Pad 1
450	Pan Pad 2	Pan Pad 2
451	Halo Pad 2	Halo Pad 2
452	Halo Pad 3	Halo Pad 3
453	Sweep Pad 2	Sweep Pad 2
454	Dipolar Pad	Dipolar Pad

Voice List

455	Rising	Rising
456	Congregate	Congregate
FX & Effects		
457	FX 1 (rain)	FX 1 Rain
458	FX 2 (soundtrack)	FX 2 SoundTrack
459	Prelude	Prelude
460	FX 3 (crystal)	FX 3 Crystal
461	FX 3a (synth mallet)	Synth Mallet
462	Crystal 2	Crystal 2
463	FX 4 (atmosphere)	FX 4 Atmosphere
464	Warm Air	Warm Air
465	FX 5 (brightness)	FX 5 Brightness
466	Smog	Smog
467	FX 6 (goblins)	FX 6 Goblins
468	Goblin 2	Goblin 2
469	Choir Bell 1	Choir Bell 1
470	Choir Bell 2	Choir Bell 2
471	FX 7 (echoes)	FX 7 Echoes
472	FX 7a (echo bell)	Echo bell
473	FX 7b (echo pan)	Echo pan
474	Echo Drops 2	Echo Drops 2
475	Echo Bell 2	Echo Bell 2
476	FX 8 (sci-fi)	FX 8 Sci-Fi
477	Sci-Fi 2	Sci-Fi 2
478	Guitar Fret Noise	Guitar Fret Noise
479	Guitar Cutting Noise	Gtr Cutting Noise
480	Acoustic Bass String Slap	AcBass String Slap
481	Guitar Fret Noise 2	Gtr Fret Noise 2
482	Guitar Cutting Noise 2	Cutting Noise 2
483	Acoustic Bass String Slap 2	Bass String Slap 2
484	Breath Noise	Breath Noise
485	Flute Key Click	Flute Key Click
486	Breath Noise 2	Breath Noise 2
487	Flute Key Click 2	Flute Key Click 2
488	Seashore	Seashore
489	Rain	Rain
490	Thunder	Thunder
491	Wind	Wind
492	Stream	Stream
493	Bubble	Bubble
494	Seashore 2	Seashore 2
495	Bird Tweet	Bird Tweet
496	Dog	Dog
497	Horse Gallop	Horse Gallop
498	Bird Tweet 2	Bird Tweet 2
499	Sheep	Sheep
500	Telephone Ring	Telephone Ring
501	Telephone Ring 2	Telephone Ring 2
502	Door Creaking	Door Creaking
503	Door	Door
504	Scratch	Scratch
505	Wind Chime	Wind Chime
506	Helicopter	Helicopter
507	Car Engine	Car Engine
508	Car Stop	Car Stop
509	Car Pass	Car Pass
510	Car Crash	Car Crash
511	Siren	Siren

512	Train	Train
513	Jetplane	Jetplane
514	Starship	Starship
515	Burst Noise	Burst Noise
516	Applause	Applause
517	Laughing	Laughing
518	Screaming	Screaming
519	Punch	Punch
520	Heart Beat	Heart Beat
521	Footsteps	Footsteps
522	Gunshot	Gunshot
523	Machine Gun	Machine Gun
524	Lasergun	Lasergun
525	Explosion	Explosion
Ethnic & Combined		
526	Sitar	Sitar
527	Sitar 2 (bend)	Sitar 2/Bend
528	Sitar & Strings 1	Sitar&Strings 1
529	Sitar & Strings 2	Sitar&Strings 2
530	Banjo	Banjo
531	Banjo 2	Banjo 2
532	Shamisen	Shamisen
533	Shamisen 2	Shamisen 2
534	Koto	Koto
535	Taisho Koto	Taisho Koto
536	Koto 2	Koto 2
537	Taisho Koto 2	Taisho Koto 2
538	Kalimba	Kalimba
539	Kalimba 2	Kalimba 2
540	Bag Pipe	Bag Pipe
541	Bag pipe 2	Bag pipe 2
542	Fiddle	Fiddle
543	Fiddle 2	Fiddle 2
544	Shanai	Shanai
545	Shanai 2	Shanai 2
546	Stereo Piano & Glockenspiel	Piano&Glocken
547	Stereo Piano & Calliope	Piano&Callio
548	Stereo Piano & Sweep	Piano&Sweep
549	Honky Tonk Piano & Fifths	Honk&Fifths
550	Honky Tonk Piano & Sweep	Honk&Sweep
551	FM Electric Piano	FM E.Piano
552	Digital Piano	Digital Piano
553	E.Piano & Pad	E.Piano&Pad
554	E.Piano & Sweep	E.Piano&Sweep
555	E.Piano 2 & Pad	E.Piano 2&Pad
556	E.Piano 2 & Sweep	E.Piano 2&Sweep
557	E.Piano 2 & Warm	E.Piano 2&Warm
558	Harpsichord & Stereo Strings	Harpsichord&StStr
559	Music Box & Stereo Strings	MusicBox&StStr
560	Vibraphone & Stereo Strings	Vibra&StStr
561	Vibraphone Octave	Vibraphone Octave
562	Vibraphone & Marimba & Kalimba	Vibra&Mar&Kal
563	Marimba & Kalimba	Marimba&Kalimba
564	Marimba Delay	Marimba Delay
565	Xylophone Octave	Xylophone Octave
566	Organ & Stereo Strings	Organ&StStrings
567	Stereo Organ & Piano	StereoOrg&Piano
568	Rock Organ & Strings	RockOrg&Strings

Voice List

569	Church Organ & Choir	ChurchOrg&Choir
570	Church Organ & Strings	ChurchOrg&Str
571	Harmonica & Acoustic Guitar	Harmonica&AcGtr
572	Harmonica & Strings	Harmonica&Str
573	Acoustic Guitar & Flute	AcGtr&Flute
574	Acoustic Guitar & Clavi	AcGtr&Clavi
575	24-Strings Guitar	24-Strings Guitar
576	24-Strings Guitar & Strings	24-StrGtr&Str
577	Steel Guitar & Warm Pad	SteelGtr&WarmPd
578	Stereo Strings & Horn	Strings&Horn
579	Orchestra 2	Orchestra 2
580	Full Strings 1	Full Strings 1
581	Full Strings 2	Full Strings 2
582	Symphonic	Symphonic
583	Stereo Choir & Strings	Choir&Str
584	Stereo Choir & Steel Guitar	Choir&SteelGtr
585	3Trumpets Loose	3Trumpets Loose
586	Trombone & Stereo Strings	Trombone&Str
587	3Trombones Loose	3Trombones Loose
588	3Muted Trumpets Loose	3MuteTrump Loose
589	Club Brass	Club Brass
590	Brass & Woodwinds	Brass&Wood
591	Woodwinds & Strings	Wood&Strings
592	Section Woods Small	Woods Small
593	Pan Flute & Strings Pad	PanFlute&StrPad
594	Koto & Shamisen	Koto&Shamisen
595	Koto & Shamisen & Strings	Koto&Sham&Str
Percussive & Drum		
596	Celesta	Celesta
597	Celesta 2	Celesta 2
598	Birght Celesta	Birght Celesta
599	Celesta & Sine	Celesta&Sine
600	Reecho Bell	Reecho Bell
601	Celesta & Music Box	Celes&MusicBox
602	Glockenspiel 1	Glockenspiel 1
603	Glockenspiel 2	Glockenspiel 2
604	Glockenspiel & Sine	Glockenspiel&Sine
605	Glockenspiel & Celesta	Glocken&Celes
606	Music Box	Music Box
607	Music Box 2	Music Box 2
608	Music Box 3	Music Box 3
609	Toy Box	Toy Box
610	Music Box & Harp	Music Box&Harp
611	Vibraphone	Vibraphone
612	Vibraphone (wide)	Vibraphone/Wide
613	Stereo Vibraphone	Stereo Vibraphone
614	Rigid Vibraphone	Rigid Vibraphone
615	Vibraphone 2	Vibraphone 2
616	Vibraphone 2 (wide)	Vibraphone/Wide 2
617	Vibraphone & Bell	Vibraphone&Bell
618	Vibraphone & Harpsichord	Vibra&Harpsic
619	Vibraphone & Strings 1	Vibra&Strings 1
620	Vibraphone & Strings 2	Vibra&Strings 2
621	Marimba	Marimba
622	Marimba (wide)	Marimba/Wide
623	Marimba 2	Marimba 2
624	SinMarimba	SinMarimba
625	Stereo Marimba	Stereo Marimba

626	Marimba & Vibraphone	Marimba&Vibra
627	Wood Drum	Wood Drum
628	Xylophone	Xylophone
629	Xylophone 2	Xylophone 2
630	Tubular Bells	Tubular Bells
631	Church Bell	Church Bell
632	Carillon	Carillon
633	Dulcimer	Dulcimer
634	Santur	Santur
635	Shorty	Shorty
636	Tinkle Bell	Tinkle Bell
637	Tinkle Bell 2	Tinkle Bell 2
638	Agogo	Agogo
639	Agogo 2	Agogo 2
640	Steel Drums	Steel Drums
641	Steel Drums 2	Steel Drums 2
642	Woodblock	Woodblock
643	Castanets	Castanets
644	Woodblock 2	Woodblock 2
645	Castanets 2	Castanets 2
646	Taiko Drum	Taiko Drum
647	Taiko Drum 2	Taiko Drum 2
648	ConcertBass Drum	ConBass Drum
649	ConcertBass Drum 2	ConBass Drum 2
650	Melodic Tom	Melodic Tom
651	Melodic Tom 2 (power)	Power Melodic Tom
652	Synth Drum	Synth Drum
653	Rhythm Box Tom	Rhythm Box Tom
654	Electric Drum	Electric Drum
655	Electric Drum 2	Electric Drum 2
656	Reverse Cymbal	Reverse Cymbal
657	Reverse Cymbal 2	Reverse Cymbal 2
658	Standard Set	Standard Set
659	Room Set	Room Set
660	Power Set	Power Set
661	Electronic Set	Electronic Set
662	Analog Set	Analog Set
663	Jazz Set	Jazz Set
664	Brush Set	Brush Set
665	Orchestra Set	Orchestra Set
666	SFX Set	SFX Set
667	Dance Set	Dance Set
668	Funk Set	Funk Set
669	Rock Set	Rock Set
670	Latin Set	Latin Set
671	Pop Set	Pop Set
672	Punk Set	Punk Set

Style List

No.	Name	LCD Name
8BEAT & 16BEAT		
1	8Beat Ballad	8BtBld
2	8Beat Piano	8BtPiano
3	8Beat 1	8Beat1
4	Guitar Pop 1	GtPop1
5	8Beat Hip Hop	8BtHiHop
6	8Beat R&B	8BeatR&B
7	8Beat Pop	8BtPop
8	Pop Funk 1	PopFunk1
9	Rhythm&Beat 1	Rhy&Bt1
10	8Beat Disco 1	8BtDisc1
11	8Beat Rock	8BtRock
12	Guitar Pop 2	GtPop2
13	8Beat 2	8Beat2
14	Sweet Beat	SweetBt
15	8Beat Dance	8BtDance
16	8Beat Disco 2	8BtDisc2
17	Pop Funk 2	PopFunk2
18	8Beat 3	8Beat3
19	60's 8Beat	60's8Bt
20	Rhythm&Beat 2	Rhy&Bt2
21	16Beat 1	16Beat1
22	16Beat Funk 1	16BtFuk1
23	16Beat Ballad 1	16BtBld1
24	16Beat R&B	16BtR&B
25	Pop 16Beat 1	Pop16Bt1
26	16Beat Funk 2	16BtFuk2
27	16Beat Dance	16BtDanc
28	Pop 16Beat 2	Pop16Bt2
29	16Beat 2	16Beat2
30	Pop 16Beat 3	Pop16Bt3
31	Pop 16Beat 4	Pop16Bt4
32	Modern 16Beat	Modrn16B
33	16Beat Hot	16BtHot
34	16Beat Modern	16BtModr
35	16Beat Funk 3	16BtFuk3
36	16Beat 3	16Beat3
37	Cool Beat	CoolBeat
38	16Beat Ballad 2	16BtBld2
39	16Beat 4	16Beat4
40	Pop Shffle	PopShfl
Pop & Ballad		
41	Pop Rock 1	PopRock1
42	Pop Dance 1	PopDanc1
43	Pop Fusion	PopFusn
44	Analog Night 1	AnalgNt1
45	6/8 Pop	6/8Pop
46	Brit. Pop 1	BritPop1
47	Brit. Pop 2	BritPop2
48	Pop Hit	PopHit
49	Fusion Shuffle	FusShufl
50	Analog Night 2	AnalgNt2
51	Guitar Pop 3	GtPop3
52	Pop Beat	PopBeat
53	Soft Beat	SoftBeat
54	60's Pop	60'sPop
55	Sting Latin	StigLatn

56	R&B Ballad 1	R&BBld1
57	Guitar Ballad	GtBallad
58	Ballad Rock	BalladRk
59	Piano Pop 1	PianoPop
60	Soft Ballad	SoftBald
61	Natural Ballad	NatuBld
62	Love Ballad	LoveBld
63	Easy Ballad	EasyBld
64	Miami Ballad	MiamiBld
65	Slow Ballad	SlowBald
66	Folk Ballad	FolkBld
67	Pop Ballad 1	PopBld1
68	Pop Ballad 2	PopBld2
69	EP Ballad	EPBallad
70	New R&B Ballad	NewRBBld
Rock		
71	Rock	Rock
72	New Wave	NewWave
73	Ska	Ska
74	Pop Rock 2	PopRock2
75	Slow Rock	SlowRock
76	70's Rock&Roll	70'sRock
77	Folk Rock	FolkRock
78	Soft Rock	SoftRock
79	Old Rock	OldRock
80	Easy Rock	EasyRock
81	New Shuffle	NewShufl
82	Rock Hip Hop	RkHipHop
83	Rock&Roll 1	R'N'R1
84	Rock Shuffle	RockShfl
85	Rock&Roll 2	R'N'R2
Ballroom		
86	Tango 1	Tango1
87	Spain Matador	Matador
88	Twist 1	Twist1
89	Twist 2	Twist2
90	Big Band Fox	BandFox
91	Tango 2	Tango2
92	Slow Fox	SlowFox
93	Slow Waltz 1	SlowWlz1
94	Swing Fox	SwingFox
95	Salsa 1	Salsa1
96	Cha Cha 1	ChaCha1
97	Cha Cha 2	ChaCha2
98	Beguine 1	Beguine1
99	Beguine 2	Beguine2
100	Rumba 1	Rumba1
101	Samba 1	Samba1
102	Samba 2	Samba2
103	Jive	Jive
104	Fox Trot	FoxTrot
Dance		
105	Techno 1	Techno1
106	Hip Hop 1	HipHop1
107	Dream Dance	DrnDance
108	House	House
109	Pop Dance 2	PopDanc2
110	Down Beat	DownBeat

111	Techno 2	Techno2
112	Progressive	Progress
113	Rap 1	Rap1
114	Rap 2	Rap2
115	Disco	Disco
116	Soft Disco	SoftDisc
117	Disco Party	DscParty
118	70's Disco	70'sDisc
119	70's Disco Funk	70'sFunk
120	Club Dance	ClubDanc
121	Euro Dance	EuroDanc
122	Hip Hop 2	HipHop2
123	Garage	Garage
Soul & Funk		
124	Funk 1	Funk1
125	Classic Funk	ClasFunk
126	Jay R&B	JayR&B
127	Gospel Swing	GopSwing
128	Gospel	Gospel
129	Funk 2	Funk2
130	Electric Funk	ElecFunk
131	Groove Funk	GrooveFk
132	Rubber Funk	RubberFk
133	Cool Funky	ColFunky
134	Jazz Funk	JazzFunk
135	Groove	Groove
136	Soul	Soul
137	Hip Hop Soul	HipHopSl
138	Hip Hop Beat	HipHopBt
139	R&B	R&B
140	Soul Beat	SoulBeat
141	R&B Ballad 2	R&BBld2
142	British Soul Pop	BritSoul
Swing & Jazz		
143	Latin Jazz 1	LatinJz1
144	Big Band	BigBand
145	Dixieland 1	Dixland1
146	Guitar Swing 1	GtSwing1
147	Broadway Big Band	BwayBand
148	Swing	Swing
149	Latin Jazz 2	LatinJz2
150	Fusion	Fusion
151	Acid Jazz	AcidJazz
152	Cool Jazz Ballad	CoolJzBd
153	Swing Shuffle	SwingSfl
154	Big Band Medium	BandMid
155	Dixieland 2	Dixland2
156	Acoustic Jazz	AcoustJz
157	Guitar Swing 2	GtSwing2
158	Ragtime	Ragtime
159	Modern Jazz Ballad	MdJzBald
160	Swing Ballad	SwingBal
161	Orchestra Swing	OrhSwing
Country		
162	Country Pop 1	CntyPop1
163	Bluegrass 1	Bluegrs1
164	Country 8Beat	Ct8Beat
165	Modern Country	ModernCt

Style List

166	Country Pop 2	CntyPop2
167	Bluegrass 2	Bluegrs2
168	2/4 Country	2/4Cntry
169	Country Quick Steps	QuickStp
170	Country Folk	CntyFolk
171	Country Shuffle	CnyShufl
Latin & Latin Dance		
172	Samba 3	Samba3
173	Bossa Nova	BosaNov
174	Latin	Latin
175	New Reggae	NewRegga
176	Dance Reggae	DanRegga
177	Pasodoble	Pasodobl
178	Lite Bossa	LteBossa
179	Latin Rock	LatinRck
180	Beguine 3	Beguine3
181	Slow Bolero	SIBolero
182	Disco Samba	DscSamba
183	Mambo	Mambo
184	Meneito	Meneito
185	Rumba 2	Rumba2
186	Rumba 3	Rumba3
187	Tikitikita	Tikitkta
188	Lambada	Lambada
189	Pop Cha Cha 1	PChaCha1
190	Pop Cha Cha 2	PChaCha2
191	Salsa 2	Salsa2

Waltz & Traditional		
192	Waltz	Waltz
193	Old Waltz	OldWaltz
194	English Waltz	EngWaltz
195	German Waltz	GemWaltz
196	Italian Mazurka	ItaMazuk
197	Mexico Waltz	MexWaltz
198	Vienna Waltz	VinaWtz
199	Slow Waltz 2	SlwWltz2
200	Jazz Waltz	JzWaltz
201	Polka	Polka
202	6/8 March	6/8March
203	German Polka	GerPolka
204	Party Polka	PtyPolka
205	Army March	ArmMarch
206	March	March
207	US March	USMarch
208	Musette	Musette
209	French Musette	FMusette
210	Mazurke	Mazurke
World		
211	Enka Ballad	EnkaBald
212	Laendler	Laendler
213	Hawaiian	Hawaiian
214	Sirtake	Sirtake
215	Dangdut	Dangdut
216	6/8 Flipper	6/8Flipp

217	New Age	NewAge
218	Tarantella	Tarantel
219	Scottish	Scottish
220	Norteno	Norteno
Pianist		
221	Pianist 1	Pianist1
222	Pianist 2	Pianist2
223	Pianist 3	Pianist3
224	Jazz 1	Jazz1
225	Jazz 2	Jazz2
226	Jazz Pub	JazzPub
227	Piano Rock	PianoRk
228	Pop Bossa	PopBossa
229	March 1	March1
230	March 2	March2
231	Piano Beat	PianoBt
232	Piano Bar	PianoBar
233	Blues	Blues
234	Pop Waltz	PopWaltz
235	Slow Waltz	SlwWltz
236	Ballad 1	Ballad1
237	Ballad 2	Ballad2
238	6/8 Ballad	6/8Ballad
239	Pop 1	Pop1
240	Pop 2	Pop2

Song List

NO.	Song Name
1	Mazurka
2	Tchaikovsky Waltz
3	Salut d' Amour
4	French Suites
5	Neapolitan Song
6	Minuet
7	Prelude
8	Barcarole
9	Sonata K.331
10	Brahms Waltz

Demo List

NO.	Demo Name	Short Name
1	Ballad	Ballad
2	Funk	Funk
3	Modern R&B	ModernR&B
4	Pop	Pop
5	Bossa Nova	BosaNov
6	Electric	Electric
7	Fusion	Fusion
8	Piano	Piano
9	Jazz	Jazz

Chord List

Chord Name	Abbreviation	Normal Voicing	Display for Root "C"
Major	M	1+3+5	C
Sixth	6	1+(3)+5+6	C6
Major seventh	M7	1+3+(5)+7	Cm7
Major seventh add sharp eleventh	M7(#11)	1+(2)+3+#4+5+7	CM7(#11)
Add ninth	(9)	1+2+3+5	C(9)
Major seventh ninth	M7(9)	1+2+3+(5)+7	CM7(9)
Sixth ninth	6(9)	1+2+3+(5)+6	C6(9)
Augmented	aug	1+3+#5	Caug
Seventh augmented	7aug	1+3+#5+b7	C7aug
Major seventh augmented	M7aug	1+(3)+#5+7	CM7aug
Minor	m	1+b3+5	Cm
Minor sixth	m6	1+b3+5+6	Cm6
Minor seventh	m7	1+b3+(5)+b7	Cm7
Minor seventh flatted fifth	m7b5	1+b3+b5+b7	Cm7b5
Minor add ninth	m(9)	1+2+b3+5	Cm(9)
Minor seventh ninth	m7(9)	1+2+b3+(5)+b7	Cm7(9)
Minor seventh eleventh	m7(11)	1+(2)+b3+4+5+(b7)	Cm7(11)
Minor major seventh	mM7	1+b3+(5)+7	CmM7
Minor major seventh ninth	mM7(9)	1+2+b3+(5)+7	CmM7(9)
Diminished	dim	1+b3+b5	Cdim
Diminished seventh	dim7	1+b3+b5+6	Cdim7
Seventh	7	1+3+(5)+b7	C7
Seventh suspended fourth	7sus4	1+4+5+b7	C7sus4
Seventh ninth	7(9)	1+2+3+(5)+b7	C7(9)
Seventh add sharp eleventh	7(#11)	1+(2)+3+#4+5+b7	C7(#11)
Seventh add thirteenth	7(13)	1+ 3+(5)+6+b7	C7(13)
Seventh flatted fifth	7b5	1+3+b5+b7	C7b5
Seventh flatted ninth	7(b9)	1+b2+3+(5)+b7	C7(b9)
Seventh add flatted thirteenth	7(b13)	1+3+5+b6+b7	C7(b13)
Seventh sharp ninth	7(#9)	1+#2+3+(5)+b7	C7(#9)
Suspended fourth	sus4	1+4+5	Csus4
One plus two plus five	sus2	1+2+5	C/Csus2

MIDI Implementation List

Function		Transmitted	Recognized	Remarks
Basic	Default	1ch	ALL	
Channel	Changed	1ch	1-16ch	
Mode	Default	x	3	
	Messages	x	3	
	Altered	*****	x	
Note Number	Note	21—108	0—127	
	:True voice	*****	0—127	
Velocity	Note on	o 9nH,V=1-127	o 9nH,V=1-127	
	Note off	x (9nH,V=0)	o(9nH,V=0; 8nH,V=0-127)	
After Touch	key's	x	x	
	Ch's	x	x	
Pitch Bend		x	o	
Control Change	0	o	o	Bank Select
	1	o	o	Modulation
	5	o	o	Portamento Time
	6	o	o	Data Entry
	7	o	o	Volume
	10	o	o	Pan
	11	o	o	Expression
	64	o	o	Sustain Pedal
	65	o	o	Portamento ON/OFF
	66	o	o	Sostenuto Pedal
	67	o	o	Soft Pedal
	80	o	o	Reverb Program
	81	o	o	Chorus Program
	91	o	o	Reverb Level
	93	o	o	Chorus Level
	120	x	o	All Sound Off
	121	x	o	Reset All Controllers
123	o	o	All Notes Off	
Program Change	:true	*****	0—127	
System Exclusive		o	o	
System Common	:SongPosition	x	x	
	:Song Select	x	x	
	:Tune	x	x	
System Real Time	:Clock	x	x	
	:Commands	x	x	
Aux Messages	:LOCAL ON/OFF	x	x	
	:All Notes Off	o	o	
	:Active sense	o	o	
	:Reset	x	o	
Notes:				

- Mode 1: OMNI ON, POLY
- Mode 2: OMNI ON, MONO o: YES

- Mode 3: OMNI OFF, POLY
- Mode 4: OMNI OFF, MONO x: NO



Grand1000_G06

