

DLP Cinema® Projector

**NEC**

# User's Manual

---

DLP Cinema® Projector

**NC1040L-A/NC1440L-A**

Laser Unit

**NP-10LU01**

NEC Display Solutions, Ltd.


Model No. NP-NC1040L-A NP-NC1440L-A
---

# Important Information (for NC1040L-A)


**Precautions:** Please read this manual carefully before using your **NC1040L-A** and **NP-10LU01** and keep the manual handy for future reference.

The NC1040L-A (projector unit) is called the “projector,” and the NP-10LU01 (laser unit) is called the “laser unit” in this manual.


- DLP, DLP Cinema and their respective logos are trademarks or registered trademarks of Texas Instruments.
- CineLink, CineCanvas, CinePalette, and CineBlack are trademarks of Texas Instruments.
- Microsoft, Windows, and Internet Explorer are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Java is a trademark of Oracle Corporation in the United States and other countries.
- Linux is a Registered Trademark of Linus Torvalds.
- Mozilla, Firefox is a trademark of Mozilla Foundation.
- Other product names and manufacturer names described in this manual are the registered trademarks or trademarks of their respective companies.
- The display screens and illustrations shown in this manual may differ slightly from the actual ones.
- GPL/LGPL Software Licenses  
The product includes software licensed under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), and others.  
For more information on each software, see “readme.pdf” inside the “about GPL&LGPL” folder on the supplied CD-ROM.


 **WARNING**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

 **CAUTION**


TO PREVENT ELECTRIC SHOCK, DO NOT OPEN TOP COVER. NO USER-SERVICEABLE PARTS INSIDE.

 This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside of this unit.

 This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

## Laser Safety Caution

This products is classified as Class 3R of IEC60825-1:2007. Also complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007. Obey the laws and regulations of your country in relation to the installation and management the device.

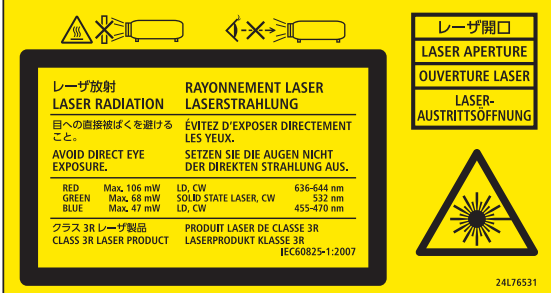

レーザ開口  
LASER APERTURE  
OUVERTURE LASER  
LASER-AUSTRITTSÖFFNUNG

レーザ放射  
LASER RADIATION  
RAYONNEMENT LASER  
LASERSTRAHLUNG

目への直接曝けを避ける  
目への直接曝けを避ける  
EVITEZ D'EXPOSER DIRECTEMENT LES YEUX.  
AVOID DIRECT EYE EXPOSURE. SETZEN SIE DIE AUGEN NICHT DER DIREKTEN STRAHLUNG AUS.

RED	Max. 106 mW	LD, CW	636-644 nm
GREEN	Max. 68 mW	SOLID STATE LASER, CW	532 nm
BLUE	Max. 47 mW	LD, CW	455-470 nm


クラス 3R レーザ製品  
CLASS 3R LASER PRODUCT

PRODUIT LASER DE CLASSE 3R  
LASERPRODUKT KLASSE 3R  
IEC60825-1:2007

24L76531

 **CAUTION – CLASS 3R LASER PRODUCT**

LASER LIGHT – AVOID DIRECT EYE EXPOSURE

 **CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

- Do not look into the lens while the projector is on. Serious damage to your eyes could result.



- Do not look at the light coming from the lens using optical equipment (such as magnifying glasses or mirrors). Doing so may cause loss of vision.
- When you turn on the projector, check that nobody is looking at the lens.
- The following laser light is used in this projector.
  - RED: Max. 49 W, LD, CW, 636 to 644 nm
  - GREEN: Max. 32 W, SOLID STATE LASER, CW, 532 nm
  - BLUE: Max. 23 W, LD, CW, 455 to 470 nm

## DOC compliance Notice

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

## Machine Noise Information Regulation - 3. GPSGV,

The highest sound pressure level is less than 70 dB (A) in accordance with EN ISO 7779.



### WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



### CAUTION

- In order to reduce any interference with radio and television reception use a signal cable with ferrite core attached. Use of signal cables without a ferrite core attached may cause interference with radio and television reception.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



### WARNING

THE END USER IS NOT ALLOWED TO OPEN OR MODIFY THE PRODUCT.  
NO USER SERVICEABLE PARTS.  
MAINTAIN AND SERVICE OF THE PRODUCT IS ONLY TO BE HANDLED BY NECAUTHORIZED TECHNICIANS.

### Important Safeguards

These safety instructions are to ensure the long life of your projector and to prevent fire and shock. Please read them carefully and heed all warnings.

### Installation

1. Do not point the projection beam toward other people or reflective objects. Consult your dealer for information about transporting and installing the projector. Do not attempt to transport and install the projector yourself. The projector must be installed by qualified technicians in order to ensure proper operation and reduce the risk of bodily injury.
2. Place the projector on a flat, level surface in a dry area away from dust and moisture.  
Do not put the projector on its side when the light source is on.  
Doing so may cause damage to the projector.
3. Do not place the projector in direct sunlight, near heaters or heat radiating appliances.
4. Exposure to direct sunlight, smoke or steam could harm internal components.
5. Handle your projector carefully. Dropping or jarring your projector could damage internal components.
6. To carry the projector, a minimum of three persons are required.

7. Do not hold the lens part with your hand. Otherwise the projector may tumble or drop, causing personal injury.
8. Do not place heavy objects on top of the projector.
9. Turn off the projector, and disconnect the power cable before moving the projector.
10. The cooling fan settings need to be configured when using the projector in a location at an altitude of approximately 5500 feet/1600 meters or higher. Consult your dealer in advance.
11. If you wish to have the projector installed on the ceiling;
  - Do not attempt to install the projector yourself.
  - The projector must be installed by qualified technicians in order to ensure proper operation and reduce the risk of bodily injury.
  - In addition, the ceiling must be strong enough to support the projector and the installation must be in accordance with any local building codes.
  - Please consult your dealer for more information.
12. Turn off the projector when removing and installing lenses. Failure to do so can cause loss of vision.
13. Do not place the projector in the following conditions:
  - on an unstable cart, stand, or table.
  - near water, baths, or damp rooms.
  - in direct sunlight, near heaters, or heat radiating appliances.
  - in a dusty, smoky, or steamy environment.
  - on a sheet of paper or cloth, rugs or carpets.
14. When moving the projector, check the following:
  - That the projector and laser unit are turned off, the projector power plug is disconnected from the outlet, and the breaker connected to the AC power cable of the laser unit is disconnected
  - That the connector cable that connects the device to the projector is unplugged



### WARNING

1. Do not use the projector with the supplied lens cap or glass protector cap attached, and do not attach the glass protector cap while the projector is operating. This may cause the lens cap or glass protector cap to heat up and deform or melt.
2. Do not place any objects which are easily affected by heat in front of the projector lens while the projector is on. Doing so could lead to the object melting from the heat that is emitted from the light output.



## Important Information (for NC1040L-A)

### Power Supply

1. The projector is so designed that it operates with the power supply voltage described below.
  - Projector  
AC100-240V 4.3 to 2.3A 50/60Hz Single-phase
  - Laser Unit  
AC200-240V 11A 50/60Hz Single-phaseEnsure that your power supply fits this requirement before attempting to use your projector.
2. The power cable is not included with the projector. Ask your dealer for the power cable to select and purchase. Use a power cable that meets the standards and power supply voltage of the country where you are using the projector.  
Refer to "2-2. Connecting the Power Cable" (page 30) for details on connecting the power cable.  
Ask your dealer regarding the installation or removal of AC power cable for laser unit.
3. Handle the power cable carefully. A damaged or frayed power cable can cause electric shock or fire.
  - Do not bend or tug the power cable excessively.
  - Do not place the power cable under the projector, or any heavy object.
  - Do not cover the power cable with other soft materials such as rugs.
  - Do not heat the power cable.
  - Do not change the arrangement of the installed power cable.
4. If the projector will not be used for an extended period of time, turn off the projector and laser unit, disconnect the projector power plug from the outlet, and disconnect the breaker connected to the AC power cable of the laser unit.
5. Placing the power cable and the signal cable closely to each other can cause beat noise. If this happens, keep the two separated so that beat noise is not generated. Beat noise is corruption of the picture often seen as a rolling band moving through the image.
6. Do not touch the projector during a thunder storm. Doing so can cause electrical shock or fire.
7. When installed on the ceiling, install the breaker in a location that is easy to reach by hand.

### Fire and Shock Precautions

1. Ensure that there is sufficient ventilation and that vents are unobstructed to prevent potentially dangerous concentrations of ozone and the build-up of heat inside your projector. Allow at least 19.8 inches (50 cm) of space between your projector and a wall. In particular, clear a space of 19.8 inches (50 cm) or more in front of the air outlet on the rear surface and 19.8 inches (50 cm) or more in front of the air outlet on the light source side.
2. Prevent foreign objects such as paper clips and bits of paper from falling into your projector. Do not attempt to retrieve any objects that might fall into your projector. Do not insert any metal objects such as a wire or screwdriver into your projector. If something should fall into your projector, turn off the projector and laser unit, disconnect the projector power plug from the outlet, disconnect the breaker connected to the AC power cable of the laser unit, and have the object removed by a qualified service person.
3. Turn off the projector, unplug the power cable and have the projector serviced by a qualified service personnel under the following conditions:
  - When the power cable or plug is damaged or frayed.
  - If liquid has been spilled into the projector, or if it has been exposed to rain or water.
  - If the projector does not operate normally when you follow the instructions described in this user's manual.
  - If the projector has been dropped or the cabinet has been damaged.
  - If the projector exhibits a distinct change in performance, indicating a need for service.
4. Keep any items such as magnifying glass out of the light path of the projector. The light being projected from the lens is extensive, therefore any kind of abnormal objects that can redirect light coming out of the lens, can cause unpredictable outcome such as fire or injury to the eyes.
5. When using a LAN cable:  
For safety, do not connect to the connector for peripheral device wiring that might have excessive Voltage.
6. Do not try to touch the air outlets on the projector during normal projector operation as it is hot.

### Cleaning

1. During cleaning, turn off the projector and laser unit, disconnect the projector power plug from the outlet, and disconnect the breaker connected to the AC power cable of the laser unit.
2. Clean the cabinet periodically with a cloth. If heavily soiled, use a mild detergent. Never use strong detergents or solvents such as alcohol or thinner.
3. Use a blower or lens paper to clean the lens, and be careful not to scratch or mar the lens.
4. Do not touch the projector or the power plug with wet hand. Doing so can cause electrical shock or fire.



### CAUTION

1. Do not unplug the power cable from the wall outlet or projector when the projector is powered on. Doing so can damage the projector.
  - While projecting images
  - While cooling after the projector has been turned off.  
(The POWER button LED blinks in green while the fan is rotating, and "cooling..." is displayed on the LCD screen. The cooling fan continues to work for 60 seconds.)
2. Use of a wall outlet with a 20 A or more circuit breaker is recommended.

### Caution on Carrying the Projector/Handling the Optional Lens

When shipping the projector with the lens, remove the lens before shipping the projector. Always attach the dust cap to the lens whenever it is not mounted on the projector. The lens and the lens shift mechanism may encounter damage caused by improper handling during transportation.

#### WARNING TO CALIFORNIA RESIDENTS:

Handling the cables supplied with this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. WASH HANDS AFTER HANDLING

### Disposing of your used product



EU-wide legislation as implemented in each Member State requires that used electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste.

This includes projectors and their electrical accessories. When you dispose of such products, please follow the guidance of your local authority and/or ask the shop where you purchased the product.

After collecting the used products, they are reused and recycled in a proper way. This effort will help us reduce the wastes as well as the negative impact to the human health and the environment at the minimum level.

The mark on the electrical and electronic products only applies to the current European Union Member States.

### For questions relating to unclear points or repairs

Contact your dealer or the following support branch for questions relating to unclear points, malfunctions and repairs of the product.

#### In Europe

Company Name: NEC Display Solutions Europe GmbH  
Address: Landshuter Allee 12-14, D-80637 Muenchen, Germany  
Telephone: +49 89 99699 0  
Fax Line: +49 89 99699 500  
Email Address: [info@nec-displays.com](mailto:info@nec-displays.com)  
WEB Address: <http://www.nec-display-solutions.com>

#### In North America

Company Name: NEC Display Solutions of America, Inc.  
Address: 500 Park Boulevard, Suite 1100 Itasca, Illinois 60143, U.S.A.  
Telephone: +1 800 836 0655  
Fax Line: +1 800 356 2415  
Email Address: [pjtechsupport@necdisplay.com](mailto:pjtechsupport@necdisplay.com)  
WEB Address: <http://www.necdisplay.com/>

#### In China

Company Name: NEC Solutions (China) Co., Ltd.  
Address: Rm 1903, Shining Building, 35 Xueyuan Rd, Haidian District Beijing 100191, P.R.C.  
Telephone: +8610 59342706

#### In Hong Kong, Taiwan, Singapore, Malaysia and Indonesia

Company Name: Strong Westrex, Inc.  
Address: Room 4108 China Resources Building, No. 26 Harbour Road, Wanchai, Hong Kong.  
Telephone: +852 2827 8289  
Fax Line: +852 2827 5993  
Email Address: [hkstrong@netvigator.com](mailto:hkstrong@netvigator.com)



#### In South Korea

Company Name: Hyosung ITX Co., Ltd.  
Address: 1F, Ire Building, 2, Yangpyeong-dong 4-ga, Yeongdeungpo-gu, Seoul, Korea 150-967  
Telephone: +82-2-2102-8591  
Fax Line: +82-2-2102-8600  
Email Address: [moneybear@hyosung.com](mailto:moneybear@hyosung.com)  
WEB Address: <http://www.hyosungitx.com>

#### In Australia and New Zealand

Company Name: NEC Australia Pty Ltd  
Address: 26 Rodborough Road Frenchs Forest NSW 2086  
Telephone: 131 632 (from anywhere in Australia)  
Email Address: [displays@nec.com.au](mailto:displays@nec.com.au)  
WEB Address: <http://www.nec.com.au>

Laser aperture and warning labels on the projector

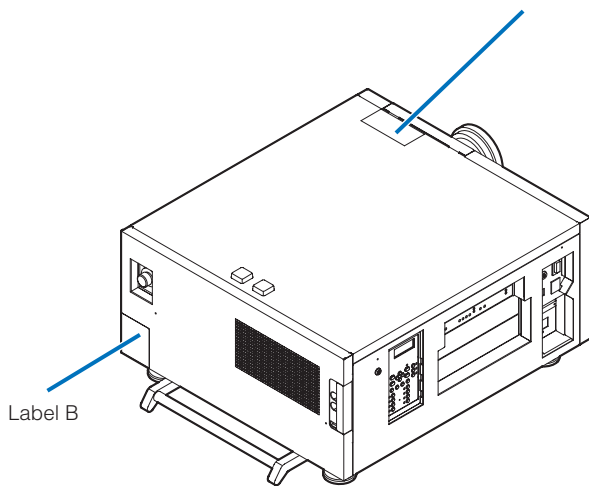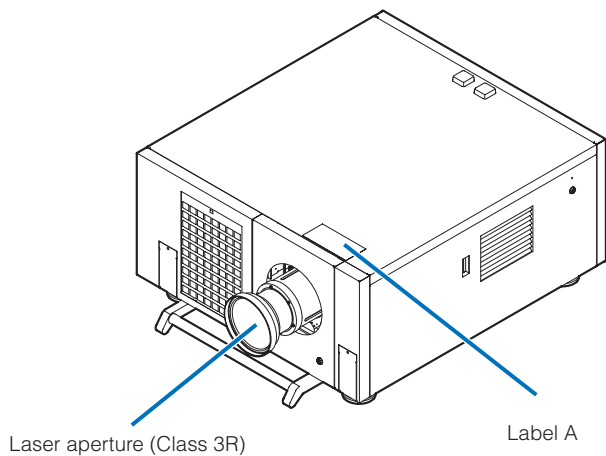

• Label A

レーザ放射 RAYONNEMENT LASER  
LASER RADIATION LASERSTRAHLUNG

目への直接被ばくを避けること。 ÉVITEZ D'EXPOSER DIRECTEMENT LES YEUX.  
AVOID DIRECT EYE EXPOSURE. SETZEN SIE DIE AUGEN NICHT DER DIREKTEN STRAHLUNG AUS.

RED	Max. 106 mW	LD, CW	636-644 nm
GREEN	Max. 68 mW	SOLID STATE LASER, CW	532 nm
BLUE	Max. 47 mW	LD, CW	455-470 nm

クラス 3R レーザ製品 PRODUIT LASER DE CLASSE 3R  
CLASS 3R LASER PRODUCT LASERPRODUKT KLASSE 3R  
IEC60825-1:2007

レーザ開口  
LASER APERTURE  
OUVERTURE LASER  
LASER-AUSTRITTSÖFFNUNG

24L76531

• Label B

**NEC MODEL NP-NC1040L-A 100-240V~ 50/60Hz 4.3-2.3A**

**CAUTION** TO PREVENT ELECTRIC SHOCK, DO NOT OPEN TOP COVER. NO USER-SERVICEABLE PARTS INSIDE.  
**WARNING** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**ATTENTION** AFIN DE PREVENIR UN CHOC ELECTRIQUE NE PAS ENLEVER LE COUVERCLE S'ADRESSER A UN REPARATEUR COMPETENT.  
**AVERTISSEMENT** POUR EVITER UN FEU OU UN RISQUE D'ELECTROCUTION NE PAS EXPOSER CET ENSEMBLE A LA PLUIE OU A L'HUMIDITE.  
**HINWEIS** ZUR TRENNUNG VOM NETZ IST DER NETZSTECKER AUS DER STECKDOSE ZU ZIEHEN!

**UL LISTED** **CE**

品名 DLPシネマプロジェクター  
使用上の注意  
イ. 通気孔をふさがないでください。内部温度の上昇を招き故障の原因になります。  
ロ. 温度の高い場所や湿気の多い場所での使用はさけてください。

**注意**  
この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 **VCCI-A**

**警告** **高圧注意**  
サービスマン以外の方は外装パネルを外さないでください。内部には高電圧部分が多くあり、万一さわると危険です。

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. THIS CLASS A DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS. CAN ICES-3(A)/NMB-3(A)

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.

NEC Display Solutions, Ltd. 4-28, Mita 1-chome, Minato-ku, Tokyo, Japan

MADE IN CHINA 24L77181

## **Important Information (for NC1040L-A)**

---

### **■ Laser light specifications**

Class	Class 3R laser product
Wavelength	Red: 636 to 644 nm, Green: 532 nm, Blue: 455 to 470 nm
Pulse duration	CW (Continuous Wave)
Maximum optical output	Red (640 nm): 106 mW, Green (532 nm): 68 mW, Blue (464 nm): 47 mW

# Range of laser light emissions

The following range indicates the maximum range of emission of laser light.

Horizon angle: H



[Degree]

Lens	Zoom	
	Tele	Wide
NC-50LC12Z	15.5	20.8
NC-50LC14Z	14.2	18.8
NC-50LC16Z	12.4	17.3
NC-50LC18Z	10.1	15.8
NC-50LC21Z	8.5	13.6
L2K-30ZM	7.2	10.1

Vertical angle: V

[Degree]

Lens	Zoom	
	Tele	Wide
NC-50LC12Z	8.8	12.5
NC-50LC14Z	8.0	11.0
NC-50LC16Z	6.8	10.0
NC-50LC18Z	5.5	9.0
NC-50LC21Z	4.6	7.6
L2K-30ZM	3.9	5.5

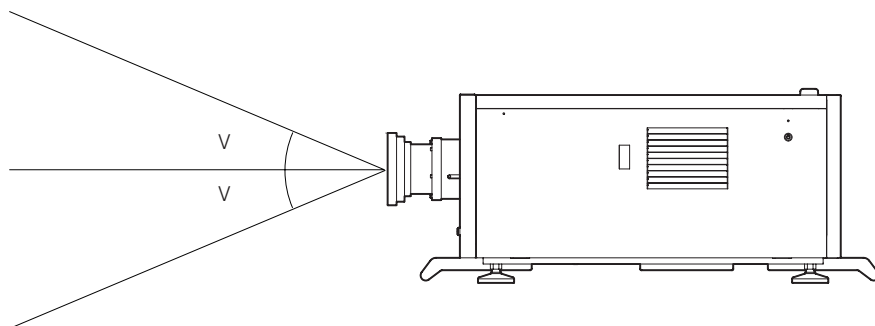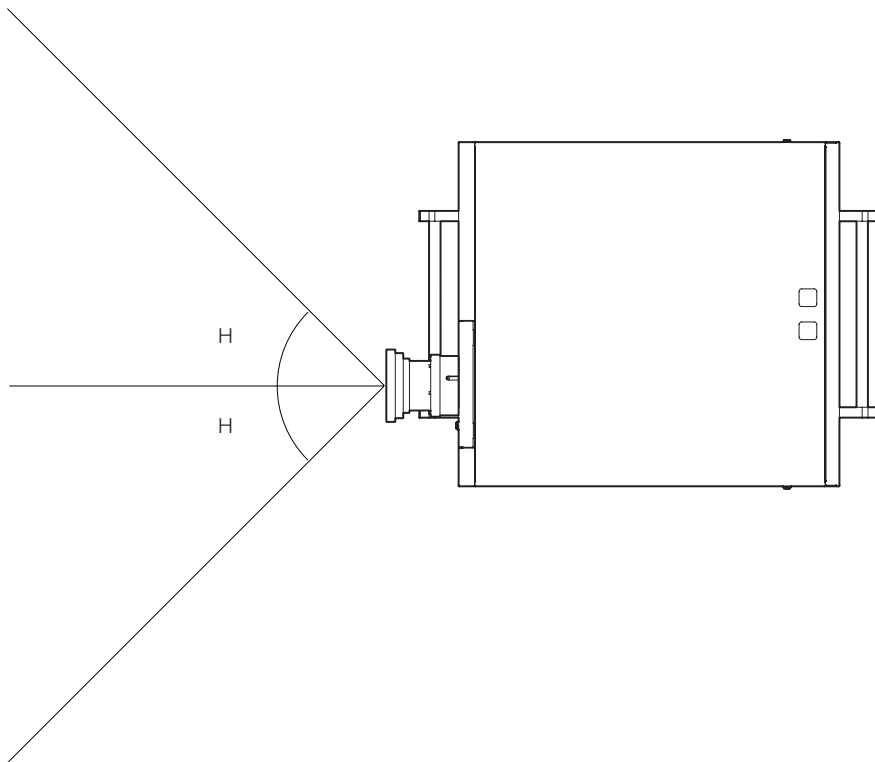

# Important Information (for NC1440L-A)

**Precautions:** Please read this manual carefully before using your **NC1440L-A** and **NP-10LU01** and keep the manual handy for future reference.

The NC1440L-A (projector unit) is called the “projector,” and the NP-10LU01 (laser unit) is called the “laser unit” in this manual.


- DLP, DLP Cinema and their respective logos are trademarks or registered trademarks of Texas Instruments.
- CineLink, CineCanvas, CinePalette, and CineBlack are trademarks of Texas Instruments.
- Microsoft, Windows, and Internet Explorer are registered trademarks of Microsoft Corporation in the United States and/or other countries.
- Java is a trademark of Oracle Corporation in the United States and other countries.
- Linux is a Registered Trademark of Linus Torvalds.
- Mozilla, Firefox is a trademark of Mozilla Foundation.
- Other product names and manufacturer names described in this manual are the registered trademarks or trademarks of their respective companies.
- The display screens and illustrations shown in this manual may differ slightly from the actual ones.
- GPL/LGPL Software Licenses  
The product includes software licensed under GNU General Public License (GPL), GNU Lesser General Public License (LGPL), and others.  
For more information on each software, see “readme.pdf” inside the “about GPL&LGPL” folder on the supplied CD-ROM.


**WARNING**

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

**CAUTION**


TO PREVENT ELECTRIC SHOCK, DO NOT OPEN TOP COVER. NO USER-SERVICEABLE PARTS INSIDE.

 This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any part inside of this unit.

 This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

## Laser Safety Caution

This products is classified as Class 4 of IEC60825-1:2007. Obey the laws and regulations of your country in relation to the installation and management of the device.

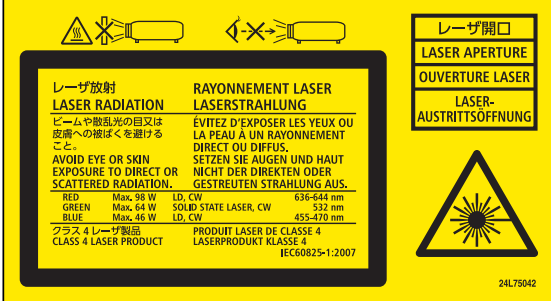

レーザ開口  
LASER APERTURE  
OUVERTURE LASER  
LASER-AUSTRITTSÖFFNUNG

レーザ放射  
LASER RADIATION  
RAYONNEMENT LASER  
LASERSTRAHLUNG

ビームや散乱光の目又は皮膚への照ぼくを避けること  
EVITEZ D'EXPOSER LES YEUX OU LA PEAU A UN RAYONNEMENT DIRECT OU DIFFUS.  
SETZEN SIE AUGEN UND HAUT NICHT DER DIREKTEN ODER GESTREUTEN STRAHLUNG AUS.AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION.DIRECT OU DIFFUS, SETZEN SIE AUGEN UND HAUT NICHT DER DIREKTEN ODER GESTREUTEN STRAHLUNG AUS.RED Max. 98 W LD, CW 636-644 nm  
GREEN Max. 64 W LD, CW 532 nm  
BLUE Max. 46 W LD, CW 455-470 nm

クラス 4 レーザ製品  
CLASS 4 LASER PRODUCT  
PRODUIT LASER DE CLASSE 4  
LASERPRODUKT KLASSE 4  
IEC60825-1:2007

24L75042

**CAUTION – CLASS 4 LASER PRODUCT**

LASER LIGHT – AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION

**CAUTION**

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

- Do not look into the lens while the projector is on. Serious damage to your eyes could result.



- Do not look at the light coming from the lens using optical equipment (such as magnifying glasses or mirrors). Doing so may cause loss of vision.
- When you turn on the projector, check that nobody is looking at the lens.
- The following laser light is used in this projector.
  - RED: Max. 98 W, LD, CW, 636 to 644 nm
  - GREEN: Max. 64 W, SOLID STATE LASER, CW, 532 nm
  - BLUE: Max. 46 W, LD, CW, 455 to 470 nm

## DOC compliance Notice

This Class A digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

**Machine Noise Information Regulation - 3. GPSGV,**  
The highest sound pressure level is less than 70 dB (A) in accordance with EN ISO 7779.



### WARNING

This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.



### CAUTION

- In order to reduce any interference with radio and television reception use a signal cable with ferrite core attached. Use of signal cables without a ferrite core attached may cause interference with radio and television reception.
- This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the installation manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.



### WARNING

THE END USER IS NOT ALLOWED TO OPEN OR MODIFY THE PRODUCT.  
NO USER SERVICEABLE PARTS.  
MAINTAIN AND SERVICE OF THE PRODUCT IS ONLY TO BE HANDLED BY NECAUTHORIZED TECHNICIANS.

### Important Safeguards

These safety instructions are to ensure the long life of your projector and to prevent fire and shock. Please read them carefully and heed all warnings.

### Installation

1. Do not point the projection beam toward other people or reflective objects. Consult your dealer for information about transporting and installing the projector. Do not attempt to transport and install the projector yourself. The projector must be installed by qualified technicians in order to ensure proper operation and reduce the risk of bodily injury.
2. Place the projector on a flat, level surface in a dry area away from dust and moisture.  
Do not put the projector on its side when the light source is on.  
Doing so may cause damage to the projector.
3. Do not place the projector in direct sunlight, near heaters or heat radiating appliances.
4. Exposure to direct sunlight, smoke or steam could harm internal components.
5. Handle your projector carefully. Dropping or jarring your projector could damage internal components.
6. To carry the projector, a minimum of three persons are required.

7. Do not hold the lens part with your hand. Otherwise the projector may tumble or drop, causing personal injury.
8. Do not place heavy objects on top of the projector.
9. Turn off the projector, and disconnect the power cable before moving the projector.
10. The cooling fan settings need to be configured when using the projector in a location at an altitude of approximately 5500 feet/1600 meters or higher. Consult your dealer in advance.
11. If you wish to have the projector installed on the ceiling;
  - Do not attempt to install the projector yourself.
  - The projector must be installed by qualified technicians in order to ensure proper operation and reduce the risk of bodily injury.
  - In addition, the ceiling must be strong enough to support the projector and the installation must be in accordance with any local building codes.
  - Please consult your dealer for more information.
12. Turn off the projector when removing and installing lenses. Failure to do so can cause loss of vision.
13. Do not place the projector in the following conditions:
  - on an unstable cart, stand, or table.
  - near water, baths, or damp rooms.
  - in direct sunlight, near heaters, or heat radiating appliances.
  - in a dusty, smoky, or steamy environment.
  - on a sheet of paper or cloth, rugs or carpets.
14. When moving the projector, check the following:
  - That the projector and laser unit are turned off, the projector power plug is disconnected from the outlet, and the breaker connected to the AC power cable of the laser unit is disconnected
  - That the connector cable that connects the device to the projector is unplugged



### WARNING

1. Do not use the projector with the supplied lens cap or glass protector cap attached, and do not attach the glass protector cap while the projector is operating. This may cause the lens cap or glass protector cap to heat up and deform or melt.
2. Do not place any objects which are easily affected by heat in front of the projector lens while the projector is on. Doing so could lead to the object melting from the heat that is emitted from the light output.



## Important Information (for NC1440L-A)

### Power Supply

1. The projector is so designed that it operates with the power supply voltage described below.
  - Projector  
AC100-240V 4.3 to 2.3A 50/60Hz Single-phase
  - Laser Unit  
AC200-240V 11A 50/60Hz Single-phaseEnsure that your power supply fits this requirement before attempting to use your projector.
2. The power cable is not included with the projector. Ask your dealer for the power cable to select and purchase. Use a power cable that meets the standards and power supply voltage of the country where you are using the projector.  
Refer to "2-2. Connecting the Power Cable" (page 30) for details on connecting the power cable.  
Ask your dealer regarding the installation or removal of AC power cable for laser unit.
3. Handle the power cable carefully. A damaged or frayed power cable can cause electric shock or fire.
  - Do not bend or tug the power cable excessively.
  - Do not place the power cable under the projector, or any heavy object.
  - Do not cover the power cable with other soft materials such as rugs.
  - Do not heat the power cable.
  - Do not change the arrangement of the installed power cable.
4. If the projector will not be used for an extended period of time, turn off the projector and laser unit, disconnect the projector power plug from the outlet, and disconnect the breaker connected to the AC power cable of the laser unit.
5. Placing the power cable and the signal cable closely to each other can cause beat noise. If this happens, keep the two separated so that beat noise is not generated. Beat noise is corruption of the picture often seen as a rolling band moving through the image.
6. Do not touch the projector during a thunder storm. Doing so can cause electrical shock or fire.
7. When installed on the ceiling, install the breaker in a location that is easy to reach by hand.

### Fire and Shock Precautions

1. Ensure that there is sufficient ventilation and that vents are unobstructed to prevent potentially dangerous concentrations of ozone and the build-up of heat inside your projector. Allow at least 19.8 inches (50 cm) of space between your projector and a wall. In particular, clear a space of 19.8 inches (50 cm) or more in front of the air outlet on the rear surface and 19.8 inches (50 cm) or more in front of the air outlet on the light source side.
2. Prevent foreign objects such as paper clips and bits of paper from falling into your projector. Do not attempt to retrieve any objects that might fall into your projector. Do not insert any metal objects such as a wire or screwdriver into your projector. If something should fall into your projector, turn off the projector and laser unit, disconnect the projector power plug from the outlet, disconnect the breaker connected to the AC power cable of the laser unit, and have the object removed by a qualified service person.
3. Turn off the projector, unplug the power cable and have the projector serviced by a qualified service personnel under the following conditions:
  - When the power cable or plug is damaged or frayed.
  - If liquid has been spilled into the projector, or if it has been exposed to rain or water.
  - If the projector does not operate normally when you follow the instructions described in this user's manual.
  - If the projector has been dropped or the cabinet has been damaged.
  - If the projector exhibits a distinct change in performance, indicating a need for service.
4. Keep any items such as magnifying glass out of the light path of the projector. The light being projected from the lens is extensive, therefore any kind of abnormal objects that can redirect light coming out of the lens, can cause unpredictable outcome such as fire or injury to the eyes.
5. When using a LAN cable:  
For safety, do not connect to the connector for peripheral device wiring that might have excessive Voltage.
6. Do not try to touch the air outlets on the projector during normal projector operation as it is hot.

### Cleaning

1. During cleaning, turn off the projector and laser unit, disconnect the projector power plug from the outlet, and disconnect the breaker connected to the AC power cable of the laser unit.
2. Clean the cabinet periodically with a cloth. If heavily soiled, use a mild detergent. Never use strong detergents or solvents such as alcohol or thinner.
3. Use a blower or lens paper to clean the lens, and be careful not to scratch or mar the lens.
4. Do not touch the projector or the power plug with wet hand. Doing so can cause electrical shock or fire.



### CAUTION

1. Do not unplug the power cable from the wall outlet or projector when the projector is powered on. Doing so can damage the projector.
  - While projecting images
  - While cooling after the projector has been turned off.  
(The POWER button LED blinks in green while the fan is rotating, and "cooling..." is displayed on the LCD screen. The cooling fan continues to work for 60 seconds.)
2. Use of a wall outlet with a 20 A or more circuit breaker is recommended.

### Caution on Carrying the Projector/Handling the Optional Lens

When shipping the projector with the lens, remove the lens before shipping the projector. Always attach the dust cap to the lens whenever it is not mounted on the projector. The lens and the lens shift mechanism may encounter damage caused by improper handling during transportation.

#### WARNING TO CALIFORNIA RESIDENTS:

Handling the cables supplied with this product will expose you to lead, a chemical known to the State of California to cause birth defects or other reproductive harm. WASH HANDS AFTER HANDLING

### Disposing of your used product



EU-wide legislation as implemented in each Member State requires that used electrical and electronic products carrying the mark (left) must be disposed of separately from normal household waste.

This includes projectors and their electrical accessories. When you dispose of such products, please follow the guidance of your local authority and/or ask the shop where you purchased the product.

After collecting the used products, they are reused and recycled in a proper way. This effort will help us reduce the wastes as well as the negative impact to the human health and the environment at the minimum level.

The mark on the electrical and electronic products only applies to the current European Union Member States.

### For questions relating to unclear points or repairs

Contact your dealer or the following support branch for questions relating to unclear points, malfunctions and repairs of the product.

#### In Europe

Company Name: NEC Display Solutions Europe GmbH  
Address: Landshuter Allee 12-14, D-80637 Muenchen, Germany  
Telephone: +49 89 99699 0  
Fax Line: +49 89 99699 500  
Email Address: [info@nec-displays.com](mailto:info@nec-displays.com)  
WEB Address: <http://www.nec-display-solutions.com>

#### In North America

Company Name: NEC Display Solutions of America, Inc.  
Address: 500 Park Boulevard, Suite 1100 Itasca, Illinois 60143, U.S.A.  
Telephone: +1 800 836 0655  
Fax Line: +1 800 356 2415  
Email Address: [pjtechsupport@necdisplay.com](mailto:pjtechsupport@necdisplay.com)  
WEB Address: <http://www.necdisplay.com/>

#### In China

Company Name: NEC Solutions (China) Co., Ltd.  
Address: Rm 1903, Shining Building, 35 Xueyuan Rd, Haidian District Beijing 100191, P.R.C.  
Telephone: +8610 59342706

#### In Hong Kong, Taiwan, Singapore, Malaysia and Indonesia

Company Name: Strong Westrex, Inc.  
Address: Room 4108 China Resources Building, No. 26 Harbour Road, Wanchai, Hong Kong.  
Telephone: +852 2827 8289  
Fax Line: +852 2827 5993  
Email Address: [hkstrong@netvigator.com](mailto:hkstrong@netvigator.com)

#### In South Korea

Company Name: Hyosung ITX Co., Ltd.  
Address: 1F, Ire Building, 2, Yangpyeong-dong 4-ga, Yeongdeungpo-gu, Seoul, Korea 150-967  
Telephone: +82-2-2102-8591  
Fax Line: +82-2-2102-8600  
Email Address: [moneybear@hyosung.com](mailto:moneybear@hyosung.com)  
WEB Address: <http://www.hyosungitx.com>

#### In Australia and New Zealand


Company Name: NEC Australia Pty Ltd  
Address: 26 Rodborough Road Frenchs Forest NSW 2086  
Telephone: 131 632 (from anywhere in Australia)  
Email Address: [displays@nec.com.au](mailto:displays@nec.com.au)  
WEB Address: <http://www.nec.com.au>

## Laser aperture and warning labels on the projector

 **WARNING**

Always wear laser protection glasses (that meet the following conditions) while working to protect your eyes.  
<Requirements for laser protection glasses>

- Optical density: Red (465nm) OD4 or higher, Green (532nm) OD4 or higher, Blue (640nm) OD4 or higher
- Transmissivity of visible light: 4.5% or higher

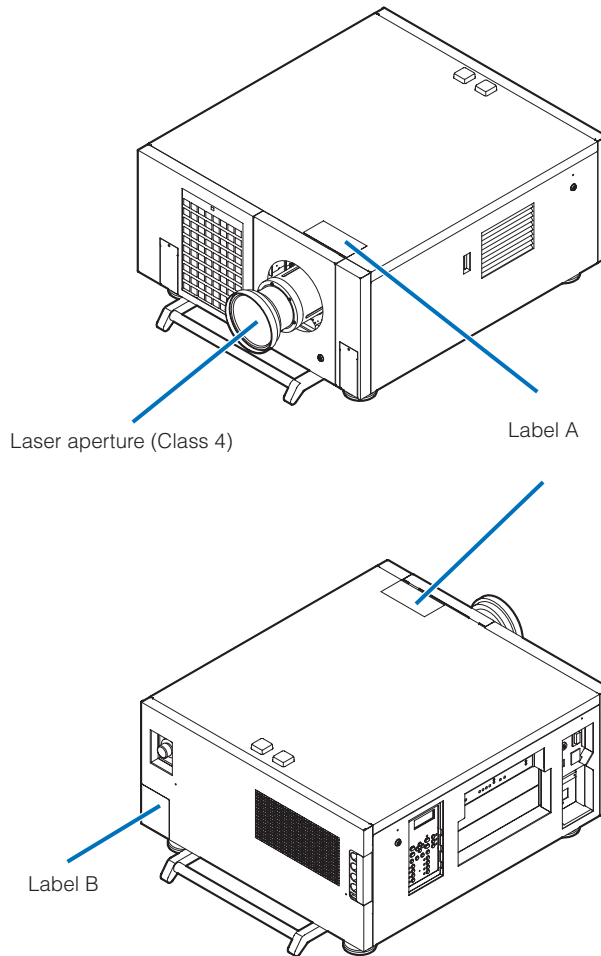

• Label A

レーザ放射	RAYONNEMENT LASER	
LASER RADIATION	LASERSTRAHLUNG	
ビームや散乱光の目又は皮膚への被ばくを避けること。	ÉVITEZ D'EXPOSER LES YEUX OU LA PEAU À UN RAYONNEMENT DIRECT OU DIFFUS.	
AVOID EYE OR SKIN EXPOSURE TO DIRECT OR SCATTERED RADIATION.	SETZEN SIE AUGEN UND HAUT NICHT DER DIREKTEN ODER GESTREUTEN STRAHLUNG AUS.	
RED Max. 98 W	LD, CW	636-644 nm
GREEN Max. 64 W	SOLID STATE LASER, CW	532 nm
BLUE Max. 46 W	LD, CW	455-470 nm
クラス 4 レーザ製品	PRODUIT LASER DE CLASSE 4	
CLASS 4 LASER PRODUCT	LASERPRODUKT KLASSE 4	
	IEC60825-1:2007	

レーザ開口

LASER APERTURE

OUVERTURE LASER

LASER-AUSTRITTSÖFFNUNG

24L75042

• Label B

**NEC MODEL NP-NC1440L-A 100-240V~ 50/60Hz 4.3-2.3A**

<p><b>CAUTION</b> TO PREVENT ELECTRIC SHOCK, DO NOT OPEN TOP COVER. NO USER-SERVICEABLE PARTS INSIDE.</p> <p><b>WARNING</b> TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.</p>	<p><b>ATTENTION</b> AFIN DE PREVENIR UN CHOC ELECTRIQUE NE PAS ENLEVER LE COUVERCLE S'ADRESSER A UN REPARATEUR COMPETENT.</p> <p><b>AVERTISSEMENT</b> POUR EVITER UN FEU OU UN RISQUE D'ELECTROCUTION NE PAS EXPOSER CET ENSEMBLE A LA PLUIE OU A L'HUMIDITE.</p> <p><b>HINWEIS</b> ZUR TRENNUNG VOM NETZ IST DER NETZSTECKER AUS DER STECKDOSE ZU ZIEHEN!</p>	  	<p>品名 DLPシネマプロジェクター</p> <p>使用上の注意</p> <p>イ. 通気孔をふさがないでください。内部温度の上昇を招き故障の原因になります。</p> <p>ロ. 温度の高い場所や湿気の多い場所での使用はさけてください。</p> <p>注意 この装置は、クラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。 VCCI-A</p>
---	--	----------	---

THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION. THIS CLASS A DIGITAL APPARATUS MEETS ALL REQUIREMENTS OF THE CANADIAN INTERFERENCE-CAUSING EQUIPMENT REGULATIONS. CAN ICES-3(A)/NMB-3(A)


<p><b>警告</b></p>	<p><b>高圧注意</b></p> <p>サービスマン以外の方は外装パネルを外さないでください。内部には高電圧部分が多々あり、万一さわると危険です。</p>
------------------	---

NEC Display Solutions, Ltd. 4-28, Mita 1-home, Minato-ku, Tokyo, Japan      MADE IN CHINA      24L77171

## Important Information (for NC1440L-A)

### ■ Laser light specifications

Class	Class 4 laser product
Wavelength	Red 636 to 644 nm, Green: 532 nm, Blue: 455 to 470 nm
Pulse duration	CW (Continuous Wave)
Maximum optical output	Red (640 nm): 212 mW, Green (532 nm): 136 mW, Blue (464 nm): 94mW
MPE	Red (640 nm): 250 J/m <sup>2</sup> , Green (532nm): 257 J/m <sup>2</sup> , Blue (464 nm): 191 J/m <sup>2</sup>
NOHD	7.5 m
Exposure duration	10 seconds

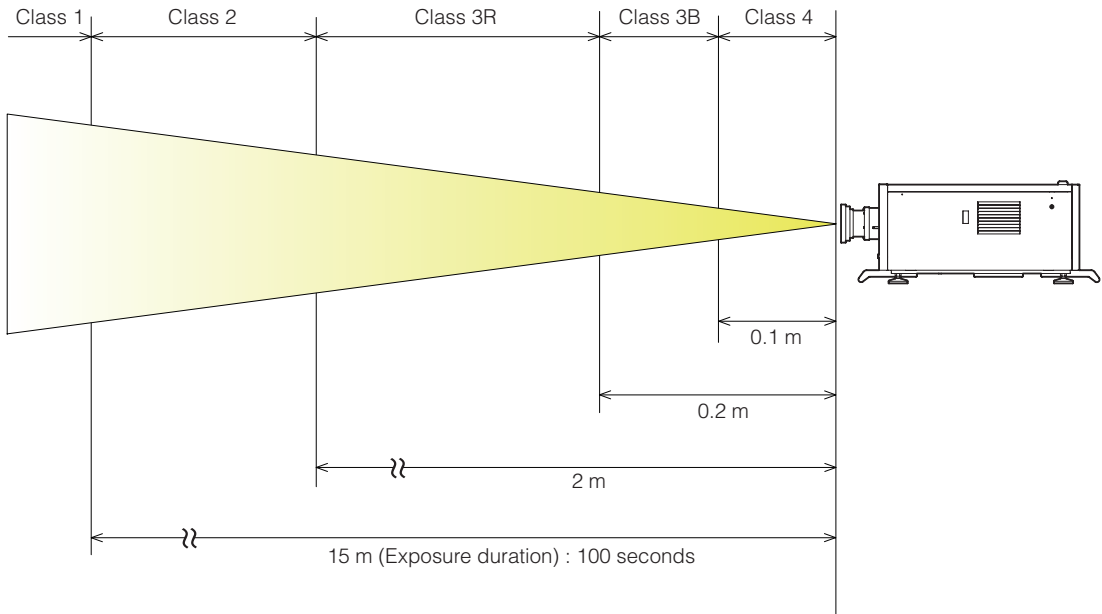

# Range of laser light emissions

The following range indicates the maximum range of emission of laser light.

Horizon angle: H



[Degree]

Lens	Zoom	
	Tele	Wide
NC-50LC12Z	15.5	20.8
NC-50LC14Z	14.2	18.8
NC-50LC16Z	12.4	17.3
NC-50LC18Z	10.1	15.8
NC-50LC21Z	8.5	13.6
L2K-30ZM	7.2	10.1

Vertical angle: V

[Degree]

Lens	Zoom	
	Tele	Wide
NC-50LC12Z	8.8	12.5
NC-50LC14Z	8.0	11.0
NC-50LC16Z	6.8	10.0
NC-50LC18Z	5.5	9.0
NC-50LC21Z	4.6	7.6
L2K-30ZM	3.9	5.5

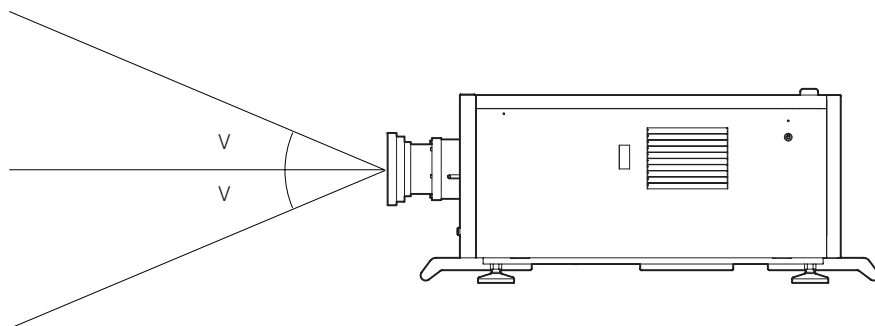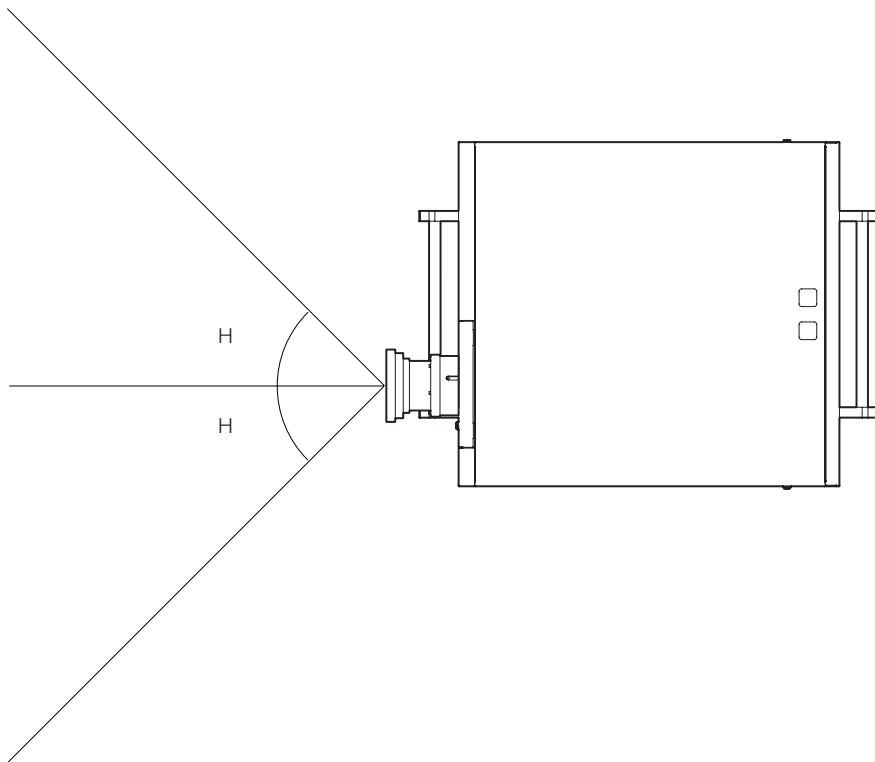

# Table of Contents

---

<b>Important Information (for NC1040L-A)</b> .....	<b>2</b>
<b>Important Information (for NC1440L-A)</b> .....	<b>10</b>
<b>1.What's in the Box? and the Names of the Projector Parts</b> .....	<b>19</b>
1-1. Features .....	19
1-2. What's in the Box? .....	21
1-3. Names of the Projector Parts .....	23
<b>2.Installation and Connection</b> .....	<b>29</b>
2-1. Steps for setting up and connecting .....	29
2-2. Connecting the Power Cable .....	30
2-3. Connecting the image input terminals.....	33
2-4. Connecting the various control terminal .....	33
<b>3.Projection of Images (Basic Operation)</b> .....	<b>34</b>
3-1. Steps of projecting images.....	34
3-2. Turning your projector on.....	35
3-3. Selecting the title of input signal.....	38
3-4. Adjusting the position and the size of projected screen.....	39
3-5. Preventing misoperations .....	43
3-6. Turning on/off the light source with the projector turned on .....	44
3-7. Turning your projector off .....	45
<b>4.Using Menus</b> .....	<b>46</b>
4-1. Basic operation with adjustment menus.....	46
4-2. Table of adjustment menus .....	51
4-3. Title Select .....	52
4-4. Configuration .....	53
4-5. Title Setup .....	55
4-6. Information .....	55
<b>5.Maintenance of Your Projector</b> .....	<b>58</b>
5-1. Cleaning the Cabinet.....	58
5-2. Cleaning the Lens.....	58
5-3. Replacing the Air Filter.....	59
5-4. Cleaning the Laser Unit.....	61
<b>6.Appendix</b> .....	<b>62</b>
6-1. Troubleshooting.....	62
6-2. Indicator display list .....	63
6-3. Operation using an HTTP browser.....	67
6-4. Writing of the log file (Save Information) .....	72
6-5. Outline Drawing .....	75
6-6. Specifications.....	77
6-7. Power Cable .....	79
6-8. Pin Assignment and Functions of Terminal.....	81
6-9. Related products list.....	88

---

---

# 1.

# What's in the Box? and the Names of the Projector Parts

---

---

## 1-1. Features

- **Laser light source DLP Cinema® projector**

By using pure laser of R, G and B as a light source, wider color range than existing projector has been achieved.

- **Compatible with various installation methods by separating laser unit from projector**

As projector and laser unit can be installed separately, various installation methods are possible. (Projector can be installed on the floor or hanging from the ceiling. Only floor installation supports laser unit.) Many types of optional lens for the projector also are available for separate sale to support various projection range.

- **Equipped with easy to use functions**

(1) Lens memory function and light power memory function that can be operated with one touch.

The projector is provided with a lens memory function that can memorize zoom position and shifting position by matching screen size according to input signal and a light power memory function for storing the brightness of the images on the screen for each input signal.

Even if you are projecting multiple images that have different settings for screen size and brightness, you can project them with the conditions pre-registered for each signal, simply by selecting the corresponding signal.

(2) Laser light source method realizes high reliability and long service life at the same time

As the laser unit is composed of plural laser elements for each color of R, G and B, even if any laser element becomes faulty, other laser elements compensate it and lower the risk of projection suspension. High efficiency has been achieved for the maintenance of the projector mainly in the following points.

- As the longevity of laser element is longer compared to that of the existing lamps, periodical replacement is not necessary.
- As heat generation is low compared to lamps and powerful cooling system is not required, the clogging of air-filter decreased significantly.

(3) Frequently used titles can be registered in preset buttons

The projector has been equipped with 8 preset buttons that make it easy to select registered title (input signal). To this projector, 100 titles at most can be registered (input signal registration). Among the registered titles, any 16 titles can be assigned to the preset buttons.

## 1. What's in the Box? and the Names of the Projector Parts

---

(4) You can operate and configure the projector via a network from a PC

You can operate and configure the projector via a network from a PC by using the separately supplied software Digital Cinema Communicator (DCC) for S2.

- **DMD face dust protection structure**

A dust control shield is arranged between each DMD chip of R, G and B, and the spectroscopic/condenser prism. It prevents dust and dirt in the air, and oily particles in smoke associated with event halls from coming into contact with the face of the DMD and causing operating problems.

- **Efficient cooling of the heat from the DMD unit by the cooling structure**


The DMD unit uses a highly efficient liquid cooling method. This efficiently eliminates heat applied to the DMD by the complete dust control structure and high light output, thereby ensuring the reliability of the projector.

## 1-2. What's in the Box?


Check the content of the accessories.

### 1-2-1. Accessories for the Projector

Projector

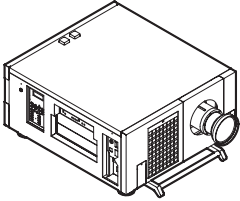

 Sheet of title labels (for 20 labels) x 2




Cover key x 2




Keys for laser administrator x 2




User's Manual

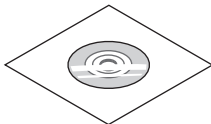

Lens holder (NC-50LA01-B)

 

Dedicated interface cable  
(NC1040L-A: 1 piece, NC1440L-A: 2 pieces)

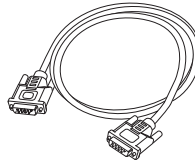


Ferrite core for EMI suppression  
(NC1040L-A: 1 piece, NC1440L-A: 2 pieces)



Ferrite core fastening band  
(NC1040L-A: 1 piece, NC1440L-A: 2 pieces)



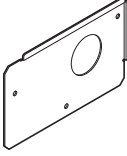


Important Information

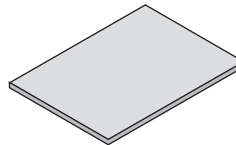

# 1. What's in the Box? and the Names of the Projector Parts


## 1-2-2. Accessories for the laser unit (NP-10LU01)
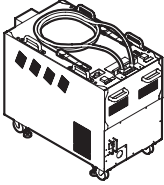
<input type="checkbox"/> Laser unit (NP-10LU01) (with the optical fiber cable) 	<input type="checkbox"/> Key for laser administrator (NC1040L-A: 1 piece, NC1440L-A: 2 pieces) 
<input type="checkbox"/> Holding clip for AC power cable (NC1040L-A: 1 piece, NC1440L-A: 2 pieces) 	

**TIP** In the event that you did not receive all of the accessories outlined above, or some are damaged, contact your dealer/distributor.  
Differs slightly from the drawings in this manual, but there is no problem in actual use.

## 1-3. Names of the Projector Parts

### 1-3-1. Front of the Projector

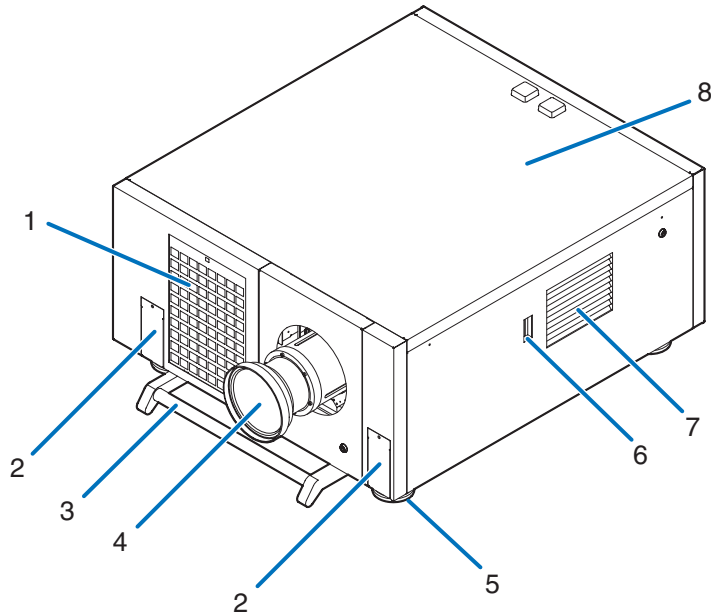

#### 1 Air inlet

The air inlet for cooling inside the projector. Do not cover.

An air filter is attached over the air inlet to prevent dust. Refer to “5-3. Replacing the Air Filter” (page 59) on how to replace the air filter.

#### 2. Optional lens stay fittings

This will be used for function expansion in the future.

#### 3. Handle for transportation

The handle is used when transporting the projector.

#### 4. Lens (optional)

Images are projected from the lens. Request your dealer/distributor to install or replace the lens.

#### 5. Level adjusters (in four positions)

In the ordinary installation, you can adjust the projector inclination at 4 positions.

#### 6. Cooling fluid gauge

The gauge to indicate the remaining amount of the DMD cooling fluid

#### 7. Air Outlet

Exhaust heat in electric circuit section of the projector. Do not cover.


#### 8. Buzzer (inside of projector)

The buzzer rings when the power is turned on or an error has occurred.

#### **NOTE**

- Do not touch the air outlet and backside of the main unit when your projector is operating. Otherwise, the high temperature may cause burns.
- Do not cover the air inlets and outlet while the projector is in operation. Insufficient ventilation leads to a rise of the internal temperature and may cause a fire or malfunction.

## 1-3-2. Rear of the projector

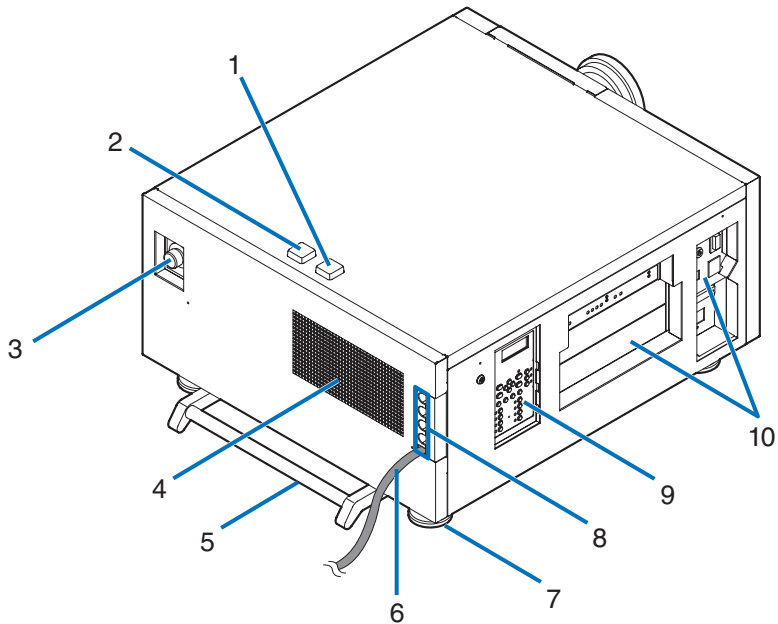

### 1. STATUS indicator (for projector)

These indicate the status of the projector. When the projector is operating normally, these light/blink in green or orange. When an error occurs, they light/blink in red. When an error occurs, check the contents of the display on the LCD screen. (See page 65)

### 2. STATUS indicator (for laser)

This indicates the status of the laser. It lights in white while laser is being projected. (See page 65)

### 3. Emergency stop switch

When an abnormality occurs during the operation of the projector or the laser unit, or an emergency (attendance in laser projection range, earthquake/fire, etc.) occurs, you can immediately stop laser projection (emergency stop status) by pressing this switch. The projector cannot be operated during the emergency stop status. Rotate the switch to arrow direction or pull it to release the emergency stop status.

### 4. Air Outlet

Exhaust heat in electric circuit section of the projector. Do not cover.

### 5. Handle for transportation

The handle is used when transporting the projector.

### 6. Dedicated interface cable

This is the interface cable that connects with the laser unit.

### 7. Level adjusters (in four positions)

In the ordinary installation, you can adjust the projector inclination at 4 positions.

### 8. Optical fiber cable mounting port

Mount optical fiber cable of the laser unit to the inside of the projector through this section. Consult your dealer for installing/removing the optical fiber cable.

### 9. Control panel

On the control panel, power to your projector is turned on or off, titles are selected, and various adjustments are made of projected screen. (See page 27)

### 10. Connection terminals


Various image signal cable, AC power cable, and LAN cable are to be connected here. (See page 26)

## 1. What's in the Box? and the Names of the Projector Parts

### NOTE

- Do not touch the air outlet and backside of the main unit when your projector is operating. Otherwise, the high temperature may cause burns.
- Do not cover the air inlets and outlet while the projector is in operation. Insufficient ventilation leads to a rise of the internal temperature and may cause a fire or malfunction.

### 1-3-3. Laser unit (NP-10LU01)

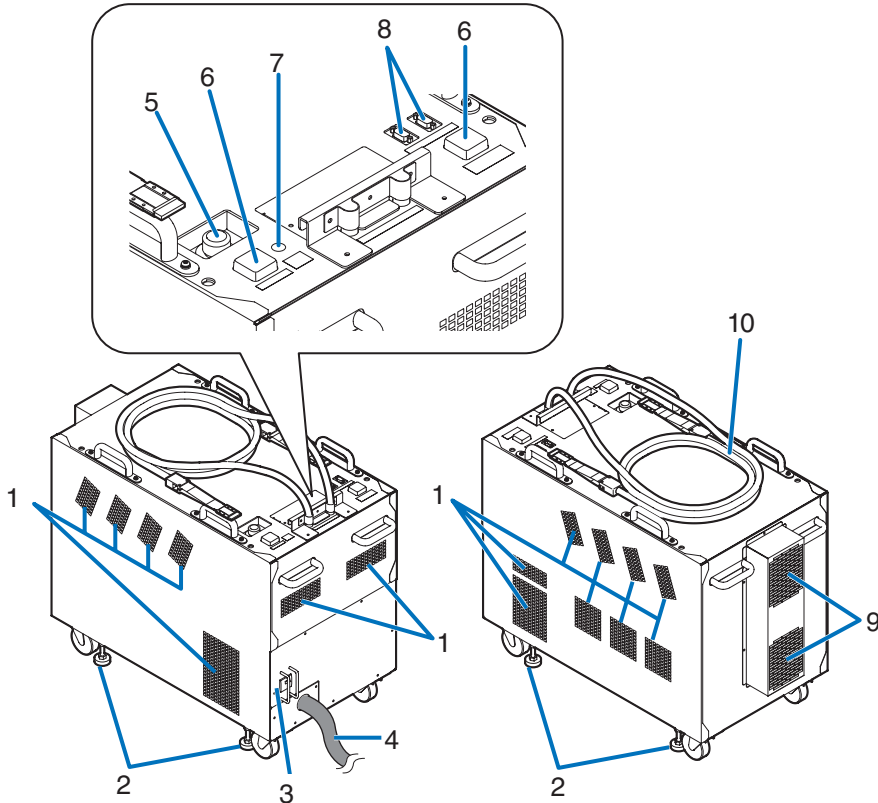

#### 1. Air inlet

Take in outside air to prevent from overheating inside the laser unit. Do not cover.

#### 2. Level adjusters (in four positions)

Use to fix the laser unit so that it will not move.

#### 3. Main power switch

This is a main power switch.

#### 4. AC power cable

This is the cable that supplies AC power to the laser unit. The AC power cable is not an accessory. Consult with your dealer/distributor about the AC power cable.

#### 5. Emergency stop switch

When an abnormality occurs during the operation of the projector or the laser unit, or an emergency (attendance in laser projection range, earthquake/fire, etc.) occurs, you can immediately stop laser projection (emergency stop status) by pressing this switch. The projector cannot be operated during emergency stop status. Rotate the switch to arrow direction or pull it to release the emergency stop status.

#### 6. STATUS indicator

It displays the operation status or the error status of the laser unit. (See page 66)

#### 7. Switch for laser administrator

Insert the key for the laser administrator and rotate in the ON direction to turn on the power supply of the laser unit.

# 1. What's in the Box? and the Names of the Projector Parts

## 8. Control terminal (CONTROL/SLAVE)

Connect the dedicated interface cable to monitor the status of the laser unit from the projector.

## 9. Air outlet

The air outlet to exhaust heat inside the laser unit. Do not cover.


## 10. Optical fiber cable (2 cables)

Connect through optical fiber cable mounting port of the projector. Consult your dealer for installing/removing the optical fiber cable.

### NOTE

- Do not touch the air outlet when your projector and laser unit are operating. Otherwise, the high temperature may cause burns.
- Do not cover the air inlets while the projector and laser unit are in operation. Insufficient ventilation leads to a rise of the internal temperature and may cause a fire or malfunction.

## 1-3-4. Connection terminals

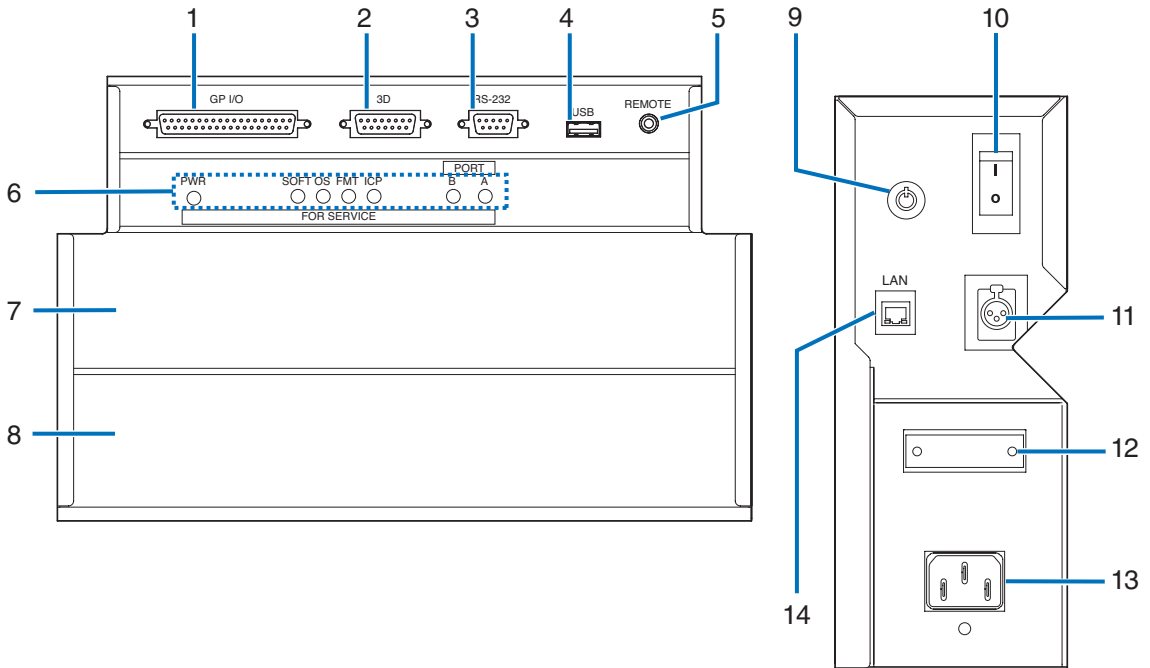

### 1. External control terminal (GP I/O) (D-Sub 37P)

The terminal for externally controlling the projector or connecting a 3D image system to the projector. (See page 82)

### 2. 3D terminal (3D) (D-Sub 15P)

The terminal for connecting a 3D image system to the projector. (See page 87)

### 3. PC control terminal (RS-232) (D-Sub 9P)

The terminal for operating the projector from a PC via an RS-232C or for service personnel to set data for the projector. Connect the projector and the PC with a commercially available RS-232C straight cable.

### 4. USB port (USB) (type A)

The port for the projector maintenance.

### 5. Service terminal (REMOTE) (Stereo mini)

This terminal is used for service purpose only.

### 6. Device management indicator

The indicator for displaying the projector status. Used by service personnel during maintenance.

### 7. Slot B

The slot is used for optional boards (page 33). Contact your dealer/distributor for an installation of optional boards.

# 1. What's in the Box? and the Names of the Projector Parts

## 8. Slot A

The slot is used for optional boards (page 33). Contact your dealer/distributor for an installation of optional boards.

## 9. Switch for laser administrator

Insert the key for the laser administrator and rotate to ON direction to operate the projector properly.

## 10. Main power switch

While AC power is being supplied, set the main power switch to ON ("1") position, then your projector will enter a standby state.

## 11. Connector terminal for optional use

This will be used for function expansion in the future.

## 12. Remote interlock connector

This is a terminal used for the safe usage of laser projected by the projector. It is used when you want to control laser projection by the projector from outside. Consult with your dealer/distributor about using this.

## 13. AC input


Connects to the AC power cable. The AC power cable is not an accessory. Consult with your dealer/distributor about the AC power cable.

## 14. Ethernet port (LAN) (RJ-45)

The port for interfacing with an image signal server or controlling the projector from a PC via a network. Connect the projector and the PC with a commercially available Ethernet cable (10/100/1000Base-T).

**NOTE** You cannot install signal input board both in slot A and slot B.

## 1-3-5. Control panel

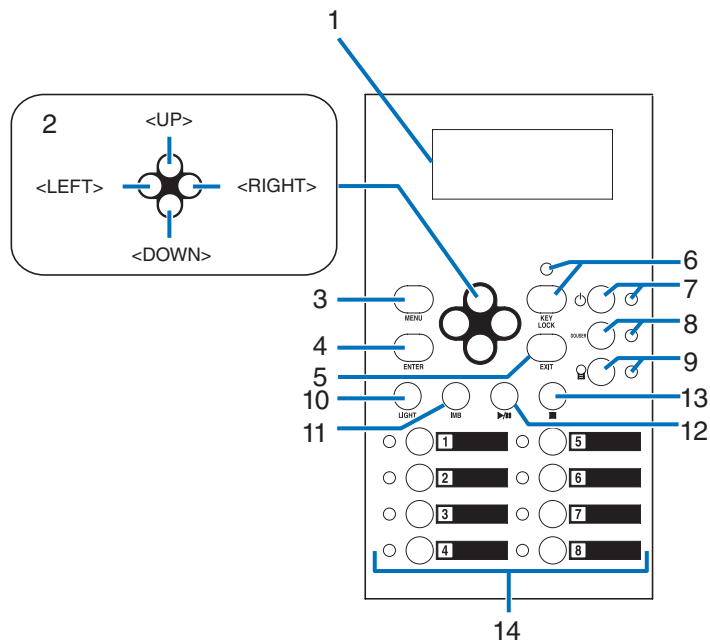

### 1. LCD screen

The LCD screen displays menus and setting values for the projector operations.

### 2. UP/DOWN/LEFT/RIGHT buttons

Press these buttons to select a menu item while a menu is displayed.

### 3. MENU button

Press this button to display the menu for various settings and adjustments. (See page 51)

### 4. ENTER button

Press this button to select the menu item.

# 1. What's in the Box? and the Names of the Projector Parts

---

## 5. EXIT button

Press this button to return to the previous menu item.

## 6. KEY LOCK button

Press this button to lock (KEY LOCK) the buttons on the control panel. Buttons on the control panel do not function while KEY LOCK is on.

Pressing the KEY LOCK button for one second or longer while KEY LOCK is off locks the buttons.

Pressing the KEY LOCK button for one second or longer while KEY LOCK is on unlocks the buttons. (See page 43)

**NOTE** KEY LOCK becomes automatically on if no control panel operation takes place in the standby state for 30 seconds by default. (See page 43)

## 7. POWER button

Press this button for more than three seconds to turn on or off (standby) the projector. (See page 64)

In order to start up the projector, turn on the main power switch for the laser unit and then main power switch for the projector to set the projector in the standby state. (See page 35)

## 8. DOUSER button

Press this button to open and close the douser. (See page 64)

## 9. LIGHT ON/OFF button

Press this button for five seconds or longer to turn on or off the light source while the projector is on. (See page 44)

## 10. LIGHT button

Press this button to display the light source adjustment menu. (See page 42)

## 11. IMB button (planned to be supported in a future update)

This button is operable when the media block is installed in the projector.

Press this button to display the operation menu of the media block.

## 12. Play/pause button (planned to be supported in a future update)

This button is operable when the media block is installed in the projector.

Press this button to play or pause the image contents.

## 13. Stop button (planned to be supported in a future update)

This button is operable when the media block is installed in the projector.

Press this button to stop playing the image contents.

## 14. Preset buttons

Press the preset button to select a title (input signal) assigned to each button. Up to 100 titles (input signals) can be registered to this projector, and any 16 titles from them can be assigned to the preset button. Please request your dealer to register and change the titles of the buttons as required.

The preset button indicators show their assigned title or selection status. (See page 63)

.....  
**TIP** To select a title allocated to one of the preset buttons, use the following procedure.

- To select a title allocated to one of "Preset Button1" to "Preset Button8"  
Press the button which corresponds to the number of the preset button (button <1> to <8>).
    - Press the <1> button to select the "Preset Button1".
    - Press the <8> button to select the "Preset Button8".
  - To select a title allocated to one of "Preset Button9" to "Preset Button16"  
Press the preset button (button <1> to <8>) while holding down the UP button.
    - Press the <1> button while holding down the UP button to select the "Preset Button9".
    - Press the <8> button while holding down the UP button to select the "Preset Button16".
- .....

---

---

# 2.

## Installation and Connection

---

---

### 2-1. Steps for setting up and connecting

Use the following steps for setting up your projector:

- **Step 1**

Setup the screen, projector, and laser unit. (Contact your dealer to carry out the setup.)

- **Step 2**

Connect the power cable to the projector. (See page 30)

- **Step 3**

Connect cables to the image input terminals. (See page 33)

Connect cables to the various control terminals. (See page 33)

### 2-2. Connecting the Power Cable

The power cable is not included with the projector. Use a power cable that meets the standards and power supply voltage of the country where you are using the projector. Ask your dealer for the power cable to select and purchase.

 **WARNING:**

Carefully read the contents described in this section before connection and connect the cables according to the proper procedure. Inappropriate handling may cause fatal, serious or other bodily injuries due to fire or electric shock.

 **CAUTION:**

- Before connecting the power cables, check that the main power switch of the projector is turned off. Implement the connection with AC power shut off.
- Be sure to ground the equipment to ensure safety. Use a power cable that meets the standards and power supply voltage of the country where you are using the projector (page 79), and always connect the equipment to the ground. If the ground is not connected, it may cause electrical shocks.
- When connecting the power cable plugs to the AC IN and the electrical outlet, securely insert the plugs all the way in. If the connection between the power cable plug and the electrical outlet is loose, the plug area may generate heat, causing burns and accidents.

**NOTE**


- Install the electric outlet nearby the projector main unit so that the power supply can be cut by unplugging the AC power cable.
- When plugging in or unplugging the AC power cable, make sure that the main power switch is pushed to the [O] position. Failure to do so may cause damage to the projector.
- Do not use a three-phase power supply. Doing so may cause malfunction.

**⚠ CAUTION:**

Do not bundle the power cable. Doing this could cause heat or a fire.


- 1** Move the clamber of the power cable stopper to your side while pulling out the knob of the power cable stopper.

If you pull out the knob, you can move the clamber of the power cable stopper back and forth.

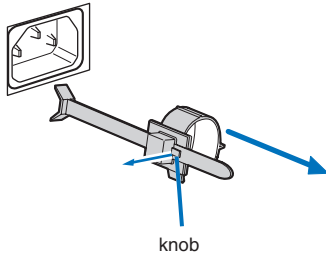

- 2** Connect AC power cable to AC IN connector of the projector.


Insert power connector deeply enough.

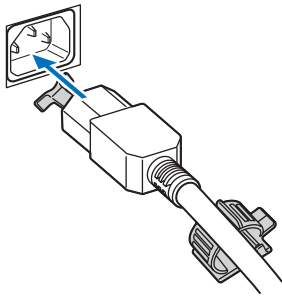

- 3** Insert AC power cable to the clamber of the power cable stopper and then fix it.

Push the clamber to lock it.


**NOTE** Be careful not to insert the band inversely. Once the band is attached, it cannot be removed from the slot.

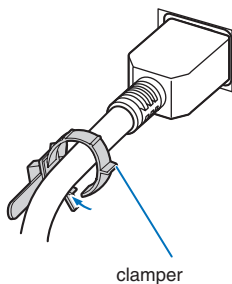

## 2. Installation and Connection

---

- 4 Slide the clamber to the hilt of the power cable.

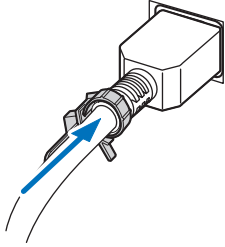

This completes the attachment of the AC power cable.  
Do the reverse way if you want to remove the AC power cable.

 **CAUTION:**

The projector may become hot temporarily when the power is turned off or if the AC power is disconnected while the projector is projecting. Take care when handling the projector.

## 2-3. Connecting the image input terminals

Video signals can be input from external devices by mounting an option board, which is sold separately, in the projector. The option boards that can be mounted in the projector and the video input ports fitted on each option board are as follows. Consult your dealer for details on mounting option boards. Refer to the instruction manual of the option board for details on connecting the option board with external devices.

Model name	Product name	Video input terminal
NC-80LB01-B	Signal Input Board (Note 1)	SDI input terminal x 4 (Note 2)
NC-80DS01-B		DVI-D input terminal x 2 (Note 3)
NP-80DS02		SDI input terminal x 4 (Note 2)
		DVI-D input terminal x 2 (Note 3)
NP-90MS01	Integrated Media Server	HDMI input port x 1
		SDI input port x 2

(Note 1) NC-80LB01-B supports CineLink™ 2.

NC-80DS01-B and NP-80DS02 don't support CineLink™ 2.

(Note 2) NC-80LB01-B and NC-80DS01-B support dual-link connection.


NP-80DS02 supports dual-link connection and quad-link connection.

(Note 3) Supports dual-link connection.

## 2-4. Connecting the various control terminal

For control, your projector comes with such ports as the PC control terminal and the Ethernet port (RJ-45).

- PC control terminal (RS-232) ----- Use this terminal when controlling the projector in serial connection from a PC.
- LAN port (LAN) ----- Use this port when controlling the projector in LAN connection from a PC.

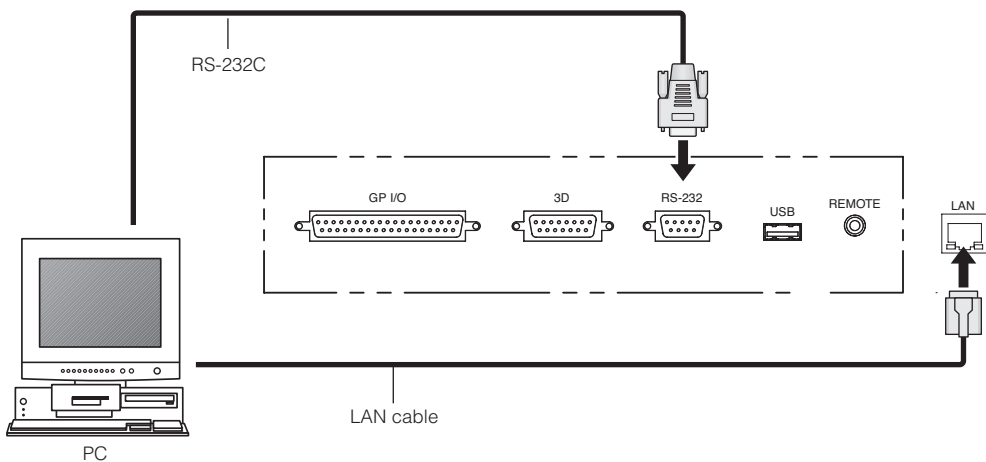

---

---

# 3.

## Projection of Images (Basic Operation)

---

---

### 3-1. Steps of projecting images

- **Step 1**

Turn on the power to the projector. (See page 35)

- **Step 2**

Select the title of input signal. (See page 38)

- **Step 3**

Adjust the position and size of the projected screen. (See page 39)

- **Step 4**

Turn off the power to the projector. (See page 45)

## 3-2. Turning your projector on

The power to this projector is separated to the power to the projector and power to the laser unit. To project an image, it is necessary for both power supplies to be on.

**Preparation:** Supply AC power to the projector and to the laser unit.  
Please contact your dealer/distributor to connect the power cable.

- NOTE**
- Turn off the main power switch to the projector head and the laser unit when supplying or cutting AC power to the projector and the laser unit.  
Supplying or shutting down the AC power while the main power switch is on will damage the projector.
  - When the emergency stop switch is pressed (emergency stop status), neither the projector nor laser unit can be operated.
  - Turning on and off the projector involves a two-step operation; the “main power switch” and the “POWER button”. To turn off power, proceed in the opposite procedure from when turning the power on and “POWER button” → “main power switch”.

[1] Turn on the “main power switch” of the projector and the laser unit.

AC power is supplied to the projector. The projector does not project images in this mode (standby mode).

[2] Turn on the “POWER button”.


The projector will be activated and can project images.

- The relationship between projector status and power supply, and the switch is as follows.


	Projector status		
	Power off	Standby	Power on
AC power supply	Supplied / Not supplied	Supplied	Supplied
Switch for laser administrator	OFF	ON	ON
Main power switch (Note)	OFF	ON	ON
POWER button	OFF	OFF	ON
Projection of image	Not allowed	Not allowed	Allowed

(Note) The main power switch of the laser unit has similar settings.

- 1 Remove the lens cap.
- 2 Confirm that the projector and laser unit emergency stop switches are not pressed.

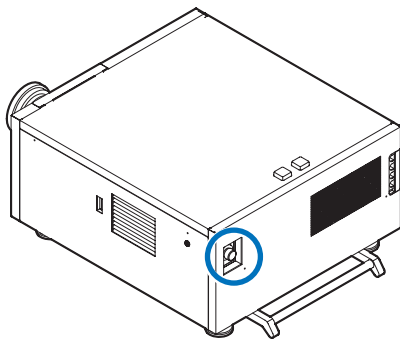

Projector

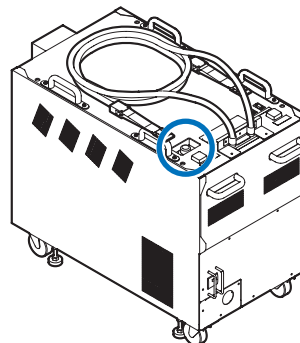

Laser unit

- 3 Insert the laser administrator key into both the projector and the laser administrator switches of the laser unit, and then turn them to the ON position.

- The projector's laser administrator switch (page 23)
- The laser unit's laser administrator switch (page 25)

### 3. Projection of Images (Basic Operation)

#### 4 Turn on the main power switch of the laser unit.

The laser unit's fan will rotate.

**NOTE** The NC1440L-A is composed of 2 laser units. Please be aware of the following when using the laser units.

- Projectors and laser units are connected using a dedicated interface cable. When turning on power, please turn on laser units starting from the one furthest away from the projector.

Example: If connected in the order of [projector] - [laser unit 1] - [laser unit 2], turn on the power of [laser unit 2] and then [laser unit 1].

- When turning on power to the laser units for the first time after installing the projector and laser units, be sure to have the projector recognize the laser units are connection order using the following operation (This operation is not necessary from the second time of activation onward).


#### Recognize the order the laser units are connected

After turning the main power switch of the first laser unit (laser unit 2) ON, wait for at least 30 seconds and then turn ON the main power switch of the second laser unit (laser unit 1).

- If the laser unit order has been changed or if a faulty laser unit has been replaced, be sure to recognize the new laser unit connection order.


#### 5 Turn on the main power switch on the side of the projector.

A buzzer will ring on the projector. The POWER button indicator will blink green and the STATUS indicator will light orange (standby state). KEY LOCK becomes automatically on if no control panel operation takes place in the standby state for 30 seconds by default. Buttons on the control panel do not function while KEY LOCK is on. (See page 43)

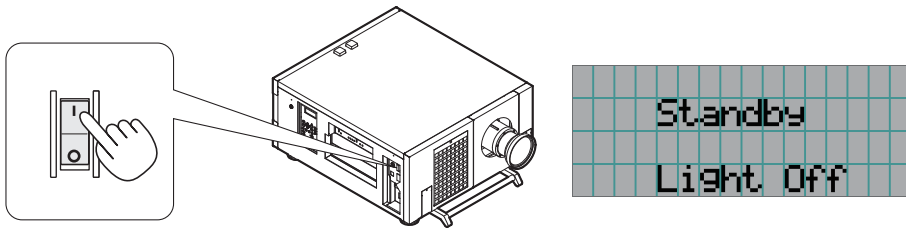




#### 6 If KEY LOCK is on, press the KEY LOCK button for one second or longer.

KEY LOCK becomes off. The KEY LOCK button indicator turns off and buttons on the control panel become operable. (See page 43)

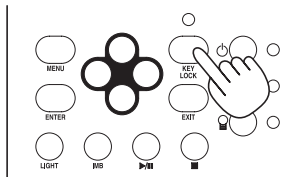

**7** Press the POWER button on the control panel of your projector three seconds or longer.

Your projector is turn on.

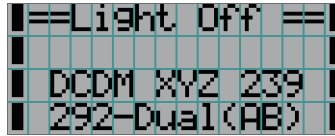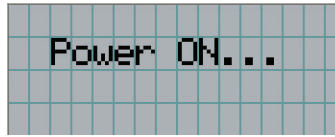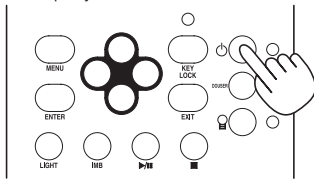



When the startup of the projector completes, the status of the POWER button, DOUSER button, LIGHT ON/OFF button, and preset button (button <1> to <8>) changes as follows.

POWER button	Lit green
DOUSER button	Initial settings: Off (douser is off)
LIGHT ON/OFF button	Initial settings: Off (light source is off)
Button <1> to <8>	The preset button which was last selected is lit green

**8** Press the LIGHT ON/OFF button on the control panel for five seconds or longer.

The light source is turned on and the screen glows light about 15 seconds later. The LIGHT ON/OFF button indicator lights green.

The douser is closed until the screen glows light (the DOUSER button indicator lights green). When the douser is open, the DOUSER button indicator turns off.

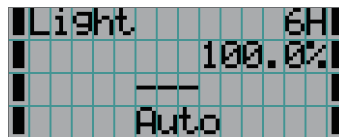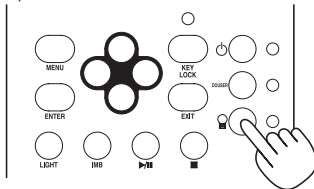

**NOTE**


- While your projector is on, be sure to have the lens cap removed from the lens. Otherwise, the lens cap may get deformed due to a heat buildup.
- In the following instances, the power to your projector cannot be turned on even if you press the POWER button.
  - When the inside temperature is abnormally high. The protective function prevents power from turning on. Wait some time (until the projector inside cools down) and then turn on the power.
  - When the STATUS indicator is blinking in red without the light source lighting up after power-on. Your projector may be in trouble. Check the error display on the LCD screen and contact your dealer/distributor for instructions.

## 3-3. Selecting the title of input signal

This projector allows you to select pre-registered title (input signal) using the preset buttons on the control panel (up to 16 titles). Request your dealer/distributor for details on registering and changing titles. This section explains the steps for selecting registered titles.

- 1 Turn on the power to the image devices connected to the projector.
- 2 Press the MENU button.
- 3 Press the LEFT/RIGHT button to display "Title Select" on the LCD screen.


At each press of the LEFT/RIGHT buttons, the display will cycle as "Title Select" ↔ "Configuration" ↔ "(Title Setup)" ↔ "Information."

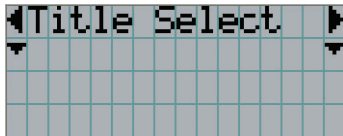

- 4 Press the DOWN button.

The title of the input signal is displayed.

- When you have made a wrong selection, press the UP button. A return will be made to the previous menu.

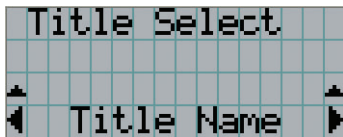


- 5 Press the LEFT/RIGHT buttons to display "Title of Signal to be Projected" on the LCD screen.

- 6 Press the ENTER button.

The title of the signal to be projected is selected.

- The (\*) mark on the LCD indicates that this is the currently selected item.

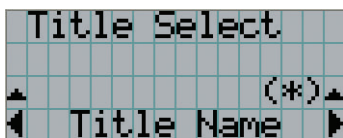


## 3-4. Adjusting the position and the size of projected screen


### 3-4-1. Displaying the test pattern

- 1 Press the MENU button, or select a test pattern from preset buttons (button <1> to <8>).

If you register the test patterns to the preset buttons (<1> to <8> buttons), select the test pattern according to "3-3. Selecting the title of input signal (See page 38)".

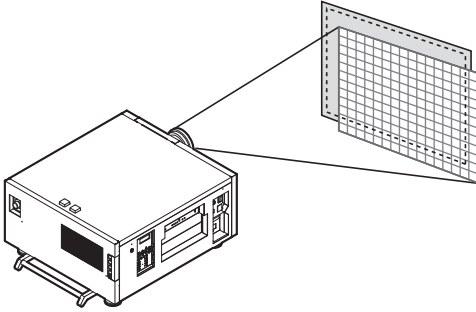


- 2 Press the LEFT/RIGHT button to display "Title Select" on the LCD screen.

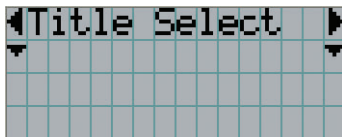

- 3 Press the DOWN button.


The title of the input signal is displayed.

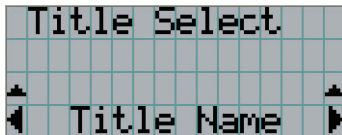

- 4 Press the LEFT/RIGHT button to display "TEST Pattern" on the LCD screen.

- 5 Press the DOWN button.

The LCD screen enters the mode where you can select a test pattern.

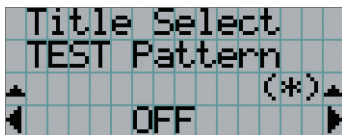

- 6 Press the LEFT/RIGHT button.

This switches the test pattern name displayed on the LCD screen.

### 3. Projection of Images (Basic Operation)


---

- 7 Display on the LCD the name of the test pattern to be projected, then press the ENTER button.

The test pattern is displayed.




To cancel the test pattern display, select the title of the signal to project or select the "OFF" test pattern.

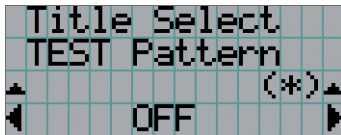

#### 3-4-2. Adjusting the position of the projected screen (Lens shift)


- 1 Press the MENU button.
- 2 Press the LEFT/RIGHT button to display "Configuration" on the LCD screen.
- 3 Press the DOWN button.
- 4 Press the LEFT/RIGHT button to display "Lens Control" on the LCD screen.
- 5 Press the DOWN button.

The screen ("Lens Position") to adjust the position of the projected screen is displayed.

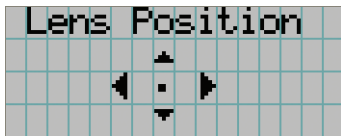

- 6 Press the UP/DOWN/LEFT/RIGHT button.

The position of the projected screen moves in the selected direction.

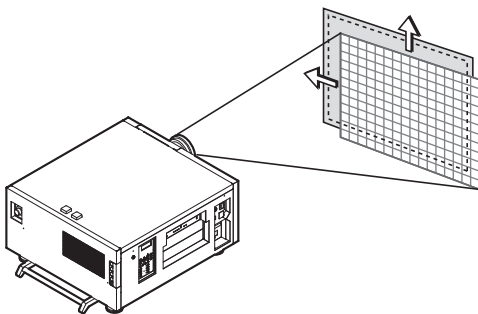


- 7 Press the EXIT button when adjustment is complete.

The display will return to a menu one level above (where "Lens Control" is displayed).

## 3-4-3. Adjustment of the size (zoom) and focus of the projected screen

- 1** Press the MENU button.
- 2** Press the LEFT/RIGHT button to display “Configuration” on the LCD screen.
- 3** Press the DOWN button.
- 4** Press the LEFT/RIGHT button to display “Lens Control” on the LCD screen.
- 5** Press the DOWN button.


The screen (“Lens Position”) to adjust the position of the projected screen is displayed.

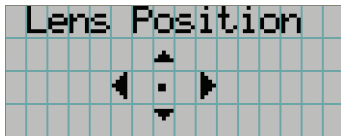

- 6** Press the ENTER button.

The screen to adjust the size and focus of the projected screen is displayed.


Press the ENTER button to switch the display between “Lens Position” and “Focus Zoom” adjustments.

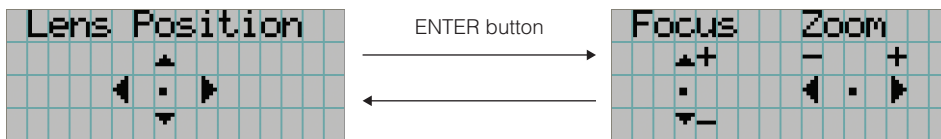


- 7** Adjust the size and focus of the projected screen.

Press the UP/DOWN button to adjust the focus.

Press the LEFT/RIGHT button to adjust the size.

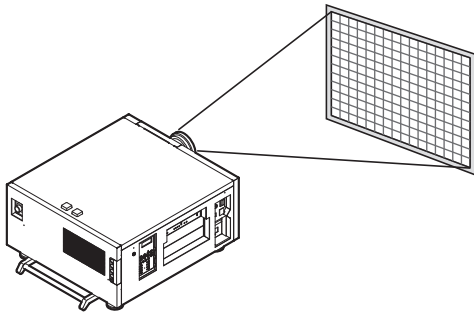

Focus  
(UP/DOWN button)

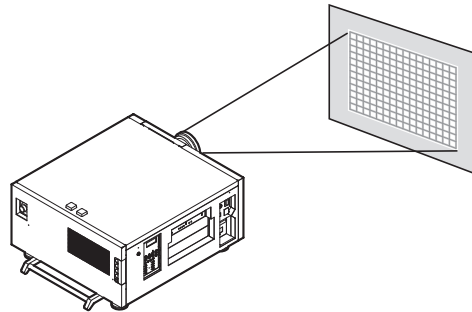

Zoom  
(LEFT/RIGHT button)

- 8** Press the EXIT button when adjustment is complete.



The display will return to a menu one level above (where “Lens Control” is displayed).

### 3. Projection of Images (Basic Operation)

#### 3-4-4. Adjusting the brightness of the projected screen (Light output)


- 1** Press the LIGHT button.

"Light Setup" is displayed.

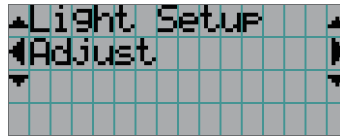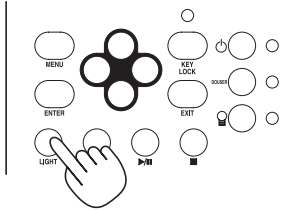

- 2** Press the DOWN button.


The screen to adjust the light output is displayed.

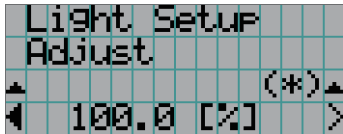

- 3** Press the LEFT/RIGHT button to adjust the light source output.

- 4** Press the ENTER button.

The specified adjustment value is applied.

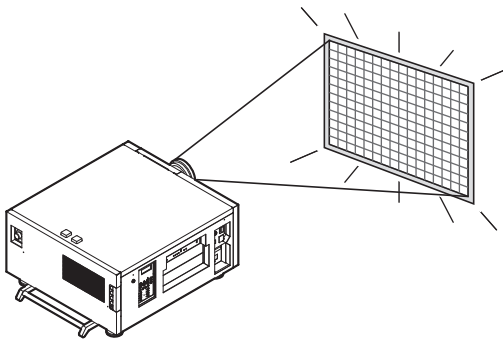

## 3-5. Preventing misoperations

Buttons on the control panel can be locked (KEY LOCK) to prevent misoperations. Buttons on the control panel do not function while KEY LOCK is on. KEY LOCK must be off to operate these buttons.


### NOTE

- KEY LOCK is automatically turned on in the following cases.
  - When the projector has entered the standby state by turning on the main power switch of the projector and the laser unit while the AC power is supplied.
  - When the projector has entered the standby state after turning off the power using the POWER button.
- The timing where KEY LOCK is turned on while the projector is in standby state depends on the "Auto Key Lock" setting in the adjustment menu.
  - When Auto Key Lock is enabled, KEY LOCK becomes automatically on if no control panel operation takes place in the standby state for 30 seconds. KEY LOCK becomes automatically on again even after KEY LOCK is turned off if no control panel operation takes place for 30 seconds.
  - When Auto Key Lock is disabled, KEY LOCK becomes automatically on when the projector enters the standby state; however, it stays off after KEY LOCK is turned off.

### 3-5-1. KEY LOCK setting

- Press the KEY LOCK button on the control panel for one second or longer.

KEY LOCK becomes on. The KEY LOCK button indicator lights orange. When you press a button on the control panel of the projector while KEY LOCK is on, "Panel is Locked. (KEY LOCK)" is displayed, and the button will not function. (See page 47)

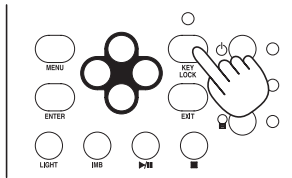

### 3-5-2. Turning KEY LOCK off


- Press the KEY LOCK button for one second or longer while KEY LOCK is on.

KEY LOCK becomes off. The KEY LOCK button indicator turns off.

## 3-6. Turning on/off the light source with the projector turned on

### 3-6-1. Turning off the light source

- Press the LIGHT ON/OFF button on the control panel for five seconds or longer.

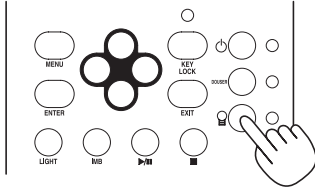

### 3-6-2. Turning on the light source


- Press the LIGHT ON/OFF button on the control panel for five seconds or longer.

## 3-7. Turning your projector off

### 1 Press the POWER button on the projector control panel for three seconds or longer.


The light source is turned off, the POWER button indicator blinks green, and the STATUS indicator blinks orange (cooling state). The fan will continue to rotate while cooling, and the amount of time remaining for cooling is displayed on the LCD screen. The cooling-off time is 60 seconds.

When the cooling is finished, the POWER button indicator turns off and the status indicator lights orange (standby state). KEY LOCK becomes automatically on if no control panel operation takes place in the standby state for 30 seconds by default. Buttons on the control panel do not function while KEY LOCK is on. (See page 43)

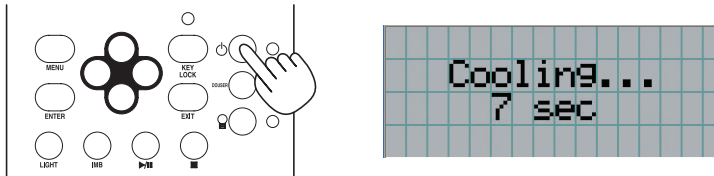

### 2 Wait till the projector enters standby state before turning off the main power switch of the projector.

The POWER button indicator is turned off and the main power is turned off.

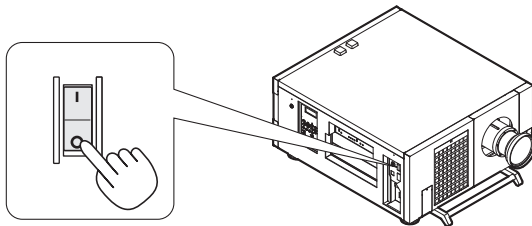

### 3 Turn off the main power switch of the laser unit.

For the NC1440L-A, turn off the laser units starting from the one furthest away from the projector.

### 4 Return the switch for laser administrator to the OFF position, then remove the key.

### 5 Remove the power plug of the projector from the power outlet, then shut down the breaker to which the AC power cable of the laser unit is connected.

**NOTE** In the following situations, do not switch off the main power switch of the projector, remove the power plug of the projector, nor shut down the breaker to which the AC power cable of the laser unit is connected. Such actions may cause damage the projector.

- While projecting images
- While the power is on
- While the fan is running after the light source is turned off (The cooling-off time is 60 seconds)


# 4. Using Menus

## 4-1. Basic operation with adjustment menus

To adjust the projector, display the menu on the LCD screen of the projector control panel.

### 4-1-1. Screen display

The menu display screen is composed of a menu display field (the upper two lines) and a setting item display field (the bottom two lines).

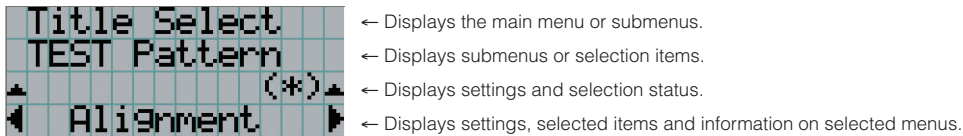


The meanings of symbols in the menu display screen are outlined below.

	Indicates that there is a menu of a higher level. Press the UP button to return to a menu one level above.
	Indicates that there is a selected item or menu at the same level. Press the LEFT/RIGHT button to display other selected items or menus.
	Indicates that there is a menu of a lower level. Press the DOWN button to display the menu one level below.
	Indicates that there are setting items of a higher or lower level. Press the UP button to return to a menu one level above. Press the DOWN button to display the setting item one level below.


When not displaying menus, the following screen is normally displayed.

**When in standby**

When the projector is in a standby state (the main power switch in on), the following is displayed.

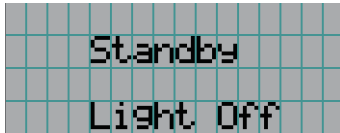**When power is turned on**

When the power is turned on, the following is displayed.

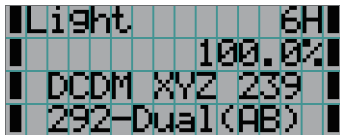

← Displays the hours of light source use.


← Displays the value of the light source output setting (%).

← Displays the selected title.


← Displays the selected video input port.

**When the power is turned off**

When you press the POWER button on the control panel of the projector for 3 or more seconds, the projector starts cooling. When cooling finishes, the projector enters the standby mode. The amount of time remaining for cooling is displayed as shown below during cooling.

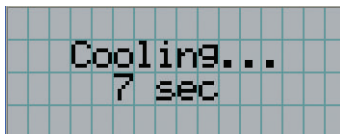**When a button is pressed while the key lock function is on**

If a button on the control panel is pressed while the key lock function is on, the following is displayed and the button will not function.

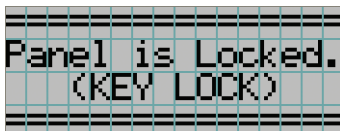

## 4. Using Menus


---

### 4-1-2. Operating menus

**Preparation:** Turn your projector on. (See page 35)


- 1** Press the MENU button on the control panel of your projector.

The menu is displayed in the LCD screen.

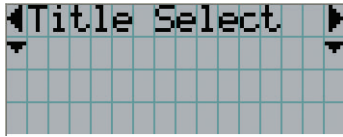

- 2** Press the LEFT/RIGHT buttons to display "Information."

At each press of the LEFT/RIGHT buttons, the display will cycle as "Title Select" ↔ "Configuration" ↔ "(Title Setup)" ↔ "Information."

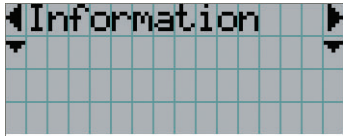


- 3** Press the DOWN button.

The submenu "Light" of "Information" is displayed.


The menu item can be selected by pressing the ENTER button instead of the DOWN button.

To return to the previous state, press the UP button, or the EXIT button.

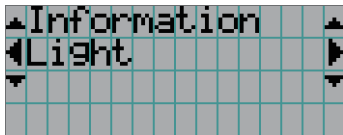


- 4** Press the LEFT/RIGHT button to select the submenu "Version."

At each press of the LEFT/RIGHT button, the display will cycle as "Light" ↔ "Preset Button" ↔ "Usage" ↔ "Error Code" ↔ "Version" ↔ "IP Address" ↔ "Setup Date" ↔ "Option Status."

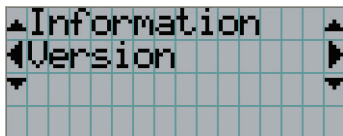


- 5** Press the DOWN button.

The submenu "System" another rank lower than "Version" is displayed.

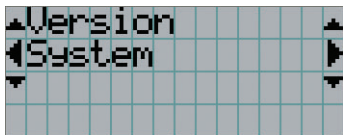


**6** Press the DOWN button.

The submenu "BIOS" another rank lower than "System" is displayed.

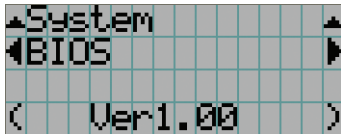**7** Press the LEFT/RIGHT button to select the submenu "Data."

At each press of the LEFT/RIGHT button, the display will cycle as "BIOS" ↔ "Firmware" ↔ "Data" ↔ "Serial No." ↔ "Model," and each version information is displayed.

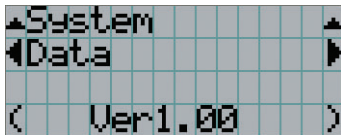**8** Press the UP button several times.


At each press of the UP button, the display will return to a menu one level above.

## 4. Using Menus

### 4-1-3. How to enter alphanumeric characters

Alphanumeric characters are entered for items, such as the log file of the specified period is written to USB memory. (See page 72)

Characters can be entered by pressing numeric buttons on the control panel on this projector.

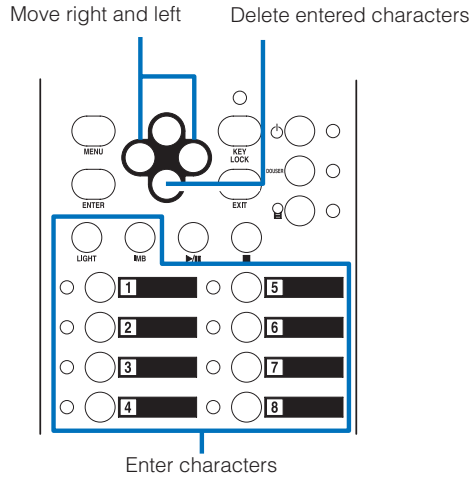

Characters can be entered by pressing each button as shown in the following table.

- To delete a character during entry, press the DOWN button.

#### [Example of Entry]

To enter "XGA" for example, use the following procedure:

- (1) Press the "8" button three times.  
V → W → X
- (2) Press the RIGHT button.  
XG
- (3) Press the "3" button.  
XG
- (4) Press the RIGHT button.  
XGA
- (5) Press the "1" button.  
XGA

Button	Entered character
1	A → B → C → 1 → a → b → c → ! → ↑
2	D → E → F → 2 → d → e → f → " → ↑
3	G → H → I → 3 → g → h → i → # → ↑
4	J → K → L → 4 → j → k → l → \$ → ↑
5	M → N → O → 5 → m → n → o → % → ↑
6	P → Q → R → 6 → p → q → r → & → ↑
7	S → T → U → 7 → s → t → u → ' → ↑
8	V → W → X → 8 → v → w → x → ( → ↑
LIGHT	Y → Z → / → 9 → y → z → ? → ) → ↑
IMB	* → , → . → 0 → ; → : → + → - → ↑

## 4-2. Table of adjustment menus

Menus in parentheses are menus for our service personnel. Normally, these menus cannot be used.

Main menu	Submenu		Description	Reference page	
Title Select	"Title Memory Name"		Selects the title of the signal to be projected.	52	
	TEST Pattern		Selects the test pattern to be projected.	52	
Configuration	Light Setup	Adjust	Adjusts the light source brightness (output).	53	
		Power On Light (Note)	Set up the light source status (ON/OFF) when the power of the projector is ON (only when the projector is in standby mode).	53	
		LightUnitSetup (Note)	Set up the number of laser units connected to the laser unit (only when the projector is in standby mode). No need to set up normally.	53	
		FiberTestMode (Note)	Set up timing to implement the connection test of optical fiber cable (only when the projector is in standby mode).	54	
	Lens Control	Lens Position	Adjusts the position of the projected screen.	54	
		Focus Zoom	Adjusts the size and focus of the projected screen.	54	
	Reset	(FactoryDefault)	Returns the settings to their default values. Selects between preset buttons and titles only, LAN settings only and all settings.	-	
		(Light Usage)	Initializes the usage time of the light source.	-	
		Filter Usage	Initializes the usage time of the air filter.	54	
		(Fan Usage)	Initializes the usage time of the fan.	-	
	(Setup)	Douser Setup	Sets the douser open/close state.	-	
		Turret	Control the turret mounted with the wide converter lens.	-	
		Panel Key Lock	Locks the buttons on the projector's control panel so that they cannot be operated.	-	
		Auto Key Lock	Enables or disables Auto Key Lock.	-	
		3D Connector	Sets the signal input terminal for a 3D image system (3D terminal or GPI/O terminal).	-	
		Off Timer	Sets the time until the projector power is turned off automatically.	-	
		(Installation)	Option Slot	Configures the device installed in slot A and slot B (only when the projector is in standby mode).	-
		Image Orient	Sets the projection method.	-	
		Lens Center	Moves the lens shift position to the center.	-	
		Baudrate	Sets the PC control connector (RS-232) data transmission speed (bps).	-	
		Date/Time	Sets the date and time on the projector.	-	
		NewRouterSetup	Sets the router with the default settings when the router built-in the projector has been replaced.	-	
	(Memory)	Light	The content of the selected light memory (light output power value) can be overwritten with the current settings.		
		Lens	The content of the selected lens memory can be overwritten with the current settings.		
	(Title Setup)	Preset Button	Preset Button 1–16	Sets the title to be assigned to the preset buttons (<1> to <8> buttons).	55
	Information	Light		Displays the light source output setting.	55
		Preset Button	Preset Button 1–16	Displays the titles which are assigned to the preset buttons (<1> to <8> buttons).	55
		Usage		Displays the usage time of the projector, light source, fan, and air filter.	55
		Error Code		Displays the currently occurring error.	56
		Version	System		Displays the model name and version (BIOS, firmware, data, and serial No.) of the projector.
SIB			Displays the model and version of the signal input board (SIB).	56	
IMB			Displays the vendor name and version information about the media block (IMB).	56	
Light Unit			Displays the software version of the laser unit.	57	
IP Address		System		Displays the IP address of the projector.	57
Setup Date		Displays the date when the projector was set up (starting date of the warranty period).		57	
Option Status		Displays the link status of the device mounted in slot A and slot B, and the projector.		57	

(Note) Requires logging into the projector with Advanced User or higher privileges.


## 4-3. Title Select

### 4-3-1. Title select (Title Memory)

Selects the title of the signal to be projected.

You can register up to 100 titles. You can also assign registered titles to the preset buttons (<1> to <8> buttons) on the projector's control panel and call them up directly using those buttons.

Request your dealer/distributor for details on registering and changing titles.

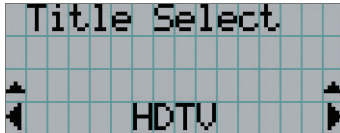

← Displays the currently selected item with asterisk (\*).

← Selects the title to be projected.

### 4-3-2. Test Pattern

Selects the test pattern to be projected.



← Displays the currently selected item with asterisk (\*).

← Selects the test pattern to be projected.

OFF, Alignment, Cross Hatch, Convergence, Red, Green, Blue, White, Black, White 50% [IRE], H-Ramp, Logo


## 4-4. Configuration

Please request your dealer/distributor to perform the settings.

### 4-4-1. Light Setup

#### Adjust


Adjusts the light source brightness (output). This setting is the fraction based on taking the maximum value of light source brightness as 100%.

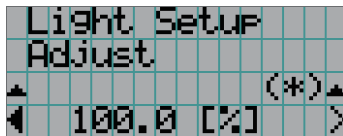

← Displays the setting.

#### Power On Light

Set up the light source status (ON/OFF) when the power of the projector is ON. This menu item is available only when the projector is in standby and you are logged into the projector with Advanced User or higher privileges.

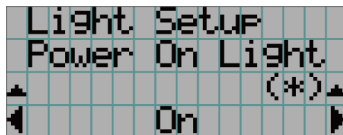


← Displays the currently selected item with asterisk (\*).

← Displays the setting.

On	When the power of the projector is ON, the light source will be lit in tandem with the projector.
Off	When the power of the projector is ON, the light source will not be lit. Light up the light source manually.

#### LightUnitSetup

This sets up the configuration of laser unit. This menu item is available only when the projector is in standby and you are logged into the projector with Advanced User or higher privileges. No need to set up normally.

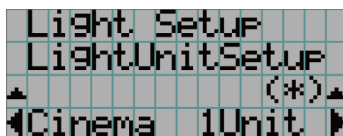

← Displays the currently selected item with asterisk (\*).


← Displays the setting.

Cinema 1Unit	Select when the number of laser unit is one.
Cinema 2Units	Select when the number of laser unit is two.

## 4. Using Menus

### FiberTestMode

This sets up timing to implement the connection test of optical fiber cable. This menu item is available only when the projector is in standby and you are logged into the projector with Advanced User or higher privileges. The connection test confirms that all optical fibers within optical fiber cable output the light source to the projector.

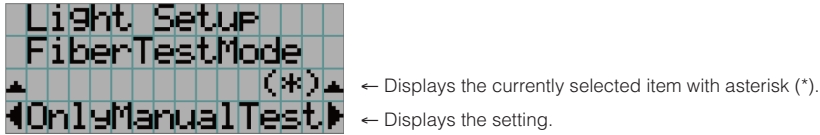

OnlyManualTest	Implement the connection test of optical fiber cable manually.
Always PowerOn	This automatically implements the connection test of optical fiber cable when the power of the projector is ON.

### 4-4-2. Lens Control


Adjust the position, size, and focus of the projected screen.

Press the ENTER button to switch the display between “Lens Position” and “Focus Zoom” adjustments. Press the EXIT button to return to a menu one level above.

#### Lens Position

Adjusts the position of the projected screen.

The projected screen moves in the selected direction as you press the UP/DOWN/LEFT/RIGHT button.

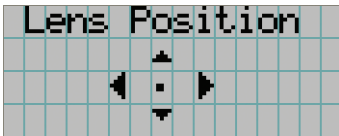


#### Focus Zoom

Adjusts the size (Zoom) and focus (Focus) of the projected screen.

Press the UP/DOWN button to adjust the focus.

Press the LEFT/RIGHT button to adjust the size of the projected screen.

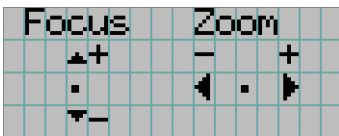


### 4-4-3. Reset

Resets the settings and various usage time. Mainly maintenance personnels use this.

#### Filter Usage

Resets the air filter usage time. Press the ENTER button, then select “Yes” in the displayed confirmation screen, and then press the ENTER button to reset the air filter usage time.

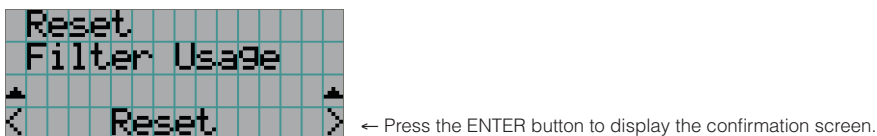

## 4-5. Title Setup


Sets the title to be assigned to the preset buttons (<1> to <8> buttons).  
Request your dealer/distributor to perform the settings.

## 4-6. Information

Displays information relating to the light source, the usage time of the projector, the version information and error codes.

### 4-6-1. Light


Displays the value of the light source output setting (%).

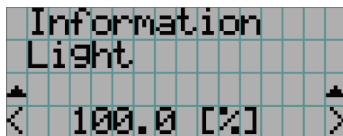

← Display the current setting (%).

### 4-6-2. Preset Button

Sets the title to be assigned to the preset buttons (<1> to <8> buttons) on the projector's control panel.

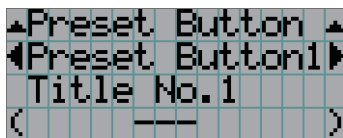


← Selects the preset button number whose contents you want to display.

← Displays the assigned title numbers.

← Displays the registered names of the assigned titles.

### 4-6-3. Usage

Displays the usage time of the projector, light source, fan, and air filter.

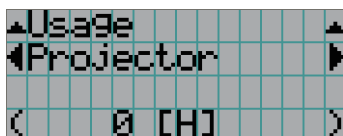

← Selects the item to display.


← Displays the hours of use (H).

Projector	Displays the usage time of the projector.
Light	Displays the usage time of the light source.
AC On Fan	Displays the usage time (on the AC power supply) of the projector cooling fan.
Power On Fan	Displays the usage time (the usage time when the projector is power ON) of the projector cooling fan.
Filter	Displays the usage time of the air filter.

## 4. Using Menus

### 4-6-4. Error Code

Displays the error code when an error occurs. When multiple errors occur, you can display them by pressing the LEFT/RIGHT buttons.

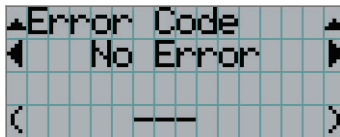

← Displays the code of the error currently occurring.


← Displays the name of the error currently occurring.

### 4-6-5. Version

Displays version information about the projector, optional boards.

#### System

Displays the version information of the projector.

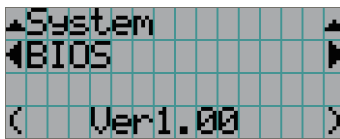


← Selects the item to display.

← Displays the version information.

BIOS	Displays the BIOS version of the projector.
Firmware	Displays the firmware version of the projector.
Data	Displays the data version of the projector.
Serial No.	Displays the serial number of the projector.
Model	Displays the model name of the projector.

#### SIB

Displays the model name and version information about the signal input board (SIB). When the projector is in standby mode, the version information displays "---". Displays "Not Use" when the signal input board is not mounted to the projector.

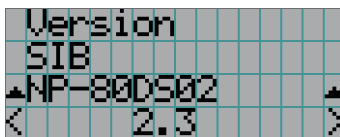


← Displays the model name of the signal input board.

← Displays version information.

#### IMB

Displays the vendor name and version information about the media block (IMB). When the projector is in standby mode, the vendor name is blank and the version information displays "---". Displays "Not Use" when the media block is not mounted to the projector.

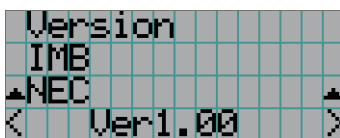

← Displays the vendor name.

← Displays the version information.

**Light Unit**

Displays the software version of the laser unit.

```

Version
Light Unit
< 1.00 / 1.00 >

```

← Displays the version information.

**4-6-6. IP Address**

Displays the IP address set in the projector.

```

▲IP Address ▲
<System * >
( 192.168.10.10 )

```

← Displays the IP address.

System	Displays the IP address set for the projector (System).
--------	---

**4-6-7. Setup Date**

Displays the date when the projector was set up (starting date of the warranty period).

```

Information
Setup Date
< 2014/03/03 >

```

← Displays the date when the projector was set up (starting date of the warranty period).

**4-6-8. Option Status**

Displays the link status of the device mounted in the slot on the projector. The device name is displayed in ( ) when the projector is in standby mode or when connection to the device cannot be confirmed.

```

Information
Option Status
▲ B : NP-80DS02 ▲
< A : No Board >

```

← Displays the link status of the device in slot B.

← Displays the link status of the device in slot A.

B	Displays the link status of the device in slot A or slot B. <ul style="list-style-type: none"> <li>• &lt;Vendor Name&gt; IMB: Media block (NP-90MS01)</li> <li>• NC-80LB: Signal input board (NC-80LB01-B)</li> <li>• NC-80DS01: Signal input board (NC-80DS01-B)</li> <li>• NP-80DS02: Signal input board (NP-80DS02)</li> <li>• No Board: No device mounted</li> </ul>
A	

---

---

# 5.

## Maintenance of Your Projector

---

---

**NOTE** Please request your dealer to perform cleaning of the projector inside.

### 5-1. Cleaning the Cabinet

Before maintenance, be sure to power off the projector and the laser unit and shut down the supply of AC power supply by breaker, etc.

- Wipe with a dry, soft cloth without nap.  
When the cabinet is excessively dirty, wipe with cloth well wrung after being dampened with a neutral detergent diluted with water and then finish up with a dry cloth.  
When you use a chemical dust cloth, follow the instructions in the manual attached to it.
- Do not use a solvent, such as thinner or benzene. The coating may deteriorate or peel off.
- When removing dust on the ventilation opening, suck it off using an adapter with a brush on a vacuum cleaner. Never allow the cleaner without an adapter to come into direct contact or use a nozzle adapter in cleaning.
- Clean the ventilation opening at regular intervals. Dust, if allowed to accumulate there, may cause heating inside, which leads to functional trouble. The interval, which can vary with the location of your projector, is about 100 hours.
- Do not damage the cabinet by scratching it or allowing hard objects to hit it. This can scratch the projector.
- Consult your dealer/distributor about cleaning the inside of the projector.

**NOTE** Do not allow insecticide or other volatile liquid to splash on the cabinet, lens or screen. Also, do not allow any rubber or plastic object to remain in contact with the cabinet for a long time. The coating may deteriorate or peel off.

### 5-2. Cleaning the Lens

Clean the lens the same way as with camera lens (using a commercially available camera blower or cleaning paper for glasses). Take care not to damage the lens when cleaning.


## 5-3. Replacing the Air Filter

Air filters are attached over the air inlet of the projector to prevent dust. Replace air filters periodically to maintain the projector's performance.

### **WARNING:**

- When replacing air filters of the projector, turn off the projector and shut down the AC power to the projector using a circuit breaker.
- Dust in air filters will hinder ventilation of the projector, lead to a rise of the internal temperature and can cause a fire or malfunction.

**NOTE** Please purchase the replacement air filter at your dealer/distributor. Specify the NC-80AF02 (optional) when you order.

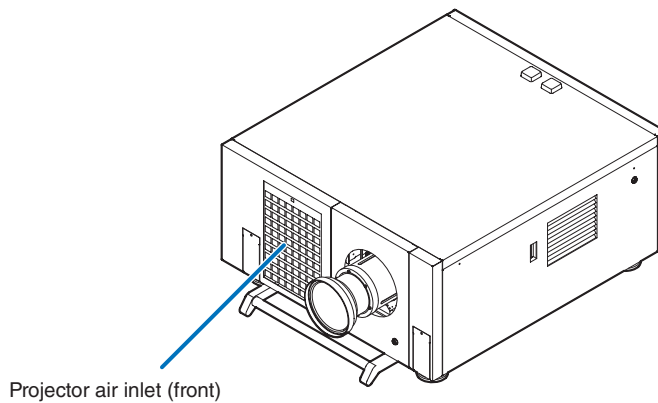

Air inlet	Model number	Replacement cycle
Air inlet for the projector	NC-80AF02	Every 2000 operation hours or 6 months after replacement, which comes first

### 5-3-1. Procedure for Replacing the Air Filter

#### • Step 1

Replace the air filter for projector air inlet (See page 60)

#### • Step 2

Reset the air filter usage time (See page 61)

## 5. Maintenance of Your Projector


### 5-3-2. Replacing the Air Filter for Projector Air Inlet

Prepare the optional NC-80AF02 to replace air filters for the projector air inlet. The NC-80AF02 contains four replacement air filters. Two air filters are required for the projector air inlet.

**1** Turn off the power to the projector and laser unit.


**2** Remove the filter cover.

Push the latch until it clicks to unlock the filter cover.

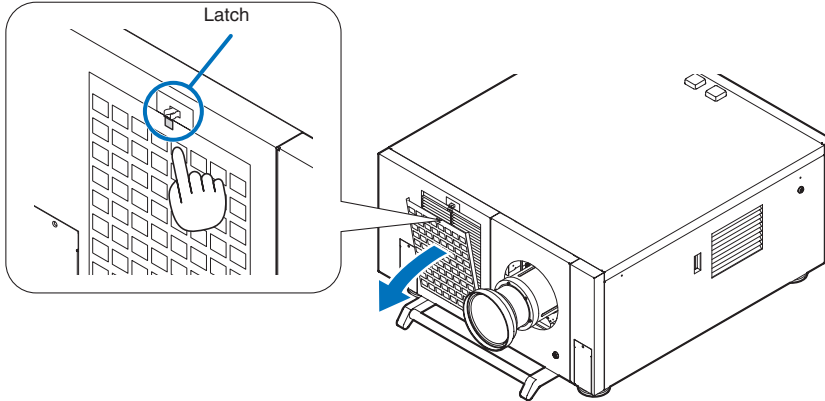


**3** Replace with new air filters.

Look for an arrow indicating the installation direction on the side of the air filter. Place the filter so that the arrow is pointing down at the projector.

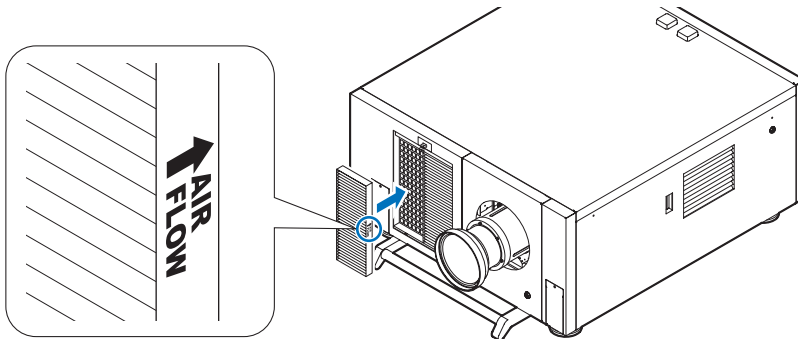

**4** Mount the filter cover.

Align two fasteners on the filter cover to the holes on the projector, and push in until the latch clicks.

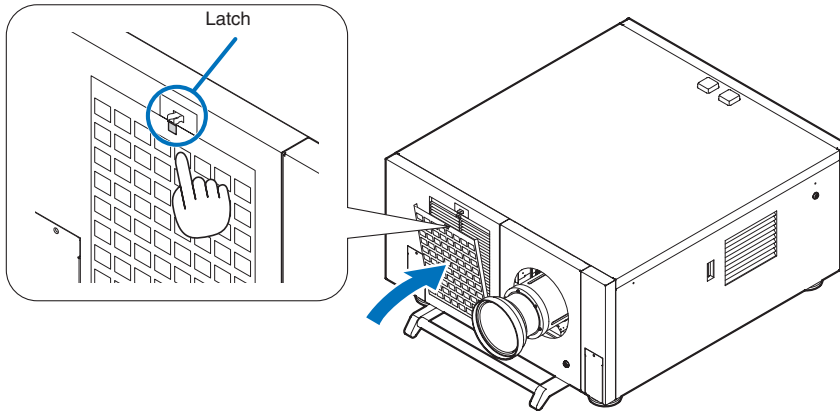

This completes replacing the air filter. Reset the air filter usage time.

**5-3-3. Resetting the Air Filter Usage Time**

**1** Turn on the power to the projector.

**2** Reset the usage time in “Configuration” → “Reset” in the adjustment menu.

“Filter Usage”: Resets the filter usage (See page 54)


This completes resetting the air filter usage time.

**5-4. Cleaning the Laser Unit**

Clear away any dust from the ventilation slots on the front and sides of the laser unit using a vacuum cleaner.

**⚠ WARNING:**

- Before maintenance, be sure to power off the projector and the laser unit and shut down the supply of AC power supply by breaker, etc.
- Dust in air inlets will hinder ventilation of the laser unit, lead to a rise of the internal temperature and can cause a fire or malfunction.

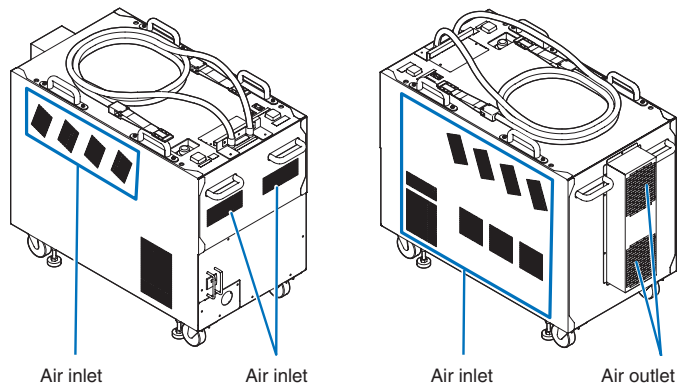

# 6.

## Appendix

### 6-1. Troubleshooting

Before asking for repair, please check your connection, settings and operation once again. If the trouble cannot be corrected, please contact your dealer/distributor for instructions or repair.

#### 6-1-1. Problems and where to check


Problem	Check these items
The main power does not turn on.	Is the emergency stop switch pressed (emergency stop status) on the projector or laser unit?
	Make certain that the switch for laser administrator is ON.
The projector cannot be turned on.	Check to see if AC power is supplied to the projector.
	Make certain that the main power switch is ON.
	Check to see whether the panel key lock function is activated. If so, the main unit's control buttons are locked and do not work.
	Is the temperature inside the projector too high? When the inside temperature is too high, the protective function does not allow your projector to be turned on. Wait some time and then turn it on.
The image cannot be projected.	Are you using the projector at high elevations with an altitude of approximately 5500 feet/1600 meters or higher? The cooling fan settings need to be configured when using the projector at high elevations. Please contact your dealer/distributor for instructions.
	Check to see if the connected input has been selected.
	Check to see if a cable is properly connected to the input terminal.
	Check to see whether the douser is closed.
The image is distorted.	Check to see if the settings are all adjusted properly.
	Check to see if the projector is properly set up.

Problem	Check these items
The image is blurred.	Make certain that the lens is properly focused.
	Check to see if the screen and a projector are installed at correct angles.
	The projection distance may be larger than the focusing range.
	See if the lens and other parts have condensation on them. If the projector is turned on in a warm place after storage in a cold place, the lens and other optical components inside may develop condensation. In such a case, please wait several minutes until the condensation disappears.
Video image is disturbed.	Check whether the signal cable connected to the projector is disconnected.
The STATUS indicator blinks in red.	Your projector may have trouble. Please contact your dealer/distributor for instructions.
An error code is displayed.	Please contact your dealer/distributor for instructions.

## 6-2. Indicator display list

See the descriptions below when the buttons on the control panel or the STATUS indicator on the rear of the projector is lit or blinking. The projector also has a warning function that uses a buzzer.

### 6-2-1. Control panel

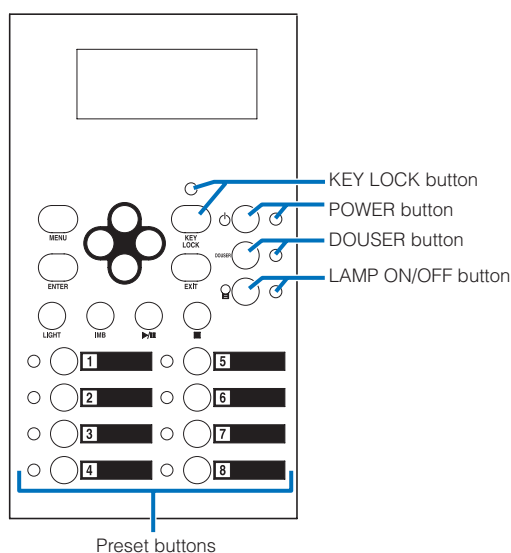

#### ■ Preset buttons

Indicator condition	Projector condition	Note	
Off	No title is assigned to the button.	-	
Steady light	A title is assigned to the button.	-	
	Green	The title is being selected.	-
	White	The title is not selected.	-

## 6. Appendix

---

### ■ KEY LOCK button

Indicator condition		Projector condition	Note
Off		The key lock is off.	-
Steady light	Orange	The key lock is on.	-

### ■ POWER button

Indicator condition		Projector condition	Note
Off		The projector power supply is off, or the projector is in standby.	-
Blinking light	Green	Preparing to turn power on/cooling fan rotating (State from turning the power off to entering standby mode).	Wait for a moment.
Steady light	Green	The projector is turned on.	-


### ■ DOUSER button

Indicator condition		Projector condition	Note
Steady light	Green	The douser is closed.	-
Off		The douser is opened.	-

### ■ LIGHT ON/OFF button

Indicator condition		Projector condition	Note
Off		The light source is off.	-
Steady light	Green	The light source is on.	-

## 6-2-2. STATUS indicator (for projector)

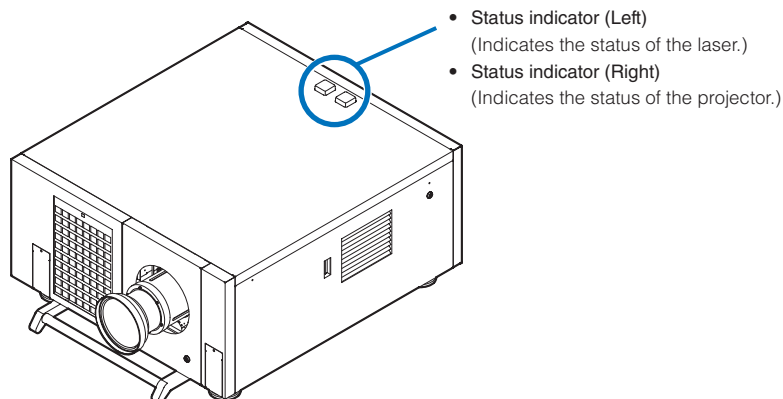


## ■ Status indicator (Left)

Indicator condition		Projector condition	Note
Blinking light		No laser light.	-
Steady light	White	Laser light is on.	-

## ■ Status indicator (Right)

Indicator condition		Projector condition	Note
Off		Main power is off.	-
Blinking light	Green	The projector is getting ready to turn on. The douser is closed. The light source is off.	Wait for a moment.
	Orange	The projector is cooling down.	Wait for a moment.
	Red (With buzzer)	Safety problem, error.	An error message is displayed in the LCD screen. Check the content of the error.
	Red (Without buzzer)	Error with possible image project under certain conditions.	
Steady light	Green	The projector is turned on.	-
	Orange	The projector is in standby.	-
	Red	Error at a level with not affect on projection.	An error message is displayed in the LCD screen. Check the content of the error.

6-2-3. STATUS indicator (for laser unit)

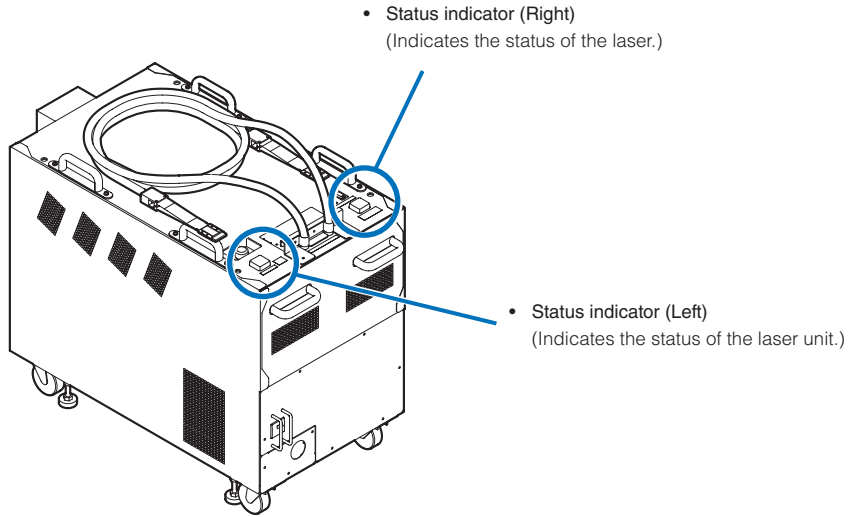

■ Status indicator (left)

Indicator condition		Projector condition	Note
Off		No abnormalities	-
Steady light	Red	Abnormal	An error message is displayed on the projector LCD screen. Check the content of the error.

■ Status indicator (Right)

Indicator condition		Projector condition	Note
Off		Main power is off.	-
Steady light	White	Laser light is on.	-
	Yellow	The laser unit is in standby.	-
	Blue	Laser light is off.	An error message is displayed on the projector LCD screen. Check the content of the error.

## 6-3. Operation using an HTTP browser

### 6-3-1. Overview

The use of HTTP server functions will allow control of the projector from a web browser. Please be sure to use "Microsoft Internet Explorer 4.x" or a higher version for the web browser.

This device uses "JavaScript" and "Cookies" and the browser should be set to accept these functions. The setting method will vary depending on the version of the browser. Please refer to the help files and the other information provided in your software.

**NOTE** The display's or button's response can be slowed down or operation may not be accepted depending on the settings of your network.  
Should this happen, consult your network administrator.  
The projector may not respond if its buttons are repeatedly pressed in rapid intervals. Should this happen, wait a moment and repeat.  
Access is gained to the HTTP server functions by and specifying  
`http://<the projector's IP address>/index.html`  
in the entry column of the URL.

### 6-3-2. Preparation before use

Make network connections and set up the projector and confirm that it is complete before engaging in browser operations. Operations with a browser that uses a proxy server may not be possible depending on the type of proxy server and the setting method. Although the type of proxy server will be a factor, it is possible that items that have actually been set will not be displayed depending on the effectiveness of the cache, and the contents set from a browser not be reflected in operation. It is recommended that a proxy server not be used unless it is unavoidable.

## 6. Appendix

### 6-3-3. Handling of the address for operation via a browser

Although you normally specify “http://<IP Address of Projector>/index.html” as the URL when connecting to an HTTP server (Example 2), you can also connect by specifying the host name as the URL if the following conditions are met (Example 1).

- The host name of the projector is registered with the domain name server
- The IP address and host name of the projector have been added to the “HOSTS” file on the PC


(Example 1) When the host name of the projector has been set to “pj.nec.co.jp”

http://pj.nec.co.jp/index.html is specified for the address or the entry column of the URL to access HTTP server functions.


(Example 2) When the IP address of the projector is “192.168.10.10”

http://192.168.10.10/index.html is specified for the address or the entry column of the URL to access HTTP server functions.


### 6-3-4. Structure of the HTTP server

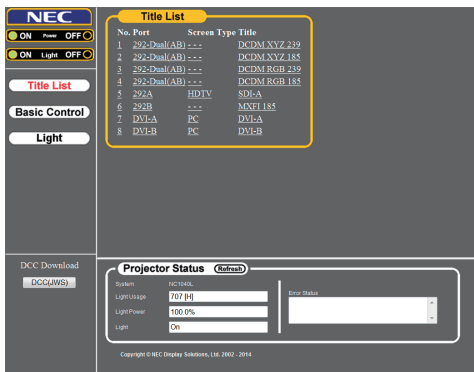

<Title List screen>

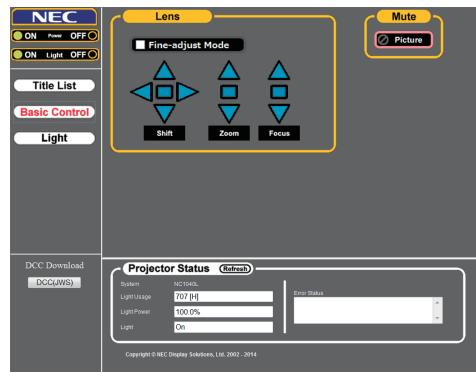

<Basic Control screen>

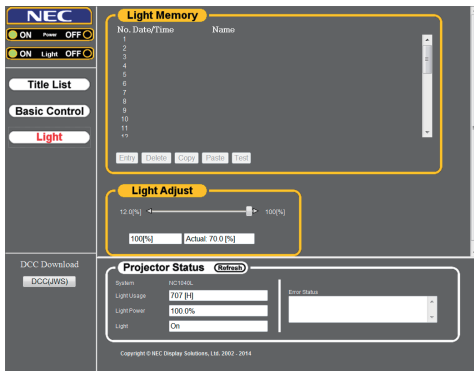

<Light screen>

Power		Controls the power to your projector. <ul style="list-style-type: none"> <li>• On: Turns the power on.</li> <li>• Off: Turns the power off.</li> </ul>
Light		Turn the light source on/off. <ul style="list-style-type: none"> <li>• On: Turns the light source on.</li> <li>• Off: Turns the light source off.</li> </ul>
Title List		Displays titles set in the projector (such as input port, screen type, and title). Check, and the title will be changed.
Basic Control		Displays the basic control items.
Lens		Controls the lens operation.
	Shift	<ul style="list-style-type: none"> <li>▲ : Shifts the projected screen upward.</li> <li>▼ : Shifts the projected screen downward.</li> <li>◀ : Shifts the projected screen leftward.</li> <li>▶ : Shifts the projected screen rightward.</li> <li>■ : Stops the shifting.</li> </ul> Shifting can also be stopped by clicking the same button one more time.
	Zoom	<ul style="list-style-type: none"> <li>▲ : Zooms up the lens.</li> <li>▼ : Zooms down the lens.</li> <li>■ : Stops the zooming.</li> </ul> Zooming the can also be stopped by clicking the same button one more time.
	Focus	<ul style="list-style-type: none"> <li>▲ : Focuses up the lens.</li> <li>▼ : Focuses down the lens.</li> <li>■ : Stops the focusing.</li> </ul> Focusing can also be stopped by clicking the same button one more time.
Mute	Picture	Click and the douser closes and the projected picture disappears. Click once again and the picture will be projected again.
Projector Status		Displays the condition of the projector. <ul style="list-style-type: none"> <li>• System: Displays the model name of the projector.</li> <li>• Light Usage: Display of the usage time of the light source.</li> <li>• Light Power: Displays light source output (%).</li> <li>• Light: Displays the status of the light source (On: Lights / Off: Off)</li> <li>• Error Status: Displays the status of errors occurring within the projector.</li> <li>• Refresh: Updates the display of the following conditions.</li> </ul>
DCC Download		You can download and use Digital Cinema Communicator for S2 (DCC) on your computer. Refer to page 70 for how to download DCC.

### 6-3-5. Downloading DCC from the projector for use

The execution file of DCC is integrated in the projector. This section describes the procedure for downloading the execution file of DCC from the projector to your computer for use.

The following requirements must be met for this function.

- Java Runtime Environment (JRE) is installed on your computer.
- The following Web browser is being used.

When using Windows: Internet Explorer 7.X or later, Mozilla Firefox 2.X or later

When using Linux: Mozilla Firefox 3.6 or later


**1** Start the Web browser on your computer.

**2** Enter “http://(IP address of projector)” for the address of the Web browser, and press the Enter key.


In the initial status, the IP address of the projector is set to “192.168.10.10”.

In this case, enter “http://192.168.10.10”.

The HTTP server screen of the projector is displayed.

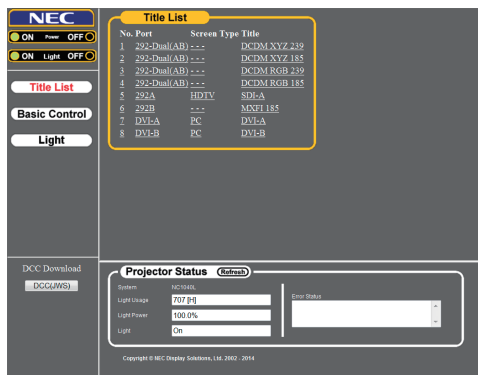

**3** Click the [DCC(JWS)] button of DCC Download.

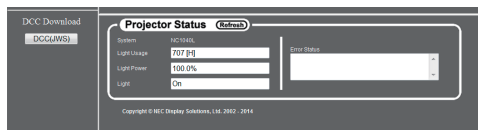

The splash screen of Java is displayed, and the security warning screen for the digital signature is displayed.

**NOTE** When using Firefox as your Web browser, a dialog confirming how to open the file is displayed.

- For Windows, select [Java(TM) Web Start Launcher].
- For Linux, select [JavaWS].

**4** On the security warning screen, confirm the following points and then click the run button.

- [DCC Starter JWS] is displayed for the name.
- [NEC Display Solutions, Ltd.] is displayed for the issuer.
- [(IP address of connected projector)] is displayed for the download source.

The DCC Starter starts and the downloading of DCC starts. Downloading definitely is performed when you click this the first time. From the second time, downloading is not performed when the version of DCC integrated in the projector matches the version of DCC already downloaded to your computer.

.....  
**TIP** If you select the check box, the security warning screen is not displayed from the next time.  
.....

**5** When downloading completes, DCC starts.

.....  
**TIP** The downloaded DCC execution file is saved in the following folder. (If the folder does not exist, a folder is created automatically.)

For Windows: "C:\DCC\([IP address of connected projector])"

For Linux: "~/.wine/drive\_c/DCC/([IP address of connected projector])"  
.....

## 6-4. Writing of the log file (Save Information)

Log files saved on the main unit can be written to USB memory connected to the USB port of the main unit. To perform the writing of the log file, use the following procedure.

### 1 Connect the USB memory to the USB port of the main unit.

Wait until the USB memory is recognized, and it enters the condition in which it can be used (5 or more seconds). For details, refer to the instruction guide of the USB memory.

### 2 Simultaneously press the UP button and ENTER button.

The "Save Info." screen is displayed.

```

** Save Info. **
  Date Filter
  ◀ Today ▶
*****

```

**TIP** If you press the EXIT button during operation, operation is stopped and the display returns to the normal screen.

### 3 Press the LEFT/RIGHT button, and select the log file writing period.

The items that can be selected are as follows.

Today	Writes today's log files.
7days	Writes 7 days' log files from today.
30days	Writes 30 days' log files from today.
Manual	Writes the specified period's log files.

### 4 Press the ENTER button.

When "Today", "7days", or "30days" is selected, the log file writing period is displayed.

```

** Save Info. **
14/03/03 (Mon)
14/03/03 (Mon)
  ◀ Execute ▶

```

← The log file writing period is displayed.

When "Manual" is selected, specify the log file writing period. For how to enter numerals, refer to "4-1-3. How to enter alphanumeric characters" (See page 50). If you press the ENTER button, the display advances to the following screen.

```

** Save Info. **
Date Filter
From Date
[14/03/03 (Mon)]

```

← Enter the date/time to start writing.

Press the ENTER button.

```

** Save Info. **
Date Filter
To Date
[14/03/11 (Tue)]

```

← Enter the date/time to stop writing.

Press the ENTER button.

```

** Save Info. **
14/03/03 (Mon)
14/03/11 (Tue)
◀ Execute ▶

```

← The log file writing period is displayed.

- 5** Confirm the log file writing period, press the LEFT/RIGHT button to select "Execute," and press the ENTER button.

The log files of the specified period are written to the USB device. When writing completes, the following screen is displayed.

```

** Save Info. **
Complete(USB1)
< OK >
*****

```

- TIP** If you select "Cancel" and press the ENTER button, the writing of log files is stopped, and the display returns to the normal screen.

- 6** Press the ENTER button.

The display returns to the normal screen.

```

| Light      6H |
|           100.0% |
| DCDM XYZ 239 |
| 292-Dual(AB) |

```

- 7** Remove the USB from the USB port of the main unit.

## 6. Appendix

---

### 6-4-1. Names of log files

Written log files are saved with the following file names.


??YYMMDD.txt

??	This shows the model of projector. The numeral of the "?" portion differs depending on the model. N1: NC3200S Series N3: NC1200C Series N4: NC2000C Series N6: NC3240S Series N7: NC900C Series L1: NC1000LS/NC1040L/NC1440L Series
YYMMDD	Shows the date/time when written. YY: Year (lower 2 digits) MM: Month (2 digits) DD: Date (2 digits)

For example, if NC1040L-A log file is written on March 1, 2014, it is saved with the "L1140301.txt" file name.


## 6-5. Outline Drawing

### 6-5-1. Projector

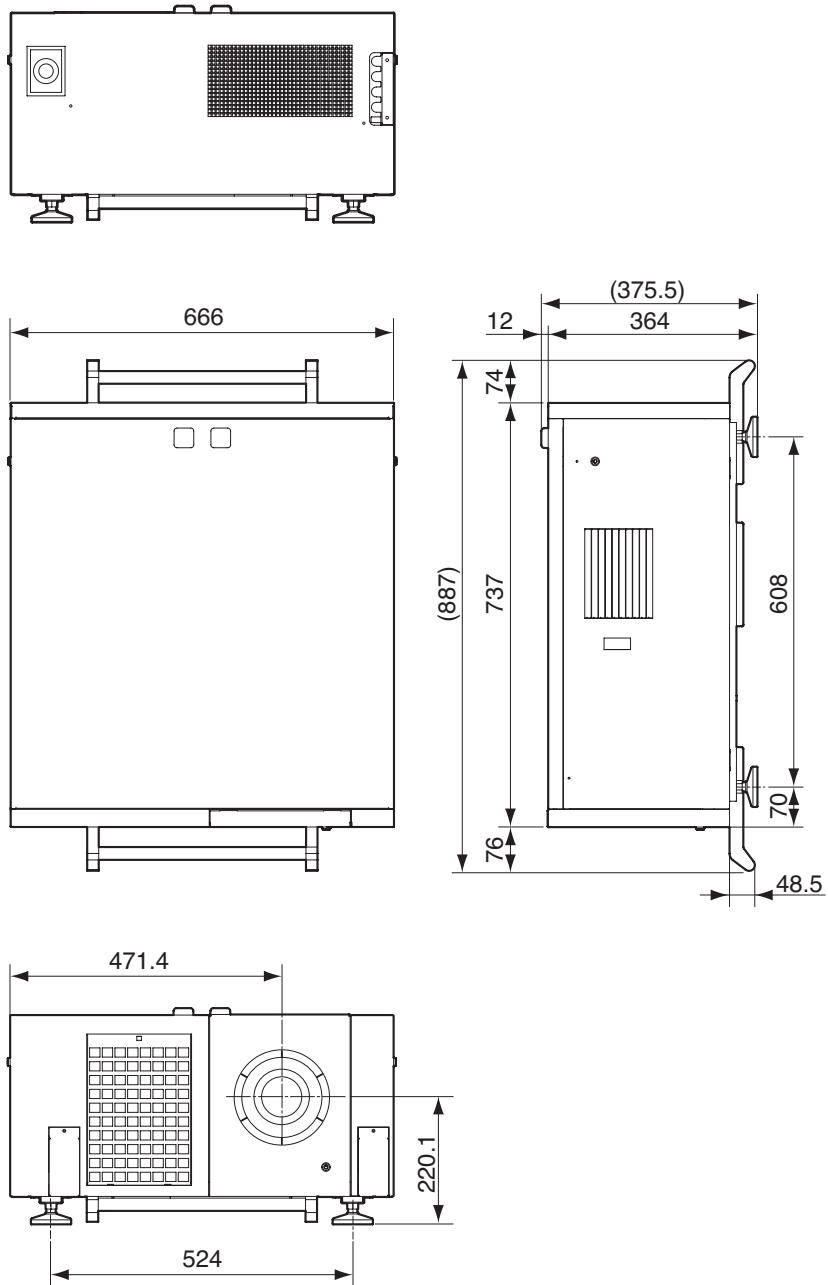

Units: mm

6-5-2. Laser unit (NP-10LU01)

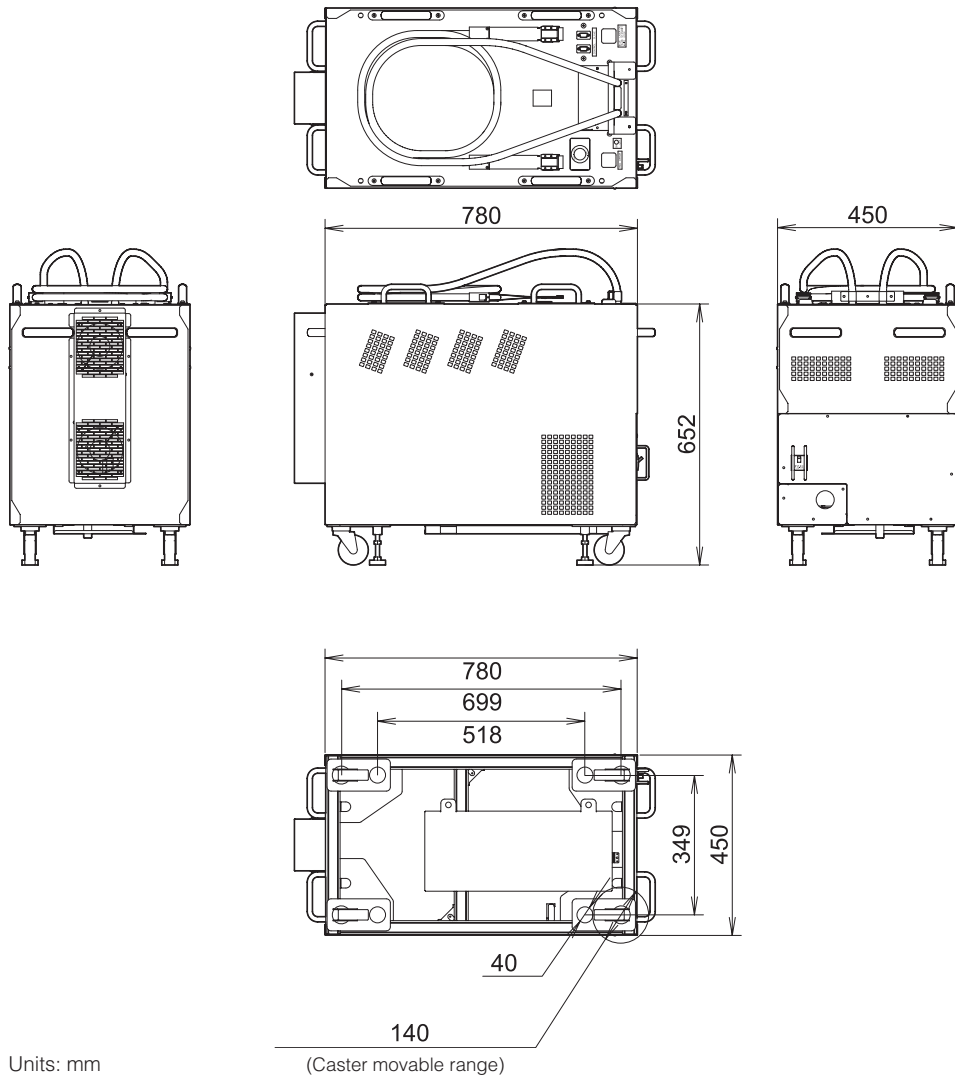

## 6-6. Specifications

### 6-6-1. Projector

Model name	NC1040L-A	NC1440L-A
Projection method	3 chip DLP Cinema® method 1.38-inch DC4K chip	
Panel resolution	4096 x 2160	
Luminous flux	5000 lm	10000 lm
Screen sizes	4.9 m to 8.5 m @14ft-L / Screen Gain 1.3, Max. 10 m @14ft-L / Screen Gain 1.8 (Depends on setup conditions)	7 m to 12 m @14ft-L / Screen Gain 1.3, Max. 14 m @14ft-L / Screen Gain 1.8 (Depends on setup conditions)
Contrast ratio	2000:1 with DCI specified color representation	
Lens adjustment function	Motorized lens shift (vertical/horizontal), motorized zoom, motorized focus, douser	
Signal input ports	Slot B Slot A	When shipped from factory: Empty (Note 1)
External Control	RS-232C (D-sub 9pin) x 1 GPIO port (D-sub 37 pin) x 1 Service terminal (stereo mini jack) x 1 3D CTL (D-sub 15 pin) x 1 USB (Type A) x 1 Interlock port x 1 Ethernet port (G-bit RJ-45) x 1	
Power supply voltage	AC 100 to 240 V, 50/60 Hz single phase	
Input current	4.3 A (100 to 120 V) 2.3 A (200 to 240 V)	
Power consumption	Max. 400 W (Note 2)	
Cooling method	Cooling fluid system, Cooling air system (includes dust filter)	
Noise level	Less than 54 dB	
Installation	Orientation: Desktop/front, Desktop/rear, Ceiling/front, Ceiling/rear	
Net weight	51 kg (Excluding lens)	
Dimensions	666 mm (W) x 737 mm (D) x 364 mm (H) (Does not include protruding portions, includes foot.)	
Environment	Operating temperature: 10 to 35°C (Performance guaranteed temperature: 10 to 25°C) Operating humidity: 10 to 85% (Performance guaranteed humidity: 10 to 60%) (non-condensing) Storage temperature: -10 to 50°C Storage humidity: 10 to 85% (non-condensing)	

(Note 1) The video input slots are empty when the device is shipped. Input ports can be added by mounting option boards, which are sold separately. (See page 88)

(Note 2) The value is typical.

\* Note that these specifications and design can change without prior notice.

## 6. Appendix

### ■ Compliant standards (NC1040L-A)

Certificated by latest edition as of 2013. Described the certification standard for laser products in "Important Information (for NC1040L-A)" of this manual. (See page 2)

Country	<Safety>	<EMC>
USA	UL60950-1 IEC60825-1	FCC Class A
Canada	CSA60950-1 IEC60825-1	ICES-003 Class A
Europe	IEC60950-1 (EN60950-1) IEC60825-1	EN55022 Class A EN55024
Oceania	IEC60950-1 IEC60825-1	AS/NZS CISPR.22 Class A
Japan	IEC60950-1 (J60950-1) IEC60825-1 JIS C6802	VCCI Class A
Asia	IEC60950-1 IEC60825-1	CISPR.22

### ■ Compliant standards (NC1440L-A)

Certificated by latest edition as of 2013. Described the certification standard for laser products in "Important Information (for NC1440L-A)" of this manual. (See page 10)

Country	<Safety>	<EMC>
USA	IEC60950-1 Conformity	FCC Class A
Canada		ICES-003 Class A
Europe		EN55022 Class A EN55024
Oceania		AS/NZS CISPR.22 Class A
Japan		VCCI Class A
Asia		CISPR.22

## 6-6-2. Laser unit

Model name	NP-10LU01
Power supply voltage	AC 200 to 240 V, 50/60 Hz single phase
Input current	11 A (200 to 240 V)
Power consumption	Max. 1800 W (Note 1)
Net weight	80 kg
Dimensions	450 mm (W) x 780 mm (D) x 652 mm (H) (Does not include protruding portions, includes foot.)

(Note 1) The value is typical.

\* Note that these specifications and design can change without prior notice.

## 6-7. Power Cable


**NOTE** Ask your dealer for the power cable to select and purchase.

### Power Cable Electrical Specification

The projector is equipped with an IEC60320 C14 connector to connect an AC power supply cable. Use an IEC60320 C13 compliant AC power cable connector and ensure that the connector has the current capacity as shown below.

Power supply voltage	Projector input current	Power cable current capacity
AC 100–240V	4.3 to 2.3A	250V 15A or higher



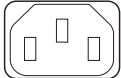
### Type of Power Cable

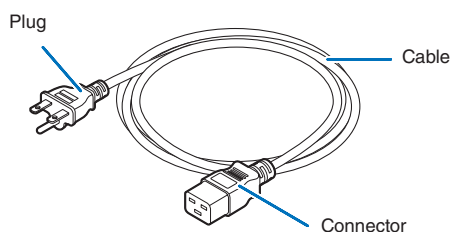



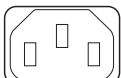
Use plugs, cables, and connectors that are suitable for the regulations of the country of installation, as shown in the following table.

**NOTE** For users in North America  
Use a power cable no longer than 4.5m/14.76 ft according to National Electrical Code.

### Germany

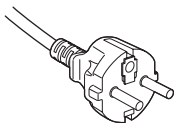Plug	Cable	Connector
CEE 7 	H05VV-F 3G1.5 	IEC 320 C13 



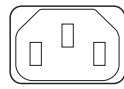
### USA

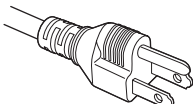Plug	Cable	Connector
NEMA 5-15P 	SJT 3 x AWG 14 	IEC 320 C13 



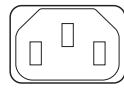
## 6. Appendix

---

### Japan

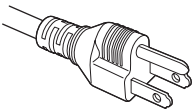Plug	Cable	Connector
JIS C 8303 	VCTF 3 x 2.0mm 	IEC 320 C13 

 
### China

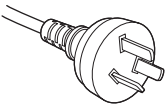Plug	Cable	Connector
GB2099 	RVV 300/500 	GB17465.1 

## 6-8. Pin Assignment and Functions of Terminal

### 6-8-1. PC CONTROL connector (RS-232) (D-Sub 9 pin)

This is an RS-232C interface for controlling the projector from a PC. The projector operates as a DCE (Data Communication Equipment), so use a straight cable when connecting to a PC.



Pin No.	RS-232C Signal Name	Functions as RS-232C	Projector Connector Operation
1	CD	Carrier detection	Not used (N.C.)
2	RXD	Reception data	Data transmission to an external device
3	TXD	Transmission data	Data reception from an external device
4	DTR	Data Terminal ready (Note)	Connection to 6 pins
5	GND	Signal GND	Signal GND
6	DSR	Data set ready (Note)	Connection to 4 pins
7	RTS	Transmission request	SYSTEM: Hi-Z (Not used) CINEMA: Hi-Z (Used)
8	CTS	Transmission available	SYSTEM: Fixed at -6.5 V (Not used) CINEMA: $\pm 10.5$ V (Used: Depends on communication status)
9	RI	Ring indicator	Not used (N.C.)


(Note) Do not use DTR and DSR signals when communicating.

## 6. Appendix

### 6-8-2. External control connector (GP I/O) (D-Sub 37 pin)

It is possible to control the projector with an external device and to control the external device from the projector using an external control connector (GPIO: General Purpose I/O Ports). Each pin is electrically separated from the projector internal circuits by a photo-coupler. 8 port input and 8 port output are available.

Please contact your dealer/distributor regarding how to use and to operate them.

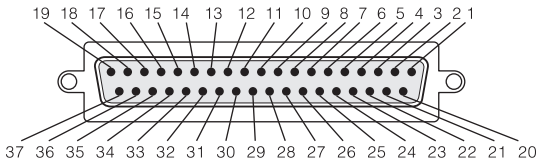


Pin view of female connector

Pin No.	Signal Name	I/O	Pin No.	Signal Name	I/O
1	GPIN1+ (3D L/R Input Reference +)	IN	20	GPIN1- (3D L/R Input Reference -)	IN
2	GPIN2+ (3D L/R Display Reference +)	IN	21	GPIN2- (3D L/R Display Reference -)	IN
3	GPIN3+ (system reserved)	IN	22	GPIN3- (system reserved)	IN
4	GPIN4+ (system reserved)	IN	23	GPIN4- (system reserved)	IN
5	EXT_GPIN1+ (Control and Title Selection +)	IN	24	EXT_GPIN1- (Control and Title Selection -)	IN
6	EXT_GPIN2+ (Control and Title Selection +)	IN	25	EXT_GPIN2- (Control and Title Selection -)	IN
7	EXT_GPIN3+ (Control and Title Selection +)	IN	26	EXT_GPIN3- (Control and Title Selection -)	IN
8	EXT_GPIN4+ (Control and Title Selection +)	IN	27	EXT_GPIN4- (Control and Title Selection -)	IN
9	GPOUT1+ (External 3D L/R Output Reference +)	OUT	28	GPOUT1- (External 3D L/R Output Reference -)	OUT
10	GPOUT2+ (system reserved)	OUT	29	GPOUT2- (system reserved)	OUT
11	GPOUT3+ (system reserved)	OUT	30	GPOUT3- (system reserved)	OUT
12	GPOUT4+ (Internal 3D L/R Output Reference +)	OUT	31	GPOUT4- (Internal 3D L/R Output Reference -)	OUT
13	EXT_GPOUT1+ (Projector Ready/Busy +)	OUT	32	EXT_GPOUT1- (Projector Ready/Busy -)	OUT
14	EXT_GPOUT2+ (Projector Error Status +)	OUT	33	EXT_GPOUT2- (Projector Error Status -)	OUT
15	EXT_GPOUT3+ (IMB Play/End Status +)	OUT	34	EXT_GPOUT3- (IMB Play/End Status -)	OUT
16	EXT_GPOUT4+ (Projector Heartbeat +)	OUT	35	EXT_GPOUT4- (Projector Heartbeat -)	OUT
17	NC (not connected)	-	36	NC (not connected)	-
18	GND	PWR	37	GND	PWR
19	GND	PWR	-	-	-

EXT\_GPIN1 - EXT\_GPIN4: You can control the projector externally by combinations of input signals (high/low).  
(Projector power supply/turning the light source on or off/image mute/title selection)

EXT\_GPOUT1 - EXT\_GPOUT4: Functions in the above table are default settings. You can change the assigned functions.

## Input Connector

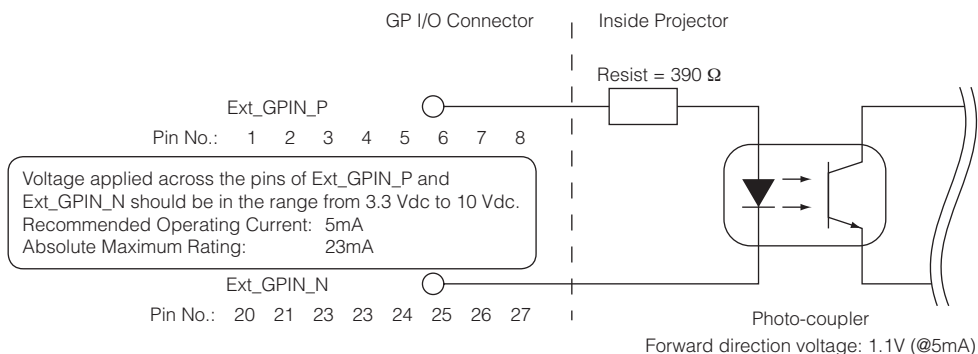

### • Using GPIO Control

Momentary "ON" pulse enables you to control projector. To enable "ON" pulse, hold it for at least 500 ms. Hold "OFF" for at least 500 ms before "ON". (See page 84)

Here is function list to control projector by using GPIO port.

Pin No.	Photo-coupler ON/OFF				Function
1-20	ON/OFF				3D L/R timing signal input ON/OFF
2-21	ON/OFF				3D L/R display timing signal input ON/OFF
3-22	-				System reserved (used internally)
4-23	-				System reserved (used internally)
5-24 6-25 7-26 8-27	8-27	7-26	6-25	5-24	The following functions apply depending on the combination of input terminals.
	OFF	OFF	OFF	ON	Power ON
	OFF	OFF	ON	OFF	Power OFF
	OFF	OFF	ON	ON	Light source ON
	OFF	ON	OFF	OFF	Light source OFF
	OFF	ON	OFF	ON	Image douser ON
	OFF	ON	ON	OFF	Image douser OFF
	OFF	ON	ON	ON	System reserved (used internally)
	ON	OFF	OFF	OFF	Selects the title registered to the preset button 1
	ON	OFF	OFF	ON	Selects the title registered to the preset button 2
	ON	OFF	ON	OFF	Selects the title registered to the preset button 3
	ON	OFF	ON	ON	Selects the title registered to the preset button 4
	ON	ON	OFF	OFF	Selects the title registered to the preset button 5
	ON	ON	OFF	ON	Selects the title registered to the preset button 6
	ON	ON	ON	OFF	Selects the title registered to the preset button 7
	ON	ON	ON	ON	Selects the title registered to the preset button 8

Example for dousing image: Input ON to 5-24 and 7-26 while 6-25 and 8-27 are OFF.

Example for selecting the preset button 2: Input ON to 5-24 and 8-27 while 6-25 and 7-26 are OFF.


#### NOTE

- The operation command coming from GPI/O port will be canceled when the projector is processing other tasks, such as lamp cooling and switching title.
- Set all other pins than those in use to "OFF".
- The operation command is executed upon continuous input of the "ON" pulse for approximately 200 ms.


## 6. Appendix

### • Timing chart of GPIO control


Example of Select Preset Button

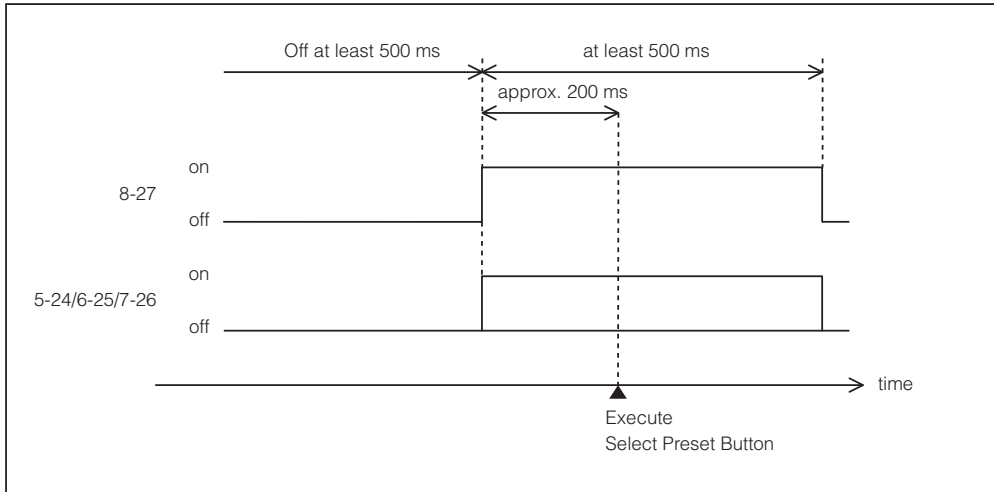


Example for turning the image douser (Douser) on

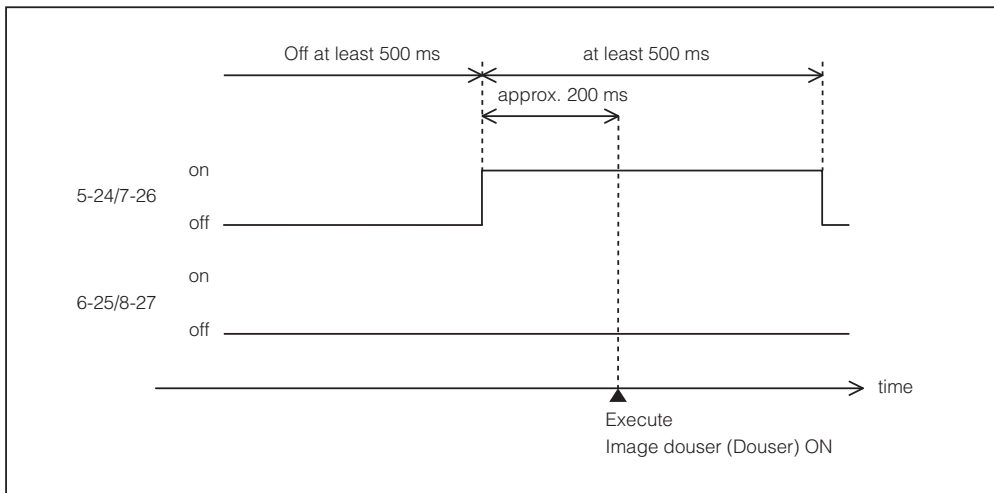


Example of Light source On

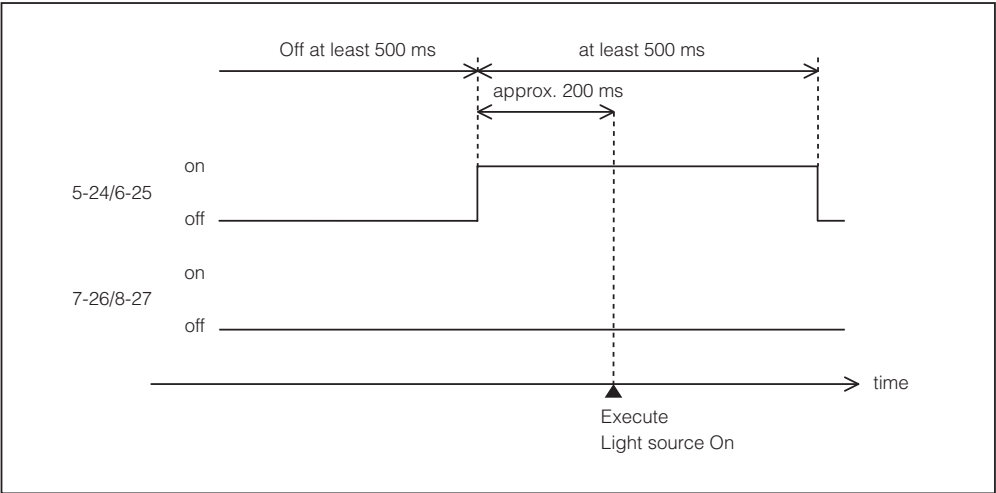

Example for turning the power off

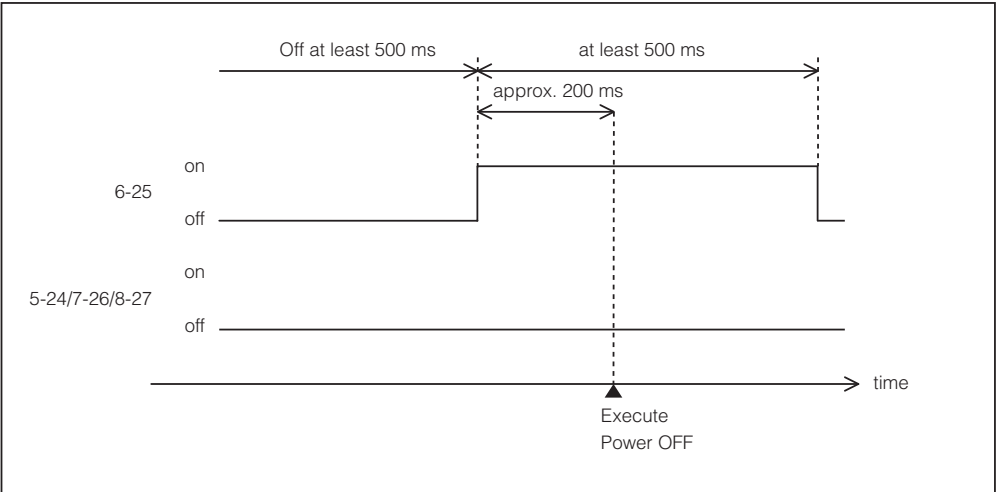

### Output Connector

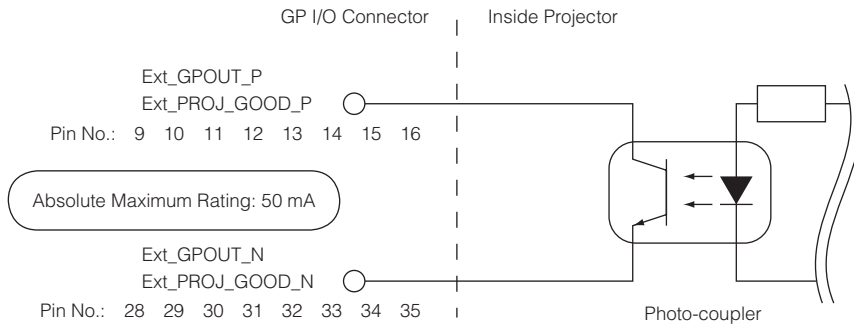

#### • Using GPIO Control

 
You can use GPIO control for the projector's health check and error check. Also, you can use the output as the trigger to control external devices.

The following functions are assigned to the pin number 13-32, 14-33, 15-34, and 16-35 (EXT\_GPOUT1 - EXT\_GPOUT4) as the default. You can change the assigned functions.

Pin No.	Photo-coupler ON/OFF	Function
9-28	ON/OFF	External 3D L/R timing signal output ON/OFF
10-29	-	System reserved (used internally)
11-30	-	System reserved (used internally)
12-31	ON/OFF	Internal 3D L/R timing signal output ON/OFF
13-32	ON/OFF	GPIO control status check ON: GPIO control (input) is unavailable. OFF: GPIO control (input) is available.
14-33	ON/OFF	Error check ON: Error OFF: No error
15-34	ON/OFF	IMB status check ON: The content is being played. OFF: The content is stopped/paused.
16-35	ON/OFF	Health check (heart beat) ON and OFF are alternately output when operations are normal.

### 6-8-3. 3D connector (D-sub 15 pin)

This is used to connect a 3D image system to the projector.



Pin view of a female connector

Pin No.	Signal Name	I/O	Function
1	+12V	PWR	Supplies power (+12V) to the 3D image system
2	GNDC	GND	Ground
3	GNDC	GND	Ground
4	RS232_RX	IN	Data transmission from the 3D image system (1200 Baud, 8 bits, No Parity)
5	RS232_TX	OUT	Data transmission to the 3D image system (1200 Baud, 8 bits, No Parity)
6	CONN_3D_MODE+	OUT	3D mode status (+) (Connects to the collector of the output transistor of the photo coupler inside the projector)
7	CONN_SYNC+	OUT	3D L/R switching timing signal (+) (Connects to the collector of the output transistor of the photo coupler inside the projector)
8	3D_INPUT_REFERENCE+	IN	3D L/R timing signal (+) (Connects to the anode of the input diode of the photo coupler inside the projector)
9	+12V	PWR	Supplies power (+12V) to the 3D image system
10	3D_INPUT_REFERENCE-	IN	3D L/R timing signal (-) (Connects to the cathode of the input diode of the photo coupler inside the projector)
11	3D_DISPLAY_REFERENCE+	IN	3D L/R display timing signal (+) (Connects to the anode of the input diode of the photo coupler inside the projector)
12	3D_DISPLAY_REFERENCE-	IN	3D L/R display timing signal (-) (Connects to the cathode of the input diode of the photo coupler inside the projector)
13	CONN_3D_MODE-	OUT	3D mode status (-) (Connects to the emitter of the output transistor of the photo coupler inside the projector)
14	CONN_SYNC-	OUT	3D L/R switching timing signal (-) (Connects to the emitter of the output transistor of the photo coupler inside the projector)
15	N/C	-	Unused

## 6-9. Related products list

Product name	Model name	
Lens	Zoom lens 1.13 to 1.66	NC-50LS12Z
	Zoom lens 1.30 to 1.85	NC-50LS14Z
	Zoom lens 1.45 to 2.17	NC-50LS16Z
	Zoom lens 1.63 to 2.71	NC-50LS18Z
	Zoom lens 1.95 to 3.26	NC-50LS21Z
	Zoom lens 2.71 to 3.89	L2K-30ZM
Air Filter	Replacement Filter	NC-80AF02
Integrated Media Server	Integrated Media Server	NP-90MS01
Signal Input Board (supports CineLink™ 2) (Note 1)	Signal Input Board	NC-80LB01-B
Signal Input Board (does not support CineLink™ 2) (Note 1)	Signal Input Board	NC-80DS01-B
Signal Input Board (does not support CineLink™ 2) (Note 1)	Signal Input Board	NP-80DS02

(Note 1)What is HDCP/HDCP technology?

HDCP is an acronym for High-bandwidth Digital Content Protection. High bandwidth Digital Content Protection (HDCP) is a system for preventing illegal copying of video data sent over a Digital Visual Interface (DVI).

If you are unable to view material via the DVI input, this does not necessarily mean the projector is not functioning properly. With the implementation of HDCP, there may be cases in which certain content is protected with HDCP and might not be displayed due to the decision/intention of the HDCP community (Digital Content Protection, LLC).



