

User's Manual

Basic Guide



This manual contains cautions on how to use this product safely.
Before you use this product, please make sure that you read this manual.

This manual supports the following models.

MC760fdn, MC760dn, MC770fdn, MC770dn, MC770x, MC780fdn, MC780dnf, MC780x, ES7460 MFP, ES7470 MFP, ES7470x MFP, ES7480x MFP, MPS3537mc, MPS4242mc, MPS4242mcf

About the Manuals

The following user manuals are included with this product.
An electronic manual is included in the software DVD-ROM.

1 Step Read the Setup Guide first.



Installing the machine **Setup Guide**

Before using this machine, please read the warnings and precautions to ensure the safe use of this machine. We have also provided explanations about necessary preparations such as installation procedures and how to load the paper.

- Checking the Product
- Installing the Machine
- Turning Power ON/OFF
- About Paper
- About Document Copies
- Using Each Function

2 Step After you have completed the setup of this machine, read the Basic Guide.



Testing the machine, copier, fax, and scanner. **Basic Guide (This manual)**

This guide describes each function and basic methods of use. In addition, we have provided an explanation about how to register data in the address book.

- Printing
- Copying
- Fax
- Scanning
- Utilities that can be used with this machine

3 Step Read these guides as necessary.



Making full use of the machine **Advanced Guide**

This guide describes the use of convenient print functions such as summarizing or sorting, and advanced functions such as job memory, color adjustment, user authentication, and access control. Explanations are also provided about settings that can be configured from the operator panel, as well as network settings.

- Printing Operations
- Copying Operations
- FAX Operations
- Scanning Operations
- Registering Functions and Settings
- Setting Items/Printing Reports



When there is a problem or you need to repair the machine **Troubleshooting Guide**

This guide describes how to deal with error messages, such as those that accompany paper jams, describes regular maintenance and cleaning of the device, and explains how to replace consumables. The machine specifications are included as well.

- Troubleshooting
- Maintenance

Step 3 Read these guides as necessary. (continue)



Controlling/Setting from the Computer

Utility Guide

This guide describes the utility software for your computer.

- List of Utilities
- About AddressBook Viewer
- About e-Filing Backup/Restore Utility
- About TWAIN Driver and File Downloader
- About Remote Scan driver
- About WIA driver



Using the TopAccess

TopAccess Guide

This guide describes how to use the TopAccess.

- Overview
- [Device] Tab Page
- [Job Status] Tab Page
- [Logs] Tab Page
- [Registration] Tab Page
- [Counter] Tab Page
- [User Management] Tab Page
- [Administration] Tab Page
- [My Account] Tab Page
- Functional Setups



Using the e-Filing

e-Filing Guide

This guide describes how to use the e-Filing.

- e-Filing OVERVIEW
- OPERATIONS WITH THIS EQUIPMENT
- OVERVIEW OF e-Filing WEB UTILITY
- HOW TO MANAGE USER BOXES/FOLDERS
- MANAGING DOCUMENTS
- EDITING DOCUMENTS
- SYSTEM ADMINISTRATION

● About This Manual

Notation used in this manual

The following notations may be used in this manual.

If there is no special description, Windows 7 is used as Windows, Mac OS X 10.7 is used as Mac OS X, and MC770dn is used as the machine for examples in this document.

Depending on your OS or model, the description on this document may be different.

- About the Administrator
 - Administrator: The person who makes settings of this equipment and operates the equipment.
When the multiple persons use this equipment, the administrator is the person who manages the equipment.
 - Network administrator: The person who manages the computer and the network.

Terms in this document

The following terms are used in this manual.



- Indicates important information on operations. Make sure to read sections with this mark.



- Indicates additional information on operations. You should read sections with this mark.



- Indicates where to look when you want to know more detailed or related information.

WARNING

- **A warning provides additional information which, if ignored, may result in a risk of personal injury.**
-

CAUTION

- **A caution provides additional information which, if ignored, may result in equipment malfunction or damage.**
-

Illustrations in this document

The illustrations of the machine used in this document may be different from what you actually see on your machine.

Table of contents

| | | | |
|--|-----------|--|-----------|
| About the Manuals | 2 | Scanning the next original during copying | 33 |
| About This Manual | 4 | Interrupting copying and making other copies | 33 |
| Notation used in this manual | 4 | Proof copy | 33 |
| Terms in this document | 4 | Selecting face down/up stacker | 34 |
| Illustrations in this document | 4 | Bypass Copying | 35 |
| Convenient Functions | 7 | Bypass copying on standard size paper | 36 |
| 1 Printing | 11 | Bypass copying on non-standard size paper | 40 |
| Installing drivers on your computer | 12 | Using the Offline Stapler | 42 |
| Operating Environment | 13 | BASIC COPY MODES | 43 |
| Windows Operating Environment | 13 | Before Using Copying Functions | 43 |
| Macintosh Operating Environment | 13 | Default settings | 43 |
| Preparations to print from Windows | 14 | Confirming the set functions | 43 |
| Setup via a network (Windows) | 14 | Clearing the set functions | 43 |
| Setup via USB (Windows) | 16 | Restrictions on function combinations | 44 |
| Preparations to print from Mac OS X | 19 | Paper Selection | 44 |
| Setup via a network (Mac OS X) | 19 | Automatic Paper Selection (APS) | 44 |
| PRINTING FROM WINDOWS | 21 | Selecting desired paper manually | 44 |
| Before Using the Printer Driver | 21 | Copying mixed-size originals in one operation | 45 |
| Configuring the options | 21 | Switching Color Modes | 46 |
| Setting the department code | 22 | Setting Original Modes | 46 |
| Copying the PPD file for Windows | 24 | Density Adjustment | 47 |
| Printing From Application | 24 | Enlargement and Reduction Copying | 47 |
| Considerations and limitations | 24 | Automatic Magnification Selection (AMS) | 47 |
| How to print | 24 | Specifying both the original size and the copy paper size separately | 48 |
| How to print | 24 | Specifying reproduction ratio manually | 49 |
| PRINTING FROM Macintosh | 26 | Copying photo originals in the optimal reproduction ratio for copy paper size (PHOTO ZOOM) | 50 |
| Printing From Application on Mac OS X | 26 | Selecting Finishing Mode | 51 |
| Considerations and limitations | 26 | Finishing modes and optional finishing devices | 51 |
| How to print from Mac OS X | 26 | Sort/Group mode | 52 |
| 2 Copying | 27 | Staple sort mode | 53 |
| HOW TO MAKE COPIES | 28 | Magazine sort | 54 |
| Before Making Copies | 28 | Duplex Copying | 54 |
| Storage of color copies | 28 | Making a 1-sided copy | 55 |
| Forgery prevention function | 28 | Making a 2-sided copy | 56 |
| Placing Originals | 28 | Performing Copy & File | 56 |
| Acceptable originals | 28 | Setting share folder | 57 |
| Placing originals on the original glass | 28 | 3 Fax | 59 |
| Book-type originals | 29 | SENDING/RECEIVING A FAX | 60 |
| Using the RADF (Reversing Automatic Document Feeder) | 29 | Sending a Fax | 60 |
| Making Copies | 31 | Basic procedures | 60 |
| Basic copying procedure | 31 | Handling an original | 61 |
| | | Setting the transmission conditions | 64 |
| | | Specifying the recipient | 66 |


| | |
|---|-----------|
| Other transmissions | 69 |
| Receiving a Fax | 71 |
| Reception mode | 71 |
| Originals and paper | 72 |
| CHECKING AND CANCELING THE COMMUNICATIONS..... | 73 |
| Checking Communications | 73 |
| Checking reserved transmissions | 73 |
| Checking communication status (log) | 73 |
| Canceling the Transmission | 74 |
| Canceling the memory transmission | 74 |
| Canceling direct transmissions | 75 |
| Canceling reserved transmissions | 75 |
| 4 Scanning | 77 |
| BASIC OPERATION | 78 |
| Viewing Touch Panel for Scan Menu | 78 |
| Default Settings | 78 |
| Scan to e-Filing | 79 |
| Scan to File | 79 |
| Scan to E-mail | 83 |
| Scan to USB | 86 |
| Web Service (WS) Scan | 88 |
| Using Saved Scan Data | 89 |
| Using scan data saved as e-Filing documents | 89 |
| Using scan data saved as files | 89 |
| Viewing the Scan Job Status and Log | 90 |
| Viewing the scan job status | 90 |
| Viewing the scan job log | 90 |
| 5 Utilities that can be used with this machine | 91 |
| List of Utilities | 92 |
| Common Utilities for Windows/Macintosh | 92 |
| 6 Index | 93 |

● Convenient Functions




Copy documents while saving paper

Using the duplex function or multiple page function allows you to combine several different pages onto a single page. For example, you can print 16 pages of a document onto just two pages by printing four pages on each side (multiple page), and by printing on both sides of the paper (duplex). You will save 14 pages compared to copying every page.

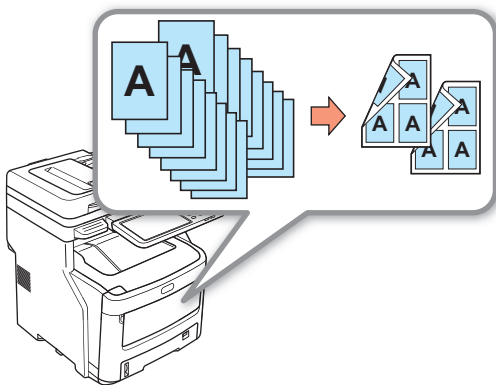


Automatically rotate sent or received document data

Images are rotated when documents are sent or received by fax, and the optimum paper size is automatically selected from the available paper, even if the orientation of received fax documents differs from the orientation of the paper. This allows you to send and receive faxes without having to worry about paper size or the orientation of documents.

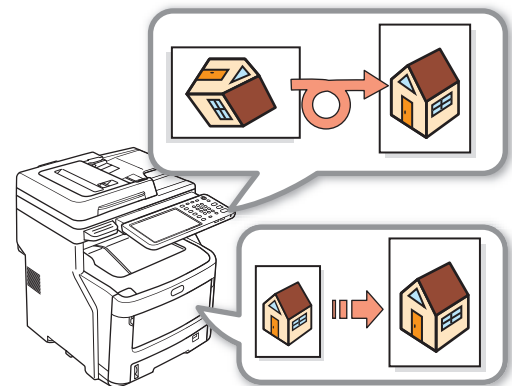

Send received faxes, or save attachments included with sent and received emails


This allows faxes received while you are away from the machine to be sent to a laptop computer to be checked. Configuring the machine to save communication data saves sent and received faxes or email attachments to a pre-configured location.

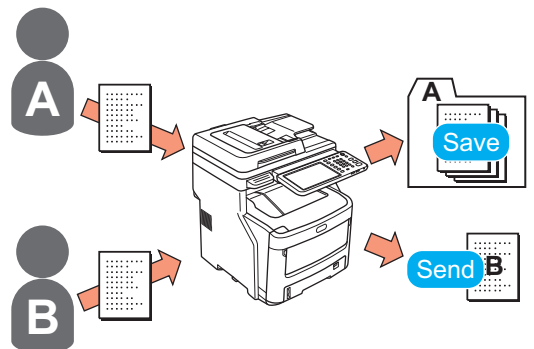

SCAN

Scan printed documents


The full-color scanner can scan documents. Scans can be saved in shared folders on computers or USB memory (Scan to Network PC, Scan to USB Memory), or sent as attachments via email (Scan to Email).

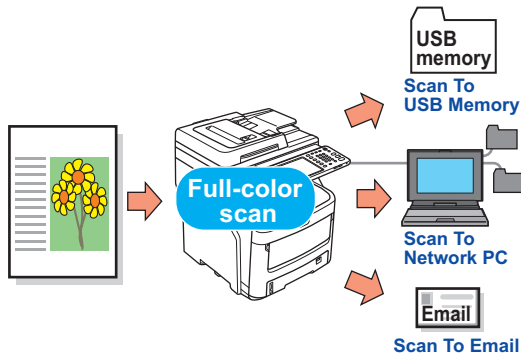

Use the machine as a network printer

High-quality images can be printed at high speed from various applications (printing A4, color/grayscale documents: MC760: 28 pages/min, MC770: 34 pages/min, MC780: 40 pages/min).


The machine can be connected to networks and used to print documents from multiple computers, which saves space in the office and lowers costs.

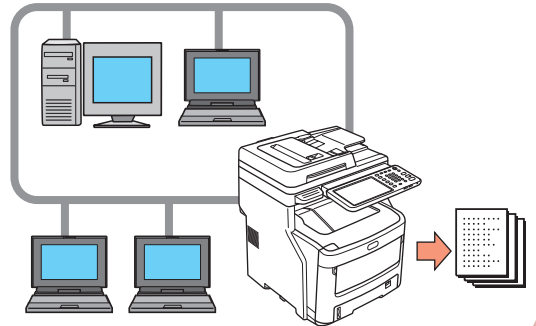

COPY FAX SCAN


Scan documents with ease

Scan documents with the scanner after scanning with the automatic document feeder, or scan documents with the automatic document feeder after scanning with the scanner. This function is convenient when documents have stapled pages mixed in with them.

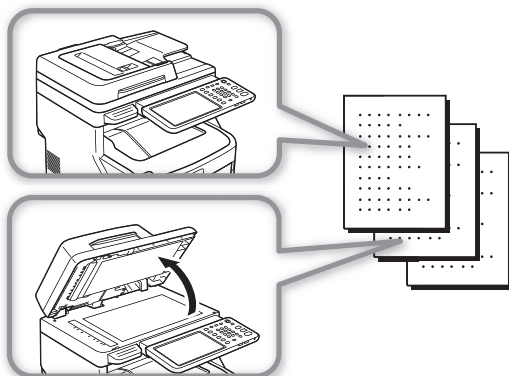


Print from various applications

The machine is equipped with PostScript3 emulation and PCL6 emulation, which allows printing from a wide range of applications.

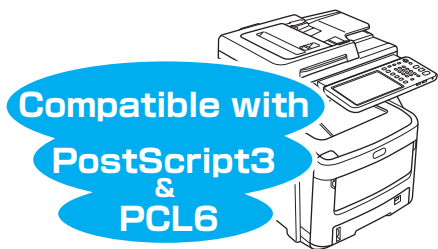


Perform several functions at the same time

The machine is capable of performing several functions at the same time, including sending a fax while copying a document, or printing from a computer while scanning a document. This allows several users to use the machine at the same time.

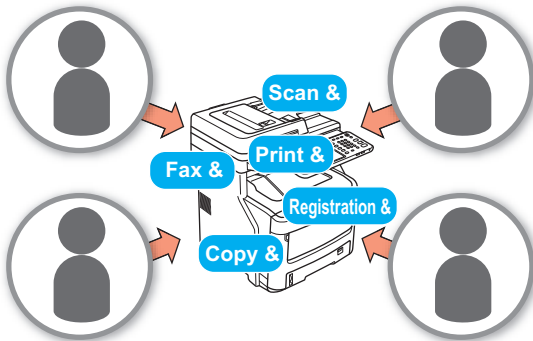


Restrict the types of users who can use the machine, or the types of functions that they can use.

Configuring user authentication means the machine can only be used by users who have been authorized by an administrator. This reduces the likelihood that the machine will be accessed by ordinary users, which helps to prevent information from being leaked. Configuring access restrictions means the functions that are available to each user can also be limited. This reduces unnecessary printing, which helps to conserve toner and paper.

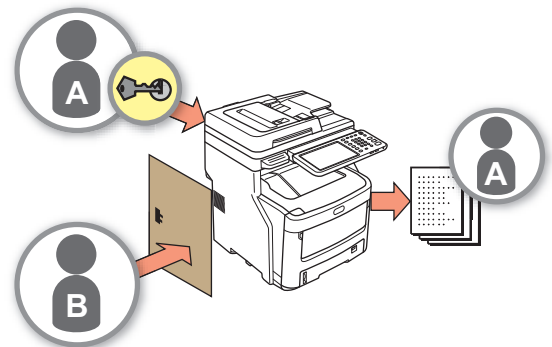

Reducing power consumption when the machine is not in use

When the machine has been idle for a certain period of time, it automatically enters power save mode to reduce power consumption. You can enter the power save mode manually by pressing the [POWER SAVE] button on the operator panel. The [POWER SAVE] button will glow red when Power Save Mode is active.

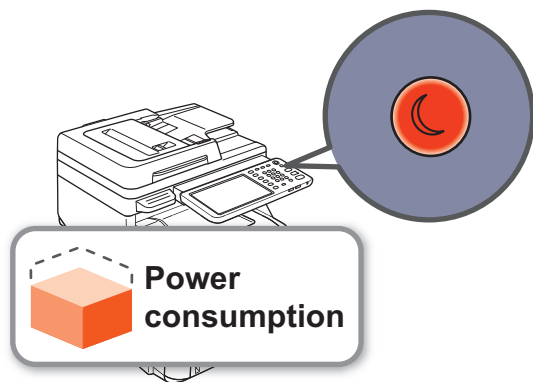


| |
|---|
| 1 |
| 2 |
| 3 |
| 4 |
| 5 |
| 6 |




Store frequently used functions and settings in memory.

• [TEMPLATE]

A series of operations that is used regularly can be stored in [TEMPLATE] on the touch panel. For example, the following steps- "Reduce B4 documents by 81% to A4 size, copy and sort them, and create five sets"-can be stored in [TEMPLATE] and then be completed with a single touch of a key, using fewer keystrokes and greatly simplifying operation.

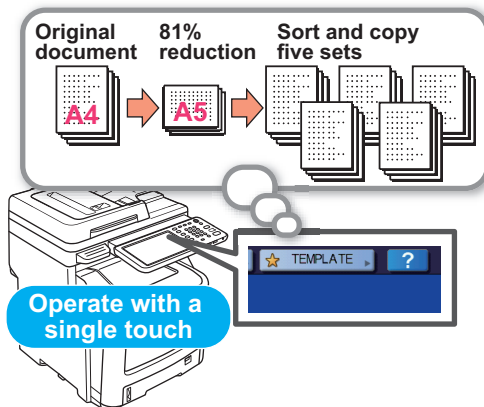

Increase the types and amounts of paper that can be used.

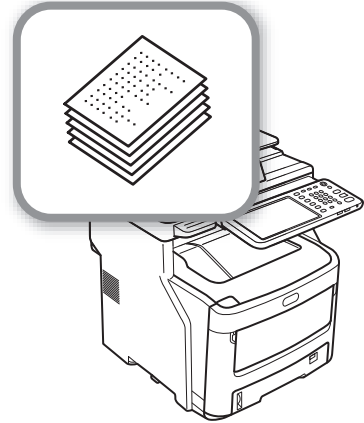


1

Printing

| | |
|--|-------------|
| Installing drivers on your computer | P.12 |
| Operating Environment | P.13 |
| Preparations to print from Windows | P.14 |
| Preparations to print from Mac OS X..... | P.19 |
| PRINTING FROM WINDOWS | P.21 |
| PRINTING FROM Macintosh..... | P.26 |

● Installing drivers on your computer

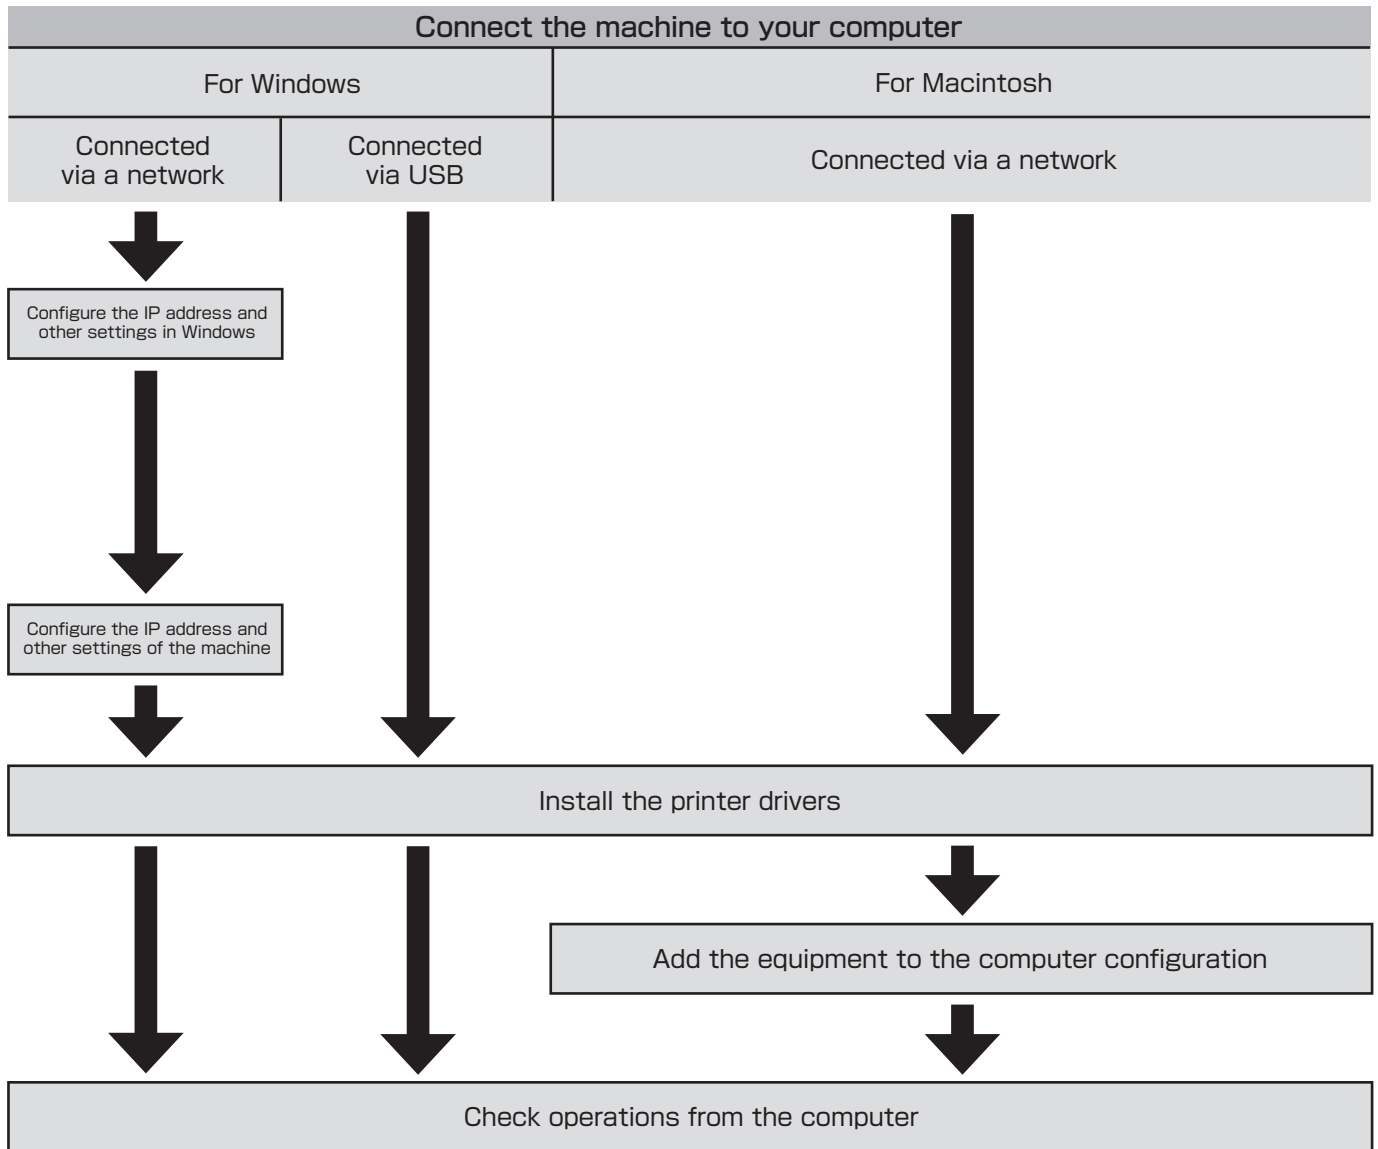

● Operating Environment

Windows Operating Environment

- Windows 7/Windows 7 (64-bit version)
- Windows Server 2008 R2
- Windows Vista/Windows Vista (64-bit version)
- Windows Server 2008/Windows Server 2008 (64-bit version)
- Windows XP/Windows XP (x64 version)
- Windows Server 2003/Windows Server 2003 (x64 version)

! Note

- The machine will not operate under Windows 3.1/NT3.51/NT4.0/Me/98/95/2000.
- Printer drivers may differ from the information listed here due to driver updates.

Macintosh Operating Environment

! Note

- Printer drivers may differ from the information listed here due to driver updates.
- Mac OS X 10.4 to 10.8

1

2

3

4

5

6

● Preparations to print from Windows

Setup via a network (Windows)

Setup procedures

Turn the power to the machine and the computer ON.



Configure the IP address and other settings of the computer.



Configure the IP address and other settings of the machine.



Install the drivers and Standard TCP/IP Port using the "software DVD-ROM" supplied with the machine, and configure the network printer.

Set up the equipment

If there is no DHCP server on the network, you will need to configure the IP address of the computer and printer manually. If you have been instructed to configure a static IP address by your company network administrator, internet provider, or router manufacturer, you will need to configure the IP address of the computer and printer manually.

Check the IP address of this equipment by printing the system setting list or pressing the [SETTING] button on the operation panel and [ADMIN] - [NETWORK] - [IPv4].

Note

- An incorrect IP address configuration may prevent the network from working or the internet from connecting. Check with your company network administrator or internet connection provider the IP address and other settings that can be configured for the machine.
- The servers (such as DHCP) that are available on the network may differ depending on the network environment being used. Check with your company network administrator, internet provider, or router manufacturer.
- Administrator rights are required for the setup.
- Unless otherwise noted, procedures required when using Windows 7 are listed in the section "Set up in Windows." Screens and procedures may differ depending on the OS.

Memo


- This machine is compatible with network Plug&Play. If all connected computers are running Windows 7/Windows Vista/Windows XP/Windows Server 2008/Windows Server 2003, or if the connected router is compatible with network Plug&Play, an IP address will be configured automatically, even if there is no server on the network. There is no need to configure an IP address for the computer and printer manually, so start setting up the machine from Step 4.

- 1 Turn the power to the machine and the computer ON.
- 2 Configure the IP address and other settings in Windows.


Note

- Skip to Step 3 if an IP address and other settings have already been configured in Windows, or if they are obtained automatically.


- (1) Start Windows.
- (2) Click [Start] and select [Control Panel].
- (3) Click [View network status and tasks].

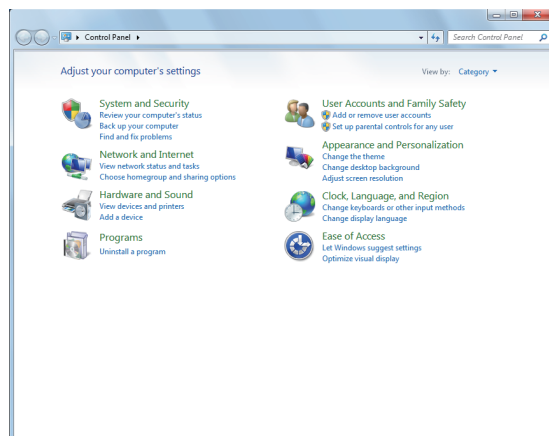


- (4) Click [Local Area Connection], and click [Properties] from the [Local Area Connection Status] screen.

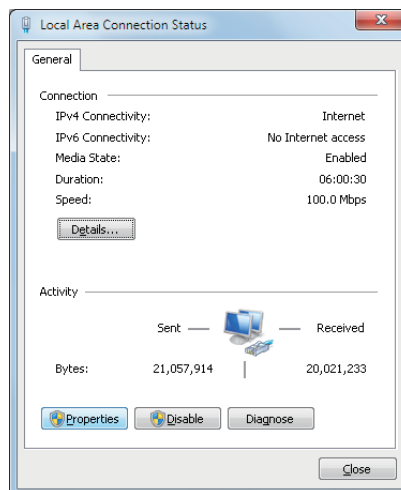

- 5) Select [Internet Protocol Version 4 (TCP/IPv4)] and click [Properties].

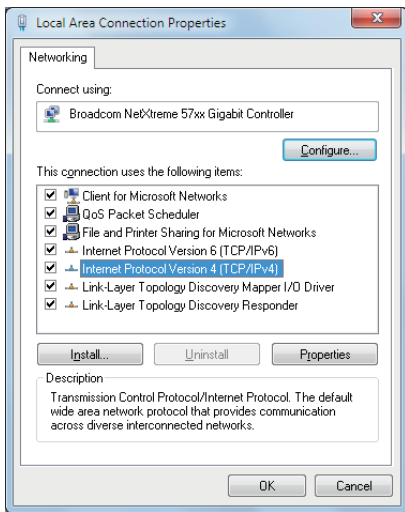

- 6) Enter the numbers for the IP address, subnet mask, default gateway, and DNS server, and click [OK].

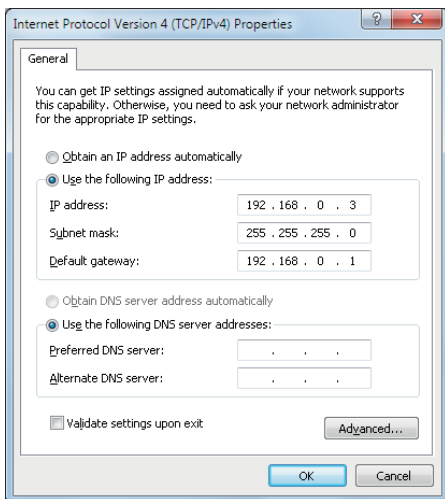

- If an IP address is to be obtained automatically from a DHCP server, select [Obtain an IP address automatically] and do not enter an IP address.
- Do not enter numbers for the default gateway and DNS server if they are not being used. Close [Local Area Connection].

- 7) Close [Local Area Connection].

3 Configure the IP address and other settings of the machine.




- Skip to Step 4 if an IP address and other settings have already been configured for the machine, or if they are obtained automatically.
- 1) Turn the power to the machine ON, check that Windows has started, and load the "Software DVD-ROM" supplied with the machine.


- 2) When [AutoPlay] is displayed, click [Run Setup.exe].
- 3) Select the language and click "Next".




- 4) Select the device you want to use and click "Next".

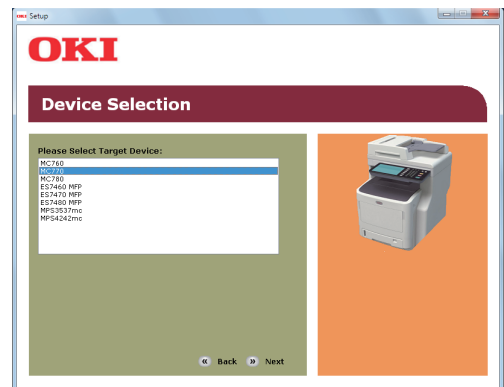


- 5) Read the license agreement and click "I Agree".

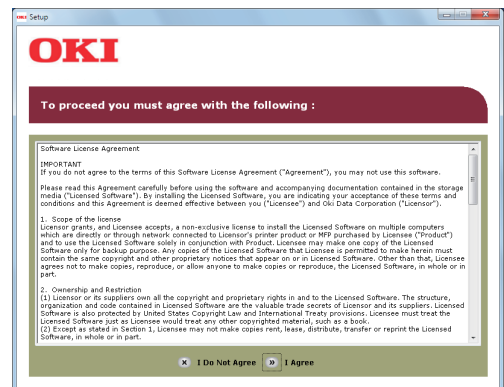


- (6) Read "Environmental Advice for Users" and click "Next".

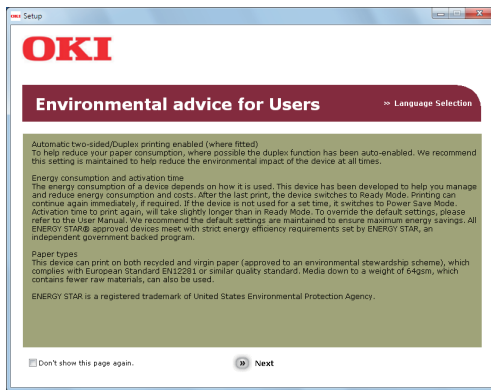


- (7) Select the driver you want to install and click the "Multi Installation" button to install them all at once.

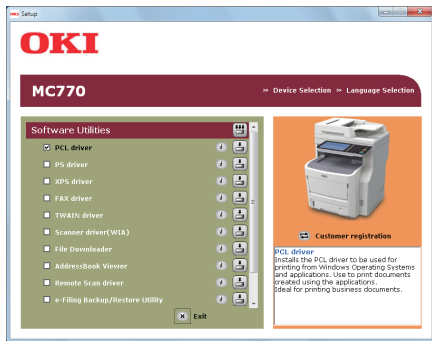


- (8) Click Network to search the device.

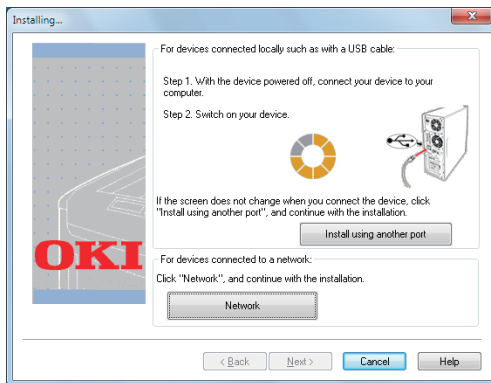

- (9) When the target device is detected, select the device in the list, then click "Next". The installation begins.
If the device cannot be detected, specify the device's IP address and install it directly.

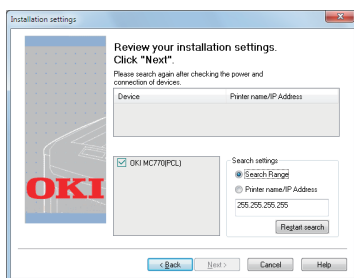

- (10) Click "Finish".

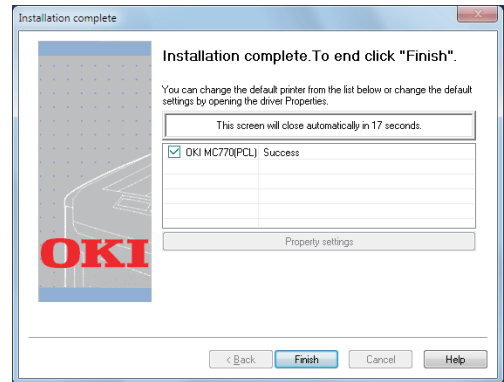

- (11) Click "Exit" button to finish.



4 Select [Start] - [Control Panel] - [Devices and Printers].

Setup is complete when an icon appears in the "Devices and Printers" folder.

Setup via USB (Windows)

Installing PCL printer drivers

Note

- Computer administrator rights are required.
- Unless otherwise noted, procedures required when using Windows 7 are listed. Screens and procedures may differ depending on the OS.


1 Turn the power to the computer ON and start Windows.

The "Add New Hardware Wizard" is displayed when the machine power is ON. If this happens, click [Cancel] and turn the power to the machine OFF before proceeding to the next step.


- 2 Load the "Software DVD-ROM" supplied with the machine.
- 3 When [AutoPlay] is displayed, click [Run Setup.exe].
- 4 Select the language and click "Next".




- 5 Select the device you want to use and click "Next".

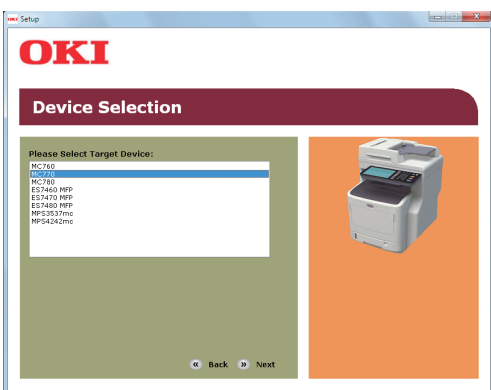

- 6 Read the license agreement and click "I Agree".

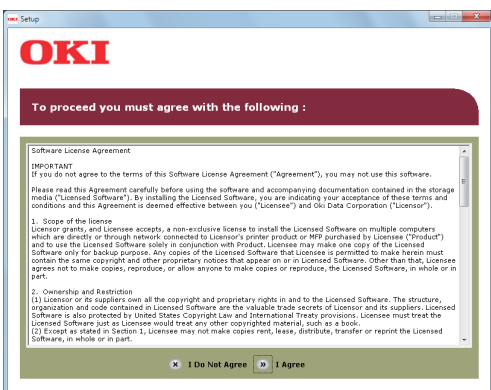


- 7 Read "Environmental Advice for Users" and click "Next".

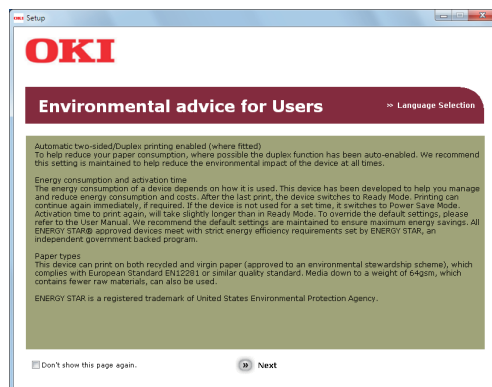


- 8 Select the driver you want to install and click the "Multi Installation" button to install them all at once.




- 9 Turn on the power of the device by following the on-screen guidance. When the device cannot be detected, click the "Install using another port" button.

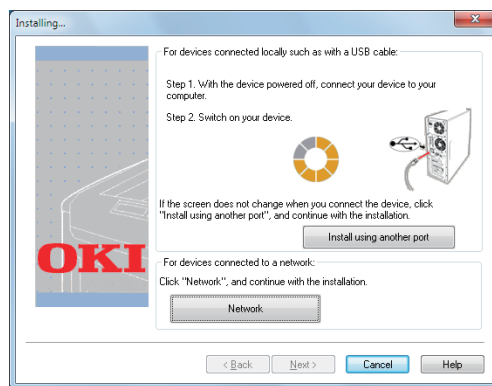

10 Click "Next".

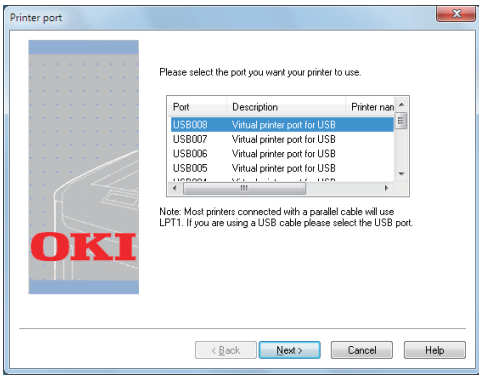

11 Click "Exit" button to finish.

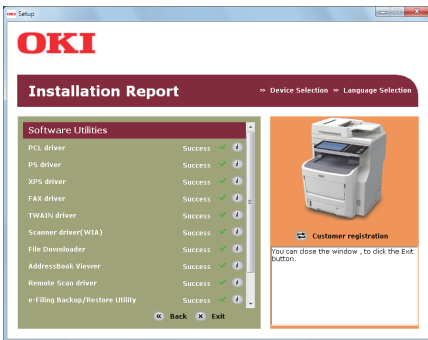

12 Select [Start] - [Control Panel] - [Devices and Printers].

Setup is complete when an icon appears in the "Devices and Printers" folder.



- To use this machine as a printer, install any of [PCL driver], [PS driver] or [XPS driver].
- To use this machine as a facsimile, install [FAX driver].
- To use this machine as a scanner, install [Scanner driver] and [ActKey].

● Preparations to print from Mac OS X

Setup via a network (Mac OS X)

! Note


- Mac OS X and printer drivers may differ from information listed here due to driver updates.

The print method (protocol)

There is a method available to print from Mac OS X uses Bonjour (Rendezvous).

| Print method | Features |
|---------------------|--|
| Bonjour(Rendezvous) | Uses the functions that are included as standard with Mac OS X |

Setup procedures

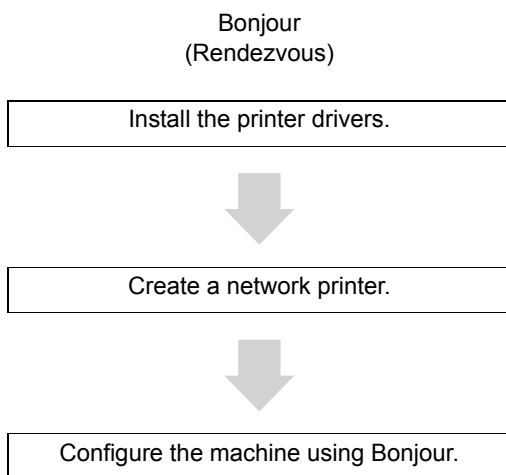

1 Turn the power to the machine ON.

2 Install the printer drivers.

! Note


- Turn OFF any virus protection software.
- (1) Insert the "Software DVD-ROM" into the Macintosh.
 - (2) Double-click [XXXXX.pkg] within the [OKI] > [Drivers] > [OSX] > [OS X 10.7-] folder.



(3) Enter the administrator password, and click [Install Software].



(4) Click [Close] after the installation is complete.

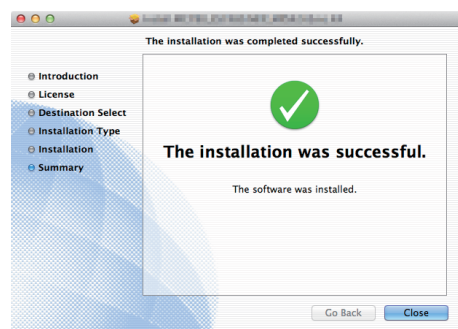

■ Use Bonjour

! Note


- If [Print & Fax] is open, click X to close it.

(1) Select [Apple Menu] - [System Preference].

(2) Click [Print & Scan].



- (3) Click [+].
- (4) Click [Default] and select the machine name is displayed, then click [Add].

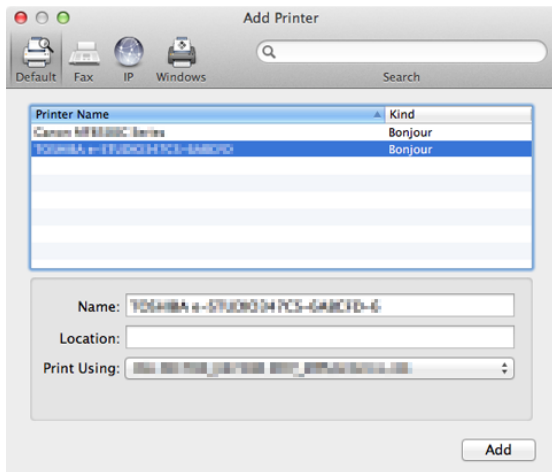


- (5) In [Name] Box, the name that you selected in the list is displayed automatically.

Memo

- Clicking [Device Settings] in the control panel, and [Printer Information] - [Network] displays the MAC address.

- (6) Select the option device, and click [OK].

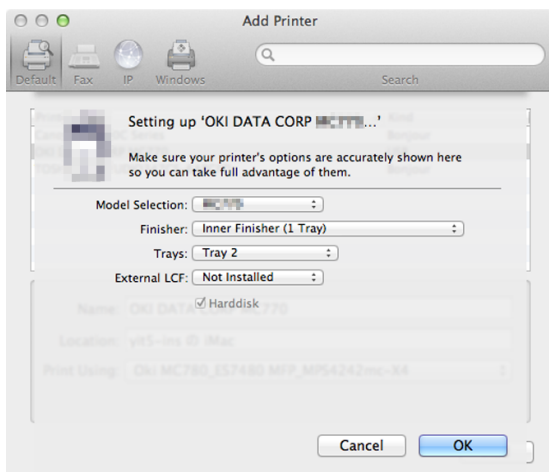

Note

- The machine name will not be displayed correctly if the printer driver cannot load the PPD file correctly. If this happens, delete the machine and add it again.

● PRINTING FROM WINDOWS

Before Using the Printer Driver

Before printing, you have to configure the following options:

- Configuration Settings
To use optional devices such as optional trays or the Finisher, you must first configure these devices. The features of these optional devices are not available unless you inform the system that the optional devices are installed.

Before printing, you can configure the following option if necessary:

- Department Code
You can use department codes to manage each job. For example, a system administrator can check how many sheets of copies a certain department has made. When the Department code is enabled, you are prompted to enter a department code before printing. If you enter the department code in the corresponding field in advance, you can print without having to do this every time. Ask your administrator about the codes. When SNMP communication between the equipment and your computer is enabled, you are also prompted to enter the code before printing.


Configuring the options

To use this equipment properly, you need to save the configuration of the options installed on the [Device Settings] tab menu after you installed the printer drivers. In the default setting, you can obtain the configuration data of options installed automatically by opening the [Device Settings] tab menu. If SNMP communication between this equipment and your computer is not available, or you want to configure options manually, see the following page:

[P.21 "Configuring options manually"](#)

Note

- When SNMP communication between this equipment and your computer is enabled, you can retrieve the option configuration information by clicking [Update Now].

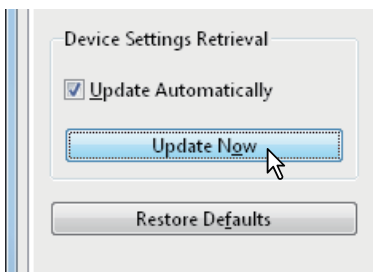

■ Configuring options manually

If SNMP communication between this equipment and your computer is not available:


Setting the [Device Settings] tab manually

Note

- You need to log in to Windows with the "Administrator" privilege.


- 1 Click [Start] menu and select [Devices and Printers].**
The Printers folder appears.
- 2 Select the printer driver for this equipment, and then click [Printer properties] in the [File] menu.**

The printer driver properties dialog box appears.

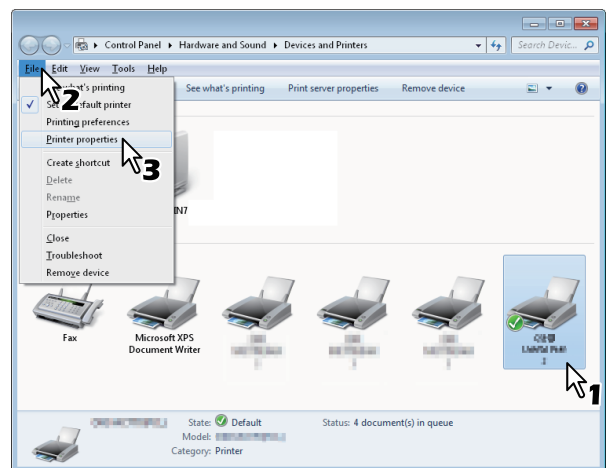

- If the [File] menu is not displayed, press [Alt].
- If the dialog box displayed does not allow the printer driver properties to be changed, follow the procedure below.
 - For Windows 7, some tab menus have a button in the printer driver properties. To change the properties, click on it. If the properties cannot be changed, ask your network administrator.
- To change a network-installed printer driver, the administrator privilege is necessary. Ask your network administrator for details.

3 Display the [Device Settings] tab menu, and set the following options.

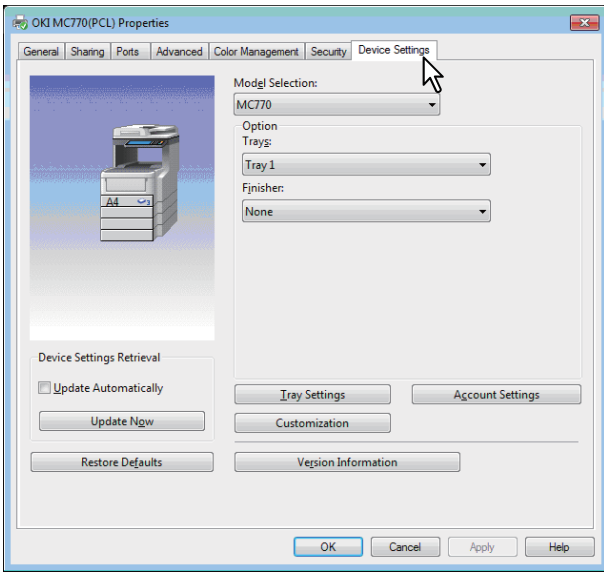

Model Selection — This sets the model type. The setup items of the printer driver are changed according to the model selected.

Option — This option sets whether the following optional devices are installed.

- **Trays** — This sets whether or not the Paper Feed Unit is installed.
- **Finisher** — This sets whether or not the Inner Finisher is installed.




- Setup items differ depending on the model and the option configuration.
- For more information about each item, see the descriptions about the [Device Settings] tab.
Advanced Guide

4 Click [Tray Settings].

The [Tray Settings] dialog box appears.

5 Set the following options and click [OK].

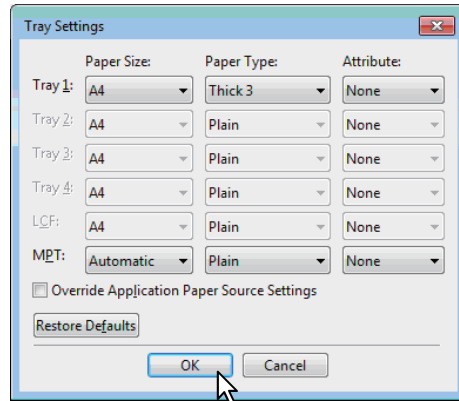

Tray 1 — Select the size and type of paper that is loaded in the 1st tray.

Tray 2 — Select the size and type of paper that is loaded in the 2nd tray.

Tray 3 — Select the size and type of paper that is loaded in the 3rd tray.

Tray 4 — Select the size and type of paper that is loaded in the 4th tray.

MPT — Select the type of paper that is loaded in the Multi-Purpose Tray (MPT).

Override Application Paper Source Settings — Select this check box to use the paper source setting in the printer driver rather than the application setting.



- Setup items differ depending on the model and the option configuration.
- For more information about each item, see the descriptions about the Tray Settings.

Advanced Guide

6 Click [Apply] or [OK] to save settings.

Setting the department code

When this equipment is managed by department codes, you have to enter yours on the printer driver.

This allows a network administrator to check the number of copies printed by specific department members. Also users can check who submitted the print jobs, by touch panel display and monitoring tools.

Please ask your administrator whether you should enter the Department Code.

Note

- When the User Management setting is enabled, it is used to manage a print job instead of the Department Code Management setting. In this case, a user name that has been entered to log in to your computer is used for the authentication of the print job. Therefore, you do not need to set your department code to the printer driver but you must register your user name in advance. If your user name is not registered, the print job is processed as an invalid one according to the User Authentication Enforcement setting. Also if a print job is sent in RAW format, it is processed according to the RAW Print Job setting. For more information about the User Authentication Enforcement setting or the RAW Print Job setting, refer to the **TopAccess Guide**.
- If the No Limit Black function is enabled, you do not have to specify the department code when you print a document with [Black and White] selected for the [Color] option in the [Basic] tab of printer driver.

Memo


- How the equipment performs printing for an invalid department code print job, for which an invalid department code is specified, varies depending on the Invalid Department Code Print Job setting that can be set in the TopAccess Administrator mode and whether SNMP communication is enabled or not.
 - When SNMP communication is enabled and Invalid Department Code Print Job is set to [Store to invalid job list], an error message will be displayed when an invalid department code is entered.
 - When SNMP communication is disabled and Invalid Department Code Print Job is set to [Store to invalid job list], the invalid department code print job will be stored in the invalid department code print job list without printing.
 - When the Invalid Department Code Print Job is set to [Print], the invalid department code print job will be printed.
 - When the Invalid Department Code Print Job is set to [Delete], the invalid department code print job will be deleted.
- A department code needs to be entered every time you begin printing. If you have to use a different department code for each print job, enter it when you begin printing.

Entering department code

1 Click [Start] menu and select [Devices and Printers].


The Printers folder appears.

2 Select the printer driver of this equipment, and then click [File] menu and select [Printing Preferences].

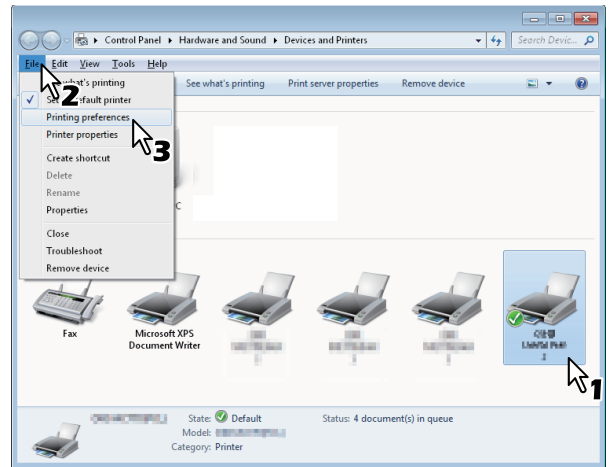

- If the [File] menu is not displayed, press [Alt].
- The printing preferences dialog box appears.

3 Display the [Others] tab menu and enter your department code in the [Department Code] box.

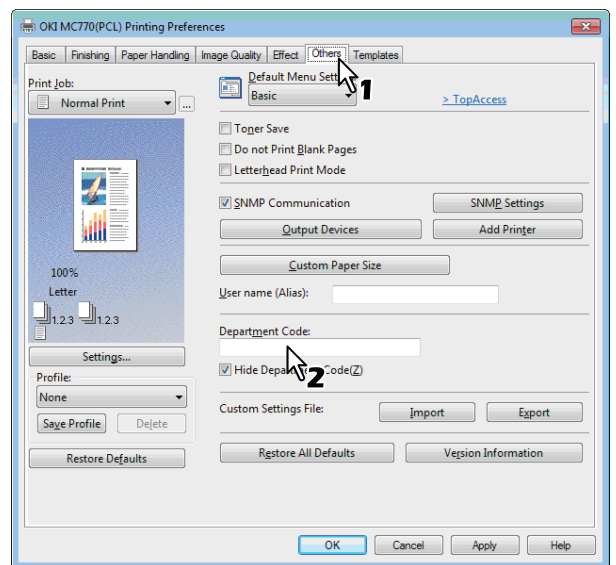

In the [Department Code] box, you can enter a department code within 63 characters.

Memo

- A department code must consist of one-byte characters such as numbers from 0 to 9, letters of the alphabet from A to Z (both capital and small ones), a hyphen (-), an underscore (_), and a period (.).

4 Click [Apply] or [OK] to save the settings.

Copying the PPD file for Windows

The Client Utilities/User Documentation DVD contains a printer description file for popular Windows applications. For applications not allowing the automatic installation of PPD files, copy the PPD file to a proper directory in order to enable printer-specific settings in the [Print] dialog box or the [Page] Setup dialog box.

Printing From Application

This section describes how to print a document from application.

- [P.24 "Considerations and limitations"](#)
- [P.24 "How to print"](#)

Considerations and limitations

- When the User Management setting is enabled, it is used to manage a print job instead of the Department Code Management setting. In this case, a user name that has been entered to log in to your computer is used for the authentication of the print job. Therefore, you do not need to set your department code to the printer driver but you must register your user name in advance. If your user name is not registered, the print job is processed as an invalid one according to the User Authentication Enforcement setting. Also if a print job is sent in RAW format, it is processed according to the RAW Print Job setting. For more information about the User Authentication Enforcement setting or the RAW Print Job setting, refer to the **TopAccess Guide**.
When the Windows Domain Authentication is used for the User Management Setting, your computer must log in the domain.
- If the No Limit Black function is enabled, you do not have to specify the department code when you print a document selecting [Black and White] in the [Color] option in the [Basic] tab of printer driver.
- Some print options can be set from both the application and the printer driver, such as collation. If the collation is set from the application, documents may not be properly printed. If that happens, use the printer driver to set the collation. Depending on the application, some print options such as the orientation need to be set from the application. For print options that can be set from both the application and the driver, refer to the manual of the application.

Cautionary points when using the PS3 printer driver

- When printing with the PS3 printer driver from Adobe Acrobat, this option is disabled.

- When any of the following functions is set in the PS3 printer driver, the print function will work appropriately even if print data are generated in the application side since this happens in the printer driver side by ignoring the pass-through printing of the application.
 - Print to Overlay file
 - Print Overlay Image
 - Nin1
 - Booklet
 - Interleave (Duplicate)
 - Templates printing
 - Print Paper Size
 - Image Scale
 - Poster Print
 - Tandem Print

How to print


Once you have installed the printer driver and configured it properly, you can print directly from most Windows applications. Simply choose the Print command from your application.

You can print using the various functions by setting print options on the printer driver.

Printing from Windows applications

The following describes an example for printing from Notepad on Windows 7.

- 1 Open a file and select [Print] from the [File] menu of the applications.**
The [Print] dialog box appears.
- 2 Select the printer driver of the equipment to be used and click [Preferences].**

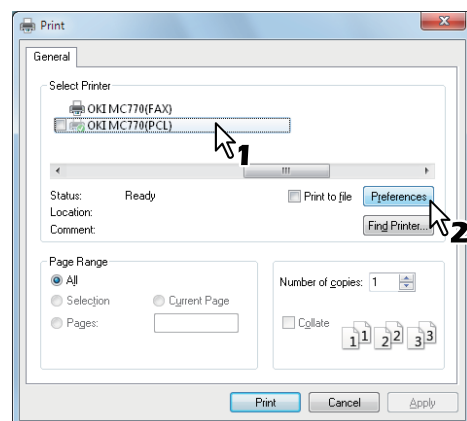


The printing preferences dialog box appears.

Memo

- The procedures for displaying the properties dialog for the printer driver may be different depending on the application that you are using. See your application's manual about displaying the machine properties dialog box.


3 Setting the print options on each tab according to how you want to print.

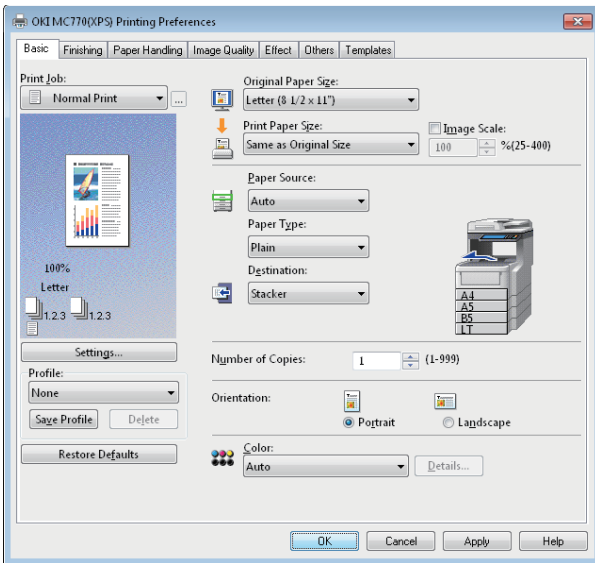

- Setting the print options varies depending on how you want to print a document.
- You can also set the print options using setting profiles.

4 Click [OK] to save the settings.


5 Click [Print] to print a document.

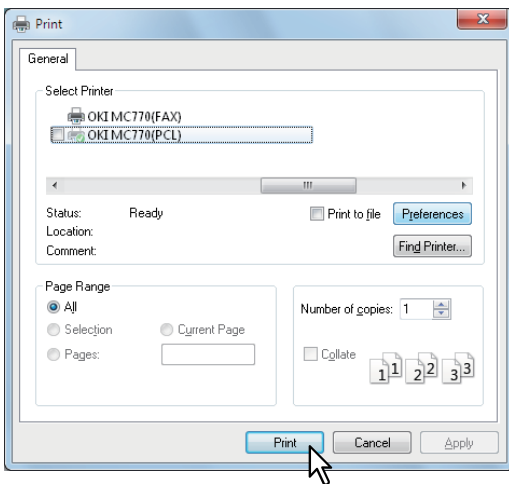

Cautionary points when the [Enter the user credentials manually] option is used

When this option is enabled on this equipment, you are prompted to enter your user name and password before printing a document.

When the dialog box below appears, enter your user name and password, and then click [OK].

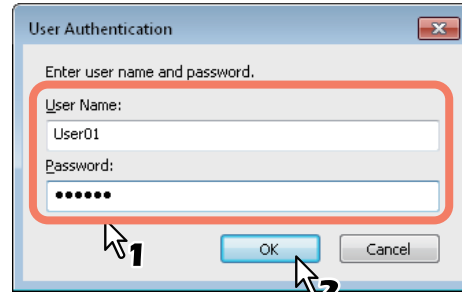

! Note

- Up to 128 characters can be entered in the [User Name] box, and up to 64 characters in the [Password] box.
- The values entered in the above boxes are not stored. Therefore, you must enter your user name and password every time you print a document.
- You can make settings for this option on the [Device Settings] tab.

● PRINTING FROM Macintosh

Printing From Application on Mac OS X

Considerations and limitations

- If any double-byte character is included in the user name or document name when printing is performed, the printing job is displayed with [OSX User] or [OSX Document] on the touch panel display of the equipment. The user name and document name are displayed as they are only for one-byte characters.
- The Cover Pages option of the Printer Features menu and the booklet printing cannot be used at the same time.
- The Cover Pages option of the Printer Features menu and the N-up printing (multiple pages per sheet) cannot be used at the same time.
- The Cover Pages option of the Printer Features menu and the Cover Page option for sending a print job with a banner page cannot be used at the same time.
- The e-Filing function cannot be used together with Custom Paper Size, Magazine Sort, Twin Color, Printing in 1200 dpi, 600 x 1200 dpi, Hold Print, Proof Print, or Private Print.
- To perform proof printing, private printing, hold printing, scheduled printing or e-Filing on Mac OS X 10.5, use LPR, AppleTalk or Bonjour.
- To perform proof printing, private printing, hold printing, scheduled printing or e-Filing on Mac OS X 10.6.x to Mac OS X 10.8.x, use LPR or Bonjour.
- To use the user authentication function on Mac OS X 10.4.x, perform the domain settings on [Applications] > [Utilities] > [Directory Access] > [Services] > [BSD Flat and NIS].
- To use the user authentication function on Mac OS X 10.5.x, perform the domain settings on [Applications] > [Utilities] > [Directory Utilities] > [Services] > [BSD Flat and NIS].
- To use the user authentication function on Mac OS X 10.6.x to Mac OS X 10.8.x, perform the domain settings on [Accounts] > [Login Option] > [Network Account Server] > [Open the Directory Utility] > [Services] > [BSD Flat and NIS].

How to print from Mac OS X


You do not need to switch printers before starting printing because they are all managed under the setting of [Print & Fax] of [System Preferences]. Once a printer is added to the Printer List, you can select any printer directly from the [Page Setup] dialog box or the [Print] dialog box.

■ Setting options and printing from Macintosh Computers

In Mac OS X applications, print options are set from both the [Page Setup] dialog box and the [Print] dialog box.


Printing from Macintosh applications

- 1 Open a file and select [Page Setup] from the [File] menu of the application.
- 2 Select the name of the equipment in the [Format For] box and specify the Page Setup settings for your print job.

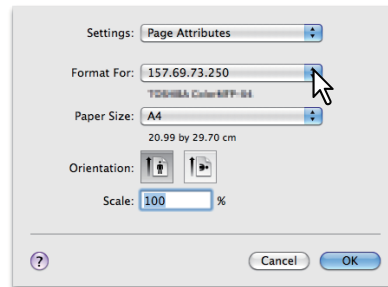

Setting the Page Setup varies depending on how you want to print a document.

- 3 Click [OK] to save the Page Setup settings.
- 4 Select [Print] from the [File] menu of the application.
- 5 In the dialog box that appears, make sure the name of the equipment is selected at the [Printer] box and specify the Print settings for your print job.

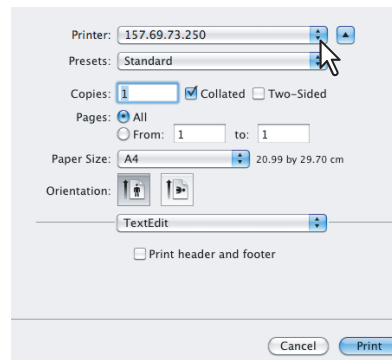

Setting the Print Setup varies depending on how you want to print a document.

Note

- The [Print] dialog boxes vary depending on applications.

- 6 Click [Print] to print a document.

Note

- The content set in the [Print] dialog box can be saved as [Presets]. Select [Save as] in the [Presets] box and save it under the desired name. If you use this preset content as a default setting, select it in the [Presets] box.

2

Copying

| | |
|--------------------------|------|
| HOW TO MAKE COPIES | P.28 |
| BASIC COPY MODES | P.43 |

HOW TO MAKE COPIES

Before Making Copies

Storage of color copies

When storing color copies, be careful of the following:

- Avoid a place exposed to light. The colors may fade when they are stored in such a place for a long time.
- If copies are stored pressed between plastic sheets made of chloroethylene for a long time, toner may melt and stick to the plastic. For long-time storage, use polyethylene binders.
- When a color copy is folded, toner at the folded part may flake off. Do not fold color copies when storing them.
- Toner on copies may melt if it touches solvent or ink not fully dried. Keep copies away from them.
- When copies are left under an extremely high temperature environment such as in the vicinity of a heater, toner may melt. Store them at room temperature and avoid extreme temperature changes.

Forgery prevention function

This equipment has a forgery prevention function. Therefore, scan or copy function might not operate correctly.

Placing Originals

Acceptable originals

When the RADF (Reversing Automatic Document Feeder) is used, 2-sided originals can be automatically scanned one sheet after another. When the original glass is used, originals such as OHP films, tracing paper, booklet or 3-dimensional objects, that cannot be placed on the RADF can be scanned, as well as plain paper.

| Location | Original glass | RADF |
|--|--|---|
| Maximum size | Length:215.9mm(8.5") Width:355.6mm(14") | |
| Paper weight | 20mm or less | 1-sided originals: 35 - 157 g/m ² (9.3 - 41.8 lb.) 2-sided originals: 50 - 157 g/m ² (13.3 - 41.8 lb.) |
| Acceptable sizes for automatic size detection | Other than North America: A4, B5, 8K, 16K North America: LG, LT | Other than North America: A4, B5, FOLIO North America: LG, LT |

Note

- Automatic size detection does not work properly when A/B format originals are used in equipment for North America. It does not work properly when LT format originals are used in equipment other than that for North America.
- In some models, automatic size detection does not work properly when K format paper is used for printing. (K format is a standard paper size in China.)
- Do not place any heavy objects (8 Kg(18lb.) or over) on the original glass and do not press on it with force.
- Be sure to place ST-size or A5-size originals in a landscape direction when using the RADF.
- A maximum of 1000 sheets can be scanned per 1 copy job or up until the embedded memory becomes full.

Placing originals on the original glass

The original glass can be used for originals such as OHP films or tracing paper, as well as plain paper, that cannot be placed on the RADF.

CAUTION


Do not place any heavy objects (8 Kg(18lb.) or over) on the original glass and do not press on it with force. Breaking the glass could injure you.

1 Raise the Original Cover or the RADF.

Note


- Raise it 60 degrees or more so that the size of the original can be detected correctly.

2 Place the original with its face down on the original glass and align it with the left rear corner of the glass.

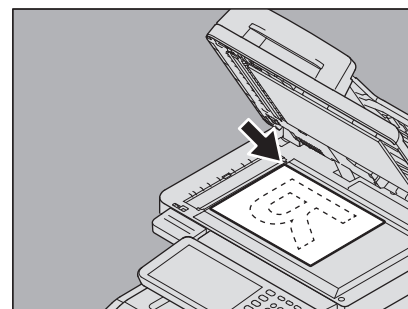

When you copy highly transparent originals

When you copy highly transparent originals such as OHP films or tracing paper, place a blank sheet, which is the same size as the original or larger, over the original.

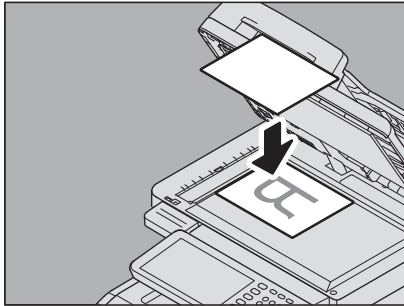
**3 Lower the Original Cover or the RADF carefully.****Book-type originals**

You can place book-type originals on the original glass.


⚠ CAUTION


Do not place any heavy objects (8 Kg(18lb.) or over) on the original glass and do not press on it with force.

Breaking the glass could injure you.

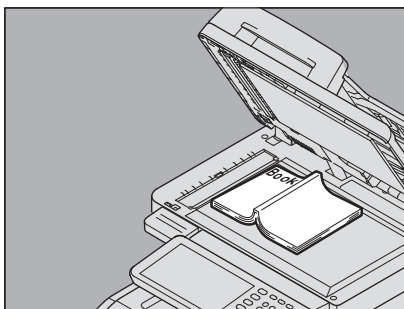1 Raise the Original Cover or the RADF.**2 Open the desired page of the original and place it with its face down. Align it with the left rear corner of the original glass.**

When you make 2-sided copies from book-type originals in modes such as book-type original to 2-sided copying or dual page copying, align the center of the original on the yellow indicator line of the original glass.

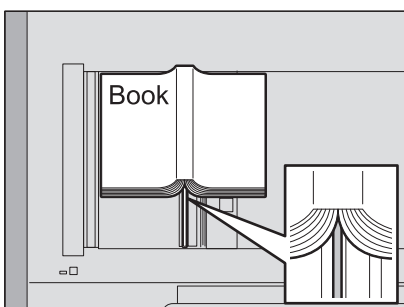**3 Lower the Original Cover or the RADF carefully.****! Note**

- Do not lower the Original Cover or the RADF forcibly when the original is very thick. There will be no problem in copying even if it is not fully lowered.
 - Do not look directly at the original glass because intensive light may escape during copying.
 - If the original size is not detected correctly, press [ZOOM] and select the desired original size.
-  [P.48 "Specifying both the original size and the copy paper size separately"](#)

Using the RADF (Reversing Automatic Document Feeder)**⚠ CAUTION**

- When scanning the duplex original with the RADF, do not put your hand on the RADF. Paper may damage the hand.
- When scanning the duplex original with the RADF, do not put an object on the RADF. This could cause a paper misfeed.


■ Precautions

Do not use the types of originals 1 to 9 shown below because such originals may cause misfeeding or damage to the equipment.

1. Badly wrinkled, folded or curled originals
2. Originals with carbon paper
3. Taped, pasted or cut-out originals
4. Originals with multiple perforations such as loose leaf paper
5. Clipped or stapled originals
6. Originals with holes or tears
7. Damp originals
8. OHP films or tracing paper
9. Coated paper (with wax, etc.)

Use the types of originals 10 and 11 shown below with extra care.

10. Originals which resist sliding with the fingers, or surface-treated originals (The sheets of such originals may not be separated.)
11. Folded or curled originals (They should be fully smoothed out before being used.)

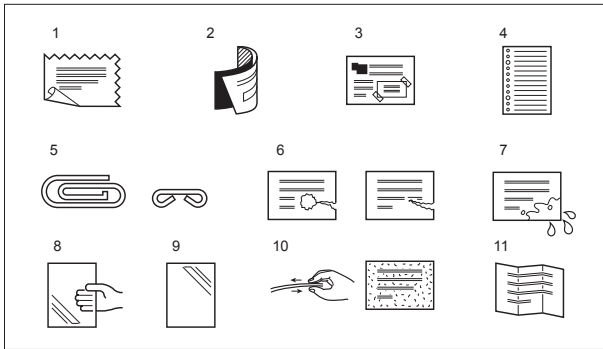

When black streaks appear

If the scanning area or the guide area is dirty, image trouble such as black streaks may occur on printouts. Weekly cleaning of these areas is recommended.

Continuous feed mode

The feeding mode is set at “continuous feed mode” by default. Once you set the originals and then press the [START] button, they are scanned page by page continuously. It is useful when you want to copy more than one original at one time.


1 Align all the originals.

Collate the originals in the order that you want them to be copied. The top sheet of the originals will be copied first.

2 Place the originals with their face up and align the side guides to the original length.

! Note

- Regardless of their sizes, originals are acceptable up to 100 sheets (35 to 80 g/m² (9.3 to 20 lb.)) or 16 mm (0.62") in height.
- For mixed-size originals, see the following page: [P.45 "Copying mixed-size originals in one operation"](#)

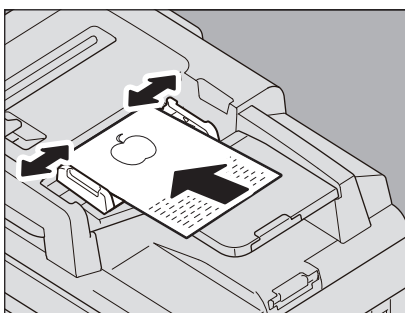


For long originals

The original stopper prevents the scanned originals from falling off. Pull it out from the RADF and raise the sub-stopper.


! Note

- Lower the sub-stopper and slightly lift the original stopper to push it back in after you have finished using it.

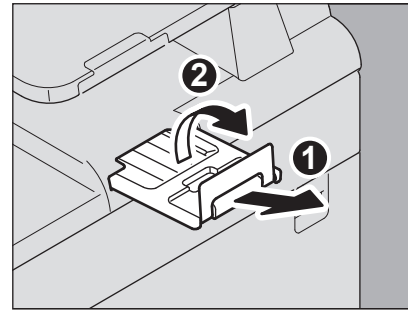

Memo


- When there are too many originals to be scanned at one time, divide the originals into several sets before copying. Place the first set of the originals and then press [CONTINUE] on the touch panel while the data of this set are being scanned. When this scanning is finished, place the next set of the originals and press the [START] button on the control panel. (If you press [CONTINUE], this button may not work shortly before scanning is finished.)

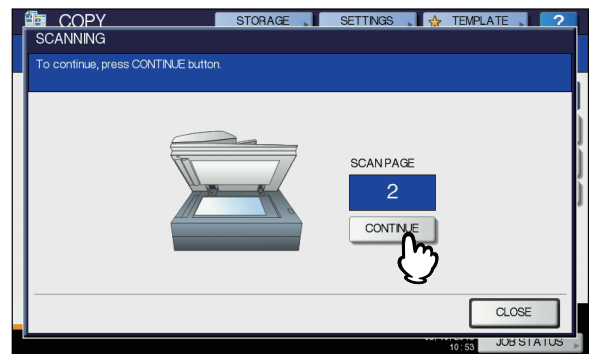

Single feed mode

When the feeding mode is set at “single feed mode”, an original is fed automatically as it is placed on the RADF. It is useful when you want to copy only 1 original sheet.

1 Align the side guides to the original length.

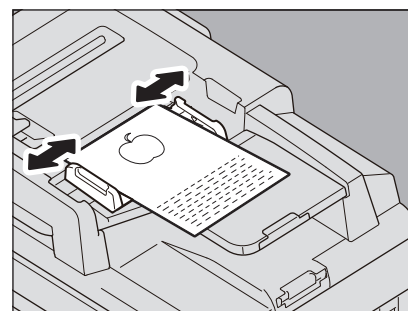


2 Insert the original with its face up and straight along the side guides.


The original is automatically pulled in and then the menu of step 3 will be displayed on the touch panel.

! Note

- Be sure to let go of the original when it starts being pulled.

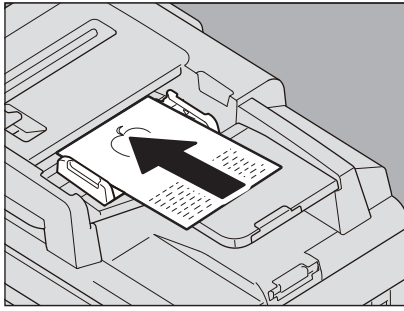

3 If there is another original, insert it in the same way.

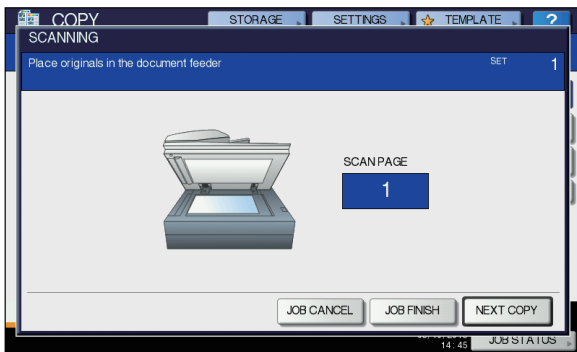

4 After all the originals are pulled in, press [JOB FINISH].




- If you want to stop copying, press [JOB CANCEL].

Making Copies

Basic copying procedure

Make copies following the procedure below.

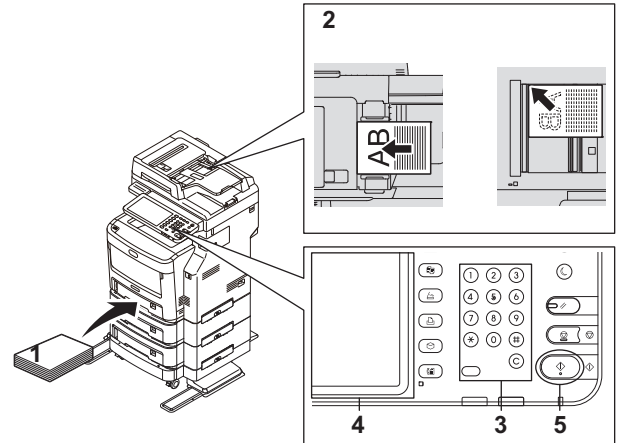

1 Make sure that paper is placed in the tray(s).

For the types and sizes of acceptable paper and how to place it.

2 Place the original(s).

For the types and sizes of originals and how to place them, see the following pages:

- 📖 [P.28 "Acceptable originals"](#)
- 📖 [P.29 "Using the RADF \(Reversing Automatic Document Feeder\)"](#)
- 📖 [P.28 "Placing originals on the original glass"](#)
- 📖 [P.29 "Book-type originals"](#)

3 Key in the desired number of copies if you want more than one copy.

Press the [CLEAR] button on the control panel to delete the number keyed in.

4 Select the copy modes as required.

- 📖 [P.43 "BASIC COPY MODES"](#)


5 Press the [START] button on the control panel.

Copying starts. The paper exits with its copied side down.

Note

- Be careful because the paper exiting area and the paper itself are hot.

The menu shown below may appear when you are using particular modes.

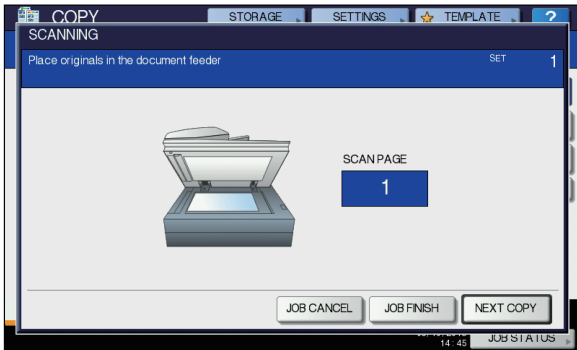

This menu appears when "SADF (single feed mode)" is set to the document feeder or in modes where the original is placed on the original glass and the scanned data are temporarily stored in the memory, such as sort copying or 1-sided to 2-sided copying. When this menu appears, follow the procedure below.

Memo

- There are different messages displayed on the upper part of the menu for when the originals are scanned through the RADF and for when scanning is performed through the original glass.

6 Place the next original, and then press the [START] button on the control panel or [NEXT COPY] on the touch panel.

Scanning starts. (When "SADF (single feed mode)" is set to the document feeder, an original is fed automatically when it is placed on the RADF.)

7 Press [JOB FINISH] on the touch panel after all the originals have been scanned.

Copying starts.


Memo

- If you want to stop copying, press [JOB CANCEL].
- When the tray runs out of paper during copying, another tray can feed paper instead if it holds paper of the same size and orientation, and copying will not stop. If there is no such tray, copying stops and "Add paper" appears on the touch panel. In this case, add paper to the tray.


Stopping and restarting copying

1 Press the [STOP] button on the control panel.

Copying or scanning stops.

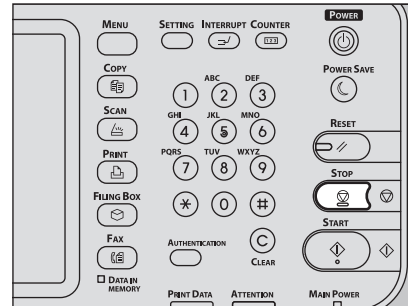

2 Press [JOB CANCEL] on the touch panel to stop copying. Press [NEXT COPY] on the touch panel or the [START] button on the control panel to restart.

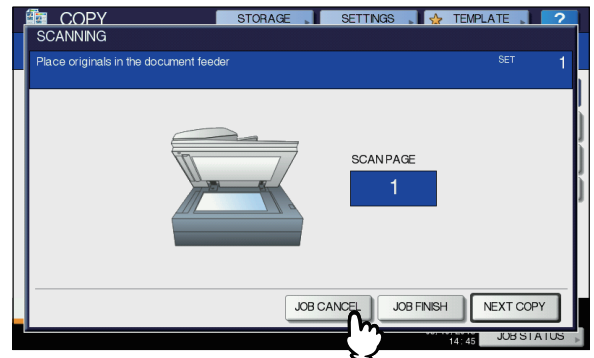

When you press [JOB CANCEL], the scanned data will be deleted and any waiting jobs will be performed.

Memo

- Even if you do not press [JOB CANCEL], the scanned data will be deleted by means of the automatic function clear.

Scanning the next original during copying

Even if copying is in progress or “READY (WARMING UP)” is displayed on the touch panel, you can scan the next original (auto job start).

- 1 Place the original(s).
- 2 Set the number of copy sets and the copy modes as required.


! Note

- The new job starts in the copy modes that you previously selected unless you select other modes.

- 3 Press the [START] button on the control panel.

Memo

- A maximum of 1000 sheets can be scanned per 1 copy job or up until the embedded memory becomes full.

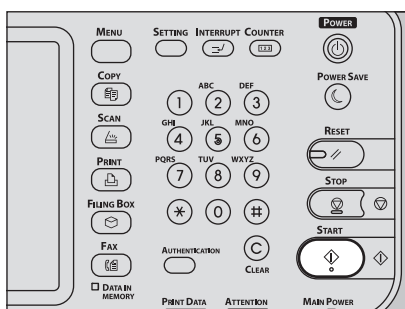

Confirming auto jobs

You can confirm which jobs are in waiting on the touch panel or cancel them as required. For details, see the following Guide:


Advanced Guide

Canceling jobs being scanned

Press the [STOP] button on the control panel to stop a job while originals are being scanned.

When you press [JOB CANCEL] on the touch panel or the [RESET] button on the control panel while the scanning is being paused, the scanning will end. (In this case, the data which were scanned before the job was paused will be copied.)

To restart the scanning, press the [START] button.

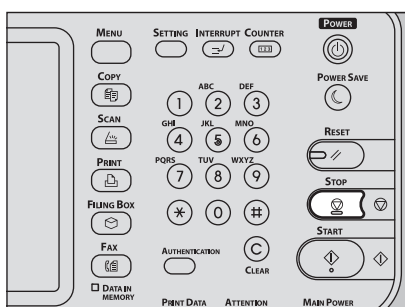

Interrupting copying and making other copies

You can interrupt the copy job in progress to make other copies (interrupt copying). When restarting the interrupted job, you do not have to reselect copy modes that have been set because they are memorized in this equipment.

! Note


- The following functions cannot be used together with interrupt copying:
Cover sheet copying, Sheet insertion copying, Job build, Store to e-Filing, Copy & File
- During interrupt copying, the mode cannot be changed to a non-copying one, such as e-Filing, scanning, printing or fax. To change the mode, first press the [INTERRUPT] button to clear the interrupt copying.

- 1 Press the [INTERRUPT] button on the control panel.

“Job interrupted job 1 saved” appears, and “COPY(Interrupt)” is displayed on the function display.

Memo

- If the original is being scanned, the message above appears after the scanning has finished.

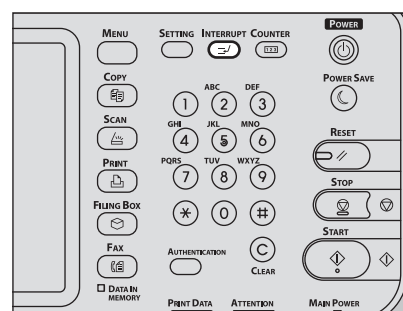

- 2 Replace the original with a new one.

- 3 Select other copy modes as required and then press the [START] button on the control panel.

- 4 Press the [INTERRUPT] button again after the interrupt copying has finished.

“Ready to resume job 1” appears and the interrupted job restarts.


Proof copy

When you make a large amount of copies, you can check if they will be made exactly as you desire by copying only one page before copying them all (proof copy). Then you can change the modes or settings (e.g. the number of copy sets, receiving tray, page number, time stamp, sort/stapling) after checking the proof copy.

Note

- If you want to change settings such as the reproduction ratio, density, original mode or 1/2-sided copying, you must finish the proof copy first. Then change these settings and scan the original again.

- 1 Place paper in the tray(s).**
- 2 Place the original(s).**
- 3 Select the number of copy sets and copy modes.**
- 4 Press [PROOF COPY] on the touch panel.**
 “PROOF COPY is set. Press START button to copy.” appears for approx. 2 seconds.

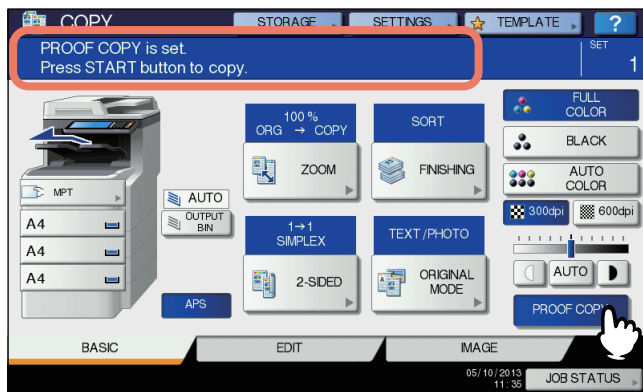


Note

- If [NON-SORT NON-STAPLE] or [GROUP] is selected as a finishing mode, the mode will be changed to [SORT] automatically.

- 5 Press the [START] button on the control panel.**
 Scanning starts. 1 set of copies will be printed out.

- 6 Change the number of copy sets and copy modes as required after checking the proof copy.**

Modes or settings such as the number of copy sets, the receiving tray, page number, time stamp, and sort/stapling can be changed.

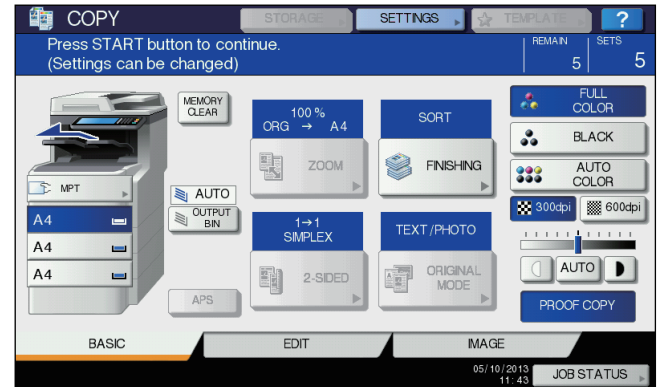

Note

- If you want to change settings such as the reproduction ratio, density, original mode or 1/2-sided copying, you must finish the proof copy first. Then change these settings and scan the original again. Press [MEMORY CLEAR] on the touch panel or the [RESET] button on the control panel to end the proof copy.

- 7 Press the [START] button on the control panel.**

If you did not change the number of copies in step 6 above, the number of copies printed out will be one fewer than that previously set because you have already copied one as a proof copy. (However, if the number of copies you previously set was 1, another set of copies will be printed out besides the proof copy.)

Selecting face down/up stacker


You can select the face down/up stacker if the Inner finisher is installed.

Note

- The available face down/up stacker may be restricted depending on copy modes and paper sizes.
- Face down/up stacker selection is set at automatic selection by default.

Changing the face down/up stacker

The face down/up stacker currently selected is displayed on the equipment status indication area. To change the face down/up stacker, press [OUTPUT BIN]. Every time you press this, the display changes from the face down/up stacker of the equipment, the face down/up stacker of the Inner Finisher, and automatic selection in this order.

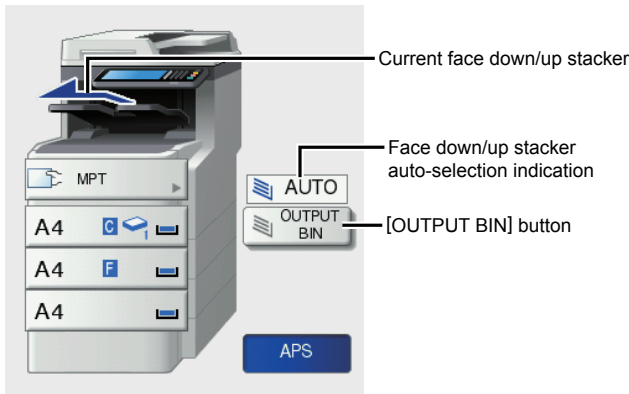

Bypass Copying


When you make copies on OHP film, sticker labels, envelopes or non-standard size paper, place the copy paper on the multi-purpose tray (MPT). Bypass copying is also recommended for copying on standard size paper which is not set in any of the trays.

Memo


- If you select the paper size, you can utilize various functions such as the automatic paper selection (APS) or the automatic magnification selection (AMS). For details, see the following Guide:

Advanced Guide


Open the multi-purpose tray for bypass copying.

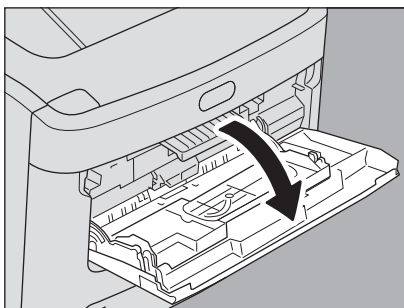


If the paper is large, pull out the paper holder.

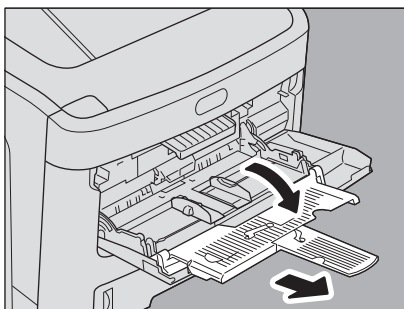

When placing copy paper, push the blue set button. When removing copy paper, push the multi-purpose tray downwards (so that paper is released).

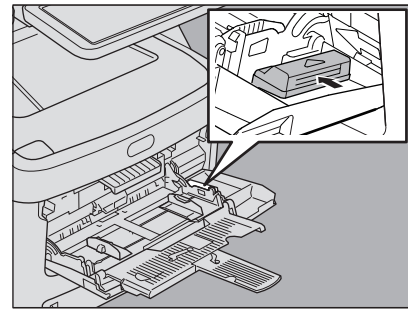

If thick paper cannot be fed, printing takes a long time after feeding or the quality is poor, turn over the paper and place it again as shown in the figure or place fewer sheets.

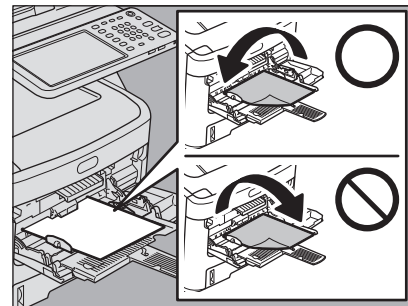

The operating procedure for bypass copying differs depending on the paper size to be used. See the table below for the operating procedure of each size.

| Paper size | Procedure | |
|-----------------------------|---|--|
| Standard size | Other than North America: A4, B5 North America: LT, LG | ☞ P.36 "Copying on A4 and B5 size paper (in equipment other than for North America) / LT and LG size paper (in equipment for North America)" |
| | Other than the above | ☞ P.38 "Copying on other than the above standard sizes of paper" |
| | Envelope | ☞ P.39 "Copying on an envelope" |
| Others (Non-standard sizes) | ☞ P.40 "Bypass copying on non-standard size paper" | |


Memo

- Bypass copying stops when the paper placed on the multi-purpose tray (MPT) runs out during copying, even if the paper of the same size is in any of the trays. Copying restarts when paper is supplied to the multi-purpose tray (MPT).
- When bypass copying has been completed, the [RESET] button on the control panel blinks. Press this button to switch bypass copying to normal copying using the trays.
- (Even if you do not press the [RESET] button, the bypass copying mode will be cleared when the automatic function clear mode kicks in after a specified period of time.)

Bypass copying on standard size paper

■ Copying on A4 and B5 size paper (in equipment other than for North America) / LT and LG size paper (in equipment for North America)


- 1 Place the original(s).
- 2 Place the paper with its copy side face up on the multi-purpose tray.

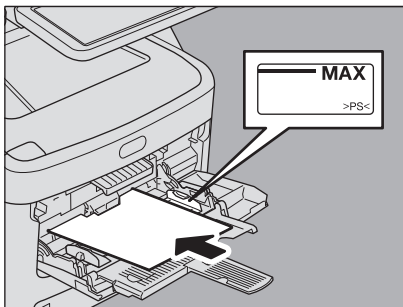

! Note

- The height of the paper must not exceed the indicator on the side guides.
- When you use more than one sheet of paper, fan the sheets well before placing them on the multi-purpose tray. Be careful not to cut your fingers when fanning.
- Do not push paper into the entrance of the bypass feeder. This could cause a paper misfeed.


- 3 Align the side guides to the paper length, and push the blue set button.

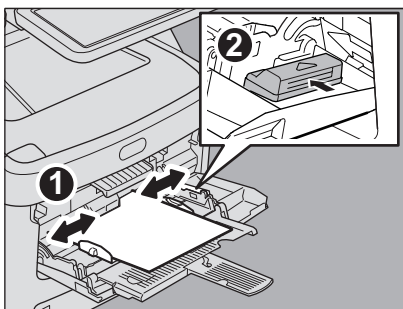


- 4 Press [MPT] on the touch panel.



- 5 Press [ZOOM] on the touch panel.

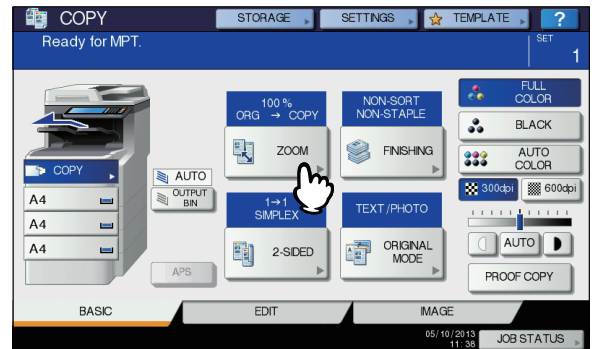

- 6 Select the same size button under “COPY” as that of the paper you placed on the multi-purpose tray.

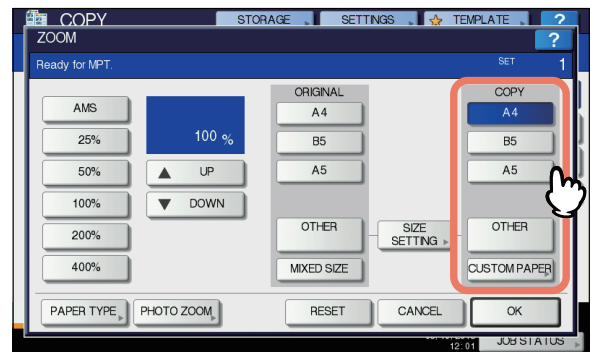


The paper size is now set.

! Note


- If the paper size is not selected in this step, copying may be slowed down.

7 Press [PAPER TYPE] on the touch panel if the paper type of the paper you placed on the multi-purpose tray is other than plain paper.

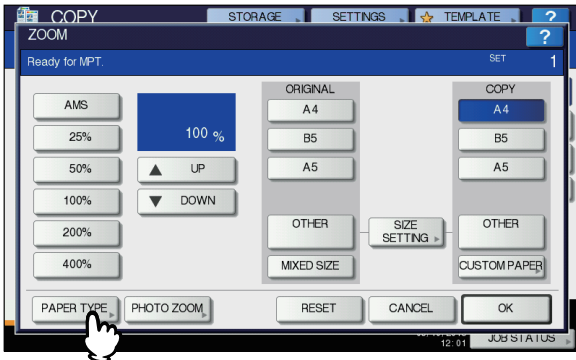


8 Select the paper type.

- 1) Select the paper type.
- 2) Press [OK].

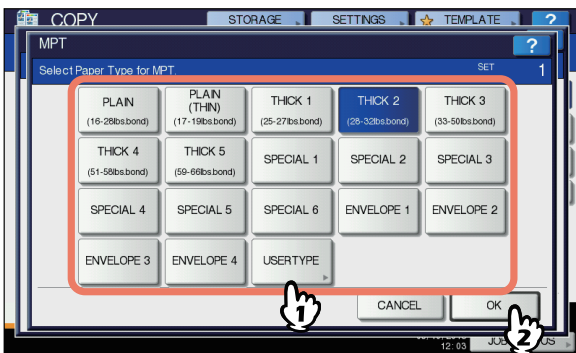

! Note

- If you select a wrong paper type, this could cause a paper misfeed or significant image trouble.
- When you select a paper type, you can confirm it with the icons displayed on the equipment status indication area as shown below.

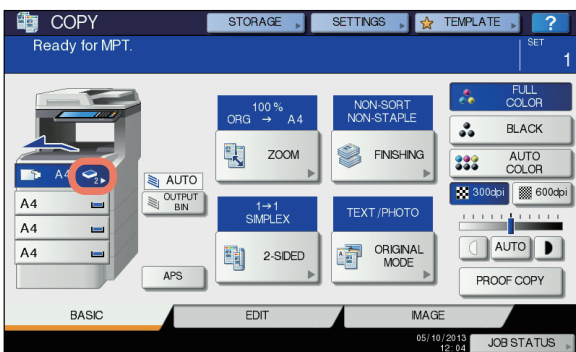

| Paper type | Icon |
|--------------|------|
| PLAIN | — |
| PLAIN (THIN) | |
| THICK 1 | |
| THICK 2 | |
| THICK 3 | |
| THICK 4 | |
| THICK 5 | |
| SPECIAL 1 | |
| SPECIAL 2 | |
| SPECIAL 3 | |
| SPECIAL 4 | |
| SPECIAL 5 | |
| SPECIAL 6 | |
| ENVELOPE 1 | |
| ENVELOPE 2 | |
| ENVELOPE 3 | |
| ENVELOPE 4 | |

9 After setting the paper size and type, press [OK].

The menu returns to the BASIC menu.

10 Select other copy modes as required, and then press the [START] button on the control panel.


! Note

- When you copy on sheets of OHP film, remove the copied OHP film one sheet at a time as they exit onto the receiving tray. If the sheets of OHP film pile up, they may get curled and may not be projected properly.


■ Copying on other than the above standard sizes of paper

1 Place the original(s) and paper in the same procedure noted in steps 1 to 5 in "Copying on A4 and B5 size paper (in equipment other than for North America) / LT and LG size paper (in equipment for North America)" (📖 P.36)

2 Press [SIZE SETTING] on the touch panel.

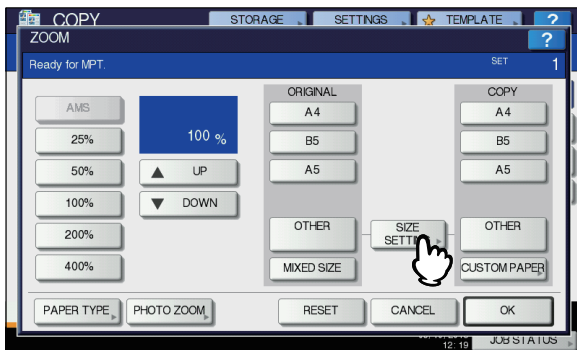


3 Press the button of the same size as the paper you placed on the multi-purpose tray.

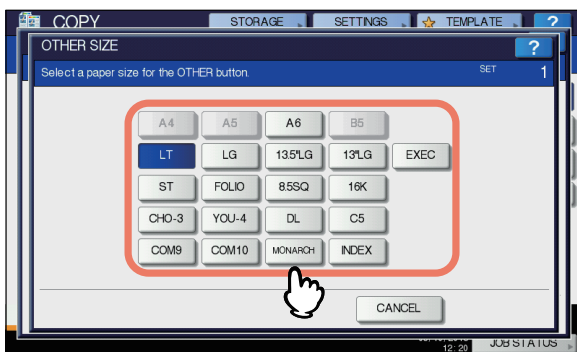

The selected size will be registered as an "OTHER" size.

4 Press [OTHER] under "COPY".

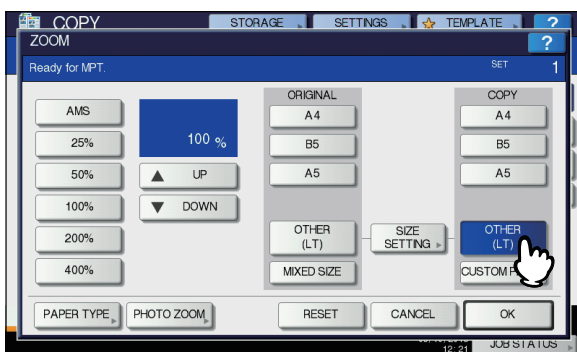

The paper size is now set to the one registered as "OTHER" size.

! Note


- If the paper size is not selected in this step, copying may be slowed down.

5 Press [PAPER TYPE] if the paper you placed on the multi-purpose tray is other than plain paper.



6 Select the paper type.

- 1) Select the paper type.
- 2) Press [OK].

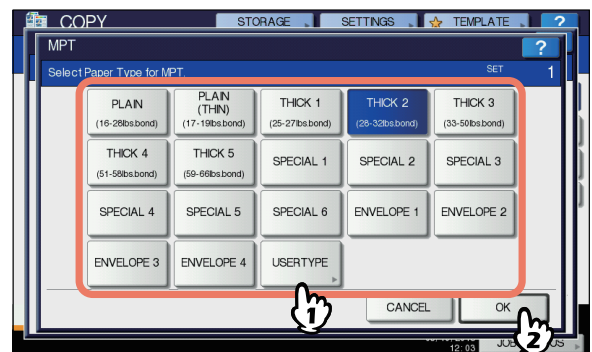

! Note

- If you select a wrong paper type, this could cause a paper misfeed or significant image trouble.
- When you select a paper type, you can confirm it with the icons displayed on the equipment status indication area. For details, see the following page: Table in step 6 in "Copying on A4 and B5 size paper (in equipment other than for North America) / LT and LG size paper (in equipment for North America)" (📖 P.36)

7 After setting the paper size and paper type, press [OK].

The menu returns to the BASIC menu.

8 Select other copy modes as required, and then press the [START] button on the control panel.

■ Copying on an envelope


! Note

- The acceptable envelope sizes are as follows:
DL (110 mm x 220 mm), COM10 (4 1/8" x 9 1/2"), Monarch (3 7/8" x 7 1/2"), CHO-3 (120 mm x 235 mm), YOU-4 (105 mm x 235 mm)

Notes for using envelopes

Do not use the following envelopes as they may cause paper misfeeding or damage to the equipment.


1. Badly curled, wrinkled or folded envelopes
2. Extremely thick or thin envelopes
3. Wet or damp envelopes
4. Torn envelopes
5. Envelopes which include the contents
6. Non-standard size envelopes (ones with a special shape)
7. Envelopes with eyelets or windows
8. Envelopes sealed with adhesive paste or tape
9. Partly-opened or perforated envelopes
10. Envelopes with special coating on the surface
11. Envelopes with glue or double-sided adhesive tape

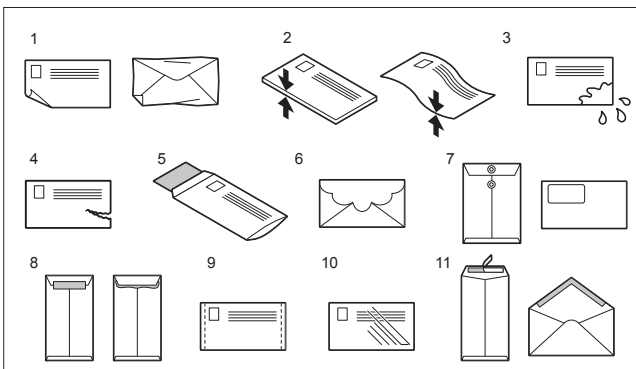

! Note


- Store envelopes at room temperature and away from heat and moisture.

1 Place the original on the original glass.

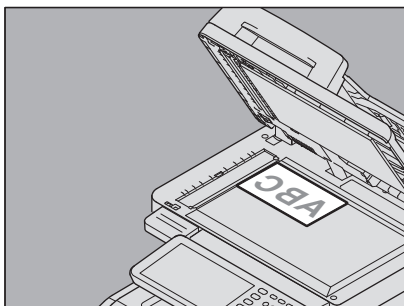

2 Place the envelope on a flat clean surface and press it with your hands in the direction of the arrow to expel any air.


Press it well to prevent the flap from rolling upward.

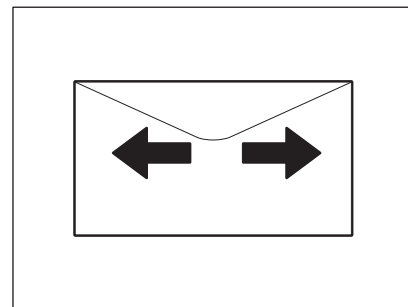


Correct any bent corners on the envelope.

3 Place the envelope with its copy side face up on the multi-purpose tray.

Place the envelope with its flap side at the front.

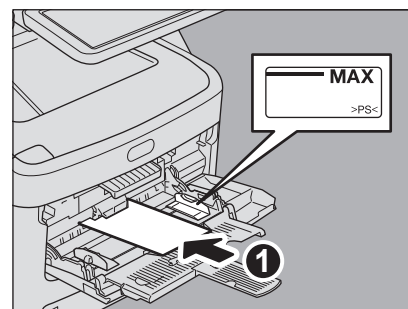


4 Align the side guides to the length of the envelope, and push the blue set button.

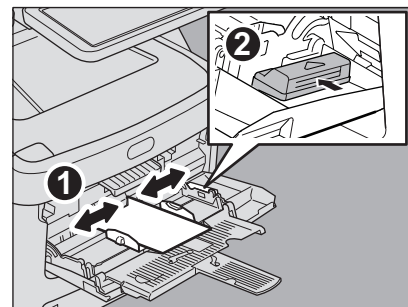


5 Press [MPT] on the touch panel.




6 Press [ZOOM] on the touch panel.

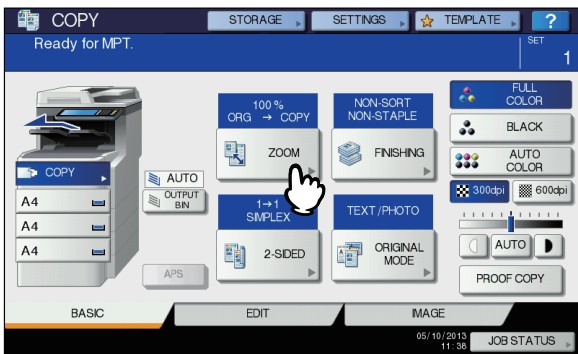

7 Press [SIZE SETTING] on the touch panel.

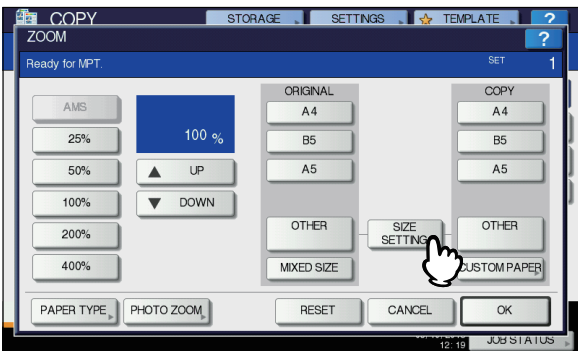


8 Press the button of the same size as the envelope you placed on the multi-purpose tray.

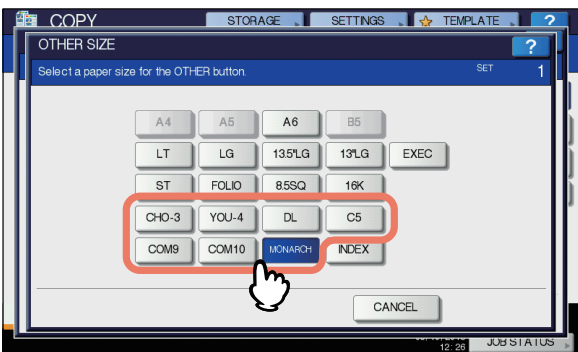

The size of the selected envelope will be registered as an "OTHER" size.

9 Press [OTHER] under "COPY".

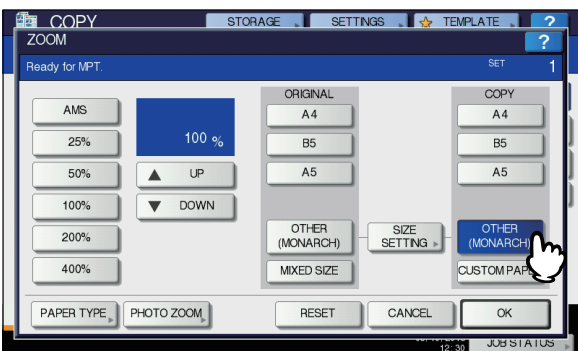

The paper size is now set to the size of the envelope placed on the multi-purpose tray. The paper type is automatically set to [ENVELOPE].

10 Select other copy modes as required, and then press the [START] button on the control panel.

Copying starts.


When the Inner Finisher is installed, the envelope exits to the receiving tray of the finisher.



- Every 10 copies, take the envelopes out from the face down/up stacker.


Bypass copying on non-standard size paper

You can use non-standard size paper within the sizes shown on the right.

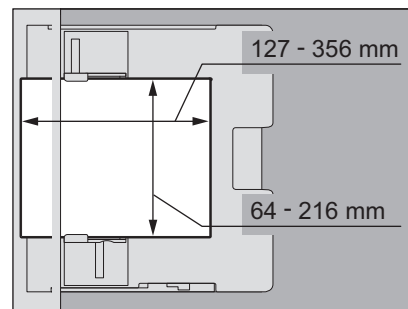


1 Place the original on the original glass.

2 Place the paper with its copy side face up on the multi-purpose tray.

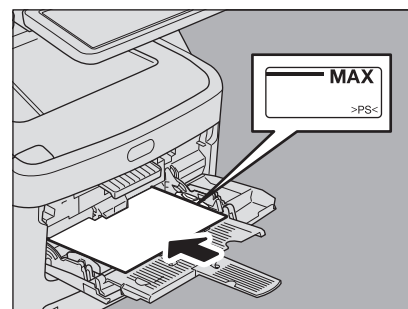

- The height of the paper must not exceed the indicator on the side guides.
- When you use more than one sheet of paper, fan the sheets well before placing them on the multi-purpose tray. Be careful not to cut your fingers when fanning.
- Do not push paper into the entrance of the bypass feeder. This could cause a paper misfeed.


3 Align the side guides to the paper length, and push the blue set button.

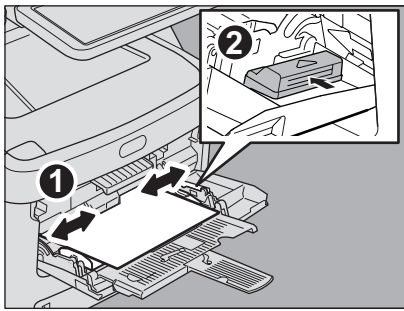


4 Press [MPT] on the touch panel.



5 Press [ZOOM] on the touch panel.

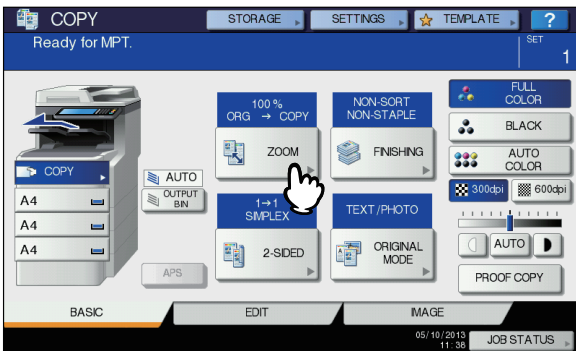

6 Press [CUSTOM PAPER] on the touch panel.

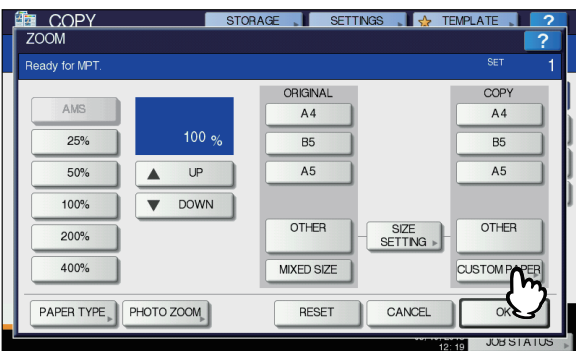


7 Key in the dimension.


- 1) Press [Length] and key in the value. (127mm to 356mm)
- 2) Press [Width] and key in the value. (64mm to 216mm)
- 3) Press [OK].



Length and width are indicated as shown on the right:

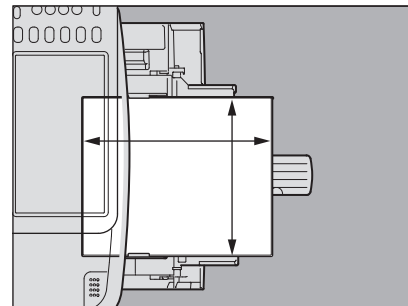

To call up the dimension data registered previously, press the desired button from [MEMORY 1] to [MEMORY 4], and then press [OK].

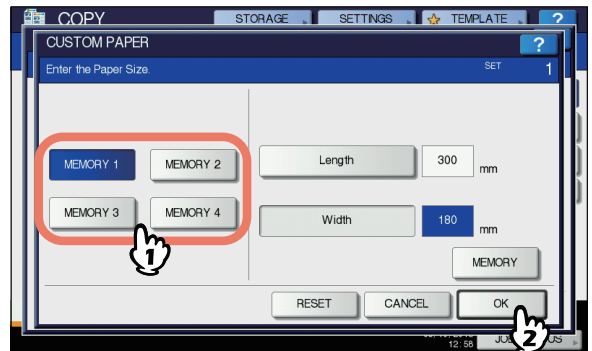


Memo

- To register dimension data into the memory, see the following page:
[P.42 "Registering non-standard size in the memory"](#)

8 Select other copy modes as required, and then press the [START] button on the control panel.

■ Registering non-standard size in the memory


- 1 Follow the same procedure noted in steps 1 to 6 in "Bypass copying on non-standard size paper" (P.40) .
- 2 Register dimensions.
 - 1) Select a desired memory number.
 - 2) Press [Length] and key in the value. (127mm to 356mm)
 - 3) Press [Width] and key in the value. (64mm to 216mm)
 - 4) Press [MEMORY].

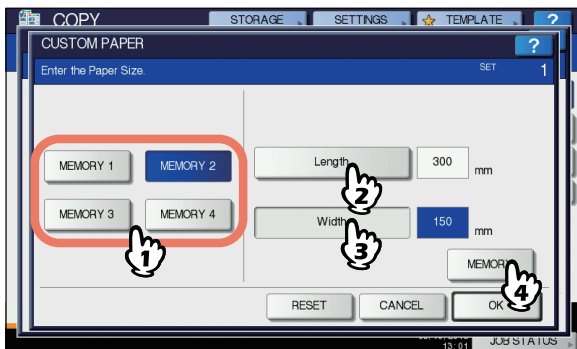


Using the Offline Stapler

You can use the stapler when installing the offline stapler.


- 1 Open the offline stapler cover.

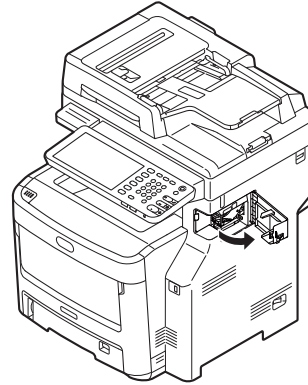

- 2 Insert paper deep into the stapler. Paper is automatically stapled.

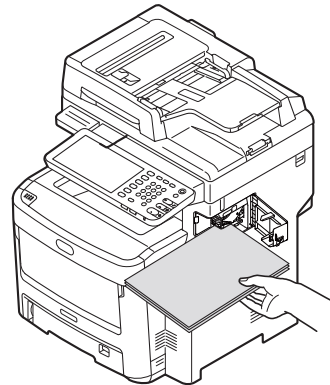

- 3 Remove paper and close the offline stapler cover.

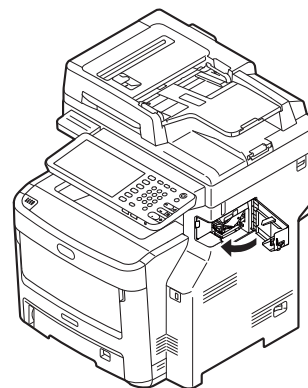

BASIC COPY MODES

Before Using Copying Functions

Default settings



This equipment is under its “default settings” when the power is turned ON, namely, if no setting change has been applied yet, the equipment’s settings return to the default ones when the energy saving mode is cleared or the [RESET] button on the control panel is pressed. The default settings for basic copy modes at installation are shown below.

| Item | Default setting |
|----------------------------------|---|
| Reproduction ratio | 100% |
| Copy quantity | 1 |
| Paper selection | Automatic Paper Selection (APS) |
| Simplex/Duplex | 1-sided original -> 1-sided copy |
| Density adjustment | Manual adjustment |
| Color mode | FULL COLOR |
| Original mode | TEXT/PHOTO |
| Finishing mode | When using the original glass: NON-SORT NON-STAPLE When using the RADF (Reversing Automatic Document Feeder): SORT |
| Feeding mode when using the RADF | Continuous feed mode |

The default settings are changeable.

Confirming the set functions

If you press [SETTINGS] on the touch panel, the menu shown below is displayed. On this menu, you can view the functions that are currently set.

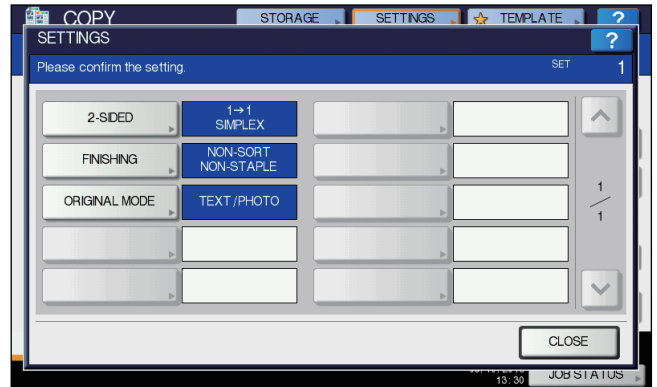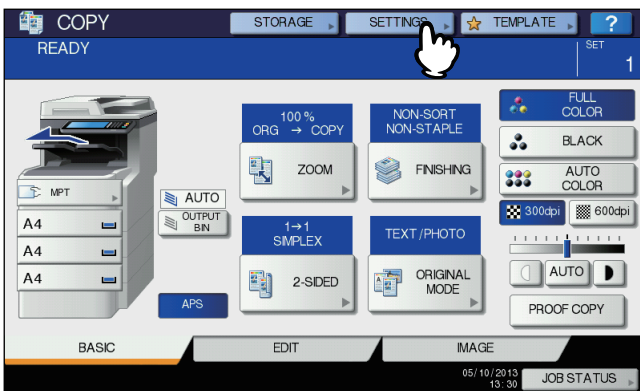


Switching to the function setting menu


To change the functions on the current menu, press the corresponding buttons. The desired setting menu will then appear.

Clearing the set functions

If you want to clear any copy function setting, press [RESET] on the corresponding setting menu.

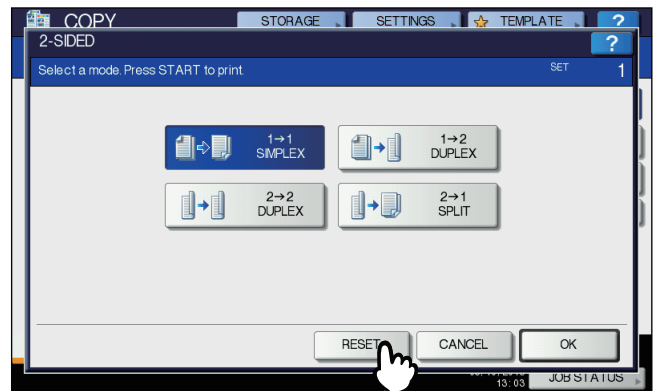

However, for FULL IMAGE on the EDIT menu, also press the highlighted button to clear the setting.

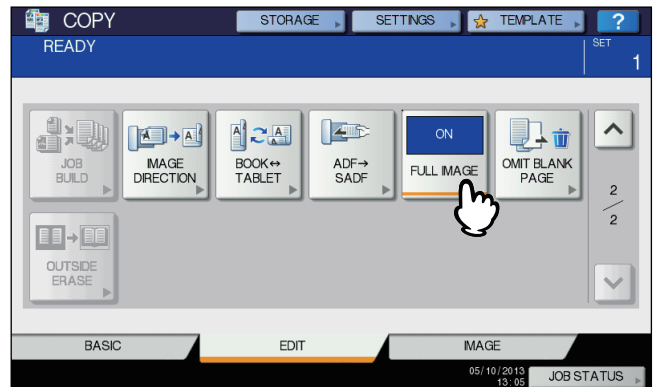

Clearing all settings changed

When you press the [RESET] button on the control panel, all the function changes will be cleared.

Even if you do not do so, the changes will be cleared if the equipment is left idle for 45 sec. (default setting).

Restrictions on function combinations

Several copy functions can be used together. However some functions may not be used with other ones. For details, see the following Guide:

Advanced Guide

Paper Selection


Automatic Paper Selection (APS)

This equipment detects the size of an original and selects paper of the same size automatically. This function is called Automatic Paper Selection (APS).

Memo

- For the original sizes detectable, see the following page: [P.28 "Acceptable originals"](#)
- Some original sizes may not be detected with this function. In this case, select the desired size manually. [P.44 "Selecting desired paper manually"](#)

- 1 Place paper in the tray(s).
- 2 Place the original(s).
- 3 Press [APS] on the touch panel.

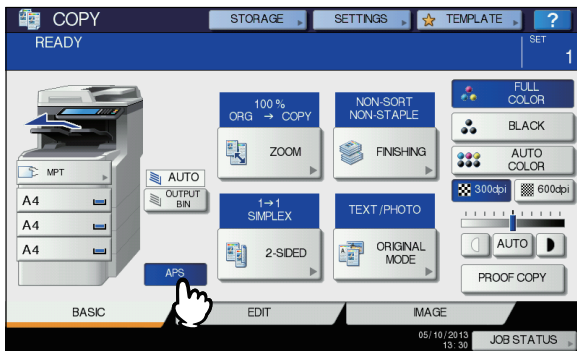

The paper selection mode is now set at Automatic Paper Selection.

Memo

- The paper selection mode is set at Automatic Paper Selection by default.

- 4 Select other copy modes as required, and then press the [START] button on the control panel.

Selecting desired paper manually

You need to select paper by yourself when copying by placing the original on the original glass, or when copying the following originals whose sizes cannot be detected correctly:

- Highly transparent originals (e.g. OHP film, tracing paper)
- Totally dark originals or originals with dark borders
- Non-standard size originals (e.g. newspapers, magazines)

Memo

- When paper of the size you want to use is not in any tray, place it in a tray or on the bypass multi-purpose tray (MPT).

[P.35 "Bypass Copying"](#)

- 1 Place paper in the tray(s).
When using bypass copying, be sure to set the paper size.
- 2 Place the original(s).
- 3 Press the tray button corresponding to the desired paper size.



- 4 Select other copy modes as required, and then press the [START] button on the control panel.

Copying mixed-size originals in one operation

You can copy a set of originals whose sizes are individually different, using the RADF (Reversing Automatic Document Feeder).


The original sizes that can be mixed are as follows:

North America: LG, LT


Other than North America: A4, B5, FOLIO

- 1 Place paper in the tray(s).**
The multi-purpose tray cannot be used. Use the trays.
- 2 Adjust the side guides to the widest original, and then align the originals against the side guide on the front side.**

When original widths are the same

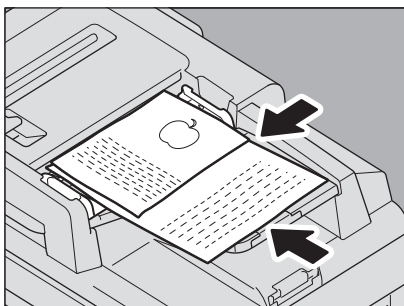


When original widths are not the same

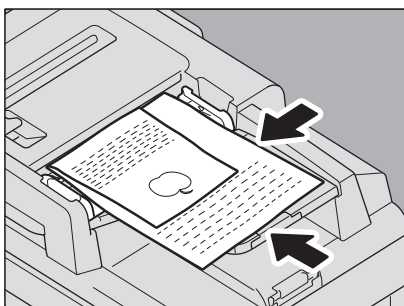


Note

- When copying originals of different widths, the copied image of the smaller one may be skewed because it does not touch the side guide on the rear side.

- 3 Press [ZOOM] on the touch panel.**

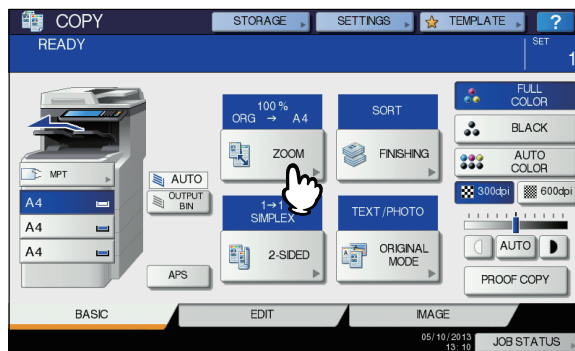


- 4 Press [MIXED SIZE].**

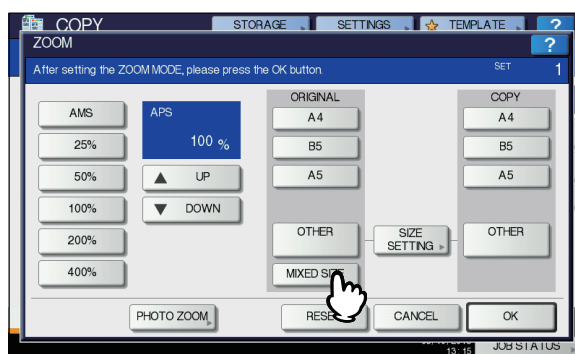

- 5 Press [AMS] to make copies on paper in one size. To make copies on paper of the same size as the originals, press [OK] or [CANCEL] so that the menu returns to the BASIC menu, and then press [APS].**

When [AMS] is selected:

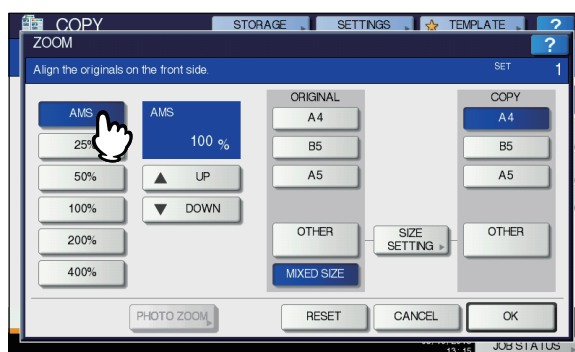

Note

- Before you use Automatic Paper Selection, be sure that all paper sizes corresponding to the original sizes have been placed in the tray.

- 6 Select other copy modes as required, and then press the [START] button on the control panel.**

Switching Color Modes

You can switch the color mode. There are 3 color modes as shown below.

FULL COLOR: All originals are copied in full colors. (Default)

BLACK: All originals are copied in black and white.

AUTO COLOR: The equipment automatically judges the type of each color on originals. Colored originals are copied in full colors and black-and-white originals are copied in black and white.

Switching color modes

Press any of [FULL COLOR], [BLACK] or [AUTO COLOR] on the touch panel.



Note

- When you select [AUTO COLOR], some originals may not be copied exactly as they look, such as the cases shown below. Select either [FULL COLOR] or [BLACK].
- When color originals are copied in black**
Example:
 - Originals whose colored area is extremely small
 - Originals which are completely black
 - Originals whose colors are light
- When black originals are copied in full colors**
Example:
 - Yellowish originals
 - Originals with a colored background

Memo

- The sensitivity to detect whether the data scanned in auto color are color or black can be changed. For details, refer to the **Advanced Guide**.

Setting Original Modes

You can make copies with the optimal image quality by selecting the following modes for your original. The selectable original mode differs depending on the color mode as shown in the table below. Select the color mode first, and then the original mode.

| Original mode | Description |
|-----------------|---|
| TEXT/PHOTO | Originals with text and photographs mixed |
| TEXT | Originals with text (or text and line art) only |
| PRINTED IMAGE | Originals with photogravure (e.g. magazine, brochure) |
| PHOTO | Originals with general photographs on photographic printing paper |
| | Originals with photographs |
| MAP | Originals with fine illustrations or text |
| IMAGE SMOOTHING | Originals with text and photographs mixed (especially originals requiring higher reproducibility on photos) |

| Original mode | Color mode | | |
|-----------------|------------|-------|------------|
| | FULL COLOR | BLACK | AUTO COLOR |
| TEXT/PHOTO | Yes | Yes | Yes |
| TEXT | Yes | Yes | Yes |
| PRINTED IMAGE | Yes | — | Yes |
| PHOTO | Yes | — | — |
| | — | Yes | — |
| MAP | Yes | — | — |
| IMAGE SMOOTHING | — | Yes | — |

Memo

- TEXT/PHOTO is set by default. The default setting can be changed in each color mode. For details, refer to the **Advanced Guide**.



1 Press [ORIGINAL MODE] on the touch panel.



2 Select the original mode, and then press [OK].

The selectable original modes differ depending on the color modes currently set.

Example: When the color mode is "FULL COLOR"

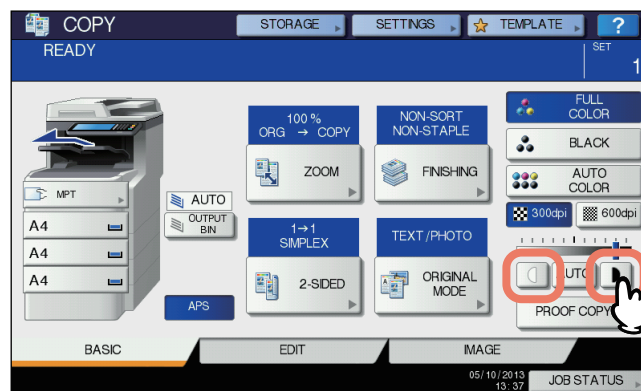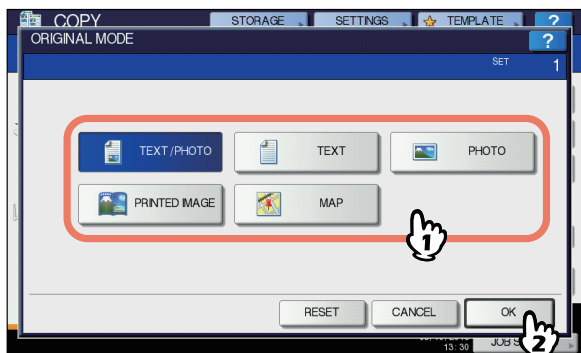


Density Adjustment

This equipment detects the density level of originals and automatically adjusts the density level of the copied image to the optimal one. Alternatively, you can manually adjust it to the desired level.

Adjusting automatically (automatic density adjustment)

Press [AUTO] on the touch panel.

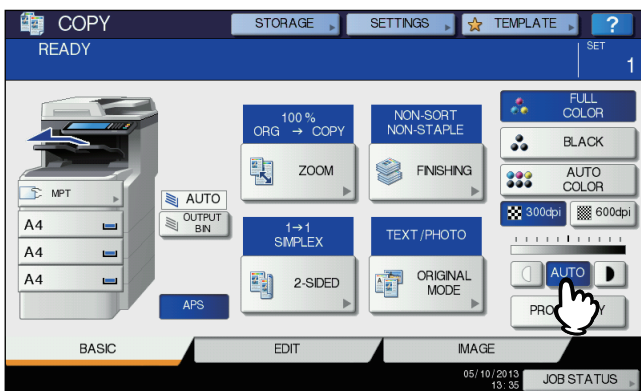

Memo

- The default setting of the automatic density adjustment is as follows according to the color modes:

FULL COLOR or AUTO COLOR: OFF
BLACK: ON

Adjusting manually

Press either or to select the desired density level.

Enlargement and Reduction Copying

You can change the reproduction ratio of copied images in the following procedures:

Automatic Magnification Selection (AMS):

You need to specify the copy paper size in advance. Then this equipment will detect the original size and automatically select the optimal reproduction ratio for the copy paper size.

Specifying both original size and copy paper size separately:

You need to specify both the original size and the copy paper size separately in advance. According to the sizes you specified, the optimal reproduction ratio is selected automatically. This feature is used when Automatic Magnification Selection is not available, such as when copying OHP film originals.

Specifying reproduction ratio manually:

You can select the desired reproduction ratio by pressing [ZOOM] or one-touch zoom buttons on the touch panel.

Copying photo originals in the optimal reproduction ratio for copy paper size (PHOTO ZOOM)

You can copy photo originals in the reproduction ratio best suited to the copy paper size.

Memo

- The available range of reproduction ratio differs depending on whether the original is placed on the original glass or on the RADF (Reversing Automatic Document Feeder).
 Original glass: 25 to 400%
 RADF: 25 to 200%

Automatic Magnification Selection (AMS)

Specify the copy paper size in advance so that this equipment will detect the original size and automatically select the optimal reproduction ratio to the copy paper size.

This function is available when the size of the originals is as follows:


North America: LG, LT

Other than North America: A4, B5 and FOLIO (FOLIO is available only when the RADF is used.)


Note

- This function does not work properly for the originals noted below. Select other methods when copying them.
- Highly transparent originals (e.g. OHP film, tracing paper)
- Totally dark originals or ones with dark borders
- Non-standard size originals (e.g. newspapers, magazines)

- 1 Place paper in the tray(s).
- 2 Press [ZOOM] on the touch panel.

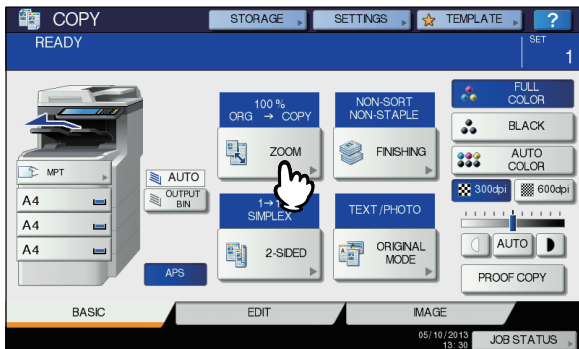

- 3 Select the desired paper size, press [AMS] and then [OK].

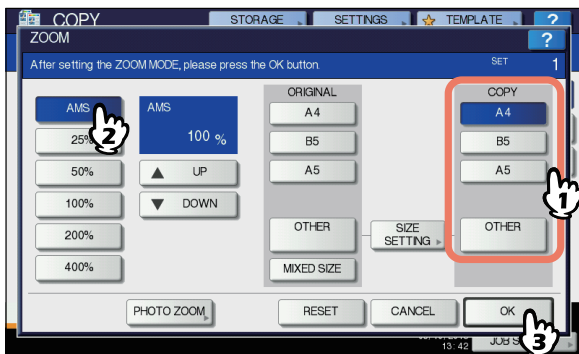

Memo


- If you want to select a paper size other than the following, you need to register the size as "OTHER". Once you register this size, it will be specified every time you press [OTHER] on the touch panel.
North America: LG, LT,ST
Other than North America: A4, B5
For how to register, see the following page:
[P.49 "Registering paper sizes to "OTHER" size"](#)
- Paper sizes can also be registered by pressing the desired tray button of the equipment status indication area on the BASIC menu.

- 4 Place the original(s).
If the original is placed on the original glass, the reproduction ratio is set when the original is placed. If the original is placed on the RADF, the reproduction ratio is set when the original is scanned.


- 5 Select other copy modes as required, and then press the [START] button on the control panel.

Specifying both the original size and the copy paper size separately

- 1 Place paper in the tray(s).
- 2 Place the original(s).
- 3 Press [ZOOM] on the touch panel.

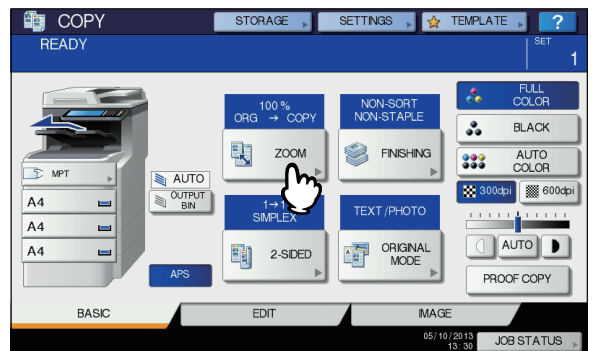

- 4 Select the desired sizes for the original and copy paper, and then press [OK].

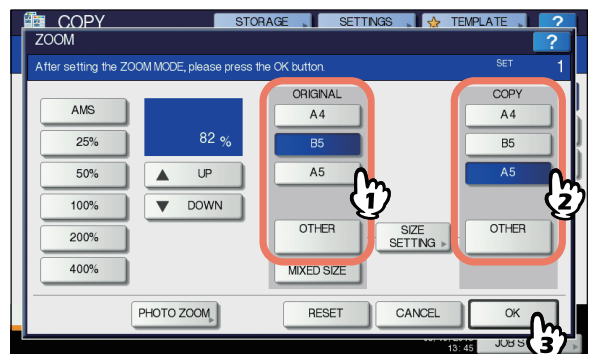

Memo

- If you want to select a size other than the following for the original size and copy paper size, you need to register the size as "OTHER". Once you register this size, it will be specified every time you press [OTHER] on the touch panel.
North America: LG, LT,ST
Other than North America: A4, B5
For how to register, see the following page:
[P.49 "Registering paper sizes to "OTHER" size"](#)
- Paper sizes can also be registered by pressing the desired tray button of the equipment status indication area on the BASIC menu.

- 5 Select other copy modes as required, and then press the [START] button on the control panel.

■ Registering paper sizes to “OTHER” size


If you want to select a size other than the following for the original size and copy paper size, you need to register the size as “OTHER” following the procedures below. Once you register this size, it will be specified every time you press [OTHER] on the touch panel.

North America: LG, LT,ST
 Other than North America: A4, B5


! Note

- You can register only standard sizes as [OTHER] and cannot register any non-standard sizes.

- 1 Press [SIZE SETTING] on the touch panel.

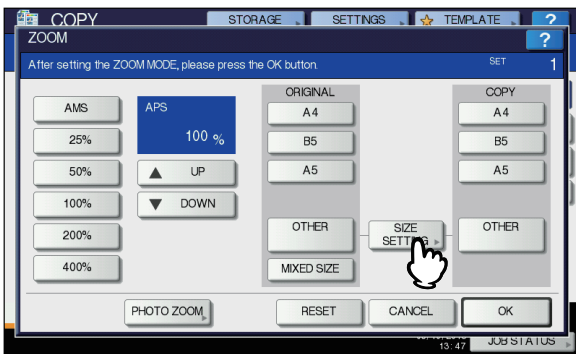


- 2 Select the desired size.

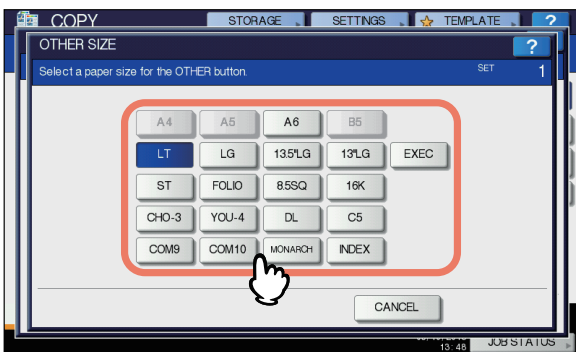

The selected size will be registered as an “OTHER” size.

Specifying reproduction ratio manually

- 1 Place paper in the tray(s).
- 2 Place the original(s).
- 3 Press [ZOOM] on the touch panel.

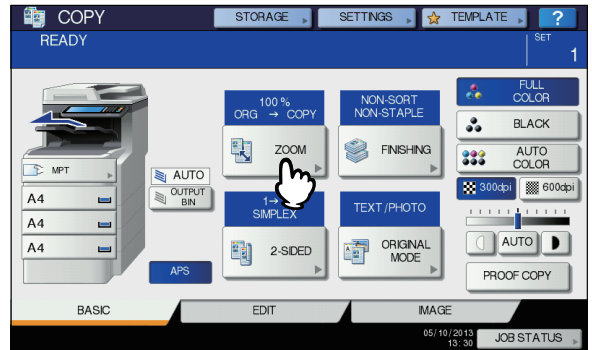

- 4 Press the buttons below to select the desired reproduction ratio.

[▲ UP] and [▼ DOWN] buttons


The reproduction ratio changes by 1% every time either of them is pressed. When you hold either down, the ratio goes up or down automatically.

One-touch zoom buttons


Select the desired ratio from [400%], [200%], [100%], [50%] and [25%].

! Note

- When the RADF is used, the maximum ratio available is 200%.

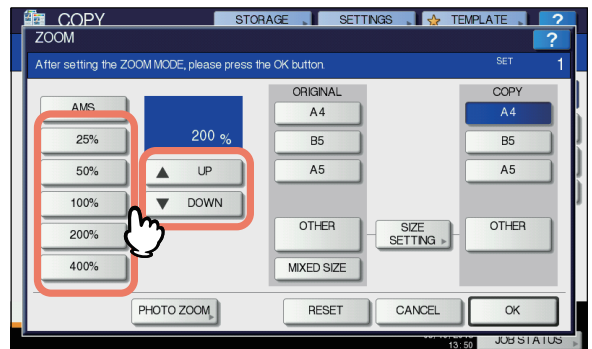

- 5 Select the desired size, and then press [OK].

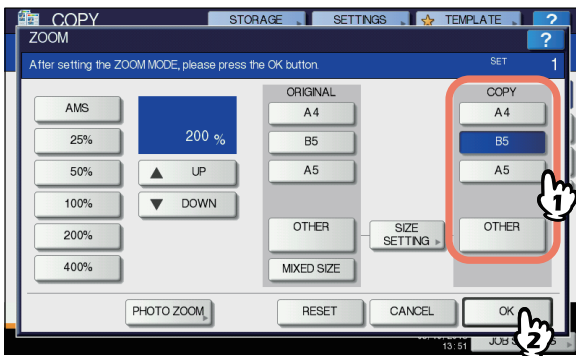

Note

- If you want to select a paper size other than the following, you need to register the size as "OTHER". Once you register this size, it will be specified every time you press [OTHER] on the touch panel.
North America: LG, LT,ST
Other than North America: A4, B5
For how to register, see the following page:
[P.49 "Registering paper sizes to "OTHER" size"](#)
- Paper sizes can also be registered by pressing the desired tray button of the equipment status indication area on the BASIC menu.

- 6 Select other copy modes as required, and then press the [START] button on the control panel.


Copying photo originals in the optimal reproduction ratio for copy paper size (PHOTO ZOOM)

- 1 Place paper in the tray(s).
- 2 Place the original on the original glass in a landscape direction.


- 3 Press [ZOOM] on the touch panel.



- 4 Press [PHOTO ZOOM].

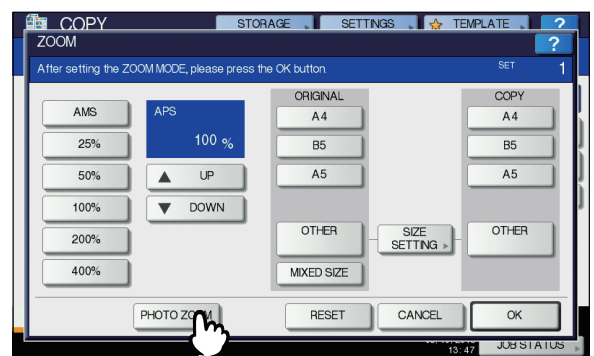

- 5 Select the original size.

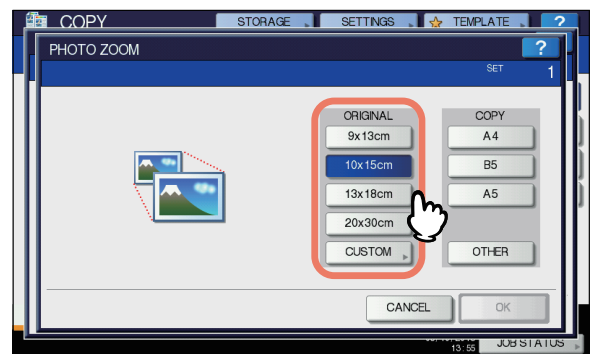

Note

- The actual size for the [3" x 5"] button is 3.5" x 5.0".


Memo

- When the size of the original is other than the ones below, key in the dimension of the original manually.
North America: 3" x 5", 4" x 6", 5" x 7" or 8" x 10"
Other than North America: 9 x 13 cm, 10 x 15 cm, 13 x 18 cm or 20 x 30 cm
[P.51 "Setting photo originals in other sizes"](#)

6 Select the desired copy paper size, and then press [OK].

Note

- If you want to select a paper size other than the following, you need to register the size as "OTHER" size. In this case, register it in a landscape direction. Once you register this size, it will be specified every time you press [OTHER] on the touch panel.
North America: LG, LT,ST
Other than North America: A4, B5
For how to register it, see the following page:
[P.49 "Registering paper sizes to "OTHER" size"](#)

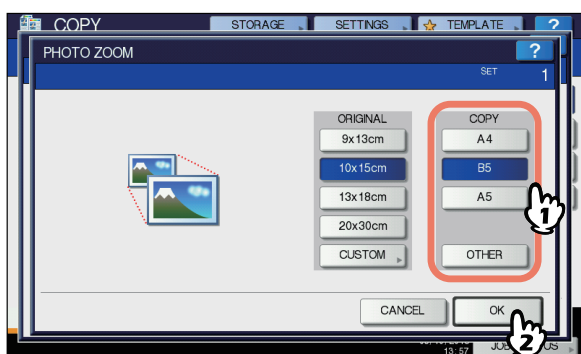

7 Select other copy modes as required, and then press the [START] button on the control panel.

If "NON-SORT NON-STAPLE" is selected as a sorting mode, scanning of the original starts. If another sorting mode is selected, follow the procedure below.

8 Place the next original, and then press [NEXT COPY] on the touch panel or the [START] button on the control panel.


Scanning of the next original starts. If you have more than one original, repeat this step until the scanning of all the originals is finished.

9 When the scanning of all the originals is finished, press [JOB FINISH] on the touch panel.

Copying starts.


Setting photo originals in other sizes

1 Press [CUSTOM] on the touch panel.

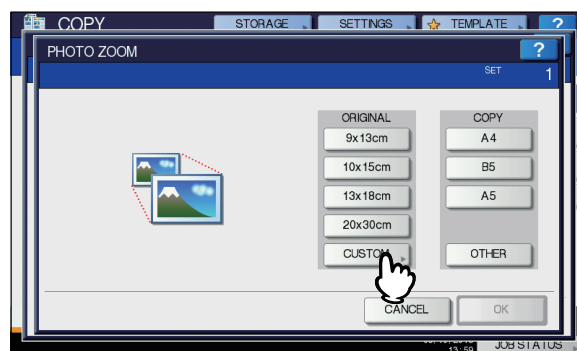

2 Key in the size of the original.

- 1) Press [X] on the touch panel and key in its width within 10 to 434 mm (0.39" to 17.09").
- 2) Press [Y] on the touch panel and key in its length within 10 to 300 mm (0.39" to 11.81").
- 3) Press [OK] on the touch panel.

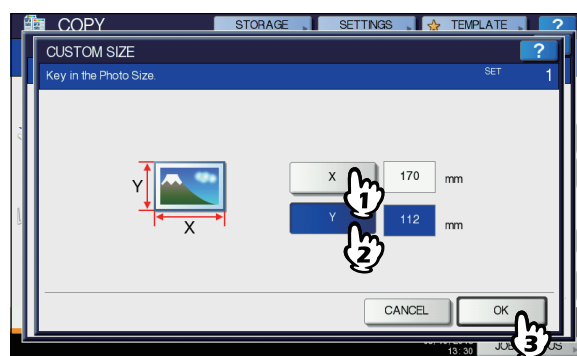

Selecting Finishing Mode

Finishing modes and optional finishing devices

See the table below for each finishing mode.

| Finishing mode | Description |
|--|--|
| Non-sort Non-staple | Copies exit without being sorted or stapled. |
| Sort (P.52) | Copies exit in the same page order as the originals one set after another. |
| Group (P.52) | Copies grouped by page exit. |
| Staple sort (P.53) | Copies exit with their corner stapled. |
| Magazine sort (P.54) | Copies exit in a book-type page order. |

The available finishing modes differ depending on the type of optional finishing devices (Inner Finisher) installed. Finishing devices available for this equipment are as follows:

BASIC COPY MODES

Finisher


- Inner Finisher MJ-1038

Use the table below to check the available finishing modes.

| Finishing mode | Devices | |
|---------------------|---------|-----------|
| | MJ-1038 | No device |
| Non-sort Non-staple | Yes | Yes |
| Sort | Yes | Yes |
| Group | Yes | Yes |
| Staple sort | Yes | — |
| Magazine sort | Yes | Yes |

■ Name of each part of the Finisher

MJ-1038

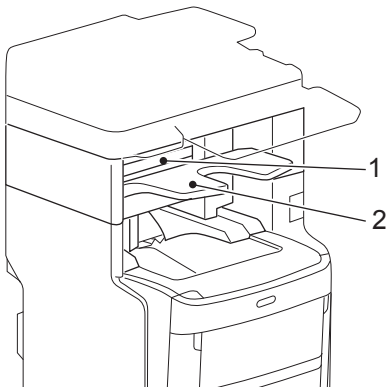

1. Upper cover
2. Receiving tray


⚠ CAUTION

- Do not let your hand come close to the tray moving up or down. The hand may get caught, which may result in personal injury.


Sort/Group mode

When you make more than one set of copies, they can be made to exit in the same page order as that of the originals. This mode is called the sort mode. Copies can also be made to exit grouped by page. This mode is called the group mode.

Sort mode

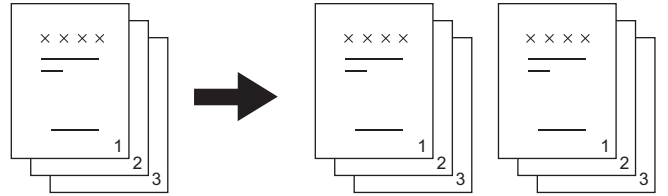

Group mode

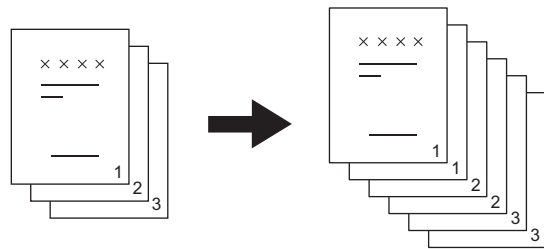

1 Place paper in the tray(s).

2 Place the original(s).


! Note

- When you place originals on the RADF (Reversing Automatic Document Feeder), the display of the sorting mode button will change to "SORT".

3 Press [FINISHING] on the touch panel.



- 4 Select [SORT] or [GROUP], and then press [OK].

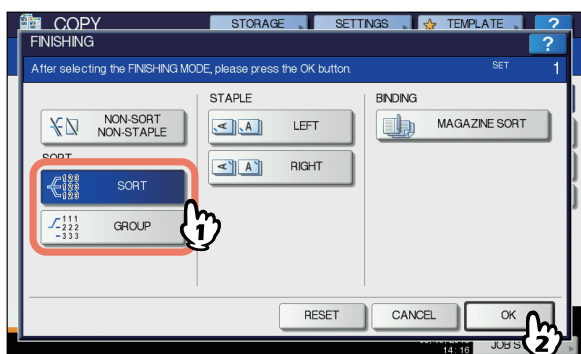


- 5 Key in the desired number of copies.
- 6 Select other copy modes as required, and then press the [START] button on the control panel.

Staple sort mode

When you make more than one set of copies, the copied paper can be automatically stapled set by set. This mode is called the staple sort mode. You can choose from 2 different stapling positions.

Example: When [LEFT] is selected

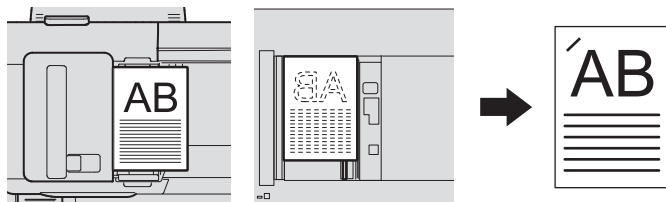


Note


- Special paper such as OHP film or sticker labels is not applicable.
- Copies in different sizes cannot be stapled unless their length is the same.

- 1 Place paper in the tray(s).
When using bypass copying, be sure to set the paper size.
- 2 Place the original(s).

- 3 Press [FINISHING] on the touch panel.

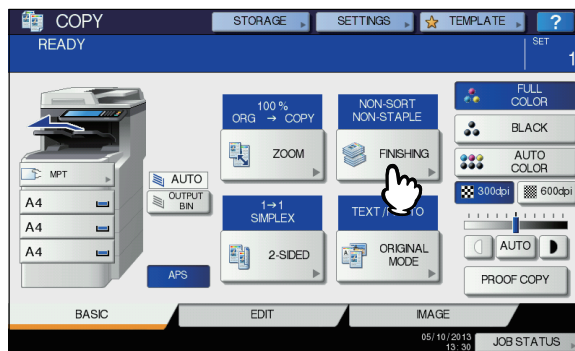

- 4 Select the desired stapling position from [LEFT] or [RIGHT] and then press [OK].

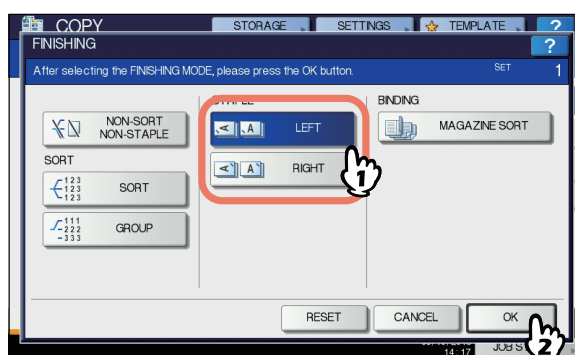

- 5 Select other copy modes as required, and then press the [START] button on the control panel.

Memo

- When the number of sheets exceeds the maximum number of sheets available for stapling, this equipment automatically enters into the sort mode.

Maximum number of sheets available for stapling

The maximum number of sheets available for stapling differs depending on the type of the finishing device installed, paper size or paper weight.

Inner Finisher MJ-1038

| Paper size | Paper weight | | |
|-------------------------|--|--|---|
| | 60 - 80 g/m ² (16 - 20 lb. Bond) | 81 - 90 g/m ² (21 - 24 lb. Bond) | 91 - 105 g/m ² (25 - 28 lb. Bond) |
| A4, B5, LT, 8.5"SQ, 16K | 50 sheets | 50 sheets | 30 sheets |
| FOLIO, LG, 13"LG, 8K | 30 sheets | 30 sheets | 15 sheets |


Note

- 2 cover sheets (106 to 209g/m² (29 lb. Bond to 110 lb. Index)) can be added. In this case, the number of sheets available includes the 2 cover sheets.

Magazine sort

You can copy more than one original and bind them in a booklet format (Magazine sort).

Magazine sort mode

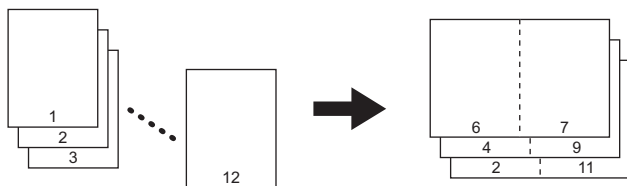

1 Place paper in the tray(s).

Note

- Special paper such as OHP film or sticker labels is not applicable.


2 Select the desired paper size.

3 Place the original(s).


When placing the originals on the RADF, place them according to the illustration on the previous page. When placing the originals on the original glass, place them in the following order:

Magazine sort: Place the first page of the original first.

4 Press [FINISHING] on the touch panel.

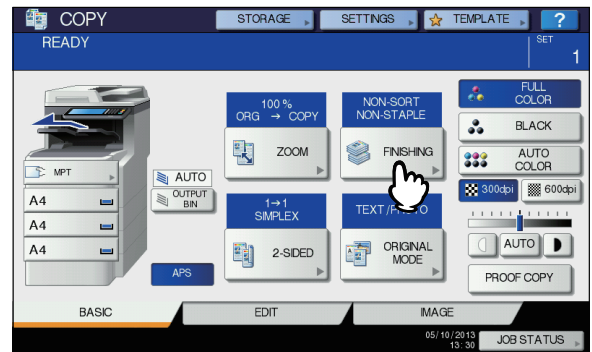

5 Select the desired mode from [MAGAZINE SORT].

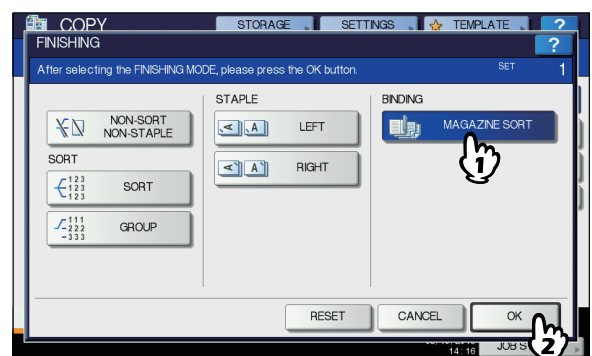


6 Select other copy modes as required, and then press the [START] button on the control panel


Duplex Copying

You can copy a 1-sided original to a 2-sided copy or vice versa, or copy a 2-sided original to a 2-sided copy. This is useful when you want to save the paper, or when you want to copy a book-type original maintaining the same page order.


1-sided original -> 1-sided copy (P.55)

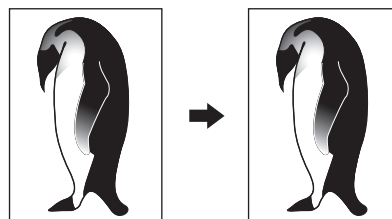


2-sided original -> 1-sided copy (P.55)

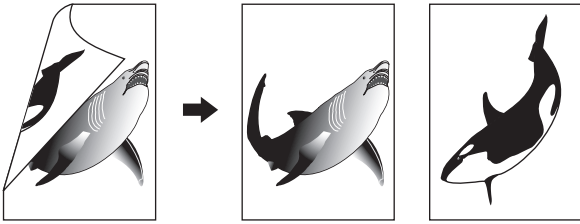

1-sided original -> 2-sided copy (P.56)

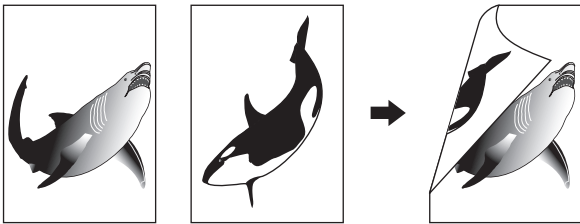

2-sided original -> 2-sided copy (P.56)

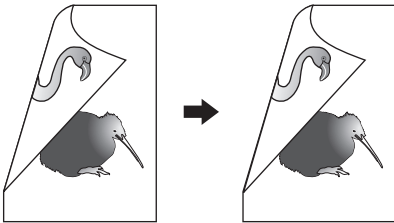



Note

- Use plain or THICK 1 for duplex copying.

Making a 1-sided copy

Memo

- When you copy 2-sided portrait originals which open to the left/right on only 1 side of the paper, use the image direction function on the EDIT menu so that all the copied paper will exit in the proper direction.

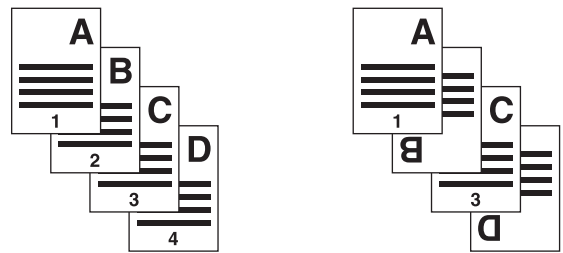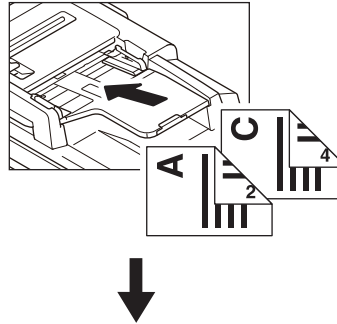


- 1 Place paper in the tray(s).**
When using bypass copying, be sure to set the paper size.
- 2 Place the original(s).**
- 3 Press [2-SIDED] on the touch panel.**



4 Select the desired mode, and then press [OK].

[1->1 SIMPLEX]: 1-sided original to 1-sided copy
 [2->1 SPLIT]: 2-sided original to 1-sided copy

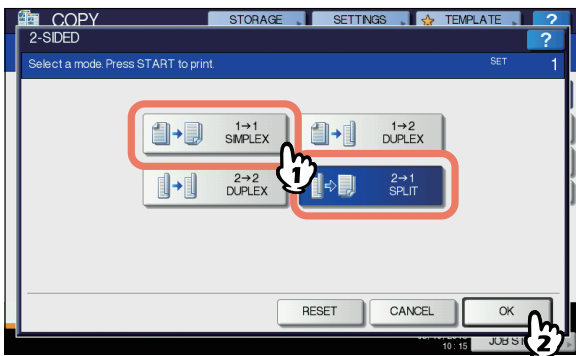


5 Select other copy modes as required, and then press the [START] button on the control panel.

Making a 2-sided copy

Memo

- If 1-sided portrait originals have been placed in a landscape direction and you copy them on both sides of the paper, copied sheets are usually in the open to top/bottom direction. You can make copies in the open to left/right direction with the image direction function.

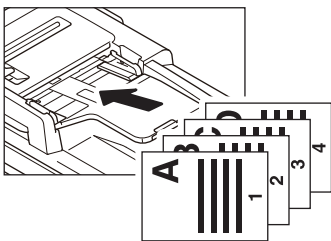

1 Place paper in the tray(s).

When using bypass copying, be sure to set the paper size.


2 Place the original(s).

3 Press [2-SIDED] on the touch panel.



4 Select the desired mode, and then press [OK].

[1 -> 2 DUPLEX]: 1-sided original to 2-sided copy
 [2 -> 2 DUPLEX]: 2-sided original to 2-sided copy

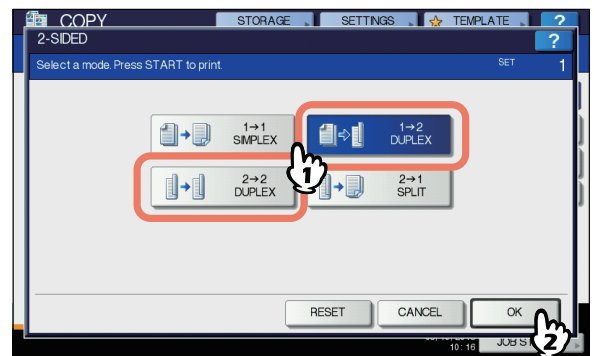

5 Select other copy modes as required, and then press the [START] button on the control panel.

When placing the original on the original glass, follow steps 6 and 7 on P.31 "Basic copying procedure".

Performing Copy & File

With the Copy & File function, you can store the copied data in the share folder of the hard disk of this equipment or a specified PC on a network. The data can be stored in any of PDF, TIFF and XPS formats.


Note

- The data will be stored as black images. (Resolution: 600 dpi only) The data stored with this function are suited for printing but not for being imported as an image into your PC. To obtain the optimal image quality for importing, it is recommended to store the data with the Scan to File function of this equipment.
- The network administrator must make settings for Copy & File in advance. For details, refer to the **TopAccess Guide**.
- It is recommended to back up the data stored in the share folder.


Memo

- You can store data in an e-Filing box with the Store to e-Filing function. For details, refer to the **e-Filing Guide**.


- Place the original(s).
- Press [STORAGE] on the touch panel.

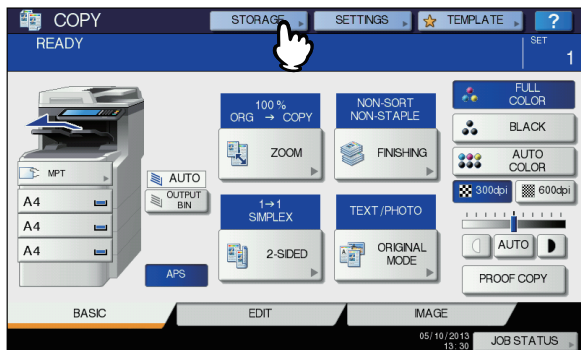

- Press [COPY & FILE] on the touch panel.

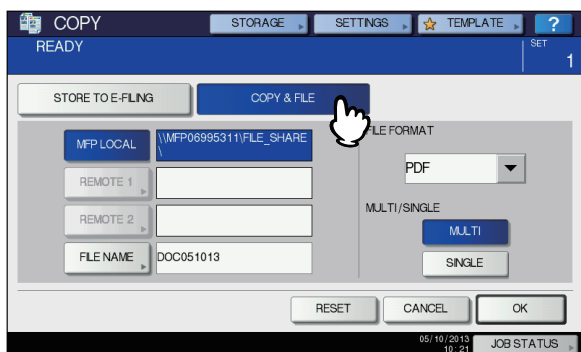

- Press the necessary buttons for entering information about the data to be stored. Then press [OK].

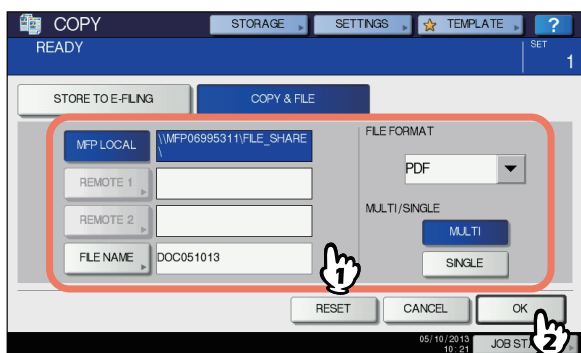

- MFP LOCAL:** Press this to store the data into the share folder of this equipment.
- REMOTE 1, REMOTE 2:** Press either of them to store the data into the share folder of a PC that is connected with this equipment via a network.

Note

- You can select up to 2 of [MFP LOCAL], [REMOTE 1] and [REMOTE 2]. You can cancel the selected item by pressing the same button again.
- When a user who has the privilege of changing the setting of [REMOTE 1] and [REMOTE 2] has pressed either of them, the menu for specifying a directory appears. In this case, see the following page to specify the directory:

[P.58 "Setting share folder"](#)

FILE NAME: Press this to display the on-screen keyboard. Then enter the file name within 128 letters.

Note

- The trailing characters in a file name (maximum 74) may be deleted depending on the type of letters used.

FILE FORMAT: Select the file format in which the data are stored from PDF, TIFF or XPS.

MULTI / SINGLE: These are for selecting whether the data are stored as a multiple page file or a single page file. If you select "MULTI", all the scanned data will be stored as one file. If you select "SINGLE", a folder is created and each page of the scanned data will be stored individually as one file in the folder.

- Press the [START] button on the control panel.


When the original is placed on the RADF (Reversing Automatic Document Feeder), copying and storing start simultaneously.

When the original is placed on the original glass, follow the procedure below.

- Place the next original on the original glass, and then press [NEXT COPY] on the touch panel or the [START] button on the control panel.

Repeat this step until the scanning of all the originals is finished.

- When all have been scanned, press [JOB FINISH] on the touch panel.

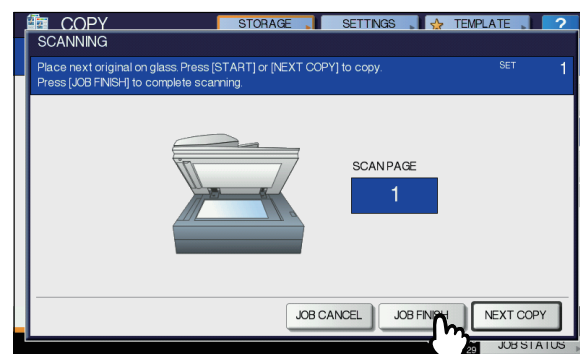


Copying and storing start.

Setting share folder

When a user who has the privilege of setting a share folder has pressed [REMOTE 1] or [REMOTE 2], the menu for specifying a directory appears.

The setting items differ depending on the file transfer protocol to be used. FTP, SMB, NetWare IPX/SPX, NetWare TCP/IP and FTPS are selectable for a file transfer protocol.

FTP / FTPS

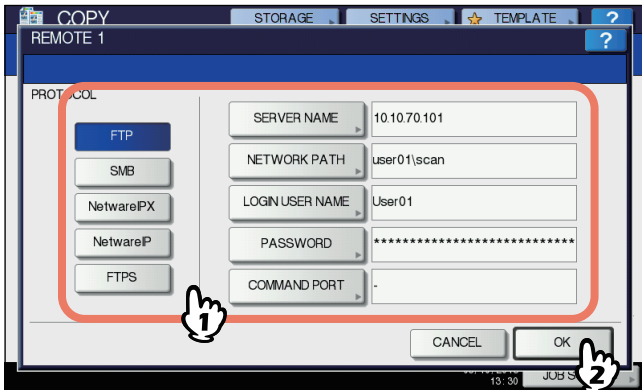

When you press any of the buttons below, the on-screen keyboard appears. Enter with the buttons on the touch panel or the digital keys on the control panel. When you finish the entry, press [OK].

SERVER NAME: Press this to enter the IP address of FTP server. For example, if the data should be transferred to an FTP folder ftp://10.10.70.101/user01/scan/, key in "10.10.70.101".


NETWORK PATH: Press this to enter a network path to an FTP folder where the data are to be stored. For example, if the data should be transferred to an FTP folder ftp://10.10.70.101/user01/scan/, enter "user01\scan".

LOGIN USER NAME: Press this to enter a user name to login to the FTP server. Enter this as required.

PASSWORD: Press this to enter a password to login to the FTP server. Enter this as required.

COMMAND PORT: Press this to key in a command port number for executing commands. Normally "-" is entered in this field, which means that a port number set by the administrator will be used. Change this only when you want to use any other port number.

SMB

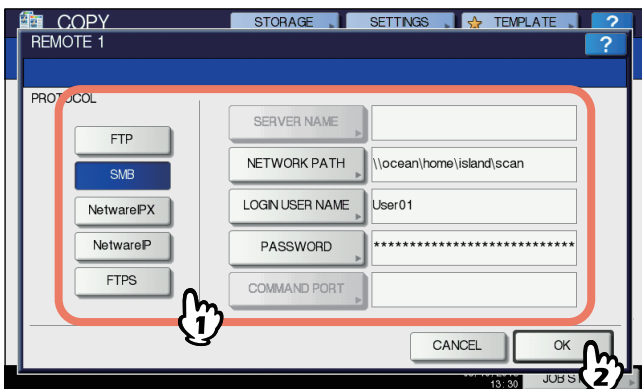

When you press any of the buttons below, the on-screen keyboard appears. Enter with the buttons on the touch panel or the digital keys on the control panel. When you finish the entry, press [OK].

NETWORK PATH: Press this to enter a network path to the folder where the data are to be stored.


LOGIN USER NAME: Press this to enter a user name to access the network folder. Enter this as required.

PASSWORD: Press this to enter a password to access the network folder. Enter this as required.



- If you selected [SMB], the settings for [SERVER NAME] and [COMMAND PORT] are not required.

NetWare IPX / NetWare IP

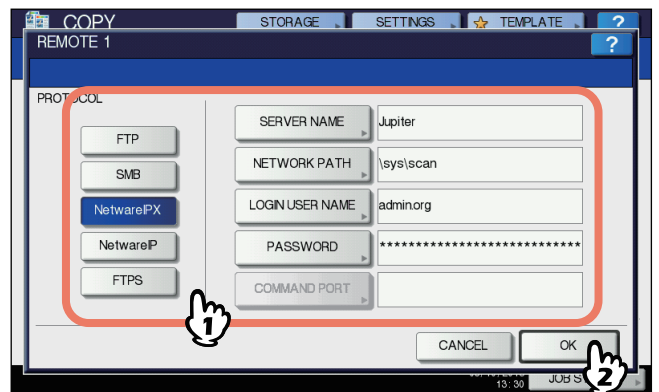

When you press any of the buttons below, the on-screen keyboard appears. Enter with the buttons on the touch panel or the digital keys on the control panel. When you finish the entry, press [OK].

SERVER NAME: When you select [NetWare IPX], enter either the server name of NetWare server or Tree/Context (if NDS is usable). When you select [NetWare IP], enter the IP address of NetWare server.

NETWORK PATH: Press this to enter a network path to a NetWare server folder where the data are to be stored. For example, if the data should be transferred to a folder "sys\scan" of NetWare server, enter "\sys\scan".

LOGIN USER NAME: Press this to enter a user name to login NetWare server. Enter this as required.

PASSWORD: Press this to enter a password to login NetWare server. Enter this as required.

3

Fax

| | |
|--|-------------|
| SENDING/RECEIVING A FAX..... | P.60 |
| CHECKING AND CANCELING THE COMMUNICATIONS | P.73 |

SENDING/RECEIVING A FAX

Note

Initializing the FAX is required to use the FAX for the first time. For details, refer to the **Advanced Guide**.

Sending a Fax


Basic procedures

This section describes the basic procedures to send a fax. For details of in-depth operations, see the page under each procedure as required.

Besides the basic sending functions described in this page, there are various useful ways to send a fax. These procedures are described in the following pages.

[P.69 "Other transmissions"](#)
[Advanced Guide](#)


1 Place the original(s).

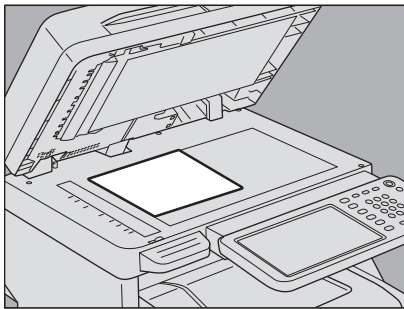

Check the original size and scanning range, etc. Place the original(s) on the original glass or RADF (Reversing Automatic Document Feeder) in the correct direction. (The illustration above shows the original placed on the original glass.)

[P.61 "Handling an original"](#)

2 Press the [FAX] button on the control panel.

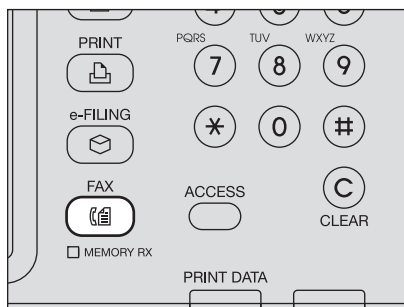

The fax screen is displayed. If you leave the screen unattended for the period of the auto clear setting time (45 sec. by manufacturer default), the screen returns to the default one automatically.


3 Press [OPTION] and set the transmission conditions.



The transmission condition setting screen is displayed. Set the transmission conditions such as resolution, original mode, exposure and transmission mode, as required.

[P.64 "Setting the transmission conditions"](#)

4 Specify the recipient.

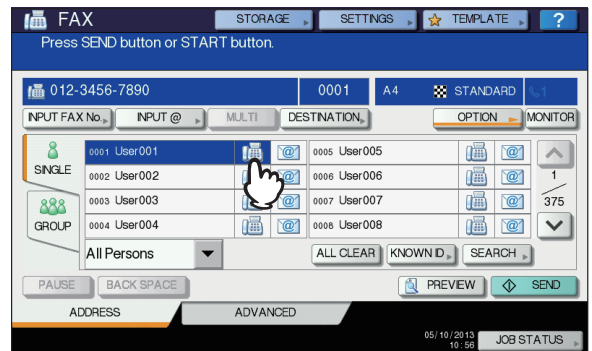

To specify the recipient, dial the number using the digital keys on the control panel or use the address book.

[P.66 "Specifying the recipient"](#)

5 To display the preview screen, press [PREVIEW].



6 Press [SEND].



The fax is sent or reserved.

Memo

- Alternatively, you can press the [START] button on the control panel.
- In the memory transmission mode, the original is scanned into memory. Once a connection has been made, this equipment automatically starts sending the scanned document. In the direct transmission mode, the fax number is dialed immediately, and the scanned document will be sent. (Transmission conditions can be set in the transmission condition setting screen.)
- If memory becomes full during scanning in the memory transmission mode, that original will not be stored in memory. When that happens, reduce the number of originals you are sending, or try sending them in the direct transmission mode.
- You can check the status of the current sending. You can also cancel the transmission (deletes the job).
[P.73 "CHECKING AND CANCELING THE COMMUNICATIONS"](#)

Redial function


In the memory transmission mode, if the fax cannot be sent due to a busy-line, the fax number is redialed automatically to send the fax. By default, this equipment redials 3 times at 1-minute intervals.

Batch transmission function

If there are multiple transmission jobs to the same recipient in memory, you can send them at once using this function, resulting in reduction of communication costs. However, if their recipients are the same but their transmission conditions vary or if users or departments are different when this equipment is managed under the department management or user management, this function is not applied to those reserved jobs.

Sending the next original

If an original is placed on the original glass and its scanning is completed, the confirmation screen for the next original is displayed. If you want to continue scanning of the next original, place it on the original glass, and then press the [START] button on the control panel. Once all the originals are scanned, press [JOB FINISH]. If you place an original on the RADF (Reversing Automatic Document Feeder) and press the [CONTINUE] button during scanning, the confirmation screen for the next original can be displayed after the scanning is completed.

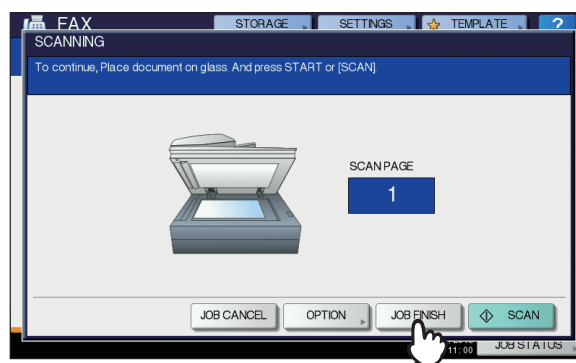

- If you leave the screen unattended for a period of the auto clearance setting time (45 sec. by manufacturer default), a copy of the scanned originals is sent.
- To cancel the transmission in the memory transmission mode, press [JOB CANCEL].
[P.74 "Canceling the memory transmission"](#)
- To change the transmission conditions for each page, press [OPTION].
[P.66 "Changing the settings for each page"](#)

Handling an original

Originals that can be sent

This equipment can send a fax of the following originals. You can place 1-sided or 2-sided originals of the media types, such as standard paper, recycled paper and paper having holes (2, 3 or 4 holes) for filing, on the RADF (Reversing Automatic Document Feeder). On the original glass, you can place 1-sided originals of the above media types as well as OHP film, tracing paper, booklets and three-dimensional objects.


| Location | Maximum size | Paper weight | Original size |
|----------------|---|---|---|
| Original glass | Length: 297 mm (11.69") Width: 432 mm (17.01") | – | North American format: LG, LT, ST, A/B format: A4, A5, B5, FOLIO |
| RADF | Length: 297 mm (11.69") Width: 432 mm (17.01") | 1-sided originals 35 - 157 g/m ² (9.3 - 41.8 lb.) 2-sided originals 50 - 157 g/m ² (13.3 - 41.8 lb.) | North American format: LG, LT A/B format: A4, B5, FOLIO (ST/A5 is not available) |

! Note

- Do not place any heavy objects (8 Kg(18lb.) or over) on the original glass and do not press on it with force.

Original scanning range

The following figures show the original scanning area. Any information in the shaded area is not printed on the paper. A4, A5, B5, LG, LT, ST, FOLIO

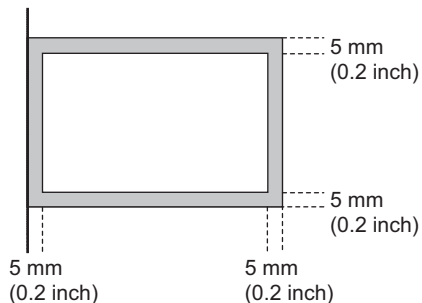


Placing the original(s) on the original glass

This section describes how to set an original on the original glass. Originals are sent in the order they are placed on the original glass.

CAUTION



Do not place any heavy objects (8 kg/18 lb. or over) on the original glass and do not press on it with force. Breaking the glass could injure you.

- 1 Raise the Original Cover or RADF (Reversing Automatic Document Feeder), and place the original with its face down on the glass.**

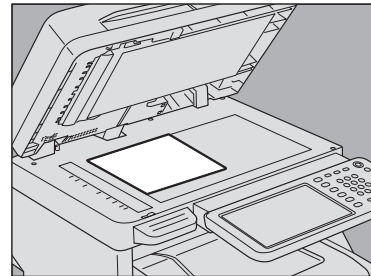

Raise it 60 degrees or more for the detection of the original.

- 2 Align the original against the left inner corner of the glass.**

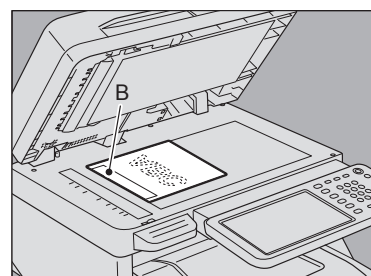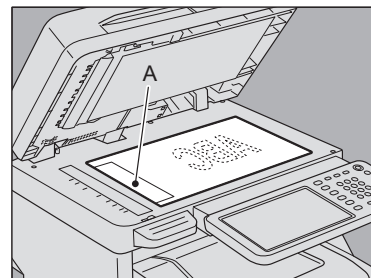

- Different size originals can also be sent in one transmission.
- When an original of any size other than LT/A4 is placed in the direction shown in the upper figure, transmission to a recipient is carried out so that the pre-entered sender information is printed in position A in the figure.

- When an original of LT/A4 size is placed in the direction shown in the lower figure, transmission to a recipient is carried out so that the pre-entered sender information is printed in position B in the figure.
- The pre-entered sender information shows what is registered in the Terminal ID.

 **Advanced Guide**

3 Lower the Original Cover or RADF slowly.


■ Placing the original(s) on the RADF

This section describes how to set the original(s) on the RADF (Reversing Automatic Document Feeder). When the originals are placed on the RADF, the uppermost page is the first to be scanned and sent.


CAUTION



- When scanning the duplex original with the RADF, do not put your hand on the RADF. Paper may damage the hand.
- When scanning the duplex original with the RADF, do not put an object on the RADF. This could cause a paper misfeed.

1 After aligning the originals, place them with their face up and slide the guides to rest against the edges of the originals.

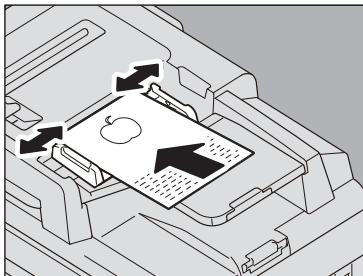


- Regardless of their sizes, originals are acceptable up to 100 sheets (35 to 80 g/m² (9.3 to 20 lb.)) or 16 mm (0.62") in height.
- 2-sided originals can be set and sent.

 **Advanced Guide**

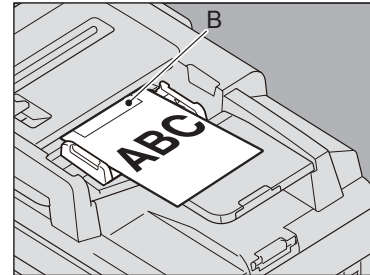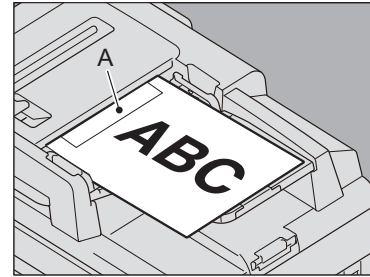


- When an original of any size other than LT/A4 is placed in the direction shown in the upper figure, transmission to a recipient is carried out so that the pre-entered sender information is printed in position A in the figure.
- When an original of LT/A4 size is placed in the direction shown in the lower figure, transmission to a recipient is carried out so that the pre-entered sender information is printed in position B in the figure.
- The pre-entered sender information shows what is registered in the Terminal ID.

 **Advanced Guide**

Sending different width originals

To set different width originals, adjust the side guides to the widest original size, and then align the original against the front side. Available combinations of the original size are as follows.

- A/B format: A4, B5, FOLIO
- North American format: LT, LG

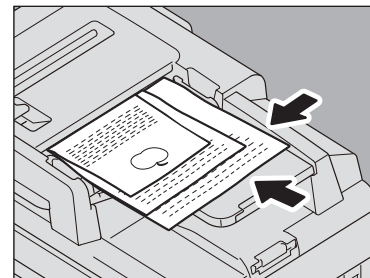


Memo

- To send different width originals, you need to enable "DIFFERENT WIDTH" as a transmission condition.


 [P.64 "Setting the transmission conditions"](#)

Precautions for using the RADF

Do not use the following originals as they may misfeed or become damaged:

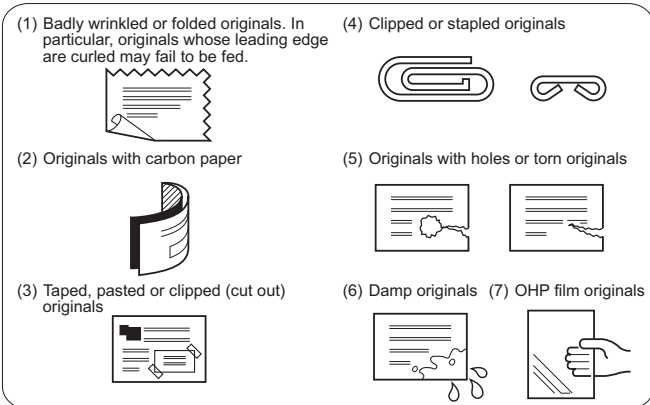

The following originals should be handled carefully:

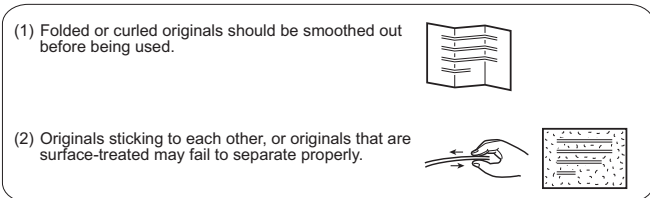

Setting the transmission conditions



You can set the fax transmission conditions.



- The transmission conditions are only applied to the current transmission. They return to the default settings after the transmission.
 - Each default setting of resolution, original mode, exposure, transmission mode and ECM is adjustable.
- Advanced Guide**

■ Making settings

Pressing [OPTION] on the fax screen will display the transmission condition setting screen as shown below. Set each setting item, and then press [OK].

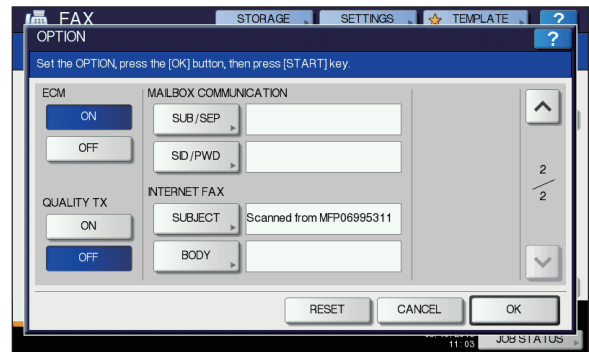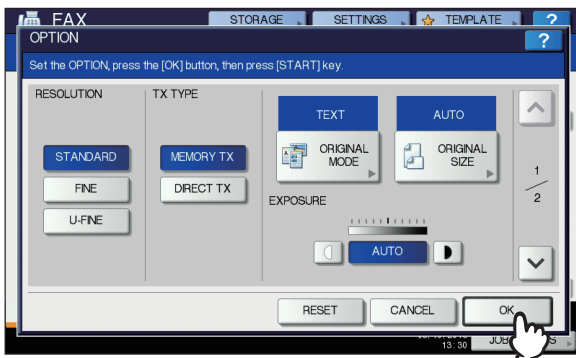

- Press or to switch the pages.
- To cancel the operation and return to the previous screen, press [RESET].

RESOLUTION

Set the resolution based on the fineness of the original.

- STANDARD:** This is suitable for an original with regular size text.
- FINE:** This is suitable for an original with small size text and fine illustrations.
- U-FINE:** This is suitable for an original with ultra-fine illustrations.



- If the recipient's fax machine is not capable of receiving originals at the same resolution, the resolution is automatically converted before being sent to the recipient. The higher the resolution is, the longer it takes to send an original.

TX TYPE

Set the fax transmission mode.

- MEMORY TX:** Send the original after the scanned data are saved in the memory. Up to 100 transmissions of up to 1000 pages per 1 transmission can be reserved.
- DIRECT TX:** Send the original directly as it is being scanned. Once a page has been scanned and sent, the next page is scanned and sent. Therefore, it takes longer to scan and send all pages. However, you can confirm on the fly that each page is sent to the recipient.

ORIGINAL MODE

Set the scanning mode based on the type of the original.

- TEXT:** This is suitable for an original with text and line drawings.
- TEXT/PHOTO:** This is suitable for an original with a mixture of text and photos.
- PHOTO:** This is suitable for an original with photos.



- In the TEXT/PHOTO mode or PHOTO mode, transmission time may be longer than that in the TEXT mode.

ORIGINAL SIZE

Set the scan size of the original.



| | |
|------------------------------|--|
| AUTO: | The size of the original is automatically determined before the original is scanned. |
| MIXED ORIGINAL SIZES: | Select this function to load the originals with different width into the RADF (Reversing Automatic Document Feeder). |
| Specified size: | The original is scanned at the preset size regardless of its actual size. |

Memo

- If the recipient's fax machine is not capable of receiving originals of B5 size, this equipment may reduce that size before sending it. To avoid this, when the original to be set is B5 size, specify A4 size respectively.

EXPOSURE

Set the density at which the original is to be scanned.

| | |
|----------------|---|
| AUTO: | This equipment automatically detects the contrast of the original, and scans it with the optimum density. |
| Manual: | Press  or  to set the desired contrast. |

ECM

Switch the ECM (Error Correction Mode) communication ON or OFF. ECM is an internationally standardized communication mode that automatically corrects errors that occur during fax transmissions. With this setting option ON, even when the transmitted data have been affected by noise during communication, this mode allows good communication without image distortion by automatically resending the parts that have been affected.

Note

- Both the sender and the receiver must have the ECM function to make ECM communication available.
- When affected by noise during communication, communication time is slightly longer than usual. Even when the ECM communication is used, an error may occur depending on the line status.
- The ECM communication is not available for voice communication.

QUALITY TX

Switch Quality TX ON or OFF. When this mode is set to ON, originals are sent at a slower speed than usual and the chances of errors occurring decrease.

MAIL BOX COMMUNICATION

For the communication compatible with ITU-T (International Telecommunications Union-Telecommunications) standards, specify a subaddress or password to be sent to the recipient's fax machine. (Up to 20 digits can be entered.)

| | |
|-------------------------------------|--|
| SUB (Subaddress): | Information to send data of the original to the fax machine. |
| SEP (Selective Polling): | Information to retrieve data of the original from the fax machine. |
| SID (Sender Identification): | Password for SUB. |
| PWD (Password): | Password for SEP. |

Memo

- To use this function, the recipient's fax machine must be capable of setting an ITU-T compatible subaddress or password.

INTERNET FAX


| | |
|-----------------|---------------------------------|
| SUBJECT: | The subject of the Internet Fax |
| BODY: | The body of the Internet Fax |

This is not used for sending a standard fax.

■ Changing the settings for each page

You can change the scanning conditions (RESOLUTION, MODE, EXPOSURE and ORIGINAL) for each page.


- 1 Specify the recipients and press [SEND] to start scanning a document. When the scanning of the original is completed, the confirmation screen for the next original is displayed. Press [OPTION].

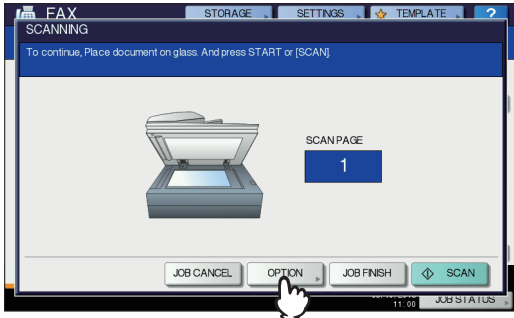

The illustration above shows the original placed on the original glass. If you place an original on the RADF (Reversing Automatic Document Feeder) and press the [CONTINUE] button during scanning, the confirmation screen for the next original is displayed after the scanning is completed. If you press the [STOP] button during scanning, the scanning halts and the confirmation screen for the next original can be displayed.

- 2 The setting screen for the scanning conditions is displayed. Change the setting, and then press [OK].

[P.64 "Making settings"](#)

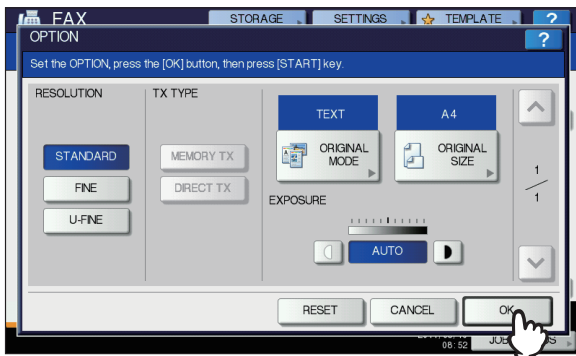

Specifying the recipient

There are various ways to specify the recipient, such as Direct entry with the control panel and Address book entry.



- To use the address book, you need to register recipients' fax numbers to the book in advance. For details of the operation, refer to the *Advanced Guide* or *TopAccess Guide*.


■ Direct entry with digital keys

You can specify the recipient by entering its fax number on the control panel.

- 1 Press [INPUT FAX No].




- 2 Key in the recipient's fax number and press [OK].

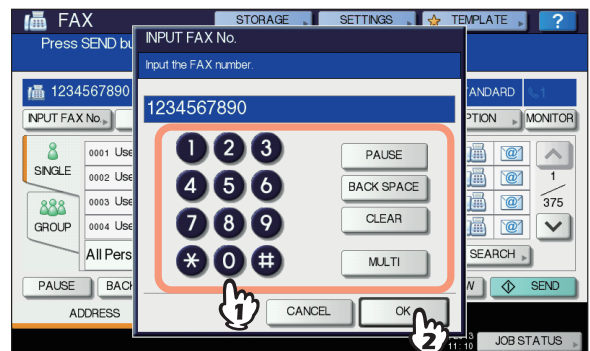

- You can also enter the recipient's address with the digital key on the control panel.
- To delete the entered fax number one number at a time, press [BACK SPACE].
- To delete the entire entered fax number in one go, press the [CLEAR] button.

3 Confirm the fax number displayed on the fax screen.

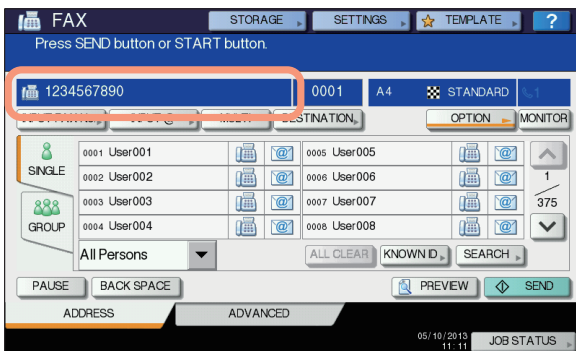

- To delete each entered value, press [BACK SPACE].
- To delete all the entered values at once, press the [CLEAR] button on the control panel.
- In the memory transmission mode, you can specify multiple recipients to send the same document at once. Press [MULTI], and enter the recipient's fax number. Repeat this operation until all the recipients are specified. You can also specify the recipients' fax numbers by combining with other entry methods. The number of recipients you can simultaneously specify is limited to 400.
- To confirm all the selected recipients or delete unnecessary recipients, press [DESTINATION].
[P.69 "Confirming the recipients"](#)

■ Specifying the recipient in the address book

In the address book, you can specify the recipient.

1 Press [SINGLE] tab to display the list of the addresses, and then press the recipient's FAX icon ().




- Press \uparrow or \downarrow to switch the pages.
- Alternatively, you can select the recipient by pressing the address name box. In such case, if a fax number and an E-mail address have been registered to the recipient's address, both of them are selected.
- To cancel the selected recipient, press it again.

- In the memory transmission mode, you can specify multiple recipients to send the same document at once. Repeat the recipient selection operation until all the recipients are selected. For the multi-address transmission, you can also specify recipients by combining with other entry methods. The number of recipients you can simultaneously specify is limited to 400.
- To confirm all the selected recipients or delete unnecessary recipients, press [DESTINATION].
[P.69 "Confirming the recipients"](#)
- To refine your search only for items including specified characters, press the pull-up menu.
- A list of recipients can be displayed using 11 to 15 characters per name.

■ Group entry

In the address book, you can specify the group to which you want to send a fax.

1 Press [GROUP] tab to display the list of the groups, and then press the group name.

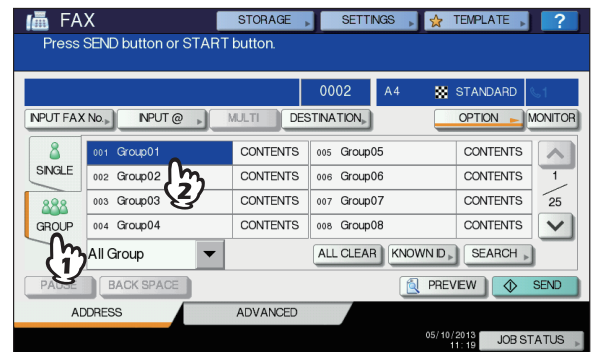

- Press \uparrow or \downarrow to switch the pages.
- To cancel the selected group, press it again.
- To confirm the addresses registered in that group, press [CONTENTS].
- In the memory transmission mode, you can specify multiple groups to send the same document at once. Repeat the recipient selection operation until all the recipients are selected. For the multi-address transmission, you can also specify recipients by combining with other entry methods. The number of groups you can simultaneously specify is limited to 200 groups of up to 400 recipients per 1 group.
- To confirm all the selected recipients or delete unnecessary recipients, press [DESTINATION].
[P.69 "Confirming the recipients"](#)
- To refine your search only for items including specified characters, press the pull-up menu.


■ Searching by ID number

You can search for a specific recipient from the address book using the ID number.

1 Press [KNOWN ID].



2 Key in the desired ID number (1 to 1000) using the digital keys on the control panel, and then press [OK].

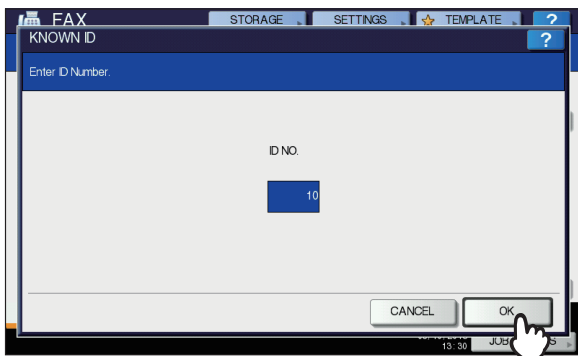

The ID number is the one shown in the destination name box. The number ranges from 001 to 1000.

3 The page including the entered ID number is displayed. Press the FAX icon ().



- Press or to switch the pages.
- Alternatively, you can select the recipient by pressing the address name box. In such case, if a fax number and an E-mail address have been registered to the recipient's address, both of them are selected.
- To cancel the selected recipient, press it again.

- In the memory transmission mode, you can specify multiple recipients to send the same document at once. Repeat the recipient selection operation until all the recipients are selected. For the multi-address transmission, you can also specify recipients by combining with other entry methods. The number of recipients you can simultaneously specify is limited to 400.
- To confirm all the selected recipients or delete unnecessary recipients, press [DESTINATION].
[P.69 "Confirming the recipients"](#)

■ Searching for the recipient's fax number

You can search for the recipient's fax number from the address book and LDAP server.




- To search for the recipient's fax number from the LDAP (Lightweight Directory Access Protocol) server, the name of the LDAP server to be connected is required to be registered to this equipment in advance. For details of the LDAP server, ask your network administrator.

1 Press [SEARCH].



- To display the recipient search menu, press [SEARCH] while the address list is displayed. Perform this operation when you want to search the LDAP server.
- To display the group search menu, press [SEARCH] while the group list is displayed.

2 Press the button of the keyword category you want to search. Enter the keyword. Press [SEARCH].

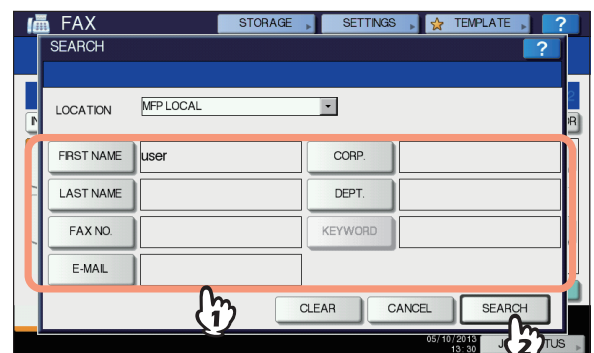



- For details of the operation to enter characters, refer to the **Setup Guide**.

- To cancel the entered keyword, press [CLEAR].
- You can search for the desired recipient's fax number by specifying multiple keywords.



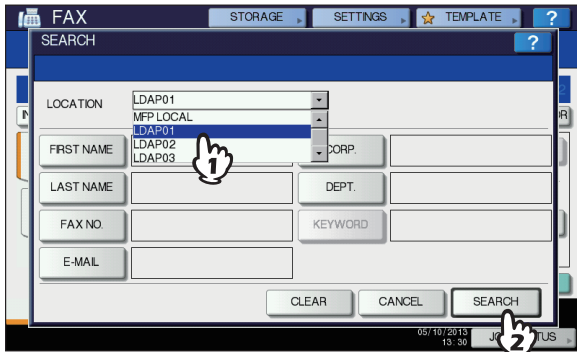

Selecting the LDAP server

To search for the recipient's fax number in the LDAP server, press the pull-down menu in the recipient search menu. The list of the LDAP servers is displayed. Press the LDAP server name you want to search, and then press [OK].



- 3** The search result is displayed. Press the desired FAX icon (), and then press [OK].



- Press  or  to switch the pages. Pressing  or  allows you to skip 5 pages.
- Alternatively, you can select the recipient by pressing the address name box. In such case, if a fax number and an E-mail address have been registered to the recipient's address, both of them are selected.
- To cancel the selected recipient, press it again.
- In the memory transmission mode, you can specify multiple recipients to send the same document at once. Repeat the recipient selection operation until all the recipients are selected. For the multi-address transmission, you can also specify recipients by combining with other entry methods. The number of recipients you can simultaneously specify is limited to 400.
- To confirm all the selected recipients or delete unnecessary recipients, press [DESTINATION].
- [P.69 "Confirming the recipients"](#)
- If you want to change the results of the search, press [RESEARCH]. You will be returned to the Step 2 screen. Specify the search string again.


■ Confirming the recipients



You can confirm the recipients which you specified or delete unnecessary recipients.

- 1** Press [DESTINATION].

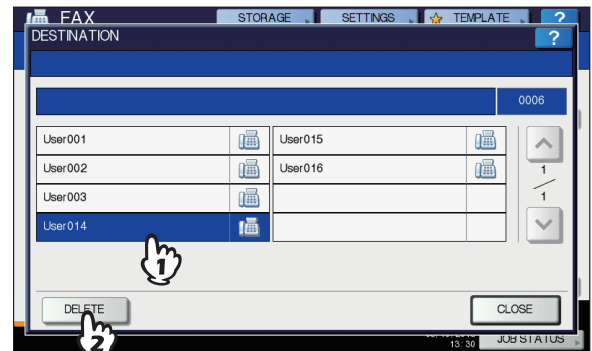


- 2** The recipient list screen is displayed. Select the recipient you want to delete, and then press [DELETE].



- Press  or  to switch the pages.
- Press [CLOSE] to return to the previous screen.

Other transmissions

■ On-hook transmission

In this mode, you can dial and perform direct fax transmission without picking up the handset of the external telephone. On-hook Transmission is available when  on the upper right of the screen is OFF.

- 1** Place the original(s).

[P.61 "Handling an original"](#)

- 2** Press the [FAX] button on the control panel.

[P.60 "Basic procedures"](#)

- 3** Press [OPTION] and set the transmission conditions.

[P.64 "Setting the transmission conditions"](#)

4 Press [MONITOR].



- Make sure that you hear the dial tone from the built-in speaker.
- To cancel the operation, press [MONITOR] again.

! Note

- To use the [SEARCH] to specify the recipients, you must specify the recipient in advance by following the procedures below. Specify the recipients, and then press [MONITOR].

5 Specify the recipients.

P.66 "Specifying the recipient"

! Note

- For direct entry, each press of a digital key on the control panel dials a number. If you make a mistake when dialing the fax number, press [MONITOR] to cut the line, and then press it again to redial.
- If you specified the recipient with the [SEARCH], press [MONITOR], and then [DIAL].


6 When you hear the answer tone (short high-pitched tone) through the built-in speaker indicating the connection has been made with the recipient's machine, press [SEND].

P.60 "Basic procedures"

! Note

- When you hear the other party's voice answering the call before pressing [SEND], pick up the handset of the external telephone. Then ask him/her to perform operation of the fax reception.

Off-hook transmission

In this mode, you can pick up the handset of the external telephone to dial and perform direct fax transmission. Off-hook transmission is available when  on the upper right of the screen is OFF.

1 Place the original(s).

P.61 "Handling an original"

2 Press the [FAX] button on the control panel.

P.60 "Basic procedures"

3 Press [OPTION] and set the transmission conditions.

P.64 "Setting the transmission conditions"

4 Pick up the handset of the external telephone.

5 Use the external telephone to dial the fax number.

P.66 "Specifying the recipient"

! Note

- When you use the external telephone to dial, the machine dials each number you enter. If you make a mistake when dialing the fax number, replace the handset to cut the line, and then pick up the handset again to redial.

6 When you hear the answer tone (short high-pitched tone) through the built-in speaker indicating the connection has been made with the recipient's machine, press [SEND].

P.60 "Basic procedures"

! Note

- When you hear the other party's voice answering the call before pressing [SEND], ask him/her to perform operation of the fax reception.

7 Replace the handset of the external telephone.

Displaying the preview


Before sending a fax, you can check the image on the touch panel with this preview function.

1 Press [PREVIEW] on the fax menu.




- To use the preview function, specify the recipient and then press [PREVIEW].

2 Press [SEND].

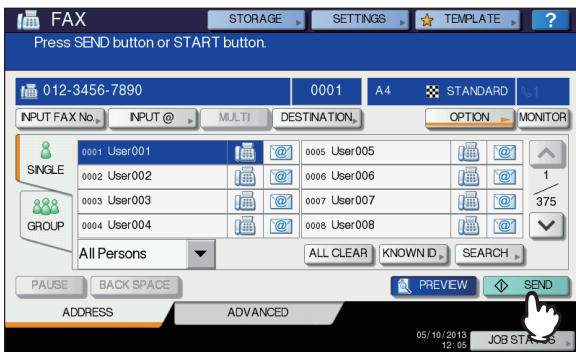

3 Check the fax image after the preview is displayed. Press [OK] if you send it without any change. The fax will then be sent.

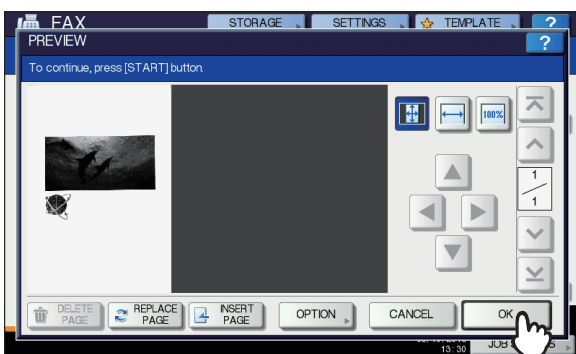

- To send another original, place it on the original glass or RADF (Reversing Automatic Document Feeder), and then press the [START] button on the control panel.
- To delete the page being previewed, press [DELETE PAGE].
- To replace the page being previewed with another page, press [REPLACE PAGE].
- To insert another scan before the page being previewed, press [INSERT PAGE].
- Press [OPTION] to change the setting.
[P.64 "Setting the transmission conditions"](#)

Receiving a Fax

Reception mode

This section describes how to receive a fax. Refer to the appropriate section for your current reception mode. The reception mode can be set on the ADMIN menu. For details of the current setting, ask your administrator. Besides the receiving methods described in this page, there are various useful ways to receive a fax. These procedures are described in the following Guide.

[Advanced Guide](#)


AUTO reception

Faxes are automatically received during an incoming call. Users do not have to do anything when receiving a fax.

MANUAL reception

Faxes are manually received by using an external telephone when you have an incoming call.

- 1 Pick up the handset of the external telephone when you have an incoming call.**
If the incoming call is a telephone call, you can start talking.
- 2 If you hear a tone (fax signal) through the handset of the external telephone, press the [FAX] button on the control panel.**
[P.60 "Basic procedures"](#)
- 3 Press the [ADVANCED] tab, and then press [MANUAL RECEIVE].**

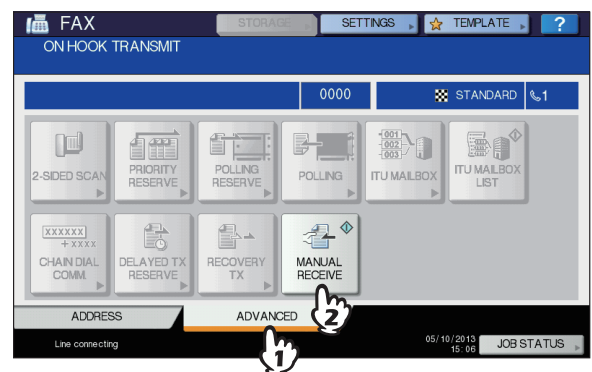

- 4 When a message appears indicating that you can send a fax, press the [START] button on the control panel and replace the handset of the external telephone.**

■ Memory reception


In the following conditions, faxes cannot be printed. If this happens, received fax data are stored in the memory, and printing is resumed as soon as this equipment is ready. As the memory reception function is always enabled, you do not need to make any setting.

- During copying or printing
- During printing of received copy of the originals
- During printing of lists and reports
- When paper has run out
- When a paper misfeed occurs
- When toner has run out

Originals and paper

■ Acceptable size of paper

A4, B5, A5, FOLIO, LG, LT and ST sized paper are available. The printing range of each size of paper is as follows: As shown in the figures below, if an original document contains any information in the shaded area, it is not printed on the paper.

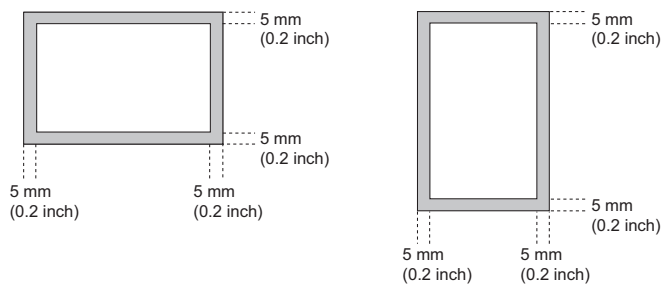

✍ Memo

- Set the paper in the trays. The multi-purpose tray is not available.
- Regardless of whether or not the Finisher is installed, paper exits on the receiving tray.
- Trays can be set for fax use only.

■ Default setting for RX printing

To print the received fax, the paper with the same width as the original is used. Depending on the length of the original, "RX reduction printing" or "Discard printing" (both of them are set to ON by manufacturer default) are applied.

📖 **Advanced Guide**

When an original is shorter or the same as the paper printing area

It is printed in the original size.

When an original is longer than the paper printing area

It is printed according to the following priority:

- When an original is up to 10 mm (0.4 inch) longer than the printing area: the part of the originals that exceeds the paper printing area is discarded.
- When an original exceeds the printing area by more than 10 mm (0.4 inch): the original image is reduced to 75 % (reduction printing). If the image still cannot be fitted into the printing area, paper larger than the original is selected. In case there is no larger paper available, the original is printed with the image divided.

■ Paper priority when there is no same size paper

When both "RX reduction printing" and "Discard printing" are set to ON, paper is selected according to the following priority:

1. Paper of the same size as the original
2. Paper larger than the original

! Note

- When the corresponding paper size is not available, in most cases, the scanned original is printed on paper of a larger size. However, the sender's fax machine may reduce the scanned original to fit the paper size available in the recipient's fax machine (this equipment).
- The paper priority varies according to the "RX reduction printing" and "Discard printing" settings. For details, contact your dealer.

CHECKING AND CANCELING THE COMMUNICATIONS

Checking Communications


Checking reserved transmissions

You can check reserved fax transmissions.

1 Press [JOB STATUS].



2 Select [FAX].

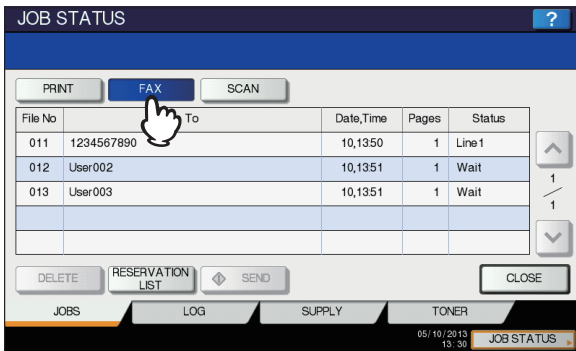


- Reserved transmission jobs are listed in the reversed chronological order from top to bottom.
- Press \uparrow or \downarrow to switch the pages.
- To print the list of the reserved transmissions jobs, press [RESERVATION LIST].
- In the "Status" column, the status of each job is indicated as follows:
 - Line1: Sending on the 1st line.
 - Network: Reserved for sending via Internet Fax.
 - Delayed: Reserved with the time to send specified.
 - Wait: Communication is in the standby queue.
 - Invalid: Under standby due to an invalid department code (Network Fax). For details of Network Fax function, refer to the **Advanced Guide**.


Checking communication status (log)

You can check the log of fax transmissions and receptions.


1 Press [JOB STATUS].

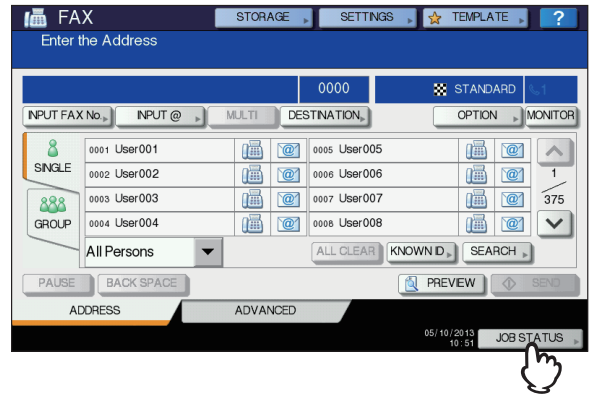

2 Select the [LOG] tab, and then press [SEND] or [RECEIVE].

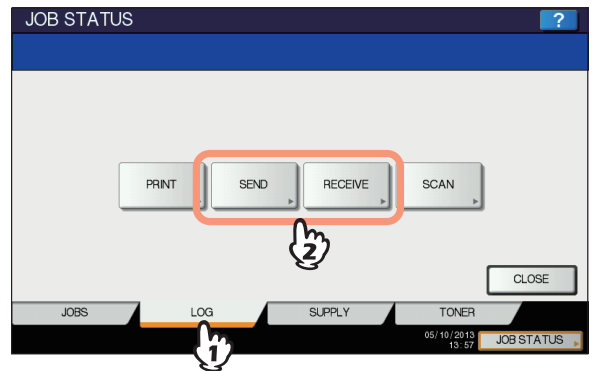

3 The list of the communication status is displayed.

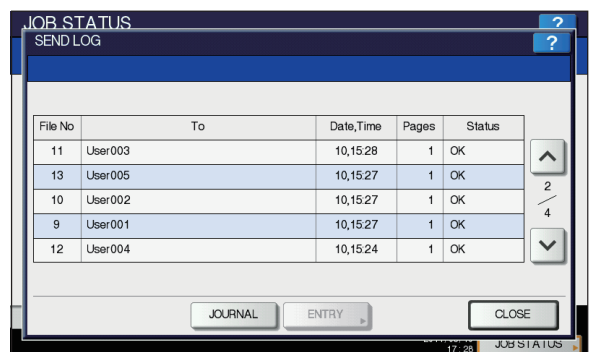

- Transmissions or receptions are listed in the reversed chronological order from top to bottom.
- Press \uparrow or \downarrow to switch the pages.
- Up to the latest 40 or 120 transmission/reception records can be listed on the log. The maximum number can be set on the ADMIN menu. For details of the operation, refer to the **Advanced Guide**.

- To print the log of transmissions or receptions, press [JOURNAL].
📖 **Advanced Guide**
- In the “Status” column, the status is indicated as follows:
 - OK: Transmission or reception succeeded.
 - 4-digit error code: Transmission or reception failed.
📖 **Troubleshooting Guide**

Registering recipients’ fax numbers to the address book

To register recipient’s fax numbers in the address book from the send/receive log screen, select a record in the send or receive log, and then press [ENTRY]. For details of the registration to the address book, refer to the **Advanced Guide**.

! Note

- Fax and E-mail transmissions whose recipients are specified with direct entry or entry using the LDAP server can be registered to the address book from the Send log.
- Polling and E-mail receptions whose recipients are specified with direct entry or entry using the LDAP server can be registered to the address book from the Receive log.

Canceling the Transmission


Canceling the memory transmission

You can cancel the memory transmission during scanning.

■ When using the original glass

This section describes how to cancel the memory transmission when an original is placed on the original glass.

- When scanning is completed, the confirmation screen for the next original is displayed. Press [JOB CANCEL].**

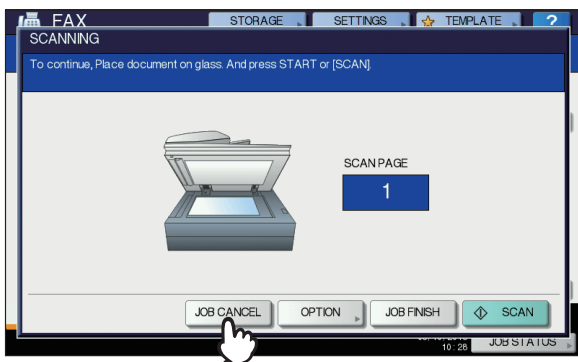

If you leave the screen unattended for a period of the auto clearance setting time (45 sec. by manufacturer default) after the confirmation screen for the next original is displayed, a copy of the scanned originals is sent.


- The confirmation screen for the deletion is displayed. Press [YES].**



■ When using the RADF (Reversing Automatic Document Feeder)


This section describes how to cancel the memory transmission when an original is placed on the RADF.

- Press the [STOP] button on the control panel while the originals are being scanned.**

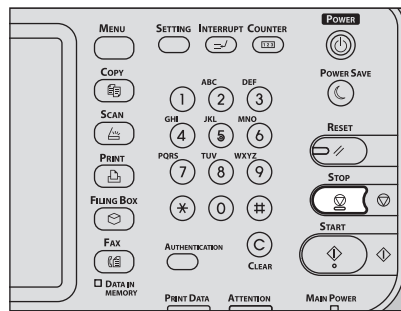

Scanning is paused.

2 The confirmation screen for the next original is displayed. Press [JOB CANCEL].

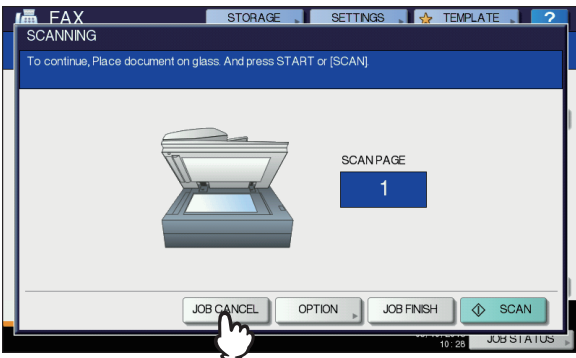

- If you press [JOB FINISH], the scanned originals are sent.
- If you leave the screen for the next original unattended for the period of the auto clear setting time (45 sec. by manufacturer default) after it appears, the memory transmission is canceled.

3 The confirmation screen for the deletion is displayed. Press [YES].




Canceling direct transmissions

You can cancel the direct transmission during scanning.

! Note

- Even if you cancel transmission in the direct TX mode, the part of the original that was scanned before transmission is canceled has been sent.

1 Press the [STOP] button on the control panel while the original is being scanned.

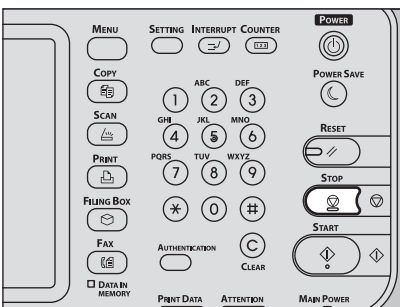

The scanning and transmission are stopped.

Canceling reserved transmissions

You can display the list of the reserved transmissions, and cancel the reserved transmissions that are in the queue or in progress.


1 Press [JOB STATUS], and then select the [FAX] tab.

The list of the reserved transmissions is displayed. This step is the same as that for checking the reserved transmission.

[P.73 "Checking reserved transmissions"](#)


2 Select the reserved transmission you want to delete, and then press [DELETE].

More than one job can be selected.

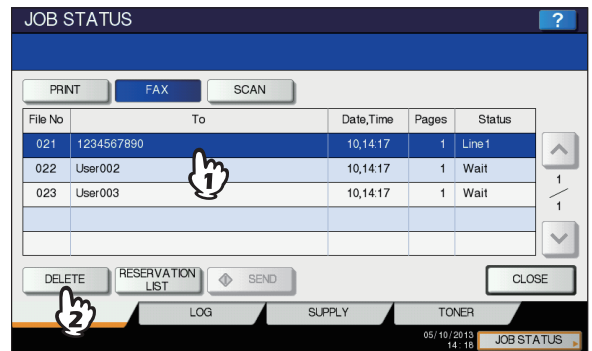

In the "Status" column, you can check the status of the reservation. "Wait" indicates that the data are waiting to be sent. "Line1" indicates that the data are being sent. Delayed transmission reservation and polling transmission/reception can be canceled.

- 3 The confirmation screen for the deletion is displayed. Press [DELETE].

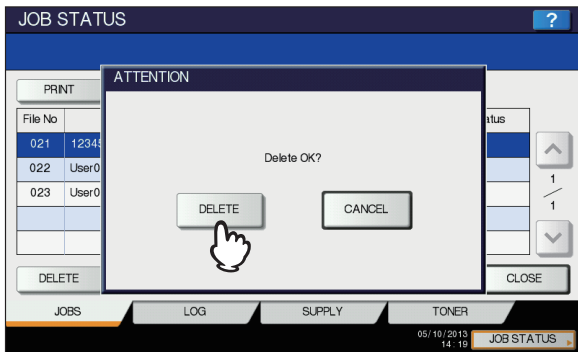

4


Scanning

BASIC OPERATION P.78

BASIC OPERATION


Viewing Touch Panel for Scan Menu

When you press the [SCAN] button on the control panel, the SCAN menu is displayed on the touch panel.

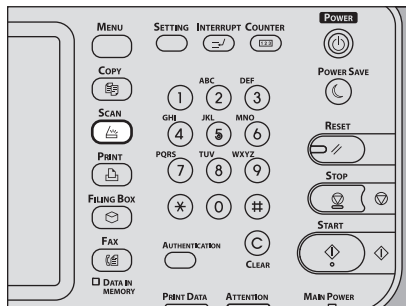

Note

- If the equipment is managed by the Department Management or User Management features, you need to enter a department code or the user information, such as the user name and password.

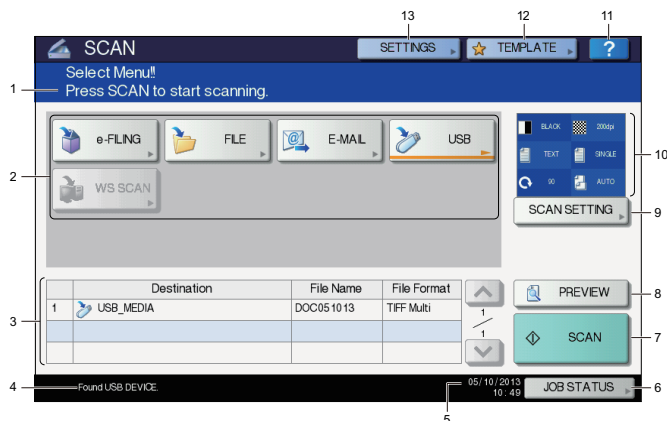

1) Message Display Area

Operational instructions and the status of the equipment are displayed.

2) Function Buttons

Press one of these buttons when you select the scan function. Pressing one of these buttons displays the set-up screen specific to the selected scan function.

3) Destination Display Area

The scan jobs are displayed before their performance in the saving destinations or addresses.

4) Alert Message Display Area

Alert messages are displayed when the equipment needs a toner cartridge replacement, the waste toner box needs cleaning, etc. For details on these messages, refer to the *Troubleshooting Guide*.

5) Date and Time

6) [JOB STATUS]

Press this button when you want to monitor your copy, fax, scan, and/or print jobs or view the job logs.

- P.90 "Viewing the scan job status"
- P.90 "Viewing the scan job log"

7) [SCAN]

Press this button to perform scanning.

8) [PREVIEW]

Press this button when you want to preview your scans.

9) [SCAN SETTING]

Press this button to change scan settings applicable to "Scan to e-Filing", "Scan to File", "Scan to E-mail" and "Scan to USB".

10) Scan Settings Display Area

The selected scan settings are displayed.

11) [?] (Help Button)

Press this button for descriptions on each function or button on the touch panel.

12) [TEMPLATE]

Press this button when you want to use a template.

13) [SETTINGS]

Press this button to display a list of the selected options for scan settings.

Default Settings

A default refers to a setting selected automatically when you turn on the equipment, when the equipment wakes up from Sleep Mode, or when the [RESET] button is pressed on the control panel. To scan your document, the default settings can be used as they are whereas pressing [SCAN SETTING] during the scan operation allows you to select the preferred settings for each scan job.

Advanced Guide

The available settings in the scan mode and their factory defaults are listed in the table below.

| Settings | Factory Defaults |
|-----------------------|------------------|
| Color Mode | BLACK |
| Resolution | 200 (dpi) |
| Original Mode | TEXT |
| Rotation | 90 (degrees) |
| Single/2-sided Scan | SINGLE |
| Original Size | AUTO |
| Compress | MID |
| Omit Blank Page | OFF |
| Outside Erase | OFF |
| Range Adjustment | ±0 |
| Exposure | AUTO |
| Contrast | ±0 |
| Background Adjustment | ±0 |
| Sharpness | ±0 |
| Saturation | ±0 |
| RGB Adjustment | |
| Red (R) | ±0 |
| Green (G) | ±0 |
| Blue (B) | ±0 |

Memo

- To display a list of the selected options for scan settings, press [SETTINGS].
- [P.78 "Viewing Touch Panel for Scan Menu"](#)
- The default settings can be changed using the [SETTING] button on the control panel.

Scan to e-Filing

With this function, you can scan originals and store the scans in e-Filing boxes. You can scan 200 pages per job.

When saving your scans, you can specify a public box or one of the user boxes. The public box is a pre-defined box and is used to store documents that any users of the equipment may need to work with. A user box is one created by the user. If a password has been set for a user box, you need to enter the correct password to access it.

The stored data can be printed out any time from the touch panel. You can also manage the data using the e-Filing web utility. With the e-Filing web utility, you can create user boxes and folders, print documents, and even merge several documents to create a new one.

For instructions on how to store your scans with Scan to e-Filing, create user boxes, and print e-Filing documents, refer to the **e-Filing Guide**.

Note

- The maximum capacity in e-Filing differs depending on your model or operating environment. The total available space in e-Filing and the shared folder can be checked on the [Device] tab in TopAccess.
- Before saving your scans in a user box, you need to set up the user box.

- To prevent loss of data, we recommended that you back up the data saved in the equipment's hard disk. You can back up the data with the computer using File Downloader or e-Filing Backup/Restore Utility.
- Delete documents stored in e-Filing when they are no longer needed.

Scan to File

The Scan to File function sends and stores scans to a shared folder in the equipment's hard disk or a specified network folder. The data stored in the shared folder can be accessed directly from the computer via a network. You can scan up to 1000 pages per job until the equipment's memory is full.


The network administrator has to make settings for storing the scanned data to the client computers. For details, refer to the **TopAccess Guide**.

Note


- The maximum capacity in the shared folder differs depending on your model or operating environment. The total available space in the shared folder and e-Filing can be checked on the [Device] tab in TopAccess.
- The shared folder in the equipment's hard disk can contain a maximum of 2000 files.
- We recommend that you back up the data stored in the shared folder.
- Delete documents stored in the shared folder when they are no longer needed.

Scanning to files

- Place the original(s).
- On the control panel, press the [SCAN] button to enter the SCAN menu.

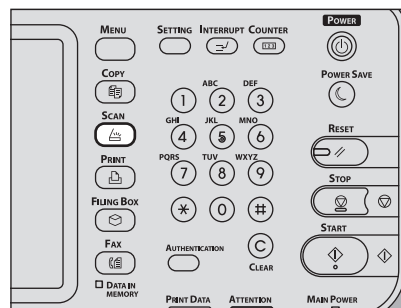

- Press [FILE].

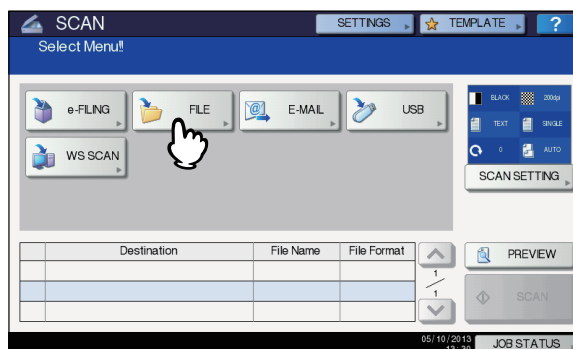


- To store the scan in the equipment's shared folder, proceed to step 4.
- To store the scan in a network folder, proceed to step 5.

Note

- Storing data in a network folder requires the administrator to set the equipment configuration. For details, refer to the *TopAccess Guide*.

4 Make sure that [MFP LOCAL] is selected and highlighted.

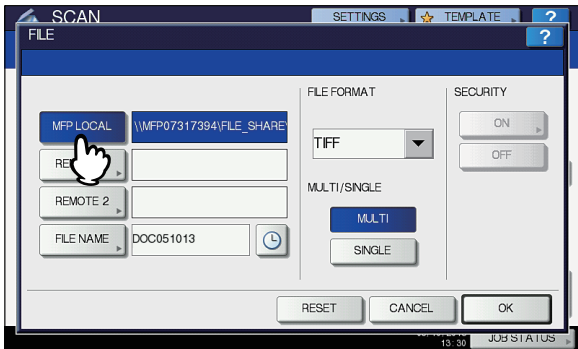


Proceed to step 9.

Memo

- If saving data in a network folder is enabled by the administrator, you can select 2 file destinations from [MFP LOCAL], [REMOTE 1] and [REMOTE 2]. If you select [MFP LOCAL], you can specify a network folder (REMOTE 1 or 2) as a remote destination. To set a network folder as a remote destination, proceed to step 5.

5 To store the scan in a network folder, press [REMOTE 1] or [REMOTE 2].

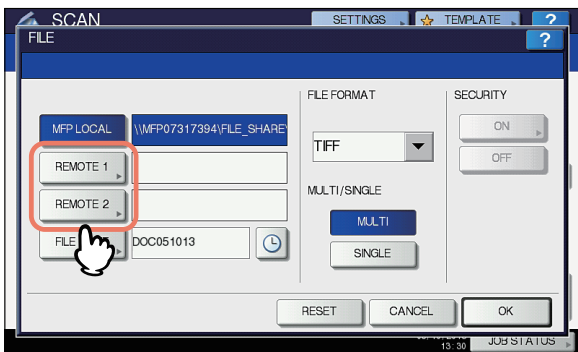


- If the selected remote destination (REMOTE 1 or 2) is configured by the administrator so that you can specify a desired network folder, the screen for setting up the remote destination is displayed. Proceed to step 6.
- If the selected remote destination (REMOTE 1 or 2) is already defined by the administrator so that the scan is saved in a specified network folder, pressing the button does not display the screen for specifying the file destination. In this case, you cannot change the file destination. Proceed to step 9. If you need to change the remote destination, ask your network administrator for help.

Memo

- If saving data in a network folder is enabled by the administrator, you can select 2 file destinations from [MFP LOCAL], [REMOTE 1] and [REMOTE 2].

6 Select the desired file destination from the list.


- 1) Select the file destination.
- 2) Press [OK].

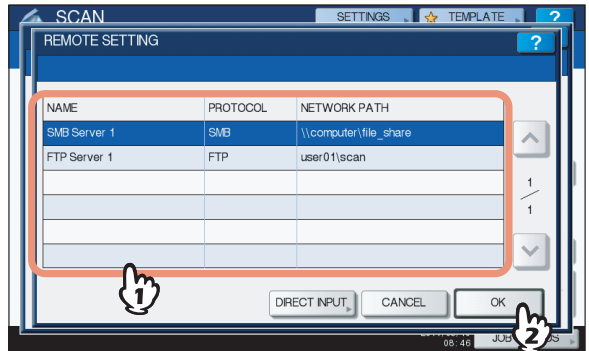

- If FTP, NetWare IPX, NetWare IP or FTPS is selected for the file destination, proceed to Step 9.
- If SMB is selected for the file destination, proceed to Step 7.
- If your desired file destination has not been registered in the equipment, press [DIRECT INPUT] and proceed to Step 8.

7 If SMB is selected for the file destination, select the folder to be stored.


- 1) Select the folder to be stored.
- 2) Press [OK].

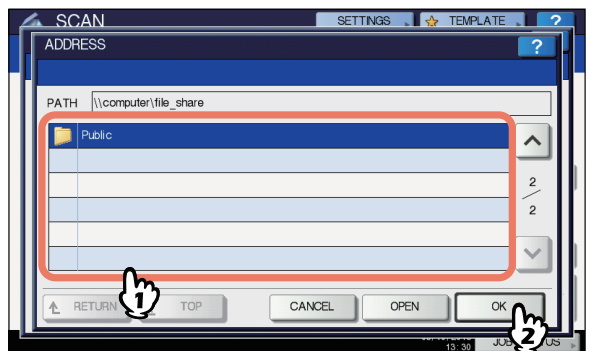

Proceed to Step 9.

8 Select a folder for the remote destination.

- 1) Select FTP, SMB, NetWare IPX, NetWare IP, or FTPS as a protocol to transfer the file.
- 2) Press [SERVER NAME], [NETWORK PATH], [LOGIN USER NAME], [PASSWORD] and/or [COMMAND PORT] and specify the file destination.
- 3) Finally, press [OK].

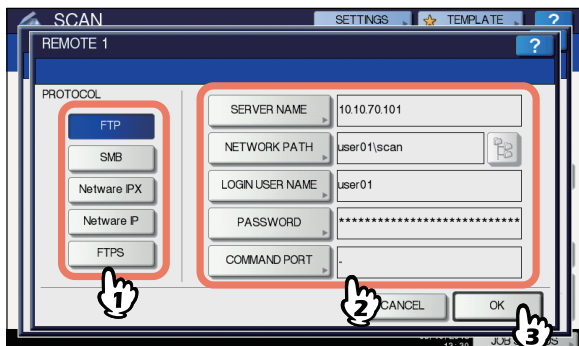

- [SERVER NAME] (FTP, NetWare IPX, NetWare IP, and FTPS only)

When you select [FTP]:

Enter the IP address of the FTP server. For example, to transfer the scanned data to "ftp://10.10.70.101/user01/scan/," enter "10.10.70.101" in this box.

When you select [NetWare IPX]:

Enter the name of the NetWare file server or the Tree/Context (when NDS is available).

When you select [NetWare IP]:

Enter the IP address of the NetWare file server.

When you select [FTPS]:

Enter the IP address of the FTP server. For example, to transfer the scanned data to "ftps://10.10.70.101/user01/scan/," enter "10.10.70.101" in this box.

- [NETWORK PATH]

When you select [FTP]:

Enter the path to a folder in the FTP server where you want to store the scanned data. For example, to transfer the scanned data to "ftp://10.10.70.101/user01/scan/," enter "user01\scan" in this box.

When you select [SMB]:

Enter the network path to the folder where you want to store the scanned data.

When you select [NetWare IPX] or [NetWare IP]:

Enter the path to a folder in the NetWare file server where you want to store the scanned data. For example, to transfer the scanned data to the "sys\scan" folder in the NetWare file server, enter "\sys\scan" in this box.

When you select [FTPS]:

Enter the path to a folder in the FTP server where you want to store the scanned data. For example, to transfer the scanned data to "ftps://10.10.70.101/user01/scan/," enter "user01\scan" in this box.

- [LOGIN USER NAME]

When you select [FTP]:

Enter the log-in user name for the FTP server if required.

When you select [SMB]:

Enter the user name to access the network folder if required.

When you select [NetWare IPX] or [NetWare IP]:

Enter the log-in user name for the NetWare file server if required.

When you select [FTPS]:

Enter the log-in user name for the FTP server if required.

- [PASSWORD]

When you select [FTP]:

Enter the log-in password for the FTP server if required.

When you select [SMB]:

Enter the password for accessing the network folder if required.

When you select [NetWare IPX] or [NetWare IP]:

Enter the log-in password for the NetWare file server if required.


When you select [FTPS]:

Enter the log-in password for the FTP server if required.

- [COMMAND PORT] (FTP and FTPS only)


Enter the port number to be used for command execution. By default, a hyphen "-" is entered in this box, and the port number set by the administrator is used. Change the entry in this box only when you want to use another port number.



- Pressing each button displays an on-screen keyboard. Enter each item using the keyboard and digital keys, and then press [OK] to set the entry.
- To store files in [SMB], enter the network path, login user name and password then  press, so that you can select the folder.

9 Define the settings for the new file as required.

- 1) Press [FILE NAME] and change the file name.
- 2) Select an option for each of the FILE FORMAT, MULTI/SINGLE PAGE and/or SECURITY settings.
- 3) Finally, press [OK].

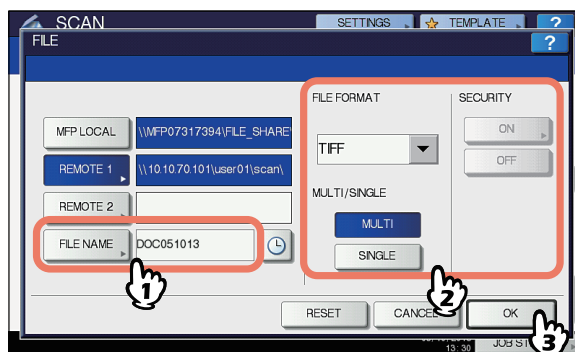

- To clear the settings, press [RESET].
- [FILE NAME]
Pressing the button displays an on-screen keyboard. Change the file name using the keyboard and digital keys, and then press [OK] to set the entry. The file name can consist of a maximum of 128 characters.



- Pressing adds a meaningful number, such as date and time, to the file name. The number is assigned according to the format selected for the Date Format setting, which is available for the administrator on TopAccess. For details, refer to the **TopAccess Guide**.
- The trailing characters in a file name (maximum 74) may be deleted depending on the type of letters used.

1 FILE FORMAT

- **[PDF]** — Press this button to store your scan as a PDF file.
- **[TIFF]** — Press this button to store your scan as a TIFF file.
- **[XPS]** — Press this button to store your scan as an XPS file.
- **[SLIM PDF]** — Press this button to store your scan as a slim PDF file. This option is suitable when minimizing the file size is more important than the image quality. This option is available only when [FULL COLOR] or [GRAY SCALE] is selected for the color mode setting.
- **[JPEG]** — Press this button to store your scan as a JPEG file. This option is available only when [FULL COLOR] or [GRAY SCALE] is selected for the color mode setting.



- XPS files are supported only by the following operating systems:
 - Windows Vista
 - Windows 7
 - Windows Server 2008 SP1 or later versions
 - Windows XP SP2 or later versions with .NET Framework 3.0 installed
 - Windows Server 2003 SP1 or later versions with .NET Framework 3.0 installed
- If the forced encryption setting is enabled, PDF is the only available file format.

2 MULTI/SINGLE PAGE


- **[MULTI]** — Press this button to store your scan as a multiple page file. When you scan several pages, the equipment stores all the pages as a single file.
- **[SINGLE]** — Press this button to store your scan as a single file for each page. When you scan several pages, the equipment stores each page as a separate file.

3 SECURITY

When PDF is selected for the file format, you can decide whether or not to encrypt the PDF file. To encrypt the PDF file, press [ON]. For further instructions on how to encrypt PDF files, see the following Guide:


Advanced Guide

10 Press [SCAN].

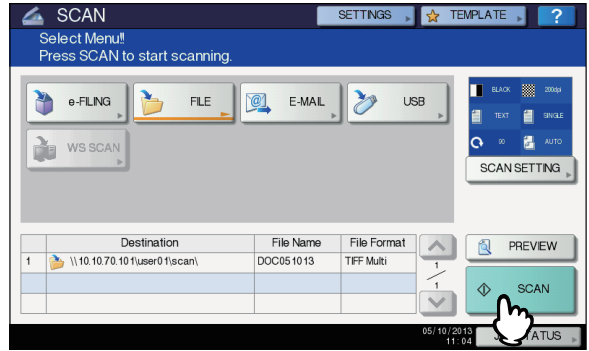

- To scan 2-sided documents or change settings such as Color Mode and Resolution, press [SCAN SETTING].
- Press [PREVIEW] and then [SCAN] to preview your scans.
- You can select and set [e-FILING], [E-MAIL] or [USB] as another scan function. (Dual Agents)


11 If the screen below appears, place another original on the original glass and press [SCAN] or the [START] button to continue scanning. To finish the job, press [JOB FINISH], followed by the [RESET] button.

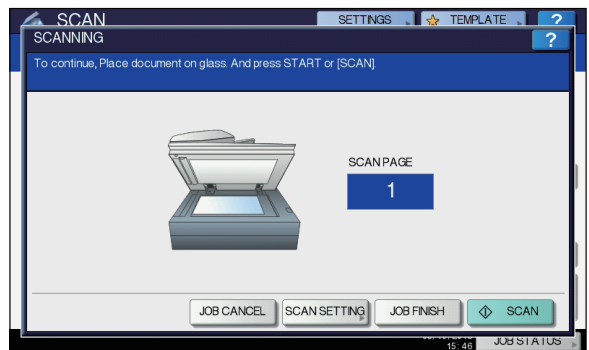

- The above screen is not displayed under the following conditions:
 - You scan the original from the Reversing Automatic Document Feeder without pressing [CONTINUE] to scan additional originals.
 - A scan preview is displayed.
 - To cancel the operation, press [JOB CANCEL].
 - To change the scan settings, press [SCAN SETTING].
- Advanced Guide**



- When the equipment has scanned more than 1000 pages in a job, the "The number of originals exceeds the limits. Will you save stored originals?" message appears. If you want to save the scans, press [YES].
- When the temporary workspace is full on the equipment's hard disk, a message appears and the job is canceled. The available workspace can be viewed on the TopAccess [Device] tab.

- If the number of jobs waiting to store scans in the equipment's hard disk exceeds 20, a message appears to indicate that the equipment's memory is full. In this case, wait a while until memory becomes available again or delete unnecessary jobs from [JOB STATUS].
 P.90 "Viewing the scan job status"


Scan to E-mail

With this scan function, you can send your scans to a specified e-mail address as an attached file.


The mail server and the domain name server are set by the administrator. For details, refer to the **TopAccess Guide**.

Scanning to e-mail

- 1 Place the original(s).
- 2 On the control panel, press the [SCAN] button to enter the SCAN menu.

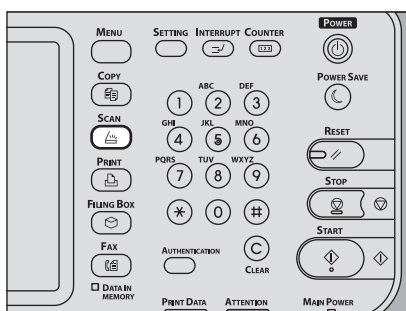

- 3 Press [E-MAIL].

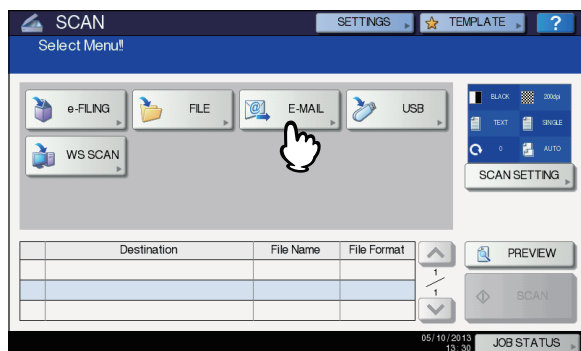


- If the User Authentication for Scan to E-mail setting is enabled by the administrator on TopAccess, the AUTHENTICATION screen is displayed. In this case, proceed to step 4.
- If the User Authentication for the Scan to E-mail setting is disabled by the administrator, proceed to step 5.

Memo

- Press [PREVIEW] in this step and then select the scan function in order to preview your scans at the end of the operation.

- 4 On the AUTHENTICATION screen, complete the user authentication.

- 1) Press [USER NAME] and enter the user name.
- 2) Press [PASSWORD] and enter the password.
- 3) Finally, press [OK].

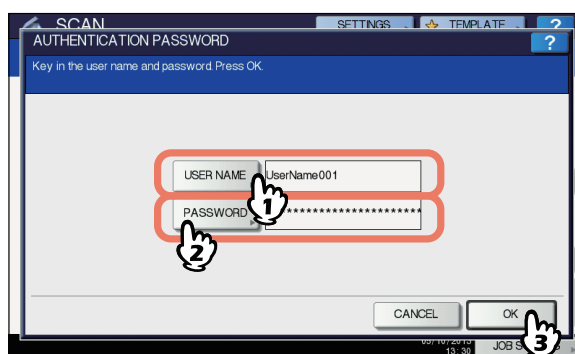


Memo

- Pressing each button displays an on-screen keyboard. Enter each item using the keyboard and digital keys, and then press [OK] to set the entry.

Note


- The above screen is displayed only when the User Authentication for Scan to E-mail setting is enabled on TopAccess by the administrator. If this screen is displayed, you must enter your user name and password to log in to the SCAN TO E-MAIL screen. For the user name and password, ask your network administrator.

- 5 Press [TO].

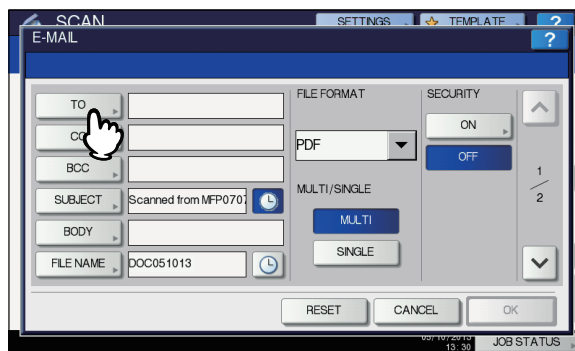

6 Specify the e-mail address(es) that you want to send to.

- 1) Press [INPUT @].
- 2) Enter an e-mail address using the keyboard and digital keys, and then press [OK] to set the entry.
- 3) Finally, press [OK].

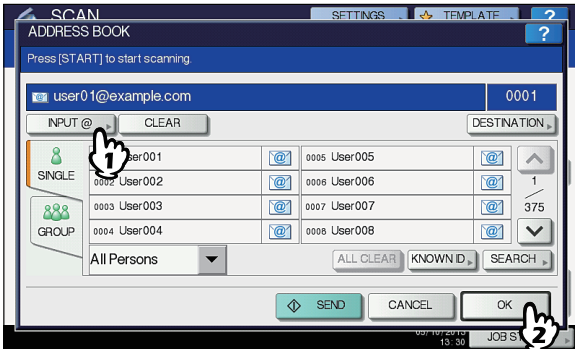


You can specify e-mail addresses in various ways. For details, see the following Guide:

Advanced Guide

Memo

- The entry in the FROM ADDRESS box (→ step 9) may already be set by the administrator on TopAccess. (Refer to the **TopAccess Guide** for descriptions of the E-mail Setting and/or the User Authentication for Scan to E-mail setting.) In this case, you can start sending your scans by specifying the e-mail address(es) and then pressing [SEND] or the [START] button.

7 Press [SUBJECT] and [BODY] and enter each item.

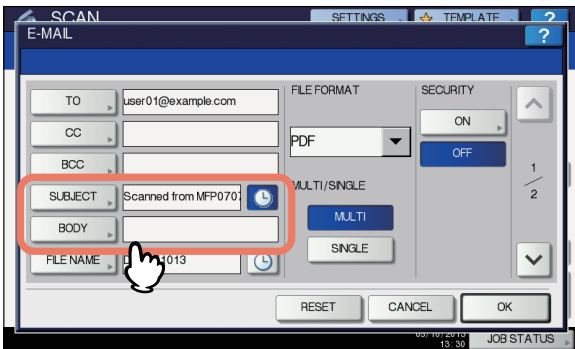


Memo

- To clear the settings, press [RESET].
- Pressing each button displays an on-screen keyboard. Enter each item using the keyboard and digital keys, and then press [OK] to set the entry. The maximum number of characters allowed for each box is as follows:
 - [SUBJECT]: 128 characters
 - [BODY]: 1000 characters
- To add another contact, press [CC] or [BCC] to add the E-mail address of the contact.
- When the e-mail is sent, the date and time are automatically added to the subject.
- The administrator can change the body text. For details, refer to the **TopAccess Guide**.

- Pressing adds a meaningful number, such as date and time, to the subject. For details, refer to the **TopAccess Guide**.

8 If necessary, make the following settings for the attached file.

- 1) Press [FILE NAME] and change the file name.
- 2) Select an option for each of the FILE FORMAT, MULTI/SINGLE PAGE and/or SECURITY settings.
- 3) Finally, press .

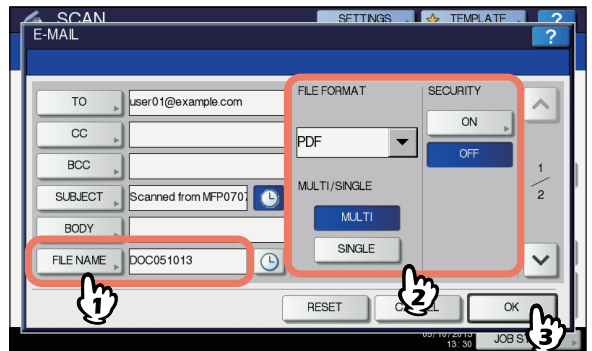

- [FILE NAME]
Pressing the button displays an on-screen keyboard. Enter the file name using the keyboard and digital keys, and then press [OK] to set the entry. The file name can consist of a maximum of 128 characters.

Memo

- Pressing adds a meaningful number, such as date and time, to the file name. The number is assigned according to the format selected for the Date Format setting, which is available for the administrator on TopAccess. For details, refer to the **TopAccess Guide**.
- The trailing characters in a file name (maximum 74) may be deleted depending on the type of letters used.

- FILE FORMAT
 - [PDF] — Press this button to store your scan as a PDF file.
 - [TIFF] — Press this button to store your scan as a TIFF file.
 - [XPS] — Press this button to store your scan as an XPS file.
 - [SLIM PDF] — Press this button to store your scan as a slim PDF file. This option is suitable when minimizing the file size is more important than the image quality. This option is available only when [FULL COLOR] or [GRAY SCALE] is selected for the color mode setting.
 - [JPEG] — Press this button to store your scan as a JPEG file. This option is available only when [FULL COLOR] or [GRAY SCALE] is selected for the color mode setting.



- XPS files are supported only by the following operating systems:
 - Windows Vista
 - Windows 7
 - Windows Server 2008 SP1 or later versions
 - Windows XP SP2 or later versions with .NET Framework 3.0 installed
 - Windows Server 2003 SP1 or later versions with .NET Framework 3.0 installed
- If the forced encryption setting is enabled, PDF is the only available file format.

• MULTI/SINGLE PAGE


[MULTI] — Press this button to store your scan as a multiple page file. When you scan several pages, the equipment stores all the pages as a single file.

[SINGLE] — Press this button to store your scan as a single file for each page. When you scan several pages, the equipment stores each page as a separate file.

• SECURITY

When PDF is selected for the file format, you can decide whether or not to encrypt the PDF file. To encrypt the PDF file, press [ON]. For further instructions on how to encrypt PDF files.

9 Specify the following items as required, and then press [OK].

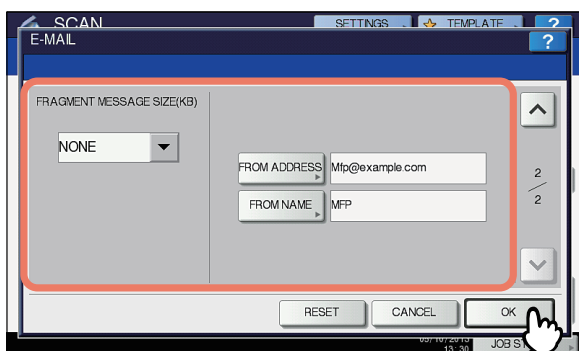

- **FRAGMENT MESSAGE SIZE (KB)**
Select the size of message fragmentation. If the size of the attached file exceeds that selected here, the equipment transmits the file by dividing the data into smaller blocks.


! Note

- If the data size of the e-mail exceeds the maximum allowed for transmission, the attached file will not be sent. The maximum data size for e-mail transmission can be set by the administrator on the TopAccess SMTP Client page.
- **[FROM ADDRESS]**
Press this button to edit the sender's e-mail address. You cannot edit the box if the administrator sets the sender's e-mail address so that it cannot be edited.
- **[FROM NAME]**
Press this button to edit the sender's name.




- Pressing [FROM ADDRESS] or [FROM NAME] displays an on-screen keyboard. Enter each item using the keyboard and digital keys, and press [OK] to set the entry.
- You can start sending your scans on the above screen by pressing the [START] button on the control panel.

10 Press [SCAN] or the [START] button.

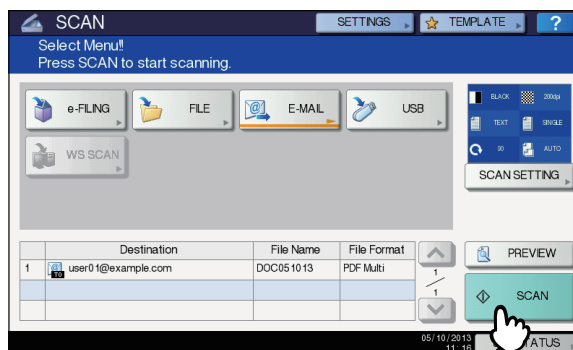

- To scan 2-sided documents or change settings such as Color Mode and Resolution, press [SCAN SETTING].
- Press [PREVIEW] and then [SCAN] to preview your scans.
- You can select and set [e-FILING], [E-MAIL] or [USB] as another scan function. (Dual Agents)

11 If the screen below appears, place another original on the original glass and press [SCAN] or the [START] button to continue scanning. To finish the job, press [JOB FINISH], followed by the [RESET] button.

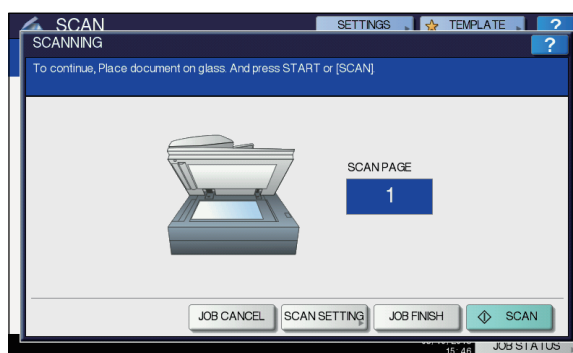

- The above screen is not displayed under the following conditions:
 - You scan the original from the Reversing Automatic Document Feeder without pressing [CONTINUE] to scan additional originals.
 - A scan preview is displayed.
 - To cancel the operation, press [JOB CANCEL].
 - To change the scan settings, press [SCAN SETTING].
- Advanced Guide**

! Note

- When the equipment has scanned more than 1000 pages in a job, the "The number of originals exceeds the limits. Will you save stored originals?" message appears. If you want to save the scans, press [YES].

- When the temporary workspace is full on the equipment's hard disk, a message appears and the job is canceled. The available workspace can be viewed on the TopAccess [Device] tab.

Scan to USB

The Scan to USB function stores scans to a USB storage device.


To store data in a USB storage device, the Save to USB Media setting must be enabled by the administrator. For details, refer to the *TopAccess Guide*.

! Note


- USB storage devices must meet requirements below. However, some USB storage devices may not be used with this equipment even though the requirements below are met.
 - FAT16 or FAT32 format
 - Single-partition (USB storage devices with multiple partitions are not supported.)

Scanning to USB

- Place the original(s).
- On the control panel, press the [SCAN] button to enter the SCAN menu.

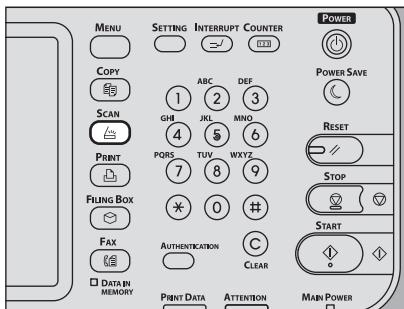


- To store scans in a USB storage device, connect the device to the equipment and wait a few seconds.

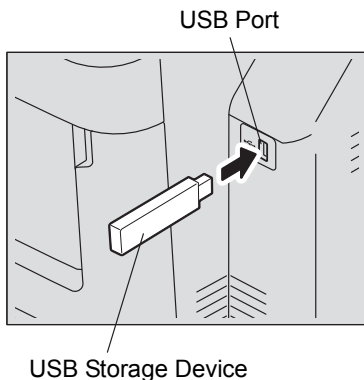

! Note

- Connect the USB storage device to the USB port.

4 When "Found USB DEVICE." message appears on the touch panel, press [USB].

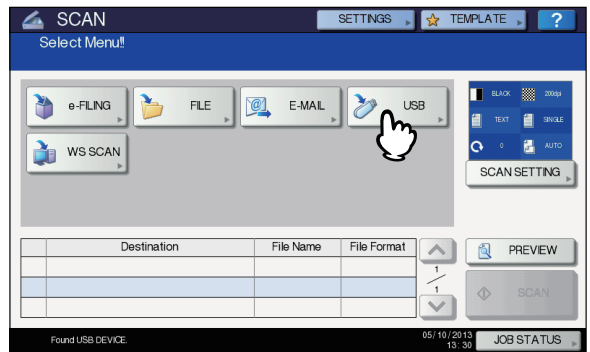

! Note


- When you store scans in a USB storage device, never attempt to remove the device from the equipment until data transmission is completed. Removing the USB storage device during data transmission may corrupt the device.

Memo

- Storing scans to a USB storage device may take a long time depending on the volume of the scans.
- Press [PREVIEW] in this step and then select the scan function in order to preview your scans at the end of the operation.

5 Define the settings for the new file as required.


- Press [FILE NAME] to change the file name.
- Select an option for each of the FILE FORMAT, MULTI/SINGLE PAGE and SECURITY settings.
- After the settings are done, press [OK].

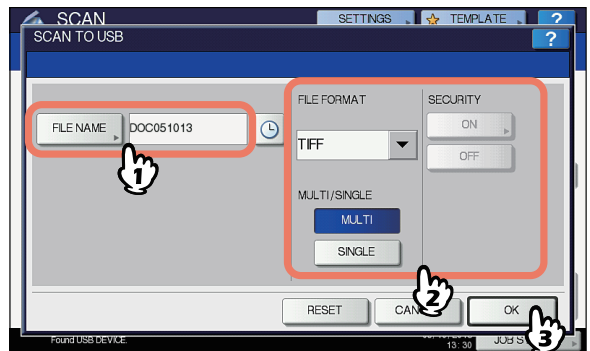


Memo

- To clear the settings, press [RESET].
- [FILE NAME] Pressing this button displays an on-screen keyboard. Change the file name using the keyboard and digital keys, and then press [OK] to set the entry. A maximum of 128 letters can be used for the file name.


! Note

- Pressing  adds some numbers such as date and time to the file name. These numbers can be set in the format selected in the Date Format setting of the TopAccess menu, which can be set by the administrator. For details, refer to the **TopAccess Guide**.
 - The trailing characters in a file name (maximum 74) may be deleted depending on the type of letters used.
- FILE FORMAT**
- [PDF]** – Press this button to store scans as a PDF file.
 - [TIFF]** – Press this button to store scans as a TIFF file.
 - [XPS]** – Press this button to store scans as an XPS file.
 - [SLIM PDF]** – Press this button to store scans as a slim PDF file. This option is suitable when minimizing the file size is more important than the image quality. This option is available only when [FULL COLOR] or [GRAY SCALE] is selected for the color mode setting.
 - [JPEG]** – Press this button to store scans as a JPEG file. This option is available only when [FULL COLOR] or [GRAY SCALE] is selected for the color mode setting.

Memo

- XPS files are supported only by the following operating systems:
 - Windows Vista
 - Windows 7
 - Windows Server 2008 SP1 or later versions
 - Windows XP SP2 or later versions with .NET Framework 3.0 installed
 - Windows Server 2003 SP1 or later versions with .NET Framework 3.0 installed
 - If the forced encryption setting is enabled, PDF is the only format available.
- MULTI/SINGLE PAGE**
- [MULTI]** – Press this button to store scans as a multiple page file. When you scan several pages, the equipment stores all the pages as a single file.
 - [SINGLE]** – Press this button to store scans as a single file for each page. When you scan several pages, the equipment stores each page as a separate file.
- SECURITY**
- When PDF is selected for the file format, you can decide whether or not to encrypt the PDF file. To encrypt the PDF file, press [ON]. For the details of the encryption setting, see the following Guide:
-  **Advanced Guide**


6 Press [SCAN] to scan data.

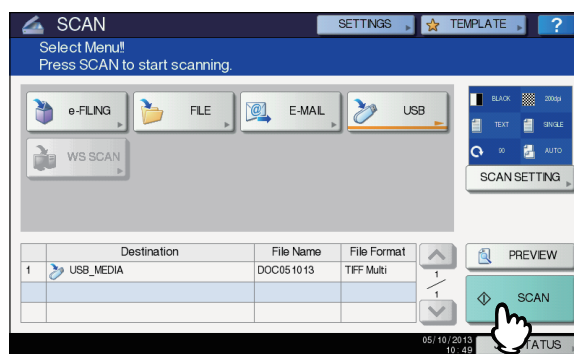


Memo

- To scan 2-sided documents or set Color Mode or Resolution, etc., press [SCAN SETTING].
- Press [PREVIEW] and then [SCAN] to preview your scans.
- You can select and set [e-FILING], [E-MAIL] or [USB] as another scan function. (Dual Agents)


7 If the screen below appears, place another original on the original glass and press [SCAN] or the [START] button to continue scanning. To finish the job, press [JOB FINISH], followed by the [RESET] button.

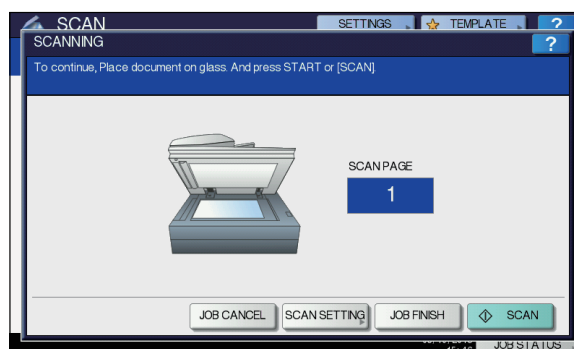

- The above screen is not displayed under the following conditions:
 - You scan the original from the Reversing Automatic Document Feeder without pressing [CONTINUE] to scan additional originals.
 - A scan preview is displayed.
 - To cancel the operation, press [JOB CANCEL].
 - To change the scan settings, press [SCAN SETTING].
-  **Advanced Guide**

! Note

- When the equipment has scanned more than 1000 pages in a job, the "The number of originals exceeds the limits. Will you save stored originals?" message appears. If you want to save the scans, press [YES].
- When the temporary workspace is full on the equipment's hard disk, a message appears and the job is canceled. The available workspace can be viewed on the TopAccess [Device] tab.

- If the number of jobs waiting to store scans in the equipment's hard disk exceeds 20, a message appears to indicate that the equipment's memory is full. In this case, wait a while until memory becomes available again or delete unnecessary jobs from [JOB STATUS].
 P.90 "Viewing the scan job status"

Web Service (WS) Scan

Web Service (WS) Scan uses the functions of Windows operating systems such as Windows Vista to scan images from a client computer through the network. Scanning can be performed through the touch panel operation or from a client computer running Windows operating systems such as Windows Vista. The images scanned on the equipment can be loaded to your client computer and viewed on an application supporting the Windows Imaging Acquisition (WIA) Scan Driver.

System Requirements

The WS Scan function is available under the following environments:

- OS
 Windows Vista / Windows 7 / Windows Server 2008
- Software
 Windows Imaging Acquisition (WIA)-compliant applications

Scan Driver Installation

WS Scan uses the WIA Scan Driver included with Windows operating systems such as Windows Vista. The WIA Scan Driver is automatically installed to your client computer when you install client software for Web Service Printing.

 **Note**

- To install the WIA Scan Driver on a client computer, the Web Service Scan setting must be enabled by the administrator on TopAccess. For details, refer to the **TopAccess Guide**.


 **Memo**

- The User Documentation DVD includes the WIA Driver for users of Windows XP/Windows Vista/Windows 7/Windows Server 2003/Windows Server 2008. This driver can be used together with a WIA-compliant application, such as Microsoft Paint supported by Windows XP or Windows Vista, to scan images on the equipment and load them to your client computer.


This guide provides instructions for using the touch panel to scan images on the equipment. For operational instructions on the client computers, refer to the documentation that comes with your WIA-compliant application.

Scanning with Web Service Scan


- 1 Place the original(s).
- 2 On the control panel, press the [SCAN] button to enter the SCAN menu.

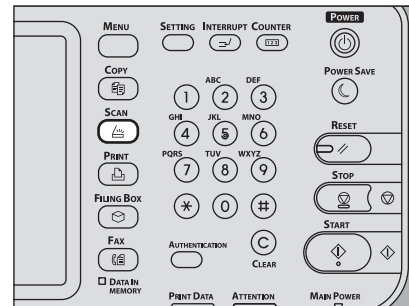

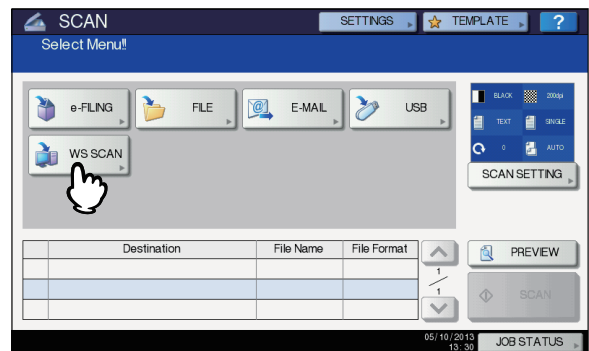

- 3 Press [WS SCAN].

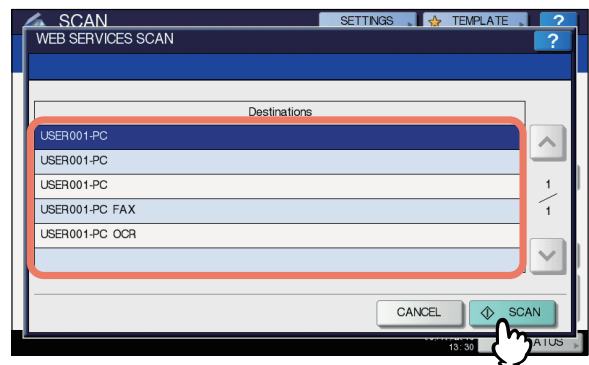


- 4 Select the client that fits your needs, and then press [SCAN].



 **Memo**

- If the desired client name is not shown on the screen, use  and  to switch between pages.

The following screen is displayed.

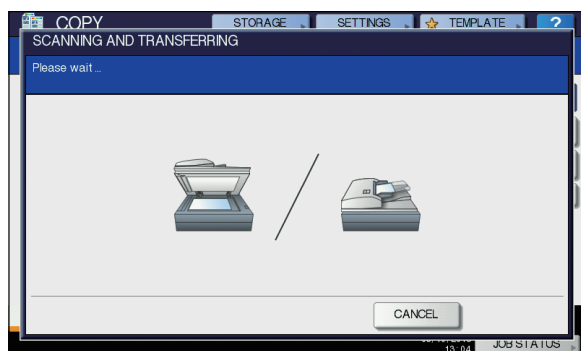

- To cancel the operation, press [CANCEL].



- If the above screen does not appear, make sure that the selected client is running.

Using Saved Scan Data

Using scan data saved as e-Filing documents

You can display a list of the scan data stored in e-Filing and use it in various ways from the touch panel or with the e-Filing web utility. For instructions on how to use the data stored in e-Filing, refer to the *e-Filing Guide*.

Using scan data saved as files

To access your scans stored in the equipment's shared folder, a USB storage device, or a network folder, use the Windows Explorer search function or the Macintosh Finder.

■ Using scans saved in MFP LOCAL

When you select [MFP LOCAL] to save your scans, they are stored in the equipment's shared folder named "file_share." You can access this folder from a computer running a Windows OS or Mac OS X 10.3.x or later.



- The equipment's shared folder cannot be accessed from Mac OS X 10.2.x or earlier because these versions do not support SMB.




- If you access the equipment's shared folder from Macintosh OS X 10.3.x or later, connecting to the network from the Finder displays the SMB/CIFS File dialog box. Enter your user name and password in the dialog box as required.

Whether your scans are stored directly in the shared folder or in a sub-folder is controlled by the Local Storage Path setting on TopAccess. The administrator can change this setting from the Setup page by clicking the "Save as file" submenu. For details, refer to the *TopAccess Guide*.

When scans are sent to a sub-folder:

When the Local Storage Path setting is set to send the scans to a sub-folder in the path, the equipment automatically creates a sub-folder. The name of the sub folder depends on how you operate the Scan to File function.

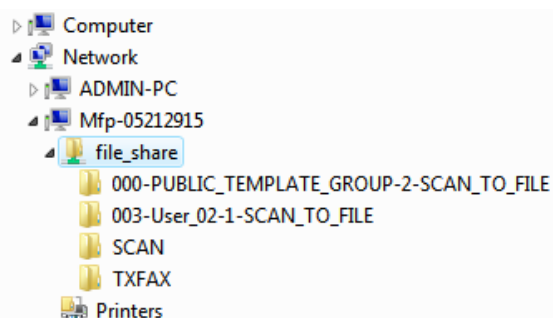

The sub-folders created under "file_share" are as follows:

- "SCAN" — This sub-folder contains files created by the Scan to File function.
- "000-PUBLIC_TEMPLATE_GROUP-[Template Name]" — This sub-folder contains files created using a scan template in the Public Template group.
- "[Group No.]-[Group Name]-[Template Name]" — This sub-folder contains files created using a scan template in the User Template group.

The sub-folders are automatically deleted when the folder becomes empty.


When scans are sent directly to the shared folder:

When the Local Storage Path setting is set to send the scan data directly to storage, they are stored in the equipment under the "file_share" folder.

■ Using scans saved in USB storage device

When you select [USB] to save your scans, they are stored in the USB storage device connected to the equipment.

When you save your scans in the USB storage device, a sub-folder is automatically created. The name of the sub-folder depends on how you operate the Scan to USB function.

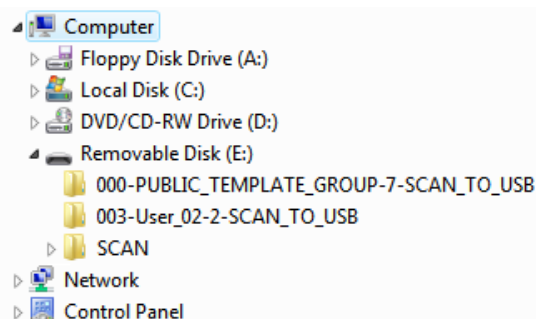

- "SCAN" — This sub-folder contains files created by the Scan to USB function.
- "000-PUBLIC_TEMPLATE_GROUP-[Template Name]" — This sub-folder contains files created using a scan template in the Public Template group.
- "[Group No.]-[Group Name]-[Template Name]" — This sub-folder contains files created using a scan template in the User Template group.

■ Using scans saved in network folders (REMOTE 1/2)

When you select [REMOTE 1] or [REMOTE 2] to store data, they are stored in the Scan folder automatically created in the specified network folder. When these data contain a template, they are stored in a folder that has been specified in the template setting.

Viewing the Scan Job Status and Log


The status and log of scan jobs can be viewed on the touch panel.

Note

- If the equipment is managed by the User Management feature, you need to enter the user information, such as the user name and password.

Viewing the scan job status

Pressing [JOB STATUS] > [JOBS] > [SCAN] on the touch panel displays a list of the scan jobs in progress. The jobs can be deleted if needed.

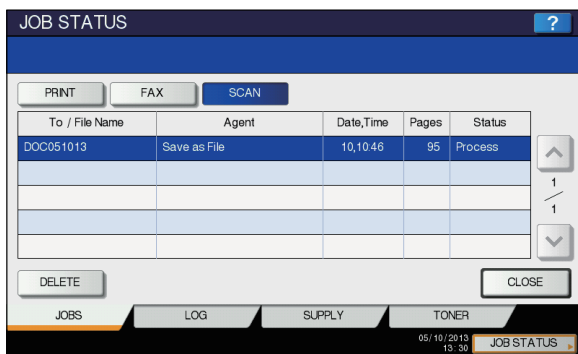

In the list, you can view each job's destination/file name, agent (scan function), date and time, number of pages, and current status. The maximum number of displayed jobs differs depending on your model or operating environment.


To display the previous or next page, press or . The number of jobs displayed on a page varies depending on the equipment used.

To delete jobs, select one on the list and press [DELETE]. You can select more than one job to be deleted.

To exit from the JOB STATUS screen, press [CLOSE].

Viewing the scan job log

A record of scan jobs can be displayed on the [LOG] tab of the JOB STATUS screen. To display the record on the touch panel, press [JOB STATUS] > [LOG] > [SCAN].

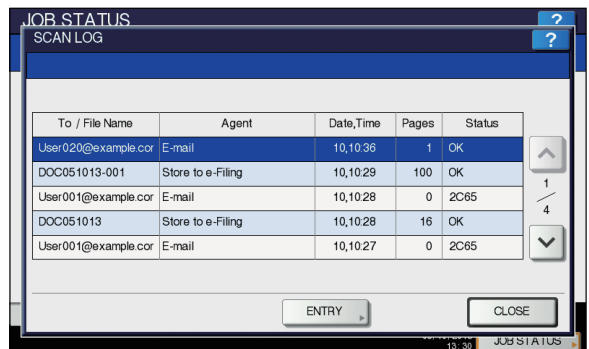

On the [LOG] tab, you can view each job's destination/file name, agent (scan function), date and time, number of pages, and status (job result). Up to 1000 jobs can be listed.

To display the previous or next page, press or . The number of jobs displayed on a page varies depending on the equipment used.

If you want to register an e-mail address on the list to the address book, press [ENTRY].

Advanced Guide

To exit from the SCAN LOG screen, press [CLOSE].

Memo

- For details of the job record displayed on the [LOG] tab, refer to the **TopAccess Guide**.
- For details on error codes displayed in the "Status" column, refer to the **Troubleshooting Guide**.
- The scan job log can be exported to a USB storage device.

5

Utilities that can be used with this machine

List of Utilities P.92

1

2

3

4

5

6

● List of Utilities

Common Utilities for Windows/Macintosh

You can use the following utilities.
For details, refer to the *Utility Guide*.

- AddressBook Viewer
- e-Filing Backup/Restore
- TWAIN Driver
- File Downloader
- Remote Scan Driver
- WIA Driver

1

2

3

4

5

6

6

Index

1

2

3

4

5

6

A

| | |
|---|----|
| Advanced Guide | 2 |
| Alert Message Display Area | 78 |
| AMS (Automatic Magnification Selection) | 47 |
| [APS] | 44 |
| APS (Automatic Paper Selection) | 44 |
| AUTO COLOR | 46 |
| Auto job start | 33 |
| Automatic Paper Selection (APS) | 44 |

B

| | |
|-----------------------------------|----|
| Background Adjustment | 79 |
| Basic Guide | 2 |
| Batch transmission function | 61 |
| BLACK | 46 |
| Blue (B) | 79 |
| [BODY] | 84 |
| Bypass copying | |
| bypass copying | 35 |
| envelope | 39 |
| non-standard size paper | 40 |
| standard size paper | 36 |

C

| | |
|---|--------|
| Canceling direct transmissions | 75 |
| Canceling reserved transmissions | 75 |
| Canceling the memory transmission | 74 |
| Clearing the set functions | 43 |
| Color mode | 79 |
| AUTO COLOR | 46 |
| BLACK | 46 |
| color mode | 43, 46 |
| FULL COLOR | 46 |
| [COMMAND PORT] | 81 |
| Communication status | 73 |
| Compress | 79 |
| Configuration Settings | 21 |
| Confirmation screen | 43 |
| Considerations | 24, 26 |
| Continuous feed mode | 30 |
| Contrast | 79 |
| Convenient Functions | 7 |
| COPY & FILE | 56 |
| Copy quantity | 43 |
| Copying | |
| auto job start | 33 |
| basic procedure | 31 |
| before making copies | 28 |
| book-type originals | 29 |
| bypass copying | 35 |
| copy & file | 56 |
| copy quantity | 43 |
| duplex copying | 54 |
| envelope | 39 |
| interrupting | 33 |
| making copies | 31 |
| mixed-size originals | 45 |
| non-standard size paper | 40 |
| number of copies | 31 |
| photo originals | 50 |
| proof copy | 33 |

| | |
|--------------------------------------|--------|
| reproduction ratio | 43, 47 |
| restarting | 32 |
| stopping | 32 |
| Copying functions | |
| before using copying functions | 43 |
| clearing the set functions | 43 |
| confirming the set functions | 43 |

D

| | |
|-------------------------------------|--------|
| Date and Time | 78 |
| Default settings | 43, 78 |
| Density adjustment | 43, 47 |
| Department Code | 21, 23 |
| Destination Display Area | 78 |
| [Device Settings] tab | 22 |
| Different width originals | 63 |
| DIRECT TX | 64 |
| Duplex copying | |
| 1-sided original -> 1-sided copy .. | 54 |
| 1-sided original -> 2-sided copy .. | 55 |
| 2-sided original -> 1-sided copy .. | 55 |
| 2-sided original -> 2-sided copy .. | 55 |
| simplex/duplex setting | 54 |

E

| | |
|--|------------|
| ECM | 65 |
| e-Filing | 79, 89 |
| Enter the user credentials manually .. | 25 |
| Envelope | 39 |
| EXPOSURE | 65 |
| Exposure | 79 |
| External telephone | 69, 70, 71 |

F

| | |
|-----------------------------|--------|
| Feeding mode | 30 |
| File formats | 82, 84 |
| [FILE NAME] | 81, 84 |
| Finisher | 22 |
| Inner Finisher | 52 |
| name of each part | 52 |
| Finishing mode | |
| finishing mode | 43 |
| group | 51, 52 |
| magazine sort | 51, 54 |
| non-sort non-staple | 51 |
| selecting | 51 |
| sort | 51, 52 |
| staple sort | 51, 53 |
| FRAGMENT MESSAGE SIZE | 85 |
| [FROM ADDRESS] | 85 |
| [FROM NAME] | 85 |
| FTP | 58 |
| FTPS | 58 |
| FULL COLOR | 46 |
| Function Buttons | 78 |

G

| | |
|-----------------|--------|
| Green (G) | 79 |
| Group | 51, 52 |

H

| | |
|-------------------------|----|
| [?] (Help Button) | 78 |
| How to print | 24 |

I

| | |
|----------------------------|----------------|
| IMAGE SMOOTHING | 46 |
| Install | 12, 14, 16, 19 |
| INTERNET FAX | 65 |
| Internet Fax | 73 |
| [INTERRUPT] button | 33 |
| Interrupting copying | 33 |
| ITU-T | 65 |

J

| | |
|--------------------|----|
| [JOB STATUS] | 78 |
|--------------------|----|

L

| | |
|-------------------------|--------|
| Limitations | 24, 26 |
| List of Utilities | 92 |
| Log | |
| scan | 90 |
| [LOGIN USER NAME] | 81 |

M

| | |
|--------------------------------|--------|
| Magazine sort | 51, 54 |
| MAIL BOX COMMUNICATION | 65 |
| MAP | 46 |
| MEMORY TX | 64 |
| Menu | |
| Scan | 78 |
| Message Display Area | 78 |
| [MFP LOCAL] | 80, 89 |
| Model Selection | 22 |
| Multi/Single | 82, 85 |
| Multi-purpose tray (MPT) | 36 |

N

| | |
|---------------------------|--------|
| NetWare IP | 58 |
| NetWare IPX | 58 |
| Network Fax | 73 |
| Network folder | 79, 90 |
| [NETWORK PATH] | 81 |
| Next original | 61 |
| Non-sort Non-staple | 51 |
| Number of copies | 31 |

O

| | |
|----------------------------------|------------|
| Off-hook transmission | 70 |
| OHP film | 35, 37 |
| Omit Blank Page | 79 |
| On-hook transmission | 69 |
| Operating Environment | 13 |
| [OPTION] | 60, 64, 66 |
| Original | |
| original scanning range | 62 |
| originals that can be sent | 61 |

| | |
|---|--------|
| placing the original(s) on the original glass | 62 |
| placing the original(s) on the RADF | 63 |
| Original glass | 28 |
| [ORIGINAL MODE] | 46 |
| ORIGINAL MODE | 64 |
| Original mode | 79 |
| IMAGE SMOOTHING | 46 |
| MAP | 46 |
| original mode | 43, 46 |
| PHOTO | 46 |
| PRINTED IMAGE | 46 |
| TEXT | 46 |
| TEXT/PHOTO | 46 |
| ORIGINAL SIZE | 65 |
| Original size | 79 |
| Original stopper | 30 |
| Originals | |
| acceptable originals | 28 |
| mixed-size originals | 45 |
| placing | 28 |
| using the RADF | 29 |
| Outside Erase | 79 |
| Override Application Paper Source Settings | 22 |

P

| | |
|---|------------|
| Paper | |
| acceptable size of paper | 72 |
| default setting for RX printing | 72 |
| out of paper | 32 |
| paper priority when there is no same size paper | 72 |
| Paper holder | 35 |
| Paper selection | 43, 44 |
| [PASSWORD] | 81 |
| PHOTO | 46 |
| Photo zoom | 50 |
| PPD | 24 |
| Preparations | 14, 19 |
| [PREVIEW] | 61, 70, 78 |
| Print | 14, 19 |
| PRINTED IMAGE | 46 |
| Printer description file | 24 |
| Printer drivers | 12 |
| Proof copy | 33 |

Q

| | |
|------------------|----|
| QUALITY TX | 65 |
|------------------|----|

R

| | |
|--|----|
| RADF (Reversing Automatic Document Feeder) | |
| precautions | 29 |
| unacceptable originals | 29 |
| using the RADF | 29 |
| Range adjustment | 79 |
| Receiving | |
| AUTO reception | 71 |
| MANUAL reception | 71 |
| Memory reception | 72 |

| | |
|--|--------|
| Receiving tray selection | 34 |
| Recipient | |
| confirming the recipients | 69 |
| direct entry with digital keys | 66 |
| group entry | 67 |
| searching for by ID number | 68 |
| searching for the recipient's fax number | 68 |
| specifying the recipient in the address book | 67 |
| Red (R) | 79 |
| Redial function | 61 |
| [REMOTE 1] | 80, 90 |
| [REMOTE 2] | 80, 90 |
| Reproduction ratio | 43, 47 |
| Reserved transmissions | 73 |
| [RESET] button | 35, 43 |
| RESOLUTION | 64 |
| Resolution | 79 |
| RGB adjustment | 79 |
| Rotation | 79 |

S

| | |
|---|------------|
| Saturation | 79 |
| [SCAN] | 78 |
| [SCAN SETTING] | 78 |
| Scan Settings Display Area | 78 |
| Scan to e-Filing | 79 |
| Scan to E-mail | 83 |
| Scan to File | 79 |
| Scan to USB | 86 |
| Security | 82, 85 |
| Sending | 60 |
| [SERVER NAME] | 81 |
| [SETTINGS] | 78 |
| Setup Guide | 2 |
| Share folder | 57 |
| Shared folder | 79, 89 |
| Sharpness | 79 |
| Side guides of the multi-purpose tray | 36, 39, 41 |
| Side guides of the RADF (Reversing Automatic Document Feeder) | 30 |
| Simplex/duplex setting | 43 |
| Single feed mode | 30 |
| Single/2-sided Scan | 79 |
| SMB | 58 |
| Sort | 51, 52 |
| Staple sort | 51, 53 |
| [START] button | 32, 33 |
| Status | |
| scan job | 90 |
| Sticker labels | 35 |
| [STOP] button | 32 |
| Storage of color copies | 28 |
| Sub-folder | 89 |
| [SUBJECT] | 84 |

T

| | |
|------------------|----|
| [TEMPLATE] | 78 |
| TEXT | 46 |
| TEXT/PHOTO | 46 |

| | |
|---|----|
| Touch panel | |
| Scan | 78 |
| Transmission conditions | |
| changing the settings for each page | 66 |
| making settings | 64 |
| Tray | 22 |
| Troubleshooting Guide | 2 |
| TX TYPE | 64 |

U

| | |
|------------------------------|----|
| USB storage device | 89 |
| User Documentation DVD | 88 |
| Utility Guide | 2 |

W

| | |
|---|----|
| Web Service (WS) Scan | 88 |
| Windows Imaging Acquisition (WIA) Scan Driver | 88 |

Z

| | |
|--------------|----|
| [ZOOM] | 48 |
|--------------|----|

Oki Data Corporation

4-11-22 Shibaura, Minato-ku, Tokyo
108-8551, Japan

www.okiprintingsolutions.com