




# Real Flat Television

User manual

29PT8811

29PT8841

29PT8842

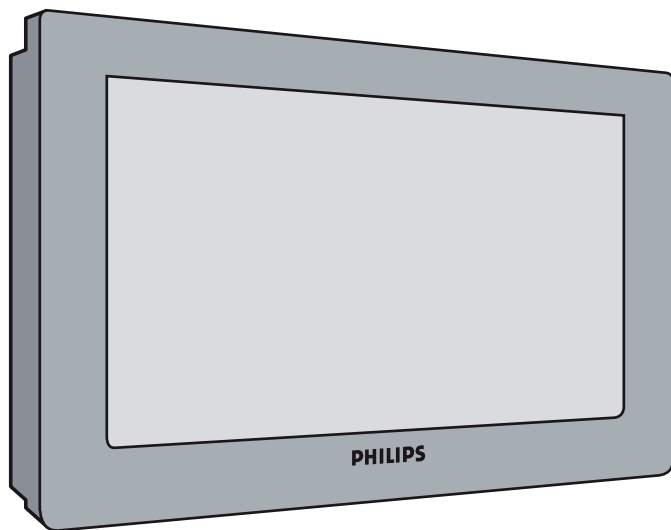

# PHILIPS

# IMPORTANT

## Before you begin:

Make sure your package includes the following items: TV and mains cord, remote control, user manual, antenna cable (optional) and Coaxial cable (optional).

## Attention:

1. Read your manual first – your Philips TV comes with a well-designed remote control and onscreen display to ensure your TV is easy to operate.
2. The tips provided in this manual will save you time and money as charges for TV installation and adjustments of customer controls are not covered under the warranty.
3. For information outside of this manual, such as sales locations and other Philips products, please visit [www.philips.com](http://www.philips.com) which will automatically link you to your local Philips website.
4. Please refer to the section on 'Tips' before calling for service.
5. In case of a need to call for service, we recommend you to call from your room where your TV is located and have on hand your remote control, warranty card, TV model and serial number.
6. Do not discard packaging materials:
  - without thorough inspection for parts and that accessories that may be packed separately inside the carton.
  - during the warranty period should you need to exchange the set.

## Recycling:



The materials used in your set are either reusable or can be recycled. To minimise environmental waste, specialist companies collect used appliances and dismantle them after retrieving any materials that can be used again (ask your dealer for further details).

*Disclaimer: Graphics in this manual are for illustration purpose and may not represent the actual product*



# Table of Contents

## General

Safety Information ..... 2  
 Useful information ..... 2

## Wh't's Hot

Picture Scanning mode ..... 3  
 YPbPr Digital High Definition input ..... 3

## Installation

Installing your television set ..... 4  
 The keys on the TV set ..... 4  
 Remote control keys ..... 5  
 Language ..... 6  
 Auto Store ..... 6  
 Manual Store ..... 7  
 Sort ..... 7  
 Channel Edit ..... 8

## Operation

Picture settings ..... 9  
 Sound settings ..... 9  
 Features settings ..... 9  
 Child Lock ..... 10  
 Format ..... 10  
 Active Control ..... 11  
 Demo ..... 11  
 Autopicture Booster ..... 12  
 Personal Zapping ..... 12

## Peripherals

DVD player ..... 13  
 Video recorder ..... 13  
 Other equipment ..... 14  
 Amplifier ..... 14  
 Side connections ..... 14

## Practical information

Tips ..... 15  
 Glossary ..... 16  
 Specifications ..... 17



## Safety information

- Disconnect mains plug when :
  - the indicator light below the TV screen is flashing continuously.
  - a bright white line is displayed across the screen.
  - there is a lightning storm.
  - the set is left unattended for a prolonged period of time.
  - cleaning the TV screen. Never use abrasive cleaning agents. Use a slight damp chamois leather or soft cloth.
- No naked flame sources, such as lighted candles, should be placed on top of the TV or in the vicinity.
- Do not place your TV set under direct sunlight or heat.
- Leave at least 10 cm around each side of TV set to allow for proper ventilation.
- Avoid placing your set (e.g. near the window) where it is likely to be exposed to rain or water.
- No objects filled with liquids should be placed on top the TV so as to avoid dripping or splashing of liquids on the set.



## Useful information

- Do not leave your set on standby mode for a prolonged period of time. Switch off set to allow it to be demagnetised. A demagnetised set supports good picture quality.
- Do not shift or move the set around when it is switched on. Unevenness in colour in some parts of the screen may occur.
- Never attempt to repair a defective TV yourself. Always consult a skilled service personnel.

## What's Hot

### Picture scanning

Your Philips TV has been built with scanning features to enhance your TV viewing. All you need is to select your desired mode to enjoy sharper and clearer pictures. The description below will help you make your choice.

#### Auto

If you are undecided of which mode to choose, select Auto and let your TV decide for you automatically!




 
#### 100 Hz Digital Scan (available only for PAL and SECAM signals)


Philips' digital scan doubles the rate of line flicker, making it undetectable. The result is a more stable picture that is relaxing for your eye.

#### Progressive Scan

Doubles the vertical resolution of the image to produce a noticeable sharper picture.

#### How to access

- 1 Press the  key.  
The Main Menu will be call up.
- 2 Press the  to select the **Scan** mode.
- 3 Use the  key to select **Auto**, **100 Hz** or **Prog Scan**.
- 4 To quit the menus, press .

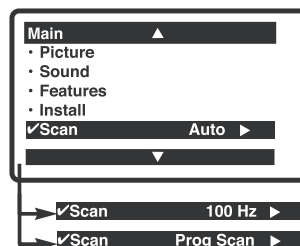


### YPbPr Digital High Definition input

When you have a digital equipment with a 480p or 1080i output (e.g. a digital set top box or Progressive Scan DVD player), connect it to YPbPr input.


#### How to access

- 1 Connect the TV's green, blue and red Y Pb Pr jacks to the corresponding sockets of the equipment as indicated in the diagram.
- 2 Connect the TV's red and white (R and L) AUDIO IN jacks from AV2 in to the corresponding AUDIO OUT jacks on the player. Match the cable colour to the jacks' colour. The red jack is the Right audio channel and the white jack is the Left audio channel.
- 3 Turn on the TV and the equipment. Set the TV to a channel named **YPbPr** to playback.

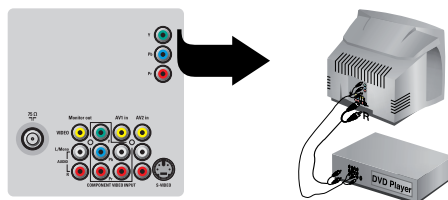


## Installing your television set


### Positioning the television set

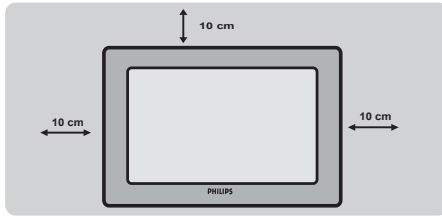


Place your TV on a solid, stable surface, leaving a space of at least 10 cm around the appliance.

### Connections

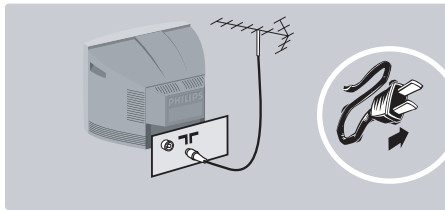

 - Insert the aerial plug into the  socket at the rear of the set.  
*If you are using an indoor aerial, reception may be difficult in certain conditions. You can improve reception by rotating the aerial. If the reception remains poor, you will need to use an external aerial.*
- Insert the mains plug into a wall socket.


### Remote control

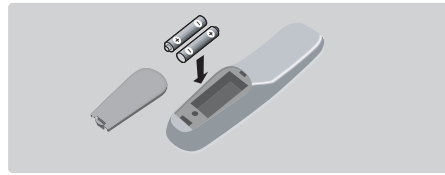

Insert the two R6-type batteries (supplied) making sure that they are the right way round.

*The batteries supplied with this appliance do not contain mercury or nickel cadmium. If you have access to a recycling facility, please do not discard your used batteries (if in doubt, consult your dealer).*


### Switching on

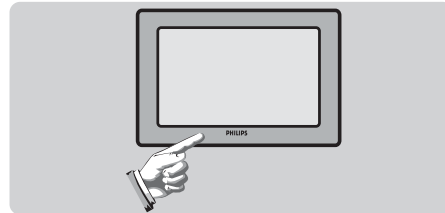

To switch on the set, press the on/off key. A red indicator means that the television is on standby mode. Refer to the next page on 'Remote Control keys' for the various keys that you could use to switch on the set. An indicator light will flash when it is receiving signal from the remote control.

## The keys on the TV set

The television set has 4 keys which are located in front or top.

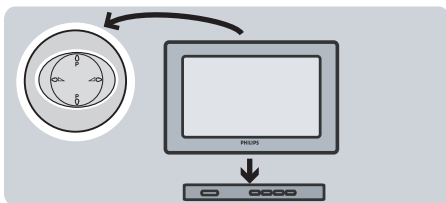


The VOLUME – + keys are used to adjust the sound levels. The CHANNEL  $\vee$   $\wedge$  keys are used to select channels.

To access or exit the main menu, press down the VOLUME – + keys, simultaneously.

To select an item in the main menu, press the CHANNEL  $\vee$  or  $\wedge$  key.


To select an adjustment, press down the VOLUME – or + key.


# Remote control keys

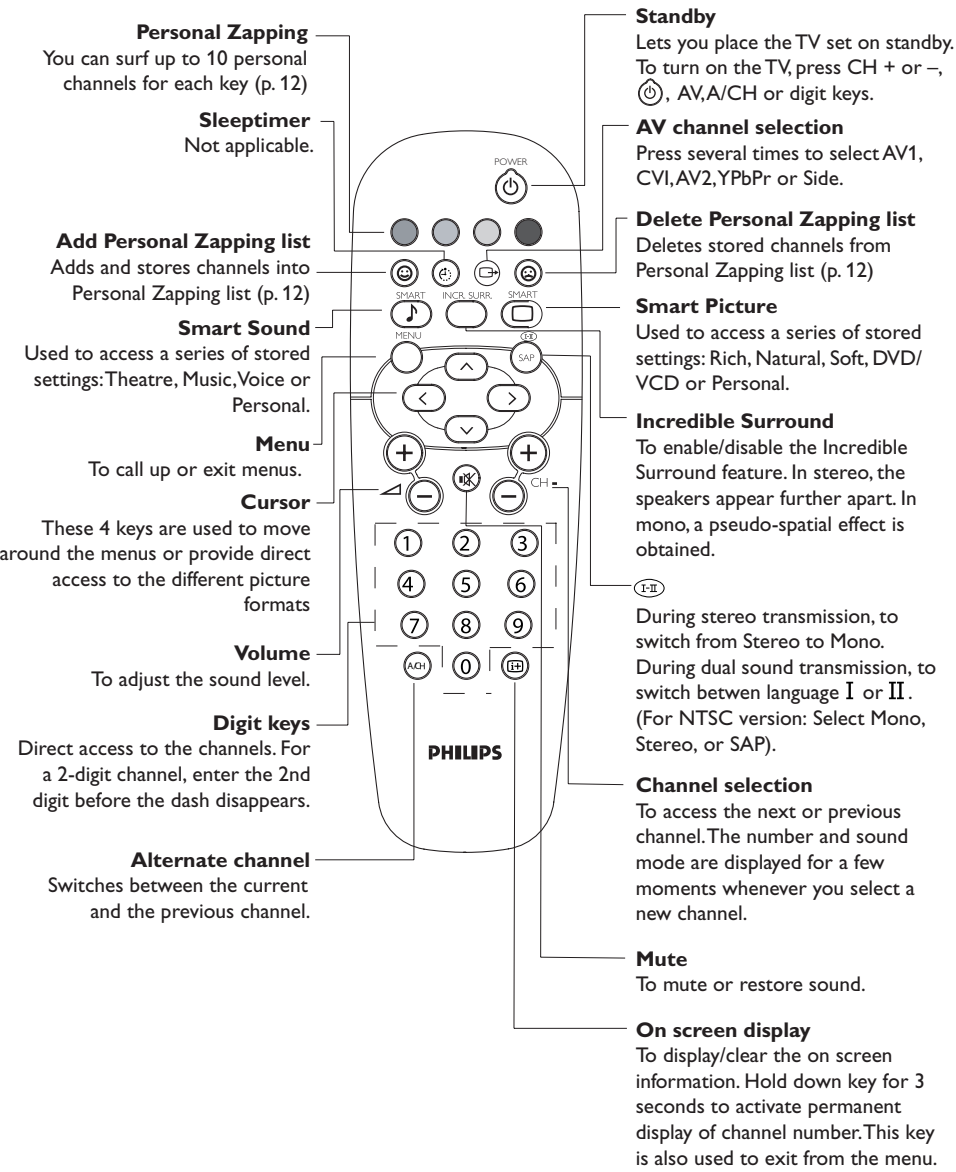



## Language

The **Language** feature is used to change the display language for menus.

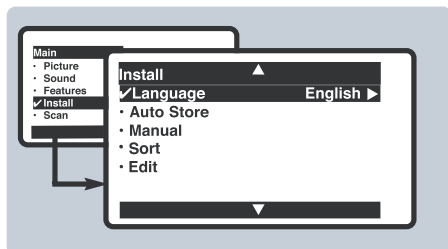
- 1 Press the  key.
- 2 With the cursor, select the **Install** menu and follow by the **Language**.






- 3 Use the  key to select a language of your choice.
- 4 To quit the menus, press .

## Auto Store

This menu is used to store all available channels automatically.

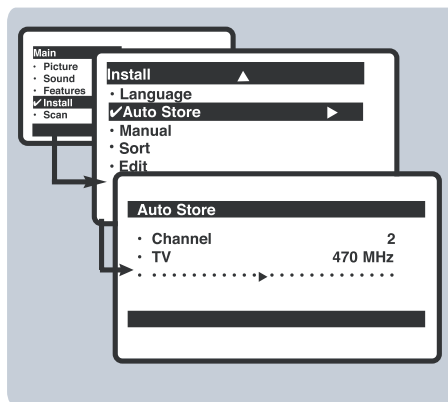- 1 Press the  key.
- 2 With the cursor, select the **Install** menu and follow by the **Auto Store**.




- 3 Use the  key to start auto store. All the available TV channels will be stored automatically. This operation takes a few minutes. The display shows the progress of the search and the number of channels found.
- 4 To quit the menus, press .

*If no channels are found, consult the possible solutions found on the Tips section.*

## Manual Store

This menu is used to store channels one at a time.

- 1 Press the **HOME** key.
- 2 With the cursor, select the **Install** menu and follow by the **Manual**.

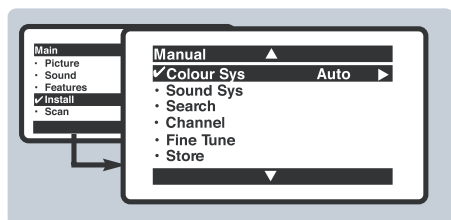


- 3 **Colour Sys(tem)**: use the **<** or **>** key to select the desired colour system; **Auto**, **PAL** or **SECAM**.

- 4 **Sound Sys(tem)**: use the **<** or **>** key to select the desired sound system; **Auto**, **BG** or **DK**.
- 5 **Search**: Press **>**. The search starts. Once a channel is found, the scanning stops. Go to the next step. *If no picture is found, consult the possible solutions found on the Tips section.*
- 6 **Channel**: enter the required channel with the **<**, **>** or digit keys.
- 7 **Fine Tune**: if the reception is not satisfactory, adjust using the **<** or **>** keys.
- 8 **Store**: Press **>**. The channel is stored.
- 9 Repeat steps 3 to 4 for each channel you wish to store.
- 10 To quit the menus, press **Ⓜ**.

## Sort

This feature allows you to rearrange channels according to your preference.

- 1 Press the **HOME** key. The **Main** menu is displayed on the screen.
- 2 With the cursor, select the **Install** menu followed by the **Sort** menu.
- 3 Use the **^** or **v** key to select the channel number you want to change

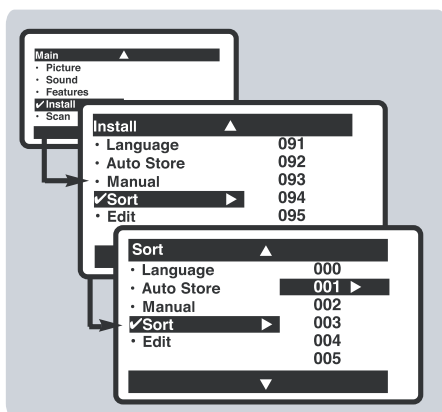






- 4 Use the **^** or **v** key to select the channel number you want to change to (e.g. 004) and confirm selection with the **>** key. *The change is done. Channel 4 will move up to channel 3 and channel 3 will move up to channel 2.*
- 5 Repeat steps 3 and 4 for each channel you wish to change.
- 6 To quit the menus, press **Ⓜ**.

## Channel edit

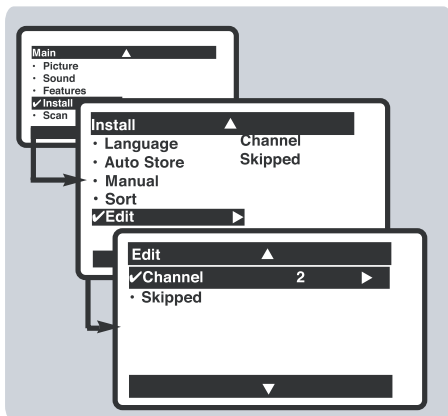


This feature allows you to skip or edit channels which have bad or weak TV signal or channels you do not watch often.

 Once a channel is skipped, you cannot have access to it by the Channel + or – key. You can only access the channels by the digit (0-9) keys.




- 1 Press the  key. The **Main** menu is displayed on the screen.
- 2 With the cursor, select the **Install** menu followed by the **Edit** menu.
- 3 Enter into the menu and select the channel number you wish to skip by the digit keys.
- 4 Then use the  key to select **Skipped**. Use the  key to select **On**.
- 5 Repeat steps 3 and 4 for each channel you wish to skip.
- 6 To quit the menus, press .

### To restore skipped channels

- 1 Repeat steps 1 to 3 above.
- 2 Use the  key to select **Skipped** and the  key to select **Off**.
- 3 Repeat steps 1 and 2 for each channel you wish to skip.
- 4 To quit the menus, press .

## Picture settings

- 1 Press then . The **Picture** menu will be called up.

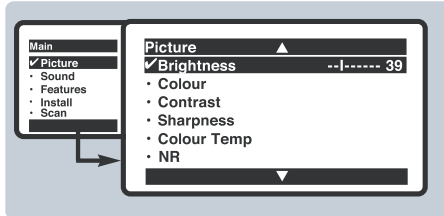


- 2 Use the or keys to select a setting and the or keys to adjust. *Note: during the picture adjustment, only the selected line remains displayed. Press or to display the menu again.*
- 3 Press to exit.

### Description of the adjustments:

- **Brightness:** this changes picture brilliance.
- **Colour:** this changes the intensity of the colour.
- **Contrast:** this changes the difference between the light and dark tones.
- **Sharpness:** this changes the picture definition.
- **Hue:** this adjusts the skin colour tone in NTSC channel.
- **Colour Temp.:** this changes the colour rendering: Cold(bluer), Normal(balanced) or Warm(redder).
- **NR:** attenuates picture noise (snow) in difficult reception conditions.
- **Contrast +:** automatic adjustment of the picture contrast which permanently sets the darkest part of the picture black.

## Sound settings

- 1 Press , select **Sound** () and press . The **Sound** menu will be called up.

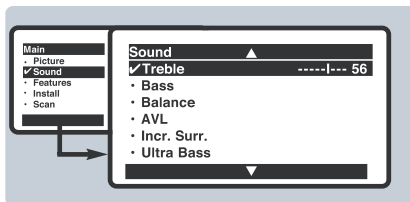


- 2 Use the or key to select a setting and the or key to adjust.
- 3 Press to exit.

### Description of the adjustments:

- **Treble:** this alters the high frequency sounds.
- **Bass:** this alters the low frequency sounds.
- **Balance:** this balances the sound on the left and right speakers.
- **AVL (Automatic Volume Leveller):** this is used to limit increases in sound, especially on channel change or advertising slots.
- **Incr. Surr. (Incredible Surround or Virtual Dolby)** this boost the effect of stereo sound.
- **Ultra Bass:** this is used to enhance bass output.

## Features settings

- 1 Press , select **Features** () and press . The **Features** menu will be called up.

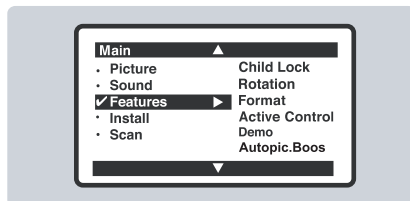




### Description of the features:


- **Rotation:** large screen TVs are sensitive to terrestrial magnetic field variations. This setting is used to compensate by adjusting the picture rotation. Use the or key to adjust.
- **Child Lock, Format, Active Control and Demo:** see explanation on the related sections.



## Child Lock

You can block certain channels or inhibit use of the TV set completely.

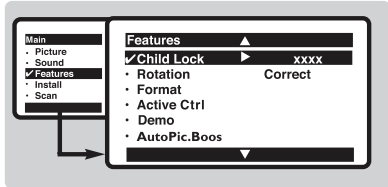


*Note: You can only access the locked channels via the remote control. Keep the remote control in a safe place.*


- 1 Press , use the  key to select **Features** and press the  key. The **Features** menu is displayed.






 
- 2 Use the  key to select **Child Lock** and press the  key to enter.
- 3 Key in the 4-digit access code. For the first time or if you have forgotten the code, enter **0711** twice. There will be a prompt to key in the **New Code**.
- 4 Key in your preferred code once and again to confirm.

The Child Lock menu is displayed.

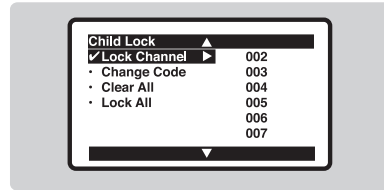- 5 Use the  or  key to select a function and the  key to enter or confirm selection.



### Description of function:

**Lock Channel:** use the  or  key to select a channel number to lock and press the  key to confirm. The  symbol will display next to the channel that was locked.

**Change Code:** enter a new code and again to confirm.



 




**Clear All:** use to unlock all locked channels. Select **Clear?** to activate.


**Lock All:** use to lock all TV and external channels. Select **On** to activate.

- 6 Press the  key to exit.

## Format


This feature enhances your viewing pleasure by providing you with a choice of two picture formats:- **4:3** and **Expand 4:3**.

- 1 Press , use the  or  key to select **Features** and press the  key. The **Features** menu is displayed.
- 2 Use the  key to select **Format** and press the  key to select **4:3** or **Expand 4:3**.
- 3 Press the  key to exit.

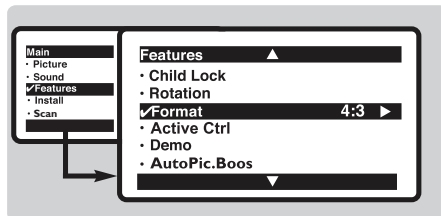


### Description of function:

**4:3** – select this format if you want to display a conventional picture using the full surface of the screen.

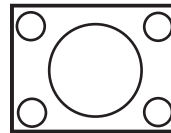


4:3

**Expand 4:3** – select this format if you want to expand pictures transmitted in a 'letterbox' format (black horizontal bars at the top and bottom of the screen) to fill up the entire screen.

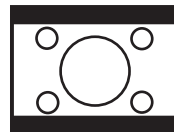


Letterbox

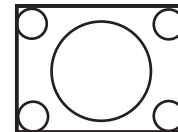

Expand 4:3

## Active Control

The Active Control monitors and adjusts incoming video signals to help provide the best picture quality. When you choose to turn the Active Control to On or Display On, the Brightness, Contrast, Sharpness, Contrast+ and NR (noise reduction) features are controlled automatically. Active Control adjusts these picture settings continuously and automatically

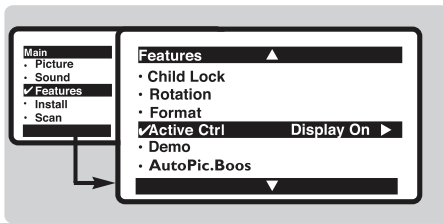

- 1 Enter Features menu as described in “Features settings” on the previous page.
- 2 Use the  $\leftarrow$  key to select Active Control and press the  $\rightarrow$  key to select **Off**, **On** or **Display On**.
- 3 Press the  $\text{Ⓜ}$  key to exit.

### Description of option:


**Off:** the Active Control will not be activated.

**On:** the Active Control will work to give the viewer the best possible picture, but will not display the monitoring screen when channels are changed.

**Display On:** an Active Control monitoring screen will be shown for a few seconds whenever a channel is changed.

## Demo

The split screen display shows the image performance before and after enhancements to present clearly the effects of the picture enhancement features.

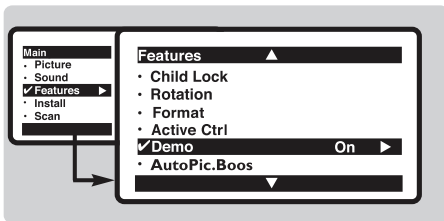

- 1 Enter Features menu as described in “Features settings” on the previous page.
- 2 Use the  $\leftarrow$  key to select **Demo** and press the  $\rightarrow$  key to select **On** or **Off**.

The screen is split to dramatically show the comparative images side by side.




*without picture enhancements*

*with picture enhancements*

## Automatic Picture Booster

If the transmission signal is weak, the Automatic Picture Booster built into the TV set will increase the signal level to provide a good picture at all times. You have a choice to turn on or off the feature, depending on the signal conditions locally.

- 1 Enter Features menu as described in “Features settings” page.

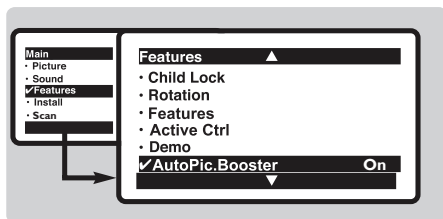

- 2 Use the key to select **Autopicture Booster**.


- 3 Use the key to turn Autopicture Booster **On** or **Off**.

## Personal Zapping

A list or series of favourite TV programs can be selected and stored in the 4 coloured keys with the Personal Zapping feature. With this feature you can easily view up to a total of 10 preferred channels for each coloured key.


### To add channels:

- 1 Select a channel with the digit keys.
- 2 Press to display list.
- 3 Press your favourite colour key to store the channel in step & .
- 4 Repeat steps 1 to 3 to store more channels.
- 5 Press to exit.

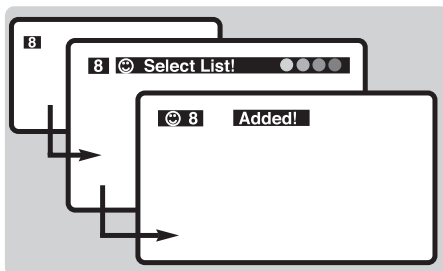

### To delete channels:

- 1 Select and press a colour key that has stored channels repeatedly to select the channel you want to delete.
- 2 Press to display list.
- 3 Press to remove channel.
- 4 Repeat steps 1 to 3 delete more channels.
- 5 Press to exit.

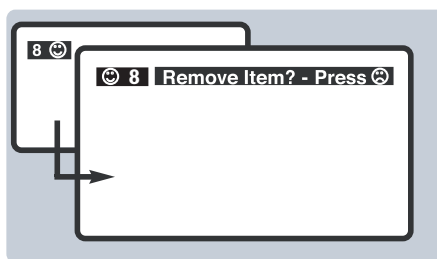


### To view channels:

Select and press a colour key that has stored channels repeatedly to select the channel you want to view.

## Connecting peripheral equipment

### DVD player

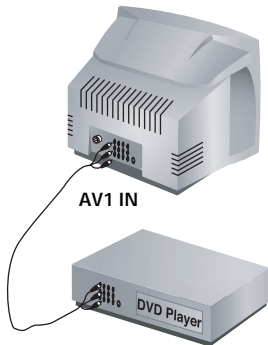

- 1 Connect the cable from the TV's "Y", "Pb" and "Pr" (AV1) sockets to the corresponding COMPONENT VIDEO OUT sockets of the player.


*Note: Do not connect the AV1 VIDEO IN socket.*

- 2 Connect the red and white (R and L) cable from the TV's AUDIO IN sockets to the corresponding AUDIO OUT sockets of the player.

- 3 Turn on the TV and DVD player. Set the TV to CVI and the DVD background screen will be displayed on the screen. You can now play your discs.

*Note: You need to select the channel CVI manually to playback DVD disc.*

### Video recorder

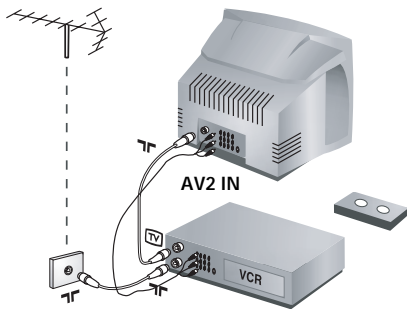

- 1 Connect the yellow, white and red cable from the TV's AV2 IN sockets to the corresponding Video and Audio sockets of the player.


- 2 Connect the red and white (R and L) cable from the TV's AUDIO IN sockets to the corresponding AUDIO OUT sockets of the player.

- 3 Turn on the TV and VCR player. Set the TV to channel AV2. You can now play your video cassette tapes.

*Connection is also possible via the aerial cable. You will therefore need to tune in your video recorder's test signal and assign a channel number 0. Select channel 0 to playback.*

## Connecting peripheral equipment


### Other equipment

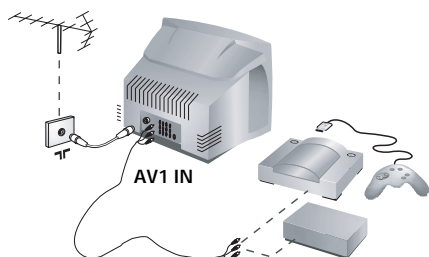

- 1 Carry out the connections as shown.
- 2 To optimise picture quality, connect the equipment which produces the video signals (digital decoder, games, etc) to AV1 IN and equipment which produces the S-VHS signals (S-VHS and Hi-8 video recorders, certain DVD drives to AV2 IN and all other equipment to either AV1 IN or AV2 IN.


*Note: Do not connect the VIDEO IN socket if you are using the S-VIDEO IN socket of the TV.*

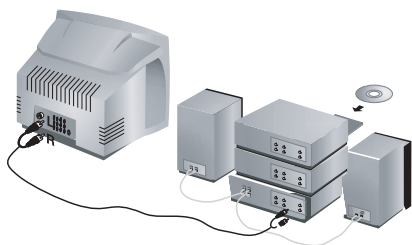

### Amplifier



- 1 To connect to a hi-fi system, use an audio connection cable and connect the "L" and "R" outputs on the TV set to the "AUDIO IN" "L" and "R" input on your hi-fi amplifier. Make the connections as shown opposite.
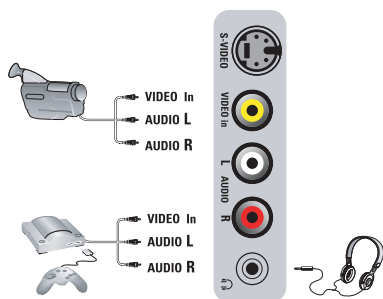
### Side connections



With the  key, select the channel Side. For a monophonic device, connect the audio signal to the AUDIO L input. Use the  key to reproduce the sound on the left and right speakers of the TV set.

### Headphones


When headphones are connected, the sound on the TV set will be cut. The VOL + or - keys are used to adjust the volume level. The headphone impedance must be between 32 and 600 Ohms.

## Tips

### Poor reception

The proximity of mountains or high buildings may be responsible for ghost pictures, echoing or shadows. In this case, try manually adjusting your picture: see **Fine Tuning** (refer to section on **Manual Store**) or modify the orientation of the outside aerial. Does your antenna enable you to receive broadcasts in this frequency range (UHF or VHF band)? In the event of difficult reception (snowy picture) switch the **NR** on the **Picture** menu to **ON** (see section on **Picture Settings**).


 
### No picture

If the television does not switch on, press the standby key  (located on the remote control) twice. Have you connected the aerial socket properly? Have you chosen the right system? See section on **Manual Store**. Poorly connected euroconnector cables or aerial sockets are often the cause of picture or sound problems (sometimes the connectors can become half disconnected if the TV set is moved or turned). Check all connections.

### No sound

If on certain channels you receive a picture but no sound, this means that you do not have the correct TV system. Modify the System setting. See section on **Manual Store**.


### Blue screen

If the signal is interrupted or disconnected in teletext mode, you will get a blue screen display even if you reconnect the signal. You should press the  key (located on the remote control) to put the set on standby mode and press  again to turn on the set. Or you can power off and power on the set. This will restore the screen back to normal.

### Colour patches on screen

Switch off the TV by the mains power button and wait for about 20 minutes before switching on again.

### Good picture but no sound

Try to increase the volume level. Check that the sound is not set to "mute". If it is, press the  key to restore the sound.

### Good sound but poor colour or no picture

Try to increase the contrast and brightness setting.

### Snowish picture and noise

Check antenna connection at the rear of the TV.


### Horizontal dotted lines

Possible electrical interference e.g. hairdryer, vacuum cleaner, etc. Switch off the appliances.

### Double or "Ghost" images

Possible poor positioning of antenna. Using a high directional antenna may improve reception.

### Peripheral equipment gives a black and white picture

You have not selected the socket connection to the right channel with the  key : for example, AV1 in socket connection should select channel AV1 to playback. To play a video cassette, check that it has been recorded under the same standard (PAL, SECAM, NTSC) which can be replayed by the video recorder.

### The remote control does not work

Check that the batteries are the right way round and there is no obstruction between the remote control and the TV. If the light indicator on the set no longer flashes when you use the remote control, replace the batteries.

## Glossary

### 4:3

Refers to the ration between the length and the height of the screen. Wide screen televisions have a ration of 16:9 while conventional televisions have a ratio of 4:3.

### 4:3 Expand

The images recorded in "letterbox" format are expanded to fill the entire screen and the black horizontal bars at the top and bottom are removed.

### Active Control

Is a unique, intelligent, and proactive control system, which measures and analyzes the incoming analog signal 60 times per second to automatically adjust settings for optimal picture quality.

### Component video input (CVI)

Supports advanced video input (such as DVD) for superb colour purity, crisp colour detail and reduced colour noise-surpassing even that of S-Video!

### Colour Transient Improver (CTI)

Color signals are processed to bring out subtle differences resulting in greater depth and enhanced color definition, as color bleed between color borders are eliminated. Therefore, there is an improved color definition and contrast without discoloration or blurring.

### Luminance Transient Improver (LTI)

A new generation edge-enhancement technology which is applied directly to the video processing circuit to increase clarity and sharpness at the point of transition from the dark to light areas of the image. As a result there is an increase clarity and sharpness especially between dark and light areas of an image.

### Contrast+

enhances the darker portions of the picture to improve its picture quality.

### Personal Zapping

A Philips trade marked feature which allows any combination of favourite teletext pages or TV channels to be stored in the coloured Favourite Channels/Teletext keys. A total of 10 preferred channels/teletext pages of the same subject or user can be stored in each coloured key.

### Scan Velocity Modulation (SVM)

It is an innovative circuit design to enhance edge details by varying the speed of the electron beam. It dramatically improves overall definition and contrast without any discoloration or blurring.

### S-VHS Signals

These are 2 separate Y/C video signals from the S-VHS and Hi-8 recording standards. The luminance signals Y (Black and white) and chrominance signals C (colour) are recorded separately on the tape. This provides better picture quality than with standard video (VHS and 8 mm) where the Y/C signals are combined to provide only one video signal.

### System

Television pictures are not broadcast in the same way in all countries. There are different standards: BG, DK, I, NTSC and SECAM. The system setting (p. 7) is used to select these different standards.

## Specification

### Product type

29PT8811, 29PT8841, 29PT8842

### PICTURE

- Picture screen diagonal: 29" (720 mm)
- Visible screen size: 27" (680 mm)
- Picture Tube: Real Flat 4:3
- 100 Hz (PAL and SECAM)
- Progressive Scan (Auto Switching with manual override)
- Scan Velocity Modulation
- 3:2 Pulldown
- EDDI - Smoothing Edge De-interlacer
- Contrast
- Active Control Plus with Luminance Transient Improver (LTI)
- Colour Transient Improver (CTI)
- Colour Temperature Control
- Black Stretch
- Smart Picture Modes
- Demo
- Digital Noise Reduction (DNR)

### Sound

- Sound output: 20 W rms
- 2 on board speakers
- Stereo Sound
- Incredible Surround (for 29PT8811)
- Virtual Dolby (for 29PT8841, 29PT8842)
- Smart Sound Modes
- Auto volume Leveller

### Ease of use

- Bilingual On-Screen-Display and menu control
- 100 presets channel selection
- Personal Zapping
- Zappa Remote Controller

### Side Connections

- S-Video
- Video and Audio inputs
- Headphone out

### Rear Connections

- AV1: (CVI), Video and Audio inputs
- AV2: S-Video, Video and Audio inputs
- CVI for 480i
- YPbPr for 1080i
- Monitor Out

### Reception

- Tuning system: PLL
- Colour Transmission system off-air: PAL B/G, PAL D/K, SECAM D/K
- AV Connections: PAL 4.43
- Stereo sound transmission system off-air: NICAM BG/DK, 2CS BG/DK
- Channel selections: UVSH

### Size and weight

- Mains: AC 150-276V, 50/60 Hz
- Net weight: 46 kg
- Gross weight: 50 kg
- Set dimensions: W x H x D mm  
736 x 580 x 490 mm (29PT8811S / 8842S)  
788 x 590 x 502 mm (29PT8841 / 8841S)

Note: Specification is subject to change without notice.



Specifications are subject to change without notice

[www.philips.com](http://www.philips.com)  
313912536223

