

Register your product and get support at
www.philips.com/welcome



EN	User manual	LV	Lietuvaiš vartotojų rankovinė
BG	Руководство за ползване	LT	Instrukcija vartotojui
CS	Průvodce pro uživatele	RO	Manual de utilizare
ET	Kasutusjuhend	RU	Руководство по эксплуатации
HR	Korisnički priručnik	SK	Príručník užívateľa
HU	Felhasználói kézikönyv	SL	Uporabniški priročnik
KK	Қолданушының нұсқауы	SR	Korisnički priručnik
LT	Vartotojų vadovas	UK	Посібник користувача

PHILIPS

Specifications are subject to change without notice
© 2015 Koninklijke Philips N.V.
All rights reserved.

3140 035 3912

English

1 Important

Read this manual carefully before you use the appliance and keep it for future reference.

• **WARNING:** Do not use this appliance near water.

• When the appliance is used in a bathroom, unplug it after use since the proximity of water presents a risk, even when the appliance is switched off.

• **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.

• Always unplug the appliance after use.

• If the appliance overheats, it switches off automatically. Unplug the appliance and let it cool down for a few minutes. Before you switch the appliance on again, check the grilles to make sure they are not blocked by fluff, hair, etc.

• If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

• This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children should not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

• For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.

• Do not insert metal objects into the grill grilles to avoid electric shock.

• Never block the air grilles.

• Before you connect the appliance, ensure that the voltage indicated on the appliance corresponds to the local power voltage.

• Do not use the appliance for any other purpose than described in this manual.

• Do not use the appliance on artificial hair.

• When the appliance is connected to the power, never leave it unattended.

• Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

• Do not wind the mains cord round the appliance.

• Wait until the appliance has cooled down before you store it.

• Do not pull on the power cord after using. Always unplug the appliance by holding the plug.

Notes: Low Lc = 81dB [A]

Electromagnetic fields (EMF)

The Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Environment

This symbol on a product means that the product is covered by European Directive 2012/19/EU, inform yourself about the local appliance collection system for electrical and electronic products. Follow local rules and never dispose of the product with normal household waste. Correct disposal of old products helps prevent negative consequences for the environment and human health.

2 Before styling your hair

• **Never plug in the appliance and attachments cool down before you connect or disconnect the attachments.**

• Dry your wet hair with a clean towel first as the appliance is most effective on towel-dry hair.

• Snap a suitable attachment onto the handle (Q in Fig. 1) with the grooves aligned (Q in Fig. 3).

• Use your hair a "cold", and the attachment is locked in place.

• Select the desired attachment for the hairstyle you want, please refer to the table below.

Hairstyle	Attachment
Dry hair	Nozzle (Q) (also HP8661, HP8662, HP8663, HP8667 only)
Create loose curls	Retractable bristle brush (Q) (also HP8662, HP8663, HP8667 only)
Create natural straight hair	Paddle brush (Q) (also HP8663 only)
Create inward-curling frills and natural waves	38mm Thermohair (Q) (also HP8663 only)
	22mm Thermohair (Q) (also HP8661 only)

(HP8667 only) With Keratin added to the brush.

3 Style your hair

• Connect the plug to a power supply socket.

• Slide the airflow switch (Q in Fig. 1) to strong and warm airflow (Q) for fast drying and styling. Thermostated settings (Q) for gentle airflow to prevent your hair from overheating.

(Only for HP8661, HP8662, HP8663, HP8667) You can also select cool airflow (Q) for long hair styling.

(Only for HP8662, HP8663, HP8667) You can automatically and continuously decrease to provide additional shine and reducing frizz when the appliance is powered on.

Dry your hair (HP8661, HP8662, HP8663, HP8667 only)

 
 
 
 
 
 
 
 
 
 
 
 
1 Select the nozzle (Q in Fig. 1) and attach it onto the handle (Q in Fig. 1).

2 Dry your hair with suitable airflow settings (Q in Fig. 1).

Create loose curls (HP8662, HP8663, HP8667 only)

1 Turn the knob (Q in Fig. 1) of the retractable bristle brush (Q in Fig. 1) to retract the bristles.

2 Wind a section of hair round the brush with the bristles extended.

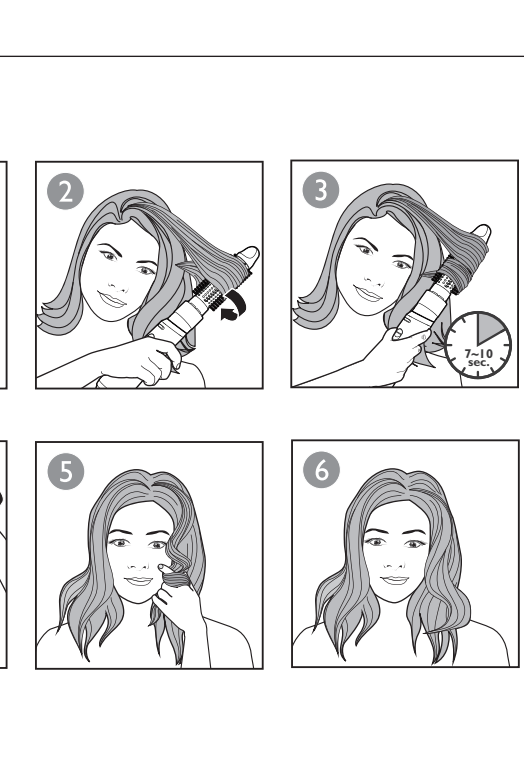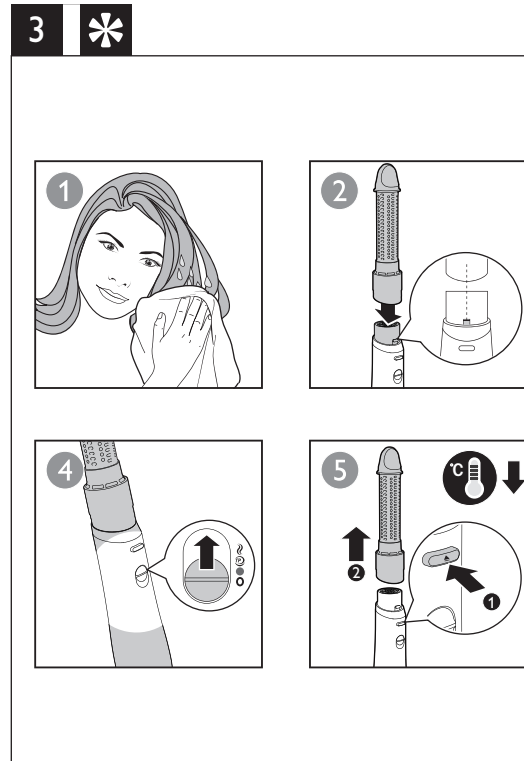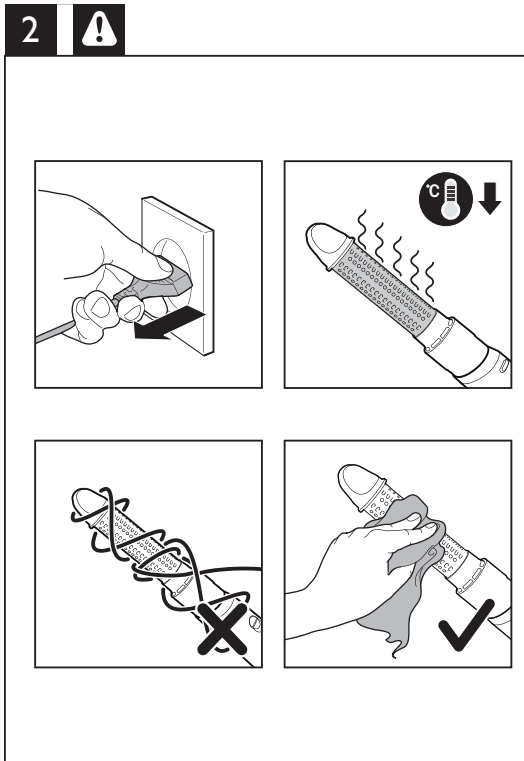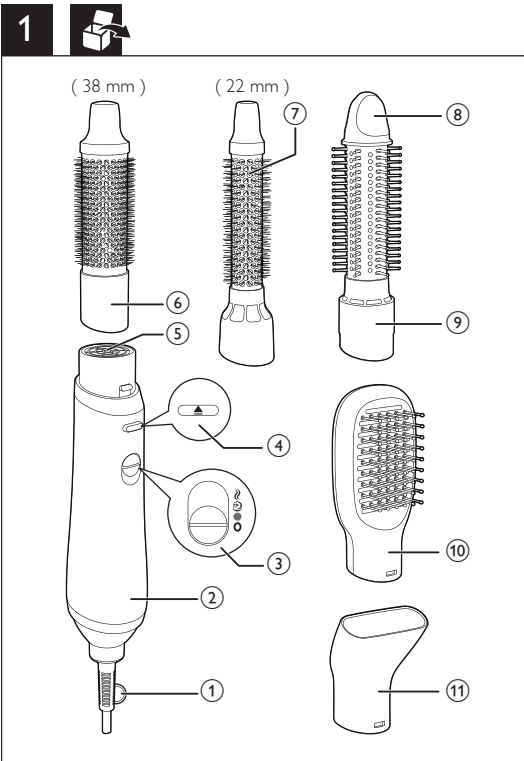

Keep the brush in the position for 7 to 10 seconds.

• Turn the knob (Q in Fig. 1) to retract the bristles and remove the brush from your hair.

• Repeat steps 2-4 to the rest of your hair.

• When finished, twist your curled hair around your fingers to define your curls.

• Adjust the curls to how you like your desired looks.

• Apply hangdry to your hair for long lasting results.

Create inward-curling frills and natural waves (HP8663 only)

1 Put the paddle brush (Q in Fig. 1) on the paddle brush.

2 Brush through your hair slowly with the paddle brush, just like how you would with a normal brush.

• Brush your hair backward as you go.

Tip: You may brush underneath your hair to give more movement to hair.

3 When finished, use your fingers to shape your hair.

Create inward-curling frills and natural waves (HP8667 only)

1 Comb your hair and divide it into several curls of hair.

2 Take a lock of hair and brush it with the thermohair downwards. Then a lock of hair turn the brush inwardly or outwardly.

3 Hold the brush in that position for 7 to 10 seconds, and then remove it from your hair.

Repeat steps 2-3 to the rest of your hair.

When finished, use your fingers to shape your hair ends. Adjust the curls as you like.

After use:

• Switch off the appliance and unplug it.

• Place it on a heat-resistant surface until it cools down.

3 To disconnect the attachment, press the release button (Q in Fig. 1) and pull it off.

• Clean the appliance and parts from the appliance and attachments.

• Clean the appliance and attachments with a damp cloth.

• Keep the appliance in a safe and dry place free of dust.

7 You can also hang it with the hanging loop (Q in Fig. 1) only for HP8661, HP8662, HP8663, HP8667.

4 Guarantee and service

If you need more information or if you have any problems, please visit the Philips website at www.philips.com or contact your Philips Customer Care Centre in your country (you can find its phone number in the worldwide guarantee leaflet). There is no Consumer Care Centre in your country go to your local Philips dealer.

Български

Поддръжката на и почината и обслуговане на Philips за да се запази максимално от предпазването на Philips, регистрирайте изданието си на www.philips.com/welcome.

1 Важно

Преди да използвате уреда, прочетете внимателно това ръководство за ползване и го запазете за справка в бъдеще.

• **ПРЕДУПРЕЖДЕНИЕ:** Не използвайте уреда близо до вода.

• Ако уредът се използва в банята, след употреба го изключвайте от контакта. Близостта до вода води до риск, дори когато уредът не работи.

• **ПРЕДУПРЕЖДЕНИЕ:** Не използвайте уреда близо до вани, душовете, мивки или други съдове, съдържащи вода.

• След употреба винаги изключвайте уреда от контакта.

• При прегряване уредът се изключва автоматично. Изключете уреда и го оставете да изстива няколко минути. Преди да включите отново уреда, проверете дали решетките не са задръстени с пух, коса и др.

• С оглед предотвратяване на опасност, при повреда в захранващия кабел той трябва да бъде сменен от Philips, оторизирани от Philips сервиз или квалифициран техник.

• Този уред може да се използва от деца на възраст над 8 години и от хора с намалени физически възприятия или умствени недостатъци или без опит и познания, ако са инструктирани за безопасна употреба на уреда и са под наблюдение с цел гарантиране на безопасна употреба и ако са им разяснени евентуалните опасности. Не позволявайте на деца да си играят с уреда. Не позволявайте на деца да извършват почистване или поддръжка на уреда без надзор.

• За допълнителна защита ви съветваме да инсталирате в електрозахранващата мрежа на банята дефектно-токова защита (RCD). Тази RCD трябва да е с обявен работен ток на утена не повече от 30 mA. Обърнете се за съвет към квалифициран електротехник.

• За избягване на токов удар не пхайте металини предмети през решетките за въздух.

• Никога не блокирайте притока на въздух през решетката.

• Преди да включите уреда в контакта, проверете дали посоченото върху уреда напрежение отговаря на това на местната електрическа мрежа. Не използвайте уреда за цели, различни от указаното в това ръководство.

• Не използвайте уреда на изсушена коса.

• Никога не оставяйте уреда без надзор, когато е включен в електрическата мрежа.

• Никога не използвайте аксесоари или части от други производители или такива, които не са специално препоръчвани от Philips. При използване на такива аксесоари или части вашата гаранция става невалидна.

• Не навийте захранващия кабел около уреда.

• Изкачете уреда да изстине, преди да го приберете.

• Не дърпайте захранващия кабел след изключване. Винаги изключвайте уреда от контакта, като държите щепсела.

Внимание: На коса Lc = 81 dB [A]

Електромгнитни полета (ЕМФ)

Този символ на Philips е съответствие с нормативните уредби и всички декларации съгласно с декларацията на електромгнитни излъчвания.

2 Before styling your hair

• **Never plug in the appliance and attachments cool down before you connect or disconnect the attachments.**

• Dry your wet hair with a clean towel first as the appliance is most effective on towel-dry hair.

• Snap a suitable attachment onto the handle (Q in Fig. 1) with the grooves aligned (Q in Fig. 3).

• Use your hair a "cold", and the attachment is locked in place.

• Select the desired attachment for the hairstyle you want, please refer to the table below.

Hairstyle	Attachment
Dry hair	Nozzle (Q) (also HP8661, HP8662, HP8663, HP8667 only)
Create loose curls	Retractable bristle brush (Q) (also HP8662, HP8663, HP8667 only)
Create natural straight hair	Paddle brush (Q) (also HP8663 only)
Create inward-curling frills and natural waves	38mm Thermohair (Q) (also HP8663 only)
	22mm Thermohair (Q) (also HP8661 only)

(HP8667 only) With Keratin added to the brush.

3 Style your hair

• Connect the plug to a power supply socket.

• Slide the airflow switch (Q in Fig. 1) to strong and warm airflow (Q) for fast drying and styling. Thermostated settings (Q) for gentle airflow to prevent your hair from overheating.

(Only for HP8661, HP8662, HP8663, HP8667) You can also select cool airflow (Q) for long hair styling.

(Only for HP8662, HP8663, HP8667) You can automatically and continuously decrease to provide additional shine and reducing frizz when the appliance is powered on.

Dry your hair (HP8661, HP8662, HP8663, HP8667 only)

1 Select the nozzle (Q in Fig. 1) and attach it onto the handle (Q in Fig. 1).

2 Dry your hair with suitable airflow settings (Q in Fig. 1).

Create loose curls (HP8662, HP8663, HP8667 only)

1 Turn the knob (Q in Fig. 1) of the retractable bristle brush (Q in Fig. 1) to retract the bristles.

2 Wind a section of hair round the brush with the bristles extended.

предупредителни мерки и не използвайте продукта заедно с обикновено битово оборудване. (Правилното използване на щипците предпазва от потенциални негативни последици за косата, косата и космичното здраве.

2 Преди оформянето на прическата

Забележете някои основни правила и притежете да се ОБЗОДВАТЕ, преди да поставите и използвате прикритието.

1 Проверете работното си коса и коса, която ще работи, като уредът не е ефективен върху косата с коса, която е коса.

2 Поставете прикритието върху косата (Q in Fig. 1), като поставите прикритието (Q in Fig. 3).

• Чув се изгаряне и притежете да се фиксирате на място.

3 За избор на подходяща прическа за косата от вас, прикритието, обичайно се дава най-добрият резултат.

Прикритие	Прикритие
Свободна коса	Четка с прическата се дава (Q) (also HP8661, HP8662, HP8663, HP8667)
Свободна коса	Четка с прическата се дава (Q) (also HP8661, HP8662, HP8663, HP8667)

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

Свободна коса

