

REMINGTON®

Rotary Shaver



PR1330

**Register online for
£10,000 prize draw
EXTRA year guarantee
FREE rewards gallery**



Visit www.remington.co.uk/productregister
You must register within 28 days
of purchase.

Thank you for buying your new Remington® product. Please read these instructions carefully and keep them safe.
Remove all packaging before use.

IMPORTANT SAFEGUARDS

WARNING TO REDUCE THE RISK OF BURNS, ELECTROCUTION, FIRE OR INJURY TO PERSONS:

- 1 This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been supervised/instructed and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children unless they are older than 8 and supervised. Keep the appliance and cable out of reach of children under 8 years.
- 2 Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Remington®.
- 3 Do not use this product if it is not working correctly, if it has been dropped or damaged, or dropped in water.
- 4 An appliance should never be left unattended when plugged into a power outlet.
- 5 Keep the power plug and cord away from heated surfaces.
- 6 Make sure the power plug and cord do not get wet.
- 7 Do not plug or unplug the appliance with wet hands.
- 8 Do not use the product with a damaged cord. A replacement can be obtained via our International Service Centres.
- 9 Do not twist or kink the cable, or wrap it around the appliance.
- 10 Do not use attachments other than those we supply.
- 11 Do not immerse the appliance in liquid; do not use it near water in a bath-tub, basin or other vessel; and don't use it outdoors.
- 12 For use on facial hair only. Not intended for shaving the hair on your head.
- 13 This appliance is not intended for commercial or salon use.
- 14 Keep the appliance dry.





KEY FEATURES

- | | |
|------------------------------|-------------------------------------|
| 1 On/off switch | 2 Pivoting head and cutter assembly |
| 3 Flexing heads | 4 Hairpocket |
| 5 Detail trimmer | 6 Trimmer release button |
| 7 Power port | 8 Power cord |
| 9 Cleaning brush (not shown) | 10 Head guard |

GETTING STARTED

- It is recommended that you use your new shaver daily for up to four weeks to allow time for your beard and skin to become accustomed to the new shaving system.
- To confirm the model number of your shaver, please refer to the packaging.
- The shaver automatically adjusts to a mains voltage between 100V and 240V.

INSTRUCTIONS FOR USE

SHAVING

- ★ Note: this product is for corded use only.
- Connect the shaver to the power cord and then to the mains.
- Slide the power switch to turn on.
- Stretch the skin with your free hand so the hairs stand upright.
- Only apply light pressure on the shaving head while shaving (pressing too hard can damage the heads and make them vulnerable to breakage).
- Use short, circular strokes.

TRIMMING

 
 
 
 
 
 
- Slide the trimmer button to release the detail trimmer.
- Hold the trimmer at a right angle to your skin.
- Place the trimmer at desired trim line for a quick, easy professional trim.
- To retract the trimmer, push down until it locks into position.

TIPS FOR BEST RESULTS

- Ensure your skin is dry. Always hold the shaver at right angles to the skin so that all three heads are touching the skin with equal pressure.
- Use moderate to slow stroking movements. The use of short circular motions in stubborn areas may obtain a closer shave, especially along the neck and chin line.
- ★ DO NOT press hard against the skin in order to avoid damage to the rotary heads.

CARE FOR YOUR SHAVER

- Care for your appliance to ensure a long lasting performance. We recommend you clean your product after each use.

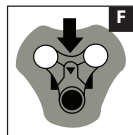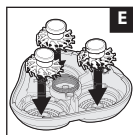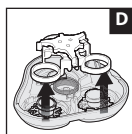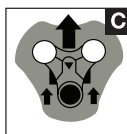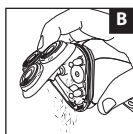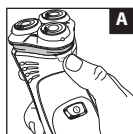

★ CLEANING CAUTIONS

- Ensure the appliance is switched off and unplugged from the mains before cleaning.
- Open the shaver head by pressing the release button on the front of the shaver (Fig. A) and flipping open the head away from the body of the shaver (Fig. B).
- Locate the centre arrow and slide the carrier away from the arrow to release (Fig. C) and toward the arrow to snap back in place (Fig. F).
- Slide the inner cutter carrier away from the inner cutters (Fig. D).
- Thoroughly brush hairs from the inner and outer cutters.
- Place the inner cutter carrier back into position and lock into place (Fig. E-F).
- Align the spring hinge into the slot at the back of the hair pocket and press into place. Snap the head assembly closed.

★ CLEANING TRIMMER

- Lubricate the teeth of the trimmer every six months with a drop of sewing machine oil.

ENVIRONMENTAL PROTECTION

To avoid environmental and health problems due to hazardous substances in electrical and electronic goods, appliances marked with this symbol must not be disposed of with unsorted municipal waste, but recovered, reused or recycled.



➡ SERVICE AND GUARANTEE

Defects affecting product functionality appearing within the guarantee period will be corrected by replacement or repair at our option provided the product is used and maintained in accordance with the instructions.

Your statutory rights are not affected.

Consumables are excluded.

Defects from repair by an unauthorized dealer are not covered.

If you call the Service Centre, please have the Model No. to hand, as we won't be able to help you without it. The Model No. can be found on the rating plate of the appliance.

Replacement parts and accessories are available to buy at
www.remington.co.uk/parts-accessories

➡ SERVICE CENTRE

United Kingdom

 Tel 0800 212 438 (free call mainland UK)

 +44 161 947 3111 (call outside the UK)

Spectrum Brands (UK) Ltd

Fir Street, Failsworth, Manchester

M35 0HS, UK

www.remington.co.uk

Ireland

 Tel 142 951 40

Remington Consumer Products,

Unit B12, Ballymount Corporate Park,

Ballymount, Dublin 12.

www.ie.remington-europe.com

REGISTER ONLINE FOR

£10,000 prize draw, EXTRA year guarantee, FREE rewards gallery.

Visit www.remington.co.uk/productregister. You must register within 28 days of purchase.

Model No. PR1330

16/UK/ PR1330 T22-0004449 Version 11 /16

Remington® is a Registered Trade Mark of Spectrum Brands, Inc., or one of its subsidiaries.
Spectrum Brands (UK) Ltd

Fir Street,

Failsworth,

Manchester

M35 0HS

www.remington.co.uk

© 2016 Spectrum Brands, Inc.