

PARTS MANUAL

Model

**RG4300iS
Generator**

PUB-GP6052
Rev. 09/04

Robin America, Inc.

940 Lively Blvd. • Wood Dale, IL 60191 • Phone: 630-350-8200 • Fax: 630-350-8212
e-mail: sales@robinamerica.com • www.robinamerica.com


© Copyright 2004 Robin America, Inc.

HOW TO USE THIS MANUAL


Robin engines are identified by MODEL, SPECIFICATION, and CODE NUMBER. For each model there may be many different versions called specifications. Each specification will be unique in some way. The difference may only be the paint color or it may have a different type of PTO or some other significant difference.

In order to identify the correct service part number, it is important to confirm the specification and code numbers for your engine. The specification and code number together are known as the PRODUCT NUMBER.

All Robin 4 cycle engines have a Product Number label similar to the label illustrated below.

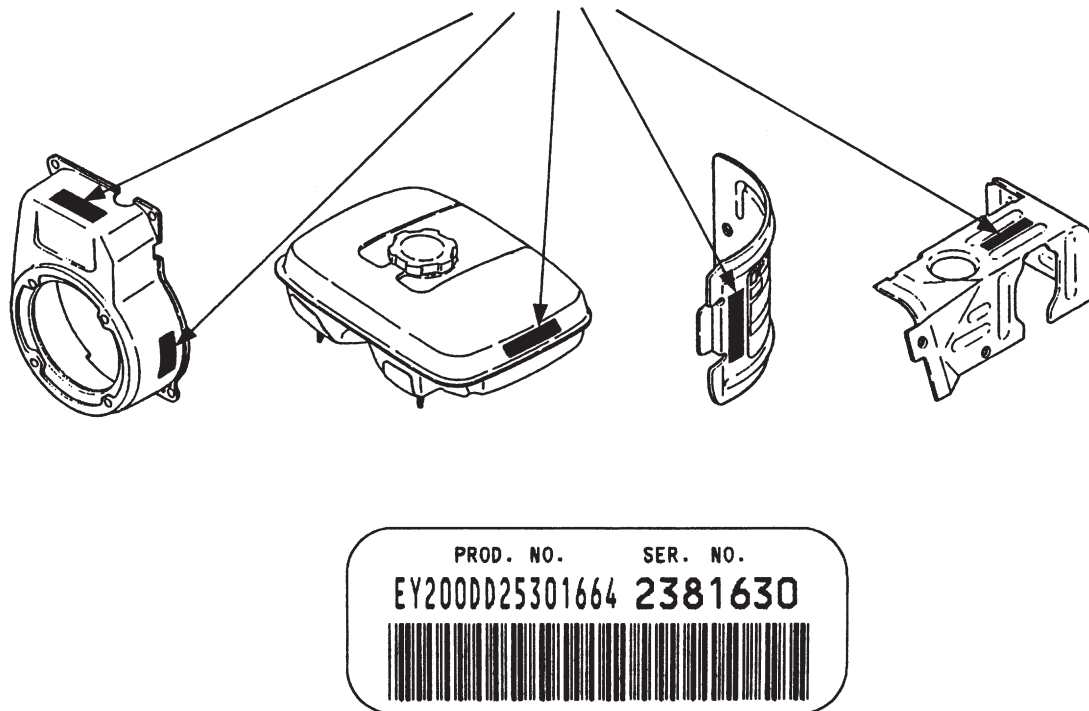

The Product Number Label has a 15 digit alphanumeric string that consists of the SPECIFICATION (SPEC) number (11 digits) and the CODE number (4 digits). Please note the illustration below:

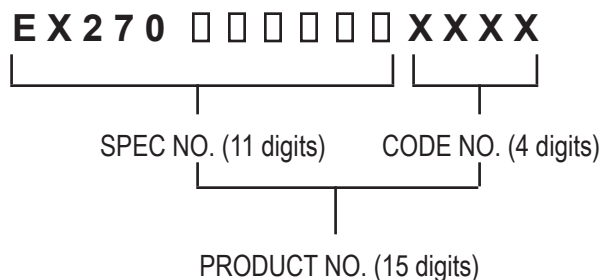


GROUP INDEX

Group Name	Page
CRANKCASE	6
CRANKSHAFT, PISTON	8
INTAKE, EXHAUST	10
GOVERNOR, OPERATION.....	12
ELECTRIC DEVICE	14
ENGINE.....	18
GENERATOR	28
BASE, FRAME	30
CONTROL	32
COVER.....	36
FUEL TANK	40
ACCESSORY GROUP	42

INDEX OF DESCRIPTION SYMBOLS			
SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
AY	ASSEMBLY	P=	PITCH (in mm)
CP.....	COMPLETE	P.T.O. (PTO)	POWER TAKE OFF
EX.....	EXPORT (from Japan)	REF.....	REFERENCE
FIG.....	FIGURE	R.H. (RH).....	RIGHT HAND SIDE
FR.....	FRONT	RR.....	REAR
"	INCH	STD.	STANDARD
INCL.	INCLUDE	SW	SWITCH
~L.....	LITER	T=	THICKNESS (in mm)
L=	LENGTH (in. mm)	UN	UNIT
L.H. (LH).....	LEFT-HAND SIDE	U.S.....	UNDER SIZE
MECH.....	MECHANICAL	~V	VOLTAGE
NO (NON).....	NONE	~W	WATT
OPT.....	OPTIONAL	W/	WITH
O.S.	OVER SIZE	W/O	WITHOUT

SECTION 1 CRANKCASE GROUP

FIG. 100

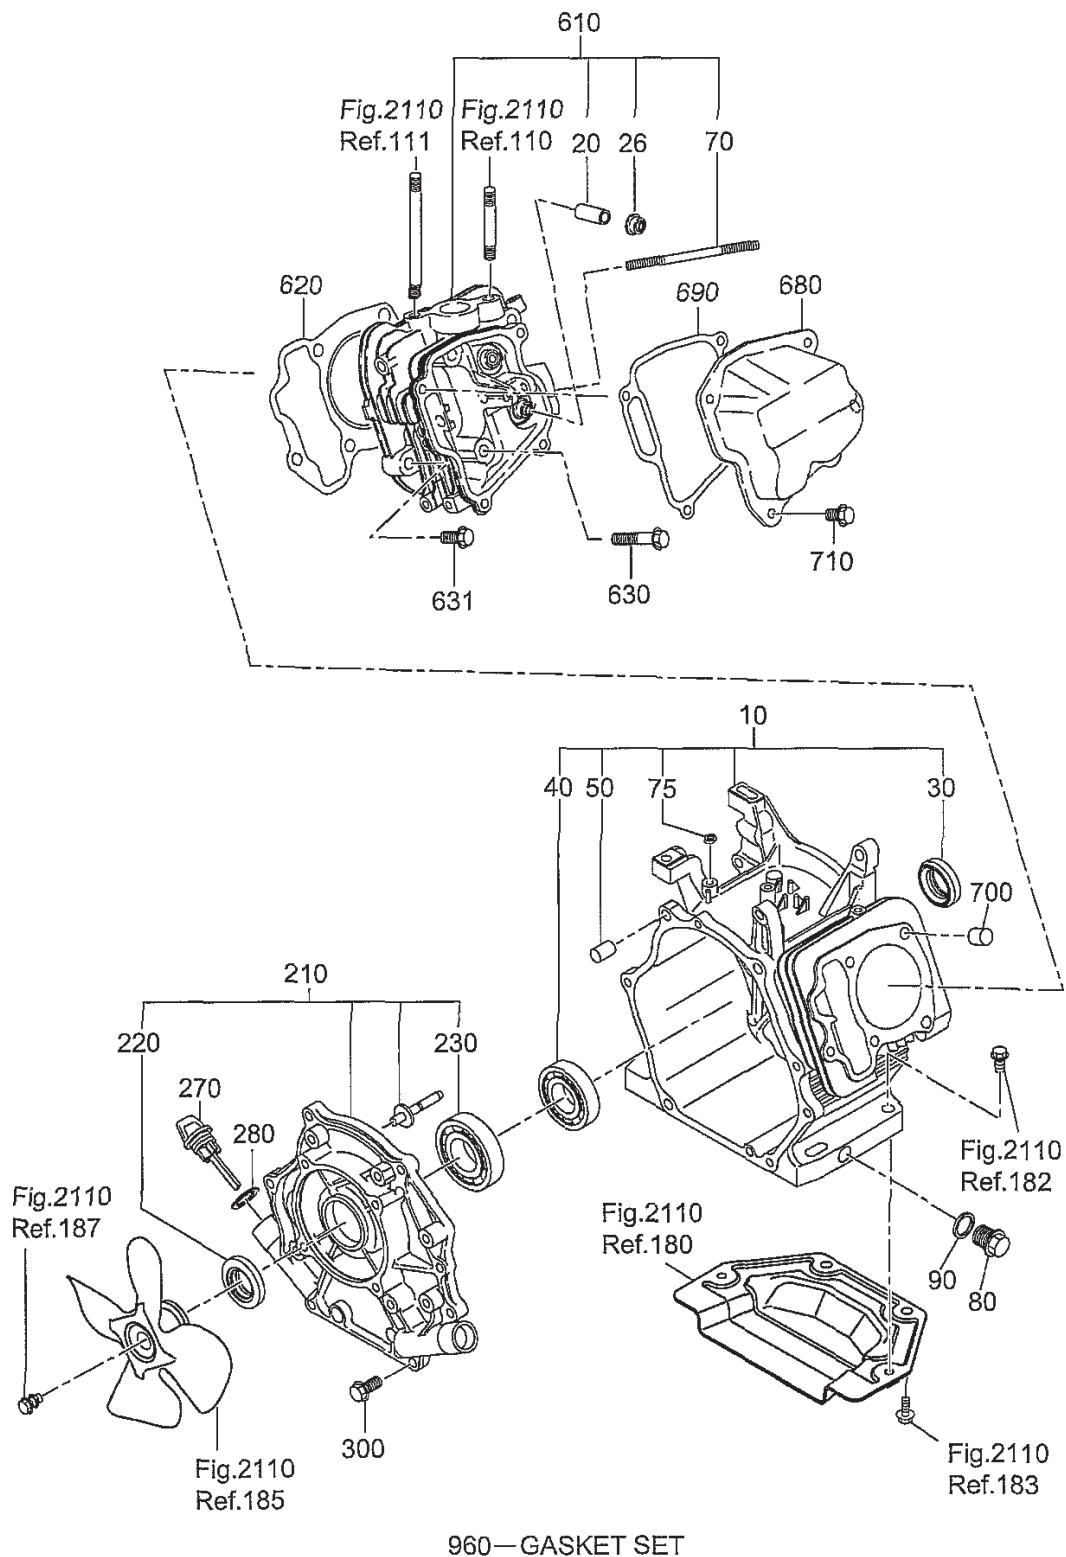


SECTION 1

CRANKCASE GROUP

[illegible]


SECTION 2 CRANKSHAFT, PISTON GROUP

FIG. 200

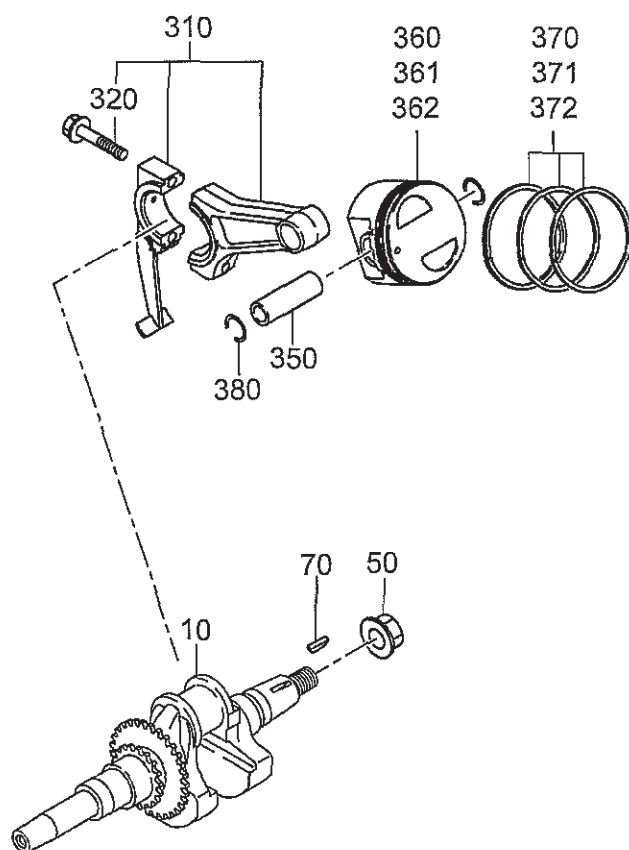

INTAKE, EXHAUST GROUP

FIG. 300

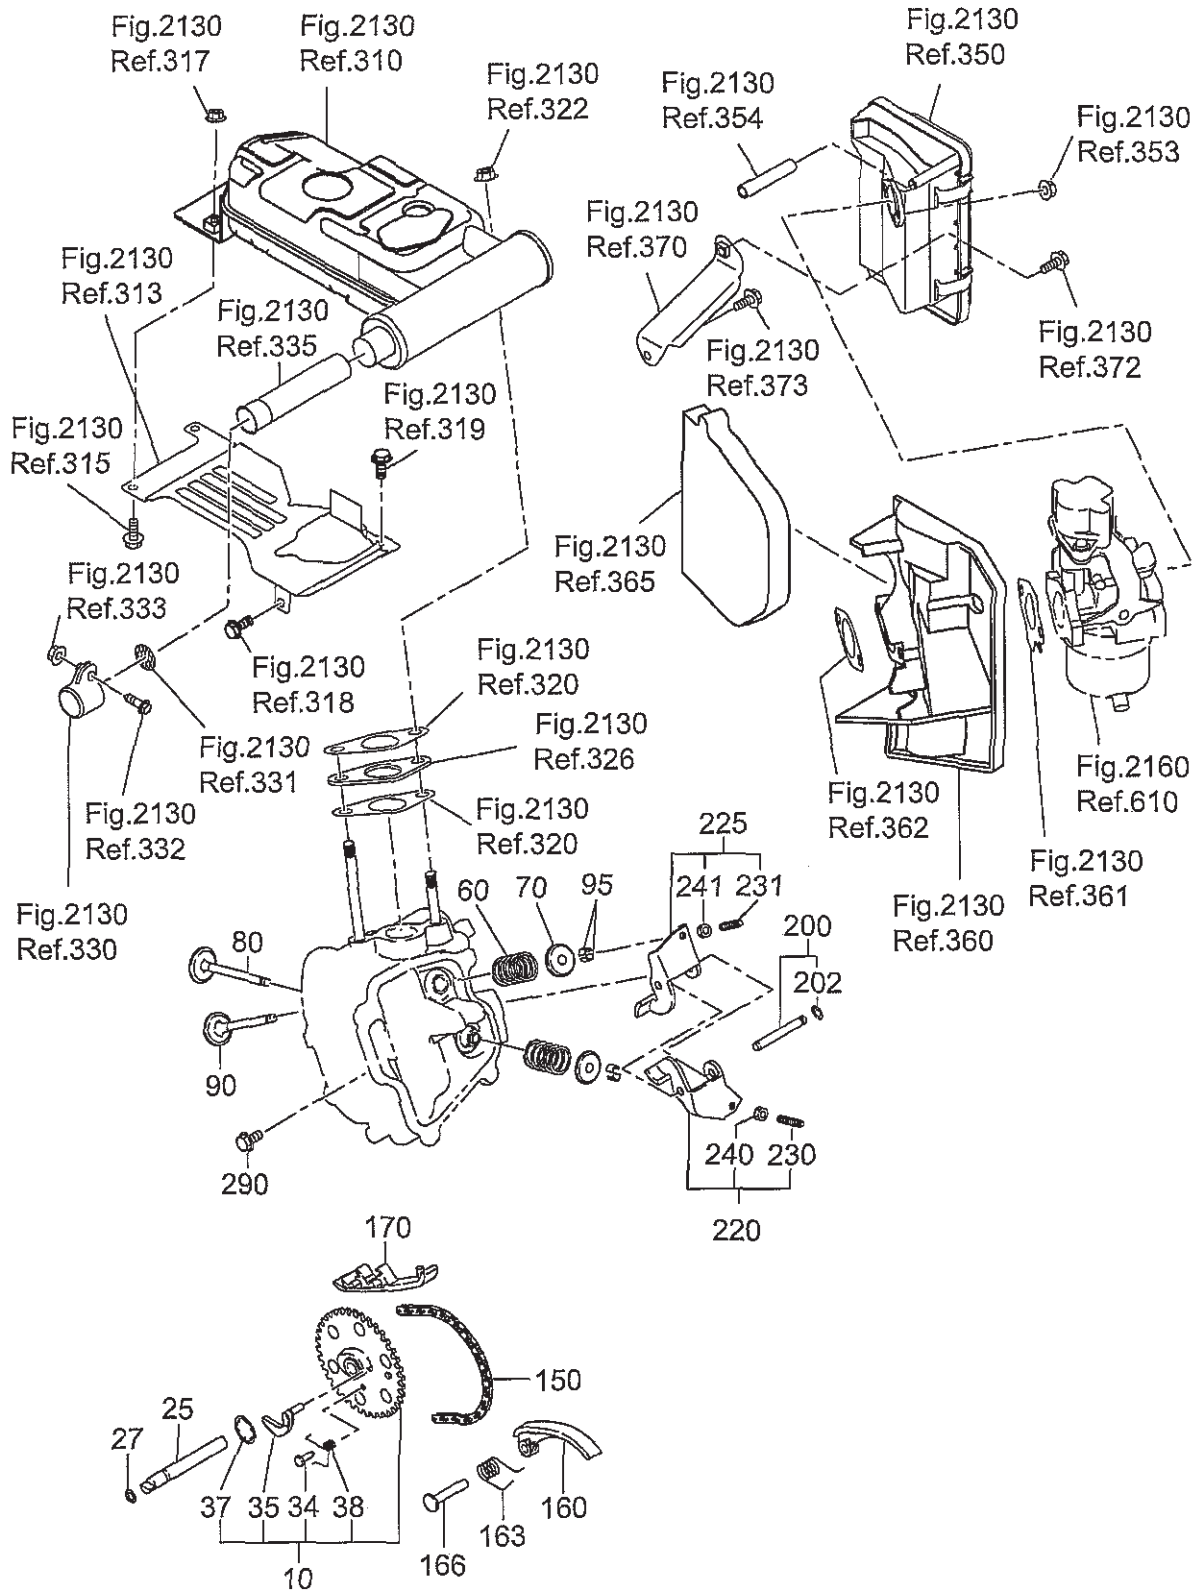


SECTION 3

INTAKE, EXHAUST GROUP

[illegible]

FIG. 400

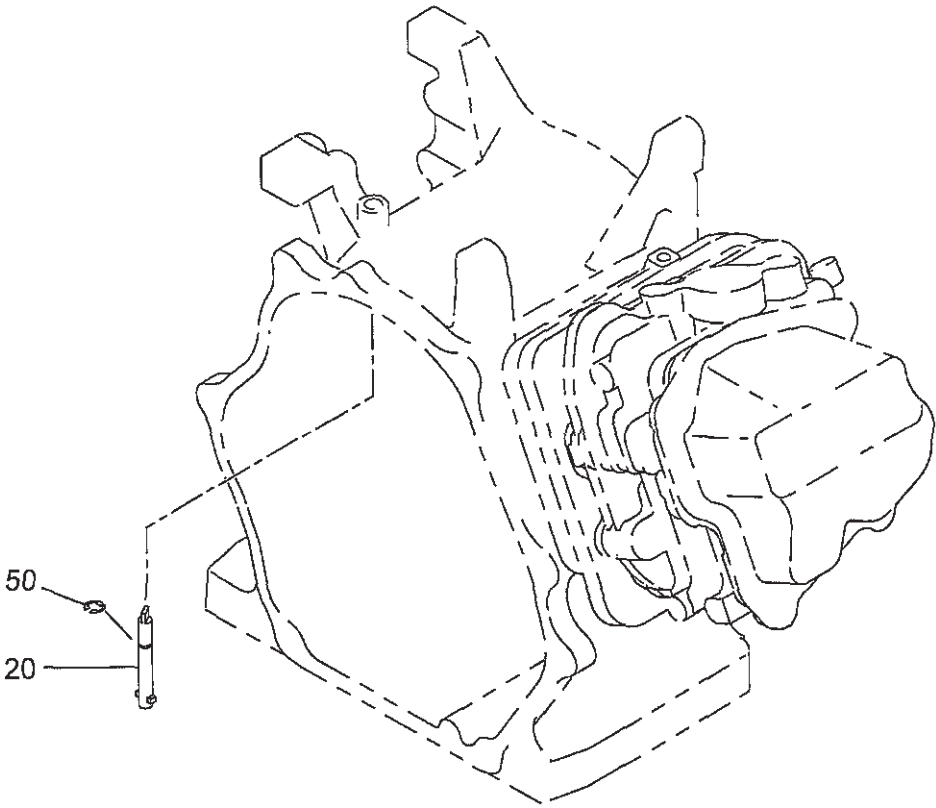


SECTION 4 GOVERNOR, OPERATION GROUP

[illegible]

SECTION 7 ELECTRIC DEVICE GROUP

FIG. 700

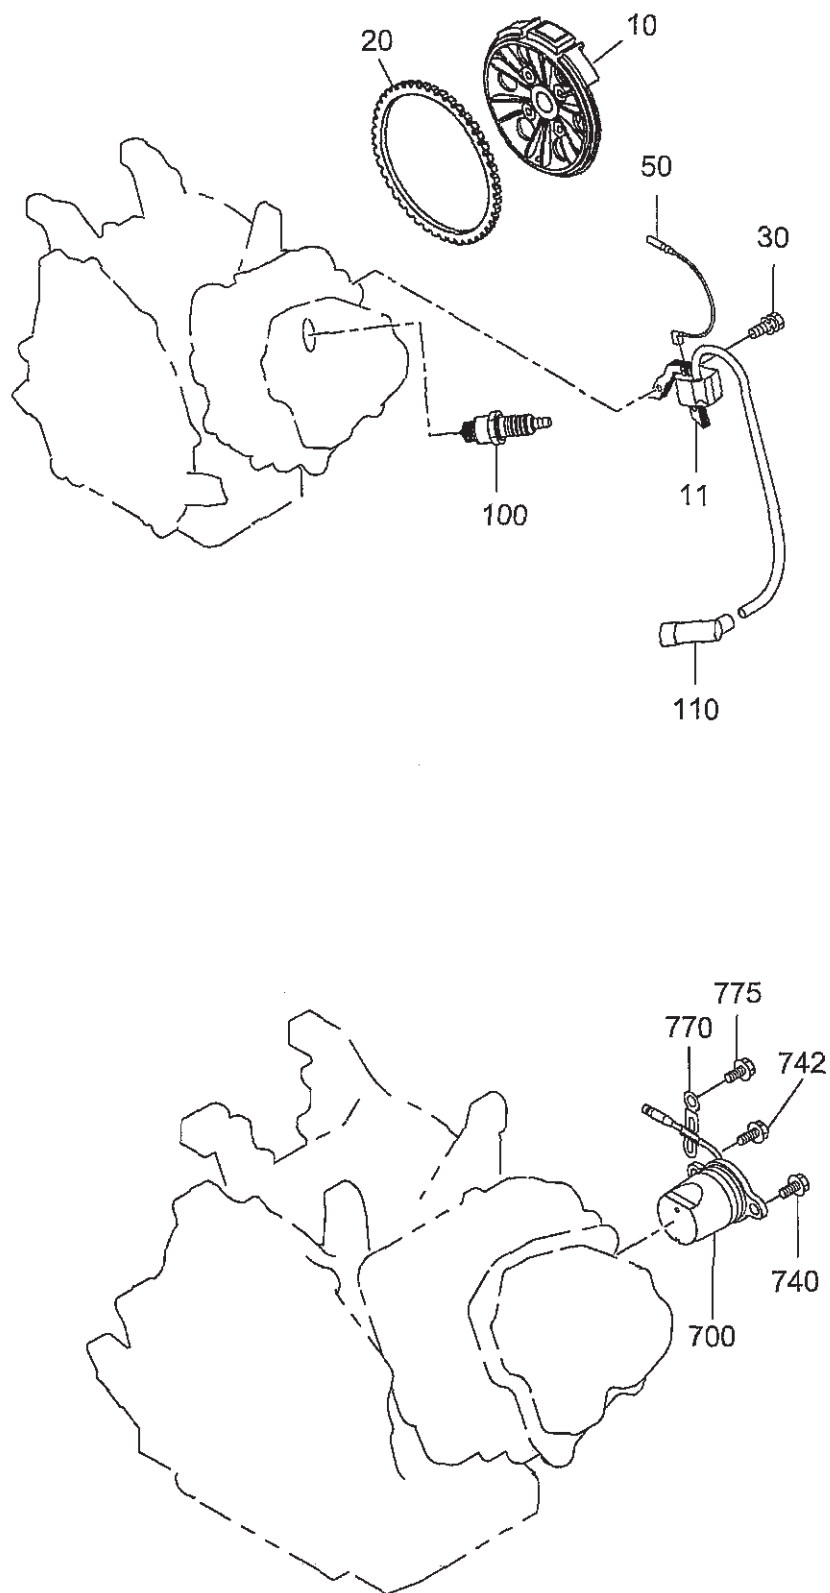


SECTION 7 ELECTRIC DEVICE GROUP

[illegible]

SECTION 7 ELECTRIC DEVICE GROUP

FIG. 720

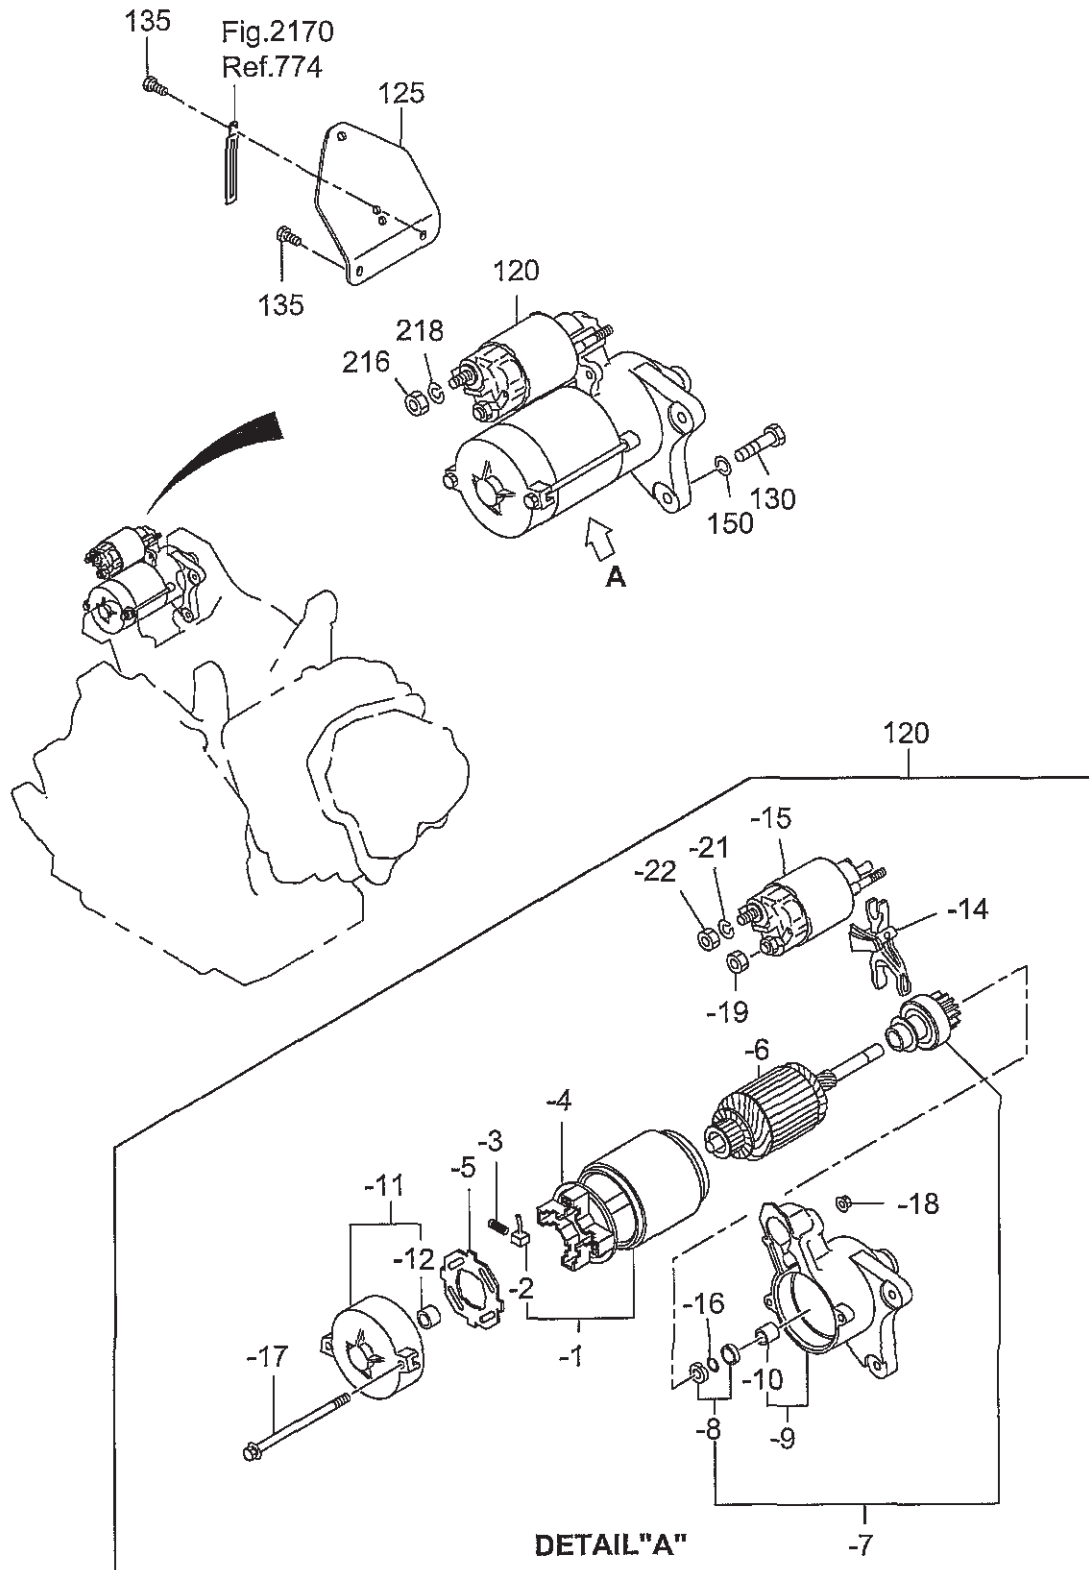


SECTION 7 ELECTRIC DEVICE GROUP

[illegible]

SECTION 21 ENGINE GROUP


FIG. 2110

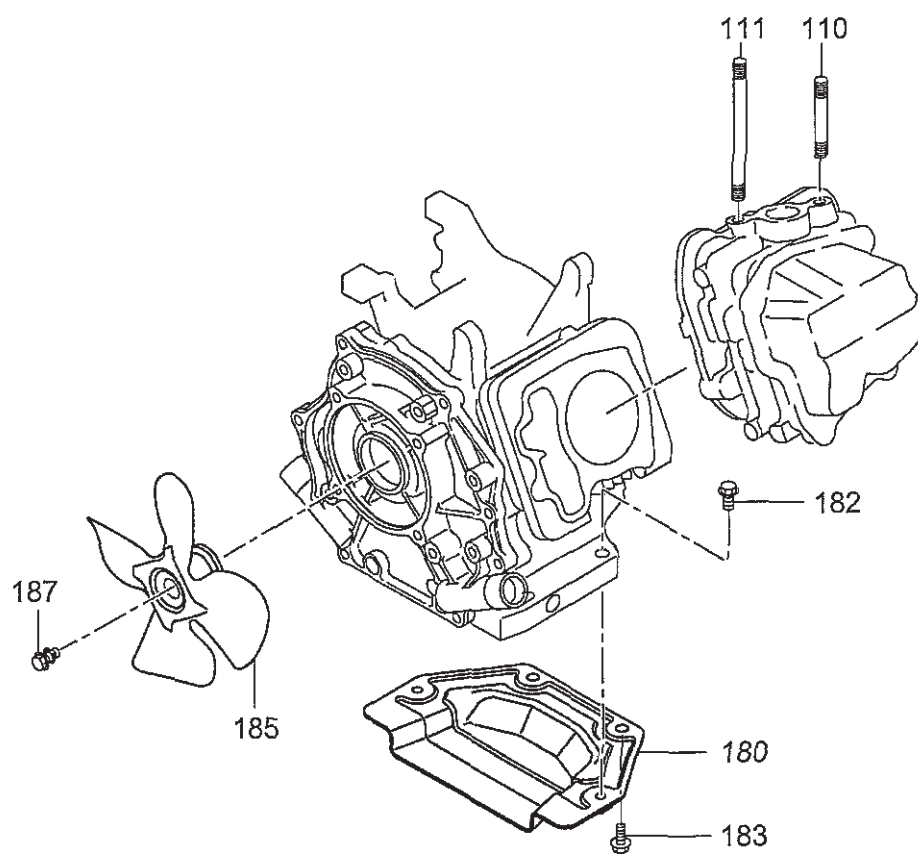

SECTION 21 ENGINE GROUP

[illegible]


FIG. 2130

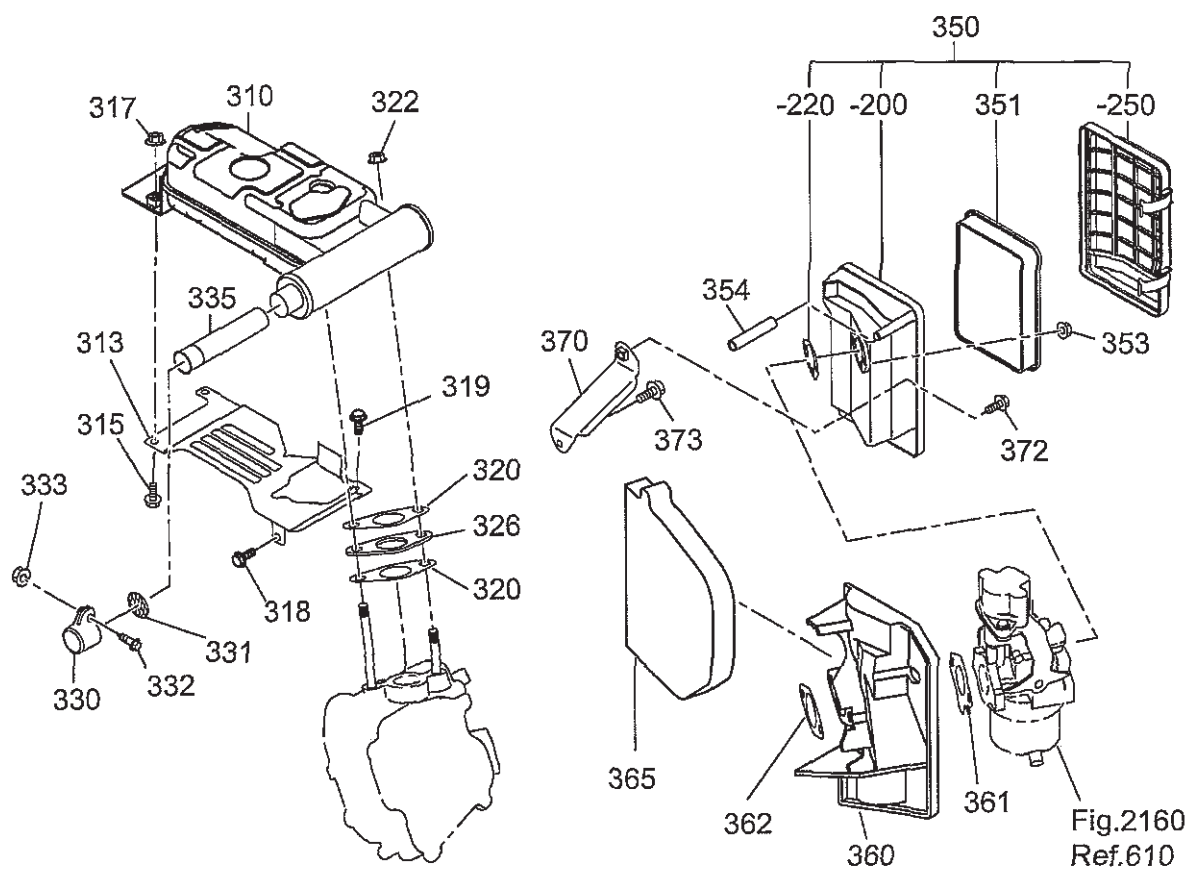

SECTION 21 ENGINE GROUP

[illegible]

FIG. 2150

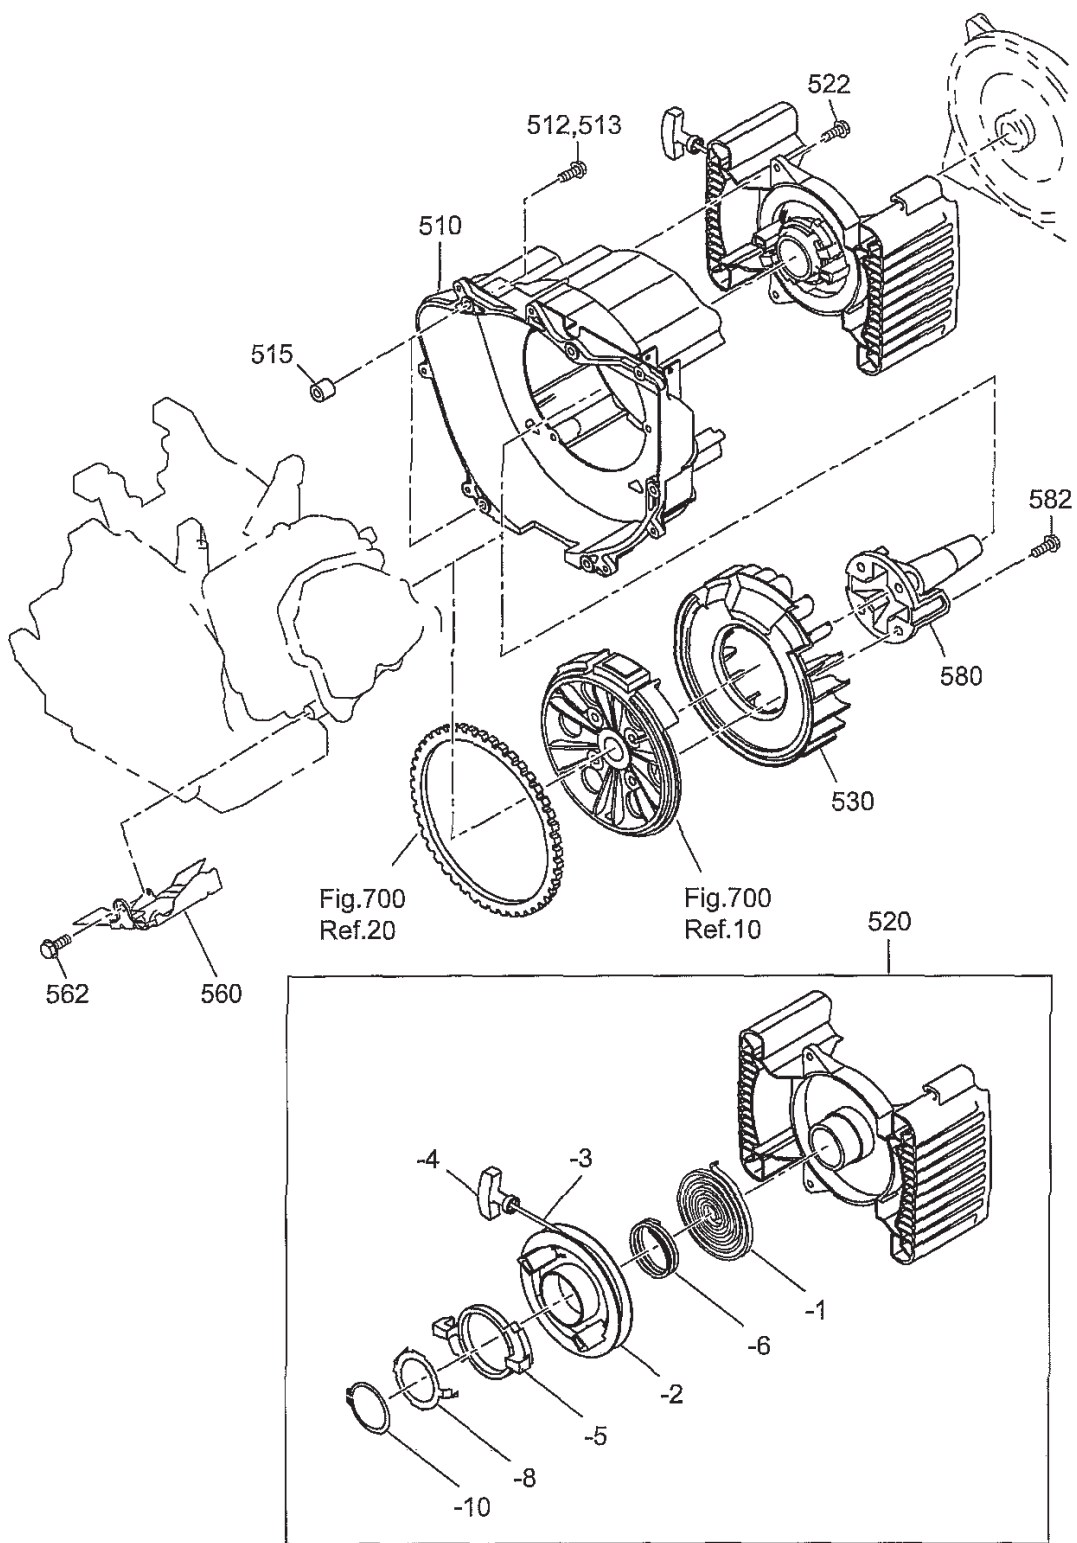


SECTION 21 ENGINE GROUP

[illegible]

SECTION 21 ENGINE GROUP


FIG. 2160

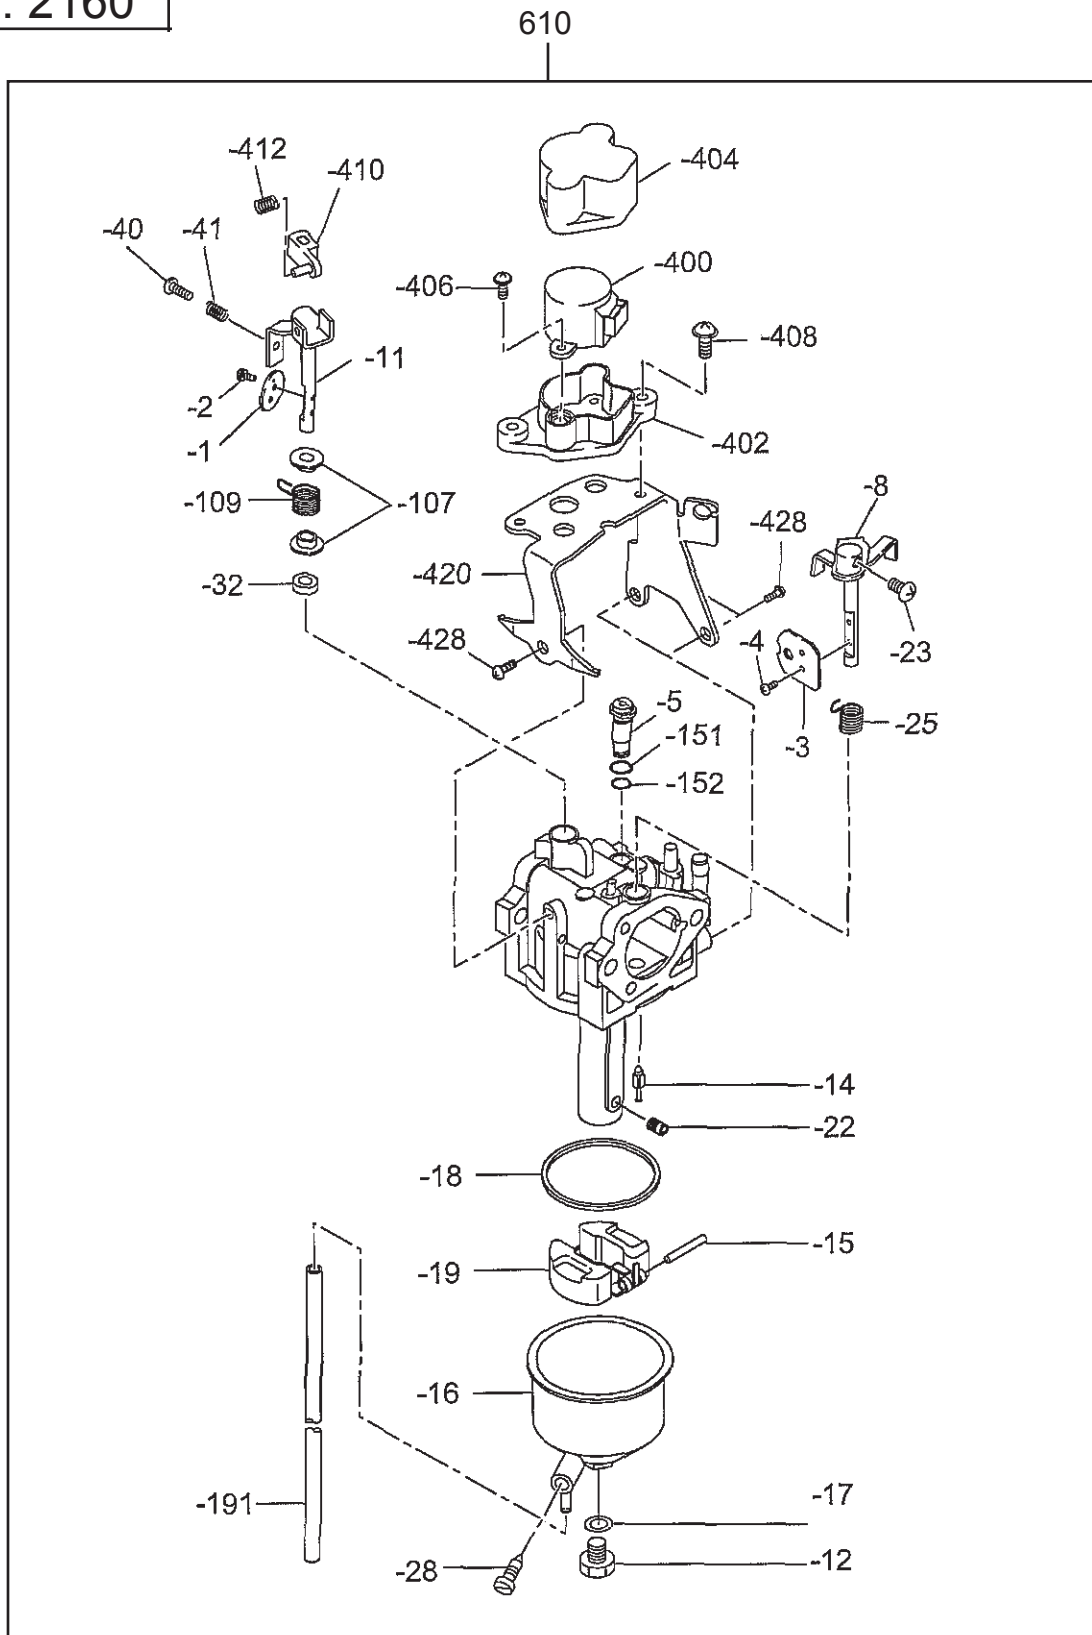

SECTION 21 ENGINE GROUP

[illegible]


FIG. 2170

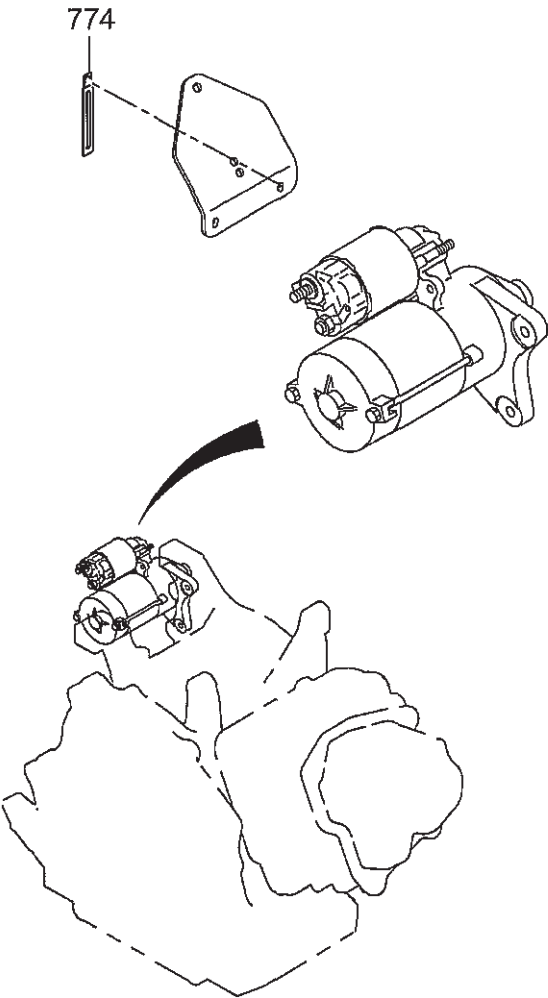

SECTION 21 ENGINE GROUP

[illegible]

FIG. 2200

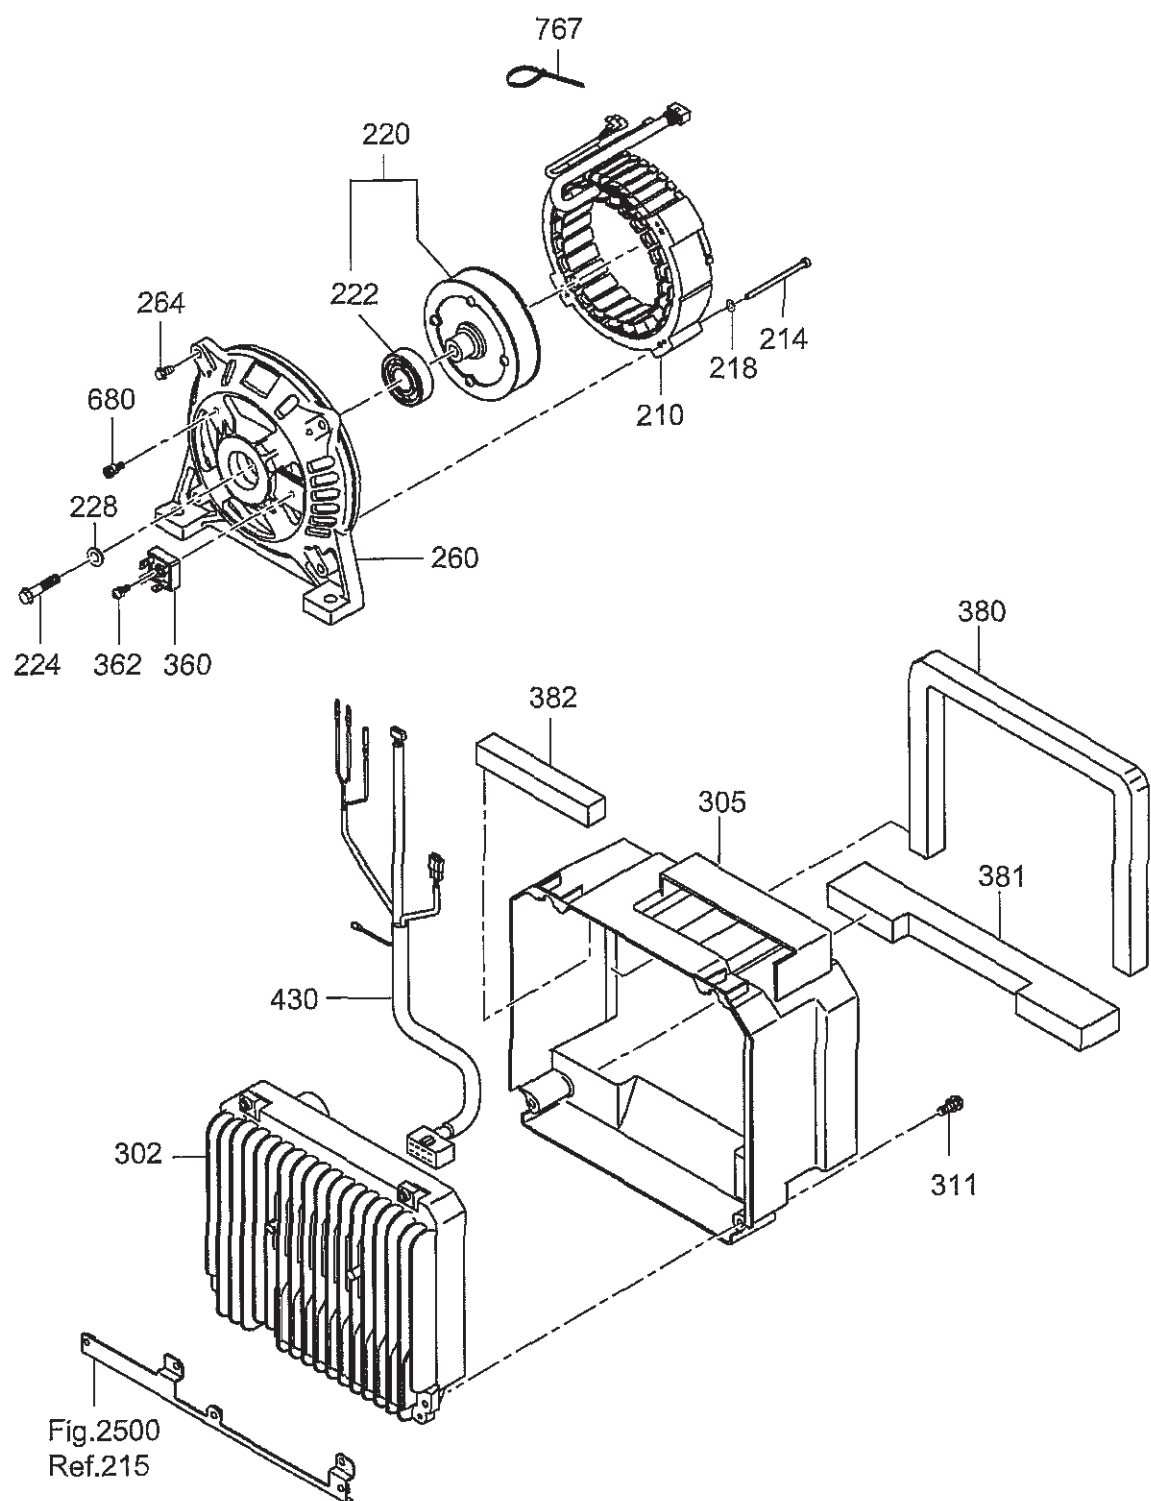


SECTION 22 GENERATOR GROUP

[illegible]

SECTION 23 BASE, FRAME GROUP

FIG. 2300

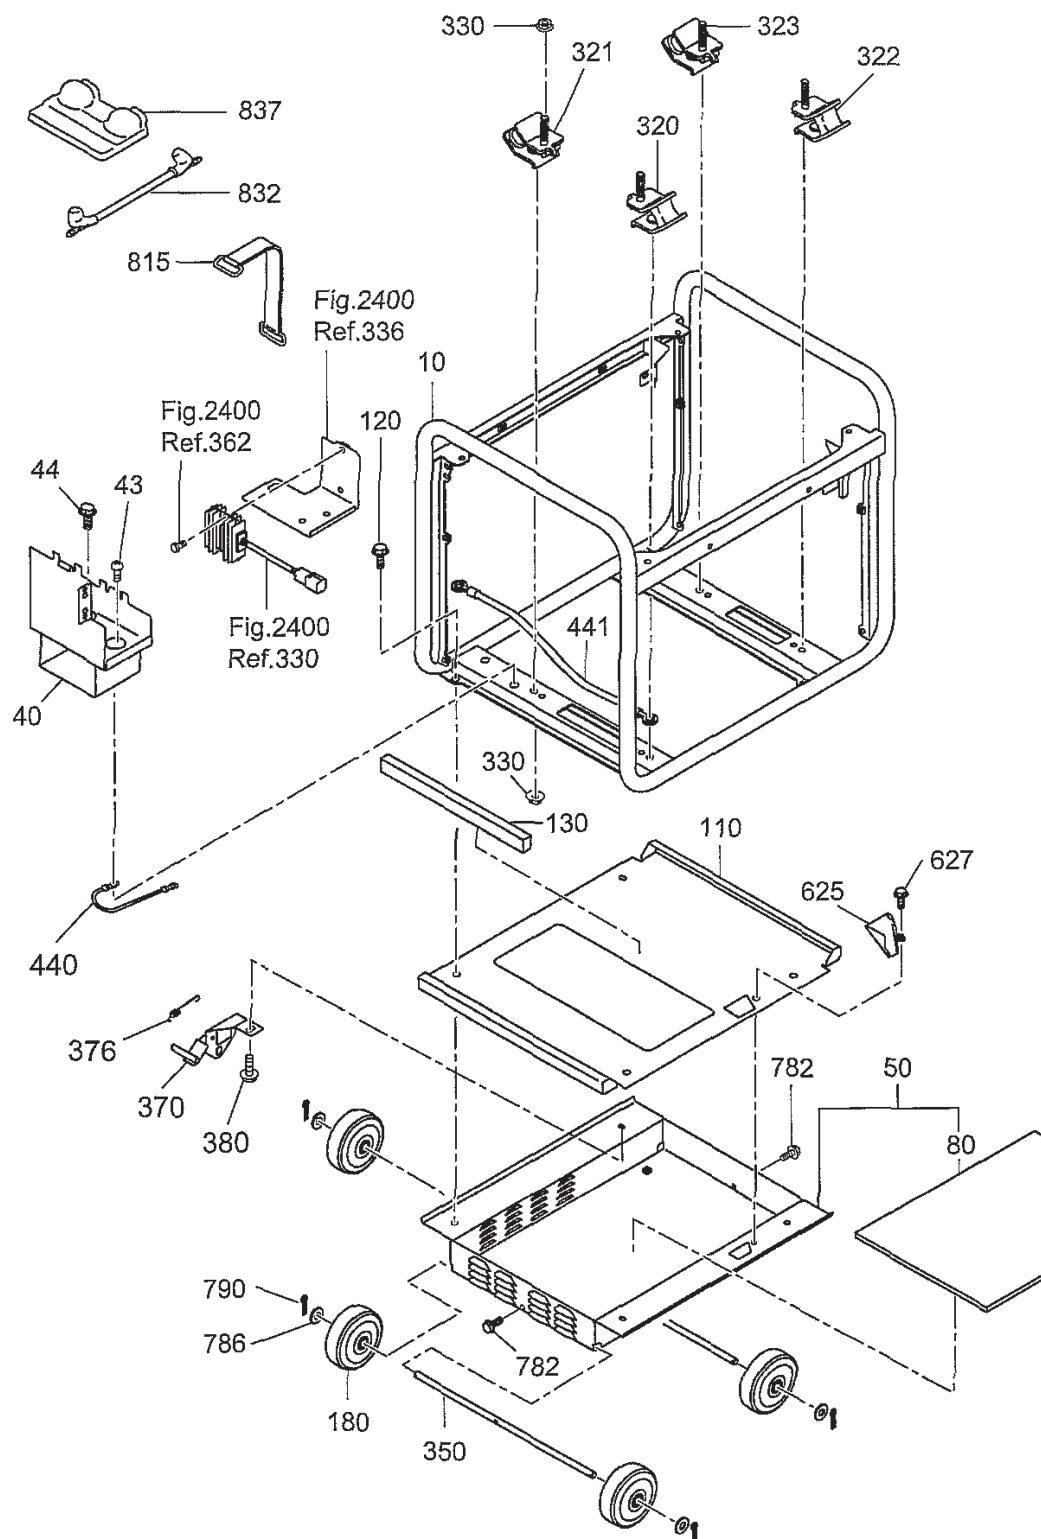


SECTION 23 BASE, FRAME GROUP

[illegible]

SECTION 24 CONTROL GROUP

FIG. 2400

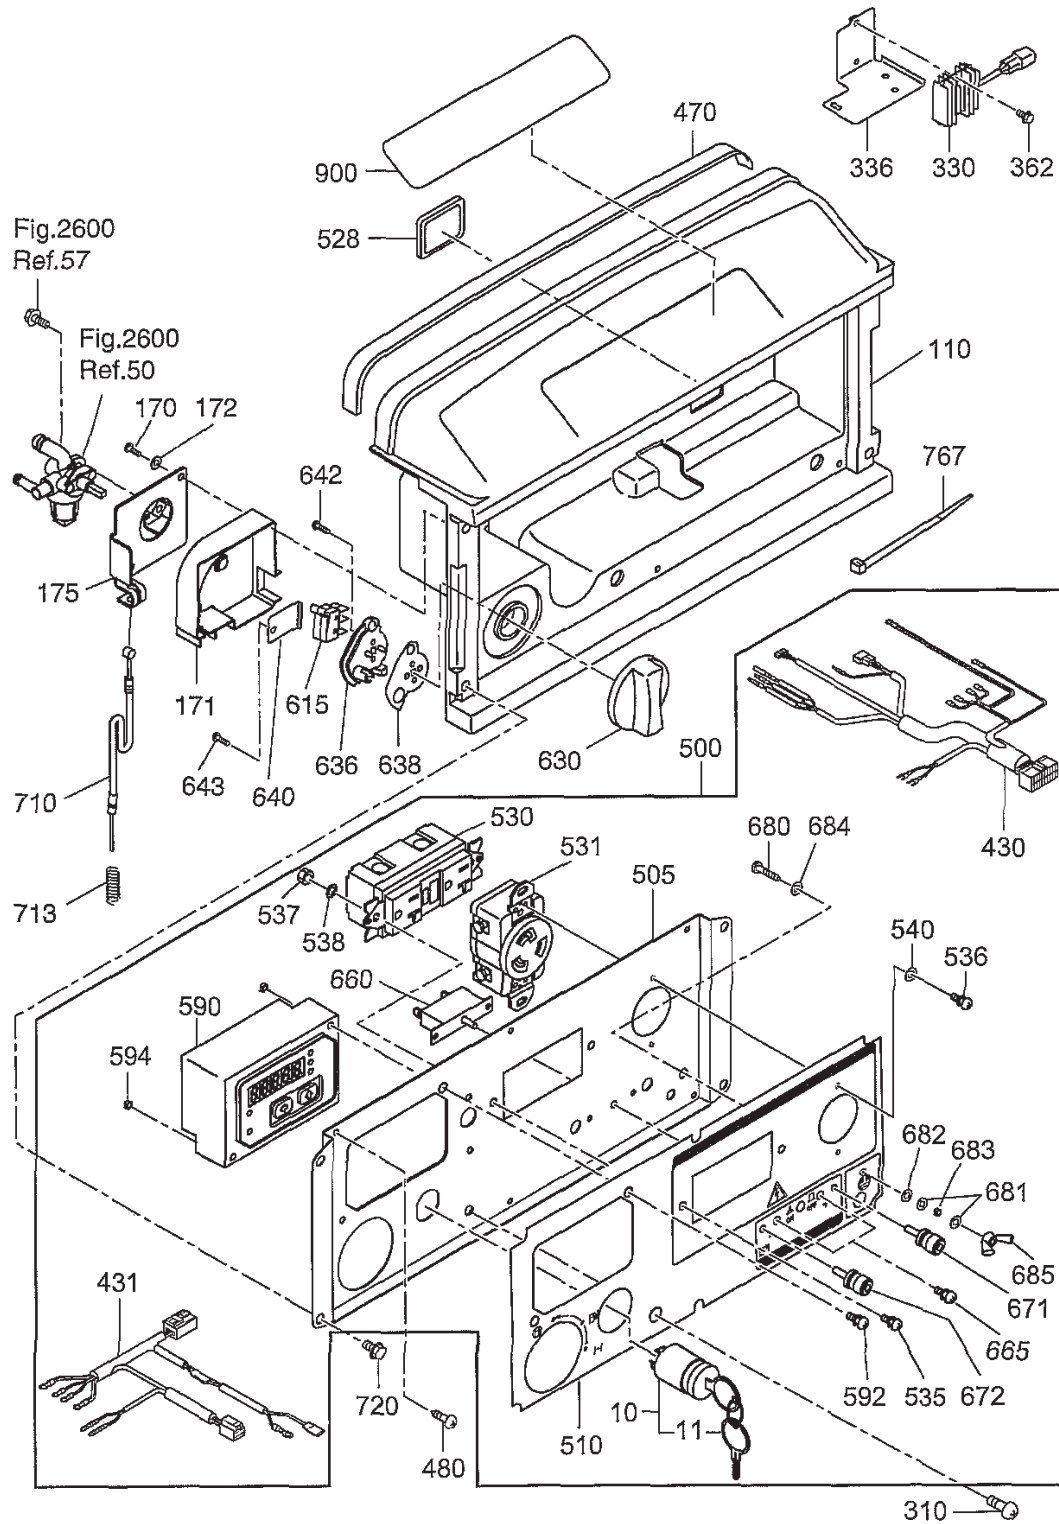


SECTION 24 CONTROL GROUP

REF	PART NO	DESCRIPTION	QTY	REMARKS	FROM - TO	FIG
10	066-00003-30	KEY SWITCH	1			2400
11	066-00099-80	KEY	2			2400
110	33B-50001-01	FRONT COVER, upper	1			2400
170	015-00400-70	TAPPING SCREW	2			2400
171	33B-46001-03	COVER, cock	1			2400
172	003-10040-00	WASHER	2			2400
175	33B-46012-01	BRACKET, cock	1			2400
310	004-36061-60	SCREW and WASHER	2			2400
330	33B-47502-01	REGULATOR	1			2400
336	33B-35801-02	BRACKET, regulator	1			2400
362	011-00600-50	FLANGE BOLT	2			2400
430	34B-48001-01	WIRE HARNESS	1			2400
431	34B-48052-01	WIRE HARNESS	1			2400
470	34B-57311-03	SEAL SPONGE	1			2400
480	353-49904-08	TAPPING SCREW	6			2400
500	34D-45921-00	CONTROL PANEL	1			2400
505	33B-45013-01	PANEL PLATE	1			2400
510	34B-49119-03	SHEET	1			2400
528	227-75001-03	GROMMET	1			2400
530	388-85003-01	AC CONNECT, GFCI	1			2400
531	356-45711-08	AC CONNECT, NEMA	1			2400
535	004-35041-00	SCREW and WASHER	2			2400
536	356-59937-08	SCREW	2			2400
537	002-27040-08	NUT	2			2400
538	003-10040-00	WASHER	2			2400
540	326-00335-08	SPRING WASHER	2			2400
590	KU3-11760-11	MONITOR C/U	1			2400
592	013-10400-80	SCREW and WASHER	2			2400
594	002-17040-00	NUT	2			2400
615	33K-41811-03	MICRO SWITCH	2			2400
630	33K-42010-03	CONTROL DIAL	1			2400
636	33K-42020-03	CHOKE REEL	1			2400
638	33K-42030-13	PLATE	1			2400
640	33B-46015-01	BRACKET, micro	1			2400
642	33K-41814-08	TAPPING SCREW	2			2400
643	015-00400-70	TAPPING SCREW	1			2400
660	352-45620-08	CIRCUIT BREAKER	1			2400
665	31B-79011-03	SCREW	2			2400
671	363-45701-08	TERMINAL BOLT	1	Red		2400
672	363-45700-08	TERMINAL BOLT	1	Black		2400
680	388-88001-03	SCREW and WASHER	1			2400
681	332-00050-08	SPRING WASHER	2			2400
682	353-49903-08	WASHER	1			2400
683	353-49902-08	NUT	1			2400
684	003-30050-00	LOCK WASHER	1			2400
685	353-49901-03	WING NUT	1			2400

SECTION 24 CONTROL GROUP

FIG. 2400

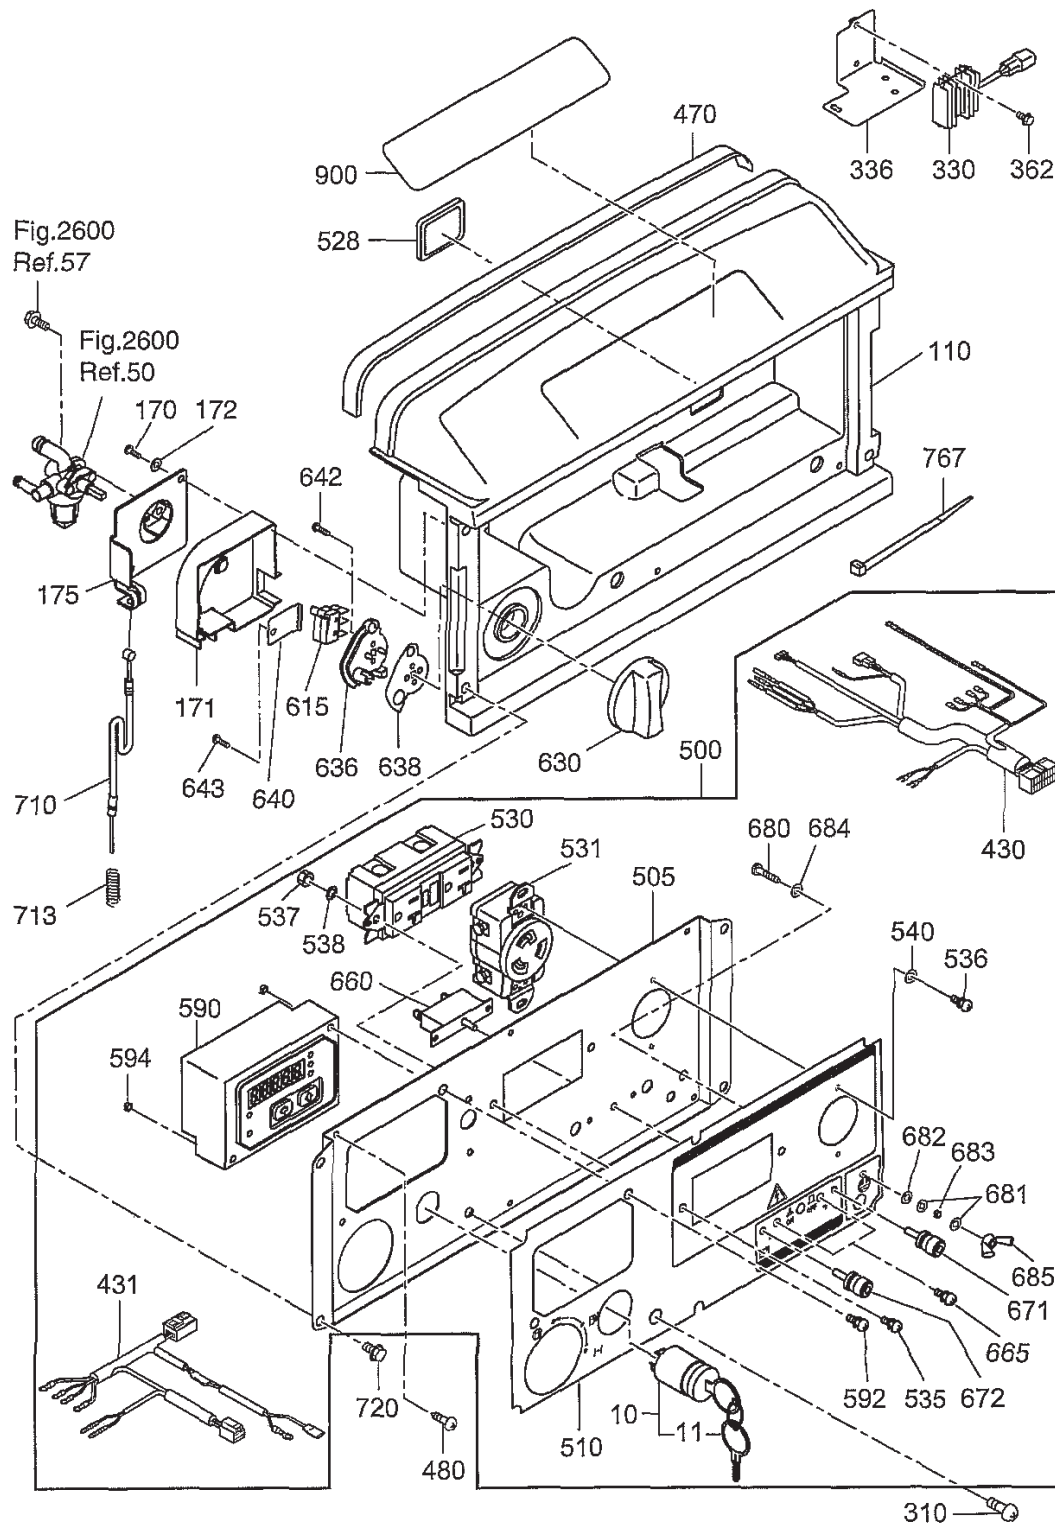


SECTION 24 CONTROL GROUP

[illegible]

SECTION 25 COVER GROUP


FIG. 2500

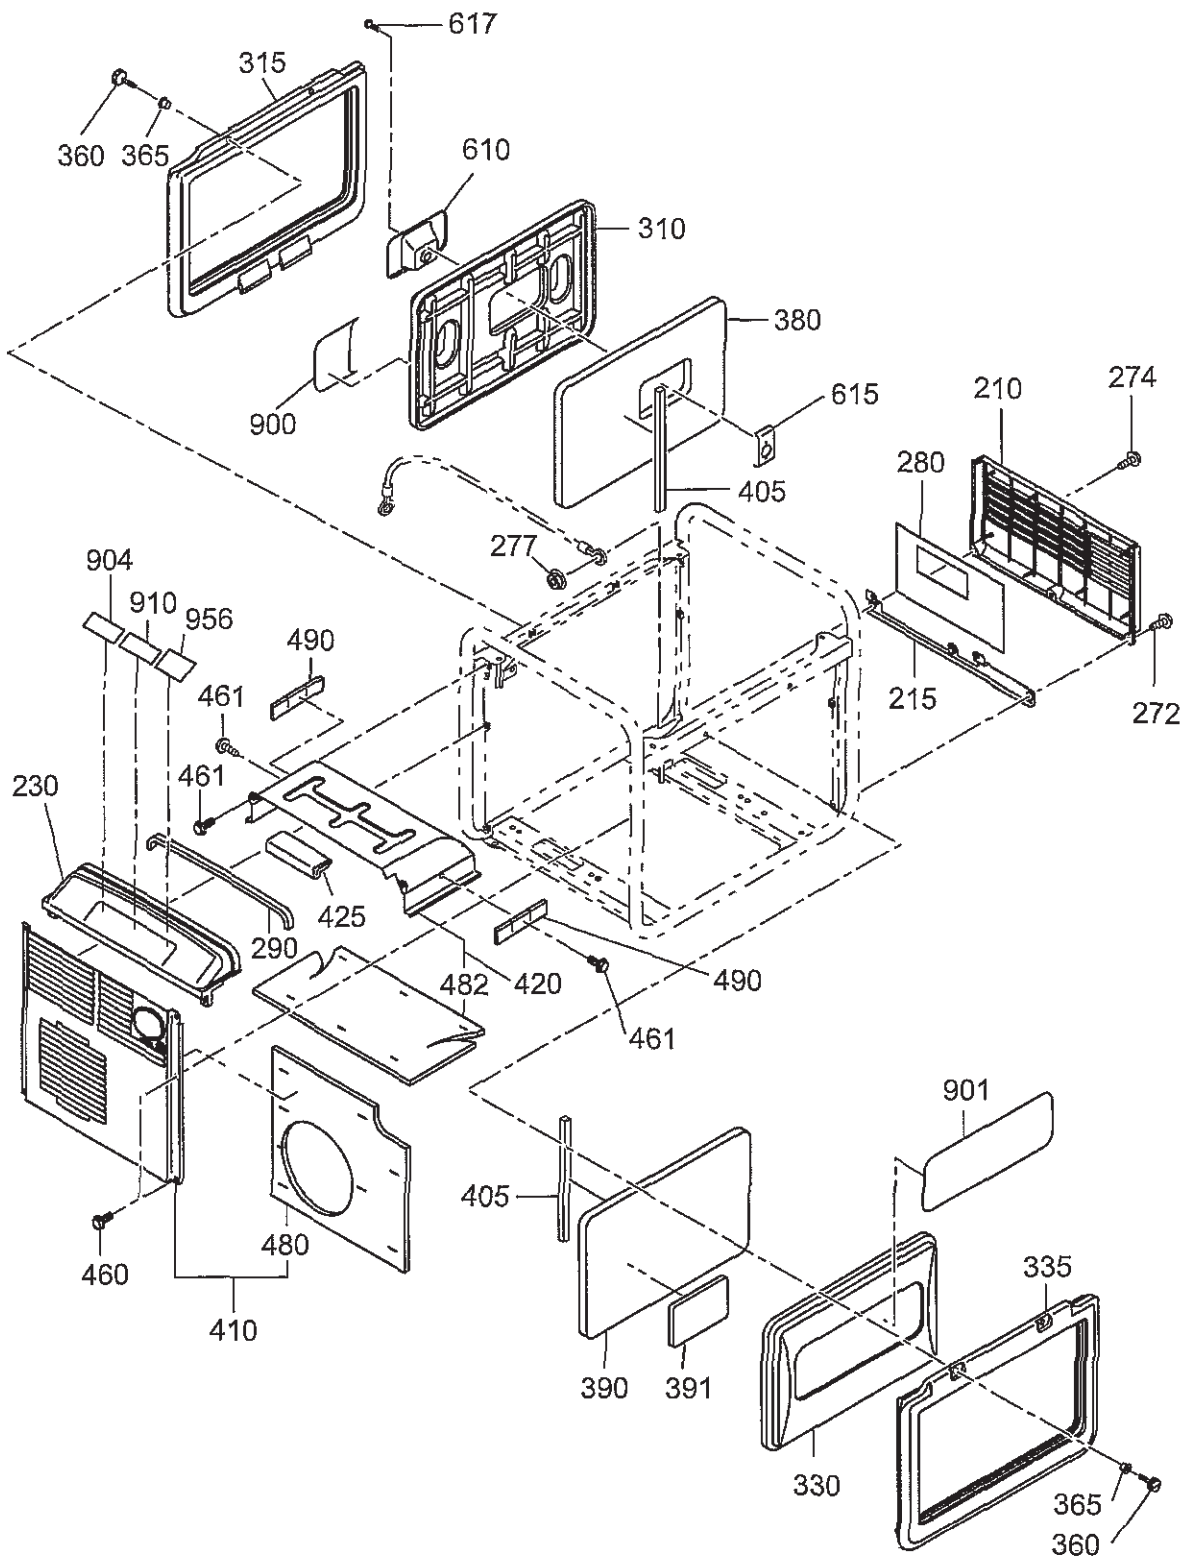

SECTION 25 COVER GROUP

[illegible]

FIG. 2510

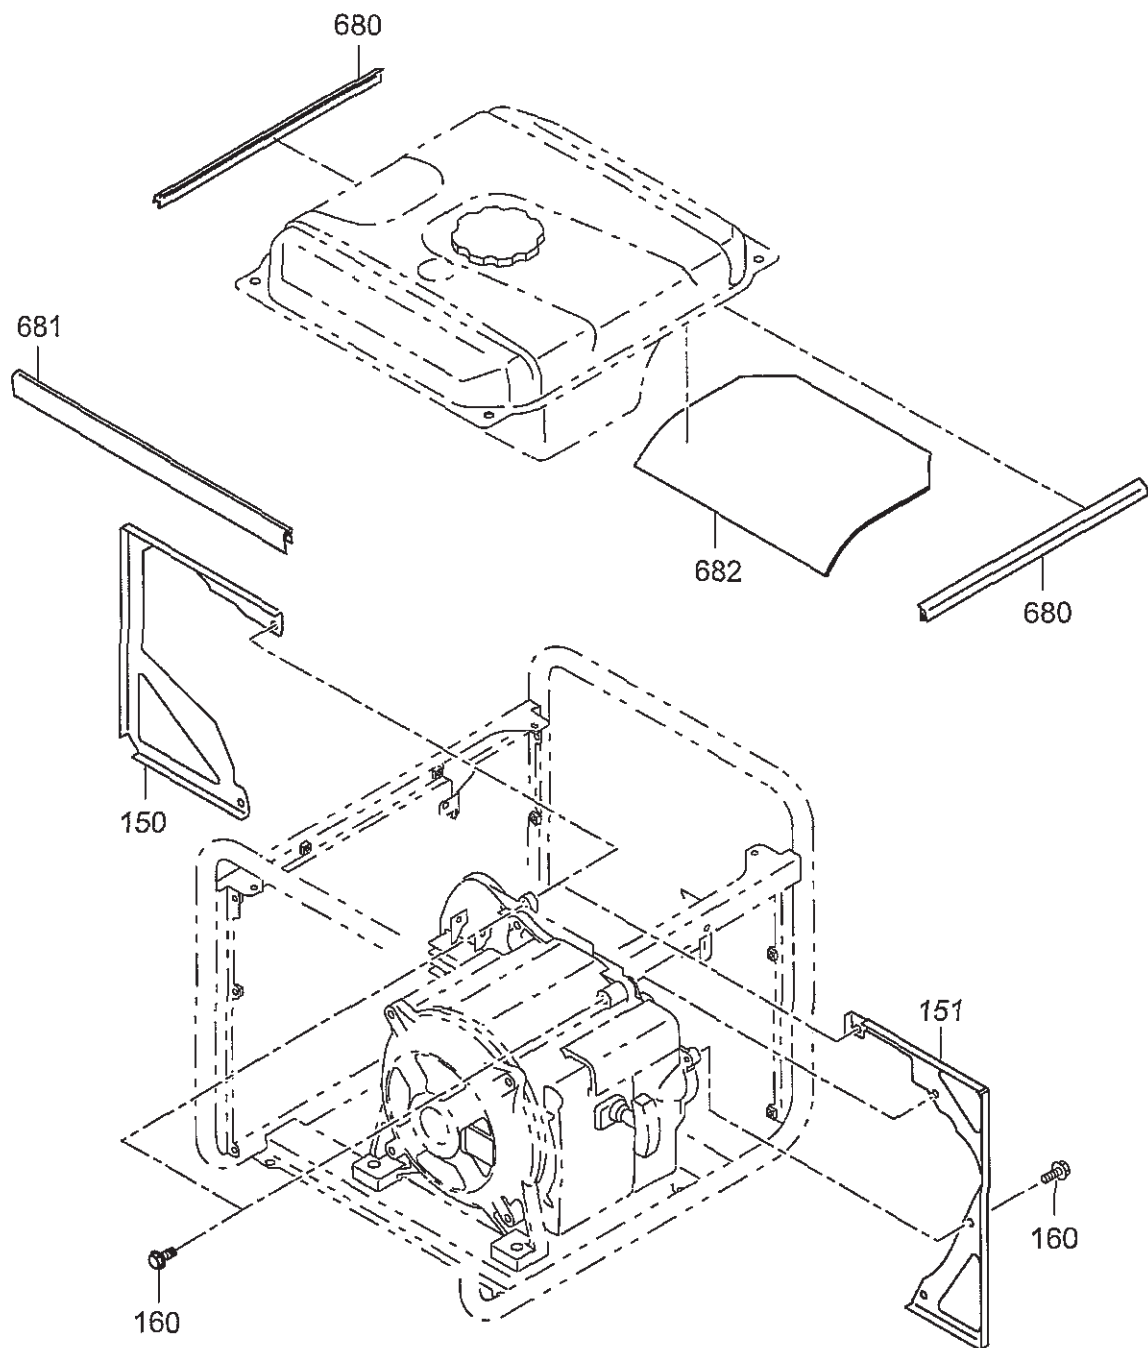


SECTION 25 COVER GROUP

[illegible]

SECTION 26 FUEL TANK GROUP


FIG. 2600

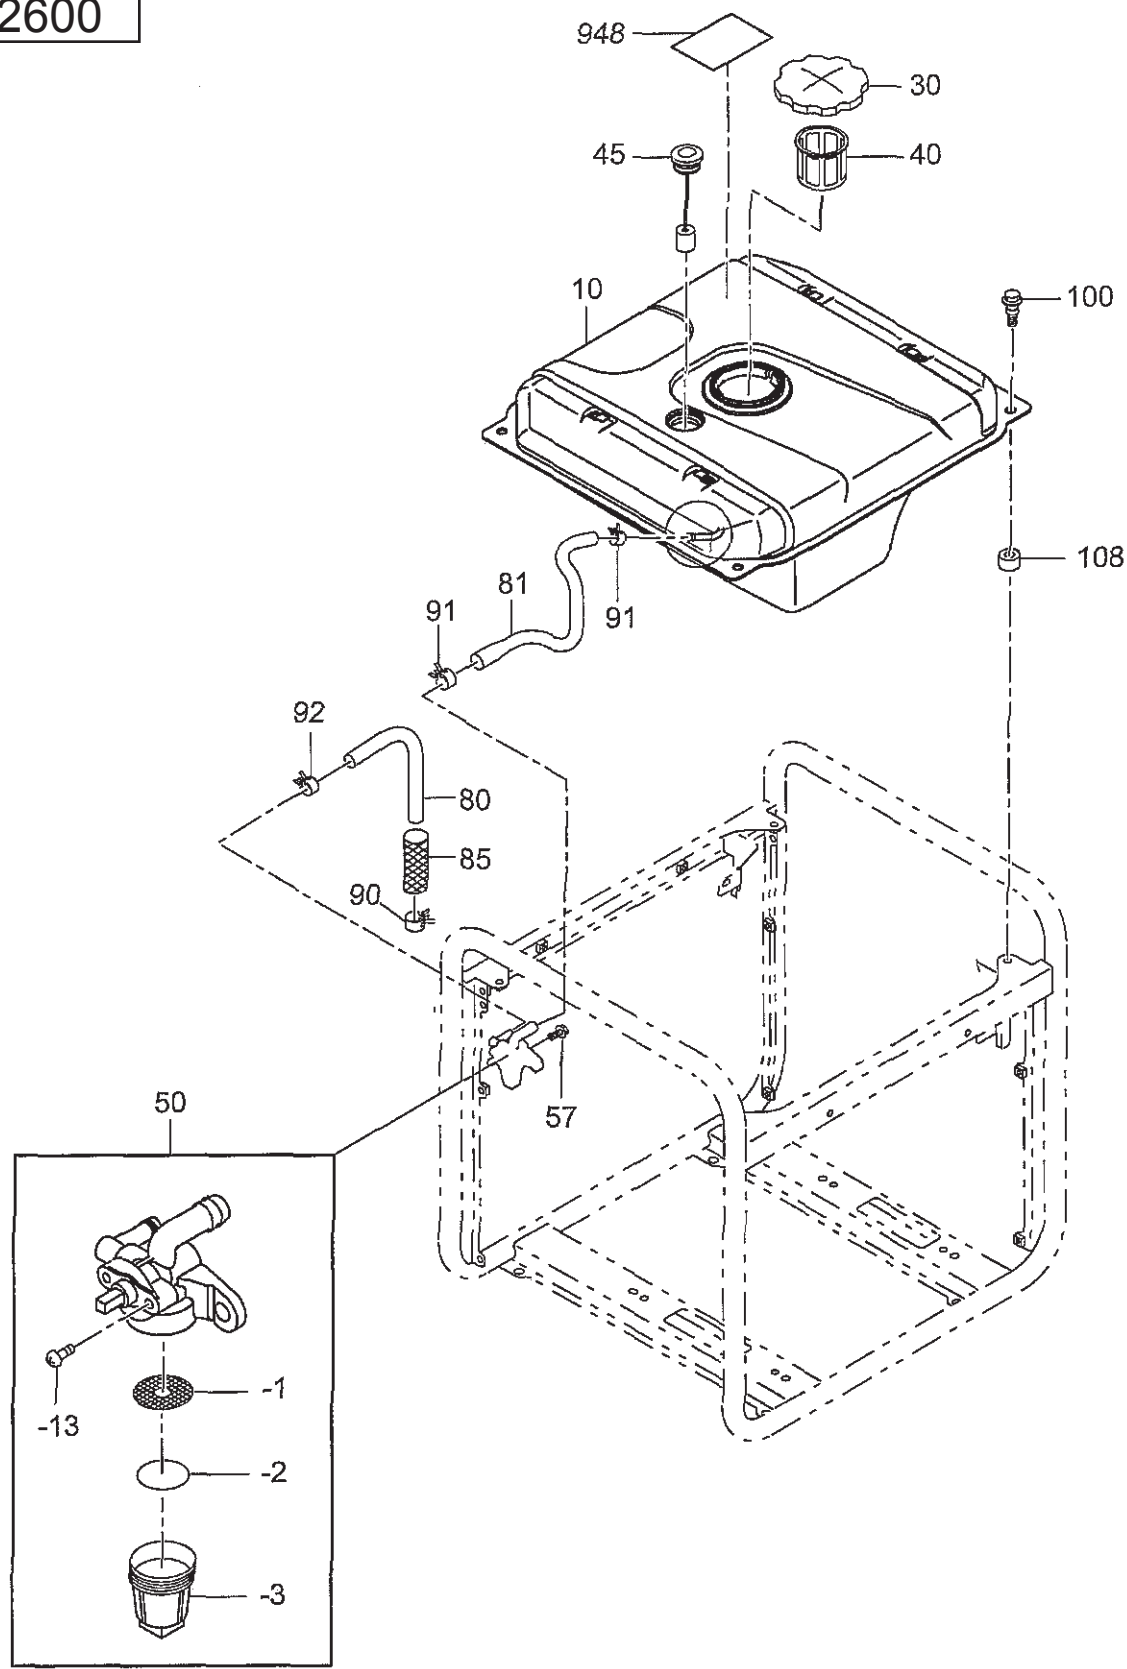

SECTION 26 FUEL TANK GROUP

[illegible]

FIG. 2900

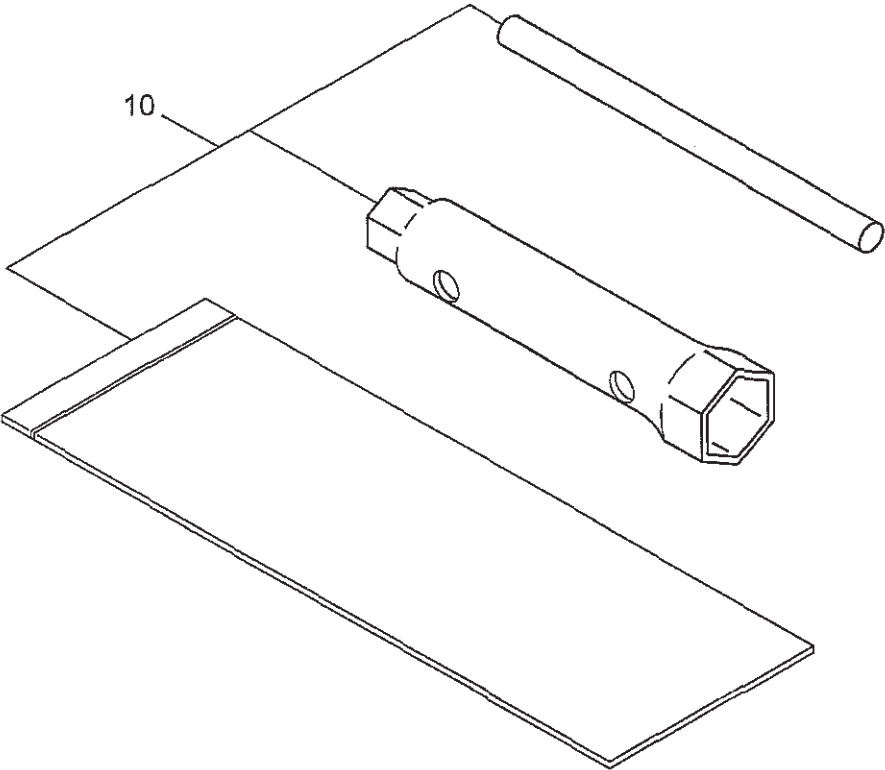

SECTION 29 ACCESSORIES GROUP

[illegible]

PRINTED IN THE USA