

PARTS MANUAL

Model

**RGX7800
GENERATOR**

 
PUB-GP6801
Rev. 07/09

Robin America, Inc.

905 Telser Road • Lake Zurich, IL 60047 • Phone: 847-540-7300 • Fax: 847-438-5012
e-mail: sales@robinamerica.com • www.subarupower.com

© Copyright 2009 Robin America, Inc.

MANUAL LAYOUT

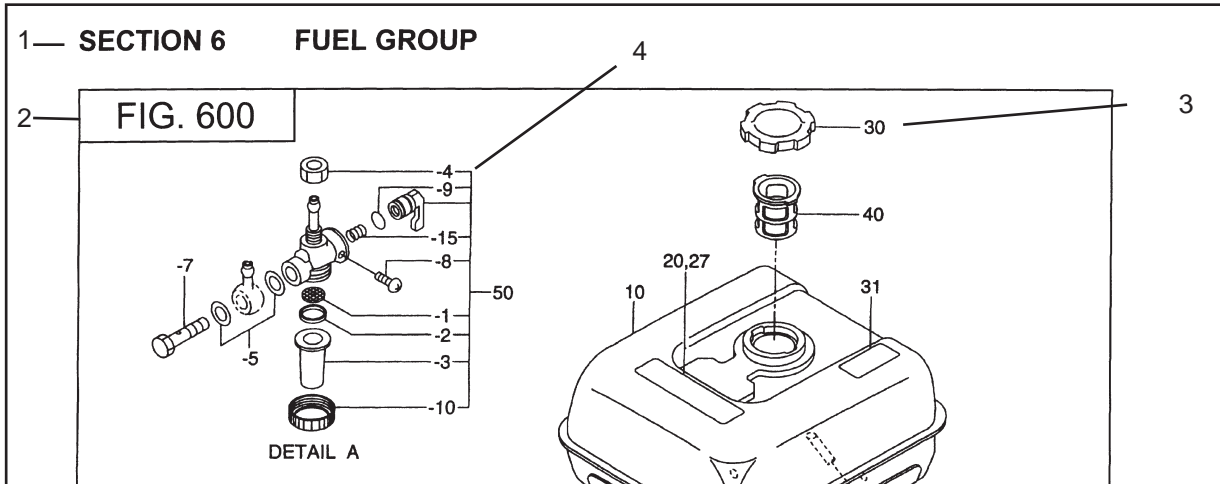

REF.	PART NO.	DESCRIPTION	QTY.	REMARKS	FROM-TO	FIG.
10	267-60103-01	FUEL TANK CP	1	YD, YS TYPE, BLACK		600
	267-60101-01	FUEL TANK CP	1	YELLOW		600
27	073-20039-00	LABEL, WARNING	1	YD, YS TYPE		600
30	043-04300-15	FUEL TANK CAP CP	1			600
31	267-95201-03	LABEL, EMISSION	1	YD, YS TYPE		600
40	064-13600-10	FUEL FILTER	1			600
50	064-20021-01	FUEL STRAINER AY	1			600
-1	064-20002-20	FILTER	1			600
-2	064-20002-30	GASKET	1			600
-3	064-20019-10	CUP	1			600

1. SECTION NAME Parts are broadly classified according to their functions. Refer to the Group Index (table of contents) for respective section name.
2. FIG. No. The FIG. number indexes the reference and part numbers to the illustration. Figure numbers that vary only in the tens place (i.e.: 700 and 710) are in a group of the same section (i.e.: Electrical Device Group).
3. REF. No. The Reference number identifies the part illustration with the corresponding part number in the part list.
4. SUBASSEMBLY SUBASSEMBLY parts of part assembly are listed below the assembly part. The subassembly part reference number is indicated by the number led by "-" such as "-1", "-2".
5. PART NUMBER It is the number assigned for sales unit. Use the PART No. when making an order.
6. DESCRIPTION It is designation of the part.
7. QTY. Quantity of each part used for each product.
8. REMARKS This gives a distinctive feature and/or a supplementary comment for the type, the specification, and the part concerned. It also shows part number(s) interchangeable for the part.
9. FROM-TO This section shows the CODE No. to indicate the history of progress in which improved parts have been introduced in the product. The FROM-TO CODE No. helps to identify PART No. being employed in the product concerned. See the examples below:
 - The part is used in the product irrespective of CODE No.
 - 2101- The part is used in the products with CODE No. of 2101 and after this number.
 - 2100 The part is used in the products with CODE No. of 2100 and before this number.


GROUP INDEX

Group Name	Page
CRANKCASE GROUP	6
CRANKSHAFT GROUP	8
INTAKE and EXHAUST GROUP	10
GOVERNOR GROUP	14
COOLING and STARTING GROUP	16
FUEL, LUBRICANT GROUP	18
CARBURETOR GROUP	20
ELECTRIC DEVICE GROUP	22
GENERATOR GROUP	30

INDEX OF DESCRIPTION SYMBOLS			
SYMBOL	DESCRIPTION	SYMBOL	DESCRIPTION
AY	ASSEMBLY	P=	PITCH (in mm)
CP	COMPLETE	P.T.O. (PTO)	POWER TAKE OFF
EX	EXPORT (from Japan)	REF	REFERENCE
FIG	FIGURE	R.H. (RH)	RIGHT HAND SIDE
FR	FRONT	RR	REAR
"	INCH	STD.	STANDARD
INCL.	INCLUDE	SW	SWITCH
-L	LITER	T=	THICKNESS (in mm)
L=	LENGTH (in. mm)	UN	UNIT
L.H. (LH)	LEFT-HAND SIDE	U.S.	UNDER SIZE
MECH	MECHANICAL	~V	VOLTAGE
NO (NON)	NONE	~W	WATT
OPT	OPTIONAL	W/	WITH
O.S.	OVER SIZE	W/O	WITHOUT


SECTION 1 CRANKCASE GROUP

 FIG. 100

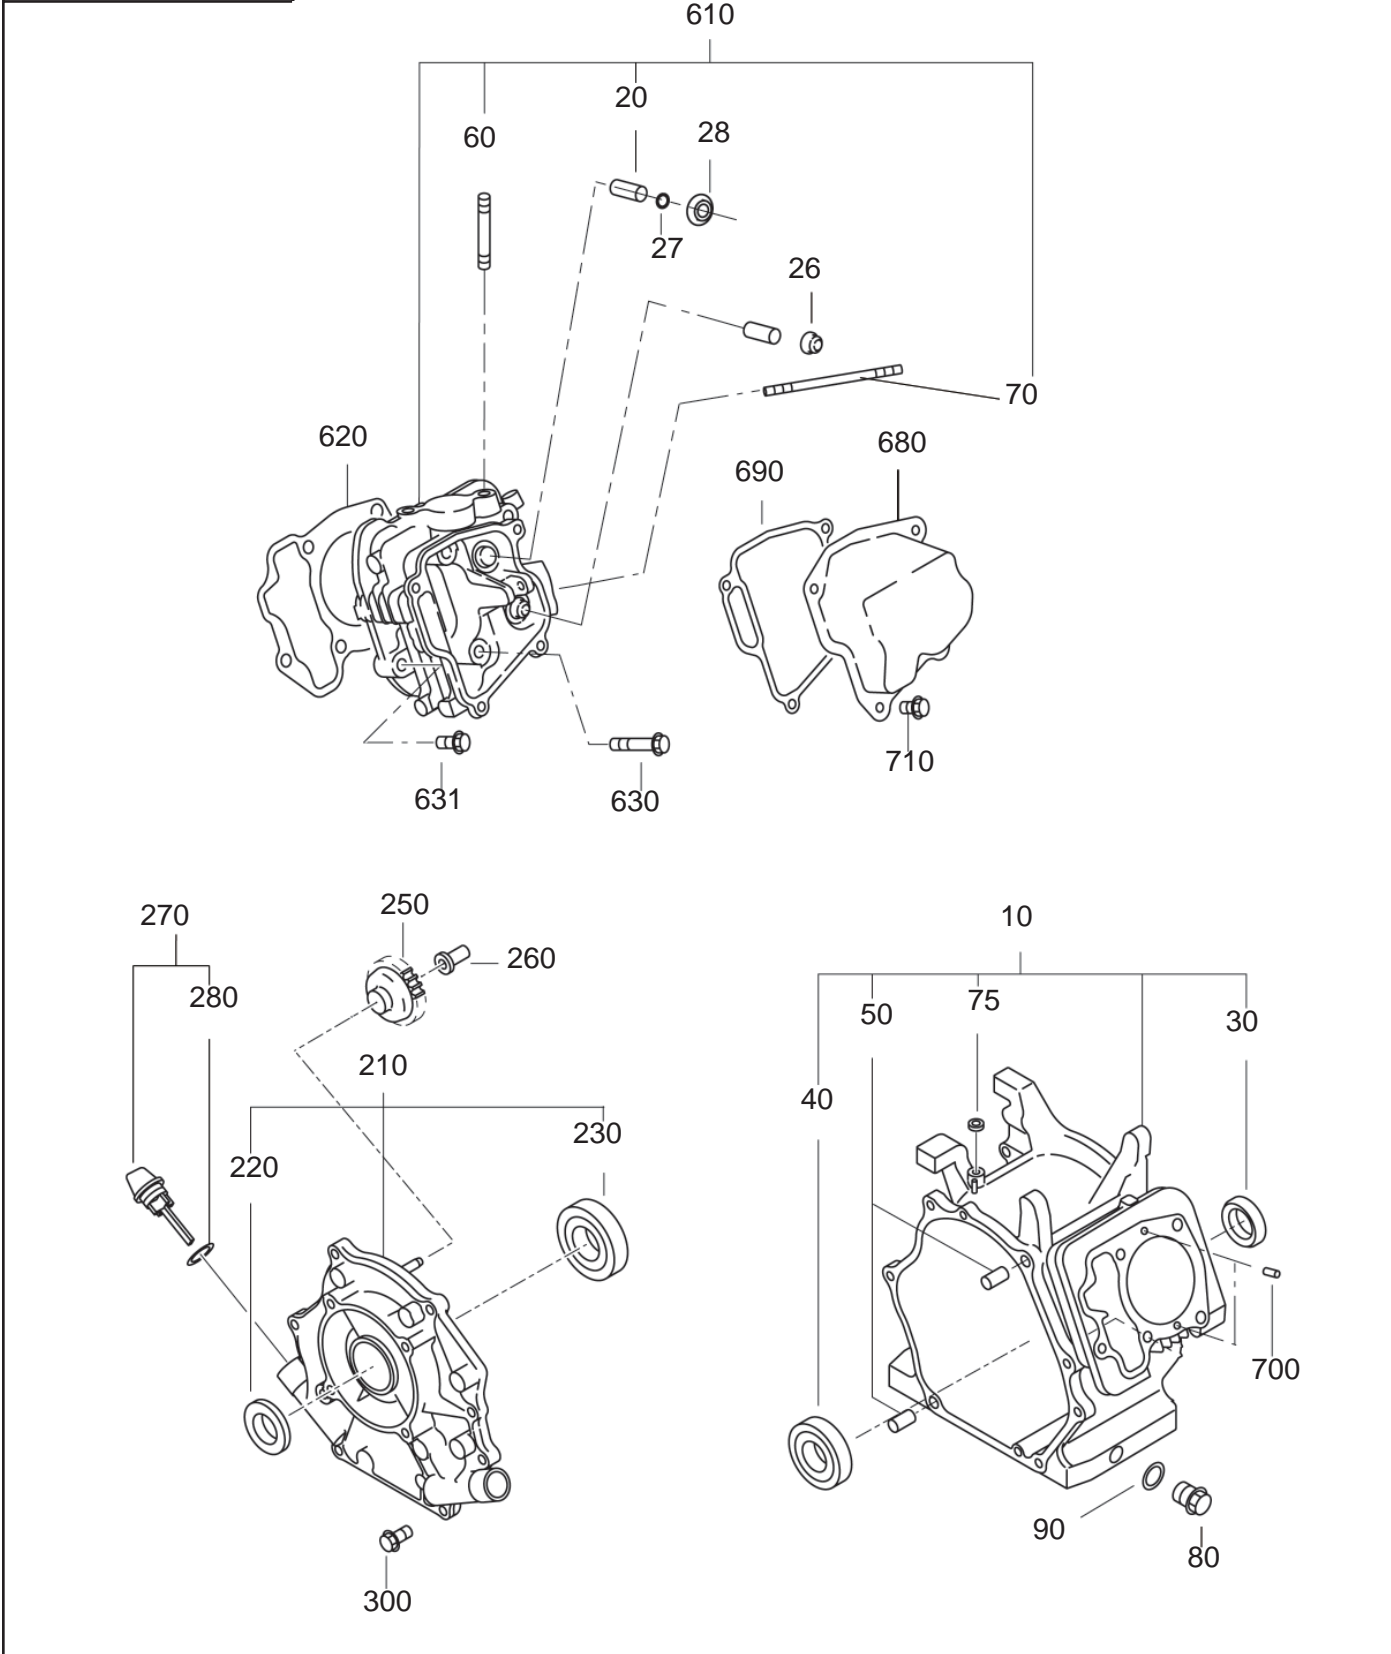


SECTION 2 CRANKSHAFT GROUP

  FIG. 200

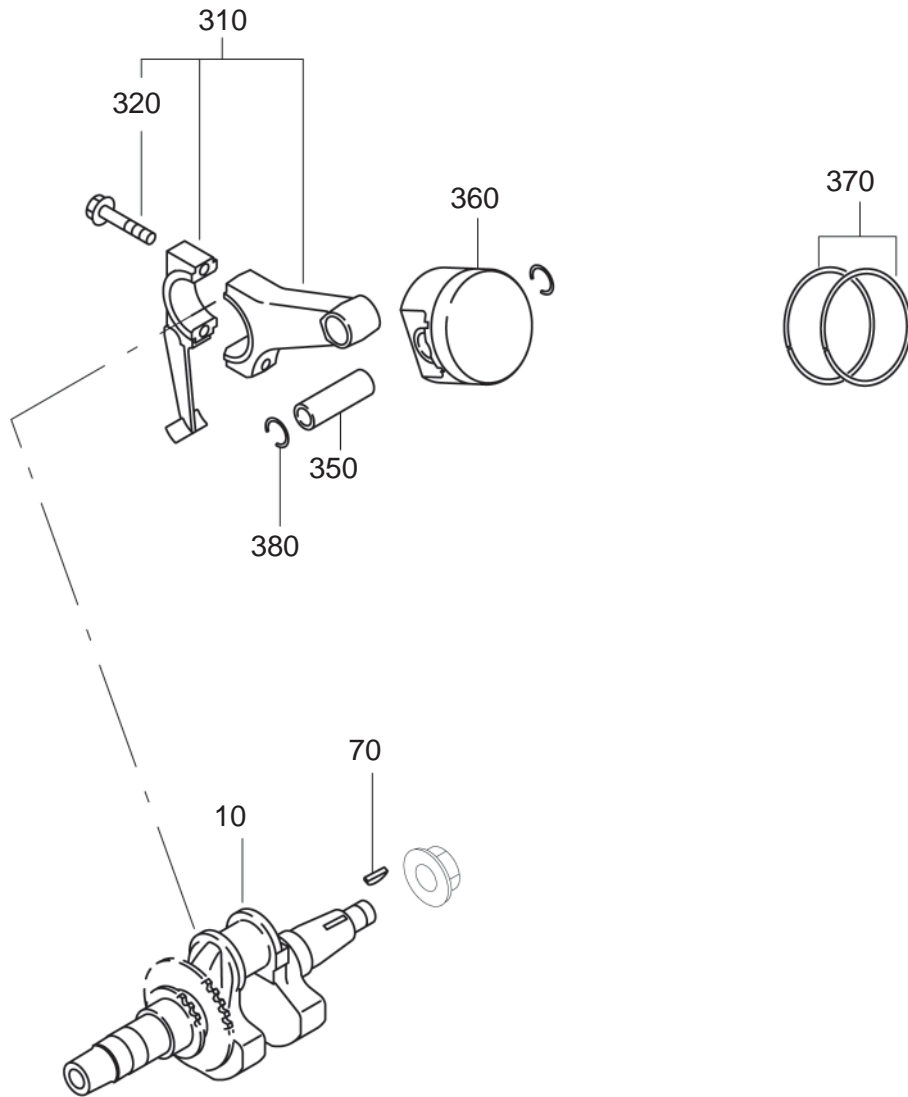


 
SECTION 3 INTAKE and EXHAUST GROUP

 FIG. 300

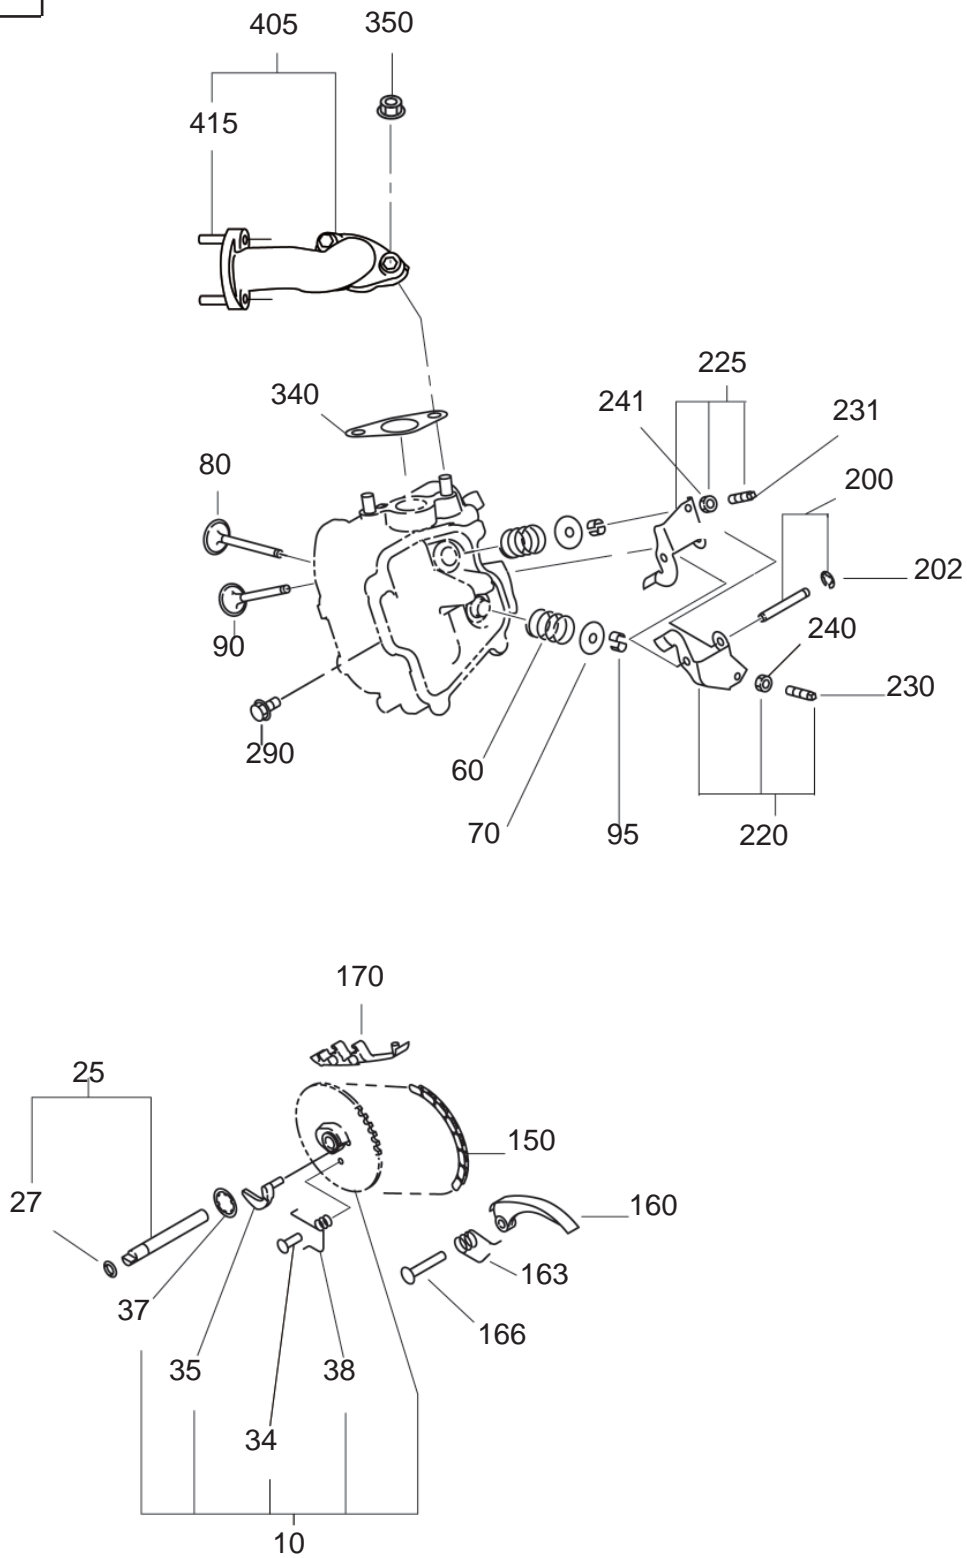


SECTION 3 INTAKE and EXHAUST GROUP

FIG. 330

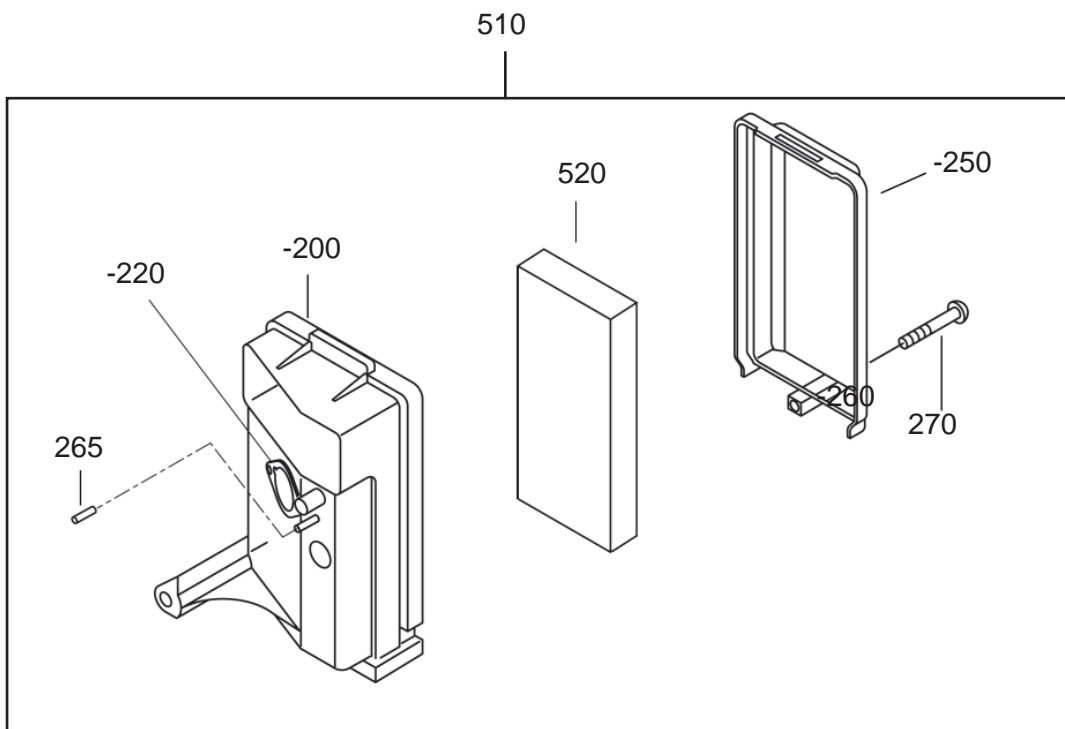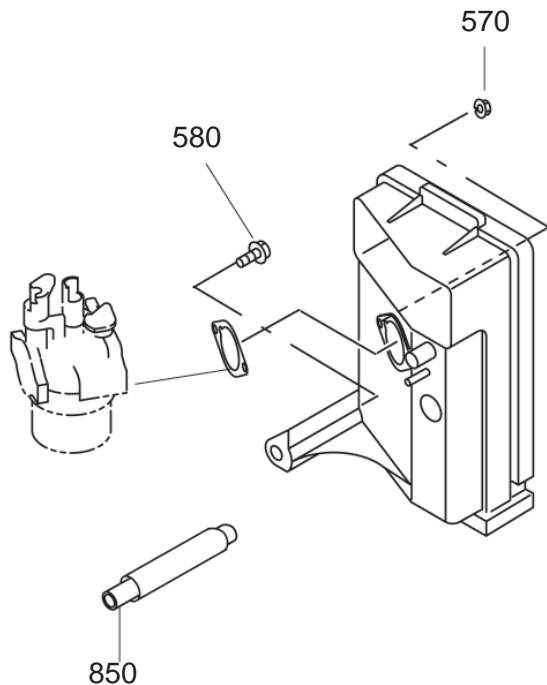


SECTION 4 GOVERNOR GROUP

 FIG. 400

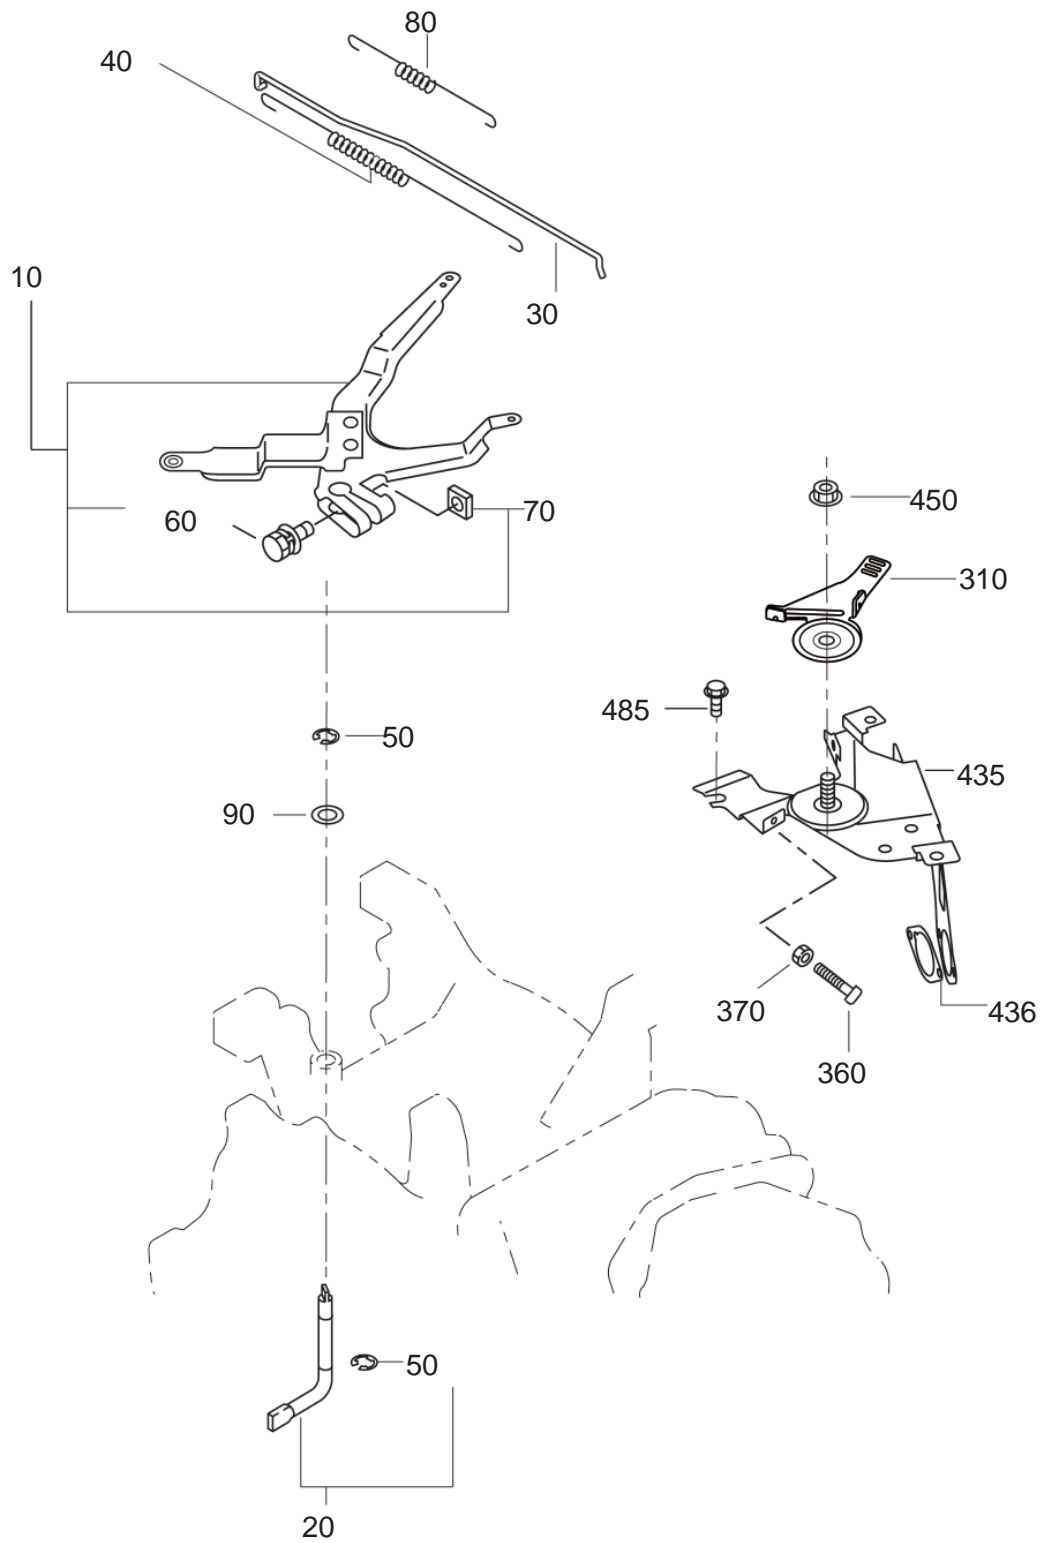


SECTION 5 COOLING and STARTING GROUP

 FIG. 500

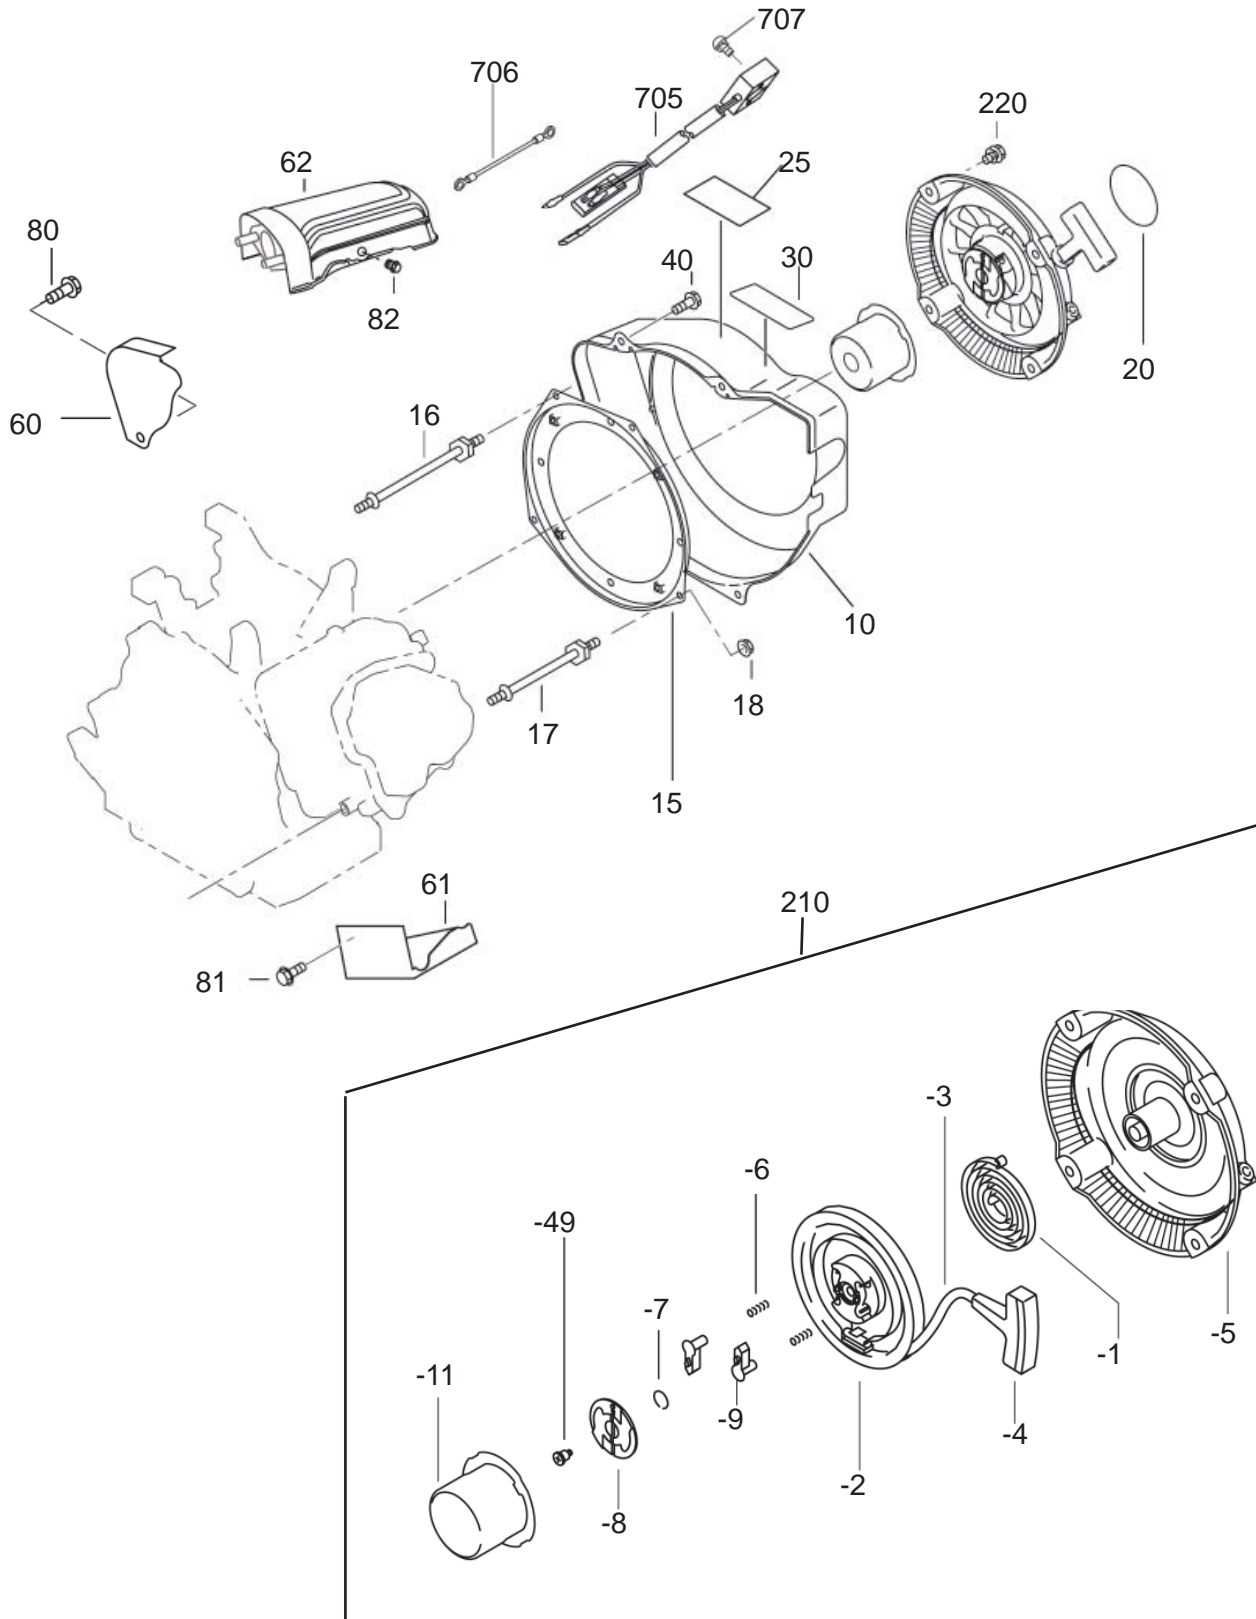


SECTION 6 FUEL, LUBRICATION GROUP

 FIG. 600

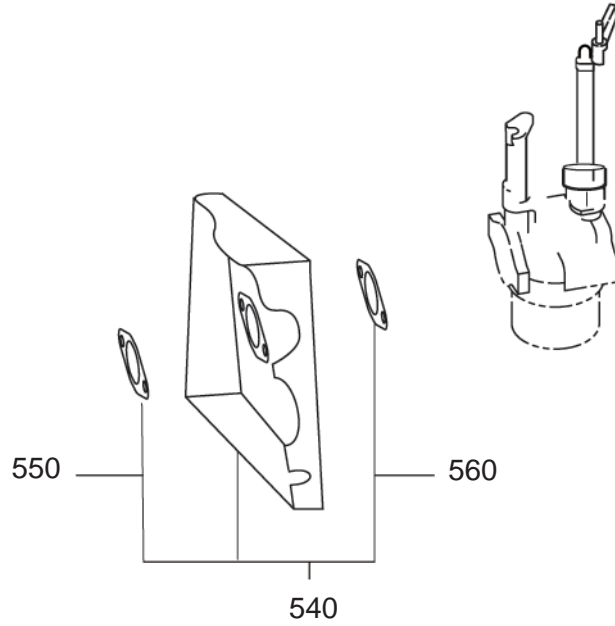


SECTION 6 FUEL, LUBRICATION GROUP

 FIG. 640

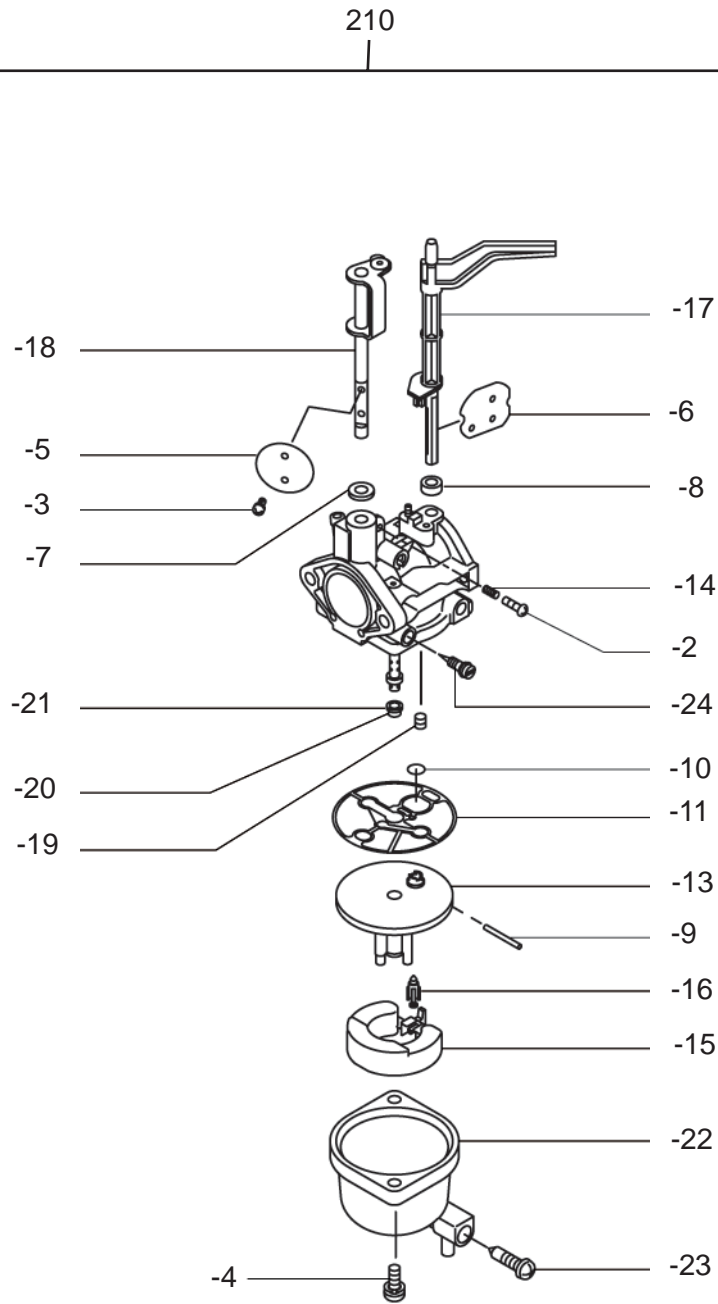


SECTION 7 ELECTRIC DEVICE GROUP

 FIG. 700

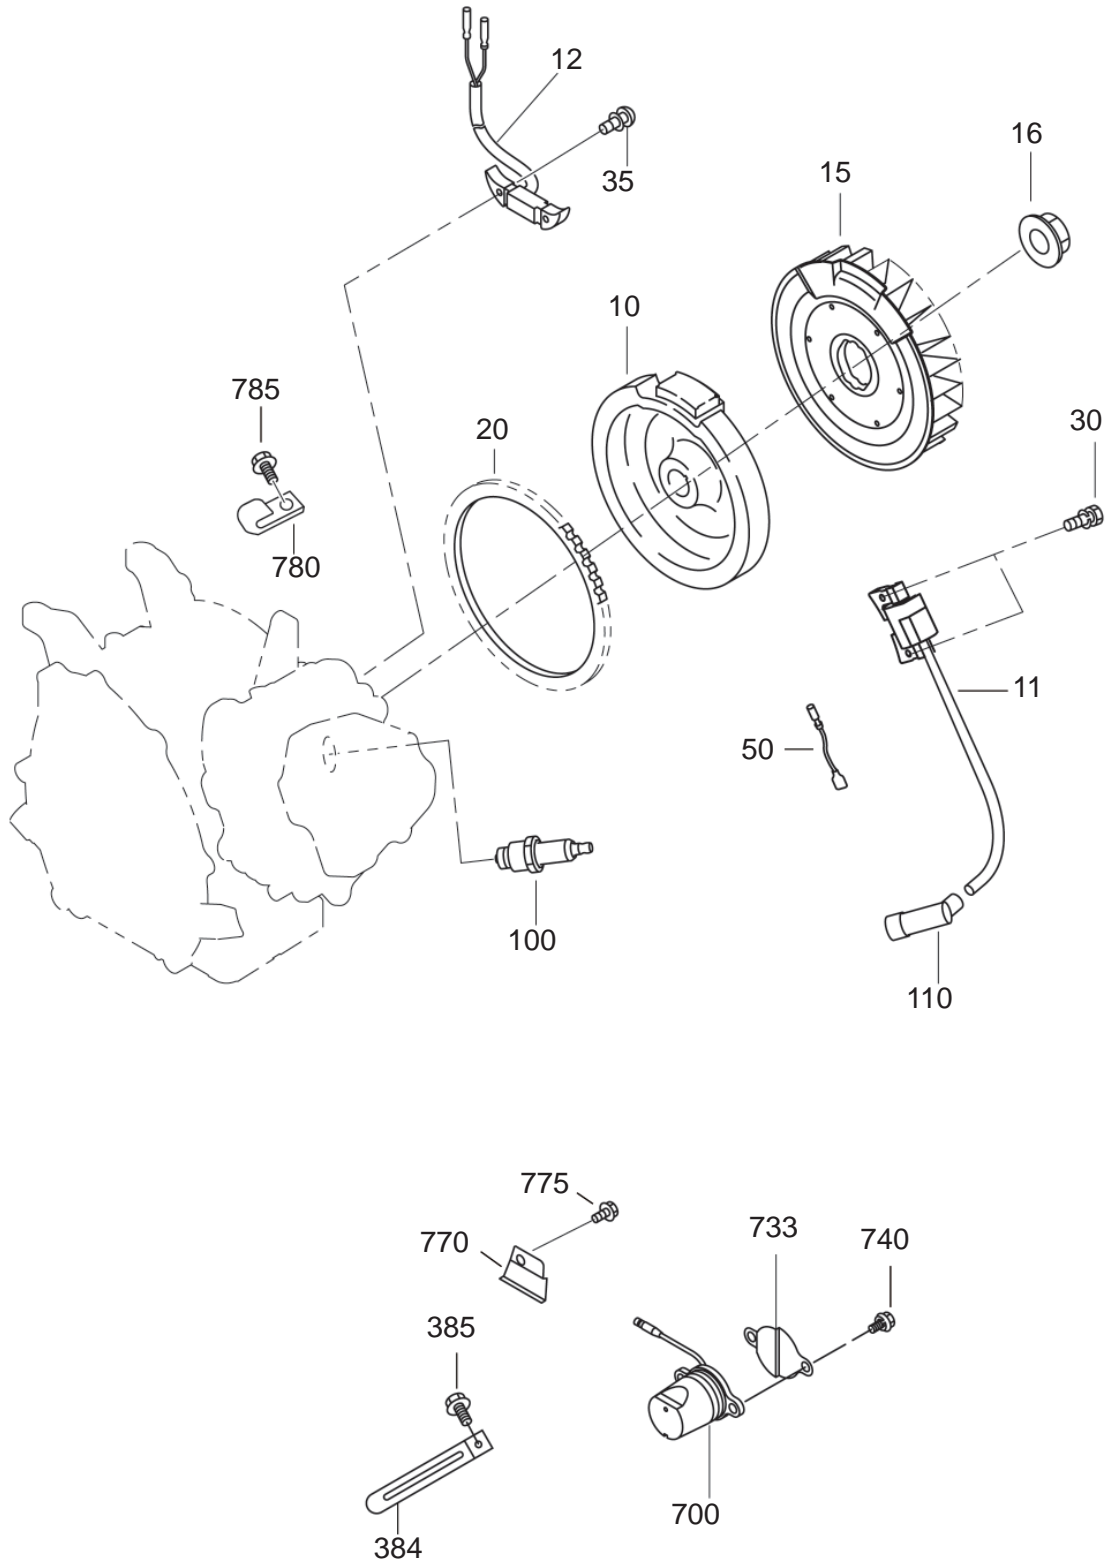


SECTION 7 ELECTRIC DEVICE GROUP

 FIG. 730

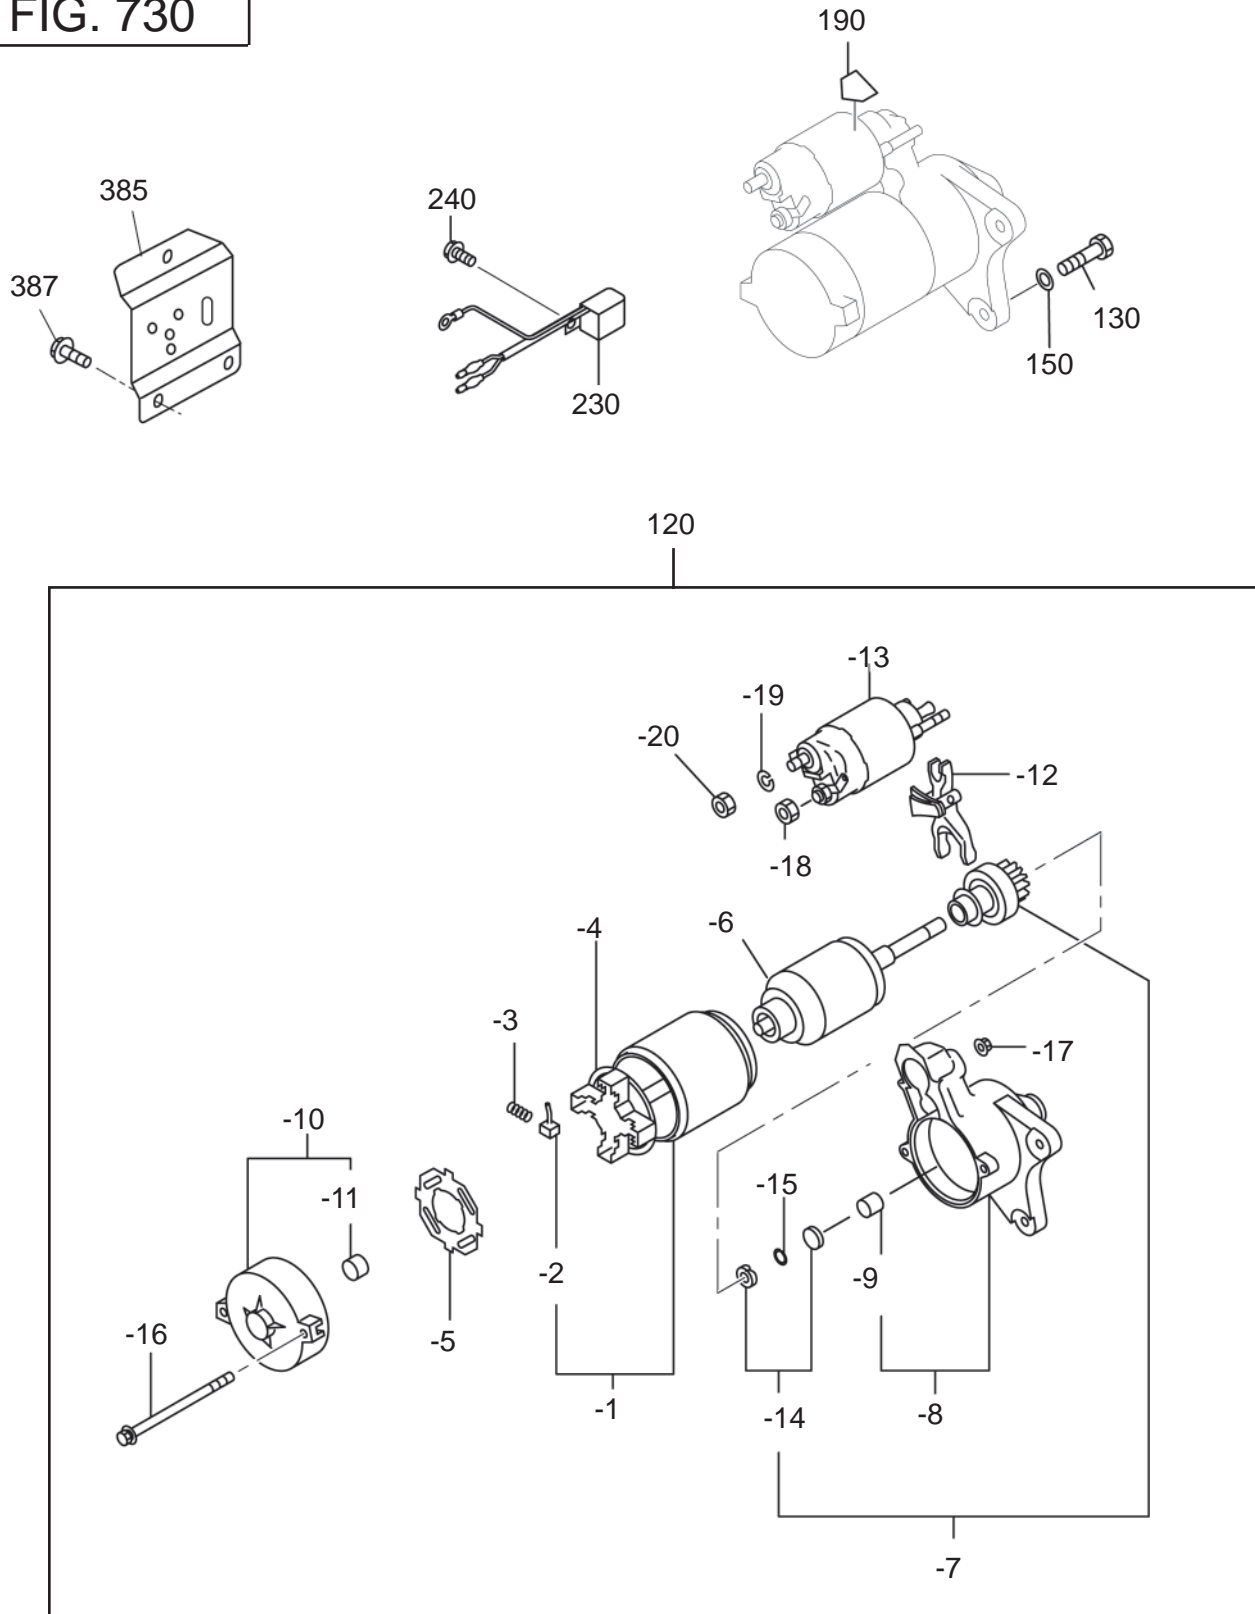


SECTION 7 ELECTRIC DEVICE GROUP

 FIG. 740

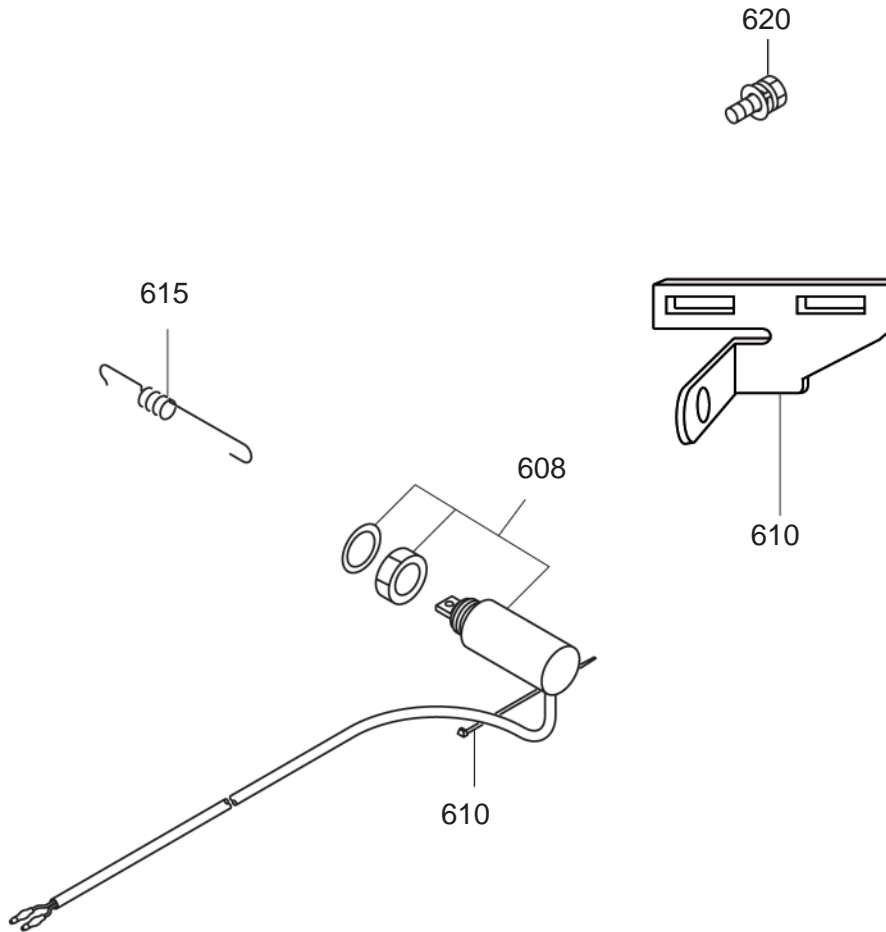


SECTION 21 ENGINE GROUP

 FIG. 2130

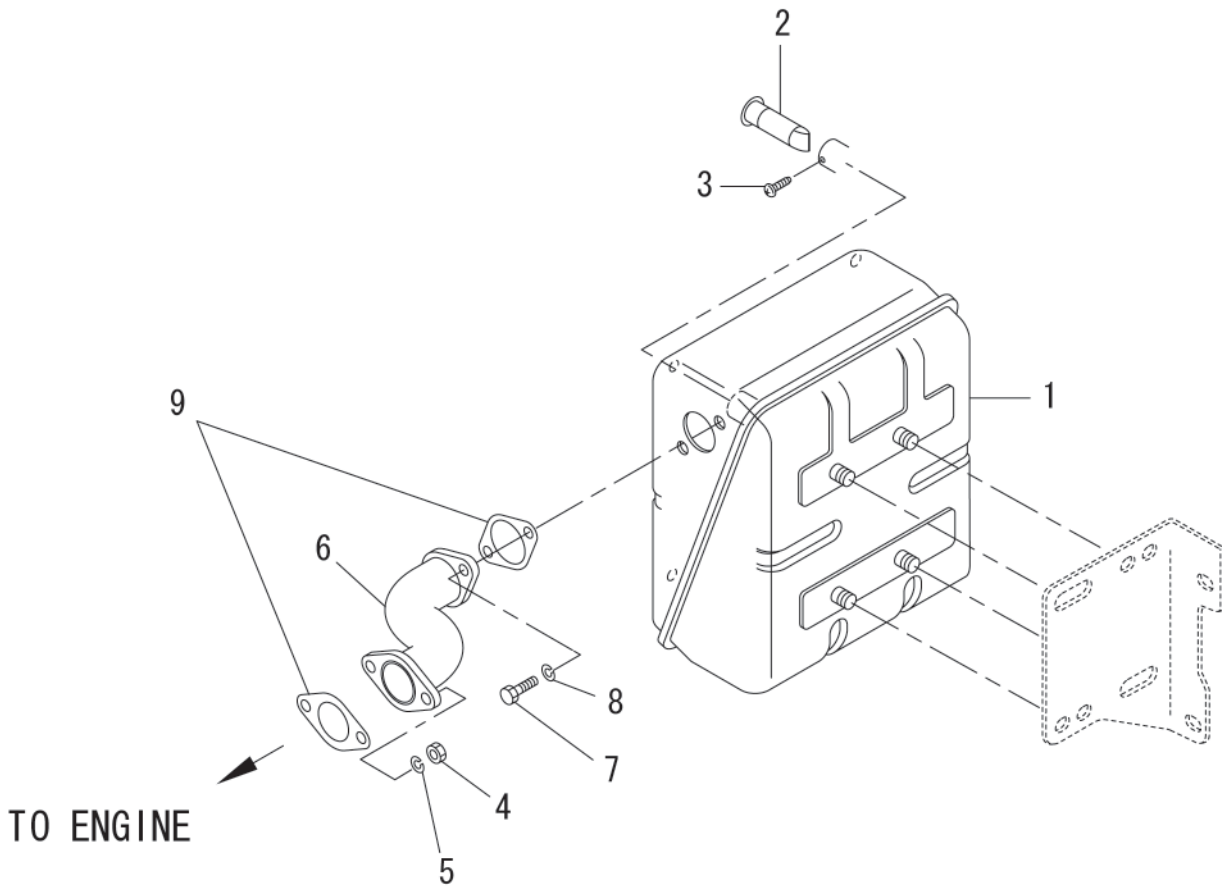


SECTION 22 GENERATOR GROUP

  FIG. 2200

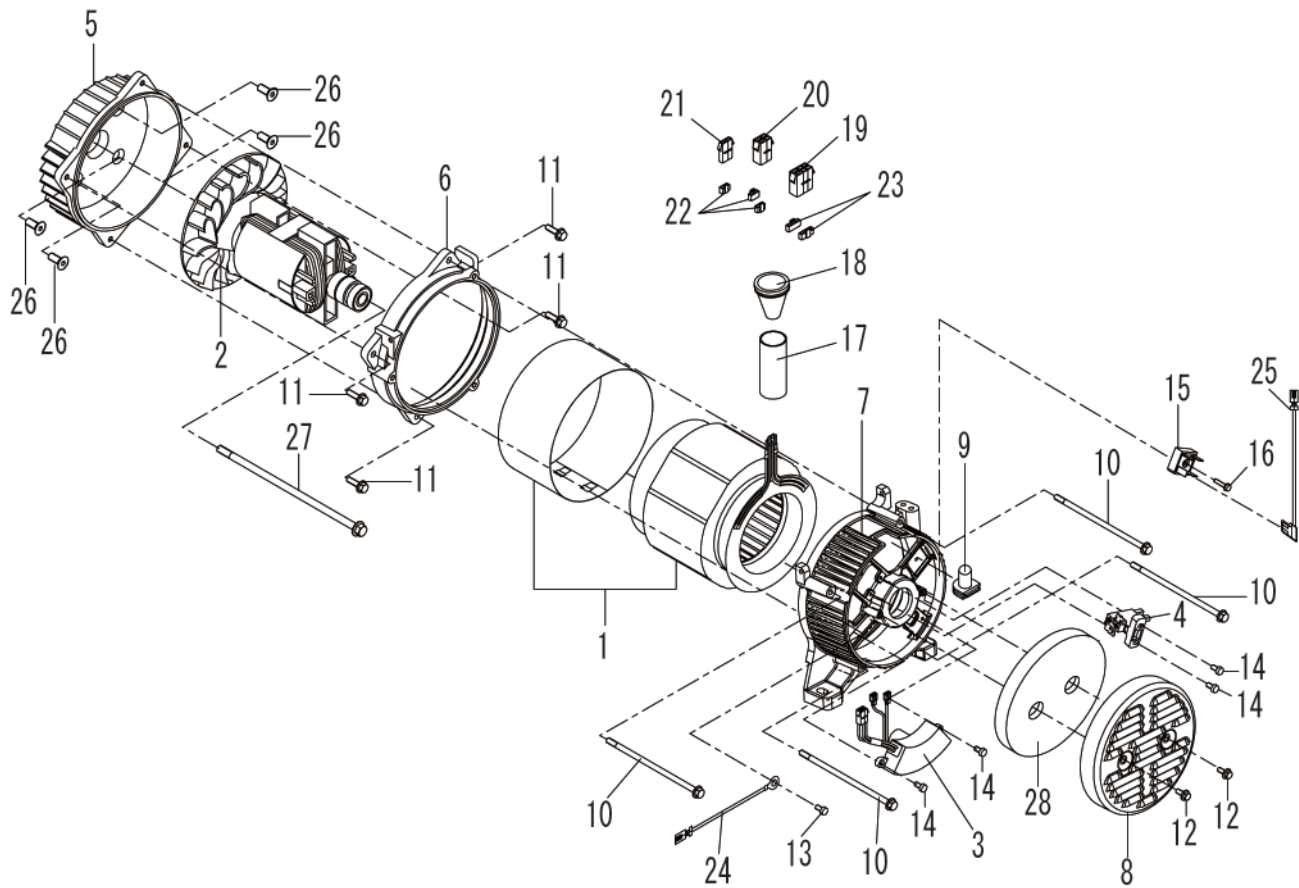


 
SECTION 23 BASE, FRAME GROUP

 FIG. 2300

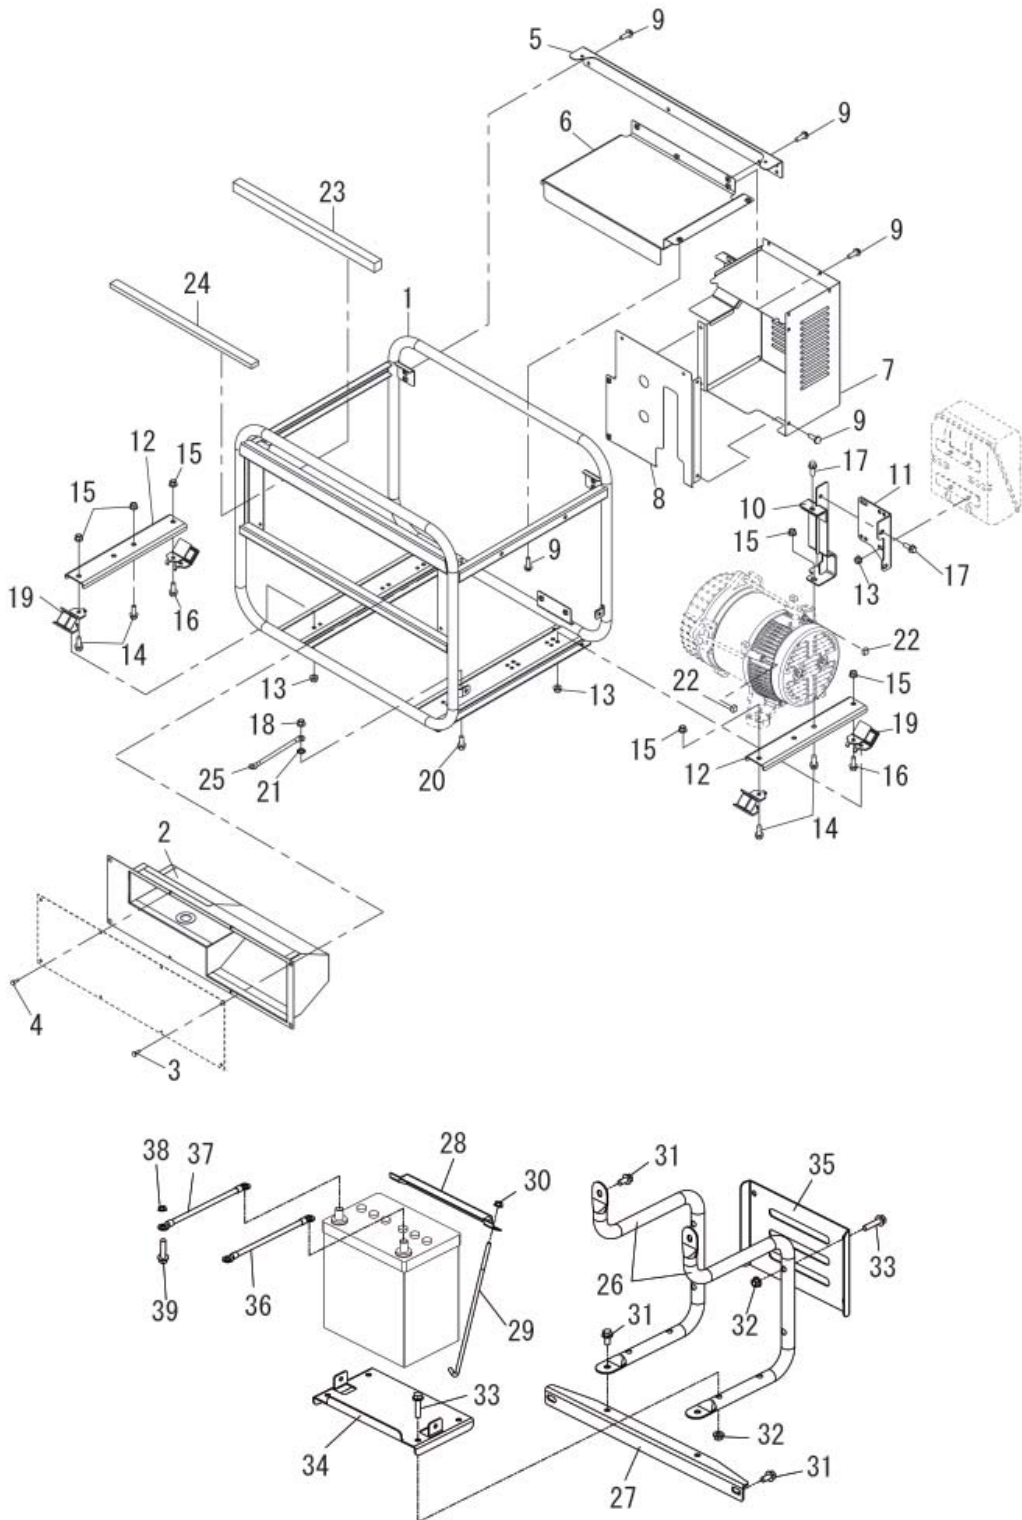

SECTION 24 CONTROL GROUP - RECOIL

FIG.2400

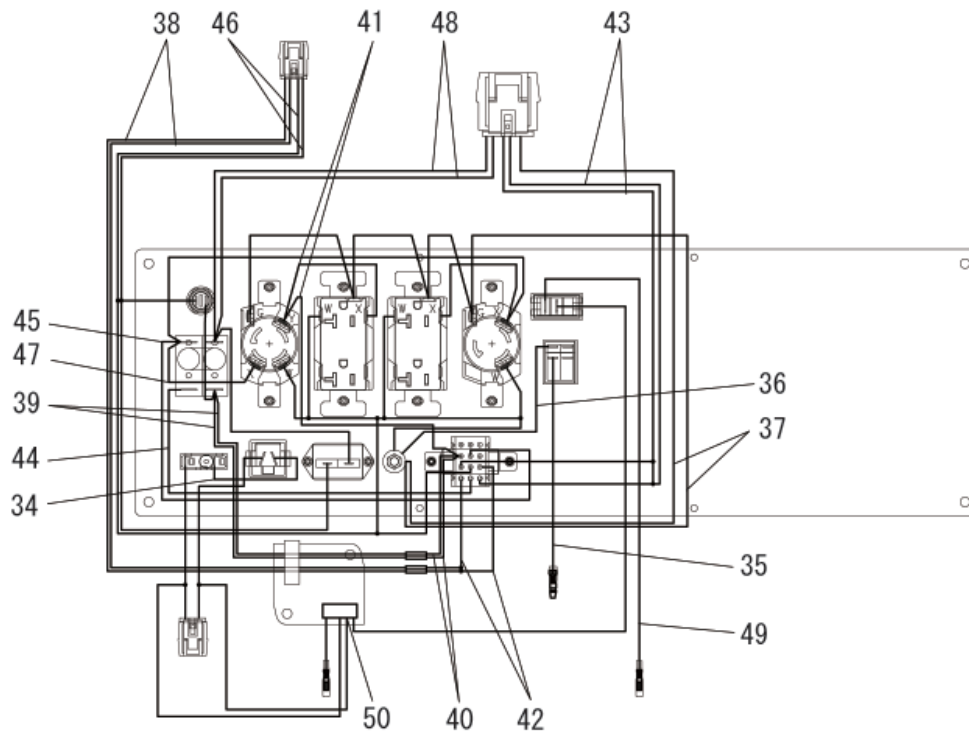 
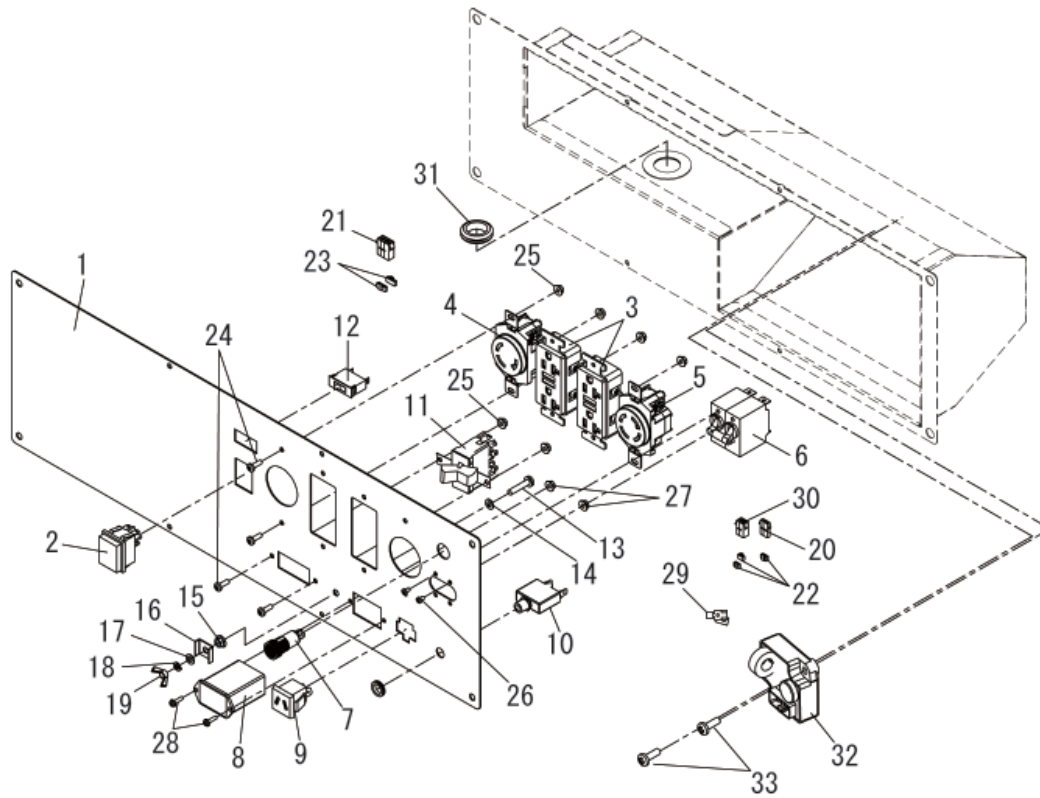 


SECTION 24 CONTROL GROUP - RECOIL

REF.	PART NO.	DESCRIPTION	QTY.	REMARKS	FROM-TO	FIG.
1	36E-41002-08	Control Panel CP	1			2400
2	36A-49000-08	Switch, engine	1			2400
3	36A-47002-08	AC Concent	2	GFCI		2400
4	36B-47000-08	AC Concent	1	L5-30		2400
5	36B-47001-08	AC Concent	1	L14-30		2400
6	36E-48000-08	Circuit Breaker	1	28A		2400
7	36A-49003-08	Pilot Lamp	1			2400
8	36A-49002-08	Hour Meter	1			2400
9	36A-47101-08	DC Concent	1			2400
10	36A-48001-08	Circuit Breaker	1	10A		2400
11	36B-49000-08	Switch, v select	1			2400
12	36B-49001-08	Switch, i/c	1			2400
13	36A-80102-08	Screw and Washer Ay	1			2400
14	36A-82000-08	Lock Washer	1			2400
15	36A-81000-08	Flange Nut	1			2400
16	36A-82100-08	Cap Washer	1			2400
17	36A-82200-08	Washer	1			2400
18	36A-82300-08	Spring Washer	1			2400
19	36A-81100-08	Wing Nut	1			2400
20	36A-70003-08	Connector	1	2 P		2400
21	36A-70001-08	Connector	1	6 P		2400
22	36A-70101-08	Retainer	3	2 P		2400
23	36A-70100-08	Retainer	2	3 P		2400
24	36A-80202-08	Screw	10			2400
25	36A-81001-08	Flange Nut	10			2400
26	36A-80103-08	Screw and Washer Ay	4			2400
27	36A-81005-08	Flange Nut	2			2400
28	36A-80203-08	Screw	2			2400
29	36A-70300-08	Terminal	1			2400
30	36A-70007-08	Connector	1	4 P		2400
31	36C-49900-08	Grommet	1			2400
32	KU3-11015-01	Idle C/U Cp	1	150V		2400
33	36A-80204-08	Screw	2			2400
34	36A-71003-08	Wire	1	white		2400
35	36A-71006-08	Wire	1	black		2400
36	36A-71036-08	Wire	1	green		2400
37	36A-71037-08	Wire	1	green		2400
38	36A-71029-08	Wire	2	orange		2400
39	36A-71038-08	Wire	1	red		2400
40	36A-71039-08	Wire	1	red		2400
41	36A-71040-08	Wire	1	red		2400
42	36A-71041-08	Wire	1	orange		2400
43	36A-71042-08	Wire	1	blue		2400
44	36A-71043-08	Wire	1	blue		2400
45	36A-71044-08	Wire	1	blue		2400
46	36A-71045-08	Wire	1	gray		2400
47	36A-71046-08	Wire	1	blue		2400


 
SECTION 24 CONTROL GROUP - RECOIL

 FIG.2400

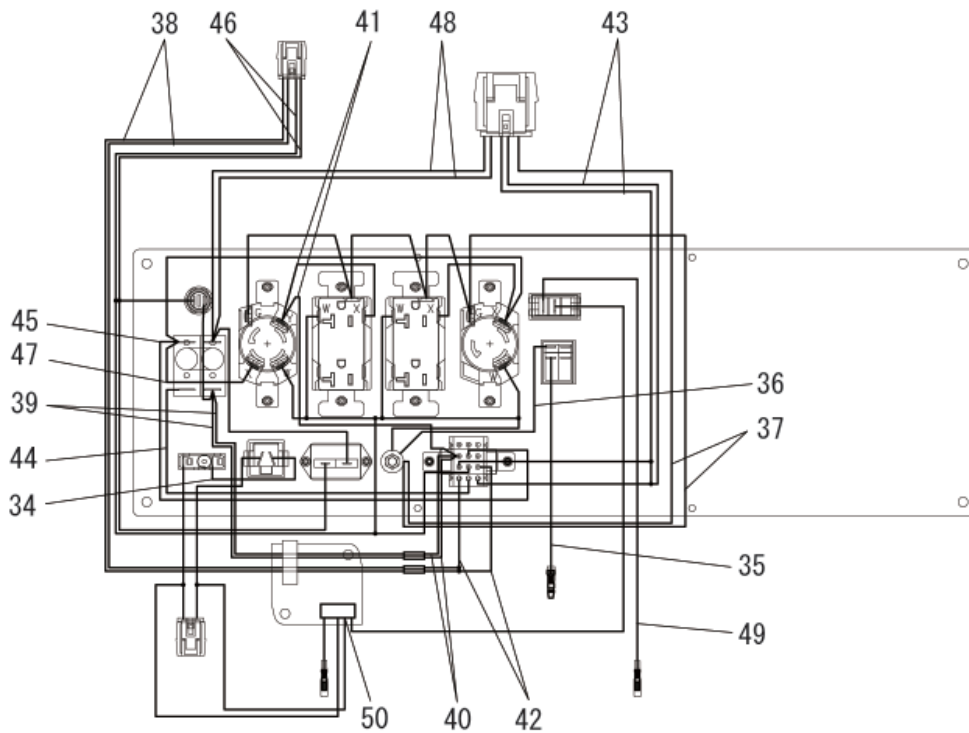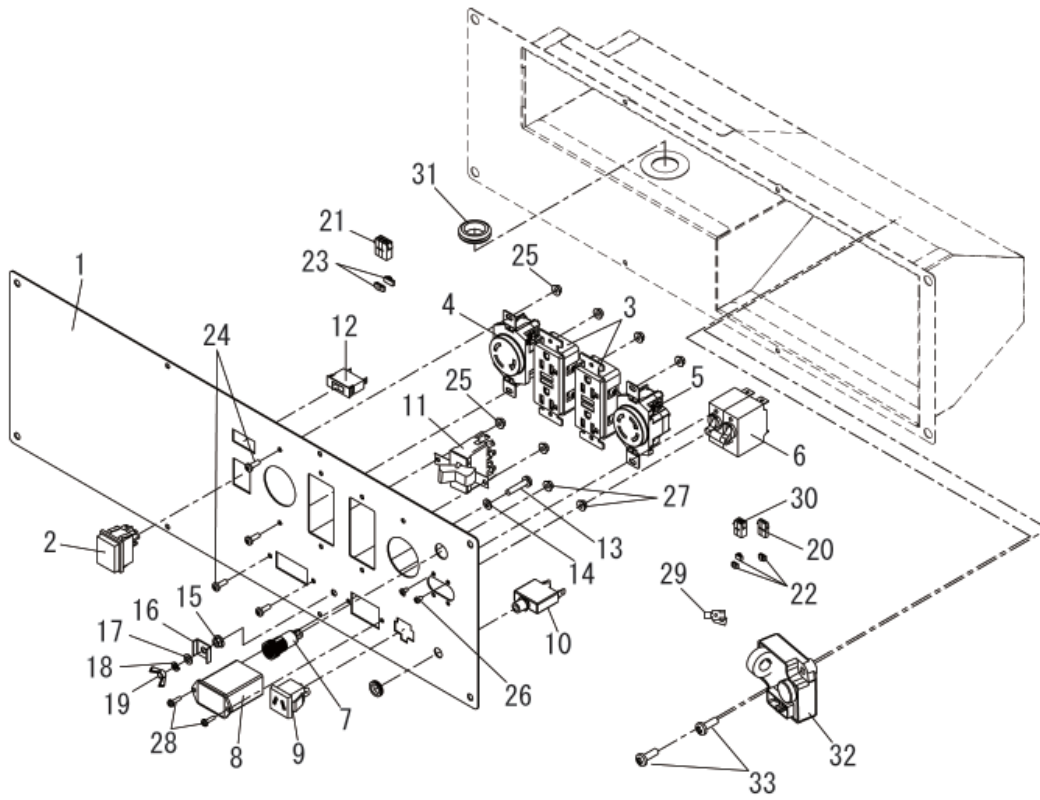

SECTION 24 CONTROL GROUP - ELECTRIC START

FIG.2400

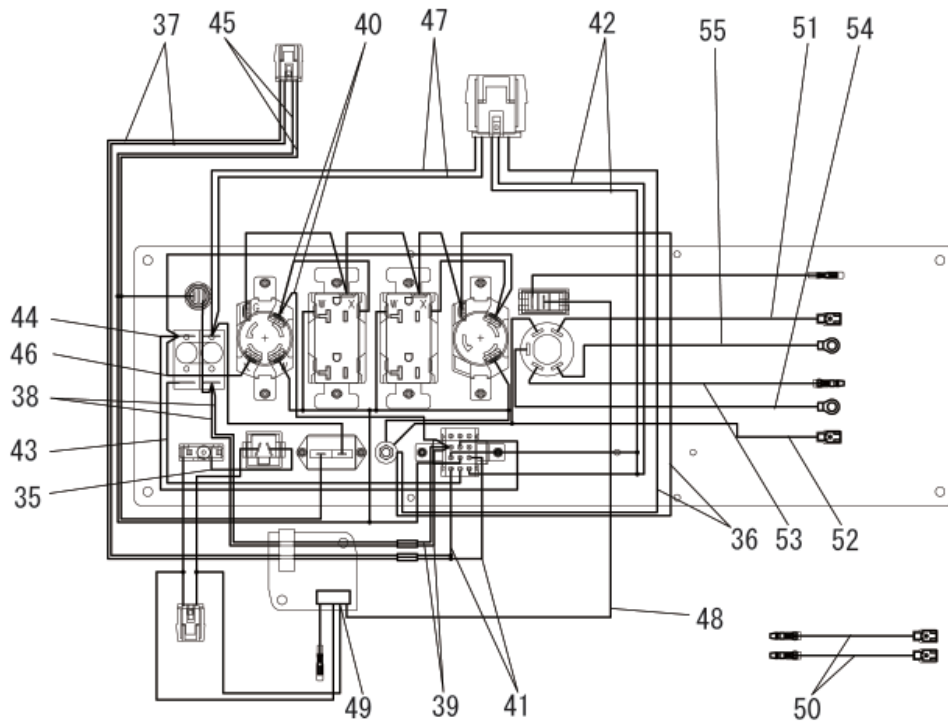
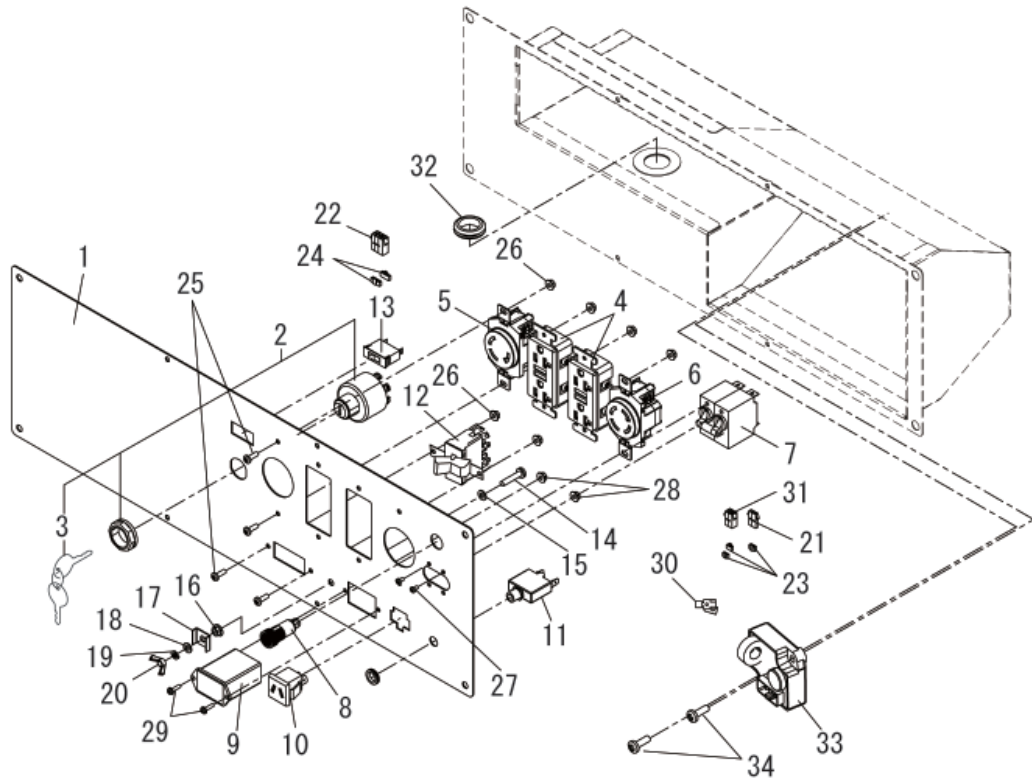


SECTION 24 CONTROL GROUP - ELECTRIC START

REF.	PART NO.	DESCRIPTION	QTY.	REMARKS	FROM-TO	FIG.
1	36E-41003-08	Control Panel Cp	1			2400
2	066-00003-30	Switch, engine	1			2400
3	066-00099-80	Key, switch	2			2400
4	36A-47002-08	AC Concent	2	GFCI		2400
5	36B-47000-08	AC Concent	1	L5-30		2400
6	36B-47001-08	AC Concent	1	L14-30		2400
7	36E-48000-08	Circuit Breaker	1	28A		2400
8	36A-49003-08	Pilot Lamp	1			2400
9	36A-49002-08	Hour Meter	1			2400
10	36A-47101-08	DC Concent	1			2400
11	36A-48001-08	Circuit Breaker	1	10A		2400
12	36B-49000-08	Switch, v select	1			2400
13	36B-49001-08	Switch, i/c	1			2400
14	36A-80102-08	Screw and Washer Ay	1			2400
15	36A-82000-08	Lock Washer	1			2400
16	36A-81000-08	Flange Nut	1			2400
17	36A-82100-08	Cap Washer	1			2400
18	36A-82200-08	Washer	1			2400
19	36A-82300-08	Spring Washer	1			2400
20	36A-81100-08	Wing Nut	1			2400
21	36A-70003-08	Connector	1	2 P		2400
22	36A-70001-08	Connector	1	6 P		2400
23	36A-70101-08	Retainer	3	2 P		2400
24	36A-70100-08	Retainer	2	3 P		2400
25	36A-80202-08	Screw	10			2400
26	36A-81001-08	Flange Nut	10			2400
27	36A-80103-08	Screw and Washer Ay	4			2400
28	36A-81005-08	Flange Nut	2			2400
29	36A-80203-08	Screw	2			2400
30	36A-70300-08	Terminal	1			2400
31	36A-70007-08	Connector	1	4 P		2400
32	36C-49900-08	Grommet	1			2400
33	KU3-11015-01	Idle C/U CP	1	150V		2400
34	36A-80204-08	Screw	2			2400
35	36A-71003-08	Wire	1	white		2400
36	36A-71037-08	Wire	1	green		2400
37	36A-71029-08	Wire	2	orange		2400
38	36A-71038-08	Wire	1	red		2400
39	36A-71039-08	Wire	1	red		2400
40	36A-71040-08	Wire	1	red		2400
41	36A-71041-08	Wire	1	orange		2400
42	36A-71042-08	Wire	1	blue		2400
43	36A-71043-08	Wire	1	blue		2400
44	36A-71044-08	Wire	1	blue		2400
45	36A-71045-08	Wire	1	gray		2400
46	36A-71046-08	Wire	1	blue		2400


SECTION 24 CONTROL GROUP - ELECTRIC START

   FIG.2400

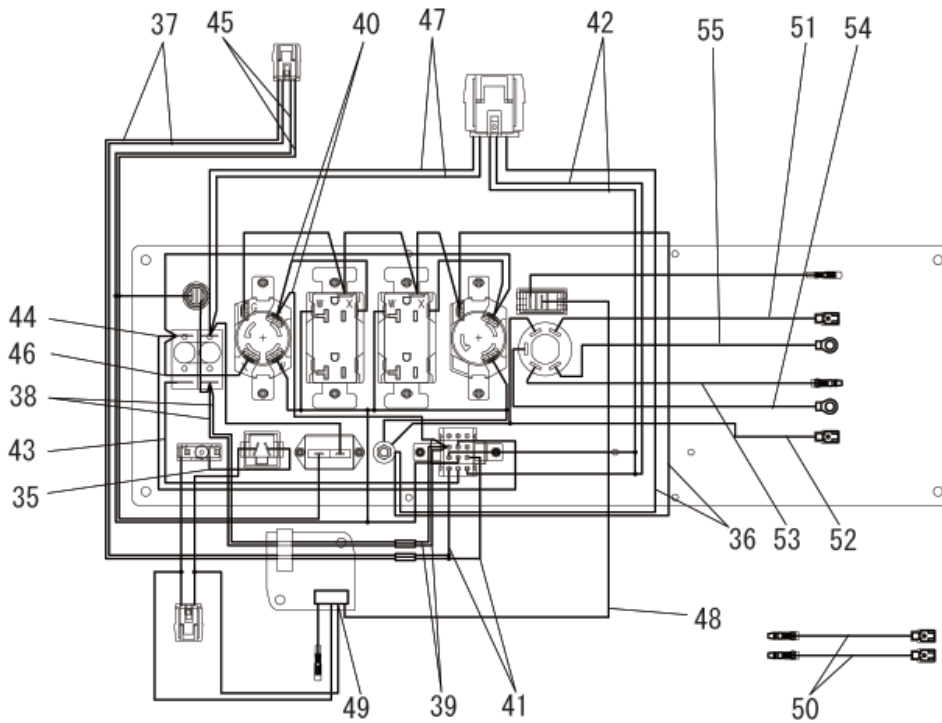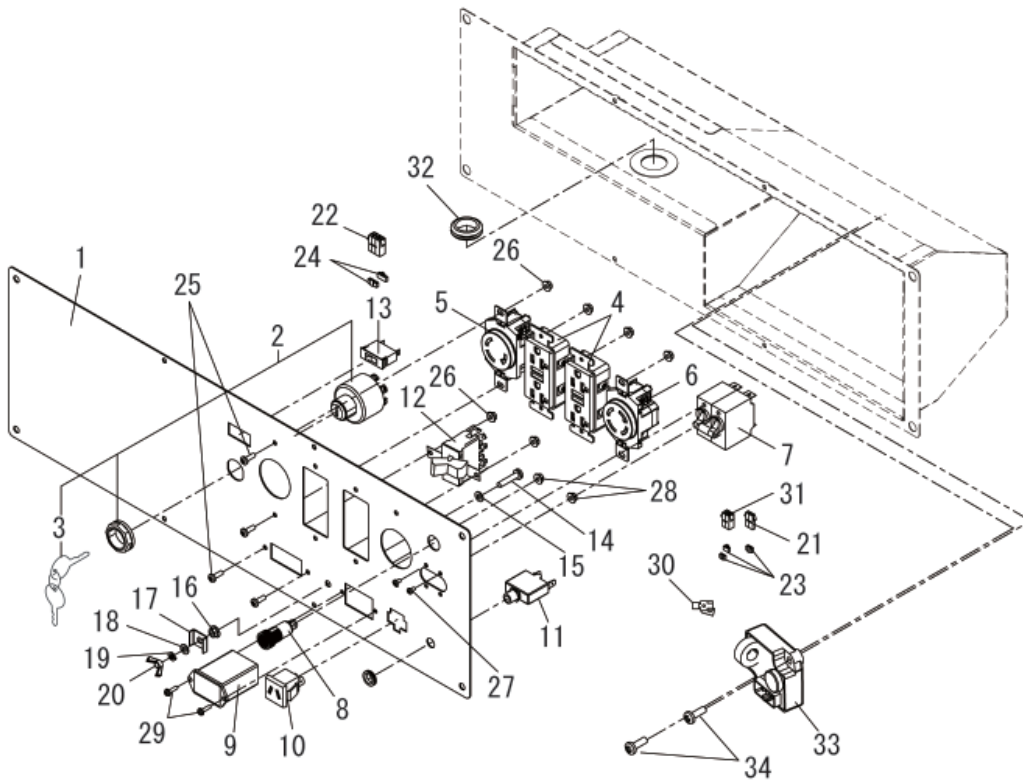



 
 
 
SECTION 26 FUEL TANK GROUP

 FIG.2600

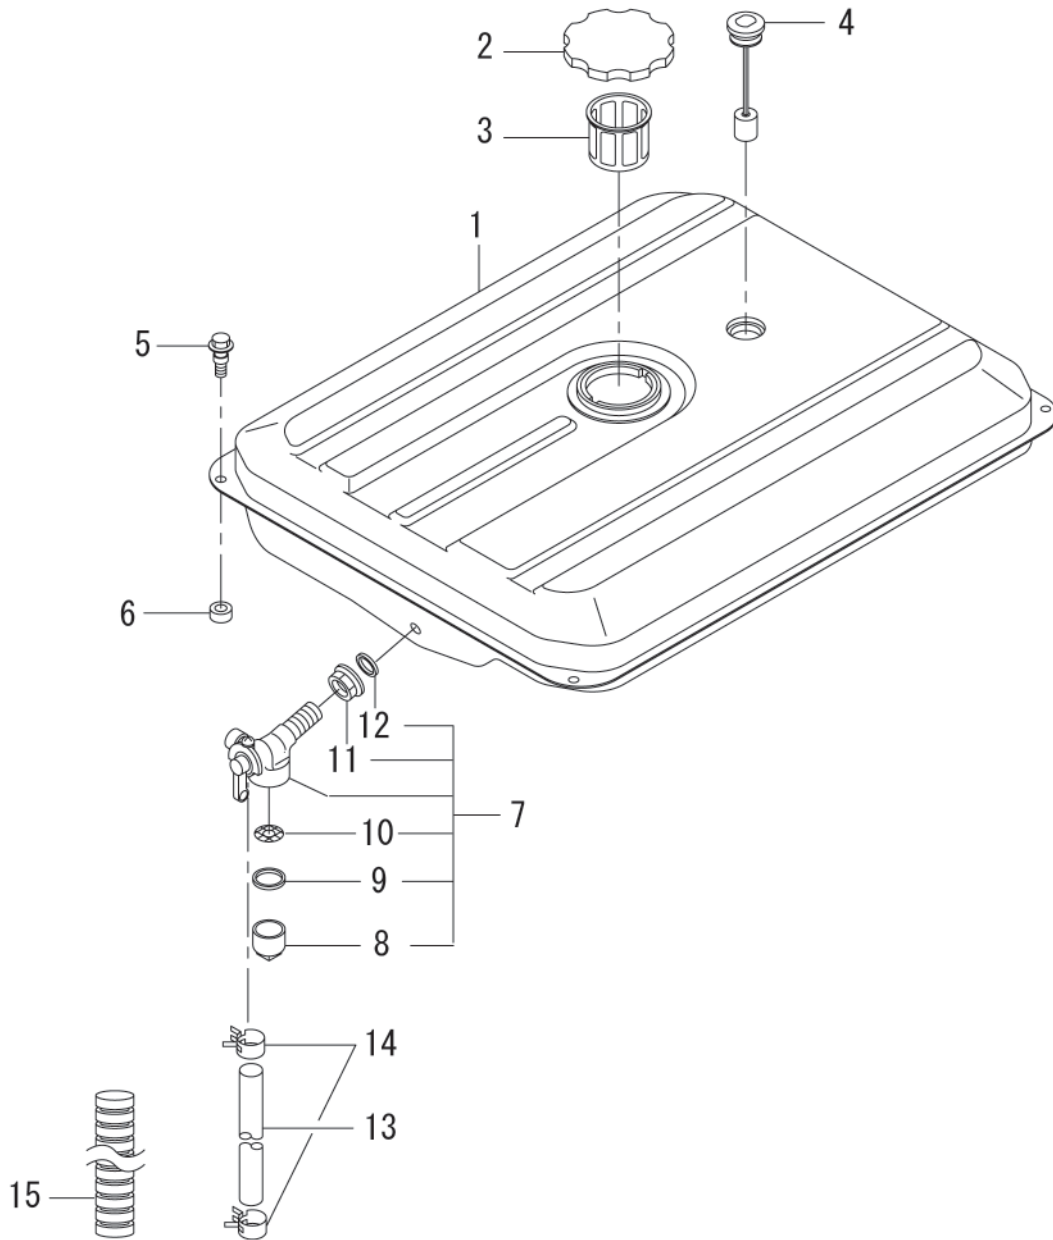

SECTION 29 ACCESSORY GROUP

 FIG.2900

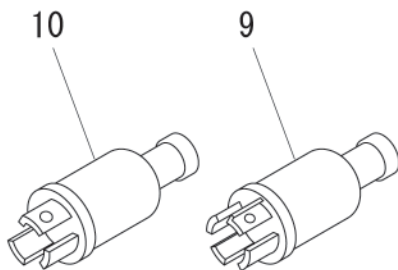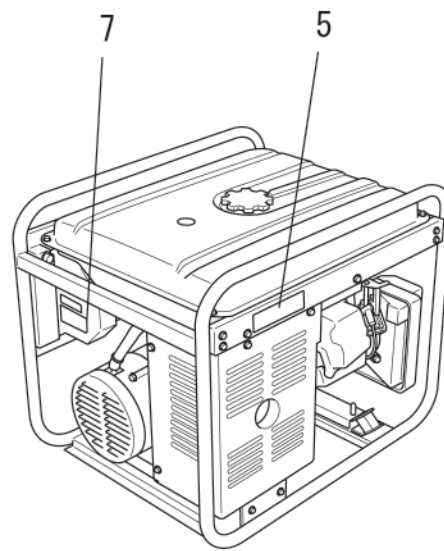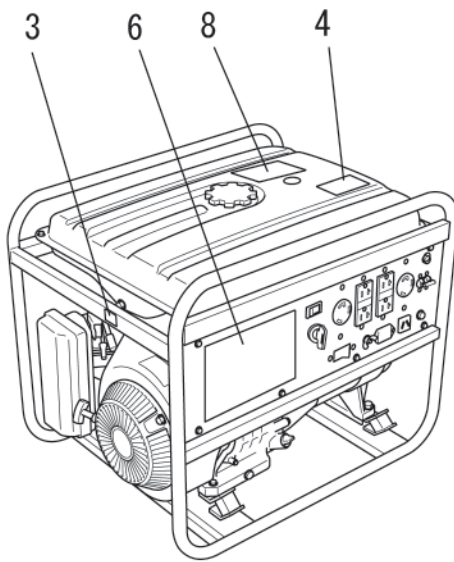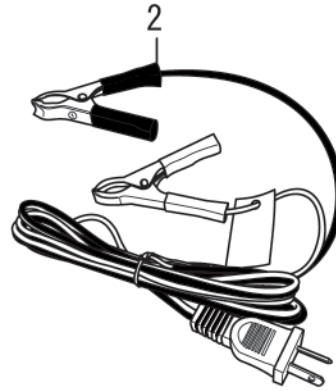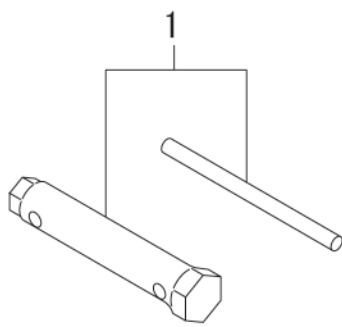

PRINTED IN THE USA