



# OWNER'S INSTRUCTIONS

 
SR-17NFB

SR-19NFB

SR-22NFB

## REFRIGERATOR

Before operating the unit, please read the manual thoroughly, and retain for future reference.

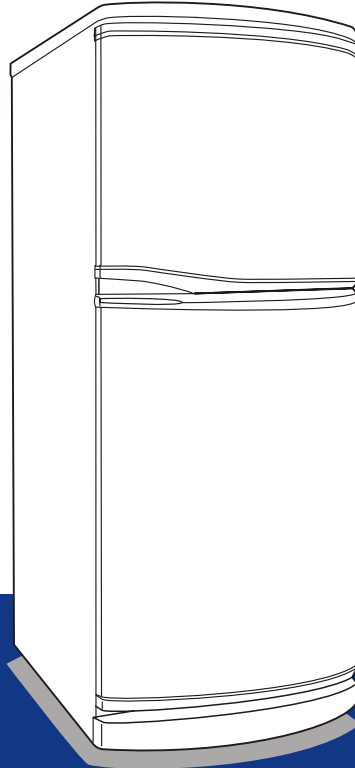

Recyclable

# FEATURES

- Energy saving design, low consumption of power.
- Suitable for long period storing of frozen foodstuffs and freezing fresh foodstuffs
- Low noise
- With a lock (at customer' s request)

## Safety precautions

---

### Read Instructions

Please read all safety and operating instructions before operating this appliance.

### Retain instructions

Please keep this Owner's Manual for future reference.

### Heed warnings

All warning, Cautions and Notes on this refrigerator are important; please pay attention to them.

### Follow Instructions

For best results, follow all instructions given in this manual.

### Model and Serial Numbers

Include both the model number and the serial number when corresponding with Samsung or your Dealer concerning this product.

## Contents

---

Features	1
Installation	3
Cautions while using	5
Parts	7
Basic preparation	8
-Before using	8
-Storing food	9
How to use	10
-Temperature control	10
-To make ice cubes	11
-Defrosting	12
Level the appliance	13
How to clean the unit	14
Trouble shooting	15

This manual, which includes three model SR-17NFB, SR-18NFB, SR-22NFB, is made on the basis of SR-19NFB.

 
Date of Purchase: \_\_\_\_\_

Model No.: \_\_\_\_\_


Serio No.: \_\_\_\_\_

# INSTALLATION


- 1 The refrigerator should not be placed directly in the sunshine or in the vicinity of heat sources such as stove or steam heaters. Do not put the refrigerator in the places where it is subjected to humidity and water drops.

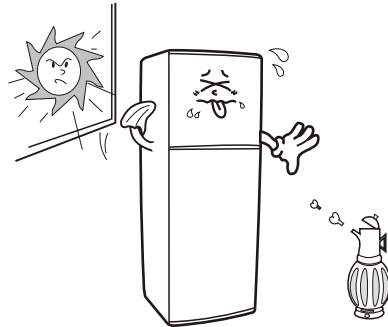

 
- 2 Do not place any object under or behind the refrigerator for proper air circulation. If there is a hanging wall-cabinet, there should be a distance of at least 300mm from the top of refrigerator. It is better to have no hanging object over the refrigerator.

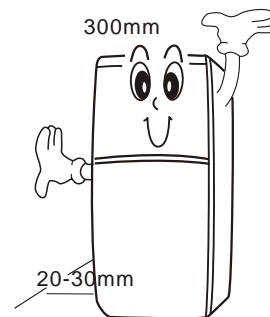

 
- 3 The refrigerator should be set on solid floor. Please turn the two level feet at the front side of the refrigerator to keep it at a level position.

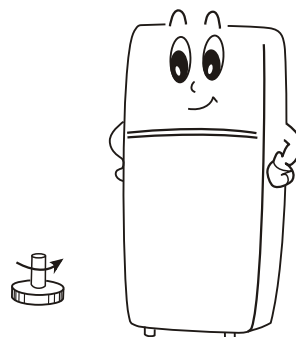

 
- 4 Because of the special design of the refrigerator, it can still operate normally when the ambient temperature is below 10°C or so. You only need to connect the season button.

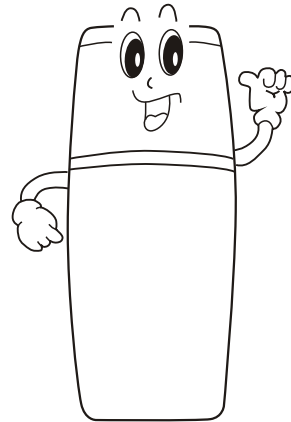

 - 5 There will be some odour of plastics when the refrigerator is initially opened. This is normal. Please don't worry about it. You can clean the inner parts of the inside cabinets with warm water and neutral soap or detergent in order to eliminate or lessen the odour. But do not use any solvent or powered abrasive, because they will damage the appearance of the refrigerator.

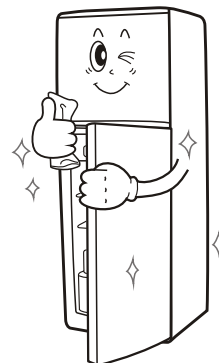

 - 6 For personal safety, properly ground this appliance. Please do not ground this refrigerator with a telephone line, gas pipe, etc.

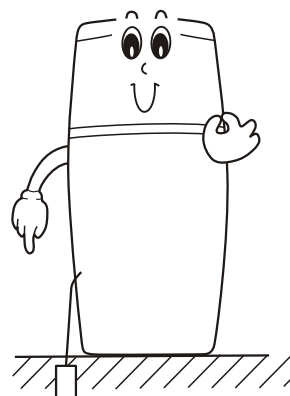

# CAUTIONS WHILE USING

- 1 Do not allow water to splash onto the back of the refrigerator. Otherwise water impairs the insulation of electric parts and may cause an electrical shock or a shock hazard.



 
- 2 Do not flammable sprays such as lacquer and paint near the refrigerator. If there occurs the leakage of gas pipes or liquid petroleum gas, be careful never to pull out the power cord from the socket or switch off the thermostat because there is a possible danger of exploding ignited by the electric spark caused.




- 3 Do not touch the interior wall of the freezing compartment or the refrigerator, because the temperature is very low.




4 Do not store volatile chemicals such as ether and benzene in the refrigerator. The fumes, besides damaging food, can build up and cause an explosion.

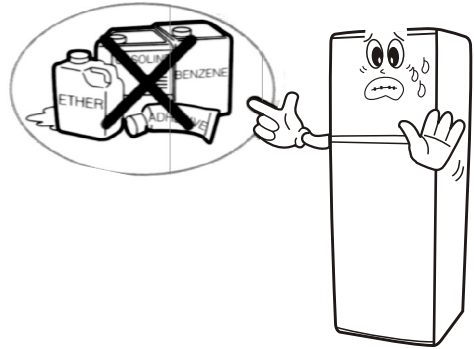

 
5 To avoid damage to the refrigerator or injury to the child, do not allow children to hang on the refrigerator door.

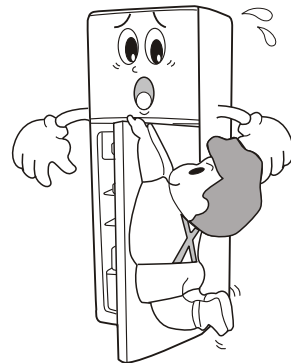

 6 Do not use the refrigerator if it is not operating correctly or has been damaged. Disconnect it from the power supply and call your local service center. If the power cord is damaged, avoid a hazard by replacing it through the manufacturer or its service agent or a similarly qualified person.

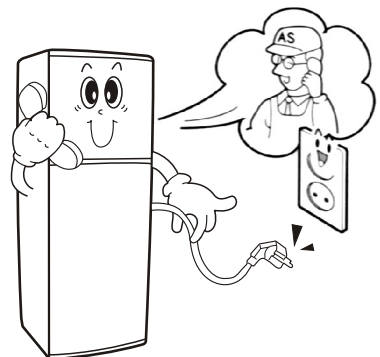

# PARTS

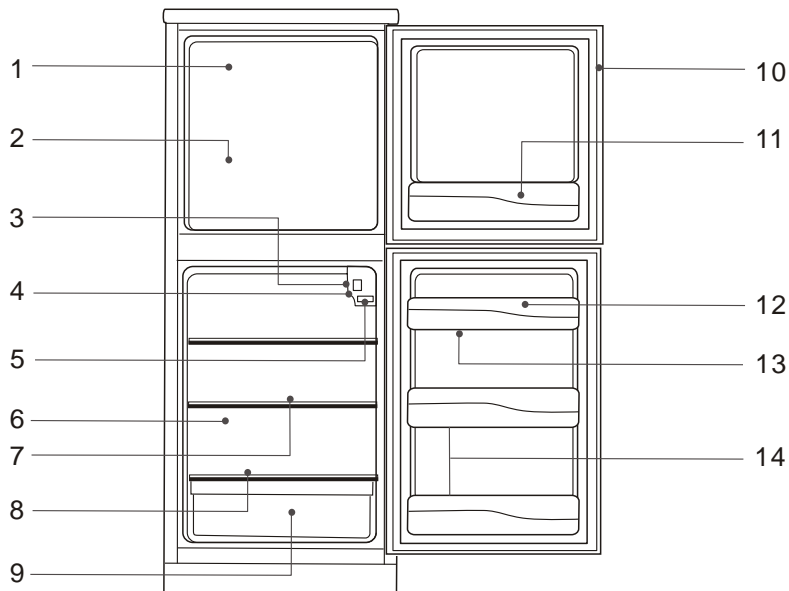 


- 1.FREEZER
- 2.FREEZER SHELF
- 3.THERMOSTAT KNOB
- 4.SEASON SWITCH
- 5.LAMP SWITCH
- 6.REFRIGERATOR
- 7.REFRIGERATOR SHELF

- 8.VEGETABLE COVER
- 9.TRAY VEGETABLE
- 10.MAGNETIC GASKET
- 11.RACK-FREEZER
- 12.RACK-EGG
- 13.TRAY-EGG
- 14.RACK-BOTTLE


# BASIC PREPARATION
 
## Before using


- All parts are well packed in the factory, Please remove the insertions and adhesive tapes for packaging when the packing box is opened. The cabinet shelf can be easily taken off and adjusted up or down according to your needs.

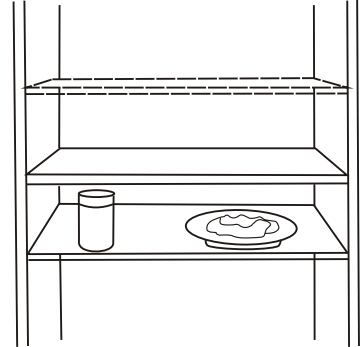

 - You can store food only when the temperature in the refrigerator gets sufficiently low. It will take about 3 hours for the refrigerator to get a sufficiently low temperature after initial starting.

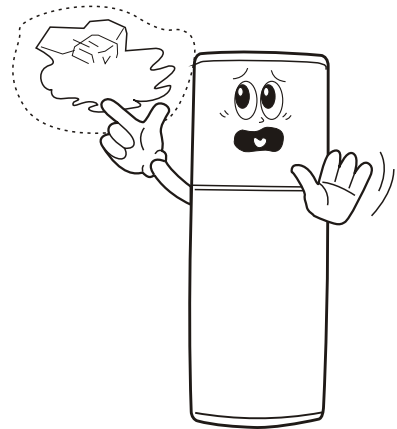

 - Wipe the appliance inside and outside using a cloth dampened with warm water and a small amount of detergent.

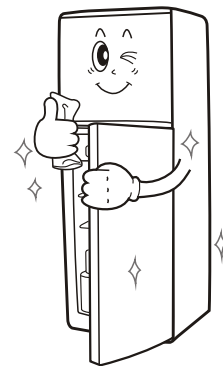

## Storing food

- Allow hot food and drinks to cool to room temperature before placing them in the refrigerator or freezer.



- Place liquid at the front of the refrigerator to avoid freezing.  
NOTE: be sure not to store bottles of drinks in freezing compartment. Otherwise the bottles would be frozen cracked.



 
- Seal food in containers with lids, in plastic wrap or in plastic bags to prevent from drying and mingling of odours.




# HOW TO USE

## Temperature control


- Point “0” is power off point, when the thermostat is set at this point, the compressor stops working, the refrigerator is not performed, and the light in the compartment is off. If you want to stop the refrigerator, you should dial the temperature control knob to point “0” .

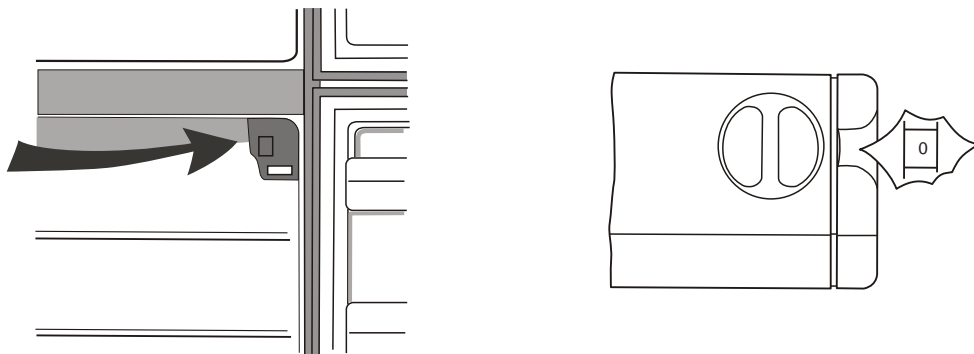

 - If the temperature control knob from 1-7 is dialed clockwise, the temperature in the refrigerator decreases as the number increases. For urgent need of freezing food or rapid ice-making, the knob to “7” . However we suggest the knob is set at position “2-5” in general use.

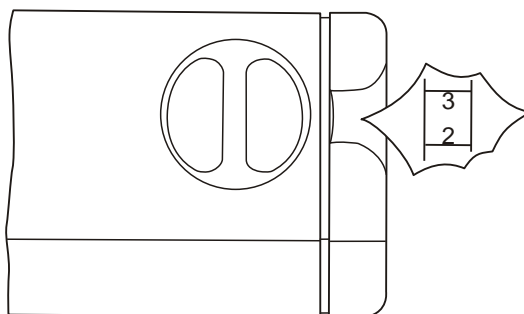

 - When ambient temperature is too low (below 10°C or so), the compressor will stop for a long period, and the temperature in the freezing compartment will be too high. In this case, the season button installed under the thermostat should be connected.

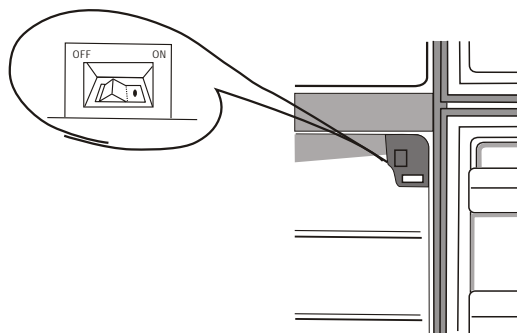

## To make ice cubes

 
- 1 Fill water into the ice tray to the about 80%capacity.




- 2 Slide the ice tray into the freezer compartment.



- 3 When you want to make ice cubes rapidly, you should set the thermostat control at “7” .

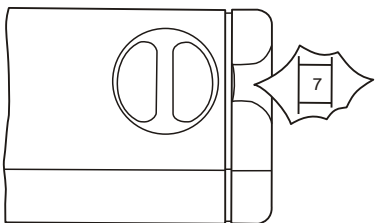

 
- 4 Hold both ends of the ice tray, remove the ice cubes from the tray by twisting it gently. Do not bend the ice tray or it will crack.

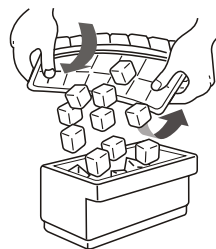


**Note:**When the thermostat is set at “7” ,the refrigerator room may ice.

## Defrosting

 
1. Empty freezer.

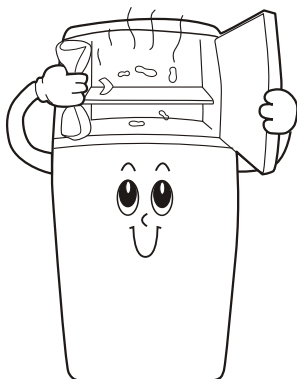

 2. Set the temperature control to “0”

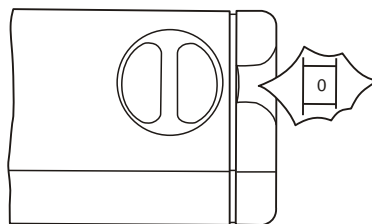


 3. Remove the frost with the soft cloth.

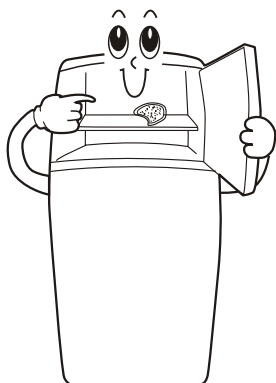


4. If the frost is too thick, please use the defroster.

 Note: Do not use sharp tools

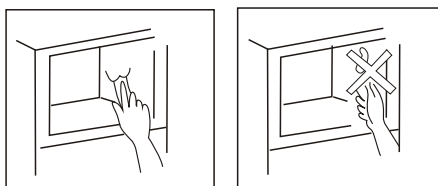


# LEVELING THE APPLIANCE

 When the refrigerator leans to the left, turn the left front foot clockwise.

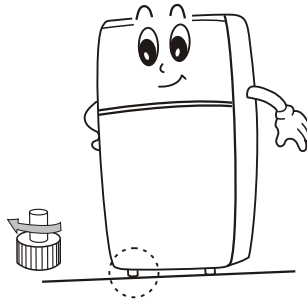

 When the refrigerator leans to the right, turn the right front foot counterclockwise.

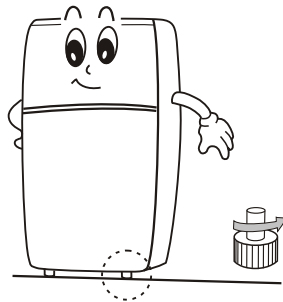

# HOW TO CLEAN THE UNIT

## Exterior

Wipe with a damp sudsy cloth, then dry.

For stubborn stains and for periodic waxing, use silicon wax.

## Interior

Wash either compartments with a baking soda solution (two tablespoons of baking soda to one quart of warm water). Rinse and dry.

## Interior parts

Wash compartments shelves etc.

With either the baking soda solution or a mild detergent and warm water.

Rinse and dry.

## Magnetic door gaskets

Wash with warm sudsy water, rinse thoroughly and dry.

## Compressor

Dust which collects on the compressor may reduce the efficiency of heat radiating. Please clean these parts regularly with soft brush or vacuum cleaner.

**Note:** please disconnect the plug before cleaning your refrigerator.

# TROUBLE SHOOTING

SYMPTOMS	CHECKS
When the Refrigerator/Freezer is not operating or the food is not sufficiently frozen	<ul style="list-style-type: none"><li>-The plug is not properly connected.</li><li>-The power fuse is turned off.</li><li>-The temperature control is set to low.</li><li>-The appliance is exposed to direct sun light or installed near a heater.</li><li>-The appliance is positioned too close to the wall.</li></ul>
When food is frozen in the refrigerator	<ul style="list-style-type: none"><li>-The temperature control is set to high.</li><li>-The ambient temperature is too low.</li><li>-The food is juicy or moist, as this can easily freeze.</li></ul>
When there is noise from the unit	<ul style="list-style-type: none"><li>-The refrigerator is not installed in a flat, stable place.</li><li>-The appliance is positioned too close to the wall.</li><li>-There are any objects behind or under the appliance.</li><li>-It is the sound of the compressor.</li></ul>
A sound like water flowing can be heard	<ul style="list-style-type: none"><li>-This sound is generated by movement of the refrigerant. It is not a malfunction.</li></ul>
Bad odour inside the appliance	<ul style="list-style-type: none"><li>-Seal stored food</li></ul>

# MEMO

A large, empty rectangular area with rounded corners, intended for writing a memo. The area is defined by a thin black border and occupies most of the page below the header.



**ELECTRONICS**