

# SENCOR®

## SCS WA1003

ACTIVE SUBWOOFER

AKTIVNÍ SUBWOOFER

AKTÍVNY HLBOKOTÓNOVÝ

REPRODUKTOR

AKTÍV MÉLYSUGÁRZÓ

SUBWOOFER AKTYWNY

**USER'S MANUAL  
NÁVOD K OBSLUZE  
NÁVOD NA OBSLUHU  
FELHASZNÁLÓI KÉZIKÖNYV  
INSTRUKCJA OBSŁUGI**

EN

CZ

SK

HU

PL

---

---

## SPECIFICATIONS

---

---

### Warning:

Don't put the machine in the rain or the mist in case of lightning and fire.

Attention: Don't block the hole of ventilation or put objects on the machine.

Attention: Leave some space around the machine in order to be ventilated.

10" Subwoofer Box

Max. peak Power: 400 W

Max. RMS Power: 120 W

Frequency range (L.P.F.): 50 Hz ~ 250 Hz (± 2 dB)

Variable LOW Pass Filter

Input sensitivity: 0,2 V ~ 6 V

Speaker impedance: 4 Ohms

Plastic Grill Cover

Dimensions: 45×30,6×28,8 cm

Fuse 30 A

### SYSTEM WIRING DIAGRAM

#### 1. Connection of Power Cord

- Since this unit deals with a high power, large current will flow and the wiring of the power cord is high importance.
- Connect the red conductor directly to the (+) battery terminal using the cable with the fuse holder.
- Connect the black wire tightly to an appropriate screw on the metal part of car after removing paint for proper grounding. Be sure to use the screw not to bring danger for driving.
- Proper connection will provide clear sound.

#### 2. Connection of Remote ON/OFF Wire

- Connect the conductor to the switching output. After connecting to this device, you will be able to turn it on and off together with the car radio. You will find the switching power cable next to the car's radio antenna connection.

Note: It is not possible to turn on the subwoofer without connecting the REM terminal!

#### 3. Connection of Aux Input (Low Input)

- Connect Aux input wires with RCA type pin jack as follows:  
WHITE to L ch pre-input of the car stereo  
RED to R ch of the car stereo


#### 4. Input sensitivity control

- Adjust the input sensitivity to output of a car stereo connected.

The original version is in the Czech language.

Address of the manufacturer: FAST ČR, a.s., Černokostelecká 1621, CZ-251 01 Říčany

## WIRING OPERATION

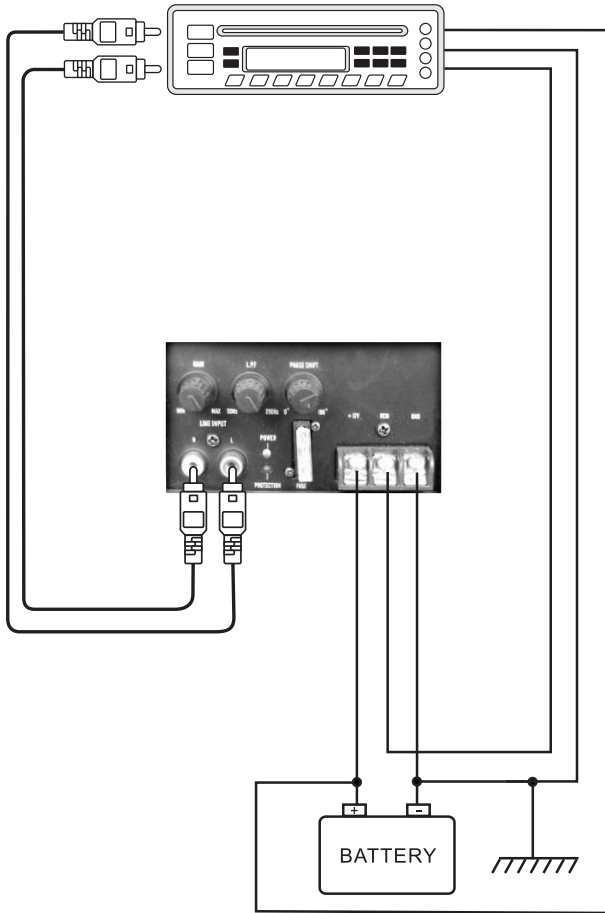

### EN Disposal of Used Electrical & Electronic Equipment



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this equipment at your applicable collection point for the recycling of electrical & electronic equipments waste. In the European Union and Other European countries which there are separate collection systems for used electrical and electronic product. By ensuring the correct disposal of this product, you will help prevent potentially hazardous to the environment and to human health, which could otherwise be caused by unsuitable waste handling of this product. The recycling of materials will help conserve natural resources. Please do not therefore dispose of your old electrical and electronic equipment with your household waste. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

EN: Changes in text and technical parameters reserved.

# SENCOR®

## EN Warranty conditions

Warranty card is not a part of the device packaging.

This product is warranted for the period of 24 months from the date of purchase to the end-user. Warranty is limited to the following conditions. Warranty is referred only to the customer goods using for common domestic use. The claim for service can be applied either at dealer's shop where the product was bought, or at below mentioned authorized service shops. The end-user is obligated to set up a claim immediately when the defects appeared but only till the end of warranty period. The end user is obligated to cooperate to certify the claiming defects. Only completed and clean (according to hygienic standards) product will be accepted. In case of eligible warranty claim the warranty period will be prolonged by the period from the date of claim application till the date of taking over the product by end-user, or the date the end-user is obligated to take it over. To obtain the service under this warranty, end-user is obligated to certify his claim with duly completed following documents: receipt, certificate of warranty, certificate of installation.

### **This warranty is void especially if apply as follows:**

- Defects which were put on sale.
- Wear-out or damage caused by common use.
- The product was damaged by unprofessional or wrong installation, used in contrary to the applicable instruction manual, used in contrary to legal enactment and common process of use or used for another purpose which has been designed for.
- The product was damaged by uncared-for or insufficient maintenance.
- The product was damaged by dirt, accident of force majeure (natural disaster, fire, and flood).
- Defects on functionality caused by low duality of signal, electromagnetic field interference etc.
- The product was mechanically damaged (e.g. broken button, fall).
- Damage caused by use of unsuitable media, fillings, expendable supplies (batteries) or by unsuitable working conditions (e.g. high temperatures, high humidity, quakes).
- Repair, modification or other failure action to the product by unauthorized person.
- End-user did not prove enough his right to claim (time and place of purchase).
- Data on presented documents differs from data on products.
- Cases when the claiming product cannot be indentified according to the presented documents (e.g. the serial number or the warranty seal has been damaged).

### **Authorized service centers**

Visit [www.sencor.eu](http://www.sencor.eu) for detailed information about authorized service centers.