

SONY[®]

3-862-046-11 (1)

Portable PCS Telephone

Operating Instructions

CM-Z100

©1998 Sony Electronics Inc.

Before operating the CM-Z100 portable PCS telephone, please read this manual thoroughly and retain it for future reference. If your usage includes in-vehicle operation, it is recommended that you refer to the Installation/Connections/Operation manual for the optional accessory kits.

DISPOSAL OF LITHIUM ION BATTERY

LITHIUM ION BATTERY. DISPOSE OF PROPERLY.

You can return your unwanted lithium ion batteries to your nearest Sony Service Center or Factory Service Center.

Note: In some areas the disposal of lithium ion batteries in household or business trash may be prohibited.

For the Sony Service Center nearest you call 1-800-222-SONY (United States only).
For the Sony Factory Service Center nearest you call 416-499-SONY (Canada only).

WARNING

To prevent fire or shock hazard, do not expose the unit to rain or moisture.

FCC CAUTION STATEMENT

You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Owner's record

The model number, regulatory number, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. Refer to these numbers whenever you call your dealer regarding this product.

Model No.: CM-Z100 Serial No.: _____



Table of contents

Rules and regulations	4
Safety precautions	6
Getting Started	
Unpacking your phone	11
Looking at your phone	12
Charging the battery pack	16
Turning the phone on	20
Using the Jog Dial™ navigator	21
Basic Operations	
Making calls	23
Receiving calls	25
Quick Ways to Make Calls	
Storing phone numbers in the Phone Book ...	27
Calling from the Phone Book	35
Searching the Phone Book	38
Calling from the Calls List.....	41
Sending DTMF signals from the Phone Book ...	43
Advanced Features	
About the Features menu	44
Using the Short Messaging Service	46
Adjusting the volume	55
Checking and setting the timers	60
Using the Directory	62
Extra features	69
Setting security options	72
Setting display options	78
Adjusting network settings	81
Additional Information	
Specifications	87
Troubleshooting	88
List of menu items	90
Glossary	92
Index	97

Rules and regulations

The U.S. Federal Communications Commission and the Industry Canada regulate PCS telephone service in their respective countries. It is important for you, the PCS telephone user, to observe the applicable regulations when operating your PCS telephone in either country. In addition to these U.S. and Canadian federal regulations, you may be bound also by certain state, provincial, territorial, and local rules and regulations, as well as by your PCS carrier's tariff (the rates, terms, and conditions of its service). If you wish to use your PCS telephone in both the U.S. and Canada, please consult with your System Operator.

Furthermore, you should remember that your PCS telephone is a *radiotelephone*, — i.e., it combines both wireline technology, as used in your home or office telephone system, *and* radio technology — and that the scope of regulations and precautions is therefore broader than the scope of regulations and precautions relating to wireline-only telephone usage.

Some of the major points of consideration are set out below. Please note, however, that these "Rules and Regulations" and "Safety Precautions" sections do not constitute legal advice, and are intended merely for general information purposes. If you have specific questions, please contact your PCS carrier (System Operator).

License — If your home system is in the U.S., you do not require a separate license to operate your PCS telephone; obtaining a PCS telephone access number is sufficient to register you as a user. If your home system is in Canada, a separate license is required; your carrier will assist you in the licensing process. If you wish to use your PCS telephone on both sides of the border, please contact your PCS carrier (System Operator).

Equipment modifications — The U.S. Federal Communications Commission has type-approved the model of PCS telephone which you have purchased, and has allocated a specific frequency range for PCS service. No changes or adjustments are to be made to your PCS telephone.

The radio equipment shall be made available for inspection upon request by representatives of the FCC or licensees.

Denial of service — A PCS carrier may deny service temporarily or terminate service for violation of any government regulations or violation of its tariff.

Privacy — As a telephone user, you have come to assume a certain standard of privacy when you place or receive a telephone call via the traditional wireline systems. However, because PCS telephones utilize radio transmissions to effect calls, the same standard cannot always be assured. While it is unlawful for any unauthorized person to divulge or use any information obtained from intercepting or “listening in on” conversations intended for others, you should not assume that your conversation is completely secure. Commercially available scanning equipment can permit a third party to monitor the radio channels used for PCS telephone calls.

Interference — No person shall interfere with, or cause interference to, any radio communication or signal.

Safety precautions

IMPORTANT

For safe and efficient operation of your phone, observe these guidelines.

Your hand-held portable PCS telephone uses digital Code Division Multiple Access (CDMA) technology. CDMA is a newer radio frequency (RF) technology than the FM technology that has been used for radio communications for decades.

Your portable PCS telephone is a radio transmitter and receiver. When the phone is ON, it receives and sends out radio frequency (RF) energy. The phone operates in the frequency range of 1851 MHz to 1989 MHz. When you use your phone, the PCS system handling your call controls the mode of operation and the power level at which your phone transmits. The power is transmitted as a digitally coded waveform at a rate varying from 100 Hz to 800 Hz. The average power can range from about 0.01 μ W to about 300 mW.

Exposure to radio frequency energy

Research on health effects from RF energy has focused for many years on FM radio technology. That research and studies regarding newer radio technologies, such as CDMA, have found no credible scientific evidence that adverse health effects result from the use of PCS telephones.

The Institute of Electrical and Electronics Engineers (IEEE) in 1991, and The American National Standards Institute (ANSI) in 1992, updated the 1982 ANSI Standard for safety levels with respect to human exposure to RF energy. Over 120 scientists, engineers, and physicians from universities, government health agencies, and industry, reviewed the available research and

developed this updated Standard. In March 1993, the U.S. Federal Communications Commission (FCC) proposed the adoption of this updated Standard.

The design of your phone complies with this updated Standard. Of course, if you want to limit RF exposure even further than the updated ANSI Standard, you may choose to control the duration of your calls and operate your phone in the most power efficient manner.

Efficient phone operation

For your phone to operate at the lowest power level consistent with satisfactory call quality, please observe the following guidelines:

Your phone has an extendable antenna; extend it fully whenever possible for maximum efficiency.

Hold the phone as you would any other telephone. While speaking directly into the mouthpiece, position the antenna up and over your shoulder. Do not hold the antenna when the phone is in use. Holding the antenna affects call quality and may cause the phone to operate at a higher power level than needed.

Antenna care and replacement

Do not use the phone with a damaged antenna. If a damaged antenna comes into contact with the skin, a minor burn may result. Replace a damaged antenna immediately. Take your phone to an authorized service center for repair.

Use only the supplied or approved antenna. Unauthorized antennas, modifications, or attachments could impair call quality, damage the phone, and violate FCC regulations.

Driving

Check the laws and regulations on the use of PCS telephones in the areas where you drive. Always obey them. Also, when using your phone while driving, please:

- pay full attention to driving;
- use hands-free operation, if available;
- pull off the road and park before making or answering a call, if driving conditions so require.

Electronic devices

Most modern electronic equipment is shielded from RF energy. However, RF energy from PCS telephones may affect some electronic equipment.

RF energy may affect improperly installed or inadequately shielded electronic operating and entertainment systems in motor vehicles. Check with the manufacturer or its representative to determine if these systems are adequately shielded from external RF energy. You should also check with the manufacturer of any equipment that has been added to your vehicle.

Medical devices

Consult the manufacturer of any personal medical devices (such as pacemakers, hearing aids, etc.) to determine if they are adequately shielded from external RF energy. Your physician may be able to assist you in obtaining this information.

Turn your phone OFF in health care facilities when regulations posted in the areas instruct you to do so. Hospitals or health care facilities may be using equipment that could be sensitive to external RF energy.

Aircraft

Turn your phone OFF before boarding any aircraft.

- Use it on the ground only with crew permission.
- Do not use in the air.

To prevent possible interference with aircraft systems, U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent interference with PCS systems, FCC regulations prohibit using your phone while the plane is in the air.

Children

Do not allow children to play with your phone. It is not a toy. Children could hurt themselves or others (by poking themselves or others in the eye with the antenna, for example). Children also could damage the phone or make calls that increase your telephone bills.

Blasting areas

To avoid interfering with blasting operations, turn your unit OFF when in a “blasting area” or in areas posted: “Turn off two-way radio.” Construction crews often use remote control RF devices to set off explosives.

Potentially explosive atmospheres

Turn your phone OFF when in any area with a potentially explosive atmosphere. It is rare, but your phone or its accessories could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked. They include fueling areas such as gas stations; below deck on boats; fuel or chemical transfer or storage facilities; areas where the air contains chemicals or particles, such as grain, dust, or metal powders; and any other area where you would normally be advised to turn off your vehicle's engine.

Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle which contains your phone or accessories.

In the United States, vehicles using liquefied petroleum gas (such as propane or butane) must comply with the National Fire Protection Standard (NFPA-58). For a copy of this standard, contact the National Fire Protection Association, One Batterymarch Park, Quincy, MA 02269, Attn: Publication Sales Division.

In Canada, vehicles using liquefied petroleum gas (such as propane or butane) must comply with the Canadian Gas Association (CAN/CGS-B149.2). For a copy of this standard, contact the Canadian Standards Association, 178 Rexdale Blvd., Etobicoke, ON M9W 1R3, Attn: Standard Sales Department.

Unpacking your phone

Carefully unpack your phone and check the contents using this list.

If there is something missing, please contact your nearest Sony dealer.

CM-Z100
Portable PCS
Telephone (1)




QN-029BPL
Li-Ion Battery
Pack (1)



Hand Strap (1)




QN-001AC
AC Adapter (1)

 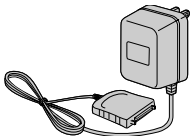


Attaching the hand strap

1

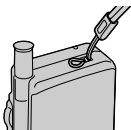


2



Looking at your phone

For further information, refer to the page numbers indicated in parentheses ().

Telephone

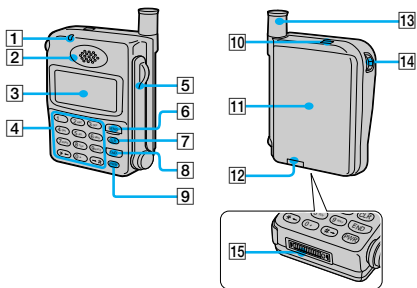

1 Call alert indicator (20)

Lights when there is an incoming call.

2 Earpiece






3 Display (14)

4 Number buttons, 0 to 9, and $\ast \leftarrow$ / $\# \rightarrow$ buttons (23, 27, 37)

Use the number buttons to enter letters and numbers. Press and hold a number button, 0 to 9, for touch dialing. Use the $\ast \leftarrow$ / $\# \rightarrow$ buttons to move the cursor when you are entering letters.


5 Arm microphone

Open to make/receive a call.
Close to end a call.

-
- 6**  **button (35 to 37)**
Press to make outgoing calls and to receive incoming calls when the arm microphone is open.
 - 7**  **(clear) button (22, 23)**
Press to clear the last or all entered digits on the display, or to exit the current mode of operation.
 - 8**  **button (23)**
Press to end calls. Also cancels operations and returns the phone to standby mode.
 - 9**  **(power) button (20)**
Press to turn the phone on or off.
 - 10** **Hand strap attachment (11)**
 - 11** **Battery pack (16)**
 - 12** **Battery pack release tab (16)**
Slide up to remove the battery pack.
 - 13** **Antenna (20)**
 - 14** **Jog Dial™ navigator (21)**
Push and turn for menu navigation and for changing settings on menus. In this manual, the  icon indicates that you should push the Jog Dial™ navigator in towards the center of the phone.
 - 15** **Connector (17)**
Use to connect the phone to either the AC adapter, a cigarette lighter adapter, a travel adapter, a desktop charger, or a hands-free car kit.



Display

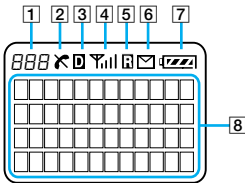The top row of the display contains icons that inform you of the current status of your phone. The bottom four rows of the display are for text such as phone numbers, names, and operational prompts. Each row displays a maximum of 12 characters.



1 Short character display

Shows settings such as the number of the currently displayed Menu, as well as Phone Book and Calls List memory locations.

2  (in-use) /  (out-of-service) icon (21, 23, 25)




The in-use icon appears during a call. A slash through the in-use icon appears when no signal is received. You cannot make or receive calls when the out-of-service icon is visible.

3  (digital) icon

Appears when your phone is receiving a signal.

4  (signal strength) icon (20)

Tells you the approximate strength of the signal being received.

-
- 5  **(roam) icon (83)**
Appears when you are roaming outside your home service area.
 - 6  **(message) icon (46)**
Appears when you have new text or voice mail messages pending. The icon flashes if the new message is urgent.
 - 7  **(battery) icon (17, 19)**
Shows the approximate amount of charge power remaining in the battery pack.
Recharge the battery pack before it is fully discharged.
 - 8 **Character display**
Prompts various actions, and then displays the results. It also shows phone numbers and names.

Charging the battery pack

Charge the battery before using the phone. A new battery is not fully charged. To charge the battery, attach the battery pack to the phone, then connect the supplied AC adapter.

Attaching the battery pack

- 1 Hook the battery pack onto the top of the phone ①, and ease the battery pack down ②.



- 2 Snap the battery pack in place.



To remove the battery pack

- 1 Push the battery pack release tab upwards.




- 2 Lift up the bottom of the battery pack ①, and pull it out ②.




Charging the battery

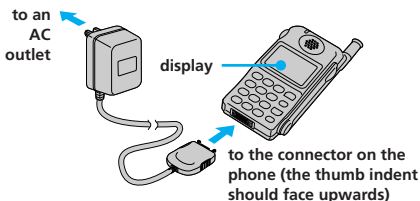

Connect the AC adapter to the phone and the other end to a standard 120V AC outlet as illustrated below. The charging time is approximately 3.5 hours. You can charge the battery pack with the phone turned on, but charging will take longer.



When the power is turned on

As the battery pack charges, the battery icon () indicates that the phone is charging.

When the power is turned off

The message "Battery is Charging" is displayed, and  pulses. When the battery pack is fully charged, the message "Charging is Complete" is displayed, and  stops pulsing.

Notes

- If you make or receive a call when the battery pack is not charged sufficiently, the call will be cut off. In that case, you will hear an alarm, indicating that the battery is low.
- You can turn on the phone without the battery pack, but you cannot make or receive a call, even if you connect the AC adapter to an AC outlet.

Notes on charging

- When you charge the battery pack, avoid:
 - charging for long periods of time, since this reduces battery life.
 - charging in temperatures below 32°F (0°C) or over 104°F (40°C).
 - charging the battery in direct sunlight or in places with high humidity (such as a bathroom).
- Do not use any battery pack other than the one specified in these instructions.
- It is normal for the battery pack to become warm during charging or after use.
- The supplied AC adapter is not intended to be serviced. In the event of a malfunction, it should be replaced.

Notes on the battery pack

- Do not dispose of the battery pack in a fire or short-circuit it. Doing so may cause the battery pack to leak or get hot, which could cause personal injury.
- Do not try to disassemble the battery pack.

 
Checking the battery

Battery life

In standby mode, the battery lasts approximately 24 hours. When used continuously, it lasts approximately 2.5 hours, depending on network settings and signal conditions.

Battery condition

The battery icon indicates the battery level as follows (when the power is on):



Note that the battery icon displays the approximate charge level and that the consumption may vary depending on conditions of use, such as ambient temperature, network coverage, and usage patterns.

When the battery is empty

The battery icon flashes and a warning message is displayed. A beep sounds, indicating that the battery is low. Shortly thereafter, the phone turns off. Recharge the battery as soon as possible.

Turning the phone on

To use your phone, the power must be turned on. It is preferable to extend the antenna, since this maximizes signal strength and minimizes interference.



Extending the antenna

Hold the end of the antenna and pull up until fully extended.

To retract the antenna

Push the antenna down until it is fully retracted.

Turning the power on

Hold down **PWR** for about one second. The call alert indicator lights up, a beep sounds, and the phone starts searching for a signal. When the phone has found a service signal, the standby display appears and the call alert indicator goes off. Now the phone is ready to use.

To check the signal strength

The signal strength icon indicates various levels of signal strength. It is best to make calls when the signal is strong, although calls can be made when the signal strength is weak.



If you are out of the service area


The out-of-service icon (✕) appears, and the phone searches for a service signal. If a signal cannot be found, the phone enters power save mode. It will “wake up” automatically at intervals (based on carrier network settings) to search for a service signal.

Turning the power off

Hold down **(PWR)** for about one second.

Using the Jog Dial™ navigator


The Jog Dial™ navigator makes it easy to navigate from one menu to another.

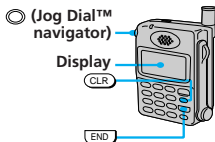

Choosing a menu item

To choose a menu item, push the Jog Dial™ navigator in. The flashing arrow (⇒) on the display indicates the item you can select by pushing ⇒. As illustrated below, if you push ⇒ on the standby display, you will go to the Features menu. If you push ⇒ again, you will go to the Message menu.







As shown below, if you enter digits on the standby display, the word “Options” appears at the bottom of the display, preceded by →. Push  to access the Options menu.

 


To go back

If you want to go back to the previous display, press **CLR**. If you want to return to the standby display, either press **END** or hold down **CLR**.

Scrolling through menu items


To scroll through menu items, turn the Jog Dial™ navigator when the  icon appears. The up () and down () arrows on the display indicate the available scrollable direction. For example, if you turn  within the Sounds menu, you will scroll through the submenu items.



On the leftmost display,  is not shown. This indicates that you cannot scroll up.

Making calls

You can call any number up to 32 digits from within a service area. The out-of-service icon (📞) indicates that you are outside the service area.

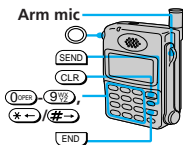

1 Use the number buttons to enter the number.

If you enter the wrong digit, press **CLR** to back up. To clear all entered digits, press **END** or hold down **CLR** to return to the standby display.

2 If the arm microphone is closed, open it to dial. If the arm microphone is open, press **SEND** to dial.

The phone dials the number you have entered. The 📞 icon appears. When the call is connected, the call timer appears and displays the elapsed time.

3 Press **END** or close the arm microphone to end the call when you are finished.

The 📞 icon disappears and the final elapsed call time flashes for 10 seconds. The standby display automatically reappears.

Tips

- When dialing, you can insert a pause to attach a DTMF (Dual Tone Multiple Frequency) number to the number you are calling (see page 30).
- If Auto-Hyphen is turned on, the phone number is hyphenated automatically as you enter the digits (see page 80).
- If Minute Alert is turned on, a beep sounds at intervals (based on the setting you select) throughout the call (see page 60).
- Enhanced voice privacy is indicated by the message “-P-” displayed in the upper left corner of the LCD (see page 85). This feature is carrier-dependent.

To adjust the earpiece volume during a call


Turn  up to increase the volume.

Turn  down to decrease the volume.

Tip

In addition, you can adjust the volume using the Volume menu (see page 57).


To mute/unmute the microphone during a call

Push and hold .

Tip


In addition, you can mute the microphone using the Volume menu (see page 56).

To redial the last number

On the standby display, press  when the arm microphone is open. The number you dialed last is redialed automatically.

Receiving calls

You can receive calls as long as the out-of-service icon (✕) is not displayed. The ✕ icon indicates that you are outside the service area.

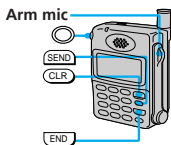

When you receive a call, the ringer sounds or the phone vibrates. "Incoming Call" flashes on the display, and the call alert indicator lights.

Note

If you turn off the ringer volume (see page 55), you will not hear the ringer sound. The message "–Ringer Off–" is displayed on the standby display.

- 1 If the arm microphone is closed, open it to answer the call. If the arm microphone is open, press any button except (PWR) to answer the call.**

When the call is connected, the call timer appears and displays the elapsed time.

- 2 Press (END) or close the arm microphone to end the call when you are finished.**

The ☎ icon disappears, and the final elapsed call time flashes for 10 seconds. The standby display automatically reappears.

Tips

- Using the Jog Dial™ navigator, you can adjust the earpiece volume or mute the microphone during a call (see pages 56 and 57).
- Enhanced voice privacy is indicated by the message “-P-” displayed in the upper left corner of the LCD (see page 85). This feature is carrier-dependent.

If the caller supports caller ID

The caller's phone number appears on the display when you receive a call if both the caller and the carrier support this feature.


If the caller supports caller ID and the number matches a Phone Book entry, the name that you stored with the number (if any) is displayed also.

If you miss a call

If you miss an incoming call, the message “You have missed XX calls.” appears on the display. To return to the standby display, either press **CLR**, **END**, or **→**. If the caller supported caller ID, the caller's number is stored in the Calls List (see page 41).

Storing phone numbers in the Phone Book

Your phone features a built-in Phone Book memory, in which you can store up to 99 (01–99) phone numbers with names. You can dial stored numbers quickly by recalling them from the Phone Book (see page 35).

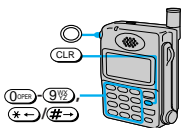

Each phone number can contain up to 32 digits, and each name up to 12 characters. This section shows how to store, edit, and erase Phone Book numbers quickly.

1 On the standby display, use the number buttons to enter the number.

The number appears on the display. In addition, you can store hyphens, pauses, and links with your Phone Book entries (see page 30).

 



2 Push .

The Options menu appears.

3 Turn to select "Save," then push .


The message "Enter a Name" appears on the display, prompting you for a name to accompany the number.


4 Use the number buttons to enter the name.


If you press the same button in quick succession, you will scroll through the characters available on that button. (See the "Alphanumeric table" on page 29.) For the next entry, wait until the cursor moves one step to the right or use  /  or  to move the cursor and insert spaces between characters. If you enter the wrong character, press  to clear the character highlighted by the cursor.

To enter "SONY"

Press  four times to enter an "S."

Press  three times to enter an "O." Wait until the cursor moves one step to the right for the next entry.



Press  twice to enter an "N."

Press  three times to enter a "Y."

5 When you are finished, push to store the phone number and name.

The message "Save in location XX?" appears on the display, indicating the first available memory location.

6 Push to store the new number in the first available memory location.

 


 






If you want to store it in another location, turn  to select the desired location or enter the location number, then push . A confirmation message appears, followed by the status of the Phone Book.

Tip

In addition, you can use the Directory menu to store Phone Book numbers (see page 62).

Alphanumeric table

Each time you press a number button, the letters/numbers are cycled as follows:

Button	Sequence
	- " ' , & () : 1
	A B C a b c 2
	D E F d e f 3
	G H I g h i 4
	J K L j k l 5
	M N O m n o 6
	P Q R S p q r s 7
	T U V t u v 8
	W X Y Z w x y z 9
	0

To enter a hyphen, pause, or link

In addition to digits, you can insert hyphens, pauses, and links into the phone number of a Phone Book entry. (See page 36 for information on releasing a pause or link during a call.)

Hyphens: Turn off the autohyphenation feature (see page 80) when you want to enter a hyphen manually instead, e.g., when you store a foreign number. Autohyphenation will be turned off for that number.

Pauses: When you want to send DTMF signals (see page 43) for electronic banking, etc., inserting a pause after the first string of digits makes the phone pause before dialing the second string. This ensures that your counterpart is ready to accept that string.

Links: You can join two or more Phone Book entries (e.g., a doctor's phone number and your medical record number). Once you have specified the first entry, you insert a link. Then you specify the second number by entering its memory location number.

1 While entering digits, push .

The Options menu appears on the display.

2 Turn to select which information to enter, then push .

After inserting a hyphen, pause, or link, the display returns to number entry mode.

To enter	Select	The display shows
a hard pause	Hard Pause	H
a time pause	Time Pause	T
a link	Enter Link	L
a hyphen	Enter Hyphen	–

If the Phone Book is full

If there are no memory locations available, a message indicates that the memory is full. After entering a name, a message prompts you to specify a memory slot to overwrite. To cancel, hold down or just press **CLR**.



Editing stored information

You can edit the name, phone number, and memory location of specific entries stored in the Phone Book.



- 1 On the standby display, turn **☎** once.**
The Saved #s display appears.
- 2 Turn **☎** down to select “Phone Book.”**
The first entry in the Phone Book appears.
- 3 Turn **☎** to select the entry that contains the information you want to edit.**
The contents of the selected memory location are displayed.

4 Push → .

The Options menu appears.

5 Turn  **to select “Edit,” then push** → .

The Edit menu appears.

6 Turn  **to select the item you want to edit, then push** → .

The stored information that corresponds to the selected item appears.

To change**Select**

the name

Name

the phone number

Phone #

the memory location

Location #

7 Enter the new information.

Enter new information the same way you stored original information (see page 27). The old information is overwritten.

8 When you are finished, push → .

A message confirms that your changes have been saved.

Tip


In addition, you can use the Directory menu to edit Phone Book numbers (see page 64).

Erasing a phone number

You can erase stored Phone Book entries. If the selected entry is restricted, you must enter the four-digit lock code before you can erase it (see page 74).

1 On the standby display, turn  to select "Phone Book."



The first Phone Book entry is displayed.

2 Turn  to find the Phone Book entry you want to erase.

The contents of the selected memory location are displayed.

3 Push .

The Options menu appears.

4 Turn  to select "Erase," then push .

A message appears, prompting you to confirm the erasure.

5 Push  again.

The selected entry is erased. After a few seconds, the standby display reappears.

Tips

- You can also use the Directory menu to erase one Phone Book entry at a time (see page 64).
- Use the Security menu to erase all Phone Book entries at once (see page 76).

Restricting Phone Book entries

You can restrict individual Phone Book entries or the entire Phone Book so that access can be gained only by entering a lock code (see page 74). The phone numbers of restricted entries will not be displayed.

- 1 Select the Phone Book entry that you want to restrict, then push .**

The Options menu appears.

- 2 Turn  to select "Restrict," then push .**

The selected entry is displayed.

- 3 Push  to restrict the selected entry.**

Now the selected entry is restricted.

After a few seconds, the standby display reappears.

To unrestrict an entry

- 1 Select the Phone Book entry that you want to unrestrict.**

The message "<number is restricted>" indicates a restricted entry.

- 2 Push .**

The Options menu appears.

- 3 Turn  to select "Restrict," then push .**

A message appears, prompting you to enter the lock code. (See page 74 for information on lock codes.)

4 Use the number buttons to enter the lock code.


Now the selected entry is unrestricted. After a few seconds, the standby display reappears.

Tip




You can also use the Security menu to restrict/unrestrict Phone Book entries (see page 74).

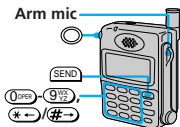


Calling from the Phone Book

You can dial frequently used numbers quickly from the Phone Book using the Jog Dial™ navigator. Also, by using speed/touch dialing, you only need to press a few buttons to dial.





Quick Ways to Make Calls


- 1 On the standby display, turn  once.**
The Saved #s display appears.
- 2 Turn  down to select "Phone Book."**
The first entry in the Phone Book appears.
- 3 Turn  to select the desired Phone Book entry.**
The contents of the selected entry are displayed.

4 Open the arm microphone if it is closed. If the arm microphone is open, push  twice or press . The phone dials the number stored in the selected Phone Book entry. The  icon appears.

Tips


- You can search for a phone number by name or memory location (see pages 38 and 39).
- Whenever the phone number is displayed, you can call it by pushing  or  or by opening the arm microphone.
- If the phone number of a selected Phone Book entry is too long to fit on the screen, you can still view the overflow digits by selecting “View Number” on the Options menu.

To release a pause or link during a call

If a Phone Book entry contains hard pauses or links, only the digits up to the first hard pause or link are displayed. To dial the rest of the selected entry (and release the pause or link), push . For a time pause, wait two seconds. The phone dials the rest of the entry automatically. (See page 30 for additional information on pauses and links.)


Speed dialing

To dial quickly, you can enter the Phone Book memory location numbers. The phone calls the number stored in the corresponding location.

- 1 Use the number buttons to enter the memory location number.**
- 2 To dial the number, open the arm microphone. If the arm microphone is already open, press .**

The phone dials the number that corresponds to the memory location you entered.

Touch dialing

You can dial a phone number stored in the Phone Book without pressing . Before using this feature, make sure that Touch Dial on the Extras menu is set to “on” (see page 70).

- 1 Use the number buttons to enter the memory location number, and hold down the last digit of the memory location number for about two seconds when the arm microphone is already open.**

The phone dials the number that corresponds to the memory location you entered.


Searching the Phone Book

To locate a desired Phone Book entry, you can search by name, phone number, or memory location. You can search the Phone Book either alphabetically or for a string of characters.



Searching alphabetically

When you enter only one character, the phone lists all entries that begin with the entered character.

1 From the standby display, turn  once.

The Saved #s display appears.

2 Push .

The Search display appears.

3 Enter only the first letter of the name you want to find.

4 Push .

All Phone Book entries that begin with the entered character are displayed alphabetically.


5 Turn  to view the next entry.

Tip

In addition, you can use the Directory menu to search the Phone Book by name (see page 66).

Searching for a string of characters

When you enter two or more characters, the phone searches for entries that contain those characters. The results are displayed starting from the lowest memory location number.

1 From the standby display, turn  once.

The Saved #s display appears.


2 Push .

The Search display appears.

3 Enter at least two characters.

4 Push .

The entries containing the selected string are displayed starting from the lowest memory location number.

5 Turn  to view the next entry in the search string.

Note

If the search string does not contain punctuation or a space, the phone scans only the first characters of the words in the matching entries.

Searching by memory location

The phone searches for a memory location that matches the entered digit(s), and displays a list of options.

1 On the standby display, enter the memory location (a maximum of two digits).

2 Push .

The Options menu appears.

3 Turn \blacktriangleleft up to select “Recall Loc#,” then push \blacktriangleright .

The Phone Book entry stored in the selected memory location is displayed. If the entered location is empty, this is indicated on the display. After a few seconds, the standby display reappears.

Tip

You can also use the Directory menu to search the Phone Book by memory location (see page 67).

Searching for a phone number

The phone lists all entries that contain the entered digit(s).

1 On the standby display, enter at least three digits of the phone number you want to find.

2 Push \blacktriangleright .

The Options menu appears.

3 Turn \blacktriangleleft up to select “Find Number,” then push \blacktriangleright .


The Phone Book lists and displays all entries matching the entered digits. Depending on the Sort Book setting (see page 81), the entries are listed either alphabetically or by memory location.







4 Turn \blacktriangleleft to view the next entry that contains the search string.

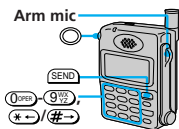If a matching Phone Book entry is not found, this is indicated on the display. After a few seconds, the standby display reappears.

Calling from the Calls List

Information on the ten most recent outgoing calls, incoming calls, scratch pad entries, and missed calls are stored in the phone's Calls List. If you call the same number twice in a row, only the most recent call is stored in the Calls List.



- 1 On the standby display, turn  once.**
The Saved #s display appears.
- 2 Turn  up to go to "Calls List."**
Information on the most recent call appears. "Calls List is empty" is displayed if there are no entries.
- 3 Turn  to select the entry you want.**
The contents of the selected entry are displayed.
- 4 Open the arm microphone if it is closed. If the arm microphone is open, push  twice or press .**
The phone dials the selected Calls List entry. The  icon appears.

Tips

- In addition, you can dial by pressing **SEND** (when the arm microphone is open) after selecting the entry in step 3 on page 41.
- If the selected entry contains a pause or a link, only the digits up to the pause or link are dialed. To release pauses and links, see page 36.
- In addition, you can use the Directory menu to view the Calls List (see page 68).

To view detailed information of Calls List entries

In addition, you can view the digits of a phone number that do not fit on the screen, the duration of the call, or the time and date of the call by using the Options menu in step 4 on page 41.


To view	Select
digits that do not fit on the screen	View Number
the duration of the call	Duration
the time and date of the call	Time/Date

To save the number to the Phone Book

Select "Save" from the Options menu (step 4 on page 41) by pushing the Jog Dial™ navigator.

Sending DTMF signals from the Phone Book

You can send DTMF (Dual Tone Multiple Frequency) signals to access electronic services (such as telephone banking) when dialing numbers from the Phone Book.

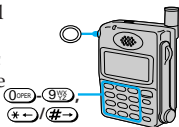

Dual Tone Multiple Frequency is also known as “touch-tone.” A tone is generated when you press a telephone button (number, *, or #). It can be used to access answering machines, pagers, telephone banking services, data services, and other electronic services.

1 During a call, search for the Phone Book entry that contains the numbers you want to send.

The selected entry is displayed. Use the Directory menu to search for the Phone Book entry (see pages 66 and 67).

2 Push .

The Options menu appears.

3 Turn to select “Number Tone,” then push .

A DTMF signal, containing the entered digits, is sent in a burst.

Notes

- You can send a DTMF signal only during a call.
- To enter and send numbers one by one during a call, use the number buttons to send the DTMF number.
- To change the length of the DTMF transmission, see “Setting the keybeep length” on page 59.





About the Features menu

You can use the Features menu to activate the special features of your phone. For a list of submenus and settings, see “List of menu items” on page 90.


Viewing and selecting menu options

The Jog Dial™ navigator makes it easy to navigate the phone’s menus. The procedure to view and select menu options is common to most of the Features menus (see page 21). These menus are accessible during a call also. The following example shows how to set the backlight.

1 On the standby display, push to select “Features”.

If the standby display is not shown, press  or hold down , then push  to display the Features menu. The arrow and the menu number flash, indicating which menu will be selected by pushing .

2 Turn to select “Display,” then push .

The Display menu appears. The arrow and the last digit of the submenu number flash, indicating which submenu will be selected by pushing .

3 Turn to select “Backlight,” then push .

The Backlight menu appears. The current setting is indicated by a check mark (✓) and is displayed in capital letters. (See page 79 for an additional description on setting the backlight.)

4 Turn **⏪** to select the setting.

The available options scroll as you turn **⏪**.

5 Push **➡** to enter the new setting.

The standby display reappears.

To exit from the Features menu

Press **END** or hold down **CLR** to return to the standby display.

To return to the previous display

Press **CLR**. To go back further, press **CLR** again.

Notes


- If you reach the last menu item and try to turn **⏪** further, a beep indicates that you have reached the end of the menu. To view other menu items, turn **⏪** in the opposite direction.
- The standby display automatically reappears after 30 seconds of inactivity.

Tip

Each menu item can be accessed quickly from the standby display by pushing **➡** and then pushing the number of the menu item. The item number then appears in the upper left corner of the display in step 3. For example, you can access the backlight setting by pushing **➡** followed by **7^{PO}** and **2^{ABC}**.

Using the Short Messaging Service

This section contains information on the Short Messaging Service (SMS). This feature lets you receive “text” messages, which are stored in your phone as long as there are enough memory locations available.

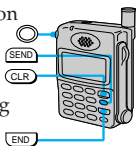

Contact your service provider to see if this service is available in your area.

Receiving messages

To receive messages, the phone must be turned on. The phone supports three types of messages: “MESSAGE” indicates a text message; “PAGE” typically contains only digits; “VOICE MAIL” is a voice mail notification, and indicates the number of new voice mail messages stored in your voice mailbox.

When you receive a message

The message icon (✉) appears on the display and the call alert indicator flashes, accompanied by audible alerts. The first line indicates message type and priority. If the message is urgent, the message type is flanked by asterisks (*) and followed by an exclamation mark (!). If you press any key, this display disappears. The message icon (✉) remains displayed as long as there are unread messages.

Tip

If you receive duplicate messages, the phone deletes the older one and stores the new one with the indication “DUPLICATE.”

WARNING

When you receive a new message and your phone does not have enough memory to store it, the phone automatically erases old messages that are not locked.

Note

If the ringer volume is set to “vibration,” the phone emits a vibration instead of an audible ring when you receive a message.

If the memory becomes full

The phone issues a warning when the memory is 75% full. At this point, you should erase expendable messages (see page 54). If the memory becomes completely full or your phone does not have enough memory to receive an incoming message, new messages are rejected.

Accessing messages


1 Push twice from the standby display.

The Message menu appears, indicating the number of the following types of messages, respectively:


- Voice mail messages (see page 48).
- Unread text messages and pagers (see page 49).
- Text messages and pagers that you have already read but are still stored in memory (see page 51).

Reading voice mail notification messages [F11]

1 Push to select "Voice" from the Message menu.

The Voice display appears, indicating the number of voice messages stored in your voice mailbox. Press  to go back to the Message menu.

2 Turn to scroll through the message.

A hollow box () indicates the end of the message.


To dial a callback number

1 After reading a voice mail notification message, open the arm microphone if it is closed. If the arm microphone is open, push to see the Options menu.

2 Push again to dial the callback phone number.

The phone dials the callback phone number which is attached to the message.

Tip

In addition, you can dial the callback number by pressing  from the Messages display or when reading a voice mail notification message if the arm microphone is open.

To erase a voice message

- 1 After reading a voice mail notification message, push .



The Options menu appears.

- 2 Turn  to select "Erase Msg," then push .

The voice mail notification message is erased. The Message menu reappears, indicating that there are currently no voice mail notification messages stored in memory.

Reading new text messages [F12]

You can read both new and old messages stored in memory. Urgent messages are listed above non-urgent ones, with the most recent entries first. After reading messages, you can protect or erase them.

 
- 1 Turn  to select "New Text" from the Message menu, then push .

The first message is displayed. An asterisk (*) indicates an urgent message. If there are no new messages, this is indicated on the display. Push  to return to the Message menu.

2 Turn to scroll through the message.

If you do not scroll, the display automatically scrolls down. A hollow box (□) indicates the end of the message.

3 To proceed to the next message, push when you reach the end of the message.

The Options menu appears. To return to the standby display, press .

4 Turn to select "Next Msg," then push .

The next message is displayed. If there are no more messages, the Message menu reappears.

To return to the previous message

In step 4 above, select "Prev Msg" from the Options menu.

Note

Once you reach the end of the message and go to the next message, the previous message is stored as an old message.

Reading old text messages [F13]

The most recent messages are listed first.

- 1 Turn ☉ to select "Old Text" from the Message menu, then push ➡ .**

A list of old messages is displayed. A dot (•) indicates the beginning of each message. A lock icon (🔒) indicates that the message is locked (see page 69). If a number is too long to fit, an ellipsis (...) is used.

- 2 Turn ☉ to scroll through the list of old messages.**

- 3 To read the selected message, push ➡ .**

The selected message is displayed.

- 4 Turn ☉ to scroll through the message.**

If you do not scroll, the display automatically scrolls down to the end of the message, which is indicated with a hollow box (□).

- 5 When you have read the message, press CLR to return to the list of old messages.**


To read the next message, push ➡ to go to the Options menu, then select "Next Msg." To read the previous message, push ➡ to go to the Options menu, then select "Prev Msg."

To protect a text message

You can lock a message to protect it from being erased.

1 After reading a message, push .

The Options menu appears.

2 Turn  to select "Lock Msg," then push .

A message indicates that the message is now locked.

Note

The phone does not erase locked messages automatically. When there is not enough memory for incoming messages, you must erase the locked messages manually.

To respond to a text message

1 After reading a text message, open the arm microphone if it is closed.

2 If the arm microphone is open, push  to see the Options menu. Turn  to select "Send," then push .

The phone dials the callback phone number which is attached to the message. If a callback number is not attached to the message, no call is made and a message indicates that a callback number is not available.

Tip

In addition, when viewing a text message or the list of old messages, you can dial the callback phone number simply by opening the arm microphone, or pressing **SEND** when the arm microphone is already open.

To save the callback number

1 After reading a message, push **→**.

The Options menu appears.

2 Turn **⏪** to select "Save Number," then push **→**.


A message appears, prompting you for a name to accompany the number.



3 Use the number buttons to enter the name.

If you press the same button in quick succession, the letter you just entered changes. (See the "Alphanumeric table" on page 29.) Use ***←**/**#→** or **⏪** to move the cursor and to insert spaces between characters. If you enter the wrong character, press **CLR** to clear the character highlighted by the cursor.


4 When you are finished, push **→** to store the phone number and name.

A confirmation message appears.

5 Push  to store the new number in the first available memory location.

If you want to store it in another location, turn  to select the desired location, then push . A confirmation message appears, followed by the status of the Phone Book.

To erase a text message



1 After reading a text message, push .

The Options menu appears.

2 Turn  to select “Erase Msg,” then push .


The message is erased.

Erasing all old text messages [F14]

1 Turn  down to select “Erase Old” from the Message menu, then push .

The Erase Old menu appears.


2 Press  to erase all old messages.

To go back to the Message menu without erasing the messages, push . If you erase all old messages, it will be indicated on the Message menu.

Adjusting the volume

You can adjust the volume of the ringer, keybeep, and earpiece on the Sounds menu. In addition, you can select the type of sounds heard when the phone rings and when you press buttons. (See page 21 for instructions on how to reach the Sounds menu.)

Adjusting the ringer volume [F21]

1 Push  to select “Ringer Vol” from the Sounds menu.

The Ringer Vol. menu appears.

2 Turn  up to raise the ringer volume, and down to lower it.

You can select from six ringer volume settings: “off,” “low,” “med.” (medium), “high,” “escalate,” and “vibration.”

3 Push  to enter the new setting.

The standby display reappears.

If you turn off the ringer volume

The message “-Ringer Off-” is displayed at the top of the screen when the standby display appears.


Tips



- If you set the ringer volume to “escalate,” the telephone rings twice at a low volume, then once at medium volume, and thereafter at a high volume.
- If you set the ringer volume to “vibration,” the telephone emits a vibration instead of an audible ring.

(continues)

-
- If the telephone is used in conjunction with a hands-free car kit or a portable hands-free car kit, the “vibration” setting is not available.
 - If the telephone is connected to a wall outlet and the ringer volume is set to “vibration,” the telephone emits an audible ring at the “high” setting instead.

Muting/unmuting the microphone [F22]

You can mute/unmute the phone during a call directly, without using the Sounds menu by pushing and holding . In addition, you can mute/unmute the microphone during a call using the Sounds menu. This feature is disabled in standby mode.

- 1 During a call, turn  to select “Sounds” from the Features menu, then push .**

The Sounds menu appears.

- 2 Push  to select “Mute/UnMute.”**

Now the microphone is muted.

- 3 To unmute the microphone, push .**



The Sounds menu reappears.

- 4 Push  to select “Mute/UnMute.”**

Now the microphone is unmuted.

Adjusting the keybeep volume [F23]

You can adjust the volume of the beep that sounds when you press a button.

- 1 Turn  to select “Keybeep Vol” from the Sounds menu, then push .**

The Keybeep Vol menu appears.

- 2 Turn  up to raise the keybeep volume, and down to lower it.**



You can select from four keybeep volume settings: “off,” “low,” “med.” (medium), and “high.”

- 3 Push  to enter the new setting.**

The standby display reappears.

Adjusting the earpiece volume [F24]

You can adjust the earpiece volume during a call by turning . In addition, you can adjust the volume as follows:

- 1 Turn  to select “Earpiece Vol” from the Sounds menu, then push .**

The Earpiece Vol menu appears.

- 2 Turn  up to raise the earpiece volume, and down to lower it.**



There are seven earpiece volume settings ranging from “1” to “7.” A higher number indicates higher volume.

- 3 Push  to enter the new setting.**

The standby display reappears.


Setting the ringer type [F25]

You can set the type of beep that sounds for an incoming call.

- 1 Turn  to select “Ringer Type” from the Sounds menu, then push .**

The Ringer Type menu appears.

- 2 Turn  to select the ringer type.**



You can select from five different ringer settings. The ringer sounds every time you turn .

- 3 Push  to enter the new setting.**

The standby display reappears.

Setting the keybeep type [F26]

You can set the beep that sounds when you press a button to either a tone or a click. Tones sound similar to DTMF tones, and clicks are indicated by single beeps.

- 1 Turn  to select “Key Sound” from the Sounds menu, then push .**

The Key Sound menu appears.

- 2 Turn  to select the keybeep type.**

You can select “tones” or “clicks.”

- 3 Push  to enter the new setting.**



The standby display reappears.

Note

DTMF tones are sent to the other party during a call even if you set the keybeep type to “clicks.”

Setting the keybeep length [F27]

You can set the length of the beep that sounds when you press a button. This setting affects both the keybeep feedback and DTMF transmission tones. The phone sends a short DTMF burst (default) or plays every tone of the DTMF signal as long as the key is held down.

- 1 Turn  to select "Beep Length" from the Sounds menu, then push .**

The Beep Length menu appears.

- 2 Turn  to select the keybeep length.**

You can select "standard" or "long."

- 3 Push  to enter the new setting.**

The standby display reappears.

Checking and setting the timers

You can check call durations on the Timers menu. In addition, you can set the phone to alert you every minute of a call, and make the phone turn itself off automatically.

Checking the duration of all calls [F31]

You can view the total duration of all calls. This information cannot be reset.

- 1 Turn **☎** to select "All Calls" from the Timers menu, then push **➡**.

The All Calls display appears.

- 2 Push **➡** to go back to the standby display.

Checking and resetting the duration of recent calls [F32]

You can view the total duration of the most recent calls.

- 1 Turn **☎** to select "Recent Calls" from the Timers menu, then push **➡**.

The Recent Calls display appears.

- 2 Press **1** to reset, or hold down **CLR** to go back to the standby display.

If you choose to reset, the counter of recent calls and the corresponding durations are reset.

Setting the minute alert [F33]

You can set the phone to alert you ten seconds before every full minute.

- 1 Turn **☎** to select "Minute Alert" from the Timers menu, then push **➡**.

The Minute Alert menu appears.

2 Turn to select the desired alert time.

You can select from four settings: “off,” “before min,” “each min,” and “every 5 min.” If you select “before min,” the phone alerts you 10 seconds before every full minute.

3 Push to enter the new setting.

The standby display reappears.

Setting the phone to automatically turn off [F34]

You can set the phone to automatically turn itself off after a specified duration.

1 Turn to select “Auto-Off” from the Timers menu, then push .

The Auto-Off menu appears.

2 Turn to select the duration before the phone powers off automatically.

You can select from “never,” “in 3 hours,” “in 2 hours,” “in 1 hour,” and “in 30 mins.” If you select “never,” the phone does not turn itself off automatically.

3 Push to enter the new setting.

A confirmation message appears.

Notes

- If you press any button or operate the Jog Dial™ navigator, the timer is reset and the countdown starts over.
- The phone does not turn itself off automatically during a call.
- If the Auto-Off timer is set, the phone turns off after a user-specified duration and the countdown “Off:xx:xx:xx” is displayed.
- Once the phone turns off, the setting will revert to “never.”

Using the Directory

You can use the Directory menu to check your phone number, as well as store, erase, and edit phone numbers and names in the Phone Book. Also, you can use this menu to view the Calls List.

Checking your phone number [F41]

- 1 Push  to select "My Number" from the Directory menu.**



The My Phone # display appears, showing your phone's number.


- 2 Push  to exit this feature.**

The standby display reappears.

Storing phone numbers [F42]

For quick and easy dialing, the Phone Book allows you to store up to 99 phone numbers.

- 1 Turn  to select "Save" from the Directory menu, then push .**




- 2 Use the number buttons to enter the phone number, then push .**

The Options menu appears. (See the "Alphanumeric table" on page 29.)

- 3 Turn  to select "Save," then push .**

A message appears, prompting you for a name to accompany the number.



4 Use the number buttons to enter the name.

Use / to move the cursor or to insert spaces between characters. If you enter the wrong character, press  to clear the character highlighted by the cursor. (See the “Alphanumeric table” on page 29.)

5 When you are finished, push to store the phone number and name.

A message appears, prompting you to specify the new memory location.

6 Push to store the new number in the first available memory location.

If you want to store it in another location, turn  to select the desired location, then push . A confirmation message appears, followed by the status of the Phone Book.

Tip

In addition, you can use the Options menu to store Phone Book numbers (see page 27).

Erasing a phone number [F43]

You can erase stored Phone Book entries. If the selected entry is restricted, you must enter the four-digit lock code to erase it (see page 74).

1 Turn **⏪** to select “Erase” from the Directory menu, then push **➡**.

A message appears, prompting you for the Phone Book entry to be erased.

2 Turn **⏪** to select the entry you want to erase, then push **➡**.

A message appears, prompting you to confirm that the selected Phone Book entry should be erased. In addition, you can use the number buttons to select the entry to be erased.

3 Push **➡** again.



The selected entry is erased. After a few seconds, the standby display reappears.


Tips


- Also, you can use the Options menu to erase one Phone Book entry at a time (see page 33).
- Use the Security menu to erase all Phone Book entries at once (see page 76).



Editing stored information [F44]

You can edit the name, phone number, and memory location of specific entries stored in the Phone Book. If the selected entry is restricted, you must enter the four-digit lock code to edit it (see page 74).


-
- 1 Turn  to select "Edit" from the Directory menu, then push .**

A message appears, prompting you for the Phone Book entry to be edited.
 - 2 Turn  to select the entry that contains the information you want to edit.**

In addition, you can use the number buttons to select the entry to be edited. A message appears, prompting you to confirm that the selected Phone Book entry should be edited.
 - 3 Push  again.**

The Edit menu appears.
 - 4 Turn  to select the item you want to change, then push .**

You can change the name, phone number, or memory location by selecting "Name," "Phone #," or "Location #," respectively. The stored information that corresponds to the selected item appears.
 - 5 Enter the new information.**

The old information is overwritten.
 - 6 When you are finished, push .**

The Options menu reappears when you edit the phone number. New information is saved when you edit the name or memory location.

7 Turn **↻** to select “Save,” then push **➡**.

A message appears, confirming that your changes have been saved.

Tip

In addition, you can use the Options menu to edit Phone Book entries (see page 31).

Searching the Phone Book by name [F45]

You can find name entries in the Phone Book by searching alphabetically or for a string of characters.

Tip

In addition, you can use the Options menu to search the Phone Book by names (see pages 38 and 39).

To search alphabetically

When you enter only one character, the phone lists all entries that begin with the entered character.

1 Turn **↻** to select “Find Name” from the Directory menu, then push **➡**.

The Search display appears, prompting you for a search string.

2 Enter only the first letter of the name you want to find.

3 Push **➡**.

All Phone Book entries are displayed alphabetically, starting from the ones that begin with the entered character.

4 Turn **↻** to view the next entry.

To search for a string of characters

When you enter two or more characters, the phone searches for entries that contain the entered string. The results are displayed starting from the lowest memory location number.

1 Turn to select "Find Name" from the Directory menu, then push .

The Search display appears, prompting you for a search string.

2 Enter at least two characters.

3 Push .

The entries containing the selected string are displayed starting from the lowest memory location number.

4 Turn to view the next entry.

Searching the Phone Book by memory location [F46]

You can find memory locations easily.

1 Turn to select "Phone Book" from the Directory menu, then push .

A message appears, prompting you for a search string.

2 Use the number buttons to enter the memory location number.

The Phone Book entry that matches the search string is displayed.

If the selected entry is empty, the display shows the message "Phone Book storage location XX is empty." After a few seconds, the standby display reappears.

Tips

- You can also use the Options menu to find Phone Book memory locations (see page 39).
- You can also turn **⏪** to scroll through the entire Phone Book instead of entering the memory location number in step 2.

Viewing the Calls List [F47]

You can view Calls List entries easily.

1 Turn **⏪ to select “Calls List” from the Directory menu, then push **➡**.**

If the Calls List is empty, the display shows the message “Calls List is empty.”

2 Turn **⏪ to view the Calls List entries.**

The most recent entry is displayed first. To view the rest of the ten most recent entries, turn **⏪**.

Tip

You can also view the Calls List from the standby display (see page 41).


To place a call

Press **SEND** in step 2. You can also push **➡** to go to the Options menu, then select “Send” and push **➡**.


Extra features

On the Extras menu, you can set the phone to enable touch dialing, redial automatically, and answer incoming calls automatically or at the press of any button. Also, you can use this menu to lock the keypad and to jot down phone numbers.

 


Preventing accidental operation [F51]

When the microphone is closed, you can lock the keypad by pushing and holding  from the standby display. Locking the keypad offers low-level security. For example, it disables accidental dialing when you keep the phone in your pocket.

1 Turn to select “Key Guard” from the Extras menu, then push .

A message appears, confirming that the keypad is locked. After a few seconds, the standby display reappears. The keypad lock icon () and the text “Keyguard On” indicates that the keypad is locked.

To unlock the keypad

Open the arm microphone or press ,  and  in quick succession.

To answer an incoming call when the keypad is locked



Just open the arm microphone. You do not need to unlock the keypad.

Tips

- You can lock the keypad even when the phone itself is locked (see page 74).
- The backlight and keybeeps are turned off when the keypad is locked.

Activating touch dialing [F52]

If you want to use the touch dialing feature (see page 37), set to “on.”

- 1 Turn  to select “Touch Dial” from the Extras menu, then push .**

The Touch Dial menu appears.



- 2 Turn  to select “on” or “off.”**

- 3 Push  to enter the new setting.**

The standby display reappears.

Setting the phone to redial automatically [F53]

You can set the interval for redialing. If the attempt to dial is not successful, the phone tries to redial it up to five times every three seconds.

- 1 Turn  to select “Auto-Retry” from the Extras menu, then push .**

The Auto-Retry menu appears.

- 2 Turn  to select “on” or “off.”**



If you select “off,” the phone does not try to redial automatically.

- 3 Push  to enter the new setting.**

The standby display reappears.

Setting the phone to answer automatically [F54]

You can set the phone to answer calls automatically. If you turn auto-answering on, the phone answers incoming calls on the second ring when the phone is used in conjunction with a hands-free car kit or a portable hands-free car kit.

- 1 Turn  to select "Auto-Answer" from the Extras menu, then push .**

The Auto-Answer menu appears.

- 2 Turn  to select "on" or "off."**



- 3 Push  to enter the new setting.**

The standby display reappears.

The message "-AutoAnswer-" is displayed on the standby display when you select "on" and the phone is in the hands-free car kit.

Using the scratch pad [F55]

Your phone has a scratch pad feature, which is useful for writing down phone numbers temporarily. The phone doesn't send DTMF tone when you enter digits to the scratch pad.



1 Turn  to select "Scratch Pad" from the Extras menu, then push .

The Scratch Pad display appears, prompting you to enter a phone number.

2 Use the number buttons to enter the digits.

3 Push .

The Options menu appears. Besides storing digits, you can enter hyphens, pauses, and links (see page 30).

4 Turn  to select "Store&Exit," then push .

The information is stored as a scratch pad entry in the Calls List. When the Calls List reaches more than 10 list items, the oldest entries will be deleted as needed to make room for new entries.

Setting security options

You can restrict unauthorized access to your phone and the information it holds. Also, on the Security menu, you can reset menu settings to default and store emergency numbers. Unlike other items on the Features menu, accessing the Security menu requires a lock code when you select it from the menu. A typical default lock code is either the last four digits of your phone number or 0000.

Preventing others from using your phone [F61]

This option lets you set when the phone will be locked. When the phone is locked, carrying out most operations requires entering the lock code; you can still answer incoming calls and dial 911 or other stored emergency numbers.

1 Push to select "Lock Phone" from the Security menu.

The Lock Phone menu appears.

2 Turn to select when the phone will be locked.

You can select "never," "on power-up," or "right now." If you select "never," the phone is available for use at any time without a lock code. If you select "on power-up," the phone is locked every time you turn it on.

3 Push to enter the new setting.



The standby display reappears. The message ":Unlock" indicates that the phone is locked.

To unlock the phone

On the standby display, push . When prompted, enter the lock code.

Setting a new lock code [F62]


The lock code must be entered every time you want to unlock the phone, and also when you want to access restricted numbers.

- 1 Turn  to select “New Code” from the Security menu, then push .**

The Enter New Code display appears, prompting you to enter a new lock code.

- 2 Use the number buttons to enter a lock code.**

The lock code must be exactly four digits long.

- 3 Push  to store the new lock code in memory.**



A confirmation display appears.

Note


Keep a record of your lock code. If you forget it, contact your service provider.

Restricting a Phone Book entry [F63]

You can restrict access to individual Phone Book entries.

- 1 Turn  to select “Restrict #” from the Security menu, then push .**

A message appears, prompting you to specify Phone Book entry to restrict.

- 2 Turn  to select the Phone Book entry that you want to restrict.**

- 3 Push  to restrict the selected entry.**

Now the selected entry is restricted.

To unrestrict an entry

To select the entry you want to unrestrict, follow the procedure above for restricting an entry.

Notes





- The phone number of a restricted entry is not displayed when you view the Phone Book and make a call.
- Restricted entries are not listed or displayed after a digit string search (see pages 39 and 67).
- Calling, editing, and erasing a restricted entry requires the four-digit lock code.

Tip

Also, you can use the Options menu to restrict/unrestrict Phone Book entries (see page 34).

Restricting all Phone Book entries [F64]

You can restrict access to all Phone Book entries. All operations that involve Phone Book entries require the four-digit lock code (see page 74).



- 1 Turn  to select "Restrict All" from the Security menu, then push .**
The Restrict All menu appears.
- 2 Turn  to set restriction of all Phone Book entries on or off.**
- 3 Push  to enter the new setting.**
The standby display reappears.

Note



If you restricted some entries by using "Restrict #," they are still restricted when you turn off "Restrict All."

Reverting to default settings [F65]

You can reset all menu settings to the defaults. This does not affect Phone Book or Calls List entries.

- 1 Turn  to select "Master Reset" from the Security menu, then push .**



The Master Reset display appears.

- 2 Press  to revert to the factory defaults, or push  to keep the current settings.**



If you revert to the factory defaults, all your custom menu settings are erased.

Erasing all Phone Book entries [F66]

You can erase all Phone Book entries at once.

- 1 Turn  to select "Erase Book" from the Security menu, then push .**

The Erase Book display appears.

- 2 Press  to erase all Phone Book entries, or push  to quit without erasing.**

If you erase all entries, a message appears to confirm this.

Erasing all Calls List entries [F67]

You can erase all Calls List entries at once.

1 Turn ☉ to select “Erase Calls” from the Security menu, then push ➔ .
The Erase Calls display appears.

2 Press 1 to erase all Calls List entries, or push ➔ to quit without erasing.
If you erase all entries, a message appears to confirm this.

Storing emergency numbers [F68]

You can use the Security menu to store up to three emergency numbers other than 911 (which you cannot erase). You can call these numbers even when the phone is locked.

1 Turn ☉ to select “Emergency #” from the Security menu, then push ➔ .
The first Emergency # display appears.

2 Turn ☉ to select the emergency memory location, then push ➔ .
A message appears, prompting you to enter the phone number for the emergency entry.

3 Use the number buttons to enter the number.

4 Push ➔ to store the emergency number.

The entered emergency number is stored in memory. To store other emergency numbers, repeat the above procedure. To go back to the standby display, hold down CLR .

Setting display options

You can use the features on the Display menu to change the appearance of the on-screen display.

Setting the banner [F71]




You can change what the banner reads.

1 Push  to select “Banner” from the Display menu.

The Banner display appears. The current banner text is displayed.

2 Push  again to start editing.

A message appears, prompting you to enter a new banner.

3 Use the number buttons and / or  to enter the new banner text.



The banner can be up to 12 characters long. For details on character entry, see the “Alphanumeric table” on page 29.

4 Push  to save the new banner.


The standby display reappears. Your new banner is displayed.

Setting the backlight [F72]

You can adjust the duration of the backlight on the display and keypad.

- 1 Turn  to select "Backlight" from the Display menu, then push .**

The Backlight menu appears.

- 2 Turn  to select how long the backlight is on after the last press of a button.**

You can select "for 15 secs," "for 7 secs," or "off." If the phone is used in conjunction with a hands-free car kit, a cigarette lighter adapter, or a single- or dual-slot battery charger, the added option of "always on" leaves the backlight on.

- 3 Push  to enter the new setting.**

The standby display reappears.

Setting autohyphenation [F73]

You can turn the autohyphenation feature on and off. If you turn it on, entered numbers are hyphenated according to the North American Numbering Plan (eleven digits which include a long distance identifier, an area code, a three-digit community code, and a four-digit location code, e.g., 9-999-999-9999).

1 Turn ☉ to select "Auto-Hyphen" from the Display menu, then push ➡ .

The Auto-Hyphen menu appears.

2 Turn ☉ to select "on" or "off."

3 Push ➡ to enter the new setting.



The standby display reappears.

Note


Autohyphenation is not fully deactivated when a pause or link is entered. All entered hyphens up to the pause/link will remain.

Sorting the Phone Book [F74]

You can determine how the Phone Book will be displayed, and also set the phone to sort the entries either alphabetically or by memory location.

- 1 Turn  to select "Sort Book" from the Display menu, then push .**

The Sort Book menu appears.

- 2 Turn  to set the sorting preferences.**



You can choose to sort the Phone Book "by Loc. #" (by location) or "alphabetic" (alphabetically).

- 3 Push  to enter the new setting.**

The standby display reappears.

Setting the menu length [F75]

You can set the menu length (long or short). The short menu displays only the most common items on the Features menu; the long menu displays all items.

1 Turn  to select “Menu Length” from the Display menu, then push .

The Menu Length menu appears.

2 Turn  to set the menu length.

You can select “short” or “long.”

3 Push  to enter the new setting.

The standby display reappears.

Items on the short menu



The short menu contains the following items:

- Message (see page 46)
- Ringer Vol. (see page 55)
- My Number (see page 62)
- Saved #s (see pages 35, 38, 41)
- Lock Phone (see page 73)
- Long Menu (see page 90)

Note

The item “Saved #s” contains the items “Find Name” (see page 38), “Phone Book” (see page 35), and “Calls List” (see page 41).

To return to the long menu

On the short menu, turn  to select “Long Menu,” then push .

Adjusting network settings

On the Network menu, you can set the phone to alert you when the roaming status changes, when a call is dropped, or when enhanced voice privacy is lost.

Setting the roaming alert [F81]

Your phone is roaming when you use it outside of the home area. Roaming access to a different carrier and the types of calls you can make varies with the agreement between your “home” carrier and the currently serving carrier. Check with your service provider for details about roaming in a specific area.

1 Push to select “Roam Alert” from the Network menu.

The Roam Alert menu appears.

2 Turn to select “on” or “off.”


3 Push to enter the new setting.

The standby display reappears.

When you enter another service area

The roaming icon () appears on the display. A beep accompanies the icon if you have turned the roam alert on.

If you leave any valid service area

A message appears, indicating that you are outside the area serviced by your “home” carrier or other valid service areas. The out-of-service icon () also appears.

Setting the drop alert [F82]

If the signal fades, your phone may drop the ongoing call. You can choose to be alerted by an audible alarm when a call is dropped.

1 Turn  to select "Drop Alert" from the Network menu, then push .


The Drop Alert menu appears.

2 Turn  to select "on" or "off."

3 Push  to enter the new setting.





The standby display reappears.

When a call is dropped

The roaming icon () appears on the display. A beep accompanies the icon if you have turned the drop alert on.

Setting the voice privacy alert [F83]

A display appears to indicate if enhanced voice privacy is lost during a call. You can choose to have an audible alarm accompany this display.

- 1 Turn  to select "Priv. Alert" from the Network menu, then push .**
The Priv. Alert menu appears.
- 2 Turn  to select "on" or "off."**
- 3 Push  to enter the new setting.**
The standby display reappears.

If enhanced voice privacy is lost

A message appears, and is accompanied by a beep if you have turned on the voice privacy alert.

When enhanced voice privacy is regained



A message appears, and is accompanied by a beep when enhanced voice privacy is regained and you have turned on the voice privacy alert.

Note



The network automatically turns on enhanced voice privacy if it is available. You do not have to change your phone settings. For details, contact your service provider.


 
Activating phone services (OTASP) [F84]

You can use the OTASP (Over-The-Air Service Provision) activation feature to self-activate your phone with a new service. Contact your service provider to see if this service is available in your area.

- 1 Turn  to select "Activation" from the Network menu, then push .**

The Activation menu appears.



- 2 Turn  to select which system block to activate the service on, then push .**

A message appears, prompting you for confirmation. To go back one step, press . To cancel activation and return to the standby display, press .

- 3 Press  to confirm.**

The phone calls up a service provider. When a service provider is contacted, you will be connected to an operator. When activation is complete, the message "Activation is complete!" appears, followed by the standby display.

If activation fails

The message "Activation has failed" appears. Push  to retry, or press  to return to the standby display.

Specifications

Frequency range

Transmit: 1851.25 to 1908.75 MHz

Receive: 1931.25 to 1988.75 MHz

Dimensions

3.6 × 2.4 × 1.0 inches (h/w/d)

(not including antenna)

(91 × 62 × 26 mm)

Mass (weight)

Approx. 5.3 oz (150 g)

(including battery)

RF power output

0.01 μW to 300 mW

Operational temperature

-22°F to +140°F

(-30°C to +60°C)

(excluding battery pack)

Supplied accessories

QN-029BPL Li-Ion Battery Pack (1)

QN-001AC AC Adapter (1)

Hand strap (1)

Optional accessories

QN-008CLA Rapid Charging Cigarette

Lighter Adapter

QN-009TA Travel Adapter

QN-012DA Data Cable

QN-020TCL Travel Adapter/Cigarette

Lighter Adapter

QN-021BCD Dual Slot Battery Charger

QN-023DCS Desktop Charger Speakerphone

QN-024HC Auto Travel Holder

QN-025PHK Portable Hands-Free Car Kit

QN-026HS Phone Holster

QN-027LC Carrying Case

QN-028SKT Starter Kit

QN-029BPL Li-Ion Battery Pack

QN-030HFK Hands-Free Car Kit

Call 1-800-488-SONY (7669) to order additional accessories (USA only).

Design and specifications are subject to change without notice.

Troubleshooting

Problem	Cause/Remedy	Page
Nothing appears on the display.	• The phone is off. Turn the phone on.	20
	• Battery is fully discharged. Recharge the battery.	17
The out-of-service icon (✕) appears.	• The phone is outside the service area, or the signal is too weak. Extend the antenna fully.	21
Nothing happens when you press the buttons.	• The buttons may be locked.	69
	• The phone may be locked. Enter the lock code to unlock the phone.	74
The call does not go through.	• Check the signal strength.	20
	• If the ✕ icon is displayed, there is no service. See above.	21
	• Check the number.	23
	• Press SEND .	23
	• Listen for a busy signal.	—
You can hear the other party, but the other party cannot hear you.	• The microphone may be muted. Unmute the microphone.	24, 56
You hear the other party only faintly.	• Adjust the earpiece volume. If possible, also reduce the noise around you.	24, 57

Problem	Cause/Remedy	Page
The call is cut off (“dropped”).	<ul style="list-style-type: none"> You could be outside the coverage area. Redial the number. If the problem continues, contact your carrier. Also see “The out-of-service icon (⌘) appears” on page 88. 	21
You hear an alternate high/low tone.	<ul style="list-style-type: none"> You are attempting to use the phone in an area without service. 	21
	<ul style="list-style-type: none"> Extend the antenna fully. 	20
	<ul style="list-style-type: none"> Let the ⌘ icon disappear, then try to dial. 	21
You forgot the lock code.	<ul style="list-style-type: none"> Try 0000, 1234 (commonly used as defaults), or the last four digits of your own number. 	74
	<ul style="list-style-type: none"> See your authorized dealer or service provider. 	—
You hear a fast busy tone.	<ul style="list-style-type: none"> This can result from any one of the following: <ul style="list-style-type: none"> The phone is improperly programmed. 	—
	<ul style="list-style-type: none"> The phone is out of range. 	21
	<ul style="list-style-type: none"> All channels are busy. 	—
	<ul style="list-style-type: none"> The antenna is broken or damaged. 	20
You cannot place or receive calls.	<ul style="list-style-type: none"> Make sure that the phone is turned on, and that the out-of-service icon is not displayed. 	20
	<ul style="list-style-type: none"> Check the system settings. If you are roaming, consult your service provider concerning roaming agreements. 	83

List of menu items

This section lists the Features menu and its submenus. Use these to set the various parameters that pertain to the operation of the phone. For details on how to navigate from one menu to another, see “About the Menu” on page 44.

Menu Item	Settings	Page
F11 Voice	—	48
F12 New Text	—	49
F13 Old Text	—	51
F14 Erase Old	—	54
F21 Ringer Vol.	off / low / medium / high / escalate / vibration	55
F22 Mute/UnMute	mutes or unmutes the microphone	56
F23 Keybeep Vol	off / low / medium / high	57
F24 Earpiece Vol	1 / 2 / 3 / 4 / 5 / 6 / 7	57
F25 Ringer Type	standard / option 1 to 4	58
F26 Key Sound	tones / clicks	58
F27 Beep Length	standard / long	59
F31 All Calls	total call time, number of calls	60
F32 Recent Calls	total call time, number of calls	60
F33 Minute Alert	off / before min. / each min. / every 5 min	60
F34 Auto-Off	never / in 3 hours / in 2 hours / in 1 hour / in 30 mins	61
F41 My Number	—	62
F42 Save	—	62
F43 Erase	—	64

Menu Item	Settings	Page
F44 Edit	—	64
F45 Find Name	—	66
F46 Phone Book	No default entries	67
F47 Calls List	No default entries	68
F51 Key Guard	—	69
F52 Touch Dial	on / off	70
F53 Auto-Retry	on / off	70
F54 Auto-Answer	on / off	71
F55 Scratch Pad	—	72
F61 Lock Phone	never / on power-up / right now	73
F62 New Code	0000	74
F63 Restrict #	No default numbers	74
F64 Restrict All	on / off	75
F65 Master Reset	—	76
F66 Erase Book	—	76
F67 Erase Calls	—	76
F68 Emergency #	No defaults for #1 to #3	77
F71 Banner	No default banner	78
F72 Backlight	off / for 7 secs / for 15 secs / always on	79
F73 Auto-hyphen	on / off	80
F74 Sort Book	by loc. # / alphabetic	81
F75 Menu Length	long / short	82
F81 Roam Alert	on / off	83
F82 Drop Alert	on / off	84
F83 Priv. Alert	on / off	85
F84 Activation	—	86

Glossary

A

Automatic answer

Feature that automatically answers calls.

Automatic retry

Feature that automatically redials a call when a "System Busy" indication is received.

B

Banner

Message at the top of the standby display.

C

Calls List

See "Phone Book."

Carrier

A company that provides PCS telephone service.

CDMA

Code Division Multiple Access. A spread-spectrum approach to digital transmission. With CDMA, each conversation is digitized, and then tagged with a code. The mobile phone receives only the signal with the appropriate code.

Coverage area

The geographic area covered by one carrier. If you travel outside a carrier's area, you cannot receive service from that carrier. Also see "Roam."

D

Dropped call

A call terminated because of a deep, long fade or because the user left the coverage area.

DTMF

Dual Tone Multiple Frequency, also known as “touch-tone.” Tone generated when you press a telephone button (number, *, or #). Can be used to access answering machines, pagers, telephone banking services, data services, and other electronic services.

E

ESN

Electronic Serial Number. The unique identification number of your telephone. The telephone transmits this number to the base station every time a call is placed.

Emergency number

In addition to the general emergency number (911 for the U.S.A. and Canada), three phone numbers can be stored as emergency numbers in your telephone. You can dial these numbers and 911 even when the phone is locked.

H

Home area

The area of the home system to which you subscribe.

I

Incoming call

A call received by your telephone.

L

Lock

Prevents unauthorized calls by requiring the user to enter a code to use the phone. Even if the phone is locked, you can call any of the emergency numbers or answer incoming calls.

M

Memory

A storage area for names and phone numbers. Also see "Phone Book."

Menu

The menu allows you to change or see the settings of your phone. You can access it from the standby display or during a call. See "List of menu items" on page 90 for an overview of this feature.

Minute alert

This alert beeps periodically during a call to help you keep track of the length of the call.

N

NAM

Number Assignment Module. Portion of your telephone's memory programmed to contain information about your subscription to the carrier. Your telephone can have up to two NAM's.

P

Pause

You can enter pause codes in the phone number memory data. Use this feature when accessing an answering machine, voice mail system, electronic banking system, etc. When a pause is inserted between two groups of digits, the phone will pause before dialing the next set of digits, allowing you to wait until your counterpart is ready to accept the string.

Phone Book

You can store up to 99 numbers in Phone Book memory, location number 01 to number 99. An additional recent number memory (Calls List) stores the last ten used phone numbers.

R

Roam

Your phone is roaming when you use it outside of the home area. Availability of roaming access to a different carrier and types of calls you can make varies with the agreement between your home carrier and serving carrier. Check with your carrier for details about roaming in a specific area.

S

Scratch pad

Allows you to enter a number and store it in the Calls List.

Service area

Region covered by a PCS service. Also see "Coverage area."

SMS

Short Messaging Service. An extended service offered by carriers that allows you to receive text messages on your phone. Check with your carrier for details.

Speed dialing

Making a call using Phone Book memory locations. Also see “Phone Book.”

T

Touch dialing

A quick way of making a call using a number stored in a Phone Book memory location. Also see “Speed dialing.”

Touch-tone

See “DTMF.”

V

Voice mail

An extended service, offered by carriers, that allows you to retrieve voice mail messages stored in your voice mailbox. Check with your carrier for details.

Volume

You can adjust the volume of keybeep, ringer, and earpiece.

Index

A

- AC adapter 11, 17
- Antenna 20
- Arm microphone 12
- Automatic
 - Answer 71
 - Hyphenation 80
 - Retry 70
 - Redial 70

B

- Backlight 79
- Banner 78
- Battery pack
 - Charging 16
 - Checking 19
 - Attaching/
removing 16
- Battery charge
contacts 17
- Battery pack
release tab 13
- Battery icon 15, 17

C

- Calling
 - Calls List 41, 68
 - Dropped call 84
 - Ending calls 23, 25
 - Making calls 23
 - Receiving calls 25
 - Recent number 41
 - Redialing 24, 70
 - Restrictions 34, 74
 - Roaming 83
 - Speed dialing 37
 - Touch dialing 37, 70
- Carrier 83, 86
- CDMA (Code Division
Multiple Access) 6
- Character display 14

- Clearing. *See* Deleting
- Coverage area 83
- Cursor 28, 63

D

- Dialing. *See* Calling
 - Deleting
 - Calls List entries 77
 - Characters 28, 63
 - Message 54
 - Phone Book
 - entries 33, 64
 - Phone numbers 33, 64
 - Voice mail 48
 - Digital icon 14
 - Display 14
 - Display settings
 - Accessing 44
 - Autohyphenation 80
 - Backlight 79
 - Banner 78
 - Time 60
 - Displays
 - Calling 23
 - Menu 21
 - Hyphens/pauses/
links 30
 - Menu setting 82
 - Security 73
 - Standby 21
 - Dropped call 84
 - DTMF (Dual Tone Mul-
tiple Frequency) 43
- ## E
- Earpiece 24, 57
 - Editing
 - Emergency
numbers 77
 - Phone numbers 31, 64
 - Emergency
numbers 77

-
- Enabling
 - Lock 69
 - Touch dialing 70
 - Ending a call 23, 25
 - Entering
 - Hyphens 30
 - Links 30
 - Pauses 30
 - Erasing. *See* Deleting
 - ESN (Electronic Serial Number) 93
 - Extra features
 - Accessing 69
 - Changing DTMF transmission 58
 - Enabling touch dialing 70
 - Muting the microphone 56
 - Using the scratch pad 71
 - Setting auto-answer 71
 - Setting auto-retry 70
 - F**
 - Finding. *See* Searching
 - H**
 - Hand strap
 - Attaching 11
 - Hyphens
 - Autohyphenation 80
 - Entering manually 30
 - I**
 - Incoming call 25
 - In-use icon 23, 25
 - K**
 - Keybeep 58
 - L**
 - Laws
 - Rules and regulations 4
 - Lock code 74
 - M**
 - Making calls 23
 - Manual
 - Answer 25
 - Call 23
 - Hyphenation 30
 - Redial 24
 - Memory
 - Deleting 33, 64
 - Editing 31, 64
 - Number searching 38, 39, 66
 - Storing 28, 63
 - Menus
 - Accessing 21
 - Message icon 46
 - Messages
 - Calling back 49
 - Displaying 46
 - Erasing 54
 - Locking 52
 - Message list 47
 - Receiving 46
 - Microphone 24, 56
 - Minute alert 60
 - Multiple city registration 94
 - Muting the microphone 24, 56
 - N**
 - Number buttons 23, 27

O

- Out-of-service icon 21, 83
- Over-the-Air Service Provision (OTASP) 86
- Overflow digits Viewing 42

P

- Pause 30
- Phone Book 27, 35, 38, 62
- Power
 - Turning off 21
 - Turning on 20

Q

- Quitting. *See* Power

R

- Receiving
 - Calls 25
 - Messages 46
 - Voice mail 48
- Recent number memory
 - Calling recent numbers 41
 - Clearing call memory 76
- Redialing
 - Auto retry 70
 - Last dialed number 24
- Restriction 34, 74
- Ringer
 - Volume 55
- Roam 83
- Roam icon 83
- Roaming agreement 83
- Rules and regulations 4

S

- Safety precautions 6
- Scratch pad 72

Scrolling

- Menus 22
- Message 50
- Message list 51

Searching

- For a name 66
- For a number 39, 40
- For a message 51

Security functions

- Accessing 73
- Clearing call memory 77
- Emergency numbers 77
- Lock mode 73
- New lock code 74
- Restriction 74

Sending. *See* Calling

- Service area 83
- Signal strength icon 20
- Special characters 29
- Standby display 21
- System settings
 - Accessing 83
 - Over-the-Air Service Provision (OTASP) 86

T

- Text Message. *See* Messages
- Touch dialing
 - Enabling 70
- Troubleshooting 88
- Turning phone on 20

V

- Voice mail notification
 - Accessing 47
 - Receiving 48
- Voice Privacy 85
- Volume
 - Adjusting 55

**SONY Wireless Hotline Number
(USA only)**

**If you have any questions or comments,
please call:**

**SONY WIRELESS HOTLINE
1-800-578-SONY (7669)**

© 1998 Sony Electronics Inc. All rights reserved. Reproduction without written consent expressly prohibited. Sony and Jog Dial are trademarks of Sony. All other trademarks are the property of their respective owners. Design and specifications are subject to change without notice. Talk and standby times are subject to change.

Printed in USA