

FM/AM PLL Synthesized Clock Radio ICF-C153/ICF-C143 FM/MW/LW PLL Synthesized Clock Radio ICF-C153L

Operating Instructions
Mode d'emploi
Bedienungsanleitung

Manual de instrucciones (en el reverso)
Gebruiksaanwijzing (achterzijde)
Istruzioni per l'uso (facciata opposta)

 
 
 
 
 
 
 
 
 
 
 
 
 
DREAM MACHINE

Dream Machine is a trademark of Sony Corporation.
Dream Machine est une marque de fabrique de Sony Corporation.
Dream Machine ist ein Warenzeichen der Sony Corporation.
Dream Machine is marca comercial de Sony Corporation.
Dream Machine is een handelsmerk van Sony Corporation.
Dream Machine è un marchio di fabbrica della Sony Corporation.

Sony Corporation © 2002 Printed in China

http://www.sony.net/

The PRESET TUNING 3 button has a tactile dot.
The bouton de pré-réglage 3 comporte un point tactile.
Auf der Stationstaste 3 befindet sich ein fühlbarer Punkt.

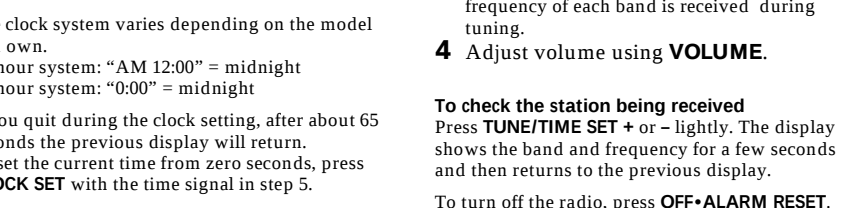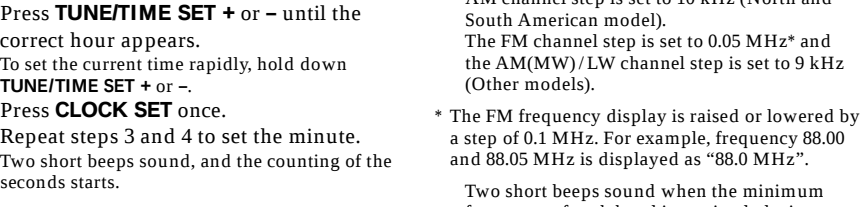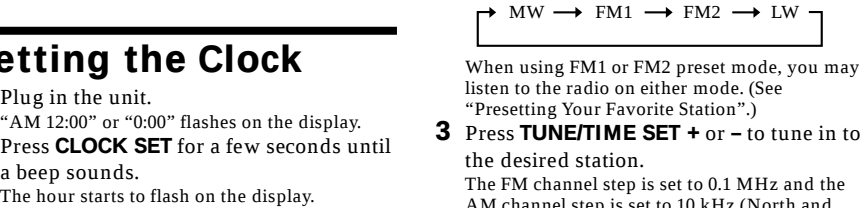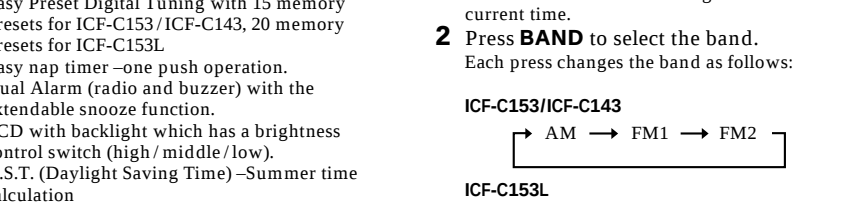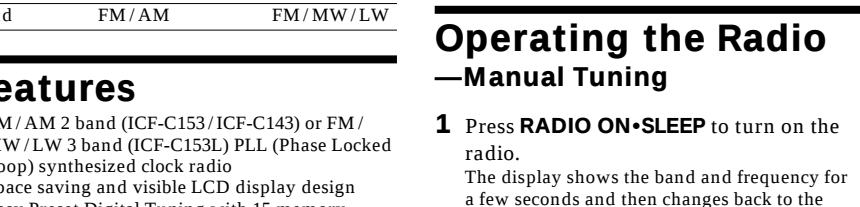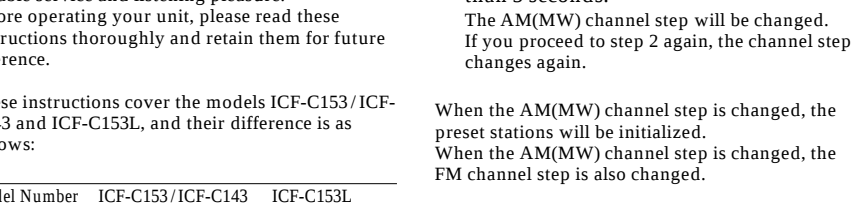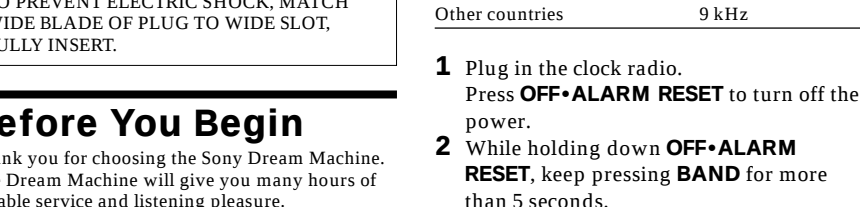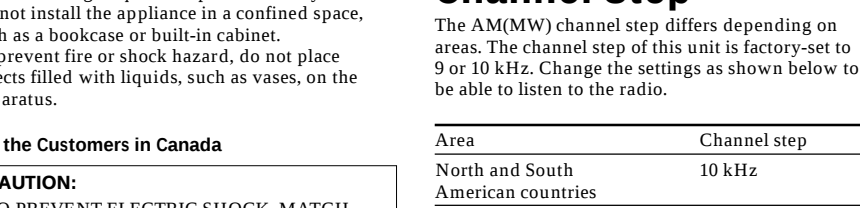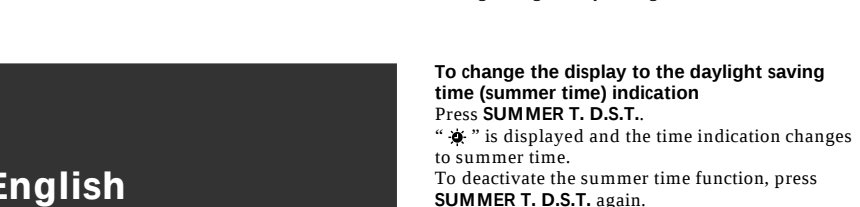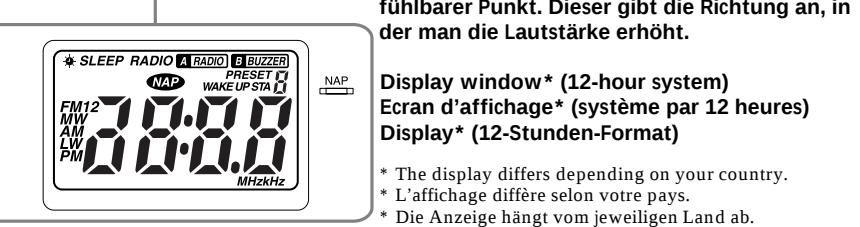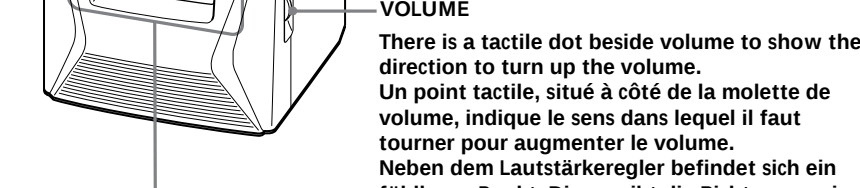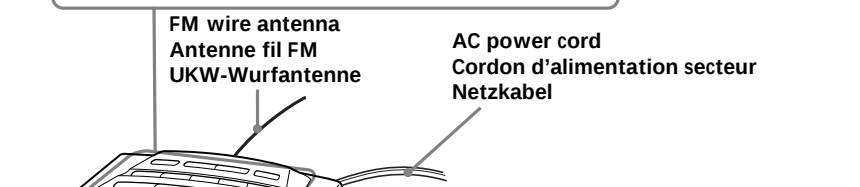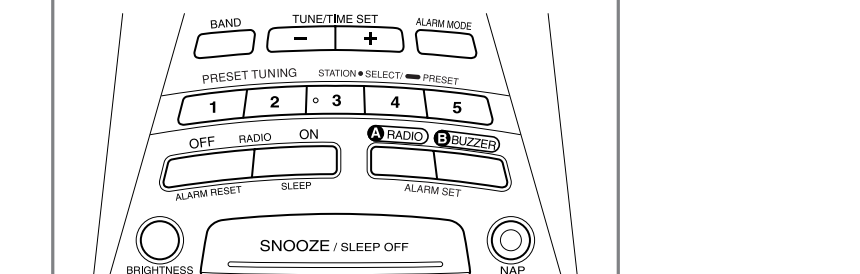

Improving the Reception

FM: Extend the FM wire antenna fully to increase reception sensitivity.
AM(MW)/LW: Rotate the unit horizontally for optimum reception. A ferrite bar is built in to the unit.
Do not operate the unit over a steel desk or metal surface, as this may lead to interference of reception.


Presetting Your Favorite Station —Preset Tuning

You can preset up to 10 stations in FM (5 stations in FM, 1 stations in FM2), and 5 stations in each AM, MW, LW.

Presetting a Station

- Follow steps 1 to 4 in "Operating the Radio" and manually tune in to the station you wish to preset.
- Hold down the preset button you wish to preset for more than 2 seconds.

Example: Display window when set FM 90 MHz in the PRESET TUNING 2 button for FM2.

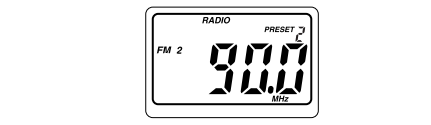

The preset number "2" and "PRESET" flash on the display.
Two beeps sound, and "2" and "PRESET" stop flashing.

To preset another station, repeat these steps.
To change the preset station button, tune in to the desired station and hold down the PRESET TUNING 1 to 5 button. The new station will replace the previous station on the preset button.

Tuning in to a Preset Station

- Press RADIO ON-SLEEP to turn on the radio.
- Press BAND to select the band.
- Press the desired preset button.
- Adjust the volume using VOLUME.

After a few seconds, the display will return to the current time but the preset button number will remain.

Note: Holding down the desired PRESET TUNING button for more than a few seconds in step 3 will replace the previous station on the PRESET TUNING button with the station you tuned in to.

Setting the Alarm

You can set two types of alarms, radio (ALARM A) and buzzer (ALARM B).

The alarm will come on at the same time everyday. Before setting the alarm, make sure to set the clock. (See "Setting the Clock".)

- Notes**
- The factory setting alarm time for radio (ALARM A) and buzzer (ALARM B) is "AM 12:00" or "0:00".
 - If you quit the alarm setting, after about 65 seconds the previous display will return.

To Set the Radio Alarm (ALARM A)

- Press A RADIO-ALARM SET for a few seconds until a beep sounds.
- Press TUNING/SET SET + or – to set the desired hour.
- Press A RADIO-ALARM SET.
- Repeat steps 2 and 3 to set the minute.

A beep sounds to confirm the setting of time. "WAKE UP STA" appears on the display. The radio is turned off automatically after about 15 minutes.

To set the brightness of the backlight
Press BRIGHTNESS to select high, middle or low for the display according to your preferences.

Changing AM(MW) Channel Step

The AM(MW) channel step differs depending on areas. The channel step of this unit is factory-set to 9 or 10 kHz. Change the settings as shown below to be able to listen to the radio.

Area	Channel step
North and South American countries	10 kHz
Other countries	9 kHz

- Plug in the clock radio.
- Press OFF-ALARM RESET to turn off the power.

2 While holding down OFF-ALARM RESET, keep pressing BAND for more than 5 seconds.

The AM(MW) channel step will be changed. If you proceed to step 2 again, the channel step changes again.

When the AM(MW) channel step is changed, the preset stations will be initialized. When the AM(MW) channel step is changed, the FM channel step is also changed.

Operating the Radio —Manual Tuning

- Press RADIO ON-SLEEP to turn on the radio.
- The display shows the band and frequency for a few seconds and then changes back to the current time.
- Press BAND to select the band.

Each press changes the band as follows:

ICF-C153/ICF-C143

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

To Do to a Few More Minutes

Press SNOOZE/SLEEP OFF.
The radio or buzzer turns off but will display the snooze time again after about 10 minutes. Every time you press SNOOZE/SLEEP OFF, the snooze time changes as follows:

10 → 20 → 30 → 40 → 50 → 60

The maximum length of the snooze time is 60 minutes.

The display shows the snooze time for a few seconds and returns to show the current time. When you press SNOOZE/SLEEP OFF after the current time appeared, the snooze time starts from 10 minutes again.

Pressing Your Favorite Station


—Preset Tuning

You can preset up to 10 stations in FM (5 stations in FM, 1 stations in FM2), and 5 stations in each AM, MW, LW.

Presetting a Station

- Follow steps 1 to 4 in "Operating the Radio" and manually tune in to the station you wish to preset.
- Hold down the preset button you wish to preset for more than 2 seconds.

Example: Display window when set FM 90 MHz in the PRESET TUNING 2 button for FM2.

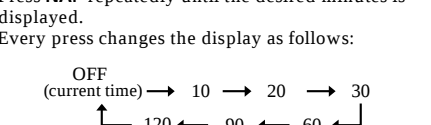

The preset number "2" and "PRESET" flash on the display.
Two beeps sound, and "2" and "PRESET" stop flashing.

To preset another station, repeat these steps.
To change the preset station button, tune in to the desired station and hold down the PRESET TUNING 1 to 5 button. The new station will replace the previous station on the preset button.

Tuning in to a Preset Station

- Press RADIO ON-SLEEP to turn on the radio.
- Press BAND to select the band.
- Press the desired preset button.
- Adjust the volume using VOLUME.

After a few seconds, the display will return to the current time but the preset button number will remain.

Note: Holding down the desired PRESET TUNING button for more than a few seconds in step 3 will replace the previous station on the PRESET TUNING button with the station you tuned in to.

Setting the Alarm

You can set two types of alarms, radio (ALARM A) and buzzer (ALARM B).

The alarm will come on at the same time everyday. Before setting the alarm, make sure to set the clock. (See "Setting the Clock".)

- Notes**
- The factory setting alarm time for radio (ALARM A) and buzzer (ALARM B) is "AM 12:00" or "0:00".
 - If you quit the alarm setting, after about 65 seconds the previous display will return.

To Set the Radio Alarm (ALARM A)

- Press A RADIO-ALARM SET for a few seconds until a beep sounds.
- Press TUNING/SET SET + or – to set the desired hour.
- Press A RADIO-ALARM SET.
- Repeat steps 2 and 3 to set the minute.

A beep sounds to confirm the setting of time. "WAKE UP STA" appears on the display. The radio is turned off automatically after about 15 minutes.

To set the brightness of the backlight
Press BRIGHTNESS to select high, middle or low for the display according to your preferences.

Changing AM(MW) Channel Step

The AM(MW) channel step differs depending on areas. The channel step of this unit is factory-set to 9 or 10 kHz. Change the settings as shown below to be able to listen to the radio.

Area	Channel step
North and South American countries	10 kHz
Other countries	9 kHz

- Plug in the clock radio.
- Press OFF-ALARM RESET to turn off the power.

2 While holding down OFF-ALARM RESET, keep pressing BAND for more than 5 seconds.

The AM(MW) channel step will be changed. If you proceed to step 2 again, the channel step changes again.

When the AM(MW) channel step is changed, the preset stations will be initialized. When the AM(MW) channel step is changed, the FM channel step is also changed.

Operating the Radio —Manual Tuning

- Press RADIO ON-SLEEP to turn on the radio.
- The display shows the band and frequency for a few seconds and then changes back to the current time.
- Press BAND to select the band.

Each press changes the band as follows:

ICF-C153/ICF-C143

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

To Do to a Few More Minutes

Press SNOOZE/SLEEP OFF.
The radio or buzzer turns off but will display the snooze time again after about 10 minutes. Every time you press SNOOZE/SLEEP OFF, the snooze time changes as follows:

10 → 20 → 30 → 40 → 50 → 60

The maximum length of the snooze time is 60 minutes.

The display shows the snooze time for a few seconds and returns to show the current time. When you press SNOOZE/SLEEP OFF after the current time appeared, the snooze time starts from 10 minutes again.

Pressing Your Favorite Station

 
—Preset Tuning

You can preset up to 10 stations in FM (5 stations in FM, 1 stations in FM2), and 5 stations in each AM, MW, LW.

Presetting a Station

- Follow steps 1 to 4 in "Operating the Radio" and manually tune in to the station you wish to preset.
- Hold down the preset button you wish to preset for more than 2 seconds.

Example: Display window when set FM 90 MHz in the PRESET TUNING 2 button for FM2.

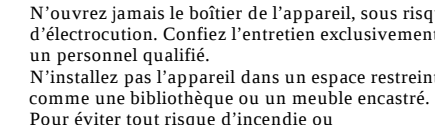

The preset number "2" and "PRESET" flash on the display.
Two beeps sound, and "2" and "PRESET" stop flashing.

To preset another station, repeat these steps.
To change the preset station button, tune in to the desired station and hold down the PRESET TUNING 1 to 5 button. The new station will replace the previous station on the preset button.

Tuning in to a Preset Station

- Press RADIO ON-SLEEP to turn on the radio.
- Press BAND to select the band.
- Press the desired preset button.
- Adjust the volume using VOLUME.

After a few seconds, the display will return to the current time but the preset button number will remain.

Note: Holding down the desired PRESET TUNING button for more than a few seconds in step 3 will replace the previous station on the PRESET TUNING button with the station you tuned in to.

Setting the Alarm

You can set two types of alarms, radio (ALARM A) and buzzer (ALARM B).

The alarm will come on at the same time everyday. Before setting the alarm, make sure to set the clock. (See "Setting the Clock".)

- Notes**
- The factory setting alarm time for radio (ALARM A) and buzzer (ALARM B) is "AM 12:00" or "0:00".
 - If you quit the alarm setting, after about 65 seconds the previous display will return.

To Set the Radio Alarm (ALARM A)

- Press A RADIO-ALARM SET for a few seconds until a beep sounds.
- Press TUNING/SET SET + or – to set the desired hour.
- Press A RADIO-ALARM SET.
- Repeat steps 2 and 3 to set the minute.

A beep sounds to confirm the setting of time. "WAKE UP STA" appears on the display. The radio is turned off automatically after about 15 minutes.

To set the brightness of the backlight
Press BRIGHTNESS to select high, middle or low for the display according to your preferences.

Changing AM(MW) Channel Step

The AM(MW) channel step differs depending on areas. The channel step of this unit is factory-set to 9 or 10 kHz. Change the settings as shown below to be able to listen to the radio.

Area	Channel step
North and South American countries	10 kHz
Other countries	9 kHz

- Plug in the clock radio.
- Press OFF-ALARM RESET to turn off the power.

2 While holding down OFF-ALARM RESET, keep pressing BAND for more than 5 seconds.

The AM(MW) channel step will be changed. If you proceed to step 2 again, the channel step changes again.

When the AM(MW) channel step is changed, the preset stations will be initialized. When the AM(MW) channel step is changed, the FM channel step is also changed.

Operating the Radio —Manual Tuning

- Press RADIO ON-SLEEP to turn on the radio.
- The display shows the band and frequency for a few seconds and then changes back to the current time.
- Press BAND to select the band.

Each press changes the band as follows:

ICF-C153/ICF-C143

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

Fonctionnement de la radio

—Sintonisation manuelle

- Appuyez sur RADIO ON-SLEEP pour allumer la radio.
- Appuyez sur BAND pour sélectionner la bande.

A chaque fois que vous appuyez sur cette touche, la bande change comme suit :

ICF-C153/ICF-C143

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

ICF-C153L

Appuyez sur la touche TUNING/SET

SET + ou – pour sélectionner la station de réveil.

- Appuyez sur SNOOZE/SLEEP OFF ou OFF-ALARM RESET.
- Appuyez sur SNOOZE/SLEEP OFF ou OFF-ALARM RESET.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

La radio ou la sonnerie s'allume et l'heure actuelle s'affiche.

</

