



GOCLEVER
INFINITE INVENTION

GoClever Netbook I102



USER'S MANUAL

INSTRUKCJA OBSŁUGI

Declaration of Conformity

Hereby GOCLEVER Technology declares that the product complies with the essential requirements and other provisions of Directive 199/5/WE.

Environmental Protection

The device is subject to the WEEE Directive 2002/96/EC. The symbol next to mean that the product must be disposed of separately and should be shipped to the appropriate collector. This allows you to limit pollution and the impact on human health.

Also like to inform that our company has the obligations under the Act on waste electronic equipment, including in his collection, treatment, recovery and recycling is supported by KARAT ELECTRO-RECYCLING Ltd. If you have any questions or concerns you can contact Karat call 056-623-80-91.

Responsibility

GOCLEVER Technology Company nor any of its licensors shall not be liable for any loss of data or profits, as well as for any other consequential or indirect damages resulting from the use of equipment brand, in any case and the maximum permitted by law. GOCLEVER Technology is not responsible for any problems related to the malfunctioning of the operating system and applications operating under its control.

Changes

GOCLEVER Technology reserves the right to revise this document and the specifications of the device, without notice to you. These features and images may vary depending on the services offered by the operator and software version of the device.

Before using

Remember that the battery is not charged. Opening or attempt to disassemble the outer casing of the device will void the warranty.

Google is a registered trademark, and Google Maps is a trademark of Google Inc.. in the United States and other countries. YouTube is a trademark of Google Inc..

GOCLEVER Technology Company is not liable for technical or editorial errors or for omissions contained herein is not responsible for incidental or consequential damages resulting from furnishing this material.

Information is presented in such a state in which you adopt them, and are not covered by any warranty. Subject to change without notice. GOCLEVER Technology Company reserves the right to change the contents of this document without prior notice. The manual describes basic functions of the device.

Security

Please refer to these guidelines. Failure to comply with them may cause danger to life or health or may be illegal. For further information, please read the entire podręcznikiem. Urządzenie was designed to operate from battery and mains supply with the charger. Using the device in a different way can be dangerous and will void the

warranty.

Charging Battery

The unit should be connected only to a power source in accordance with the parameters set out in the specification. In case of doubt as to the type of power source required, consult an authorized service provider or local power company. If the product is powered from a battery or other sources, follow the instructions supplied with the product.

The impact of external factors and the electromagnetic field

The device is not waterproof. Make sure that it was always dry, protect from moisture. The device also must be protected against high and low temperatures, dust, sand, do not expose it to shock, throw, as this may damage it or its components.

- Do not use the device in a damp and very high or low temperatures.
- Do not leave the device in the vehicle or in places where temperatures exceed 50 degrees Celsius.
- Do not use the equipment on board aircraft and in areas where it is not allowed to use equipment that may emit an electromagnetic field for example a hospital, petrol station, a warehouse of explosives violations of these rules may result in fire or explosion.
- Do not use the device while driving.
- Do not use the device near strong electromagnetic sources, such as microwave ovens, sound speakers, TV and radio.
- Use only original manufacturer-approved accessories, or accessories that do not contain metals.

Service and Repair



For repair use the authorized service and qualified staff, any attempt to repair yourself, or by unauthorized service will void the warranty.

Contents

1.	Appearance.....	5
2.	Getting started.....	6
3.	Input.....	9
4.	Desktop.....	10
5.	Browsing web pages.....	15
6.	Applications.....	14
7.	Tips and other information	20
8.	Customize settings	20
9.	Using HDMI.....	26
10.	Unlocking the device	26
11.	Troubleshooting.....	27
12.	Disposal / Recycling Information.....	28

1 Appearance

Production structure:

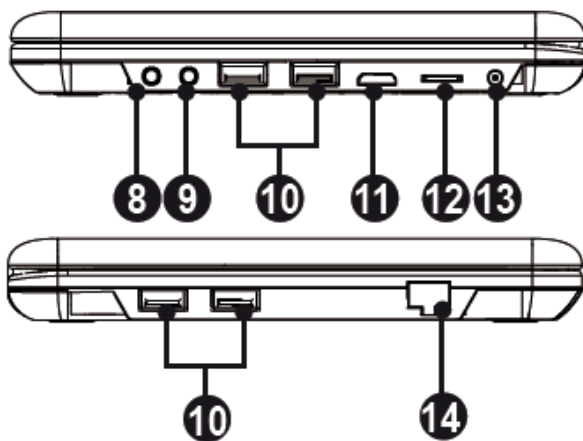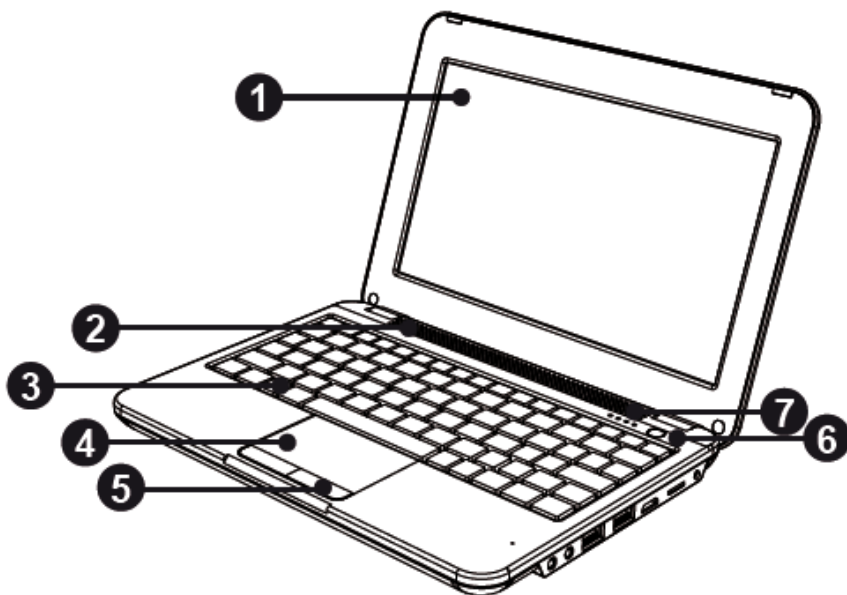

1. LCD

2. Stereo

3. Keyboard

4. Touch panel

- 5. Mouse、 Button
- 6. POWER key
- 7. Status indicator light
- 8. Microphone port
- 9. Earphone port
- 10. USB port
- 11. HDMI port
- 12. TF CARD port
- 13. DC input
- 14. Ethernet network port

2. Getting started

Please Note: Specifications may change without prior notice

2.1 *Charging the battery*

Charge the battery before use

Power adapter:

To charge the battery, insert adapter into the outlet and mains supply

- i. Once the adaptor is connected, the battery indicator will be red, when the unit is fully charged the LED will turn green.
- ii. The tablet is able to be used whilst charging, although this will increase charge time

2.2 *Using a SD card*

Inserting SD card:

Insert the Micro SD Card into the slot provided, when inserted you will get on screen message displaying “preparing SD card.”

Viewing the files in the SD card:

To view the files stored on the Micro SD card, choose ‘My Pad’ from the home screen, and then select “SD Card 1”

Removing the SD card:

- i. Close all open files stored on the Micro SD Card.
- ii. Click the menu, and select Setup → SD card memory → SD card 1 → Uninstall SD card. (Screen will display “Removed SD card”.)

- iii. Press the card gently, allowing it to project out of the slot.

Note:

- i. Insert the Micro SD card correctly, as damage may occur to either data stored on the card or the card itself.
- ii. We recommend only using branded Micro SD cards.

2.3 Hot plug of SD card and external flash disk

If the Micro SD Card and / or external flash disk is removed whilst in use (either playing, browsing or executing files stored on the device) without first uninstalling the device (as above), the data stored on the external device or the external device itself may become damaged. The program accessing the data on the Micro SD or flash disk may exit to stop corruption of data stored on the tablet.

2.4 Storage space

The Netbook has three areas of storage: Internal Memory, Flash Disk and Micro SD Card.

- The folders on the internal memory are unable to be accessed directly. (Used for storing system files. Capacity: 2GB)
- Micro SD card folders are displayed as “SD Card 1” (The capacity is dependent on card size used. Max. Capacity: 32GB)
- Flash disk folders are displayed as “Flash Disk 1” or “Flash Disk 2” (Capacity dependent on Card size used.)

For details of the storage memory, please refer to “8.6 SD card and device’s memory”

2.5 Power On / Off

- i. *Power On:* To switch the unit on, press the power switch for approx. two seconds,. Once the system has booted up, it will enter screen-locking

interface, where you can move up the unlocking icon to enter the main interface and down to the icon of electronic photo frame to enter the interface where you can display pictures.

- ii. *Power Off*: Press the power switch for four seconds, a window will appear for confirmation. Click the power-off icon, and the device will turn off.
- iii. *Sleep mode*: Press the power switch for one second, and the system will enter sleep mode, in which the LCD screen will turn black. In this mode, you can press Power key to wake up the system. Once woken up, the system enters the screen-locking interface. To conserve energy, if there is insufficient battery power whilst in the sleep mode, the system will power down.

2.8 External network cable and flash disk

External network cable


To use a network cable, insert it to the Ethernet port. Once connected and logged on, the Netbook will obtain an IP (network) address automatically. IP settings can be set manually if required.

External flash disk:

Insert the flash disk into the USB port. Once connected, you can save and copy data between the flash disk and the Netbook.

2.9 Network connection

Cabled network:

Once you insert the network cable into the Ethernet network port, an icon will appear  on the status bar. Then the device will obtain the IP address automatically to access to the network. IP settings can be set manually if required.





Wireless network:


- i. Click the WI-FI option box to open WI-FI Function
- ii. Select the “Settings” icon on the shortcut bar
- iii. Select “Wireless Network” in the settings menu
- iv. Select “WI-FI settings” to set the WI-FI network
- v. All wireless networks found by the device will be listed.
 - a. For unencrypted wireless Networks, you can click the Network Name and select connect
 - b. For encrypted wireless networks, a small padlock will be displayed and when connect is selected you will be prompted for the passphrase (password) for the connection.
- vi. If the connection is successful, an icon indicating the successful connection will appear on the transfer bar at the top of the desktop.









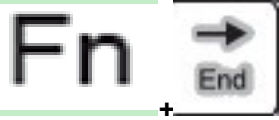



3. Input

3.1 Keyboard

More information on function key combinations of The keyboard below:

Key	Description
	Increase the volume
	Decreases the volume
	Enable / disable the keypad
	Return to the Home screen (desktop Gadgets / Widgets)

	Turn on / off the screen
--	--------------------------

Key	Description	Key	Description
	Adjustments		Sound Recorder
	Internet Browser		Video player
	E-mail		Music Player
	Calendar		Gallery
	Display Screen Keyboard		Wi-Fi Settings
	Apk manager		Network Settings

3.3 Mouse

The Netbook is including a mouse. you can use the mouse for operations such as clicking, selecting, dragging, and sliding or for right click menus.

4. Desktop


4.1 Status bar

The status bar is at the upper part of the screen. On the left of this bar there is one software icon, and on the right there are six icons. The icons are defined as

‘’, ‘’, ‘’ and ‘’, ‘’ and ‘’.


Other information is also indicated, such as the time, strength of Wi-Fi signals, the


state of Ethernet and battery.

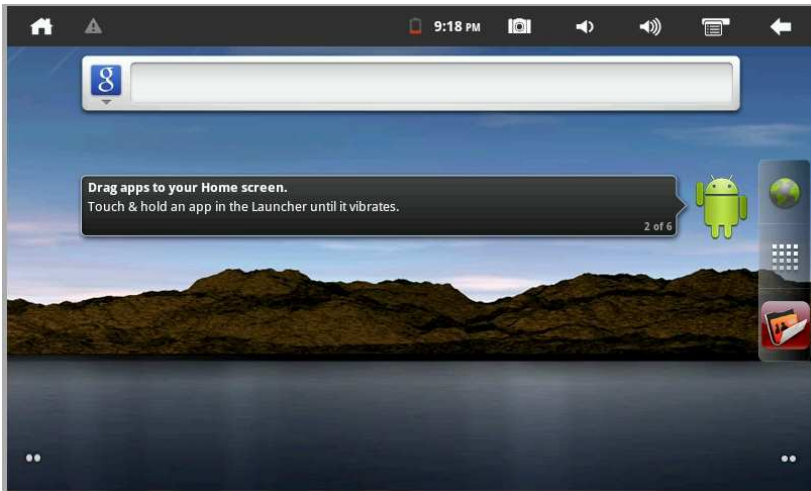


4.2 Home page

The home page of Netbook consists of two modes: Gadget Mode and Icon Mode. The two modes can be switched through the button on the right of the shortcut bar. The interface of Gadget Mode is shown in the picture below:

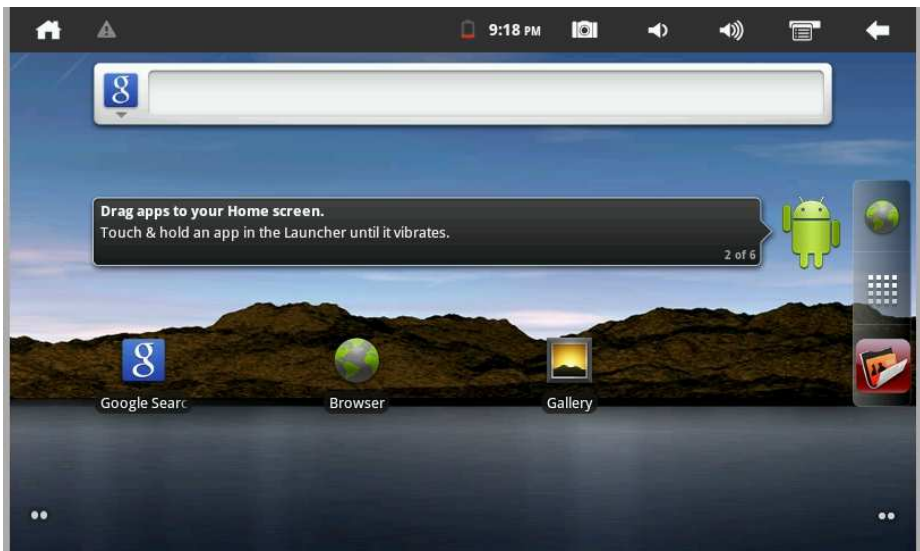


To enter the interface of application icons, click the button  at the shortcut bar, as shown below:

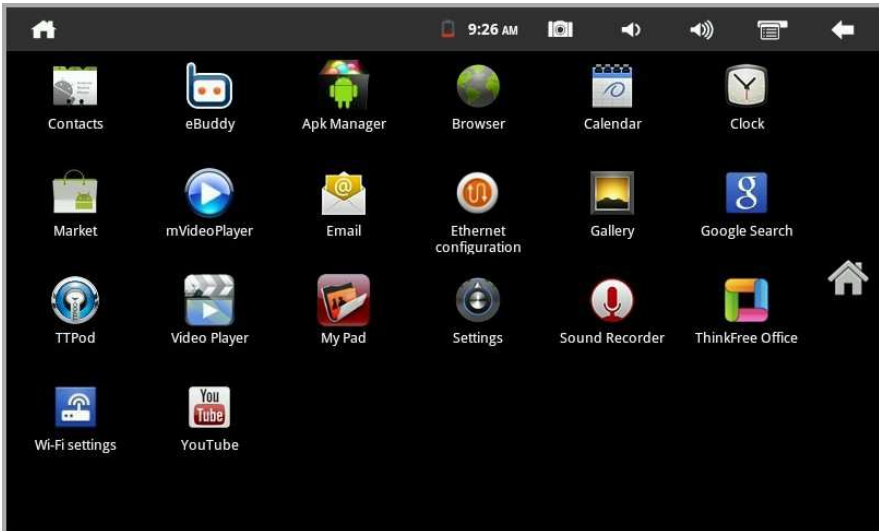

To enter the interface of Gadget Mode, click .


4.3 Gadget mode


In the major interface of the Gadget Mode, you can press the menu button or click the icon Menu on the status bar. To display the shortcut menu icons, there are Add, Manage apps, Wallpaper, Search, Notification, and Settings, as shown below:

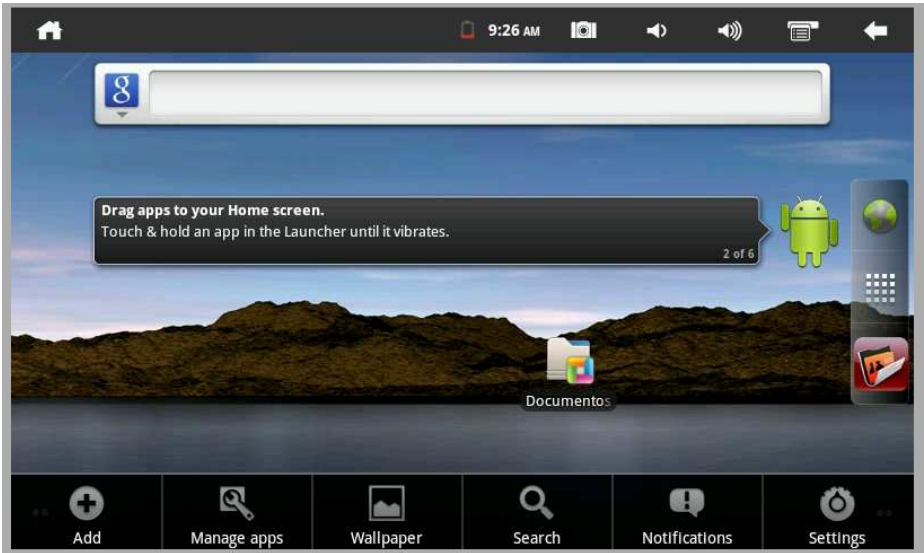


4.4 Adding gadgets whilst in Gadget mode


i. Application Shortcuts

To add a shortcut to an application on the desktop, Click  → Add → Shortcut in the Gadget mode interface. Once added, you can click the shortcut icon to perform the related operations.

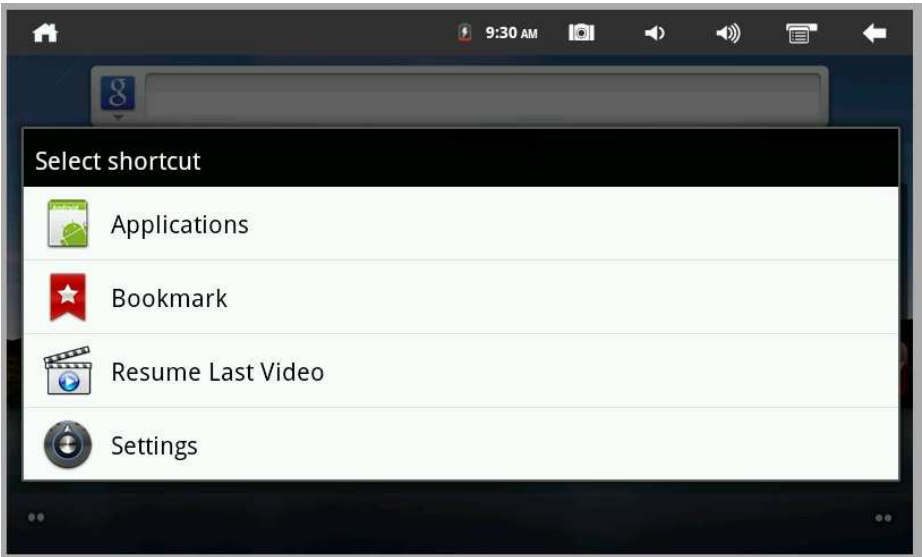


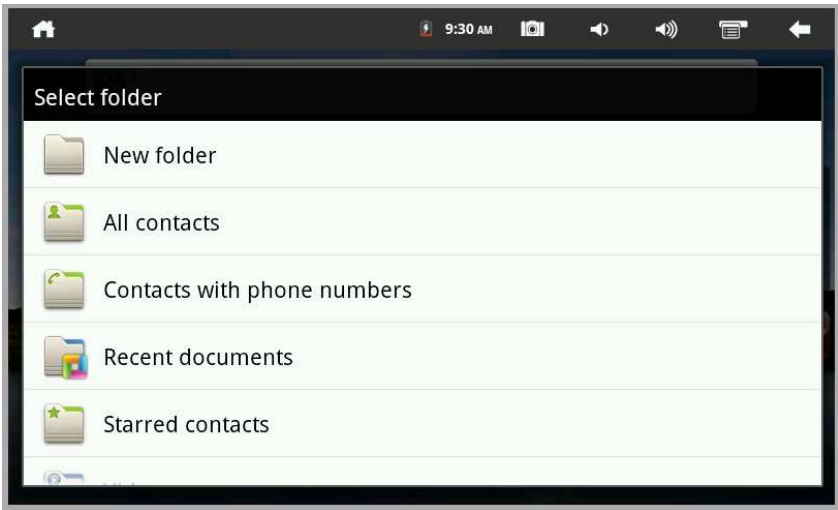
ii. *Widgets*

To add the widgets to the screen, click  → Add → Widgets in the gadget mode interface. Select the widget you want to add. Once added, you can click the shortcut icon to perform the related operations.

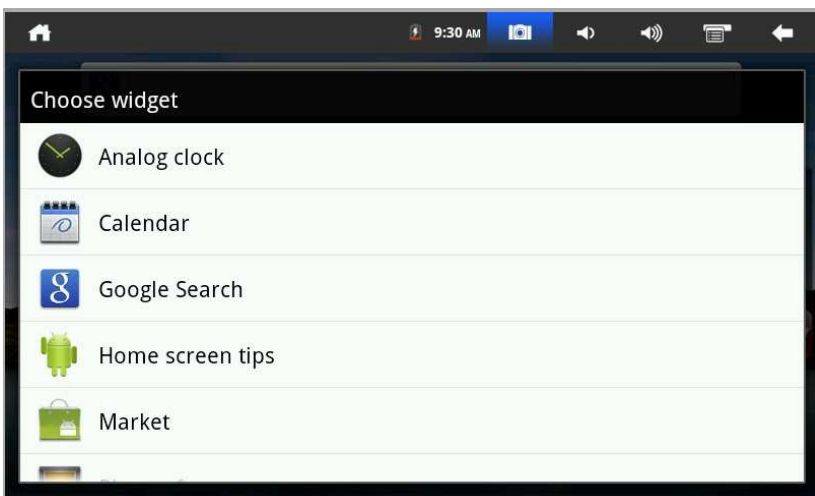

iii. Select folder

To add the folder to the screen, click  → Add → folder in the gadget mode interface. Select the folder you want to add. Once added, you can click the shortcut icon to perform the related operations.



4.5 Using gadgets

The user can add, delete and install the gadgets, application icons, and move the icons. You can also drag the icons between the pages of the desktop or between operation area and shortcut bar.


In the desktop gadget interface, click and hold the gadget icon, and a small icon will pop up. Drag the icon to place on the desktop, or drag to the recycle bin to delete it.

5. Browsing web pages



The user can access to the Internet through the browser.

Click the browser icon on the desktop, and to access the internet. The web browser window will appear:

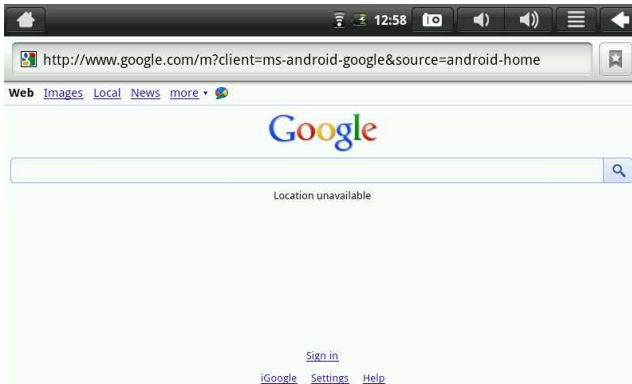

6. Applications

6.1 *E-mail*




Click the e-mail icon, to enter the email software, where you can perform the operations below:


- i. Setup accounts for e-mail
- ii. Compose e-mails
- iii. Send and receive the e-mails
- iv. Download or print attachments.

Tip: To access the shortcut menu, click the menu button.

6.2 *File Browser (Explorer)*



To enter the file explorer, click the icon , and the following page will appear:

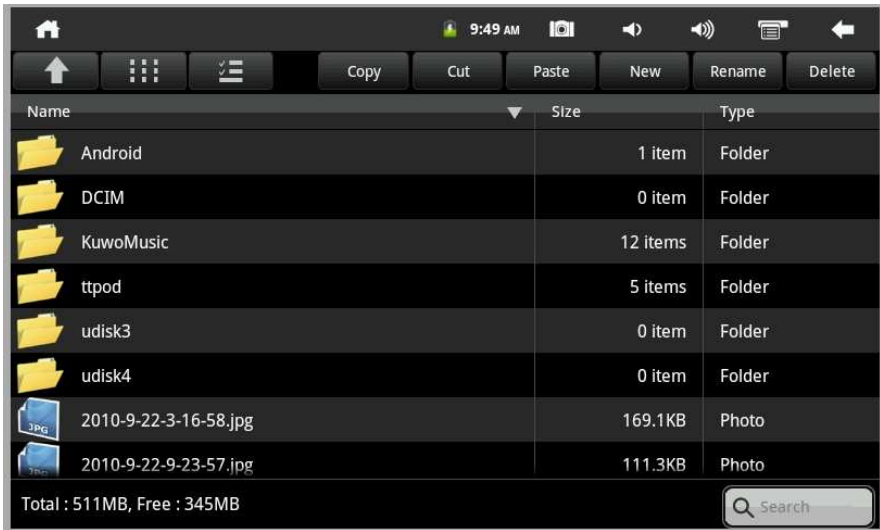

Click the icon, you can perform operations like Copy, Cut, Paste, New, Rename and Delete;


Double click the icon, you can open folder or file.

Installing files

If you want to install the applications in the file explorer, select the installation files with an extension name “APK”. You will be prompted on screen to install the application onto the device

6.4 Gallery



Click the icon  for the multimedia library, and the interface will show the photo list.

Click the menu button to enter the shortcut menu, where the following options are available: All Pictures, Multi-Option and Camera Settings.


All Pictures – The Netbook will enter slideshow mode

Camera Settings - and you can enter the setup interface, as shown below:




If you select a picture thumbnail in picture library interface, to view the picture in full screen. Whilst in full screen, press the screen to zoom in and zoom out (via menu pop up). Press the menu button, for the shortcut menu, where you can share pictures, delete pictures and crop, set as wallpaper and set as contact picture. You are also able to view the details of the picture, display the picture onto the map, play the picture in a slideshow, etc.

5. Press and hold the thumbnail for the picture options menu, as shown below:

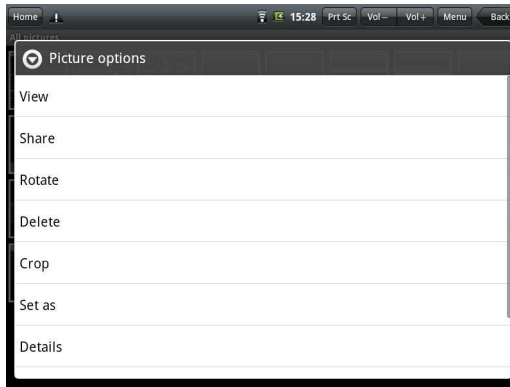

6.5 Music



Click the icon  to enter the music playback mode.

The menu below will be displayed, where you are able to select the option of your choice.




To enter the playing interface, click the song.




i. Click  to enter the play list



ii. Click  to enter shuffle mode

- iii. Click  to switch between Play All mode and Play Single mode
- iv. Click the menu button to perform the following operations: Delete current track, add the current track to the play list or jump to the music library.

7. Tips and other information

7.1 Some fast operations

- i. To return to the home page, click .


- ii. To adjust the volume, click  / .

7.2 Settings for shortcut operations

Connecting to the internet via WIFI



Click **Wi-Fi settings** to enter the interface for wireless access to Internet, as shown below:

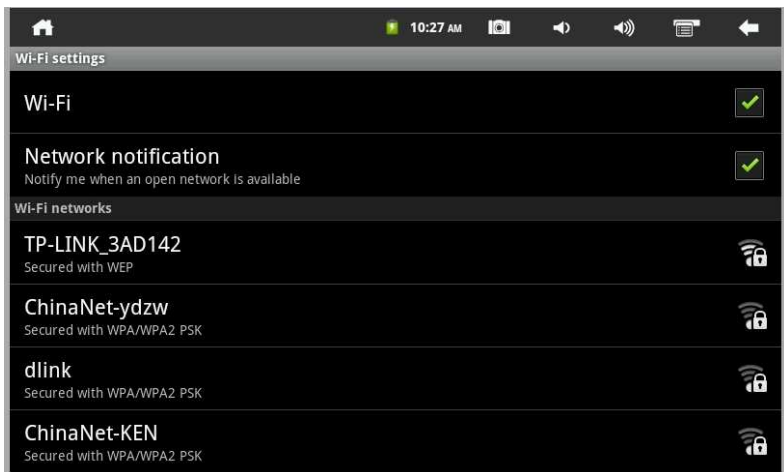

7.3 About the battery

For longer battery life, you may wish to change to the functions below.

- i. Reduce time watching movies, listening to music or taking photos
- ii. Reduce the Brightness: Click Menu → Settings → Display (display setting) → Brightness
- iii. Wireless Network search: Click Menu → Settings → Wireless Network → Connect to Wireless Network → WIFI Setting → Notification
- iv. Switch OFF the WIFI

8. Customize settings



To customize the settings, click  on the shortcut menu.

8.1 *Wireless operation and network*


To turn WIFI ON or OFF, click WIFI options box.

Access to the Internet in a wirelessly

If you want to set and manage connection point designed for the wireless access to the Internet, select Menu → System Settings → Wireless Network → WI-FI setting. For details, please refer to the section “7.2 *Connecting to the internet via WIFI.*”

8.2 *Sound*

To set the sound options select.

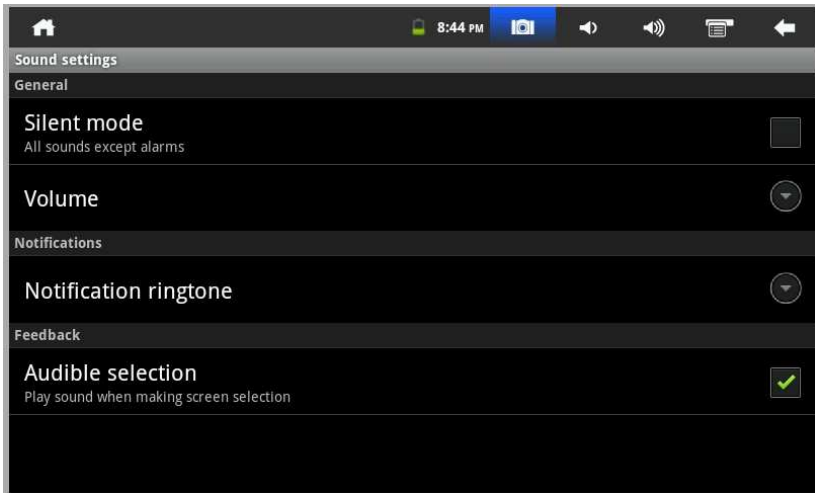

Silent mode

To set the system to a mute, except for medium and alarm clock, you can click Menu →Settings →Sound → Silent mode.

Volume

To set the volume for the music and video, you can click Menu →Settings → Sound →Volume.

Notification ringtone


To set the default notification ringtone, you can click Menu → Settings → Sound→ Notification Ringtone.

Selecting the operation ringing

If you desire that there is a sound when a selection is made through the screen, you can click Menu →Settings → Sound → Audible selection.

8.3 Display

To set Display options select.

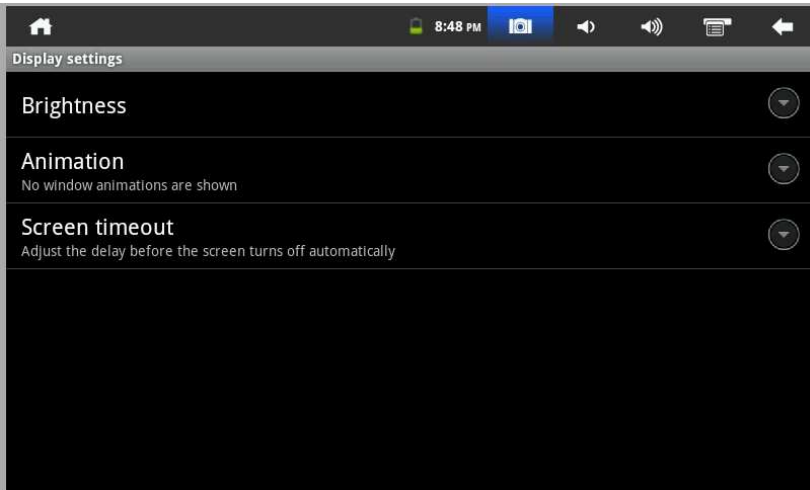

Brightness

To adjust the screen brightness, click Menu →Settings →Display → Brightness.

Animation

To adjust the screen animation, click Menu →Settings →Display →Animation.

Screen timeout

To adjust the delay time for screen locking, click Menu →Settings →Display → Screen timeout.

8.4 Application

Unknown resources

Select this item to permit that application provided by the unauthorized electronic market to be installed

Quick launch

Set keyboard shortcuts to launch applications, click Menu →Settings → Application →Quick launch

Management for application


To manage or delete the installed application, click Menu →Settings → Application → Management applications.

Services

To view or control the service running, click Menu → Settings → Application → Running Services.


8.4 Storage

View the remaining memory space.

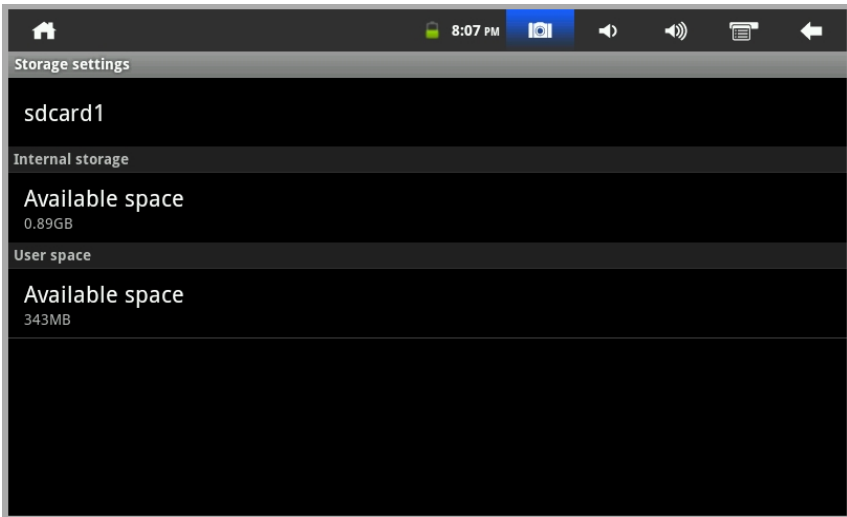

Memory devices (SD card and flash disk)

To view or perform operations for the memory devices, such as uninstalling, Click Menu → Settings → Storage. Then select a memory device under the related root directory, e.g. SD card 1. After you enter the interface of the memory device, you can view the total capacity, remaining capacity, or you can uninstall it. The interface is shown below.

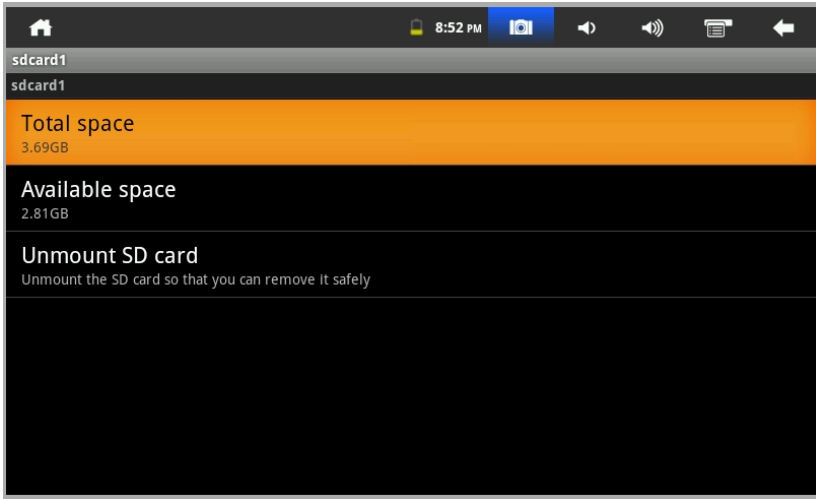


System memory

To view the system memory, click Menu →Settings →Storage. Under its root directory, you can view the system memory.

8.5 Language and keyboard

In this menu, you can set the 'On Screen Display' (OSD) language and keyboard layout and automatic correction.

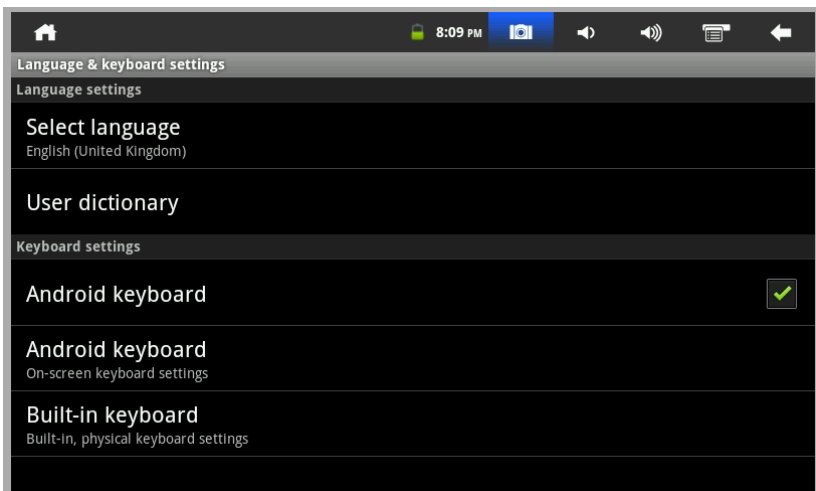

Select OSD language and region

To select the OSD language and region, click Menu →Settings →language and keyboard → Select language.

User dictionary

To insert or delete words from the user-defined dictionary, click Menu →Settings →language and keyboard → User dictionary.

Android keyboard


To set Android keyboard, click Menu →Settings →language and keyboard → Android keyboard.

Built keyboard

To set Android Built keyboard, click Menu →Settings →language and keyboard →Built keyboard


8.6 Date and time

To set the date, time, time zone, time system and format, you can click Menu →Settings → Date and time.

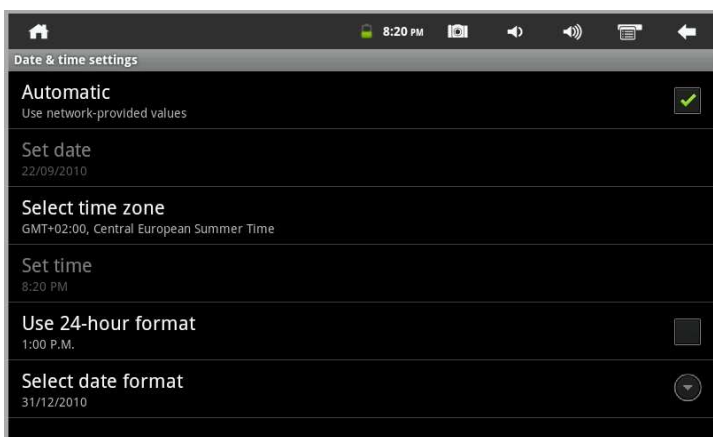

8.8 About the device

In this menu, you can view the legal information, device status and software version, etc.

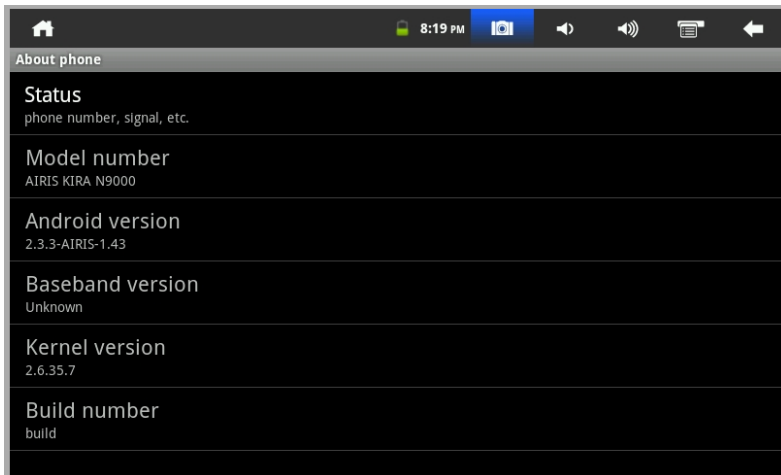

Status

To view the status of the battery, power-on time and WIFI address, click Menu →Settings → About the device → Status.

Model

To view the model number, click Menu →Settings → About the device → Model Number.

Android version

To view the version of Android, click Menu →Settings → About the device →Android version.

Kernel Version

To view the Kernel version, click Menu →Settings → About the device →Kernel Version.

9. Using HDMI

With HDMI, video contents being played by the Netbook can be transferred to a HDMI screen (TV set with HDMI port) for playing. The maximum output resolution supported by the Netbook is 1080P.

To display on via HDMI Output:

- i. Power on the Netbook.
- ii. Connect Netbook to HDMI screen via HDMI cable and power on the screen.
A status bar messages about HDMI connection will pop up.
- iii. Play the video files on the Netbook.
- iv. Press MENU, and the PC's screen will turn black, a process lasting about 5 seconds during which the contents are being switched to the HDMI screen.
Please be patient.
- v. You can transfer the screen back to the PC again by using any of the following:
 - a. System transfers to PC automatically after the playing is completed.
 - b. Press Menu during playing to switch the display back to the PC.
 - c. Remove the HDMI cable during playback, after which the video contents will be transferred to the PC.
 - d. Press Back to exit play mode, after which the display will be transferred to the PC.

10. Unlocking the device

Unlocking screen / device:

When the system is the sleep mode, you can short press the power switch to display the screen lock interface. To unlock the screen, move the corresponding icon upward, and the system will enter the state prior to sleep mode.


11. Troubleshooting

11.1 Turning off applications


Once an application is turned on, it will occupy memory space, and if there are

too many applications running, the Tablet PC running speed will slow down. It is advisable to close applications when they are not in use, to avoid this.

To turn off the application, click 'Settings' icon on the shortcut bar, and the system will enter the system settings interface, where you can select Application → Running Services, as shown below:

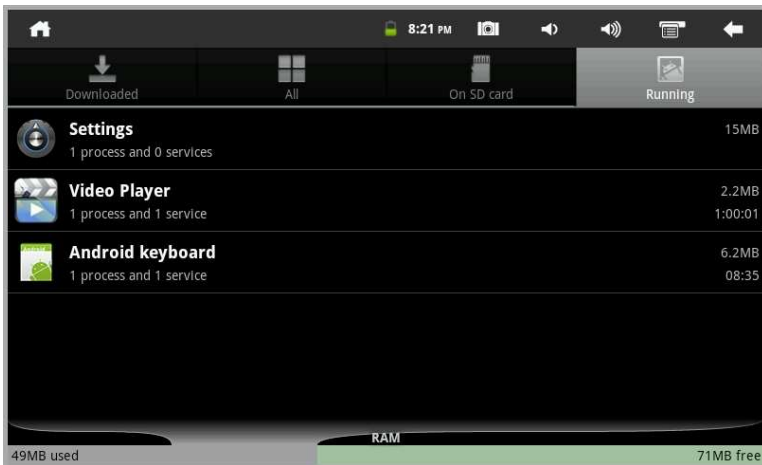

Click the application to be closed, and the system will display a window which asks you whether you need to stop the service window, as shown below:

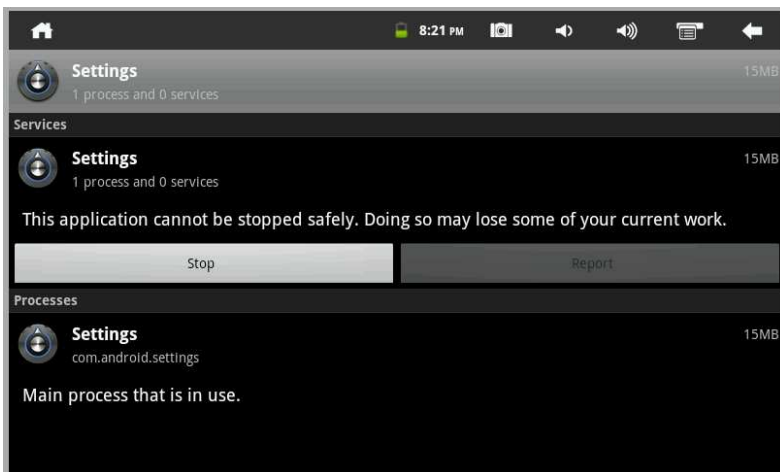

Click Stop, and the application will be closed.

11.2 Compulsory power-off

- i. Press the power switch and hold down for 7 seconds, the device will be switched off.
- ii. Press Reset at the bottom of the device, the device will be switched off.

11.3 Restore defaults

If you want to restore the factory defaults and delete all other data, please press Menu → System Settings → Privacy → Defaults

Warning: Once you select Reset, the Google account, data and settings of the system and application and the downloaded applications will be deleted.

12. Disposal / Recycling Information



This product should not be disposed of with household waste. Please recycle where facilities exist. Check with your local authority for recycling advice.

Deklaracja zgodności

Niniejszym GOCLEVER Technology oświadcza iż produkt jest zgodny z zasadniczymi wymogami oraz pozostałymi postanowieniami Dyrektywy 199/5/WE.

Ochrona środowiska

Urządzenie podlega dyrektywie WEEE 2002/96/EC. Symbol obok oznacza, że produkt musi być utylizowany oddzielnie i powinien być dostarczony do odpowiedniego punktu zbierającego odpady. Pozwala to ograniczyć zanieczyszczenie środowiska i pozytywnie wpływa na ludzkie zdrowie. Informujemy ponadto, iż nasza firma w zakresie obowiązków wynikających z ustawy o zużytym sprzęcie elektronicznym, w tym w zakresie jego zbierania, przetwarzania, odzysku i recyklingu jest obsługiwana przez KARAT ELEKTRO-RECYKLING Sp.z o.o. W razie jakichkolwiek pytań lub wątpliwości możecie się Państwo kontaktować z Karat pod numerem telefonu 056-623-80-91.

Odpowiedzialność

Firma GOCLEVER Technology ani żaden z jej licencjobiorców nie ponosi odpowiedzialności za jakąkolwiek utratę danych lub zysków, jak również za żadne inne wtórne i pośrednie szkody powstałe w wyniku użytkowania urządzeń marki, w żadnym wypadku i maksymalnym dopuszczalnym przez prawo zakresie.

GOCLEVER Technology nie odpowiada za problemy związane z nieprawidłowym działaniem systemu operacyjnego i aplikacji działających pod jego kontrolą.

Zmiany

GOCLEVER Technology zastrzega sobie prawo do dokonywania zmian w niniejszym dokumencie jak i specyfikacji urządzenia, bez konieczności informowania o tym użytkownika. Opisane funkcje oraz obrazki mogą się różnić w zależności od usług oferowanych przez operatora jak i wersji oprogramowania danego urządzenia.

Przed użyciem

Pamiętaj, że akumulator nie jest naładowany. Otwarcie lub próba rozebrania zewnętrznej obudowy urządzenia powoduje utratę gwarancji. Google jest zastrzeżonym znakiem towarowym, a Google Maps jest znakiem handlowym firmy Google, Inc. w Stanach Zjednoczonych i innych krajach. YouTube jest znakiem towarowym firmy Google, Inc.

Firma GOCLEVER Technology nie ponosi odpowiedzialności za błędy techniczne lub redakcyjne ani za pominięcia w niniejszym tekście; nie ponosi również odpowiedzialności za szkody przypadkowe lub następne spowodowane korzystaniem z niniejszego materiału.

Informacje są przedstawione w takim stanie, w jakim przyjmuje je użytkownik, i nie są objęte żadną gwarancją. Mogą ulec zmianie bez powiadomienia. Firma GOCLEVER Technology zastrzega również prawo do zmiany zawartości niniejszego dokumentu bez uprzedniego powiadomienia. W podręczniku zostały opisane tylko podstawowe funkcje urządzenia.

Bezpieczeństwo

Należy zapoznać się z tymi wytycznymi. Niezastosowanie się do nich może spowodować powstanie zagrożenia życia lub zdrowia albo może być niezgodne z prawem. Aby uzyskać dalsze informacje, należy zapoznać się z całym podręcznikiem. Urządzenie zostało stworzone do pracy przy zasilaniu akumulatorowym jak i podłączeniu do sieci elektrycznej za pomocą ładowarki. Korzystając z urządzenia w inny sposób może być niebezpieczne i spowoduje utratę gwarancji.

Ładowanie

Urządzenie należy podłączać tylko do źródeł zasilania zgodnych z parametrami określonymi w specyfikacji. W przypadku wątpliwości co do typu wymaganego źródła zasilania należy skonsultować się z autoryzowanym punktem usługowym lub lokalnym dostawcą energii elektrycznej. Jeśli produkt zasilany jest z akumulatora lub innych źródeł, należy przestrzegać instrukcji dołączonej do produktu.

Oddziaływanie czynników zewnętrznych oraz pola elektromagnetycznego

Urządzenie nie jest wodoodporne. Należy dopilnować, aby zawsze było suche, chronić przed wilgocią. Urządzenie należy chronić również przed wysokimi oraz niskimi temperaturami, zapyleniem, piaskiem, nie należy narażać go na wstrząsy, rzucać nim, gdyż może to spowodować jego uszkodzenie, bądź jego elementów.

- + Nie korzystaj z urządzenia w pomieszczeniach wilgotnych i w bardzo wysokich lub niskich temperaturach.
- + Nie pozostawiaj urządzenia w pojazdach ani miejscach, w których temperatura może przekroczyć 50 stopni Celsjusza.
- + Nie korzystaj z urządzenia na pokładzie samolotu oraz w miejscach gdzie nie jest dozwolone korzystanie z urządzeń mogących emitować pole elektromagnetyczne Np. szpital, stacja benzynowa, magazyn materiałów wybuchowych; nieprzestrzeganie tych zasad może spowodować pożar lub wybuch.
- + Nie korzystaj z urządzenia podczas prowadzenia samochodu.
- + Nie korzystaj z urządzenia w pobliżu źródeł silnego promieniowania elektromagnetycznego, takich jak kuchenki mikrofalowe, głośniki, telewizory a nawet radia.
- + Stosować tylko oryginalne akcesoria zalecane przez producenta albo akcesoria, które nie zawierają metali.

Serwis i naprawy



Do napraw korzystaj z autoryzowanego serwisu i wykwalifikowanego personelu, wszelkie próby naprawy samodzielnej, bądź też przez nieautoryzowany serwis będzie skutkowało utratą gwarancji.

Spis treści

1. Wygląd	34
2. Pierwsze kroki	35
3. Urządzenia wejścia.....	38
4. Okno główne.....	39
5. Przeglądanie stron internetowych.....	44
6. Aplikacje	45
7. Porady oraz dodatkowe informacje	48
8. Dostosowywanie ustawień.....	49
9. Korzystanie z HDMI	55
10. Odblokowanie urządzenia	56
11. Rozwiązywanie problemów	56
12. Utylizacja.....	58

1 Wygląd

Schemat urządzenia:

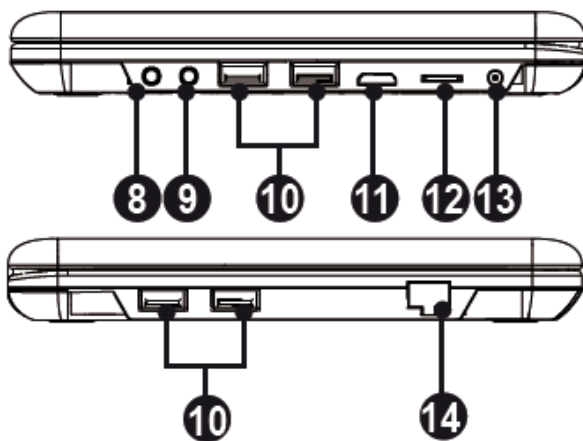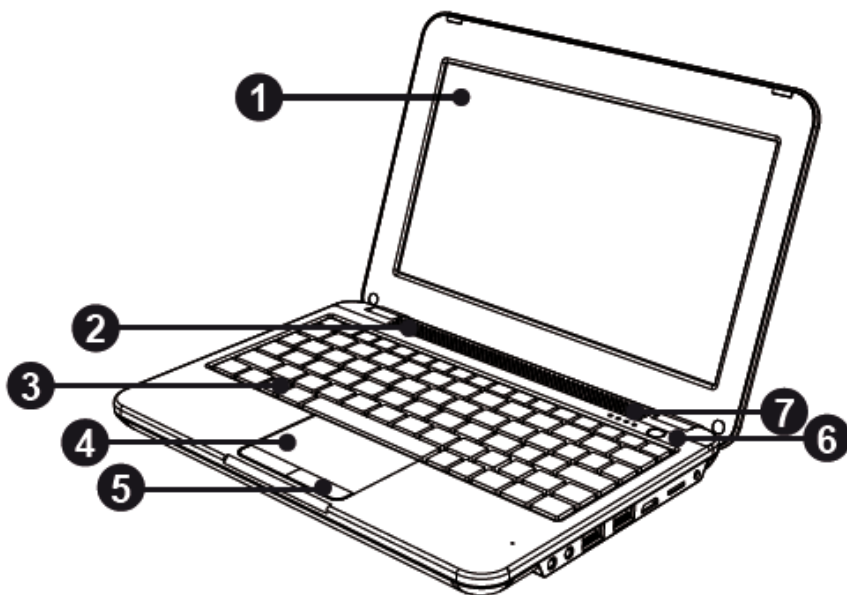

1. Ekran

2. Głośniki

3. Klawiatura

4. Touchpad

- 5. Klawisz touchpad
- 6. Włącznik
- 7. Dioda
- 8. Wejście na mikrofon
- 9. Wyjście na słuchawki
- 10. Porty USB
- 11. wyjście HDMI
- 12. Czytnik kart micro SD
- 13. Gniazdo zasilania
- 14. Gniazdo Ethernet LAN

2. Pierwsze kroki

Uwaga: Specyfikacja produktu może się zmienić bez powiadomienia.

2.1 Ładowanie baterii

Ładowanie baterii przed użyciem

Zasilacz:

Aby ładować baterię, podłącz ładowarkę do urządzenia a ładowarkę do odpowiedniej sieci elektrycznej.

a) Gdy zasilacz jest podłączony, dioda baterii jest czerwona, kiedy bateria zostanie naładowana do pełna dioda będzie zielona.

b) Tablet może być używany podczas ładowania, może to jednak wydłużyć czas ładowania baterii.

2.2 Korzystanie z karty micro SD

Wkładanie karty micro SD:

Włóż kartę micro SD do czytnika, po włożeniu karty na ekranie zostanie wyświetlona informacja “preparing SD card.”

Przeglądanie plików na karcie micro SD:

Aby wyświetlić pliki zapisane na karcie micro SD, wybierz ‘My Pad’ na ekranie głównym, następnie zakładkę “SD Card 1”

Wyjmowanie karty micro SD:

a) Zamknij wszystkie otwarte pliki z karty micro SD.

b) Wybierz MENU, następnie wybierz Ustawienia → SD card memory → SD

card 1 → Uninstall SD card. (Na ekranie zostanie wyświetlona informacja “Removed SD card”.)

c) Delikatnie wyjmij kartę z urządzenia.

Uwaga:

- Wkładaj kartę micro SD właściwą stroną, gdyż może to spowodować zniszczenie karty lub nawet uszkodzenie zawartości karty.
- Zalecamy stosować tylko markowe karty micro SD.

2.3 Szybkie wyjmowanie karty i odłączenie pamięci flash

Jeśli karta micro SD lub pamięć flash zostanie wyjęta podczas używania (granie w gry, słuchanie muzyki, przeglądanie stron) bez uprzedniego odinstalowania urządzenia (jak opisano powyżej), dane na karcie lub pamięci flash mogą ulec uszkodzeniu.

2.4 Pamięć urządzenia

Netbook ma trzy obszary pamięci: Internal Memory, Flash Disk and kartę micro SD.

- Dostęp do pamięci internal memory jest ograniczony. (Używany do przechowywania plików systemowych. Rozmiar tej zarezerwowanej pamięci to około 2GB)
- Karta micro SD znajduje się pod “SD Card 1”
(Pojemność tej pamięci zależy od wielkości karty. Max. 32GB)
- Flash disk wyświetlone są jako “Flash Disk 1” oraz “Flash Disk 2”
(Rozmiar tej pamięci zależy od rozmiaru podłączonej pamięci.)

2.5 Włączenie/Wyłączenie

a) *Włączenie*: Aby włączyć urządzenie, wciśnij włącznik przez około 2 sekundy. Po uruchomieniu się urządzenia, ekran urządzenia jest zablokowany, przeciągnij kursorem ikonę blokady ekranu ku górze

ekranu lub górną ikonę w dół aby uruchomić galerię.

b) *Wyłączanie:* Wciśnij włącznik około 4 sekund, wyświetli się okno wyboru opcji. Wybierz power-off urządzenie zostanie wyłączone.

c) *Wygazzenie ekranu:* Wciśnij włącznik na 1 sekundę, ekran urządzenia zostanie wygaszony ale urządzenie będzie działać dalej. Wciśnij włącznik aby ponownie aby obraz powrócił na ekran. Następnie odblokuj ekran urządzenia. Przy niskim stanie baterii urządzenie automatycznie się wyłączy.

2.8 Sieć LAN oraz pamięć flash

Sieć LAN:


Aby połączyć się z siecią lokalną LAN, podłącz końcówkę kabla do urządzenia. Po podłączeniu oraz zalogowaniu się do sieci, Netbook otrzyma automatycznie numer IP sieci. Adres IP może być ustawiony ręcznie.

Pamięć flash:

Podłącz pamięć flash do urządzenia. Po podłączeniu możesz kopiować dane między Netbook a pamięcią flash.

2.9 Połączenie sieciowe

Połączenie LAN:

Po podłączeniu urządzenia do sieci lokalnej LAN, na pasku powiadomień zostanie wyświetlona ikona . Po uzyskaniu numeru IP urządzenie będzie miało możliwość łączenia z Internetem.

Sieć Wi-Fi:

- a) Wybierz "Ustawienia"
- b) Wybierz "Wireless Network" w ustawieniach urządzenia
- c) Wybierz "WI-FI settings" aby konfigurować sieć Wi-Fi
- d) Lista znalezionych sieci zostanie automatycznie wyświetlona.






- 1) Sieci nie zabezpieczone wybierz sieci następnie połącz z tą siecią
- 2) Sieci zabezpieczone, po wybraniu sieci zabezpieczonej zostanie wyświetlone okno gdzie należy podać hasło zabezpieczające wybranej sieci.

e) Po prawidłowym połączeniu, na pasku powiadomień zostanie wyświetlona ikona sieci Wi-Fi.


3. Urządzenia wejścia

3.1 Klawiatura

Opis kombinacji klawiszy poniżej:

Klawisz	Opis
Fn + 	Zwiększ głośność
Fn + 	Zmniejsz głośność
Fn + 	Włączanie klawiatury numerycznej
Fn + 	Home powrót do okna głównego (desktop Gadgets / Widgets)
Fn + 	Wyłączanie/Włączenie ekranu.

Klawisz	Opis	Klawisz	Opis
	Ustawienia		Rejestrator dźwięku
	Przeglądarka		Player wideo
	Poczta		Player audio

	Kalendarz		Galeria
	Klawiatura ekranowa		Wi-Fi ustawienia
	Menadżer aplikacji		LAN ustawienia





3.3 *Mysz/Touchpad*



Netbook posiada wbudowany Touchpad. Możesz przesuwac, klikać, przeciągać, wybierać menu prawym klawiszem.


4. Okno główne

4.1 *Pasek powiadomień*

Pasek powiadomień znajduje się na górze ekranu. Po lewej znajduje się jeden programowany przycisk a po prawej 6 przycisków. Wyświetlane ikony to


‘’ HOME, ‘’ wykonaj zapis ekranu, ‘’ ciszej ‘ oraz ‘’


głośniej, ‘’ MENU jak też ‘’ Cofnij. Na pasku wyświetlają się również ikony takie jak, czas, ikona sieci Wi-Fi, informacja o sieci LAN, powiadomienia oraz alerty.

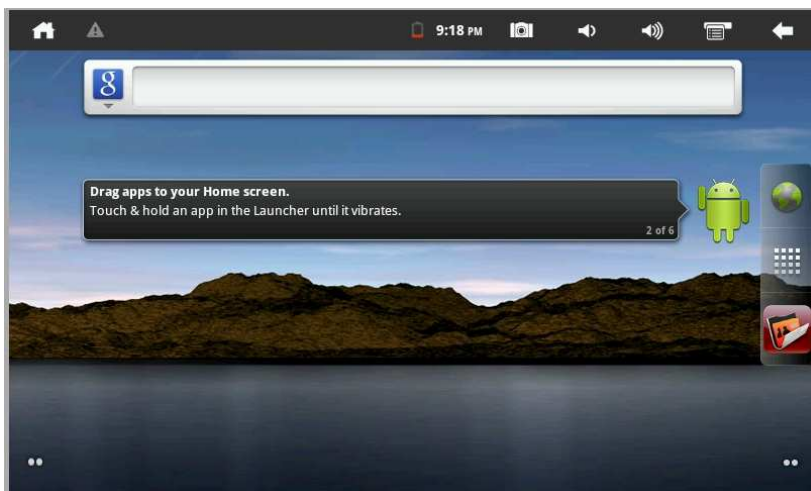


4.2 Okno główne

Okno główne składa się z dwóch trybów: Gadget Mode oraz Icon Mode. Tryb Gadget Mode pokazano na zdjęciu poniżej:

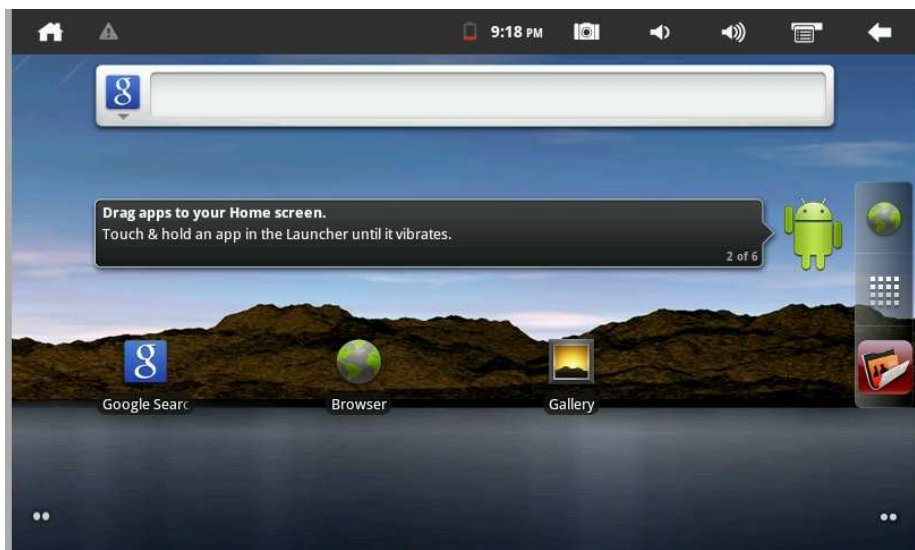


Aby wyświetlić listę zainstalowanych aplikacji wybierz  zostanie wyświetlone okno pokazane poniżej:

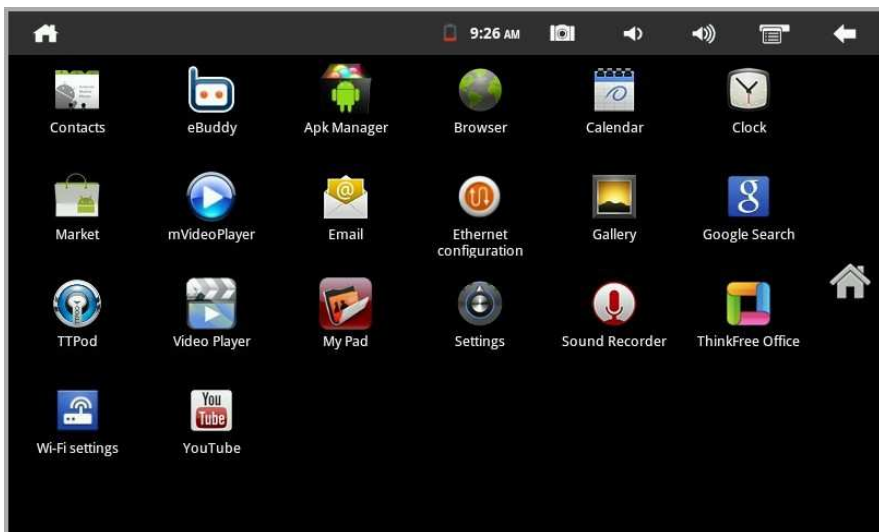

Aby powrócić do okna głównego wybierz .


4.3 Gadget mode


Aby dodać Widżet w oknie głównych wybierz MENU. Zostanie wyświetlone okno menu okna głównego. Dostępne opcje to Add, Manage apps, Wallpaper, Search, Notification, oraz Ustawienia, pokazano poniżej:

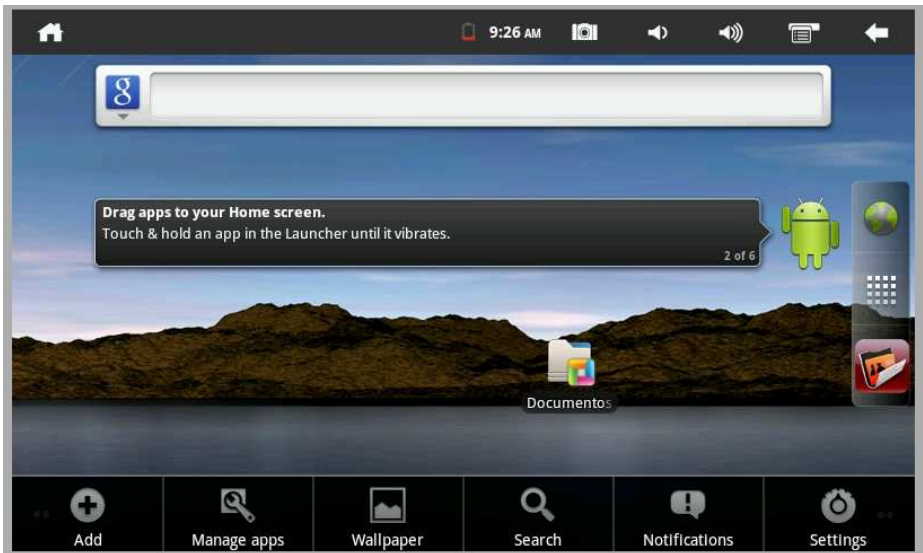


4.4 Dodawanie Widżet do okna głównego


a) Skróty do aplikacji

Aby dodać skrót do aplikacji na oknie głównym, Wybierz  → Add → Shortcut oraz aplikację. Po dodaniu skrótu do aplikacji w oknie głównym po kliknięciu na skrócie zostanie uruchomiona aplikacja do której skrót został dodany.

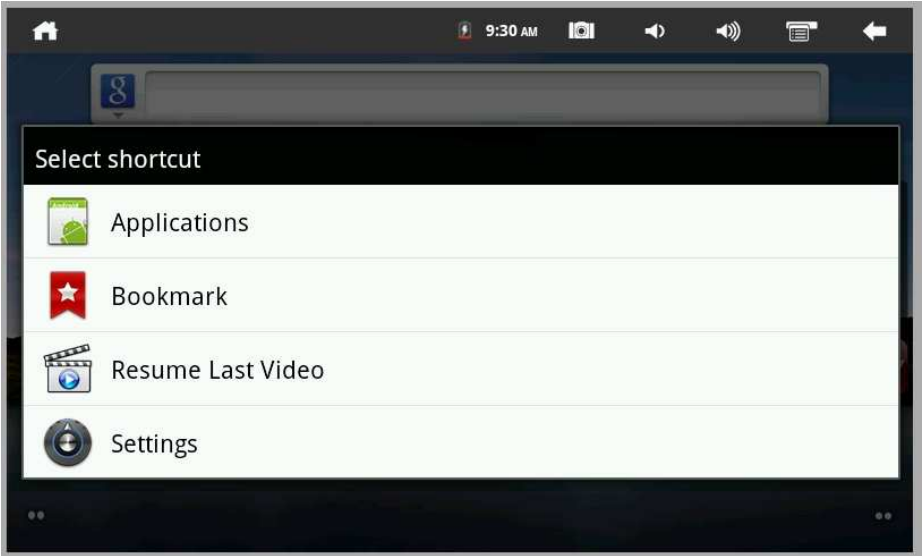



b) Widżety

Aby dodać nowy widżet wybierz MENU  → Add → Widgets
wybierz widżet który chcesz dodać. Po dodaniu w oknie głównym pojawi się nowy widżet.

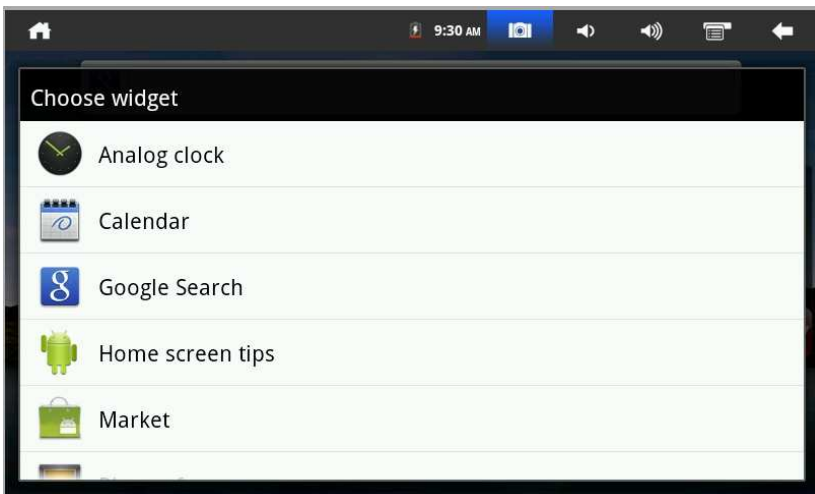

c) Dodawanie folderu

Aby dodać folder wybierz MENU  → Add → folder wybierz folder który chcesz dodać. Po dodaniu możesz zmienić nazwę folderu oraz dodać do niego ikony.

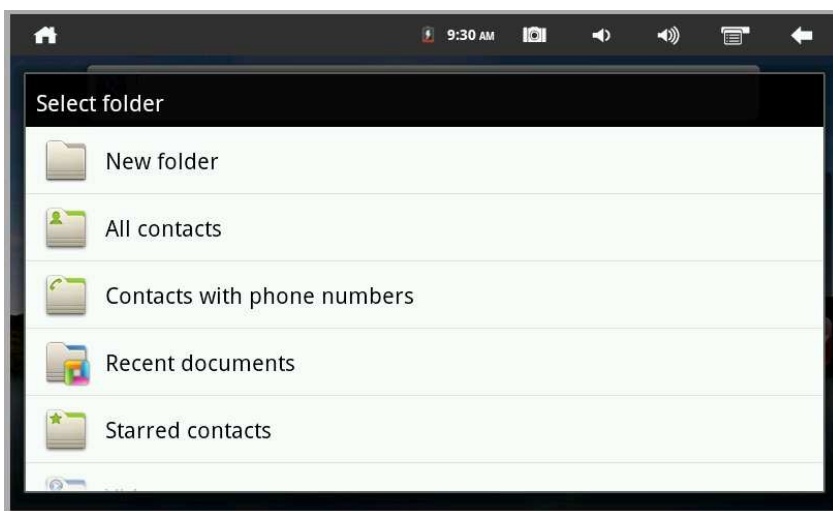

4.5 Korzystanie z widżet

Możesz dodawać, usuwać oraz instalować aplikacje, skróty, widżety. Możesz przesuwać ikony a nawet przemieszczać je między pulpitami.


Kliknij i przytrzymaj na ikonie którą chcesz usunąć pojawi się koszyk przesuń ikonę na koszyk aby ją skasować.

5. Przeglądanie stron internetowych

Urządzenie wyświetla strony internetowe dzięki przeglądarce www.




Kliknij ikonę przeglądarki aby uzyskać dostęp to Internetu. Po kliknięciu zostanie uruchomiona przeglądarka:

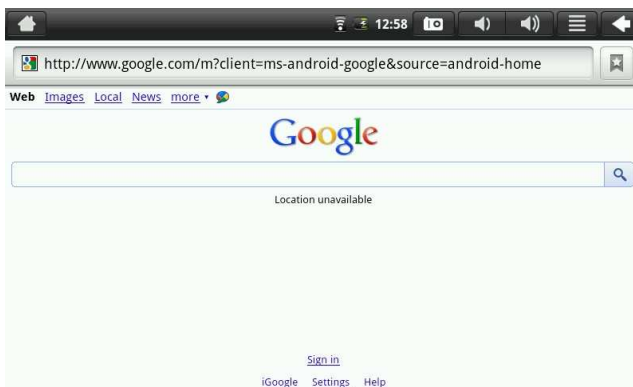

6. Aplikacje


6.1 Poczta




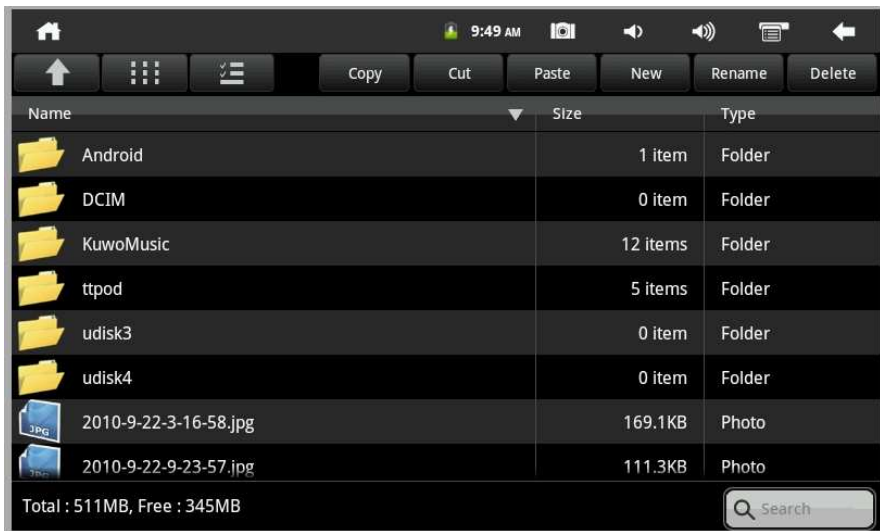
Kliknij ikonę poczty , po uruchomieniu aplikacji możesz dodać konto pocztowe:

- Ustawienia konta pocztowego
- Tworzenie wiadomości
- Wysyłanie i odbieranie wiadomości
- Pobieranie załączników

6.2 Przeglądarka plików (Explorer)



Aby włączyć przeglądarkę plików kliknij , zostanie uruchomiona aplikacja i wyświetlone następujące okno:



Kliknij na odpowiedniej ikonie aby Copy, Cut, Paste, New, Rename and Delete;
Dwa razy kliknij na pliku lub folderze aby go otworzyć.

Instalowanie aplikacji

Jeśli chcesz zainstalować aplikację w przeglądarce plików, wybierz plik o rozszerzeniu "APK" i kliknij dwa razy. Zostanie wyświetlone okno instalacji aplikacji wybierz instaluj.

6.4 Galeria




Kliknij ikonę Galeria zostanie wyświetlona lista zdjęć.

Kliknij przycisk MENU, wyświetlone zostaną opcje: All Pictures, Multi-Option oraz Camera Settings.


All Pictures – zostanie uruchomiony pokaz slajdów

Camera Settings – zostanie wyświetlona lista opcji:

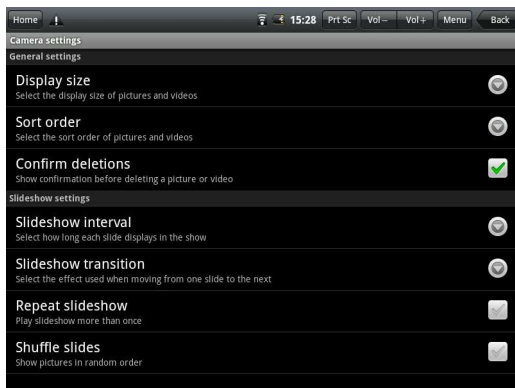


Po kliknięciu na miniaturę zdjęcia zostanie ono wyświetlone na pełnym ekranie. Wyświetlone zdjęcie na pełnym ekranie możesz powiększyć lub pomniejszyć (dzięki menu ekranowemu). Kliknij na Menu, aby wyświetlić dostępne opcje w trybie pełno ekranowym. Możliwe jest również wyświetlenie informacji o zdjęciu i nawet wyświetlenia na mapie etc.

5. Kliknij i przytrzymaj na miniaturze zdjęcia aby wyświetlić opcje:

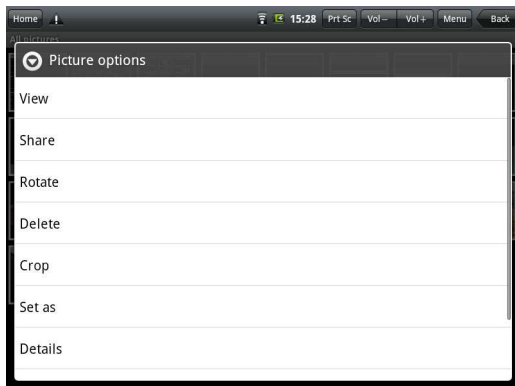

6.5 Muzyka







Kliknij ikonę  aby włączyć aplikację do odtwarzania muzyki.

Po wybraniu MENU zostaną wyświetlone następujące opcje

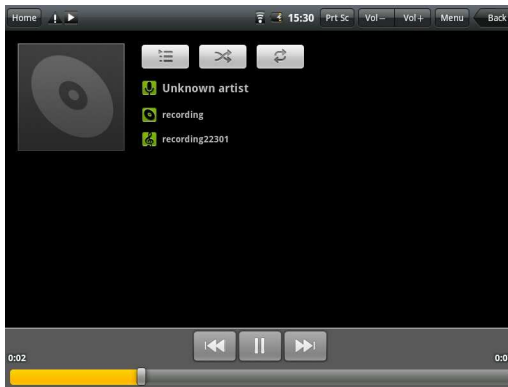


Po wybraniu piosenki zostanie wyświetlone okno.





- a) Kliknij  aby wyświetlić listę piosenek
- b) Kliknij  by włączyć tryb losowego odtwarzania
- c) Kliknij  aby przełączyć między powtarzaniem jednej piosenki a całej list
- d) Kliknij MENU aby mieć dostęp do następujących opcji: Usuń piosenkę, dodaj piosenkę do listy utworów lub wyświetl bibliotekę utworów.

7. Porady oraz dodatkowe informacje

7.1 Przydatne ikony

a) by powrócić do okna głównego kliknij .


b) aby zmienić poziom głośności kliknij na  / 

7.2 Ustawienia oraz skróty do ustawień

Dostęp do Internetu przez sieć Wi-Fi



Kliknij **Wi-Fi settings** aby wyświetlić okno konfiguracji sieci Wi-Fi:

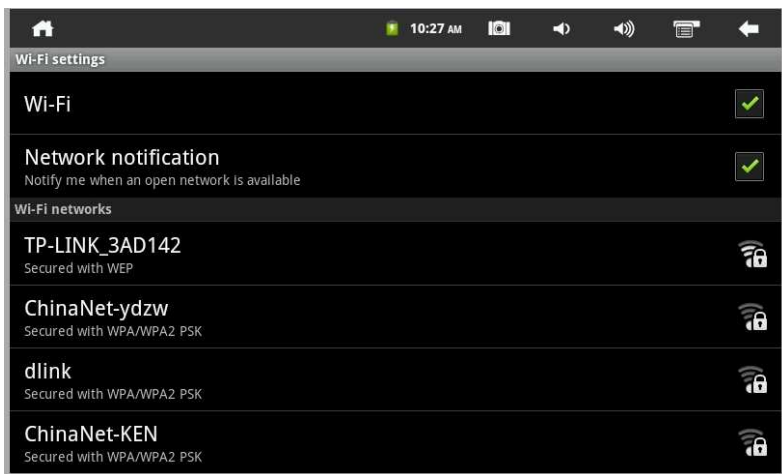

7.3 **Informacje o baterii**

Jak wydłużyć czas pracy na baterii.

- ogranicz czas słuchania muzyki, oglądania filmów, robienia zdjęć
- zmniejsz jasność ekranu: Kliknij Menu → Settings → Display (display setting) → Brightness
- wyłącz szukanie sieci Wi-Fi: Kliknij Menu → Settings → Wireless Network → Connect to Wireless Network → WIFI Setting → Notification
- wyłącz Wi-Fi jeśli nie używasz

8. **Dostosowanie ustawień**



Aby zmienić ustawienia kliknij na **Settings**.

8.1 **Sieci zwykłe i bezprzewodowe**


Aby włączyć WIFI lub wyłączy, kliknij przy WIFI zaznaczając kratkę.

Dostęp do Internetu w sieci bezprzewodowej

Jeśli chcesz zarządzać połączeniami z siecią Wi-Fi lub dodać nowe, wybierz Menu → Settings → Wireless Network → WI-FI setting.

8.2 Dźwięk

Ustawienia opcji dźwięku.

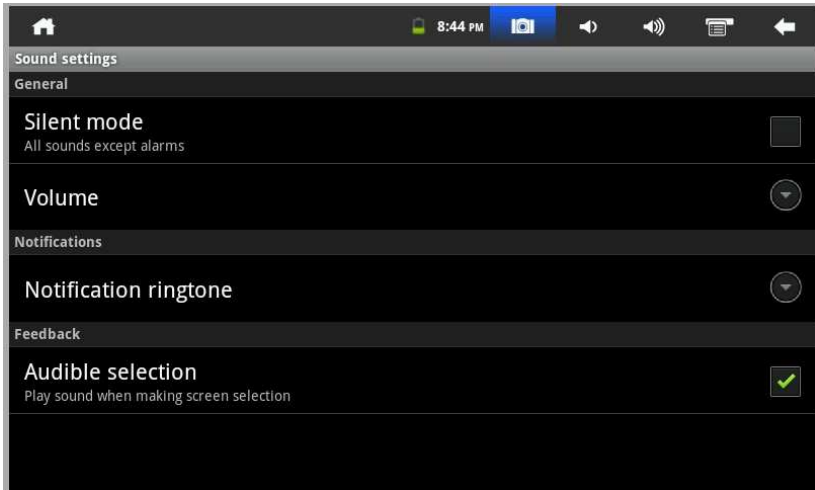

Silent mode

Aby wyciszyć dźwięk za wyjątkiem powiadomień należy kliknąć Menu → Settings → Sound → Silent mode.

Volume

Aby ustawić poziom głośności dla muzyki i filmów kliknij Menu → Settings → Sound → Volume.

Notification ringtone


By ustawić domyślny dźwięk powiadomień kliknij Menu → Settings → Sound → Notification Ringtone.

Selecting the operation ringing

Aby ustawić dźwięk podczas wybierania opcji kliknij Menu → Settings → Sound → Audible selection.

8.4 Ekran

Ustawienia wyświetlacza.

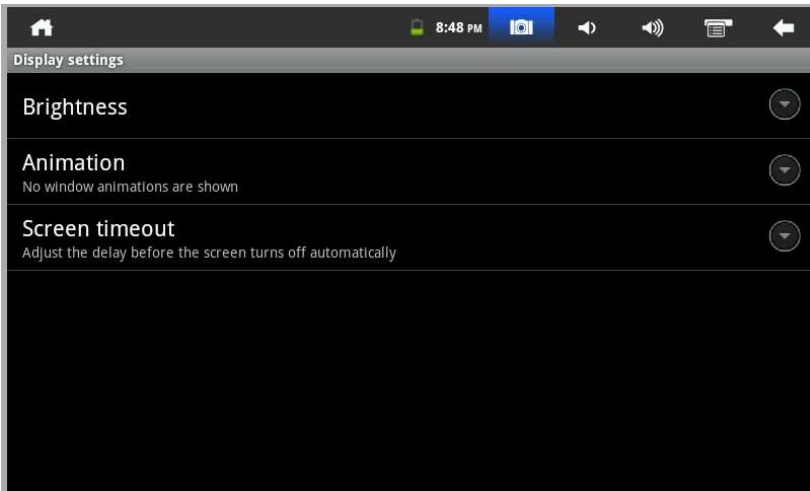

Brightness

Ustawienia poziomu podświetlenia, kliknij Menu →Settings →Display → Brightness.

Animation

Ustawienia animacji okien kliknij Menu →Settings →Display →Animation.

Screen timeout

Ustawienia czasu po jakim ekran ma zostać wygaszony, kliknij Menu →Settings →Display → Screen timeout.

8.4 Aplikacje

Nieznane źródła

Zaznacz tą opcję jeśli chcesz instalować aplikacje poza Android Market.

Szybkie uruchamianie aplikacji

Ustaw skróty klawiszowe do aplikacji kliknij Menu →Settings → Application →Quick launch

Zarządzanie aplikacjami


Zarządzanie zainstalowanymi aplikacjami kasowanie kliknij Menu →Settings → Application → Management applications.

Procesy

Aby wyświetlić listę procesów, kliknij Menu →Settings → Application → Running Services.

8.4 Pamięć


Informacja o wolnej pamięci urządzenia.

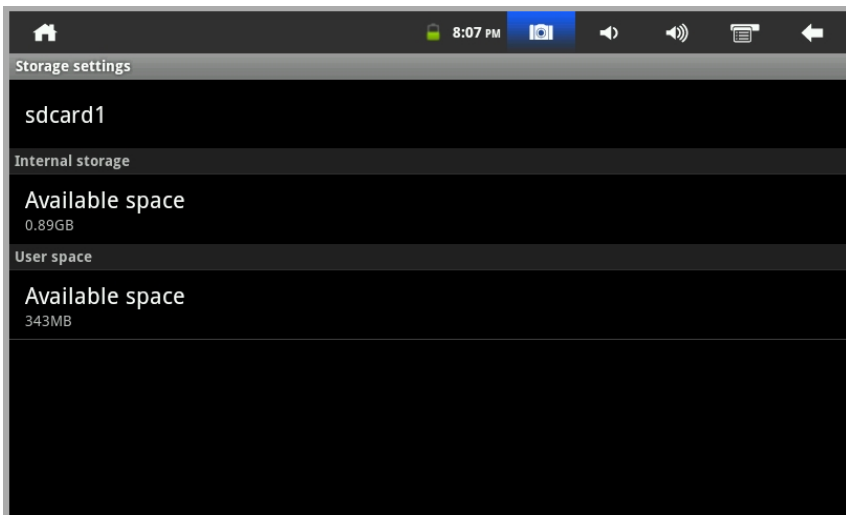

Banki pamięci (SD karta and flash dysk)

Aby zwiększyć ilość wolnego miejsca należy odinstalować nie używane aplikacje,

Kliknij Menu →Settings → Storage. Następnie oznaczenie pamięci w tym przypadku „SD card 1”. W tym miejscu wyświetlana jest informacja na temat dostępnego miejsc na karcie oraz wielkości karty.

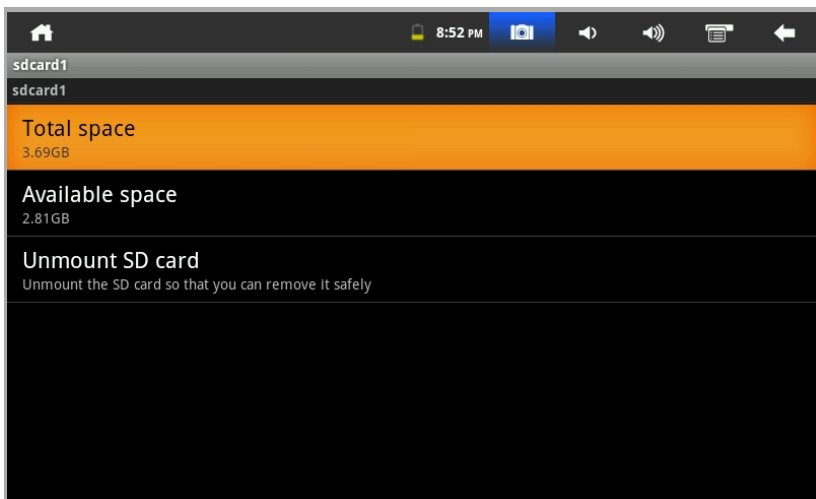


Pamięć systemowa

Aby wyświetlić informację kliknij Menu → Settings → Storage. Tutaj znajdują się informacje na temat pamięci wbudowanej.

8.5 Język i klawiatura

Tutaj wybierasz domyślny języki jak ma być używany (OSD) wygląd i typ klawiatury ekranowej.

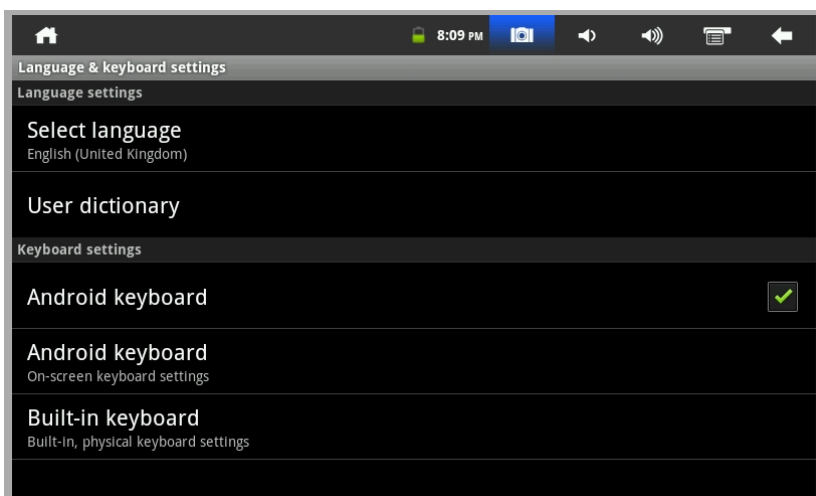

Select OSD language and region

Aby zmienić język, kliknij Menu →Settings →language and keyboard → Select language.

User dictionary


Dodawanie/ usuwanie słów własnego słownika, kliknij Menu →Settings →language and keyboard → User dictionary.

Android keyboard

Wybieranie typu klawiatury ekranowej, kliknij Menu →Settings →language and keyboard → Android keyboard.


8.6 Data i godzina

Aby ustawić Datę i czas należy kliknij Menu →Settings → Date and time.

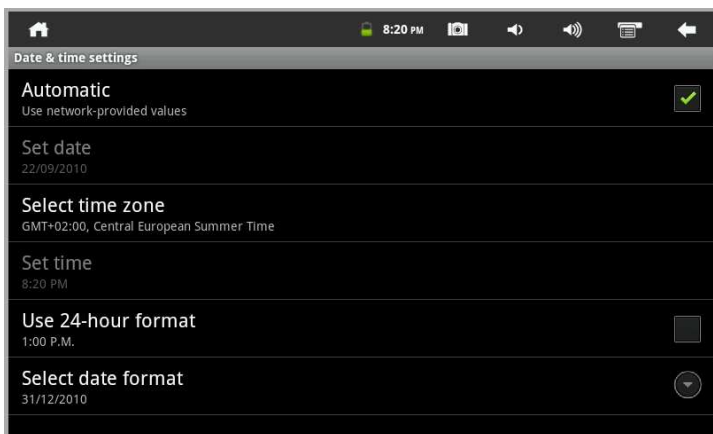

8.8 About the device

W tym menu wyświetlane są informacje na temat urządzenia, oraz wersji systemu Android.

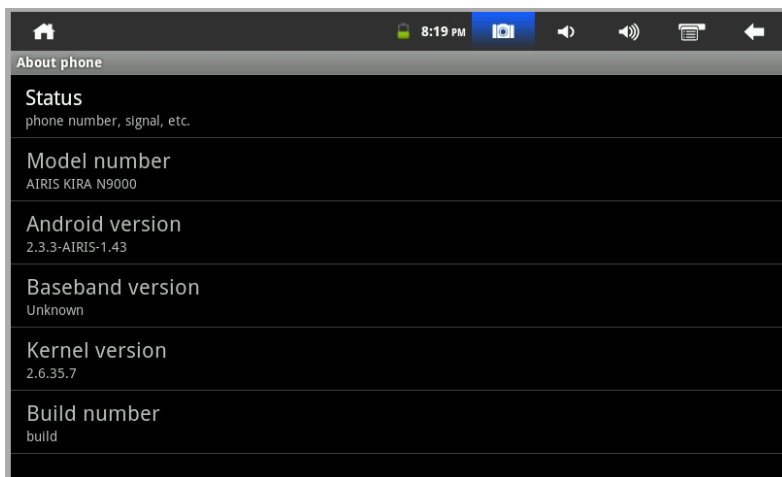

Status

Informacje na temat czasu pracy na baterii urządzenia, Menu →Settings → About the device → Status.

Model

Model urządzenia, kliknij Menu →Settings → About the device → Model Number.

Android version

Wersja systemu Android, kliknij Menu →Settings → About the device →Android version.

Kernel Version

Informacja na temat kernel, kliknij Menu →Settings → About the device →Kernel Version.

9. Korzystanie z HDMI

Dzięki HDMI pliki wideo odtwarzane na urządzeniu mogą być wyświetlone na telewizorze. Maksymalna obsługiwana rozdzielczość filmów w Netbook to 1080P.

Aby wyświetlić obraz po HDMI:

- a) włącz Netbook.
- b) Połącz kablem HDMI urządzenie z telewizorem, na pasku powiadomień powinna się pojawić ikona HDMI.
- c) zacznij odtwarzać film na Netbook.
- d) Kliknij MENU koło 5 przytrzymaj klawisz. Ekran urządzenia powinien się wygasić a na telewizorze wyświetlić film.
- e) Obraz powróci na ekran jeśli:
 - po zakończeniu filmu obraz automatycznie powróci.
 - wciśnij MENU aż obraz nie wróci na ekran urządzenia.
 - odłączenie kabla HDMI powoduje powrót obrazu.
 - Wciśnij Cofnij aby zakończyć film i przywrócić obraz Netbook.

10. Odblokowywanie urządzenia

Odblokowanie ekranu/urządzenia:


Po wygaszeniu ekranu i ponownym włączeniu należy odblokować ekran urządzenia.

11. Rozwiązywanie problemów


11.1 Wyłączanie aplikacji

Po uruchomieniu każda aplikacja potrzebuje pamięć RAM, zbyt wiele uruchomionych aplikacji i tablet może działać wolniej, Zaleca się zamykać aplikacje których się nie używa.

Aby zamknąć aplikację, kliknij Settings → Application → Running Services, jak pokazano poniżej:

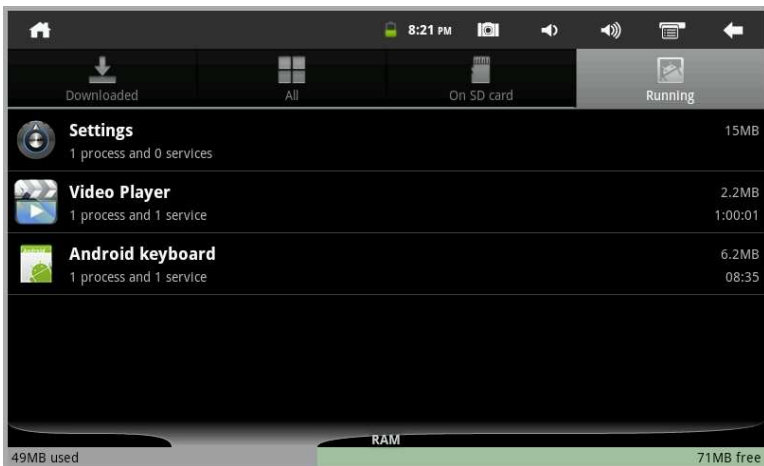

Kliknij na aplikacji, która ma zostać zamknięta, zostanie wyświetlone okno jak pokazano poniżej

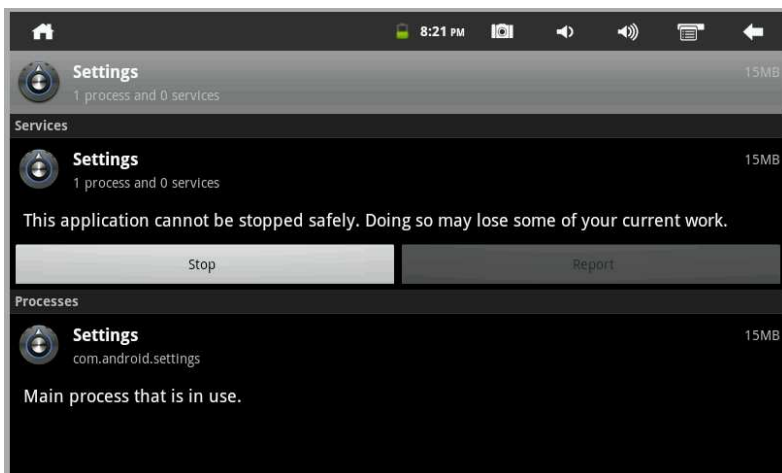

Kliknij stop aby zamknąć aplikację.

11.2 Szybkie zamykanie systemu

- Przytrzymaj włącznik około 7 sekund aby wyłączyć urządzenie.
- Wciśnij Reset na spodzie urządzenia aby wyłączyć.

11.3 Ustawienia fabryczne

Jeśli chcesz przywrócić urządzenie do stanu fabrycznego kliknij Menu → System Settings → Privacy → Defaults

Uwaga: Wszystkie ustawienia, zainstalowane aplikacje zostaną bezpowrotnie usunięte.

12. Utylizacja



Ten produkt nie może być wyrzucany razem z odpadkami. Musi zostać poddany procesowi recyklingu i utylizacji.