



FM Stereo/AM PLL Synthesized Radio

Operating Instructions
Mode d'emploi
Manual de instrucciones

ICF-C1200


Sony Corporation © 2001 Printed in Japan
Printed on recycled paper
Soy ink less than 1% VOC (volatile organic compound) used

http://www.world.sony.com/

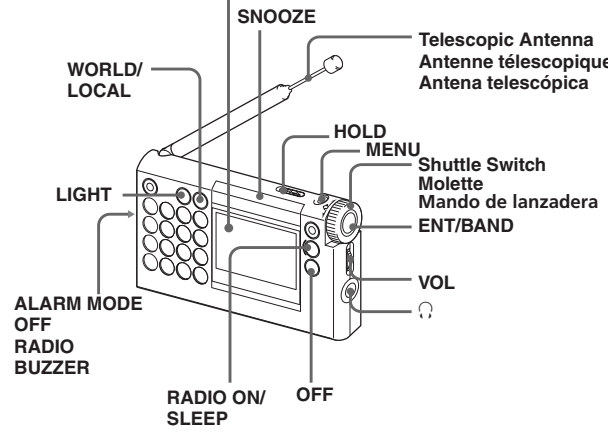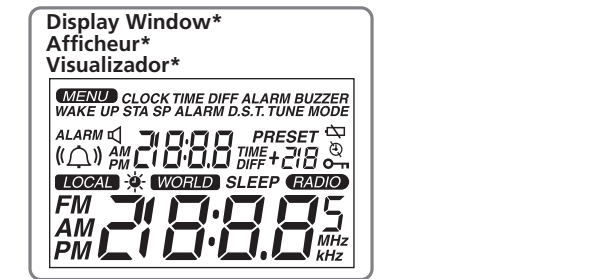

* Part of the display window may differ in some countries.
* Il se peut qu'une partie de l'afficheur soit différente dans certains pays.
* Parte del visualizador puede diferir en algunos países.

A R03 (size AAA) × 2
Piles R03 (format AAA) × 2
R03 (tamaño AAA) × 2

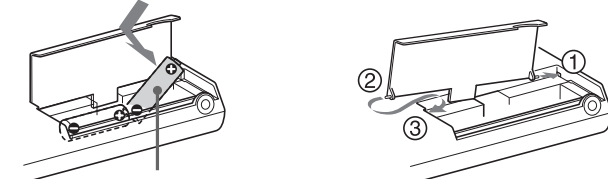

Insert the ⊖ side of the battery first.
Insérez d'abord le pôle ⊖ de la pile.
Inserte en primer lugar el lado ⊖ de las pilas.

B Turn/keep turning
Rotation/rotation
maintenue
Gire/mantenga
girado

Press/hold
down
Presion/
presion
mantenue
Presión/
presión
continua

C Stereo headphones
Casque d'écoute compris
Auriculares estéreo

English

For customers in the U.S.A.
You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment.

Owner's Record
The model number and the serial number are located on the rear. Record the serial number in the space provided below. Refer to them whenever you call upon your Sony dealer regarding this product.

Model No. ICF-C1200

Serial No. _____

Before You Begin

Thank you for choosing the Sony radio! It will give you many hours of reliable service and listening pleasure. Before operating the radio, please read these instructions thoroughly and retain them for future reference.

Features

- Easy-to-use Large LCD with dual time display (current time / alarm time)
- 20 station presets for FM/AM
- Single alarm function - selectable from Radio or buzzer sounds.
- Selectable alarm output - from speaker or stereo headphones.
- Protected by carrying cover, which also works as a stand.
- World time adjusting function.
- Extendable snooze - from 10 min. up to 60 min.

Notes on AM channel step
The AM channel step differs depending on area. See "Changing AM Channel Step".

Precautions

- Operate the radio only on 3.0 V DC with two R03 (size AAA) batteries.
- The nameplate indicating operating voltage, etc. is located on the rear exterior.
- Avoid exposure to temperature extremes, direct sunlight, moisture, sand, dust or mechanical shock. Never leave in a car parked in the sun.
- Should any solid object or liquid fall into the unit, remove the batteries, and have the unit checked by a qualified person before operating it any further.
- In vehicles or buildings, radio reception may be difficult or noisy. Try listening near a window.
- Since a strong magnet is used for the speakers, keep personal credit cards using magnetic coding or spring-wound watches away from the unit to prevent possible damage from the magnet.
- To clean the casing, use a soft cloth dampened with a mild detergent solution.

Notes on Headphones

Do not use headphones while driving, cycling, or operating any motorized vehicle. It may create a traffic hazard and is illegal in many areas. It will also be potentially dangerous to play your headphones at high volume while walking, especially at pedestrian crossings. Use should be exercised with extreme caution or discontinued use in potentially hazardous situations.

Preventing hearing damage
Avoid using headphones at high volume. Hearing experts advise against continuous, loud and extended play. If you experience a ringing in your ears, reduce volume or discontinue use.

Caring for others
Keep the volume at a moderate level. This will allow you to hear outside sounds and to be considerate to people around you.

Warning
If there is lightning when you are using the unit, take off the headphones immediately. If you have any questions or problems concerning your unit, please consult your nearest Sony dealer.

Installing the Batteries

- 1 Open the battery compartment lid and install two batteries.
- When the batteries are first installed, "LOCAL AM12:00" or "LOCAL 0:00" flashes in the display. Once the current time is set, the flashing stops.
- 2 Close the lid.

Battery Life (Approx. hours) (JEITA*)

	FM	AM
Sony alkaline	47	29
LR03 (size AAA)	21	12
Sony R03	21	12
(size AAA)	29	16

* Measured value by the standard of JEITA (Japan Electronics and Information Technology Industries Association). The battery life may shorten depending on the operation of the unit.

You can check the remaining battery power in the display.
The indicators are as follows:

- Indicator
- ⊖ Weakening
- ⊖ Exhausted. You can set the clock and the alarm, but you cannot operate the radio. If you set the radio alarm, the buzzer alarm will come on instead. When the batteries become exhausted, the unit will give a long beep and then turn off. Replace with new batteries. Press **RADIO ON/SLEEP** to delete "⊖" after installing the batteries.
- ⊖ Exhausted. You cannot set alarm, do not work either. Replace the batteries. Press **RADIO ON/SLEEP** to delete "⊖" and "⊖" after installing the batteries.

Note
Do not take more than 10 minutes to replace the batteries, otherwise, your clock setting and preset stations will be deleted from the memory. Should that happen, reset the functions again.

Notes on Batteries
• Align the batteries correctly.
• Do dry batteries cannot be charged.
• To avoid damage from possible battery leakage, remove the batteries when the unit will not be used for a long time.

If the battery compartment lid comes off (See Fig. 1A-⑤)
The battery compartment lid is designed to come off when opened with excessive force. To put it back on, see the illustration.

- ① Insert the right hook of the lid into the right hole in the unit.
- ② Hang the left hook on the left upper part of the compartment.
- ③ Slide the left hook toward the left hole in the unit.

Using the Shuttle Switch

How to use: Turn up or down/keep turning (see Fig. 1B-②)
When you release your finger, the shuttle switch will return to its original position.
Function: Selects "MENU", changes the settings and the frequencies and set the clock.

Using ENT(enter)/BAND

How to use: Press. Hold down until you hear the confirmation beep when presetting the station. (see Fig. 1B-③)
Function: Decides any changes to the settings and changes the band.

Using HOLD

— **HOLD FUNCTION**
How to use: Slide HOLD in the direction of the arrow so that "◀" appears in the display. **Function:** Prevents the unit from being unintentionally turned on, or the radio frequency being accidentally changed. If you press any operation button while "◀" is displayed, "◀" will flash for about 5 seconds.

Setting the Clock
When the batteries are first installed, "LOCAL AM12:00" or "LOCAL 0:00" flashes in the display window. (The illustration is 12-hour system.)

- 12-hour system (North and South America and UK): AM12:00 = midnight
 - 24-hour system (Other countries): 0:00 = midnight
- You can set the clock, even if "⊖" appears. However, the display setting for the 12-hour or 24-hour system is unchangeable.

To set the local time

- 1 Press MENU.
- 2 Turn the shuttle switch up or down to select "CLOCK" and press ENT/BAND.

The "hour" of the clock flashes.



Turn the shuttle switch up or down to adjust the hour and press ENT/BAND.

The "minute" of the clock flashes.




Turn the shuttle switch up or down to adjust the hour and press ENT/BAND.

The "minute" of the clock starts operating.

To set the current time exactly to the second, adjust the minute and then press ENT/BAND in time with a time signal (such as the telephone time signal).

To set the world time

- 1 Press MENU.
- 2 Turn the shuttle switch up or down to select "TIME DIFF" and press ENT/BAND.
- 3 The "hour" of the clock and "TIME DIFF" (time difference between the local and the world time) flashes.



Turn the shuttle switch up or down to show "PRESET" and press ENT/BAND.

Note
You can set only the "hour" in the world time.

To change the world time/local time

- Each time you press **WORLD/LOCAL**, the display changes every 5 seconds.
- Press **WORLD/LOCAL** once. While the display is flashing, press it again for more than 2 seconds to change the display. If you follow this step, the flashing will hear the confirmation beeps.

Changing AM Channel Step

The AM channel step differs depending on areas. The channel step of this unit is factory-set to 9 kHz or 10 kHz. Change the settings as shown below to be able to listen to the radio.

When using in	Channel step
North and South America countries	10 kHz
Other countries	9 kHz

- 1 Press OFF to turn off the power.
- 2 Hold down MENU for about 5 seconds. "MENU" will be displayed, until you hear the confirmation beep.
- 3 Turn the shuttle switch up or down to select "9 kHz" or "10 kHz" and press ENT/BAND.

Note
When the AM channel step is changed, the clock time will be kept but the preset stations will be deleted.

Operating the Radio

— Manual Tuning

- 1 Press **RADIO ON/SLEEP**. The frequency that you tuned in to last time is displayed. If "◀" is in the display, slide HOLD to turn off the HOLD function.
- 2 Press MENU.
- 3 Turn the shuttle switch up or down to select "TUNE MODE" and press ENT/BAND.
- 4 Turn the shuttle switch up or down to delete "PRESET" and press ENT/BAND. "PRESET" does not appear in manual tuning.



Press ENT/BAND to select the band.

6 Turn the shuttle switch up or down to select the desired frequency.
When the frequency is received you will hear the broadcast. After a while, the frequency display changes to the clock display.

One turn of the shuttle switch changes the frequency by 0.1 MHz or 0.05 MHz for FM and 9 kHz for 10 kHz as determined by your AM channel step settings for AM. If you keep turning the shuttle switch up or down, the frequency changes rapidly. When the frequency matches the broadcast frequency, the broadcast will be received.

Adjust the volume with VOL.

Note
If you connect the headphones cord to the jack, the sound does not come from the speaker.

To turn off the radio Press OFF.

Improving Reception FM (See Fig. 1B-④)

Extend the telescopic antenna and adjust the angle and length for the best reception.

The stereo headphones cord serves as the antenna, so extend it as long as possible. In this case, the telescopic antenna does not function (see Fig. 1B-⑥).

AM (See Fig. 1B-③)

An AM antenna is built into the unit. Rotate the unit horizontally until you get the best reception. (Do not operate the unit over a steel deck or metal surface, as this may lead to interference of reception.)

- Adjust the direction of the antenna, holding the bottom of it. The antenna cannot be damaged when you move the antenna, holding the tip of it.
- Rotate the antenna slowly, otherwise, it might hit the unit.

Adjust the direction of the antenna, holding the bottom of it.

Rotate the antenna slowly, otherwise, it might hit the unit.

Setting your Favorite Stations

— Preset Tuning

You can preset up to 10 stations for FM and AM stations respectively. To access the stations, simply select the corresponding preset numbers (1-10). All the preset numbers are preset to certain stations at the factory. To preset your favorite stations, change the stations you wish to preset.

To Preset or Change a Station

- 1 Follow steps 1 to 7 in "Operating the Radio", and manually tune in to the station you wish to preset.
- 2 Hold down ENT/BAND until you will hear the confirmation beep.

"1" flashes and "PRESET" appears. If you do not carry out any further steps, the unit stops flashing after about one minute. The display before step 2 is restored.

Follow steps 1 to 7 in "Operating the Radio", and manually tune in to the station you wish to preset.

Hold down ENT/BAND until you will hear the confirmation beep.

"1" flashes and "PRESET" appears. If you do not carry out any further steps, the unit stops flashing after about one minute. The display before step 2 is restored.

Turn the shuttle switch up or down to select the number (1-10) you wish to preset and press ENT/BAND until you will hear the confirmation beep.

"1" flashes and "PRESET" appears. If you do not carry out any further steps, the unit stops flashing after about one minute. The display before step 2 is restored.

Repeat steps 1 to 3 for the stations to be preset.

To tune in to a Preset Station

- 1 Press **RADIO ON/SLEEP**. If "◀" is in the display, slide HOLD to turn off the HOLD function.
- 2 Press MENU.
- 3 Turn the shuttle switch up or down to select "TUNE MODE" and press ENT/BAND.
- 4 Turn the shuttle switch up or down to show "PRESET" and press ENT/BAND.
- 5 Press ENT/BAND to select the band.
- 6 Turn the shuttle switch up or down to select the desired preset number (1-10).

The frequency set to the preset number is displayed.

Adjust the volume with VOL.

To confirm the frequency of the received station

Turn the shuttle switch up or down. After a while, the frequency changes to the clock display.

Français

Avant de commencer

Nous vous remercions d'avoir choisi cette radio Sony! Cette radio vous assurera de nombreuses heures de service fiable et de plaisir d'écoute. Avant d'utiliser la radio, lisez attentivement le présent mode d'emploi et conservez-le pour toute référence ultérieure.

Caractéristiques

- Grand écran LCD à double affichage (heure actuelle/heure de l'alarme), facile à voir
- 20 présélections de station FM/AM
- Fonction d'alarme - Radio ou 3 sonneries au choix
- Alarme par le haut-parleur ou le casque d'écoute - au choix
- Protection pour le transport, servant aussi de support
- Heure universelle
- Alarme répétée de 10 minutes à 60 minutes

Remarque sur l'intervalle d'accord AM
L'intervalle d'accord AM dépend de la zone. Consultez "Changement de l'intervalle d'accord AM".

Précautions

- Alimenter l'appareil uniquement sur courant continu de 3,0 V avec deux piles R03 (format AAA).
- La plaque signalétique, indiquant la puissance de fonctionnement, etc., se trouve à l'arrière de l'appareil.
- Évitez d'exposer l'appareil à des températures extrêmes, aux rayons directs du soleil, à l'humidité, du sable, de la poussière ou des chocs mécaniques. Ne le laissez jamais dans un véhicule garé en plein soleil.
- Si un solide ou un liquide pénétrait dans l'appareil, retirez-en les piles et faites-le sécher par un technicien avant de le remettre en service.
- Dans un véhicule ou un bâtiment, la réception des ondes radio peut être difficile ou parasitée. Si possible, écoutez près d'une fenêtre.
- Comme un aimant puissant est utilisé dans les haut-parleurs, n'approchez pas l'appareil des cartes de crédit, des cartes magnétiques ou des montres à ressort pour éviter de les endommager.
- Pour éviter les dommages causés par un chiffon doux, imprégné d'une solution détergente neutre.

Remarques sur le casque d'écoute

Sécurité sur la route
N'utilisez pas le casque d'écoute en conduisant une voiture, un vélo ou tout autre véhicule motorisé, car cela peut être dangereux et c'est interdit dans un certain nombre de pays. Il peut également être dangereux d'utiliser le casque d'écoute en marchant, surtout aux passages piétons. Soyez toujours très prudent et cessez d'écouter dans les situations présentant des risques d'accident.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Consigne

Maintenez un volume d'écoute modéré, car vous pourriez ainsi éteindre les sons extérieurs et vous ne détendez pas votre entourage.

Prévention des troubles auditifs
Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Consigne
Maintenez un volume d'écoute modéré, car vous pourriez ainsi éteindre les sons extérieurs et vous ne détendez pas votre entourage.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Consigne

Maintenez un volume d'écoute modéré, car vous pourriez ainsi éteindre les sons extérieurs et vous ne détendez pas votre entourage.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Prévention des troubles auditifs

Évitez une écoute à volume élevé par le casque. Les médecins déconseillent une écoute prolongée à volume élevé. Si vous percevez un bourdonnement dans les oreilles, réduisez le volume ou cessez d'écouter par le casque.

Utilisation de ENT(validation)/BAND

Utilisation: Appuyez. Maintenez enfoncé jusqu'à ce que vous entendiez le bip lors du pré réglage de la station. (Voir Fig. 1B-③)
Fonction: Elle permet les changements des réglages et

