

Quick Start Guide

Краткое руководство / Короткий посібник

Kullanma Kılavuzu



©2012 Sony Corporation Printed in China

English

About the manuals

In addition to this Quick Start Guide, this model is accompanied by the User Guide (HTML document) which you can view from the WALKMAN Guide. For details, refer to "How to Install the Bundled Software (User Guide included)."

Contents

- "WALKMAN" (1)
- Headphones (1)
- Clip (1)
- Quick Start Guide (this manual) (1)
- Software

The software is stored in the built-in flash memory of your Walkman, and includes the following items. For details on how to install it, see "How to Install the Bundled Software (User Guide included)."

— WALKMAN Guide


— User Guide, etc.

About Windows Operating System

Make sure that the OS is Windows 7 (Service Pack 1 or later), Windows XP (Service Pack 3 or later) or Windows Vista (Service Pack 2 or later), and the installed Windows Media Player version on your computer is 11 or 12.

How to Install the Bundled Software (User Guide included)

1 Connect your Walkman to your computer.

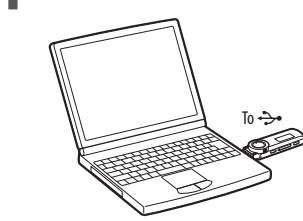

2 Select the following order on the computer.

Select [start] - [My Computer] - [Computer] - [WALKMAN] - [Storage Media].

3 Double-click [Setup.exe].

The install wizard appears.

- When you execute [Setup.exe], the [Setup.exe] file stored in the [Storage Media] folder of your Walkman is copied to your computer for backup, and the WALKMAN Guide is installed to your computer.

4 Follow the on-screen instructions.

After the install wizard is completed, the WALKMAN Guide shortcut appears on the desktop of your computer.

5 Double-click (WALKMAN Guide) on the desktop to start the WALKMAN Guide.

For details on transferring music, refer to the User Guide included in the WALKMAN Guide.

Hint

- You can start the WALKMAN Guide from the [Start] menu (displayed by clicking [Start]).
- Installing the bundled software (user guides included) automatically makes a backup copy of the [Setup.exe] file in the [C] drive on your computer. With the backup file, you can install the software on another computer, even after deleting the [Setup.exe] file by formatting the built-in flash memory of your Walkman. You first need to copy the [Setup.exe] file and the [Install] folder in the [Backup] folder to the Walkman. Then, connect the Walkman to another computer on which you want to install the software and follow the above procedure from step 2. After installing the software, delete the [Setup.exe] file and the [Install] folder on the Walkman. The backup data is preserved in the following [C] drive on your computer by the default install setting.
C:\Program Files*Sony\WALKMAN Guide\NWZ-B170\Backup
- *1) [Program Files(x86)] may be displayed depending on the computer OS.

What can you do with the WALKMAN Guide?

The WALKMAN Guide includes the following items:

□ User Guide

The following contents can be viewed in your web browser.

- Details on how to use your Walkman
- How to use software to transfer content to your Walkman
- Troubleshooting

□ Customer Registration Link

□ Customer Support Link

□ Other useful Links

Includes link information, etc., on the download site.


The bundled items differ depending on the country/region of purchase.

Hint

- After executing [Setup.exe] you can use the free space in the [Storage Media] folder more effectively by formatting the built-in flash memory of your Walkman. To format the built-in flash memory of the Walkman, see "To initialize (format) your "WALKMAN".

Charging the Battery


The battery for your Walkman is recharged while the Walkman is connected to a running computer.

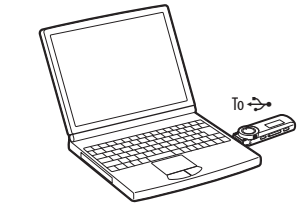

Note

- When you use your Walkman for the first time, or if you have not used the Walkman for a long time, recharge it fully. When you charge a depleted battery, the power illuminator blinks clockwise and nothing appears in the display. If the display of the Walkman remains blank for more than 5 minutes, press the RESET button to reset the Walkman.
- If you turn on the computer, restart the computer, shut down the computer, or wake up the computer from Sleep or Hibernate status while your Walkman is connected to the computer, the Walkman may malfunction. In this case, press the RESET button of the Walkman to reset it. Disconnect the Walkman from the computer before performing these operations.
- To prevent battery deterioration, charge the battery at least once every half a year or every year.

Parts and Controls

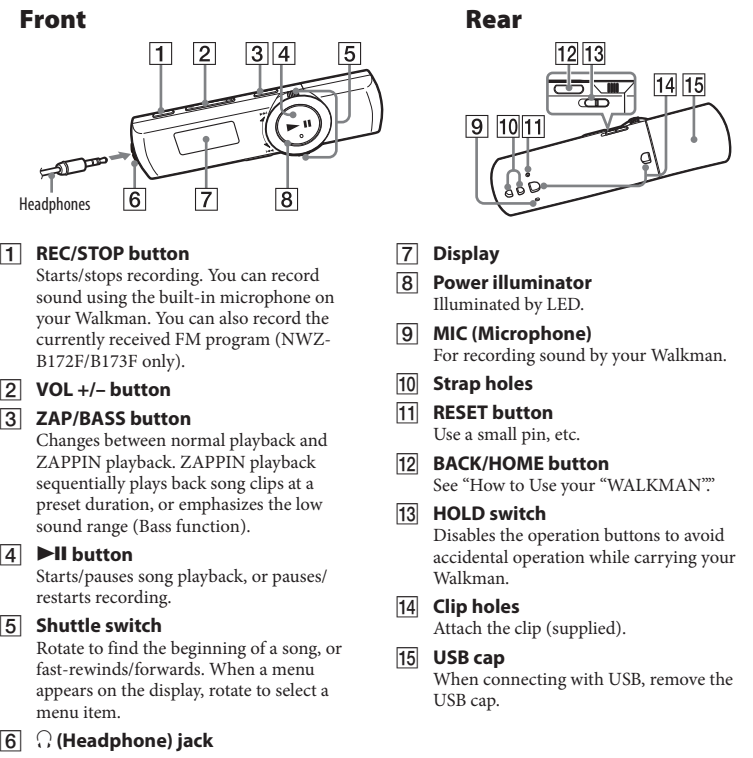

Turning Your "WALKMAN" On and Off

To turn on	Press the ▶II button.
To turn off	Press and hold the ▶II button.

Hint

- If song playback is paused and there is no operation for a certain period of time, your Walkman turns off automatically.

How to Use Your "WALKMAN"

The Home menu is the starting point of each application.

To play the Home menu	Press and hold the BACK/HOME button.
To select an item	Rotate the shuttle switch to ◀◀ ▶▶ to select an item, and then press the ▶II button to confirm.
To return to the previous screen	Press the BACK/HOME button.



The icons appear in the Home menu and the color of the selected icon is inverted.

	[Voice]	Plays back/deletes sound files recorded with the built-in microphone on your Walkman.
	[Music Library]	Plays back transferred songs on your Walkman.
	[FM]	Plays FM radio, or plays back/deletes FM radio programs recorded with your Walkman.
	[Settings]	Sets the function for music, FM*, voice recording, or your Walkman settings.


*  and items related to the [FM] function appear on NWZ-B172F/B173F only.

Importing and Transferring Music

You can transfer songs to your Walkman using Windows Media Player 11 or 12 on your computer. If you use Windows Media Player 10 or older on your computer, install Windows Media Player 11 from the Windows Media Player download site. <http://support.microsoft.com/>

1 Import songs from CDs, etc., to Windows Media Player 11 or 12 on the computer.

For details on how to import songs from CDs, etc., refer to the Help of Windows Media Player 11 or 12. You do not need to re-import songs that have previously been imported to Windows Media Player 11 or 12.

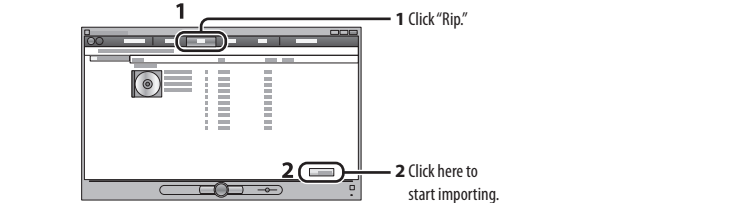


2 Connect your Walkman to your computer.

Insert the USB connector fully.

3 Transfer songs from Windows Media Player 11 or 12 to your Walkman.

[DATA ACCESS] appears in the display while you are transferring songs to the Walkman.

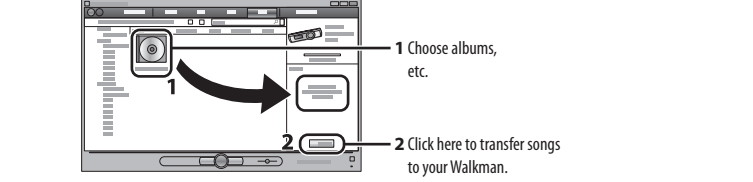

Note

- Do not disconnect your Walkman while files are being transferred. If you do, the file being transferred will be damaged.
- You cannot transfer contents with copyright protection since your Walkman does not support them.

Hint

- You can also transfer data to your Walkman by dragging and dropping it in Windows Explorer on your computer.

To delete songs transferred to your "WALKMAN"

Connect your Walkman to your computer, and then delete any unnecessary audio files using Windows Media Player 11, 12 or Windows Explorer.

Troubleshooting

If your Walkman does not function as expected, try the following steps to resolve the issue.

1 Find the symptoms of the issue in "Troubleshooting" in the User Guide (HTML document), and try any corrective actions listed.

For details on connecting to a computer, see the table below.

2 Connect your Walkman to your computer to charge the battery.

You may be able to resolve some issues by charging the battery.

3 Press the RESET button with a small pin, etc.

If you press the RESET button while operating your Walkman, the stored data and Walkman settings may be lost. After resetting the Walkman, press the **▶II** button to turn on the Walkman.

4 Check information on the issue in the Help of each software.

5 Look up information on the issue on one of the customer support Web sites.

About the customer support web sites, see "For the latest information."

6 If the approaches listed above fail to resolve the issue, consult your nearest Sony dealer.

Symptom	Cause/Remedy
I cannot charge the battery.	• Your Walkman is not connected to a USB connector on your computer properly. → Disconnect the Walkman, and then reconnect it. • The battery is charged in an ambient temperature out of the range of 5 °C (41 °F) to 35 °C (95 °F). → You cannot charge the battery when the  icon appears. Charge the battery in an ambient temperature of 5 °C (41 °F) to 35 °C (95 °F). • The computer is not on. → Turn on the computer. • Your computer has entered Sleep or Hibernation status. → Release the computer from Sleep or Hibernation status.
[CONNECTED USB] does not appear when your Walkman is connected to the computer.	• The USB connector on your Walkman is not connected to a USB connector on your computer properly. → Disconnect the Walkman, and then reconnect it. • A USB hub is being used. → Connect your Walkman directly to a USB connector, as connection via a USB hub may not work. However, a USB hub that supplies power can be used. • Another application is running on the computer. → Disconnect your Walkman, wait a few minutes, and reconnect it. If the problem persists, disconnect the Walkman, restart the computer, and then reconnect the Walkman. • The USB connector on your computer may have a problem. → Connect your Walkman to another USB connector on your computer. • The remaining battery power is insufficient. → Charge the battery by connecting your Walkman to a running computer for at least 5 minutes. When you charge a depleted battery, the power illuminator blinks clockwise and nothing appears in the display.
Your Walkman becomes unstable while it is connected to the computer.	• A USB hub is being used. → Connect your Walkman directly to a USB connector, as connection via a USB hub may not work. However, a USB hub that supplies power can be used.

To initialize (format) your "WALKMAN"

You can format the memory of your Walkman. If the memory is formatted, all shortcut icons and files including the User Guide (HTML document) will be erased and all settings will be returned to their default values. Be sure to verify the files stored in the memory prior to formatting and export any necessary files to the hard disk of your computer or other devices beforehand.

1 Press and hold the BACK/HOME button until the Home menu appears.

2 Select [Settings] - [Initialize] - [Format] - [OK], in this order.

Rotate the shuttle switch to select the item, and then press the **▶II** button to confirm. After you confirm it, [FORMATTING...] appears and formatting starts. When formatting is complete, [COMPLETE] appears.

Note

- Do not format the memory of your Walkman in Windows Explorer. If you format the Walkman in Windows Explorer accidentally, do it again on the Walkman.
- If you format the memory of your Walkman accidentally, download the User Guide (HTML document) from the web site mentioned in "For the latest information."

Precautions

About the headphones

- Avoid playing the unit at so loud a volume that extended play might affect your hearing.
- At a high volume outside sounds may become inaudible. Avoid listening to the unit in situations where hearing must not be impaired, while driving or cycling.
- As the supplied headphones are of open-air design, sounds go out through the headphones. Remember not to disturb those close to you.

Do not expose the batteries (battery pack or batteries installed) to excessive heat such as sunshine, fire or the like for a long time.

Rated current consumption 500 mA

For users in France

When replacing the headphones/earphones, please refer to the model of the headphones/earphones adapted to your unit that appears below.

MDR-E80HYLA

At high volume, prolonged listening to the personal audio player can damage the user's hearing.

Program ©2012 Sony Corporation
Documentation ©2012 Sony Corporation

For the latest information

If you have any questions or issues with this product, or would like information on compatible items with this product, visit the following Web sites.

For customers in the USA: <http://www.sony.com/walkmansupport>

For customers in Canada: <http://www.sony.ca/ElectronicsSupport/>

For customers in Europe: <http://support.sony-europe.com/DNA>

For customers in Latin America: <http://www.sony-latin.com/index.crp>

For customers in other countries/regions: <http://www.sony-asia.com/support>
For customers who purchased the overseas models: <http://www.sony.co.jp/overseas/support/>

Русский

О руководстве

Помимо данного Краткого руководства в комплект этой модели входит Руководство пользователя (документ HTML), который можно открыть из WALKMAN Guide. Для получения дополнительной информации см. "Установка прилагаемого программного обеспечения (включая Руководство пользователя)".

Содержание


- "WALKMAN" (1)
 - Наушники (1)
 - Зажим (1)
 - Краткое руководство (настоящее руководство) (1)
 - Программное обеспечение
- Программное обеспечение хранится во встроенной флэш-памяти Walkman и содержит следующие элементы. Дополнительные сведения об установке см. в "Порядок действий при установке прилагаемого программного обеспечения (Руководство пользователя включено)".
- WALKMAN Guide
 - Руководство пользователя и т. п.

Об операционной системе Windows

Убедитесь, что ОС является Windows 7 (Пакет обновления 1 или последующих версий), Windows XP (Пакет обновления 3 или последующих версий) или Windows Vista (Пакет обновления 2 или последующих версий), а установленный на компьютере Прогригватель Windows Media версии 11 или 12.

Порядок действий при установке прилагаемого программного обеспечения (Руководство пользователя включено)

1 Подключите Walkman к компьютеру.

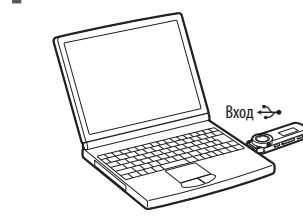

2 На компьютере выполните действия в следующем порядке.

Нажмите кнопку [Пуск] - выберите [Мой компьютер] или [компьютер] - [WALKMAN] - [Storage Media].

3 Дважды щелкните файл [Setup.exe].

- При запуске [Setup.exe] резервная копия файла [Setup.exe], хранящегося в папке [Storage Media] Walkman, копируется на компьютер и на него устанавливается WALKMAN Guide.

4 Следуйте указаниям на экране.

После завершения работы Мастера установки ярлык WALKMAN Guide появится на рабочем столе компьютера.

5 Дважды щелкните значок (WALKMAN Guide) на рабочем столе, чтобы запустить приложение WALKMAN Guide.

Для получения дополнительной информации о перемещении музыки и т.д. см. Руководство пользователя, которое содержится в руководстве WALKMAN Guide.

Совет

- Запустить WALKMAN Guide можно из меню [Пуск] (для отображения щелкните [Пуск]).
- Устанавливаемое прилагаемое программное обеспечение (Руководства пользователя включены), автоматически делает резервную копию файла [Setup.exe] на диске [C] компьютера. С резервным файлом вы можете установить программное обеспечение на другом компьютере, даже после удаления файла [Setup.exe] путем форматирования встроенной флэш-памяти Walkman. Сначала вам потребуется скопировать файл [Setup.exe] и папку [Install] в папку [Backup] на Walkman. Затем подключите Walkman к другому компьютеру, на котором вы хотите установить программы и следуйте вышеприведенной процедуре с шага 2. После установки программного обеспечения удалите файл [Setup.exe] и папку [Install] с Walkman.
- По умолчанию резервные данные сохраняны на диске [C] компьютера. C:\Program Files*Sony\WALKMAN Guide\NWZ-B170\Backup

*1 В зависимости от ОС компьютера может отображаться [Program Files(x86)].

Использование приложения WALKMAN Guide

Приложение WALKMAN Guide включает в себя следующие элементы.

□ Руководство пользователя

- В окне веб-браузера можно просмотреть следующее содержимое.
 - Подробные сведения по использованию Walkman
 - Как использовать программное обеспечение для передачи содержимого на Walkman

— Поиск и устранение неисправностей

□ Ссылка для регистрации покупателей

□ Ссылка для поддержки пользователей

□ Другие полезные ссылки

Ссылки на сайт загрузки и т.д.


В разных странах и регионах комплект поставки может отличаться.

Совет

- После запуска [Setup.exe] свободное место в папке [Storage Media] можно использовать более эффективно, отформатировав встроенную флэш-память Walkman. Сведения о форматировании встроенной флэш-памяти проигрывателя см. в разделе "Инициализация (форматирование) "WALKMAN"".

Зарядка аккумуляторной батареи

Батарея Walkman заряжается, когда Walkman подсоединен к работающему компьютеру.

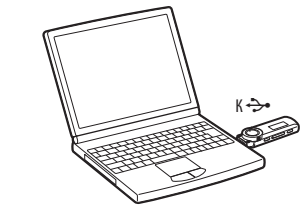


Примечание

- Перед первым использованием Walkman, а также после длительного перерыва в использовании выполните его полную зарядку. Во время зарядки разряженной батареи индикатор питания мигает по часовой стрелке, а дисплей пуст. Если дисплей Walkman не включается по истечении 5 минут, нажмите кнопку RESET для сброса настроек Walkman.
- Включение, перезагрузка, выключение компьютера или выход его из режимов ожидания или сна при подключении к компьютеру Walkman может привести к неисправности Walkman. В этом случае нажмите кнопку RESET на Walkman, чтобы сбросить его настройки. Перед тем как выполнять перечисленные действия, отсоедините Walkman.
- Во избежание износа батарей заряжайте ее не реже, чем раз в полгода или в год.

Можности и элементы управления

Вид спереди

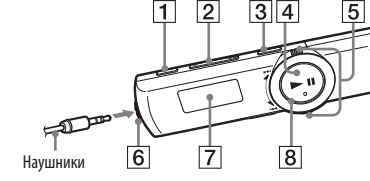

- Кнопка REC/STOP**
Начало/остановка записи. Можно записывать звук, используя встроенный микрофон Walkman. Кроме того, можно записать принимаемую в текущий момент FM-программу (только для моделей NWZ-B172F/B173F).
- Кнопка VOL +/-**
- Кнопка ZAP/BASS**
Переключение между режимом обычного воспроизведения и режимом воспроизведения ZAP/PIN. Режим воспроизведения ZAP/PIN последовательно воспроизводит отрывки композиций с предварительно установленной продолжительности или усиливает низкие частоты (Функция усиления басов).
- Кнопка ▶II**
Запуск/приостановка воспроизведения композиции или приостановка/повторное начало записи.
- Поворотный переключатель**
Поверните переключатель, чтобы найти начало композиции или выполнить ускоренную перемотку назад или вперед. При отображении меню на дисплее поверните переключатель, чтобы выбрать элемент меню.
- Разъем (наушников)**

Вид сзади



- Дисплей**
- Индикатор питания**
Подсвечивается светодiodом.
- МІС (микрофон)**
Для записи звука Walkman.
- Отверстия для ремешка**
- Кнопка RESET**
Для нажатия используйте булавку и т.п.
- Кнопка BASK/HOME**
См. "Использование "WALKMAN".
- Переключатель HOLD**
Отключение кнопок управления во избежание случайного нажатия при переносе Walkman.
- Отверстия для зажима**
Установите зажим (прилагается).
- Крышка USB**
При подключении к разьему USB снимите крышку USB.

Включение и отключение "WALKMAN"

Включение	Нажмите кнопку ▶II .
Выключение	Нажмите и удерживайте нажатой кнопку ▶II .


Совет

- Если во время приостановки воспроизведения в течение некоторого времени не выполняется никаких действий, Walkman отключается автоматически.

Использование "WALKMAN"

В меню Главное можно запустить любое приложение.

Отображение меню Главное	Нажмите и удерживайте нажатой кнопка BACK/HOME.
Выбор элемента	Поверните поворотный переключатель в положение ◀◀▶▶ , чтобы выбрать пункт меню, затем нажмите кнопку ▶II для подтверждения.
Возврат к предыдущему экрану	Нажмите кнопка BACK/HOME.

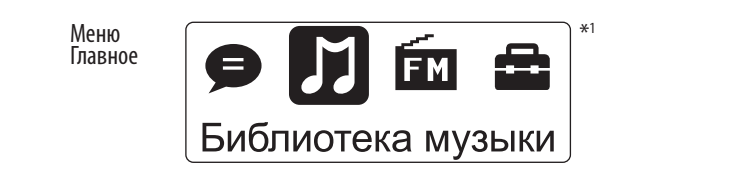

Следующие значки отображаются в меню Главное. Цвета выбранного значка инвертируются.

	[Голос]	Воспроизведение/удаление звуковых файлов, записанных с помощью встроенного микрофона на Walkman.
	[Библиотека музыки]	Воспроизведение переданных на Walkman композиций.
	[FM]	Воспроизведение FM-радио, а также воспроизведение или удаление FM-программ, записанных на Walkman.
	[Настройка]	Устанавливает функции для музыки, FM*, записи голоса или настроек Walkman.

*1  и элементы, относящиеся к функции [FM], отображаются только в моделях NWZ-B172F/B173F.

Импорт и передача музыки

Для перен

