

# viconte

## HAIR CLIPPER SET

Instruction manual

## НАБОР ДЛЯ СТРИЖКИ ВОЛОС

Руководство по эксплуатации



# VC-461

## **ELECTRICAL SAFETY**

---

- Switch off when not in use and before cleaning or changing accessories.
- This appliance is not designed for use by persons with reduced physical, sensory or mental capabilities, and should not be used by such persons unless they can do so safely. Where necessary, such persons (or anyone with lack of experience or knowledge) should first be given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep appliance dry and away from areas where it is likely to get splashed. Never immerse in water.
- Keep appliance away from heat, sharp objects or anything that may cause damage. Ensure all ventilation slots, grilles etc are kept clear of debris and foreign objects.
- Do not operate the appliance if damaged or after it malfunctions.

## **EXTRA SAFETY PRECAUTIONS – CAUTION!**

---

The unit contains a sharp blade. Take care to avoid contact between the blade and skin, during use and maintenance.

## **FEATURES:**

---

1. Mens grooming – 3 in 1 set
2. Nose/ear, shaver and trimming attachments
3. 2 Hair length comb attachments
4. Mini foil shaver attachment
5. On/off switch
6. Protective cap (locks switch off)
7. Grooming comb, cleaning brush, and storage stand included
8. Battery operated

## BATTERY REPLACEMENT:

---

This appliance is designed for use with 1 x AA battery (1.5V) (not included). If the trimmer motor slows down in operation or becomes less efficient, replace the battery.

To replace the battery, twist off the bottom cover as shown in the picture below. Insert AA battery.

**Note:**

- Remove the batteries when the appliance is not in use for an extended period of time.

## OPERATION

---

**To attach:** place the chosen attachment onto the open end of the groomer, and turn it so the solid arrow aligns with solid circle.

**To remove:** Turn the attachment so the open arrow aligns with the open circle, and pull it off.

1. Remove the safety cap.
2. Select the desired blade and attach to the body of the unit using the twist lock system.
3. Switch on the trimmer – you will hear the motor working.
4. Use trimmer as directed below.
5. Switch the device off after use and clear the head with a brush.

**Hair Length Combs:**


The hair length combs attach onto the wide trimmer head to control the length of the cut. There are four positions for each attachment:

**Hair length comb 1:**

1. Extra close
2. Close
3. Short
4. Medium short

**Hair length comb 2:**

5. Medium
6. Medium long
7. Long
8. Extra long

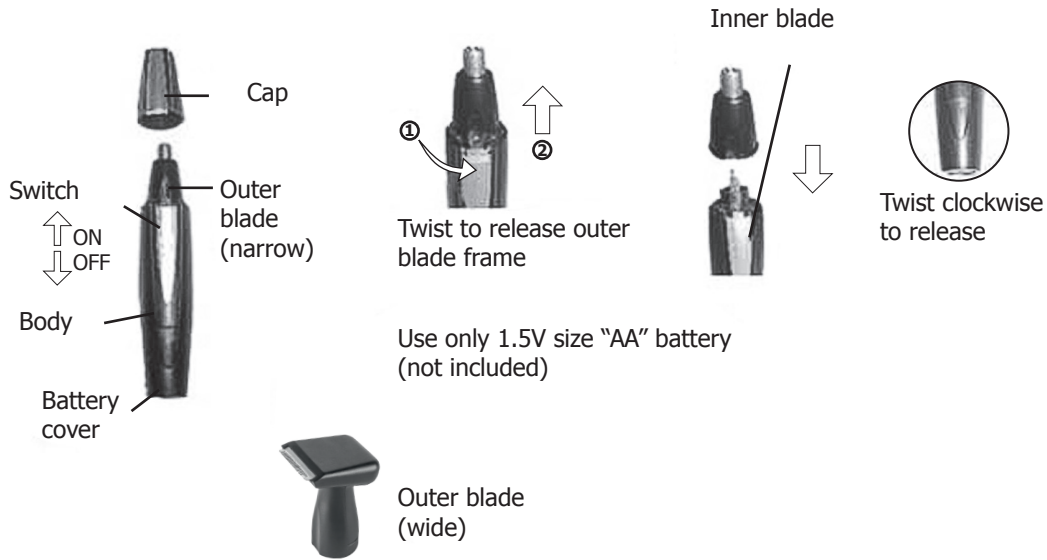

**To attach:** Place the front hooks of the hair length attachment over the front of the wide trimmer head, and pivot it onto the trimmer head until it locks into place.

## WHICH ATTACHMENT TO USE:

	Wide Trimmer	Nose/Ear Trimmer	Hair Length Combs
Beard	X		X
Beard line	X		
Ear		X	
Mustache	X		X
Nape of neck	X		
Nose		X	
Sideburns	X		X

### GROOMING

- Hair should be dry and free from lotions when using your groomer.
- Comb your hair outwards so they are at their maximum height and facing in the same direction.
- Make sure the groomer does not have damaged or broken cutter units, which could cause injury if used.

### BEARD (Use the wide trimmer and the desired comb attachment)

- Select the desired hair length comb to the groomer head as detailed above.
- Set the comb to the desired trim length. It's usually a good idea to use a longer setting until you are familiar with the groomer, to avoid trimming excess hair.
- Turn the groomer on and start under your chin and follow your jaw line, trim toward your ear and upper beard line using an upward motion. Allow the comb attachment to follow the contours of your face.

### THINNING AND TAPERING (Use the wide trimmer)

- Turn the groomer on and use the small comb to hold the beard hairs in place while trimming.
- Holding the groomer with the cutting unit facing away from you, move the groomer along the length of the comb.

### BEARD LINE (Use the wide trimmer)

- Switch on and hold the groomer with the trimmer cutting blades facing you.
- Lightly touch the cutting blades to your face and draw the groomer toward your beard line. For your neck, draw the groomer away from desired beard line.

### **AROUND THE BEARD (Use the mini screen shaver attachment)**

- Turn the groomer on and use the Mini Screen shaver to shave the detail areas around the beard.
- Hold the groomer so the mini screen gently touches your skin. This allows the unit to give you the closest shave with minimum screen wear. Avoid holding the groomer at an angle. This will distort the screen and may cause skin irritation.

### **EAR (Use the nose/ear trimmer head)**

- Turn the groomer on and gently insert groomer's cutting unit into the outer ear canal. For safe trimming, avoid inserting the groomer more than ¼ inch into the ear canal.
- Rotate the groomer in a circular motion, gently moving it in and out as you rotate.

### **OUTER EAR (Use the nose/ear trimmer head)**

- Turn the groomer on and carefully guide the groomer around surfaces of the ear where there are unwanted hairs.

### **EYEBROWS (Use the nose/ear trimmer head)**

- Turn the groomer on and carefully guide the cutting edges to stray hairs along the eyebrow line or protruding from the eyebrow itself.
- For best results, don't use the groomer to define the entire eyebrow.

### **MUSTACHE (Use the wide trimmer)**

- Use a small comb to straighten hairs for trimming.
- Turn the groomer on and lightly touch the cutting blades to the mustache. Too much pressure may trim more hair than desired.
- Since all hairs do not grow in the same direction, you may want to try trimming upwards, downwards, or across.
- Practice will produce optimum results.

### **NAPE OF NECK (Use the wide trimmer)**

- Use a hand mirror if you are trimming the nape of your neck yourself.
- Lift the hair up off the neck, and use your index finger to cover the roots of any hair you DON'T want to trim. This will serve as a bumper to prevent accidentally trimming too much hair.
- Turn the groomer on and hold it base-side up.
- Place the cutting edges to your neck, and move the groomer slowly up your neck until it touches the finger that's covering the roots of your hair.

### **NOSE (Use nose/ear trimmer)**

Turn the groomer on and insert groomer's cutting unit gently into the nostril. For safe trimming, avoid inserting the groomer more than ¼ inch into your nostril.

Rotate the groomer in a circular motion around the opening of the nostril, gently moving it in and out as you rotate.

### **CLEANING AND CARE**

1. The appliance should be switched off before cleaning. Remove the battery and loosen the head by turning in counter-clockwise
2. Remove the cutter blade (WARNING – CARE SHOULD BE TAKEN IN HANDLING THE BLADE AS IT IS VERY SHARP)
3. Brush the cutter blade and surrounding with the cleaning brush
4. Re-assemble the trimmer by repeating the process in the reverse order
5. Clean the body with a soft dry cloth.
6. Do not use any harsh detergents, abrasives, solvents or cleaners. Never immerse in water to clean.

## **SPECIFICATIONS**

---

GW/NW	0,3/0,25 kg
Gift box dimension (L*W*H)	120*54*140 mm

# ТЕХНИКА БЕЗОПАСНОСТИ ПРИ ИСПОЛЬЗОВАНИИ ЭЛЕКТРИЧЕСКОГО ПРИБОРА

---

- Храните электроприбор в сухом месте, избегайте попадания на него брызг. Не опускайте прибор в воду.
1. Электроприбор имеет острое лезвие. При использовании и обслуживании соблюдайте меры предосторожности во избежание порезов.

## ХАРАКТЕРИСТИКИ:

---

1. Мужской набор для личного пользования – 3 в 1
2. Насадки-триммеры для удаления волос из носа/ушей, а также насадки для бритья и приведения волос в порядок
3. 2 насадки-расчески для волос разной длины
4. Небольшая сеточная бритвенная насадка
5. Переключатель Вкл./Выкл.
6. Защитный колпачок (фиксирует переключатель в положении Выкл.)
7. В комплекте гребень для ухода за волосами, щеточка для очистки и подставка для хранения насадок
8. С питанием от батарейки

## ЗАМЕНА БАТАРЕЙКИ:

---

Настоящий электроприбор предназначен для использования с пальчиковой батарейкой типа АА (1,5 В) (не входит в комплект). В случае если при использовании двигатель триммера замедляется или работает менее эффективно, замените батарейку.

Для замены батарейки открутите нижнюю крышку, как показано на рисунке ниже. Вставьте пальчиковую батарейку.

### **Примечание:**

- Вставляйте батарейки с учетом полярности их выводов.
- Использованные батарейки должны быть своевременно извлечены и утилизированы в соответствии с рекомендациями производителя.
- Извлекайте батарейки в случае, если электроприбор не используется в течение длительного времени.
- Не замыкайте на коротко выводы батареек или контакты в отсеке для батареек.

# ЭКСПЛУАТАЦИЯ

---

**Для установки насадки:** установите необходимую насадку на открытый конец триммера и проверните его таким образом, чтобы заштрихованная стрелка совпала с заштрихованным кружочком.

**Для снятия насадки:** поверните насадку таким образом, чтобы незаштрихованная стрелка совпала с незаштрихованным кружочком, и снимите ее.

1. Снимите защитный колпачок.
2. Выберите подходящее лезвие и зафиксируйте его на электроприборе при помощи системы поворотного замка.
3. Включите триммер – вы услышите характерный звук того, что двигатель работает.
4. Воспользуйтесь триммером, как указано ниже.
5. После использования выключите устройство и очистите головку насадки при помощи щетки.

## **Насадки-расчески для разной длины волос:**

Насадки-расчески для разной длины волос крепятся на широкую насадку триммера для того, чтобы регулировать длину стрижки. Для каждой насадки существует четыре положения:

### **Насадка-расческа для длины волос 1:**


1. Минимальная длина
2. Очень короткая
3. Короткая
4. Средне-короткая

### **Насадка-расческа для длины волос 2:**

5. Средней длины
6. Средне-длинная
7. Длинная
8. Очень длинная

**Для установки насадки:** установите передние крючки насадки-расчески на широкую головку для триммера и поворачивайте насадку на головке для триммера, пока она не зафиксируется в необходимом положении.

**Для снятия насадки:** Нажмите на язычок сзади насадки-расчески.

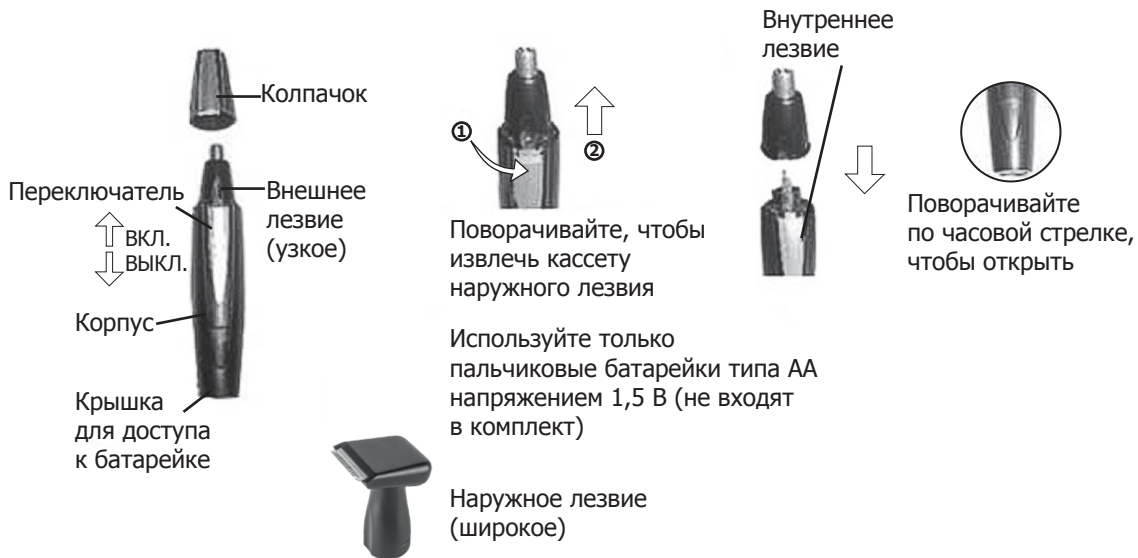

## КАКИЕ НАСАДКИ НЕОБХОДИМО ИСПОЛЬЗОВАТЬ:

	Широкий триммер	Триммер для удаления волос из носа/ушей	Расчески для разной длины волос
Борода	X		X
Линия бороды	X		
Уши		X	
Усы	X		X
Задняя часть шеи	X		
Нос		X	
Бакенбарды	X		X

## **СТРИЖКА**

- Во время использования электроприбора волосы должны быть сухими, без средств для укладки.
- Расчешите волосы в одном направлении, чтобы определить их максимальную длину.
- Убедитесь, что ножи электроприбора не повреждены и не сломаны, в противном случае, при использовании они могут нанести травмы.

## **БОРОДА (с использованием широкого триммера и подходящей насадки-расчески)**

- Выберите подходящую насадку-расческу и зафиксируйте на головке для триммера, как описывалось выше.
- Установите нужную длину для стрижки насадкой-расческой. Если у вас недостаточно опыта в обращении с триммером, во избежание чрезмерного укорачивания волос советуем выбрать положение для более длинной стрижки.
- Включите триммер и начните с подбородка, следуйте по линии лица по направлению к ушам и верхней линии бороды при помощи движений вверх. Насадка-расческа должна повторять контуры вашего лица.

## **ПРОРЕЖИВАНИЕ И ПРИДАНИЕ ФОРМЫ (с использованием широкого триммера)**

- Включите триммер и в процессе стрижки удерживайте волосы бороды при помощи маленькой расчески.
- Держа триммер с режущей головкой по направлению от вас, перемещайте триммер по длине расчески.

## **ЛИНИЯ БОРОДЫ (с использованием широкого триммера)**

- Включите электроприбор и держите таким образом, чтобы его лезвия были направлены на вас.
- Слегка коснитесь лезвиями лица и направьте триммер по линии вашей бороды. Для ухода за шеей перейдите от желаемой линии бороды.

## **ВОКРУГ БОРОДЫ (с использованием мини-насадки сеточной электробритвы)**

- Включите триммер и используйте мини-насадку сеточной электробритвы для обработки отдельных зон вокруг бороды.
- Держите триммер таким образом, чтобы мини-насадка сеточной электробритвы бережно касалась кожи. Это обеспечит сбривание самых коротких волосков с минимальным стиранием сетки. Не держите триммер под углом, так как это может деформировать сетку и вызвать раздражение кожи.

## **УШИ (с использованием головки триммера для удаления волос из носа/ушей)**

- Включите триммер и аккуратно вставьте режущую головку в канал наружного уха. Для безопасного использования – не вставляйте головку триммера более чем на 6 мм в ушной канал.
- Вращайте триммер круговыми движениями и одновременно с этим двигайте его в ушном канале в направлении вперед и назад.

## **НАРУЖНОЕ УХО (с использованием головки триммера для удаления волос из носа/ушей)**

- Включите триммер и аккуратно перемещайте него по поверхности уха, где есть нежелательные волосы.

### **БРОВИ (с использованием головки триммера для удаления волос из носа/ушей)**

- Включите триммер и аккуратно перемещайте лезвия для удаления волосков по линии бровей или волос, торчащих из брови.
- Не проводите триммером по всей брови.

### **УСЫ (с использованием широкого триммера)**

- Для выпрямления волос в процессе стрижки используйте маленькую расческу.
- Включите триммер и аккуратно поднесите лезвия к усам. Из-за слишком большого нажима вы можете сбрить больше волос, чем это необходимо.
- Так как волосы растут в разных направлениях, возможно, вам нужно будет перемещать триммер по направлению вверх, вниз или по горизонтали.

### **ЗАДНЯЯ ЧАСТЬ ШЕИ (с использованием широкого триммера)**

- Используйте ручное зеркало, если вы самостоятельно стрижете заднюю часть шеи.
- Приподнимите волосы на шее и при помощи указательного пальца прикройте корни волос, которые вы НЕ хотите состричь. Палец послужит ограничителем во избежание чрезмерного состригания волос.
- Включите триммер и держите его основанием вверх.
- Приложите лезвия к шее и медленно двигайте триммером вверх по шее, пока он не коснется пальца, закрывающего корни волос.

### **НОС (с использованием триммера для удаления волос из носа/ушей)**

- Включите триммер и аккуратно вставьте его головку в ноздрю. Для безопасного использования – не вставляйте головку для триммера в ноздрю более, чем на 6 мм.
- Вращайте триммер круговыми движениями вокруг в передней части ноздри, одновременно с этим аккуратно вводите его дальше в ноздрю и обратно.

## **ТЕХНИЧЕСКИЕ ХАРАКТЕРИСТИКИ**

---

Вес брутто/нетто	0,3/0,25 кг
Размер коробки	120*54*140 мм