

136, 141

Spare parts

Ersatzteile

Pièces détachées

Reserve onderdelen

Repuestos

Reservdelar

Replaces

Ersetzt




Remplace

Vervangt

Reemplaza




Ersätter

106 25 33-62

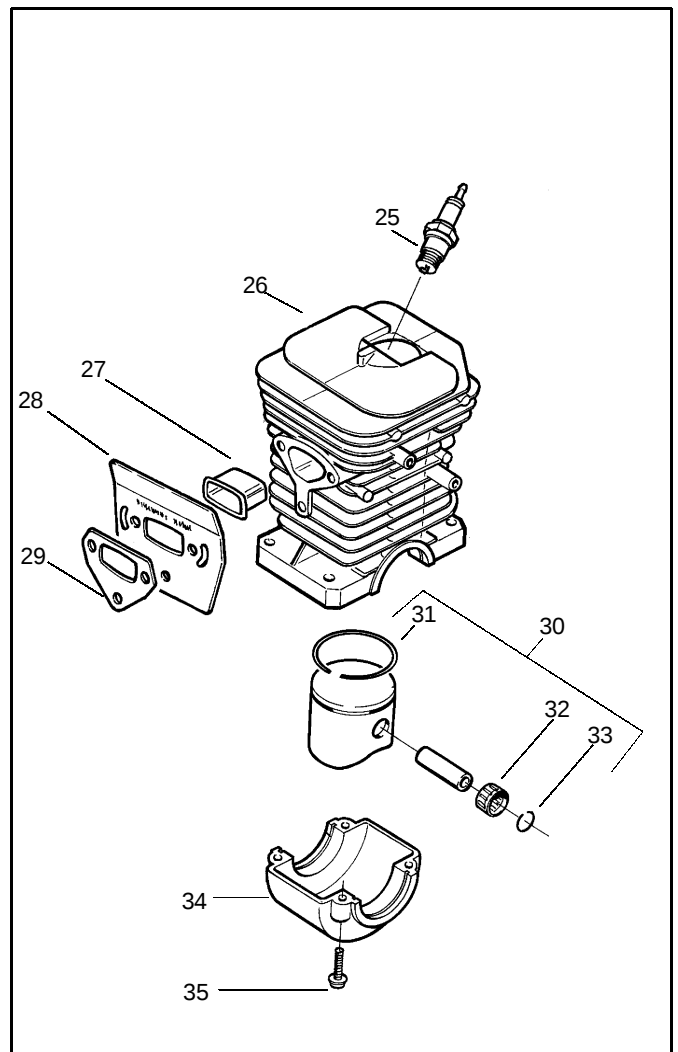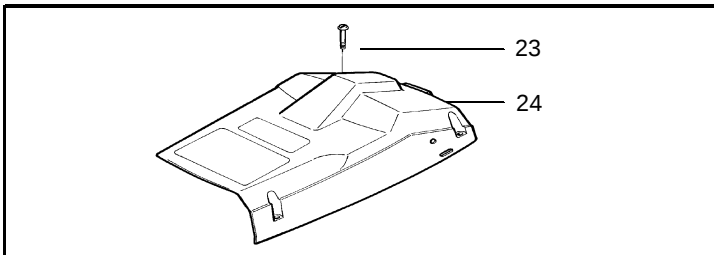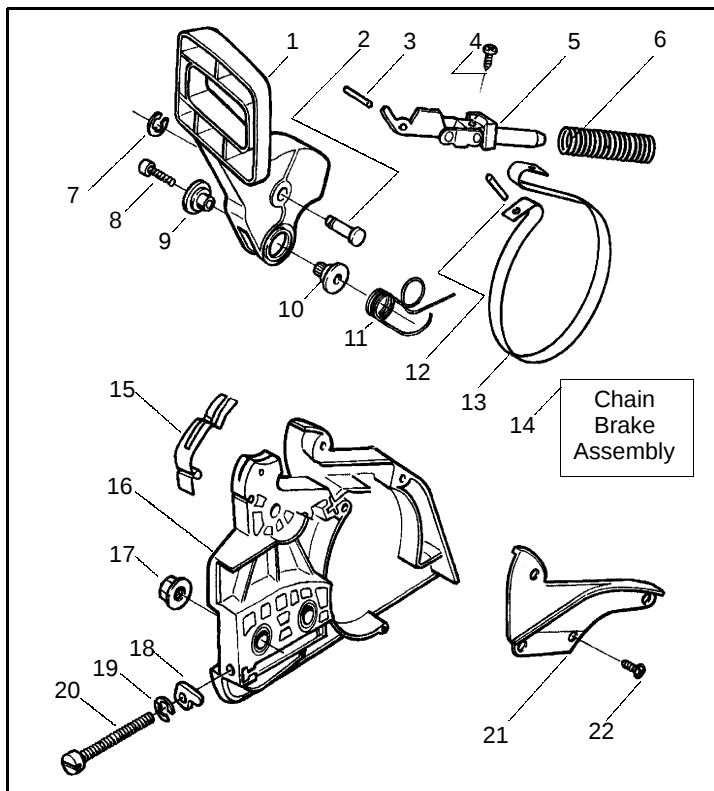



Ref.	Part No.	Description	Ref.	Part No.	Description
1	530 07 13-48	Actuating Lever	27	530 03 76-52	Heat Insulator
2	530 02 98-79	Pivot Pin	28	530 03 76-40	Muffler-Plate
3	530 01 59-15	Pin-Link	29	530 01 92-05	Muffler Gasket
4 n	530 01 59-11	Screw	30	-	Piston Kit (Includes pin and 31,32,33)
5	530 05 47-41	Front Link Ass'y.		530 06 99-44	(136)
6 n	530 01 62-37	Chain Brake Spring		530 06 94-54	(141)
7	530 03 85-93	Retainer	31	-	Piston Ring
8	530 01 63-84	Screw		530 02 98-05	(136)
9 n	530 05 65-31	Journal-Right		530 02 99-82	(141)
10 n	530 02 98-81	Journal-Left	32	530 03 21-17	Piston Pin Bearing
11	530 01 59-10	Handguard Spring	33	530 01 56-97	Piston Pin Retainer
12	530 01 59-13	Pin-Spring	34	530 04 97-94	Cap-Crankcase
13	530 05 22-32	Brake Band	35	530 01 58-97	Screw
14	530 05 48-02	Chain Brake Assembly		Not Shown	
15	530 02 98-78	Position Spring		-	Operator Manual
16	530 04 94-83	Clutch Cover		530 08 83-22	U.S./Canada
17	530 01 59-17	Nut-Bar		530 08 81-85	European
18	530 01 58-26	Bar Adjusting Pin		530 08 81-86	European
19	530 03 85-93	Retainer		530 08 85-41	South America
20	530 01 61-10	Screw-Bar Adjusting		530 08 81-84	Scan.
21	530 05 30-35	Chain Brake Spring Cover	n	530 08 62-23	Japan
22 n	530 01 59-11	Screw		530 03 11-35	Scrench
23	530 01 61-54	Screw		530 03 11-36	Worm Gear Puller
24	530 04 76-09	Cylinder Shield Ass'y.		530 03 11-12	Clutch Ass'y. Tool
25	952 03 01-50	Spark Plug (RCJ-7Y)	n	530 04 79-41	Kickback Decal
26	-	Kit-Cylinder (incl.#34)		530 03 79-12	Scabbard
	530 06 99-40	(136)			
	530 06 99-41	(141)			

n = NEW PART NUMBER FOR THIS IPL K = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
D = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

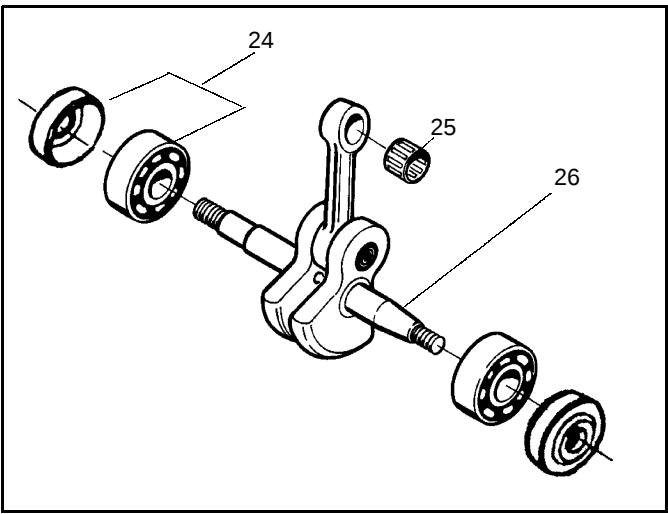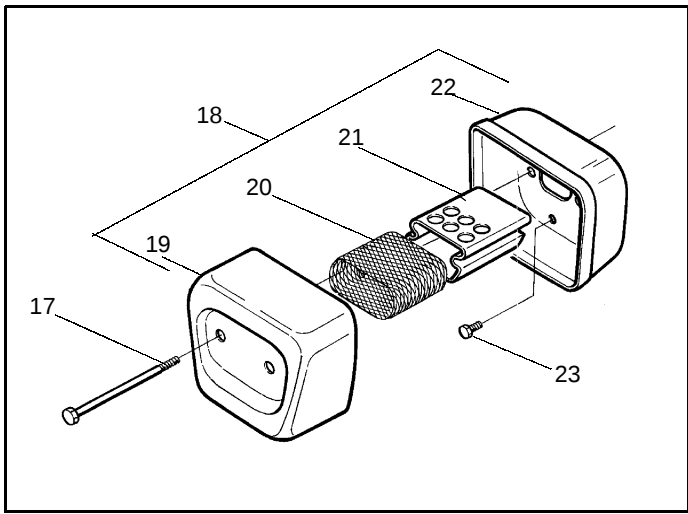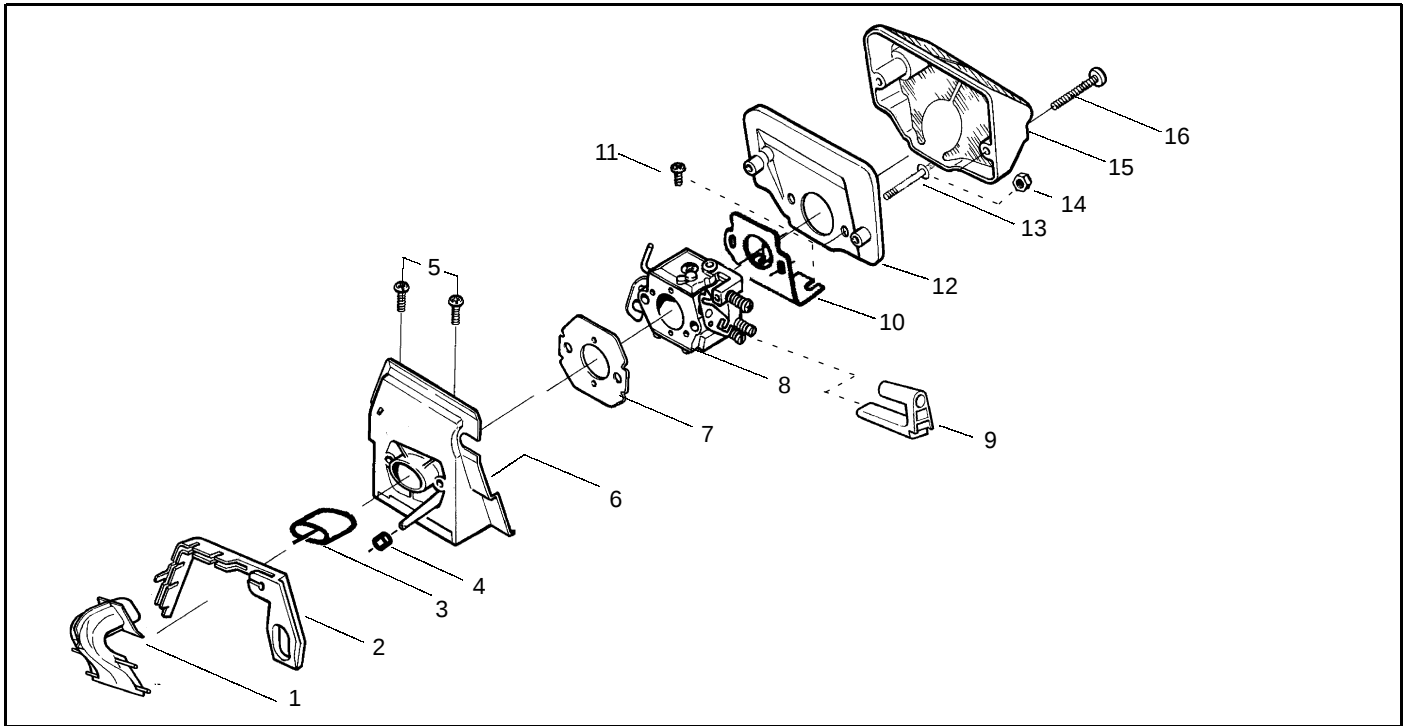





Ref.	Part No.	Description	Ref.	Part No.	Description
1	530 02 98-13	Turbo Air Cleaner Assembly	12	530 03 65-82	Air Filter - Bottom
2	530 01 92-03	Seal - Turbo Clean	13	530 01 59-68	Stud - Carb.
3	530 02 98-14	Intake Sleeve	14	530 01 60-08	Nut
4	530 05 34-35	Impulse Seal	15	530 02 98-11	Air-Filter - Top
5	530 01 58-14	Screw	16	530 01 58-99	Screw
6	530 03 74-65	Adapter - Carb.	17	530 01 60-44	Screw
7	530 01 91-72	Carburetor Gasket	18	530 06 94-15	Muffler Kit (Includes 17,19,20,21 & 22)
8	----	Carburetor	19	530 03 72-54	Muffler Cover
	KKKK K	Zama - C1Q-w6	20	530 02 98-10	Spark Arrestor Screen
	530 03 54-82	WT-542 (Walbro)	21	530 03 72-46	Muffler Diffuser
	530 06 96-29	WT-289 (Walbro)	22	530 03 72-51	Muffler Body
n	530 07 15-10	WT-540 (Walbro)	23	530 01 59-02	Muffler Bolt
9	530 03 74-66	Grommet-Final	24	530 05 63-63	Assy. -Bearing and Seal
10	530 04 77-67	Plate - Support	25	530 03 21-17	Piston Pin Bearing
11	530 01 58-96	Screw	26	530 02 97-94	Crankshaft & Rod Assembly

n = NEW PART NUMBER FOR THIS IPL K = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
D = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

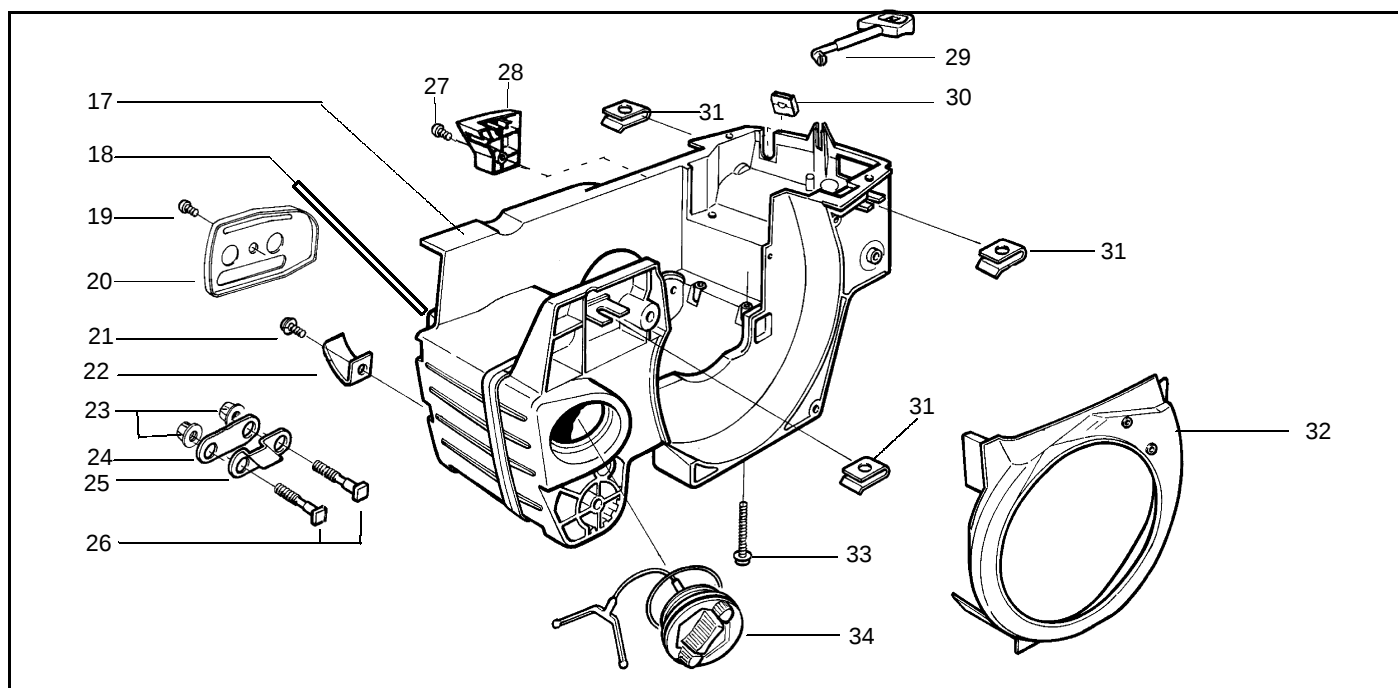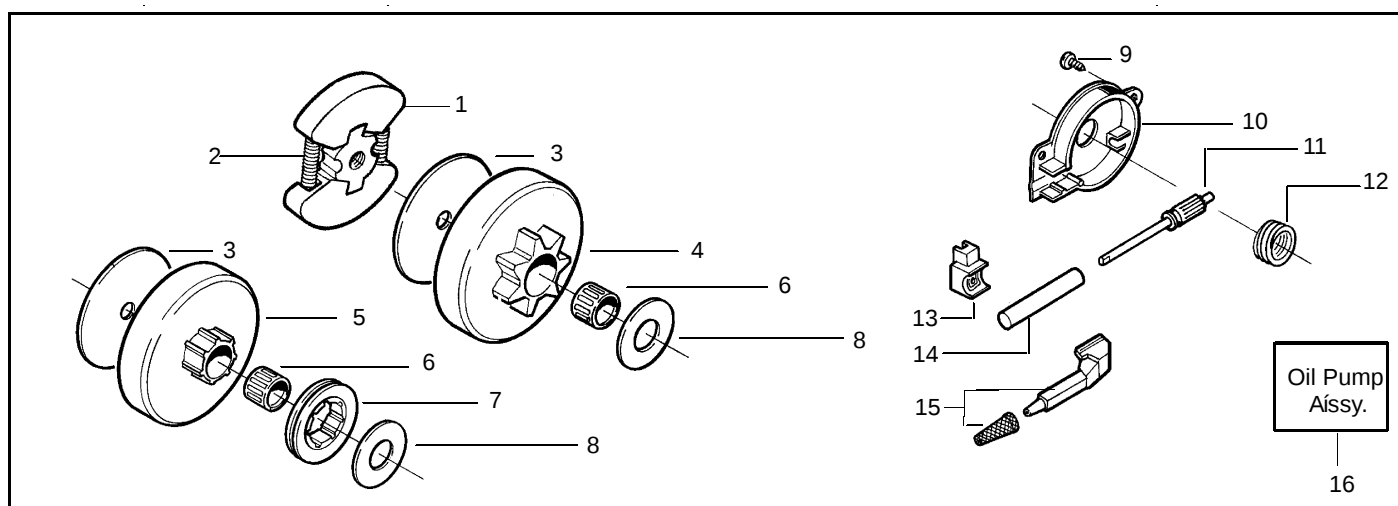

Ref.	Part No.	Description	Ref.	Part No.	Description
1	530 01 49-49	Clutch Assembly (incl. 2)	18	530 05 24-40	Tube-Oil Vent
2	530 09 41-88	Spring - Clutch	19	530 01 58-96	Screw (optional)
3	530 01 56-11	Clutch Washer	20	530 04 78-55	Bar Plate
4	530 06 93-42	Clutch Drum w/Bearing Ass'y.	21	530 01 58-78	Screw
5	530 06 93-16	Drum, Adapt. & Bearing Kit (incl. 6 & 7)	22	530 02 98-50	Chain Catcher
6	530 03 21-19	Clutch Bearing	23	530 01 59-17	Nut
7	530 02 86-50	Rim-Floating (.325)	24	530 01 92-28	Gasket
8	530 01 59-07	Thrust Washer	25	530 03 60-43	Bar Stud Plate
9	530 01 58-96	Screw	26	530 01 58-77	Bar Bolt
10	530 02 98-35	Oil Pump Housing	27	530 01 58-93	Screw
11	530 02 98-38	Plunger & Gear Assembly	28	530 05 24-28	Cover
12	530 02 98-33	Oil Pump Worm	29	530 02 98-31	Choke Lever
13	530 01 91-74	Oil Seal	30	530 02 98-30	Grommet
14	530 02 98-34	Oil Pump Barrel	31	530 01 59-22	Type iUf Speed Nut
15	530 01 47-76	Oil Pick-Up and Screen Assembly	32	530 02 98-00	Baffle Plate
16	530 01 44-10	Oil Pump Assembly (Includes 10,11 & 14)	33	530 01 60-37	Screw
17	530 06 99-42	Kit - Chassis Ass'y.	34	501 76 56-02	Assy.- Oil Tank Cap

n = NEW PART NUMBER FOR THIS IPL K= REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
D = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

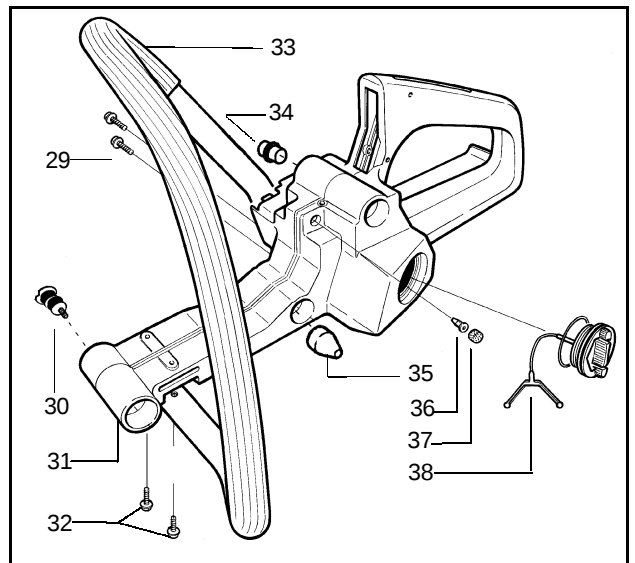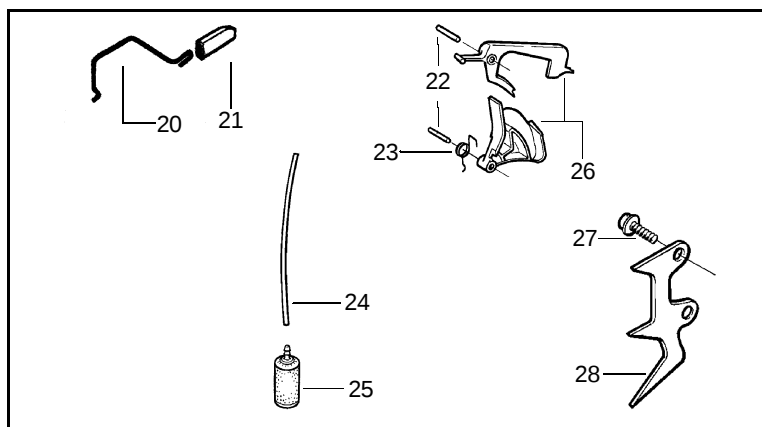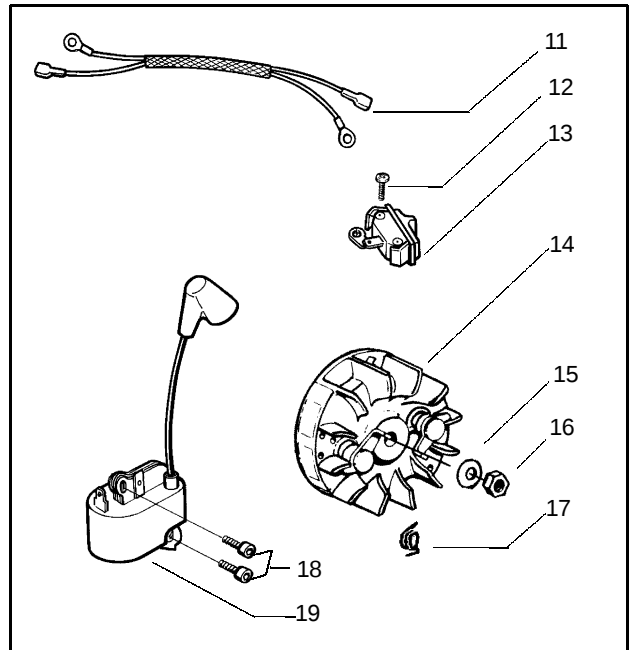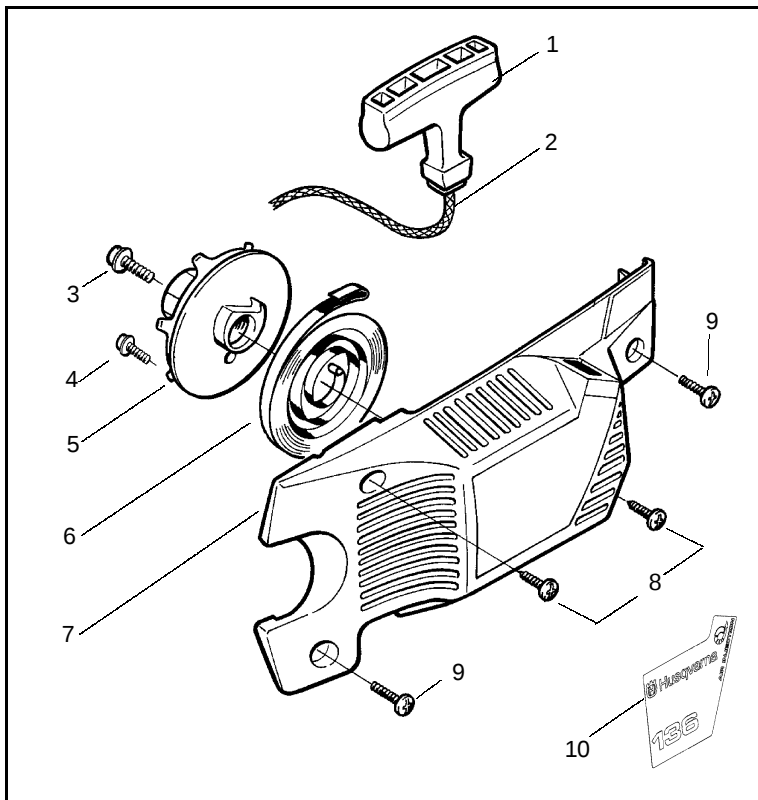

Ref.	Part No.	Description	Ref.	Part No.	Description	Ref.	Part No.	Description
1	530 03 84-91	Starter Handle	12	530 01 58-96	Screw	25	530 01 44-97	Assy. Fuel Pickup
2	530 06 92-32	Rope Kit	13	503 71 79-01	Ignition Switch	26	530 06 95-87	Kit - Throttle Trigger
3	530 01 59-20	Screw	14	530 03 91-47	Assy. Flywheel (incl.16)	27	n 530 01 58-05	Screw
4	530 01 60-80	Screw	15	530 01 51-27	Flywheel Washer	28	530 01 43-81	Assy. Spike
5	530 06 93-13	Starter-Pulley Kit	16n	530 01 61-34	Nut	29	530 01 59-40	Screw
6n	530 01 58-91	Recoil Spring	17	530 02 38-17	Spring -Starter Dog	30	n 530 02 98-70	Isolator
7	530 04 75-99	Fan Housing Assembly	18	530 01 58-95	Screw	31	530 05 24-46	Assy. -Tank/Handle
8	530 01 58-92	Screw	19	530 03 91-43	Module - Ignition	32	530 01 59-06	Screw
9	530 01 58-93	Screw	20	530 02 98-69	Wire - Throttle	33	530 04 98-76	Handle-Front
10	---	Decal -Model	21	530 02 98-63	Cap - Wire	34	530 05 24-39	Isolator - Limiter
	530 05 34-59	136	22	530 02 98-60	Pin	35	530 02 99-84	Isolator Bumper
	530 05 34-60	141	23	530 02 38-17	Spring - Starter Dog	36	530 02 61-19	Valve - Check
11	530 40 32-57	Leadwire Harness Ass'y.	24	530 06 92-47	Kit - Fuel line	37	530 03 82-64	Plug - Vent
						38	n 501 81 96-03	Assy. Fuel Cap

n = NEW PART NUMBER FOR THIS IPL. K= REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
D = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.

N = NEW PART NUMBER FOR THIS IPL K = REFER TO THE SERVICE REFERENCE INDICATED FOR MORE INFORMATION. (LOCATED AT END OF IPL)
D = THESE PARTS ARE ILLUSTRATED FOR CLARITY. ORDER COMPLETE ASSEMBLY.