


**Kawasaki**

**Ninja250R  
GPX250R**

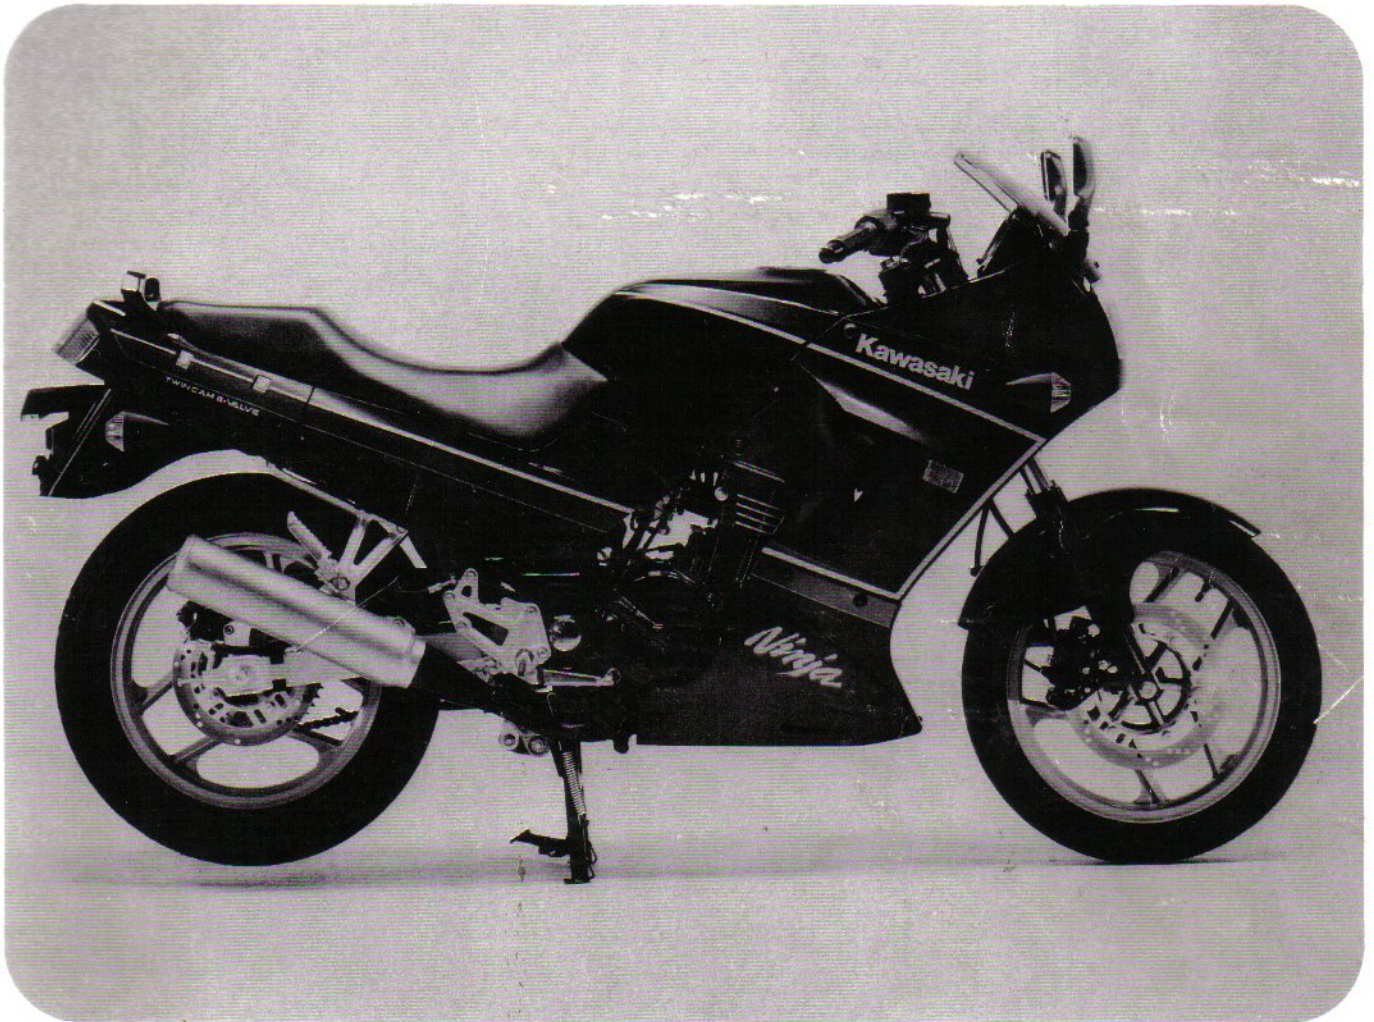

Covers 1988 - 2005  
EX250 - F2 to EX250 - F19

# **Motorcycle Service Manual Supplement**

Use with 1986 - 1987 Manual

## MODEL APPLICATION

Year	Model	Beginning Frame No.
1988	EX250-F2	JKAEXMF1□JA000001, or JKAEXMF1□JA008946, or EX250-F000001, or <input checked="" type="checkbox"/> EX250F-008946
1989	EX250-F3	JKAEXMF1□KA004604, or JKAEXMF1□JA009501, or EX250-F004601, or EX250F-009501
1990	EX250-F4	JKAEXMF1□LA014001
1992	EX250-F6	JKAEXMF1□NA021701, or EX250F-021701
1993	EX250-F7	JKAEXMF1□PA030001
1994	EX250-F8	JKAEXMF1□RA038001, or EX250F-038001
1995	EX250-F9	JKAEXMF1□SA044001, or EX250F-044001
1996	EX250-F10	JKAEXMF1□TA049001, or EX250F-049001
1997	EX250-F11	JKAEXMF1□VA052001, or EX250F-052001
2000	EX250-F14	JKAEXMF1□YA069001
2001	EX250-F15	JKAEXMF1□1A077001
2002	EX250-F16	JKAEXMF1□2A086001
2003	EX250-F17	JKAEXMF1□3A096001
2004	EX250-F18	JKAEXMF1□4DA00001
2005	EX250-F19	JKAEXMF1□5DA10001

□: This digit in the frame number changes from one machine to another.



KAWASAKI HEAVY INDUSTRIES, LTD.  
Consumer Products & Machinery Company

Part No.99924-1109-63

Printed in Japan

## Quick Reference Guide

<b>General Information</b>	<b>1</b>
<b>Fuel System</b>	<b>2</b>
<b>Cooling System</b>	<b>3</b>
<b>Engine Top End</b>	<b>4</b>
<b>Clutch</b>	<b>5</b>
<b>Engine Lubrication System</b>	<b>6</b>
<b>Engine Removal/Installation</b>	<b>7</b>
<b>Crankshaft/Transmission</b>	<b>8</b>
<b>Wheel/Tires</b>	<b>9</b>
<b>Final Drive</b>	<b>10</b>
<b>Brakes</b>	<b>11</b>
<b>Suspension</b>	<b>12</b>
<b>Steering</b>	<b>13</b>
<b>Frame</b>	<b>14</b>
<b>Electrical System</b>	<b>15</b>
<b>Appendix</b>	<b>16</b>
<b>Supplement-2000 Model</b>	<b>17</b>
<b>Supplement-2001 Model</b>	<b>18</b>
<b>Supplement-2002 ~ 2005 Models</b>	<b>19</b>

This quick reference guide will assist you in locating a desired topic or procedure.

- Bend the pages back to match the black tab of the desired chapter number with the black tab on the edge at each table of contents page.
- Refer to the sectional table of contents for the exact pages to locate the specific topic required.



**Kawasaki**

**Ninja250  
GPX250R**

# **Motorcycle Service Manual Supplement**

---

All rights reserved. No parts of this publication may be reproduced, stored in a retrieval system, or transmitted in any form or by any means, electronic mechanical photocopying, recording or otherwise, without the prior written permission of Quality Assurance Department/Consumer Products & Machinery Company/Kawasaki Heavy Industries, Ltd., Japan.

No liability can be accepted for any inaccuracies or omissions in this publication, although every possible care has been taken to make it as complete and accurate as possible.

The right is reserved to make changes at any time without prior notice and without incurring an obligation to make such changes to products manufactured previously. See your Motorcycle dealer for the latest information on product improvements incorporated after this publication.

All information contained in this publication is based on the latest product information available at the time of publication. Illustrations and photographs in this publication are intended for reference use only and may not depict actual model component parts.

# General Information

## Table of Contents


Before Servicing .....	*
Model Identification .....	1-2
General Specifications .....	1-4
Wiring, Cable, or Hose Routing .....	1-6
Torque and Locking Agent .....	1-11
Periodic Maintenance Chart .....	1-15

\* : Base Manual    See base manual for information 1986-1987

## 1-2 GENERAL INFORMATION

.....  
**Model Identifications**  
.....

### EX250-F2, F3, F4 (US Model)

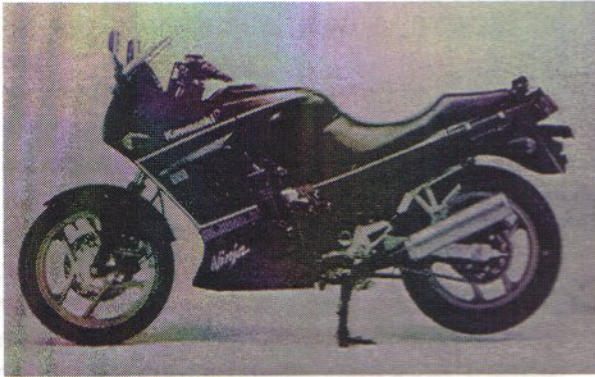

### EX250-F6



### EX250-F7, F8, F9, F10



### EX250-F11



EX250-F2, F3, F4 (European or General Models)



EX250-F6



EX250-F7, F8, F9



## 1-4 GENERAL INFORMATION

### General Specifications

Items	EX250-F2, F3, F4, F6, F7, F8, F9, F10, F11	
<b>Dimensions:</b>		
Overall length	2 035 mm	
Overall width	710 mm	
Overall height	1 095 mm	
Wheelbase	1 400 mm	
Road clearance	155 mm	
Seat height	745 mm	
Dry weight	138 kg, (CA) 138.5 kg	
Curb weight:	Front	76 kg
	Rear	85 kg, (CA) 85.5 kg
Fuel tank capacity	18.0 L	
<b>Performance:</b>		
Minimum turning radius	2.8 m	
<b>Engine:</b>		
Type	4-stroke, DOHC, 2-cylinder	
Cooling system	Liquid-cooled	
Bore and stroke	62.0 × 41.2 mm	
Displacement	248 mL	
Compression ratio	12.4	
Maximum horsepower	27.9 kW (38 PS) @ 11 000 r/min (rpm), (US) –, (AS) 27.9 kW (38 PS) @ 12 000 r/min (rpm)	
Maximum torque	24.5 N·m (2.5 kgf·m, 18.1 ft·lb) @ 10 000 r/min (rpm), (US) –	
Carburetion system	Caburetors, Keihin CVK30 × 2	
Starting system	Electric starter	
Ignition system	Battery and coil (transistorized)	
Timing advance	Electronically advance	
Ignition timing	From 10°BTDC @ 1 300 r/min (rpm) to 42°BTDC @ 4 500 r/min (rpm), (CA) From 5°BTDC @ 1 300 r/min (rpm) to 42°BTDC @ 4 500 r/min (rpm)	
Spark plug	STD	NGK C8HA or ND U24FS-L, (C)(B)(E) NGK CR8HSA or ND 24FS-U
	Option	NGK CR7HS or ND 22FS-L, (C)(B)(E) NGK CR7HSA or ND U22FS-U
Cylinder numbering method	Left to right, 1-2	

(Continued on next page.)

GENERAL INFORMATION 1-5

Items	EX250-F2, F3, F4, F6	EX250-F7, F8, F9, F10, F11		
Firing order	1-2			
Valve timing:	Inlet	Open	30° BTDC	26° BTDC
		Close	70° ABDC	66° ABDC
		Duration	280°	272°
	Exhaust	Open	70° BBDC	66° BBDC
		Close	30° ATDC	26° ATDC
		Duration	280°	272°
Lubrication system	Forced lubrication (wet sump)			
Engine oil:	Grade	SE or SF class		
	Viscosity	SAE 10W-40, 10W-50, 20W-40, or 20W-50		
	Capacity	1.9 l		
<b>Drive Train:</b>				
Primary reduction system:	Type	Gear		
	Reduction ratio	3.806 (71/23)		
Clutch type	Wet multi disc			
Transmission:	Type	6-speed, constant mesh, return shift		
	Gear ratio:	1st	2.600 (39/15)	
		2nd	1.789 (34/19)	
		3rd	1.409 (31/22)	
		4th	1.160 (29/25)	
		5th	1.000 (27/27)	
		6th	0.892 (25/28)	
Final drive system:	Type	Chain drive		
	Reduction ratio	3.214 (45/14)		
	Overall drive ratio	8.859 @ Top gear		
<b>Frame</b>				
Type	Tubular, diamond			
Caster (rake angle)	27°			
Trail	83 mm			
Front tire:	Type	Tubeless		
	Size	100/80-16 50S		
Rear tire:	Type	Tubeless		
	Size	130/80-16 64S		
Front suspension:	Type	Telescopic fork		
	Wheel travel	140 mm		
Rear suspension:	Type	Swing arm (Uni-Trak)		
	Wheel travel	130 mm		
Brake type:	Front	Single disc		
	Rear	Single disc		

*New Dunlop Arrowway  
GT301  
130/80/16  
6mm tread depth*

(Continued on next page.)


## 1-6 GENERAL INFORMATION

Items		EX250-F2, F3, F4, F6, F7, F8, F9, F10, F11
<b>Electrical Equipment</b>		
Battery		EX250-F2 - F8: 12 V 8Ah, EX250-F9: 12 V 6Ah
Headlight:	Type	Semi-sealed beam
	Bulb	12 V 60/55 W (quartz-halogen)
Tail/brake light		12 V 8/27 W × 2, (A)(B)(E) 12 V 5/21 W × 2
Alternator:	Type	Three-phase AC
	Rated output	17A @ 10 000 r/min (rpm), 14V



Specifications are subject to change without notice and may not apply to every country.

- (A) Australia Model
- (B): UK Model
- (CA): California Model
- (E): European Model
- (US): U.S Model

### Wiring, Cable, or Hose Routing

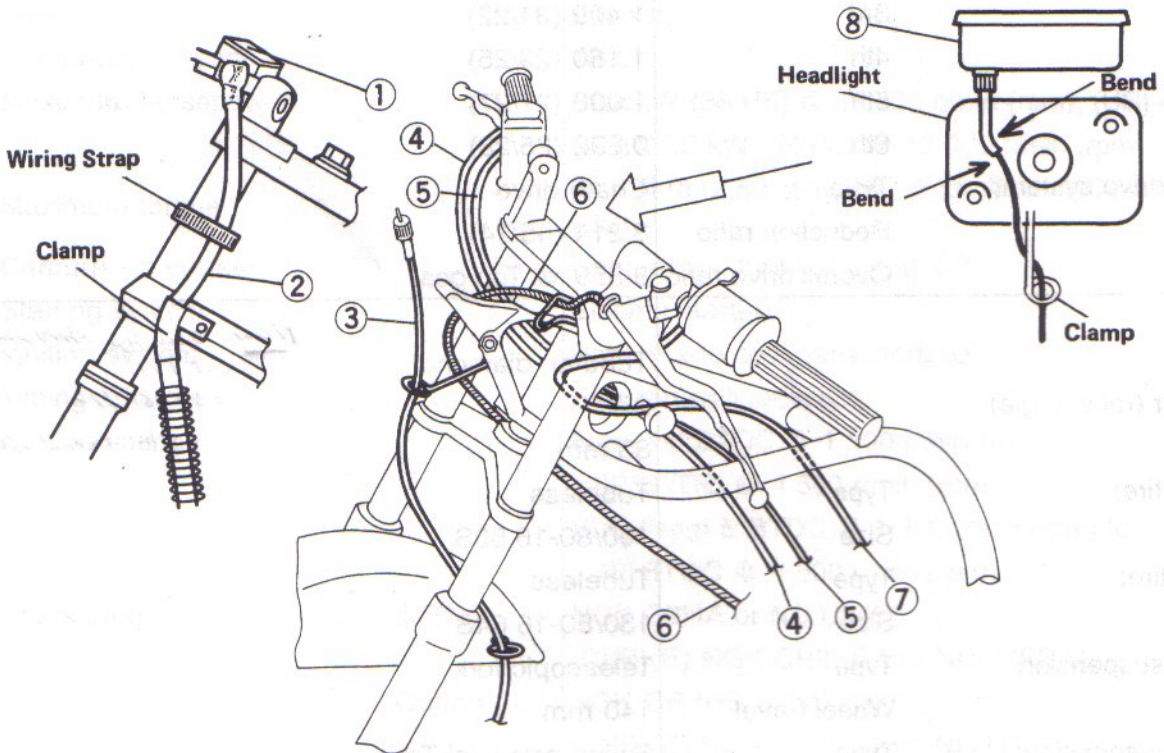


- 1. Front Brake Fluid Reservoir
- 2. Brake Hose
- 3. Speedometer Cable
- 4. Throttle Cable (Decelerator)
- 5. Throttle Cable (Accelerator)
- 6. Clutch Cable
- 7. Choke Cable
- 8. Meter Unit

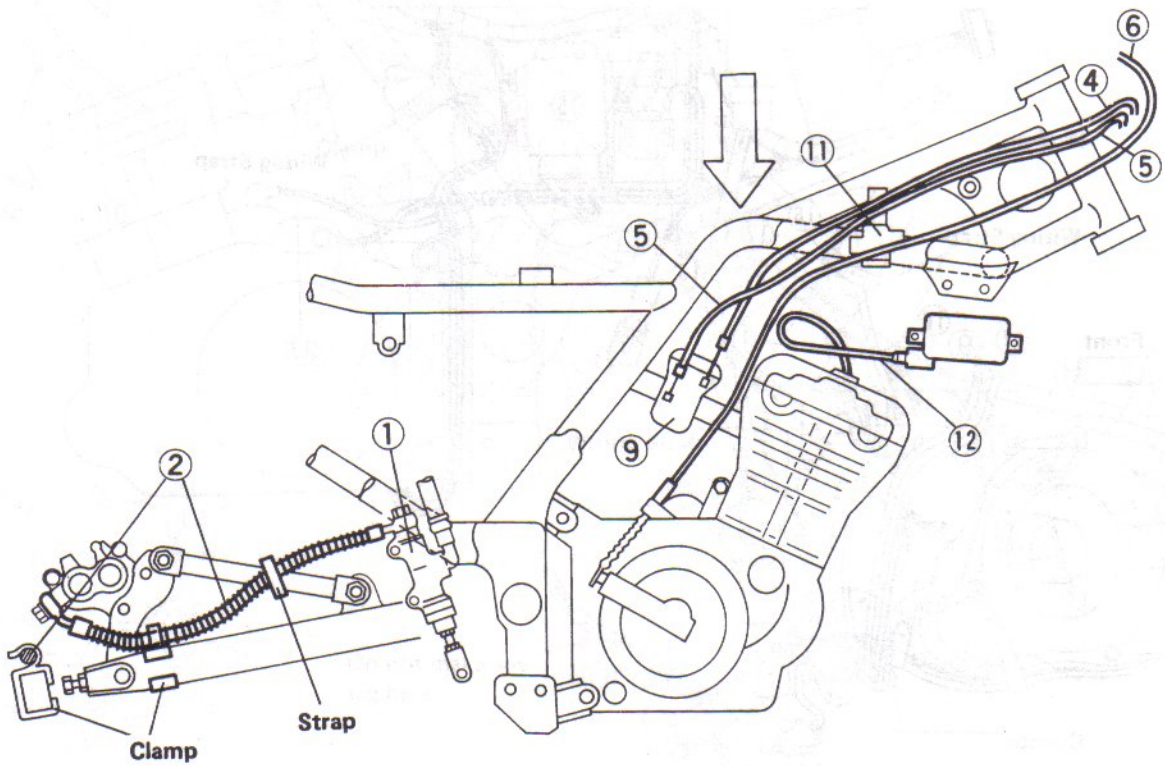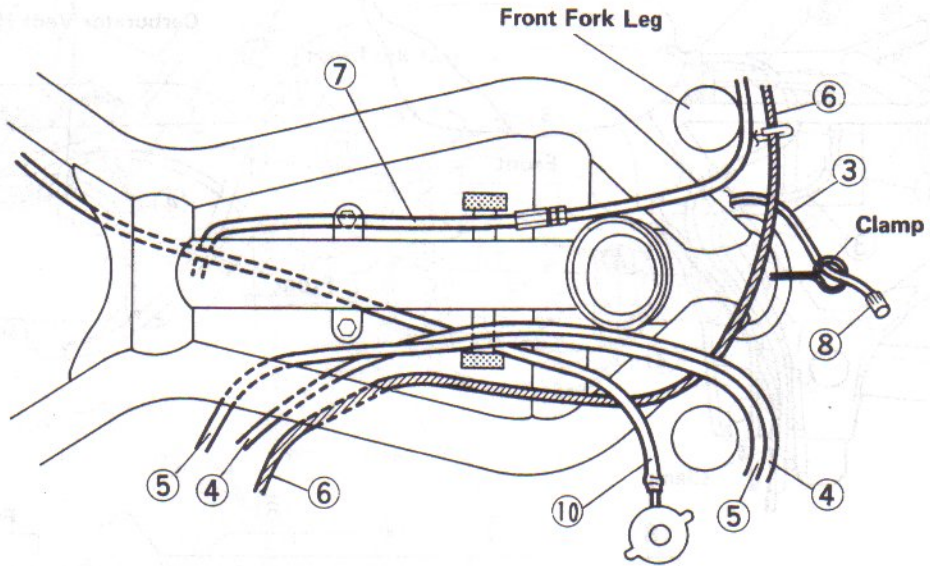


- |                                 |                                 |
|---------------------------------|---------------------------------|
| 1. Rear Brake Master Cylinder   | 7. Choke Cable                  |
| 2. Brake Hose                   | 8. To Meter Unit                |
| 3. Speedometer Cable            | 9. Carburetor                   |
| 4. Throttle Cable (decelerator) | 10. Coolant Reservoir Tank Hose |
| 5. Throttle Cable (accelerator) | 11. Thermostat Housing          |
| 6. Clutch Cable                 | 12. Spark Plug Leads            |

# 1-8 GENERAL INFORMATION

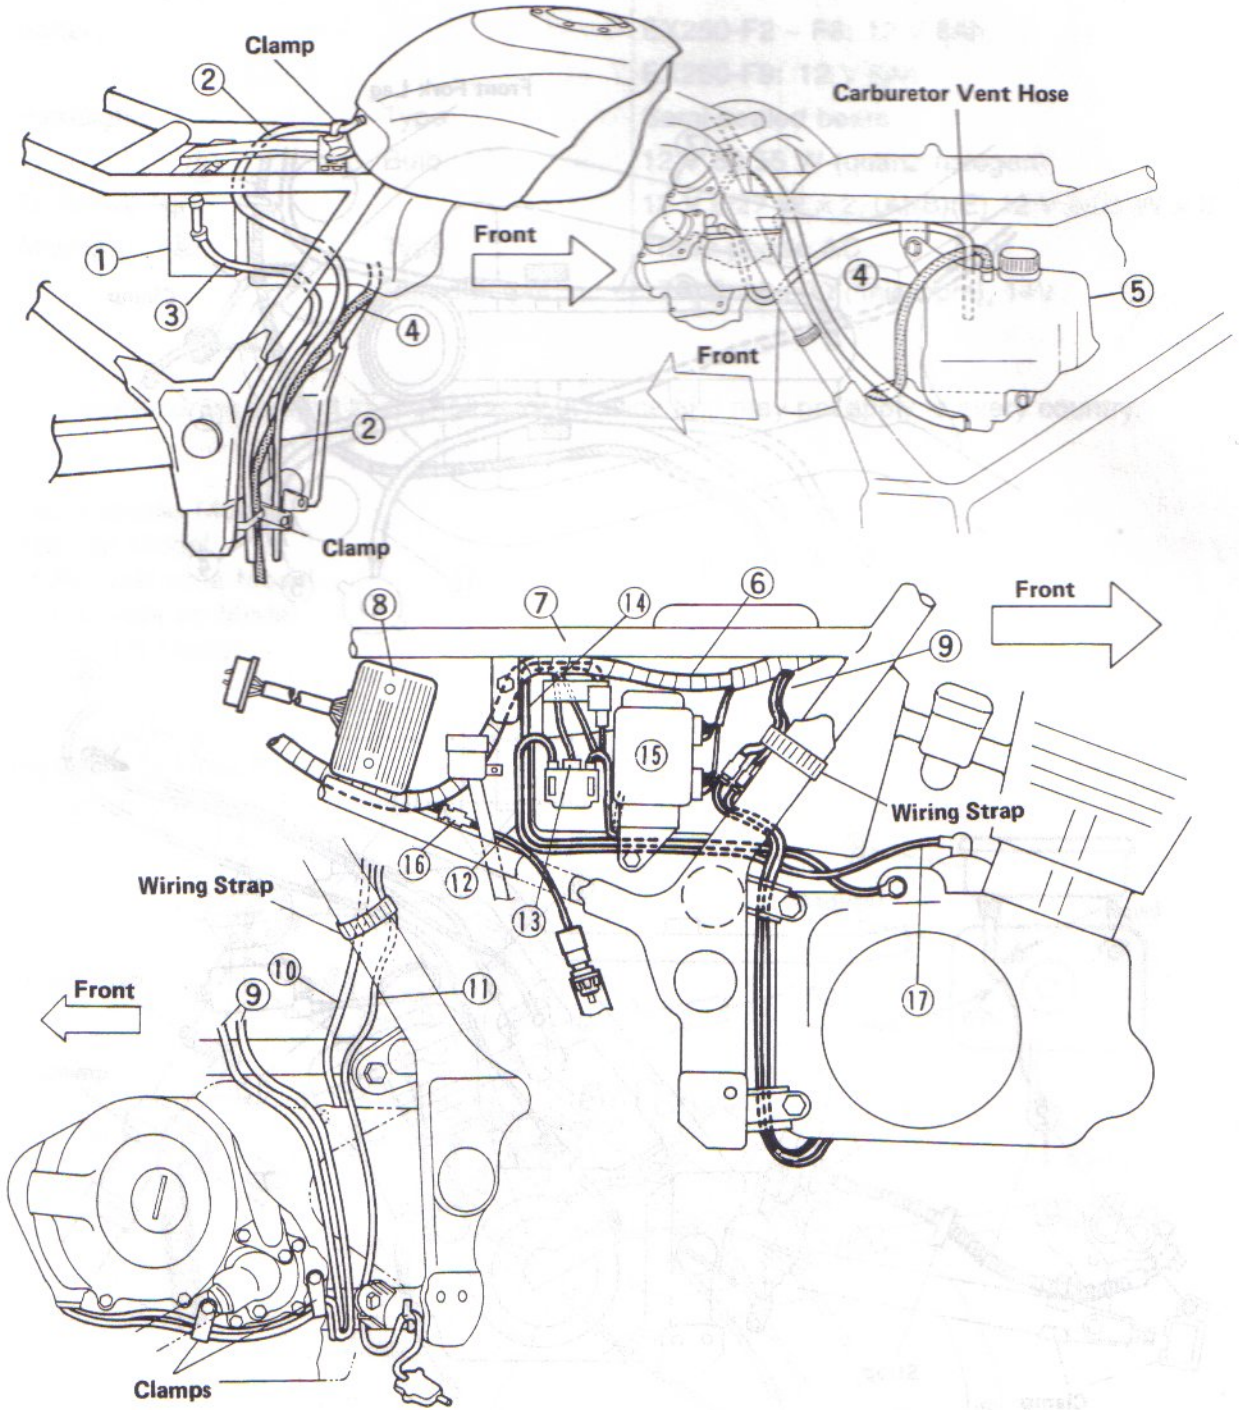

- 1. Battery
- 2. Fuel Tank Drain Hose
- 3. Battery Vent Hose
- 4. Coolant Reservoir Tank Vent Hose
- 5. Coolant Reservoir Tank
- 6. Main Harness

- 7. Frame Tube
- 8. Regulator/Rectifier
- 9. Alternator, Pickup Coil Leads
- 10. Neutral Switch Lead
- 11. Side Stand Switch Lead
- 12. To Starter Relay Negative Terminal
- 13. Starter Relay Connector
- 14. Battery Ground Cable
- 15. Junction Box
- 16. Brake Switch Connector
- 17. Starter Motor Cable

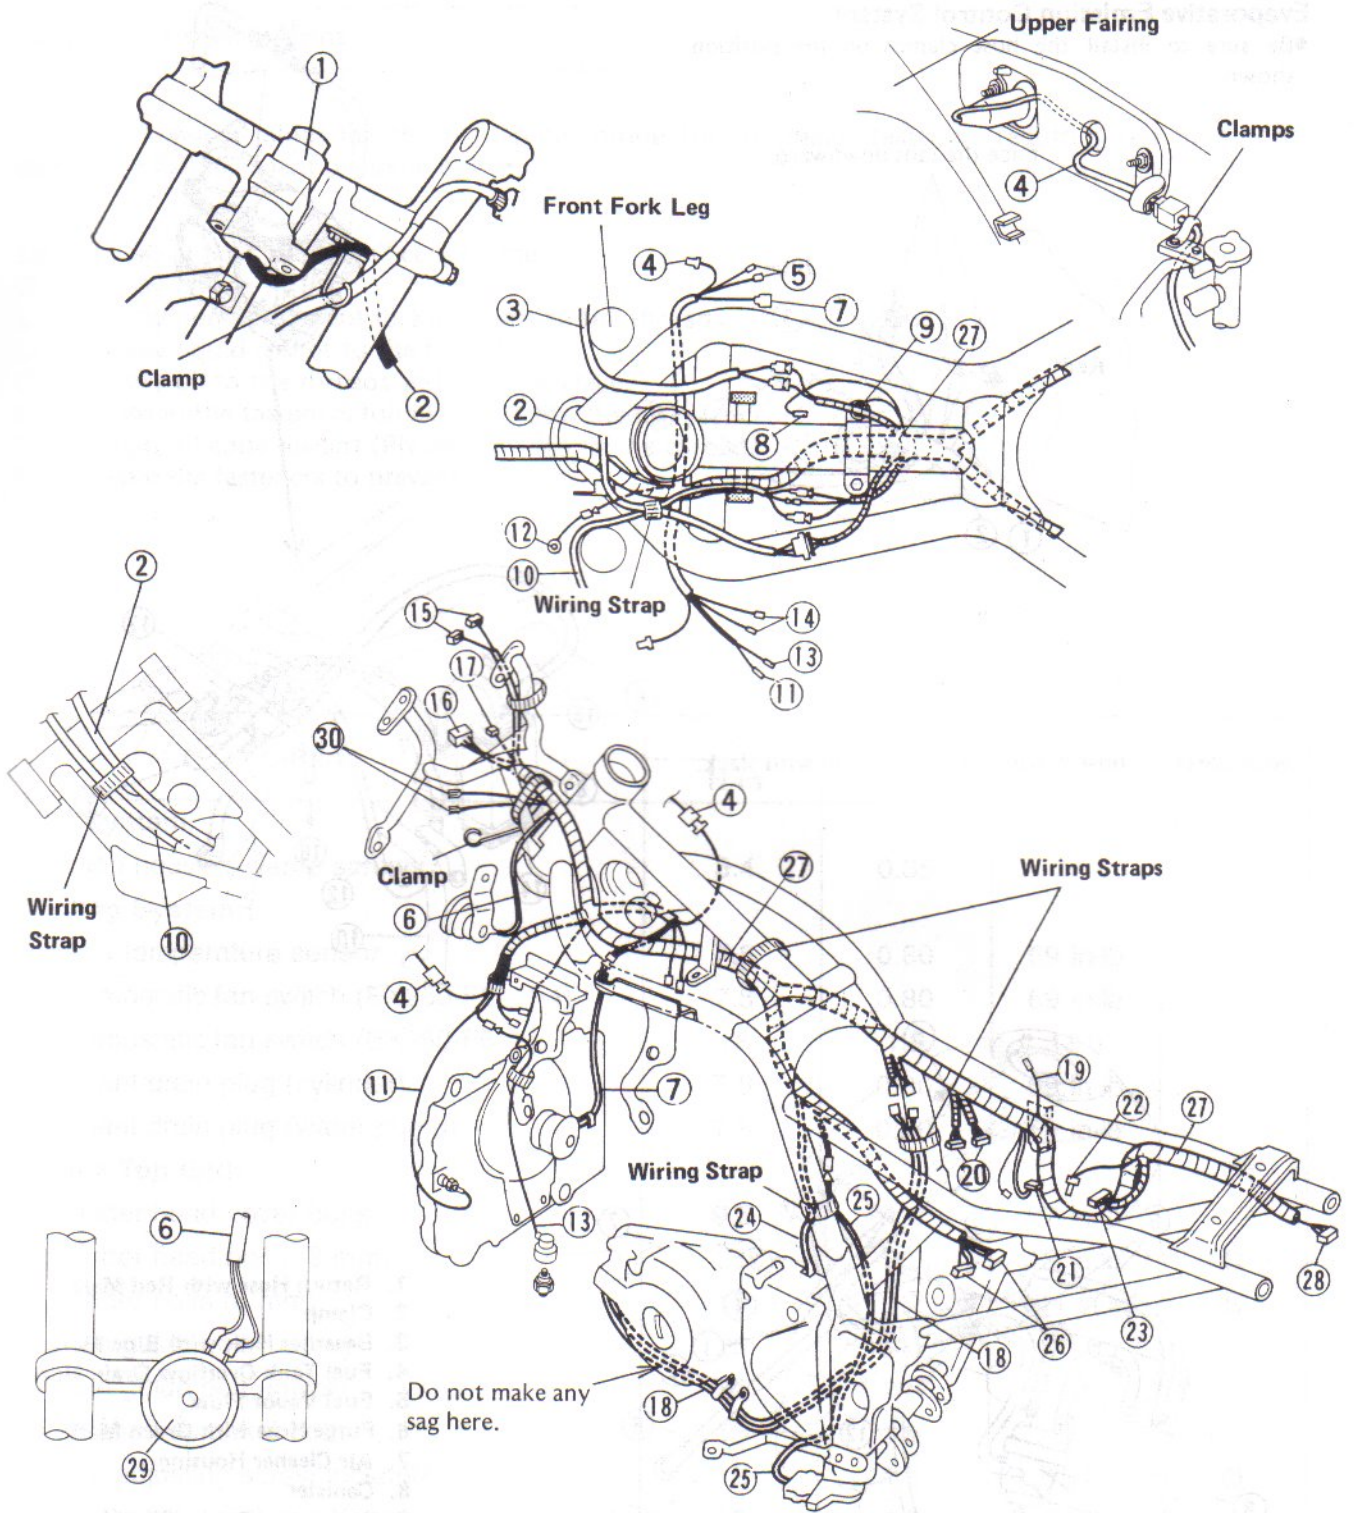

- 1. Ignition Switch
- 2. Ignition Switch Lead
- 3. To Right Handlebar Switch
- 4. Turn Signal Connectors
- 5. To #2 Ignition Coil
- 6. Horn Lead
- 7. Fan Motor Lead
- 8. Water Temperature Sensor Lead
- 9. Water Temperature Sensor Ground Lead
- 10. To Left Handlebar Switch

- 11. Fan Switch Lead
- 12. Fan Switch Ground Lead
- 13. Oil Pressure Switch Lead
- 14. To #1 Ignition Coil
- 15. Meter Connectors
- 16. Headlight Connector
- 17. City Light Connector
- 18. Alternator, Pickup Coil Leads
- 19. To Battery Ground Terminal
- 20. Junction Box Connectors


- 21. Starter Relay Connector
- 22. Brake Light Switch Connector
- 23. Regulator/Rectifier Connector
- 24. Neutral Switch Lead
- 25. Side Stand Switch Lead
- 26. Igniter Connectors
- 27. Main Harness
- 28. Taillight, Turn Signal Light Connector
- 29. Horn
- 30. Accessory Leads

# 1-10 GENERAL INFORMATION



## Evaporative Emission Control System

●Be sure to install the hose clamps on the position shown.

Face the tabs downward.

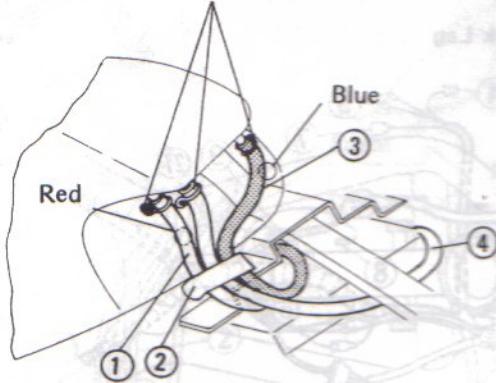

Run the purge hose before the ignition coil with slack.

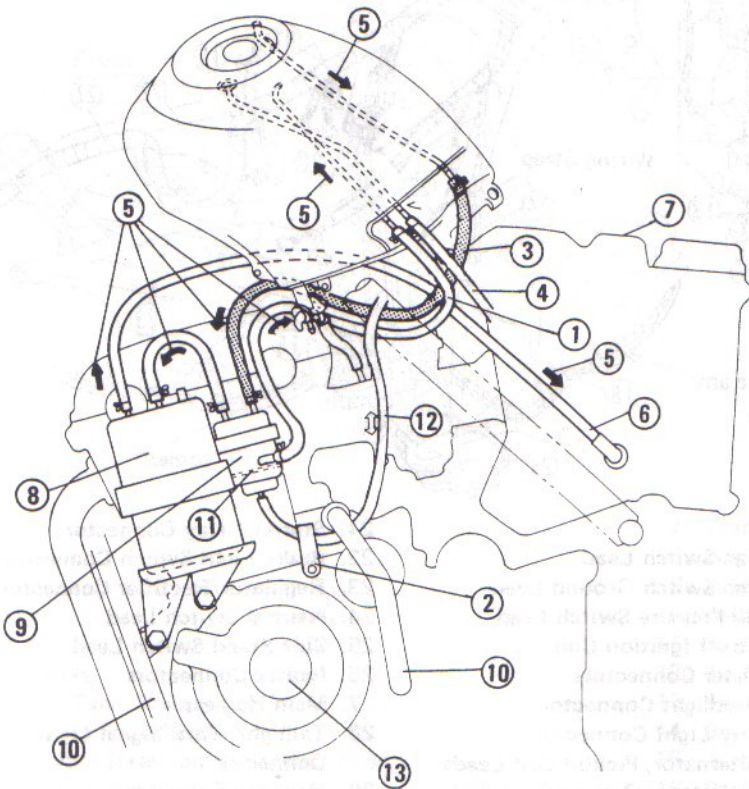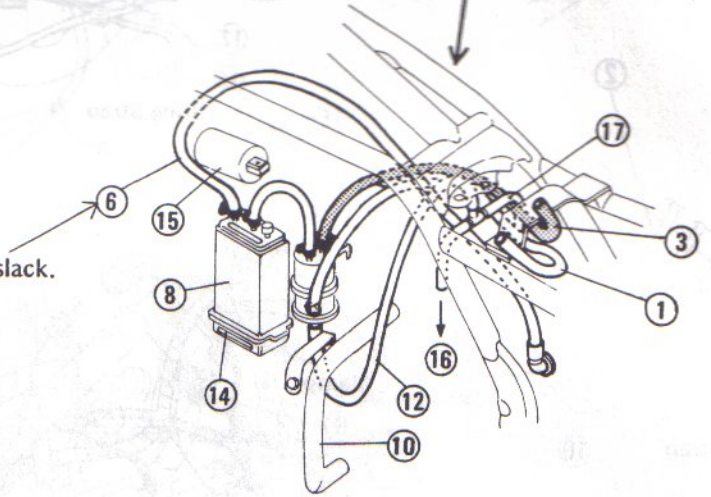

1. Return Hose with Red Mark
2. Clamp
3. Breather Hose with Blue Mark
4. Fuel Tank Overflow Drain Hose
5. Fuel Vapor Flow
6. Purge Hose with Green Mark
7. Air Cleaner Housing
8. Canister
9. Separator (Return Pump)
10. Water Pipes
11. Diaphragm
12. Vacuum Pulse Hose with White Mark
13. Alternator Cover
14. Canister Opening
15. Left-Hand Ignition Coil
16. To Vacuum Joint on Coasting Enricher of Left-Hand Carburetor
17. To Vacuum Joint on Right-Hand Carburetor

**Torque and Locking Agent**

The following tables list the tightening torque for the major fasteners requiring use of a non-permanent locking agent or liquid gasket.

Letters used in the "Remarks" column mean:

- G : Apply grease.
- L : Apply non-permanent locking agent to the threads.
- LG : Apply liquid gasket to the threads.
- O : Apply oil to the threads and seated surface.
- S : Tighten the fasteners following the specified sequence.
- SS : Apply silicone sealant (PN 56019-120) to the threads.
- St : Stake the fasteners to prevent loosening.

Parts	Torque			Remarks
	N-m	kg-m	ft-lb	
<b>Fuel System:</b>				
Switch housing clamp screws	3.4	0.35	30	
<b>Cooling System:</b>				
Water temperature sensor	7.8	0.80	69 in-lb	SS
Thermostatic fan switch (EX250-F2 ~ F4)	7.8	0.80	69 in-lb	
Thermostatic fan switch (EX250-F6 ~ )	18	1.8	13.0	
Coolant drain plug (cylinder)	7.8	0.80	69 in-lb	
Coolant drain plug (water pump)	7.8	0.80	69 in-lb	
<b>Engine Top End:</b>				
Cylinder head cover bolts	9.8	1.0	87 in-lb	
Cylinder head bolts (8 mm)	25	2.5	18 in-lb	S
Cylinder bolts (6 mm)	12	1.2	104 in-lb	S
Chain guide bolt (upper)	25	2.5	18.0	
Chain guide bolt (lower)	27	2.8	20	L
Camshaft sprocket bolts	15	1.5	11.0	L
Valve adjusting screw locknuts	18	1.8	13.0	O
Camshaft bearing cap bolts	12	1.2	104	S
Camshaft chain tensioner bolts	-	-	-	L
Coolant drain plug (cylinder)	7.8	0.80	69	
<b>Clutch:</b>				
Clutch spring bolts	8.8	0.90	78 in-lb	
Clutch hub nut	130	13.5	98	

## 1-12 GENERAL INFORMATION

Parts	Torque			Remarks
	N-m	kg-m	ft-lb	
<b>Engine Lubrication System:</b>				
Engine drain plug	20	2.0	14.5	
Oil filter bolt	20	2.0	14.5	
Oil passage plug	15	1.5	11.0	
Oil pressure switch	15	1.5	11.0	SS
Oil pressure relief valve	15	1.5	11.0	L
Oil pump mounting Allen bolts	—	—	—	L
Engine oil hose banjo bolts	20	2.0	14.5	
Engine oil pipe banjo bolts (crankcase LH)	12	1.2	104 in-lb	
Oil breather bolts	—	—	—	L
<b>Engine Removal/Installation:</b>				
Engine mounting nuts	32	3.3	24	
Cylinder head bracket bolts	32	3.3	24	
<b>Crankshaft/Transmission:</b>				
Alternator rotor bolt	69	7.0	51	
Alternator stator Allen bolts	12	1.2	104 in-lb	L
Neutral switch	15	1.5	11.0	
Shift drum bearing holder Allen bolts	—	—	—	L
Shift drum pin plate screw	—	—	—	L
Shift drum positioning bolt	25	2.5	18.0	
External shift mechanism return spring pin	20	2.0	14.5	L
Connecting rod big end cap nuts	27	2.8	20	O
Starter clutch Allen bolts	34	3.5	25	L
Crankcase bolts (6 mm)	12	1.2	104 in-lb	
Crankcase bolts (8 mm)	27	2.8	20	
Engine drain plug	20	2.0	14.5	
<b>Wheels/Tires:</b>				
Front axle nut	88	9.0	65	
Rear axle nut	110	11.0	80	
<b>Final Drive:</b>				
Engine sprocket bolts	9.8	1.0	87 in-lb	
Rear sprocket nuts	67	6.8	49	
Rear sprocket stud ends	—	—	—	L
Torque link nuts	32	3.3	24	
<b>Brakes:</b>				
Bleed valves	7.8	0.80	69 in-lb	
Torque link nuts	32	3.3	24	
Caliper mounting bolts (Front)	32	3.3	24	
(Rear)	25	2.5	18.0	

Parts	Torque			Remarks
	N·m	kg·m	ft·lb	
Rear master cylinder clevis locknut	18	1.8	13.0	
Brake pedal mounting bolt	8.8	0.90	78 in·lb	
Disc mounting Allen bolts	23	2.3	16.5	
Brake hose banjo bolts	25	2.5	18.0	
Brake lever pivot bolt locknut	5.9	0.60	52 in·lb	
Front master cylinder mounting bolts	8.8	0.90	78 in·lb	S, G
Rear master cylinder mounting bolts	23	2.3	16.5	
Front brake fluid reservoir cap screws	1.5	0.15	13 in·lb	
Rear brake fluid reservoir bolt	5.9	0.60	52 in·lb	
<b>Suspensions:</b>				
Front fork drain bolts	7.8	0.80	69 in·lb	L
Front fork clamp bolts (upper)	20	2.0	14.5	
(lower)	29	3.0	22	
Front fork bottom Allen bolts	20	2.0	14.5	L
Rear shock absorber mounting nuts	44	4.5	33	
Tie-rod nuts	44	4.5	33	
Rocker arm pivot shaft nut	44	4.5	33	
Swing arm pivot shaft nut	88	9.0	65	
<b>Steering:</b>				
Steering stem head bolt	47	4.8	35	
Handle bar clamp bolts	23	2.3	16.5	
Handle holder mounting bolts	23	2.3	16.5	
<b>Frame:</b>				
Side stand bracket bolts	44	4.5	33	L
<b>Electrical System:</b>				
Spark plugs	13	1.3	113 in·lb	
Alternator rotor bolts	69	7.0	51	
Alternator stator bolts	12	1.2	104 in·lb	
Thermostatic fan switch (EX250-F2 ~ F4)	7.8	0.80	69 in·lb	
Thermostatic fan switch (EX250-F6 ~ )	18	1.8	13.0	
Water temperature sensor	7.8	0.80	69 in·lb	SS
Neutral switch	15	1.5	11.0	
Oil pressure switch	15	1.5	11.0	SS
Switch housing clamp screws	3.4	0.35	30 in·lb	
Taillight lense screws	1.0	0.10	9 in·lb	
Taillight mounting nuts	5.9	0.60	52 in·lb	
Front turn signal light mounting nuts	5.9	0.60	52 in·lb	
Speedometer mounting screws	-	-	-	L

## 1-14 GENERAL INFORMATION

The table below, relating tightening torque to thread diameter, lists the basic torque for the bolts and nuts. Use this table for only the bolts and nuts which do not require a specific torque value. All of the values are for use with dry solvent-cleaned threads.

Basic Torque for General Fasteners

Threads dia. (mm)	Torque		
	N-m	kg-m	ft-lb
5	3.4 – 4.9	0.35 – 0.50	30 – 43 in-lb
6	5.9 – 7.8	0.60 – 0.80	52 – 69 in-lb
8	14 – 19	1.4 – 1.9	10.0 – 13.5
10	25 – 34	2.6 – 3.5	19.0 – 25
12	44 – 61	4.5 – 6.2	33 – 45
14	73 – 98	7.4 – 10.0	54 – 72
16	115 – 155	11.5 – 16.0	83 – 115
18	165 – 225	17.0 – 23.0	125 – 165
20	225 – 325	23 – 33	165 – 240

Periodic Maintenance Chart (US and Canada Models)

The scheduled maintenance must be done in accordance with this chart to keep the motorcycle in good running condition. The initial maintenance is vitally important and must not be neglected.

OPERATION	FREQUENCY	Whichever comes first		* ODOMETER READING						See Page	
		Every	↓	800 km	5000 km	10000 km	15000 km	20000 km	25000 km		30000 km
Carburetor synchronization --check †			•	•	•	•	•	•	•	•	(2-8)
Idle speed--check †			•	•	•	•	•	•	•	•	(2-7)
Throttle grip play--check †			•		•		•		•		2-4
Spark plug--clean and gap †				•	•	•	•	•	•	•	(15-20)
Valve clearance--check †			•		•		•		•		4-7
Air cleaner element--clean †			•		•		•		•		(2-16)
Air cleaner element--replace	5 cleanings				•						(2-16)
Fuel system-- †					•		•		•		(2-9)
Evaporative emission control system (Ca)--check †			•	•	•	•	•	•	•	•	2-6
Battery electrolyte level--check †	month		•	•	•	•	•	•	•	•	(15-9)
Fuel hoses, connections - check †				•	•	•	•	•	•	•	
Brake light switch--check †			•	•	•	•	•	•	•	•	(15-35)
Brake pad wear--check †				•	•	•	•	•	•	•	11-5
Brake fluid level--check †	month		•	•	•	•	•	•	•	•	(11-11)
Brake fluid--change	2 years						•				(11-11)
Clutch--adjust			•	•	•	•	•	•	•	•	(5-4)
Steering--check †			•	•	•	•	•	•	•	•	(13-4)
Drive chain wear--check †				•	•	•	•	•	•	•	(10-5)
Nuts, bolts, and fasteners tightness--check †			•		•		•		•		16-2
Tire wear--check †				•	•	•	•	•	•	•	9-3
Engine oil--change	year		•		•		•		•		(6-6)
Oil filter--replace			•		•		•		•		(6-6)
General lubrication--perform				•	•	•	•	•	•	•	(16-7)
Front fork oil--change									•		12-3
Swing arm pivot, uni-trak linkage--lubricate					•		•		•		(12-10) (12-11)
Coolant--change	2 years								•		(3-5)
Radiator hoses, connections --check †	year		•		•		•		•		(3-11)



Periodic Maintenance Chart (Other than US and Canada Models)

The scheduled maintenance must be done in accordance with this chart to keep the vehicle in good running condition. The first service is vitally important and must not be neglected.

OPERATION	FREQUENCY	↑ ODOMETER READING							
	Whichever comes first ↓ Every	1000 km (600mile)	6000 km (4000mile)	12000 km (7500mile)	18000 km (12000mile)	24000 km (15000mile)	30000 km (20000mile)	360000 km (240000mile)	
Spark plug - clean and gap †			•	•	•	•	•	•	
Valve clearance - check †				•		•		•	
Air cleaner element - clean †#				•		•		•	
Throttle grip play - check †		•		•		•		•	
Idle speed - check †		•		•		•		•	
Carburetor synchronization - check †				•		•		•	
Fuel hoses, connections - check †			•	•	•	•	•	•	
Evaporative emission control system (Ca) - check †		•	•	•	•	•	•	•	
Engine oil - change #	6 months	•	•	•	•	•	•	•	
Oil filter - replace		•		•		•		•	
Radiator hoses, connections - check †		•							
Coolant - change	2 years					•			
Clutch - adjust		•	•	•	•	•	•	•	
Drive chain wear - check #			•	•	•	•	•	•	
Drive chain - lubricate #	600 km								
Drive chain slack - check †#	1000 km								
Brake hoses, connections - check †			•	•	•	•	•	•	
Brake fluid level - check †	month	•	•	•	•	•	•	•	
Brake fluid - change	2 years					•			
Brake master cylinder cup and dust seal - replace	4 years								
Caliper piston seal and dust sea - replace	4 years								
Brake light switch - check †		•	•	•	•	•	•	•	
Steering - check †		•	•	•	•	•	•	•	

# 1-18 GENERAL INFORMATION

OPERATION	FREQUENCY	TODOMETER READING						
	Whichever comes first ↓ Every	1000 Km (600mile)	6000 Km (4000mile)	12000 Km (7500mile)	18000 Km (12000mile)	24000 Km (15000mile)	30000 Km (20000mile)	360000 Km (240000mile)
Steering stem bearing - lubricate	2 years					●		
Front fork oil - change	2 years					●		
Rear shock absorber oil leak - check †			●		●		●	
Front fork oil leak - check †			●		●		●	
Tire wear - check †	4 years	●	●	●	●	●	●	
Swingarm pivot, uni - trak linkage - lubricate	Every 2 years		●		●		●	
Battery electrolyte level - check †	6 months	●	●	●	●	●	●	
General lubrication - perform			●		●		●	
Nuts, bolts, and fasteners tightness - check †		●	●		●		●	
Coolant filter - clean	year							

- # : Service more frequently when operating in severe conditions dusty, wet, muddy, high speed, or frequent starting/stopping.
- \* : For higher odometer readings, repeat at the frequency interval established here.
- † : Replace, add, adjust, clean, or torque if necessary.
- (Ca):California vehicle only

## Quick Reference

Steering stem bearing - lubricate	2 years					●		
Front fork oil - change	2 years					●		
Rear shock absorber oil leak - check †			●		●		●	
Front fork oil leak - check †			●		●		●	
Tire wear - check †	4 years	●	●	●	●	●	●	
Swingarm pivot, uni - trak linkage - lubricate	Every 2 years		●		●		●	
Battery electrolyte level - check †	6 months	●	●	●	●	●	●	
General lubrication - perform			●		●		●	
Nuts, bolts, and fasteners tightness - check †		●	●		●		●	
Coolant filter - clean	year							

# Fuel System

## Table of Contents

Exploded View.....2-2  
 Specifications .....2-4  
 Special Tools.....\*

Throttle Grip and Cables .....\*

    Throttle Grip Play Inspection.....\*

    Throttle Cable Adjustment.....\*

    Throttle Cable Lubrication .....\*

    Throttle Cable Inspection .....\*

Choke Cable .....\*

    Choke Cable Free Play Inspection .....\*

    Choke Cable Adjustment.....\*

    Choke Cable Lubrication .....\*

    Choke Cable Inspection .....\*

Carburetors .....2-4

    Idle Speed Inspection.....\*

    Idle Speed Adjustment .....\*

    High Altitude Performance  
     Adjustment (US model) .....2-4

    Carburetor Synchronization  
     Inspection.....\*

    Carburetor Synchronization.....\*

    Fuel Level Inspection.....\*

    Fuel Level Adjustment.....\*

    Fuel System Cleanliness Inspection.....\*

    Carburetor Assembly Removal.....\*

    Carburetor Assembly Installation Notes.....\*

    Carburetor Separation.....\*

    Carburetor Installation .....\*

    Carburetor Disassembly and  
     Assembly Notes .....\*

    Carburetor Cleaning.....\*

    Coolant Filter Cleaning ..... 2-5

Air Cleaner ..... 2-5

    Air Cleaner Element Removal ..... 2-5

    Air Cleaner Element Installation..... 2-5

    Air Cleaner Element Cleaning ..... \*

    Air Cleaner Element Inspection  
     and Replacement ..... \*

Fuel Tank ..... 2-6

    Fuel Tank Removal ..... 2-6

    Fuel Tank Installation Notes ..... 2-6

    Fuel Tank and Tap Cleaning ..... \*

    Fuel Tap Inspection.....\*

    Fuel Tank and Cap Inspection.....\*

Evaporative Emission Control System  
 (US California Vehicle Only) ..... 2-6

    Parts Removal/Installation Notes ..... 2-6

Hose Inspection .....\*

Separator Inspection.....\*

Separator Operation Test.....\*

Canister Inspection .....\*


Fuel Tank and Cap Inspection  
 (see Fuel Tank section).....\*


\* : Base Manual    See 1986-1987 Manual

Quick Reference


## 2-2 FUEL SYSTEM

### Exploded View

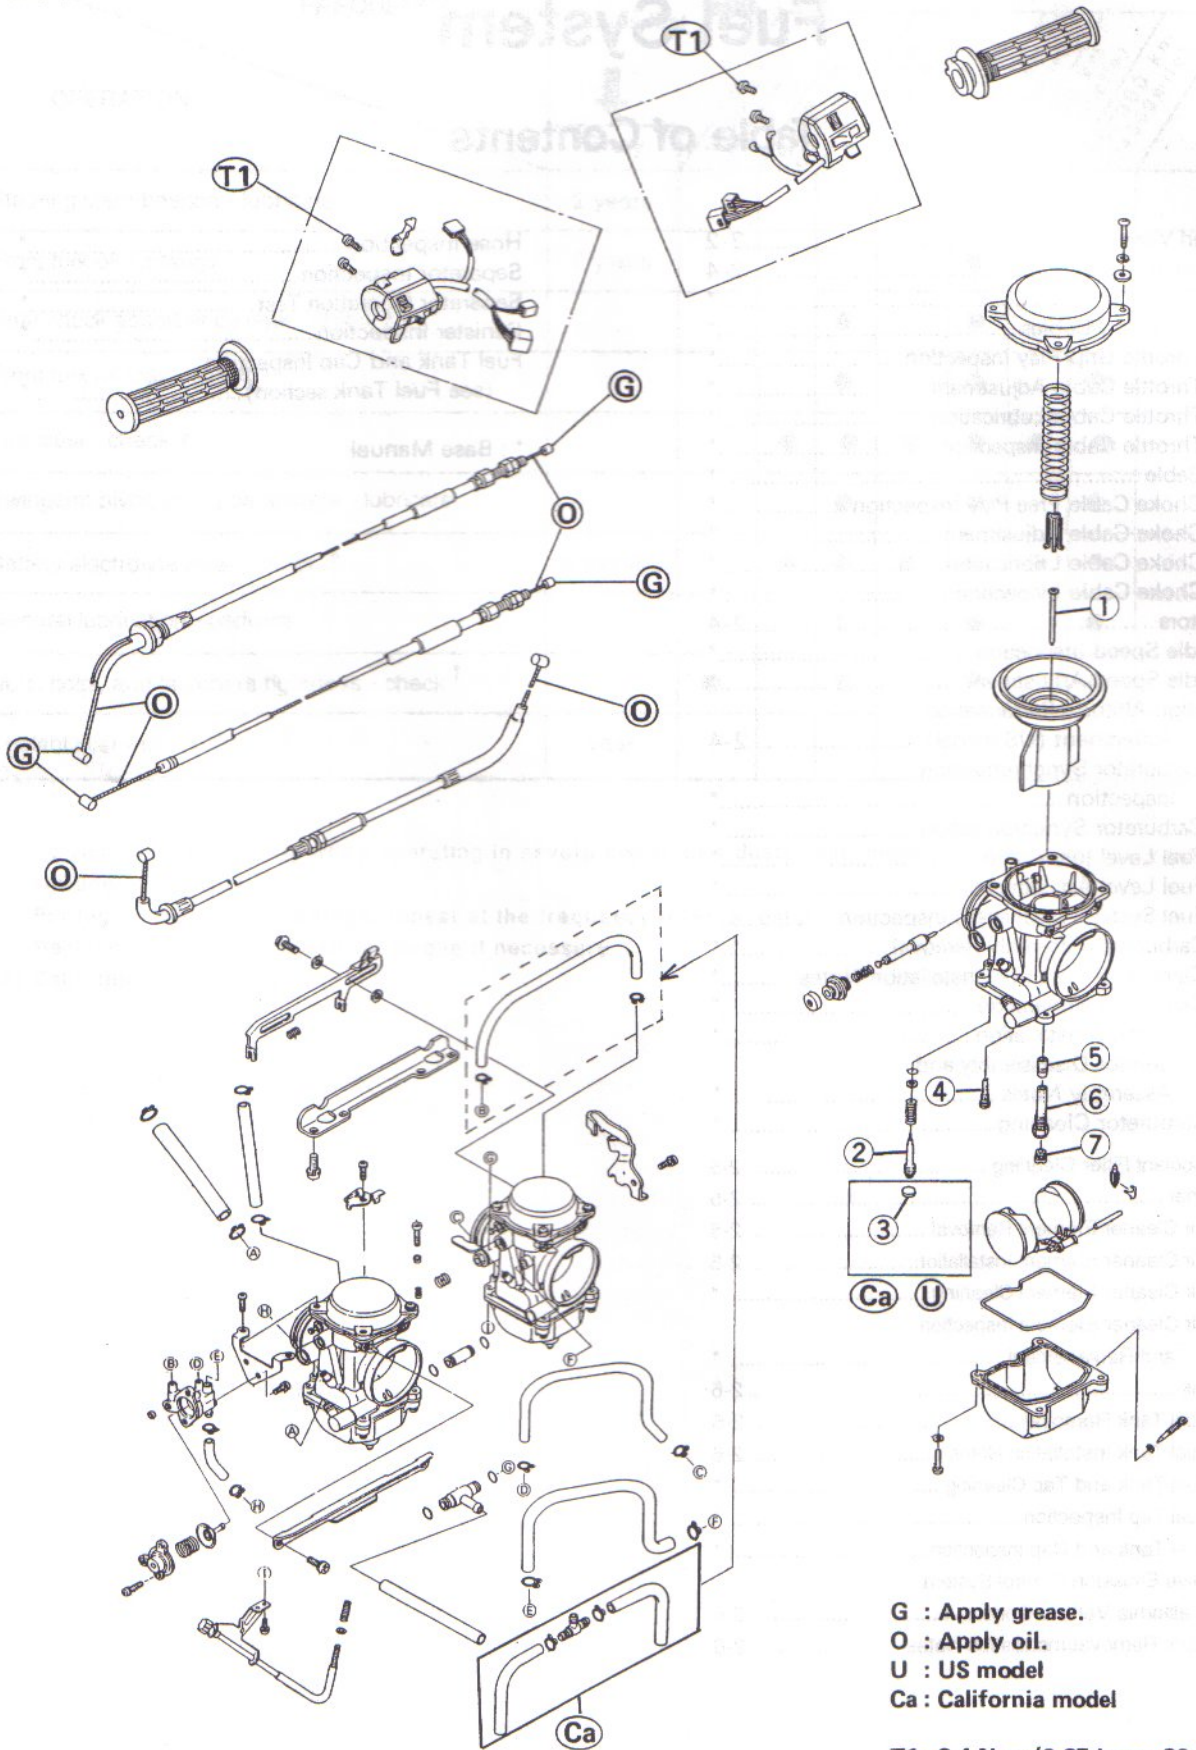

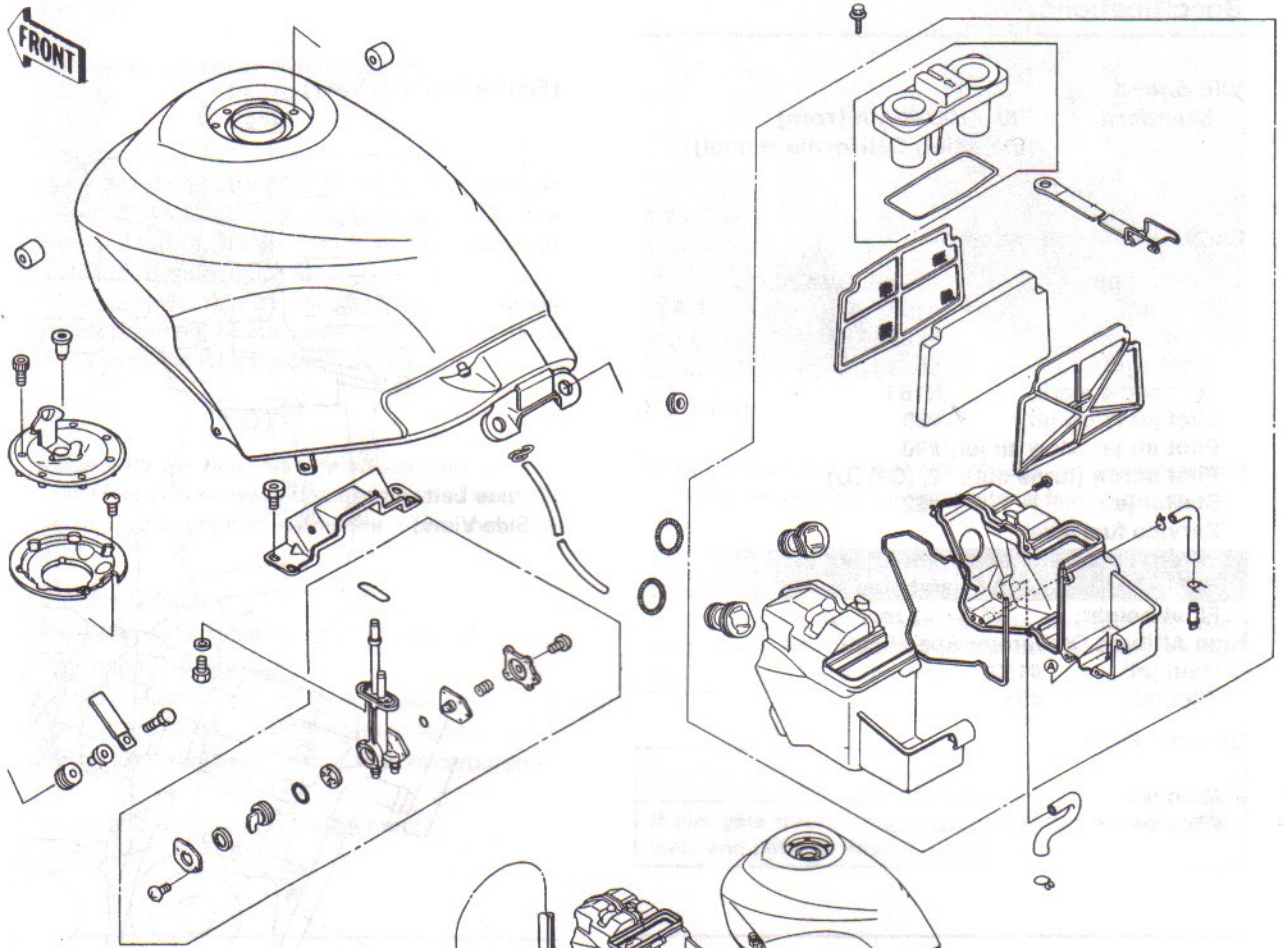

California Model

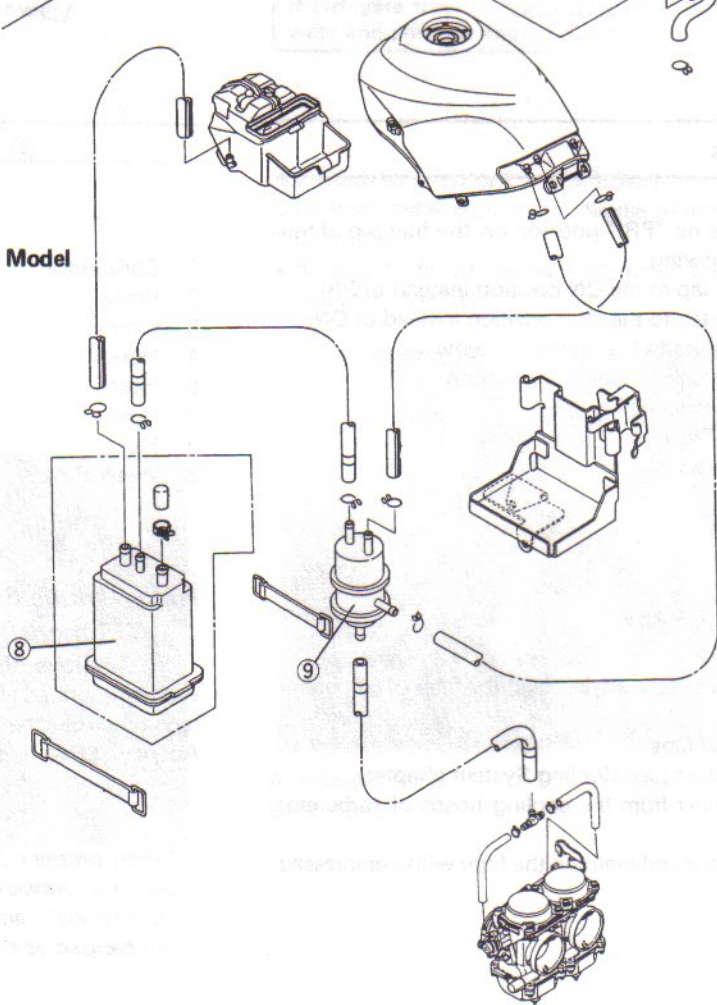

- 1. Jet Needle
- 2. Pilot Screw
- 3. Plug (US and California models)
- 4. Pilot Jet
- 5. Needle Jet
- 6. Needle Jet Holder
- 7. Main Jet
- 8. Canister
- 9. Separator (Return Pump)

A = Australia Model

## 2-4 FUEL SYSTEM

### Specifications

#### Idle Speed

Standard: 1300 ±100 r/min (rpm)  
(including California model)

#### Carburetor Specifications

Make, type: Keihin, CVK30 ✓  
 Main jet: #105 ✓ 108  
 Main air jet: #100, (A) #80 100  
 Needle jet: #6 ✓  
 Jet needle mark: N16 I ✓  
 Pilot jet (slow jet): #38 ✓  
 Pilot air jet (slow air jet): #90 ✓  
 Pilot screw (turns out): 2, (Ca) (U) — ✓  
 Starter jet: #52 ✓  
 Service fuel level  
 (from carburetor body bottom edge):  
 0.5 mm below — 1.5 mm above

Float height: 17.0 ± 2 mm

#### High Altitude Carburetor Specifications ( (Ca)(U) )

Main jet: #102  
 Pilot jet: #35

#### Optional Parts

Main jet: #100, 102, 108, 110  
 Pilot jet: (C)(Ca)(U) #35

### Carburetors

Since there is no "PRI" position on the fuel tap of this model, note following.

Turn the fuel tap to the ON position instead of PRI.  
 Turn the fuel tap to the OFF position instead of ON.

This change applies to the following items.

- Carburetor Synchronization Inspection
- Fuel Level Inspection
- Fuel System Cleanliness Inspection
- Fuel Tank Removal


#### Coolant Filter Cleaning

(UK model, EX250-F3 ~)


Before winter season starts, clean the filter of carburetor system.

- Remove the fairings.
- Drain the coolant (see Cooling System chapter).
- Remove the filter from the cooling hoses of carburetor system.
- Blow off dirt and sediment on the filter with compressed air.

(Engine Top Side View)

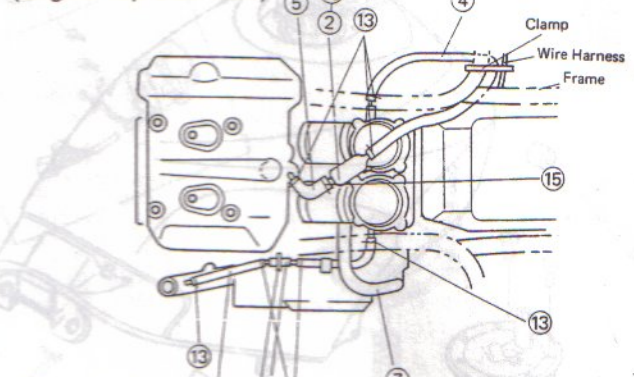

(Engine Left Side View)

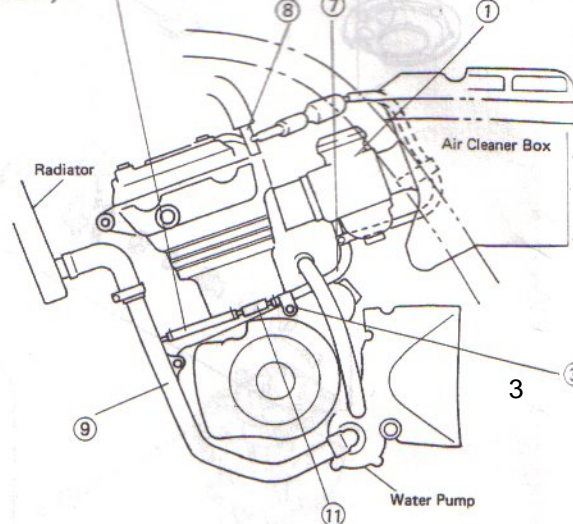

- |               |                  |
|---------------|------------------|
| 1. Carburetor | 9. Water Pipe    |
| 2. Body       | 10. Water Filter |
| 3. Clamp      | 11. Valve Assy   |
| 4. Hose       | 12. Clamp        |
| 5. Hose       | 13. Clamp        |
| 6. Hose       | 14. Damper       |
| 7. Hose       | 15. Clamp        |
| 8. Water Pipe |                  |

#### High Altitude Performance Adjustment (US model)

To improve the Emission Control Performance of vehicle operated above 4000 feet (1219 meters), Kawasaki recommends the following Environmental Protection Agency (EPA) approved modification.


#### NOTE

- When properly performed, these specified adjustments are not considered to be emission control system "tampering" and vehicle performance is generally unchanged as a result.



## 2-6 FUEL SYSTEM

- Set the housing cap with the arrow mark facing forward.

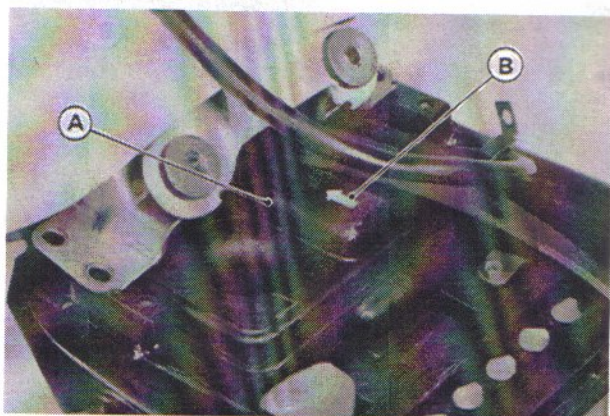

A. Housing Cap      B. Arrow

- Install the fuel tank (see Fuel Tank Installation).

### Fuel Tank

#### Fuel Tank Removal


#### ▲ WARNING

Gasoline is extremely flammable and can be explosive under certain conditions. Turn the ignition switch OFF. Do not smoke. Make sure the area is well ventilated and free from any source of flame or sparks; this includes any appliance with a pilot light.

#### CAUTION

For the US California vehicle, if gasoline, solvent, water or any other liquid enters the canister, the canister's vapor absorbing capacity is greatly reduced. If the canister does become contaminated, replace it with a new one.

- Remove the following parts.
  - Seat (see Frame chapter)
  - Side Covers (see Frame chapter)
  - Upper Fairing Allen Bolts
  - Fuel Tank Bracket Bolts

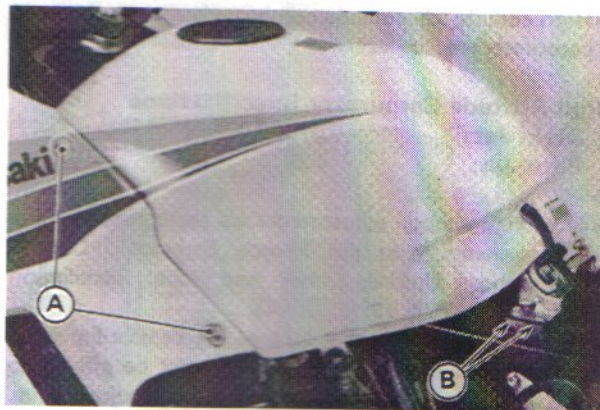

A. Upper Fairing Allen Bolts  
B. Fuel Tank Bracket Bolts

- Turn the fuel tap to the OFF position.
- Tilt the tank out the rear of the frame.
- Pull the hoses off the tap.
- For California vehicles, the breather and fuel return hoses must be disconnected from the tank fittings before tank removal. Plug the fuel return fitting. This prevents gasoline from flowing into the canister.
- Drain the fuel tank if necessary.
- Arrange a suitable container under the fuel tank.
- Turn the fuel tap to the RES position to drain the fuel into the container.

#### Fuel Tank Installation Notes

- Refer to the base manual noting the following.
- Run the fuel tank hoses according to the Wiring, Cable, or Hose Routing section in the General Information chapter.
- Tighten the upper fairing Allen bolts first, then tighten the tank bracket bolts for easy bolt installation.

### Evaporative Emission Control System (US California Vehicle only)

#### Parts Removal/Installation Notes

- Refer to the Base Manual noting the following.
- Install the parts and route the hoses according to the Wiring, Cable, or Hose Routing section in the General Information chapter.

# Cooling System

## Table of Contents


Exploded View .....	3-2
Specifications .....	3-3
Sealant .....	3-3
Cooling System .....	*
Coolant .....	*
Coolant Deterioration .....	*
Coolant Level Inspection .....	*
Coolant Draining .....	*
Coolant Filling .....	*
Air Bleeding .....	*
Visual Leak Inspection .....	*
Flushing .....	*
Coolant Filter Cleaning .....	3-3
Disassembly and Assembly Precautions .....	*
Water Pump .....	*
Pump Cover Removal .....	*
Pump Cover Installation Note .....	*
Pump Impeller Inspection .....	*
Water Pump Removal .....	*
Water Pump Installation Notes .....	*
Radiator, Radiator Fan .....	*
Radiator, Radiator Fan Removal .....	*
Radiator Installation Note .....	*
Radiator Inspection .....	*
Radiator Cleaning .....	*
Radiator Cap Inspection .....	*
Radiator Hose, Reservoir Tank Tube Inspection .....	*
Radiator Hose, Pipes, Reservoir Tank Tube Installation Notes .....	*
Thermostat .....	*
Thermostat Removal .....	*
Thermostat Housing Removal .....	*
Thermostat Inspection .....	3-3,*
Thermostatic Fan Switch, Water Temperature Sensor .....	*
Water Temperature Sensor Removal .....	*
Fan Switch Removal .....	*
Installation Notes .....	*
Inspection .....	*

\* : Base Manual

Quick Reference

## 3-2 COOLING SYSTEM

### Exploded View

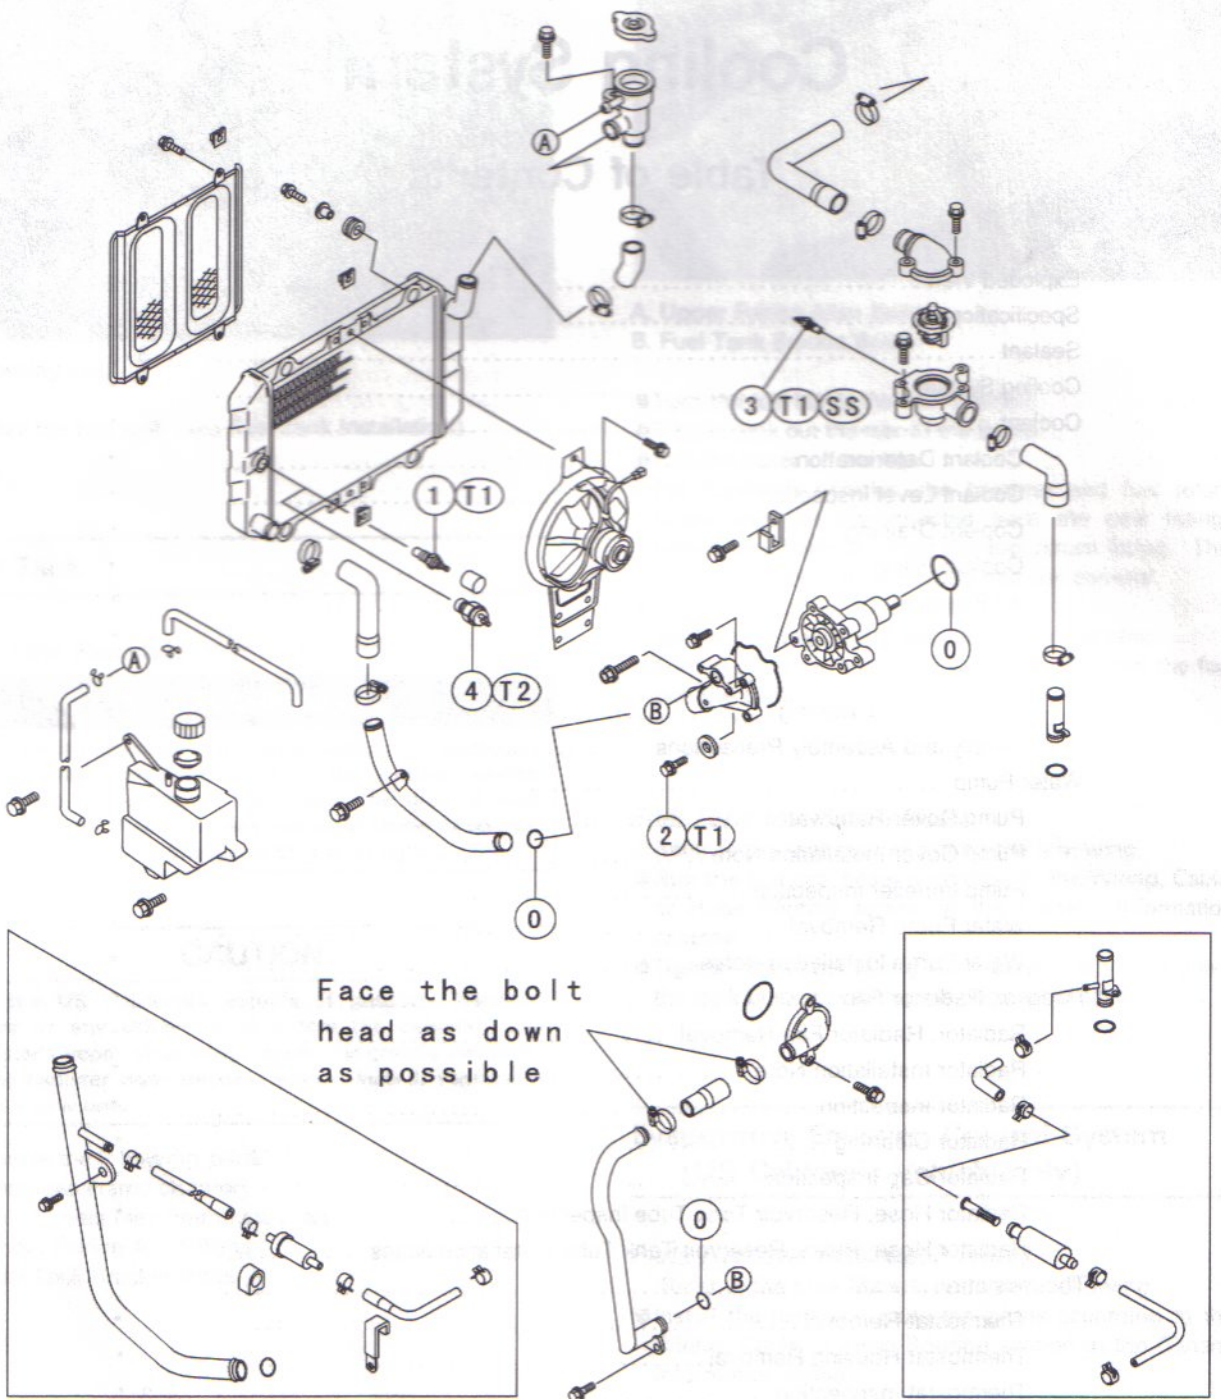

6D02035B#4 C

1. Fan Switch (EX250-F2 ~ F4)

2. Drain Plug

3. Water Temperature Sensor

4. Fan Switch (EX250-F6 ~)

SS: Apply silicone sealant.

O: Apply oil at installation.

T1: 7.8 N·m (0.80 kg·m, 69 in·lb)

T2: 18 N·m (1.8 kg·m, 13.0 ft·lb)

.....  
**Specifications**  
 .....

Item	Standard
<b>Original Coolant</b> Type: Color: Mixed ratio: Freezing point: Total amount:	Permanent type of antifreeze (soft water and ethylene glycol plus corrosion and rust inhibitor chemicals for aluminum engines and radiators) Green Soft water 50%, coolant 50% -35°C (-31°F) 1.0 L (reservoir tank full level including radiator and engine)
<b>Radiator Cap</b> Relief pressure:	93 ~ 123 kPa (0.95 ~ 1.25 kg/cm <sup>2</sup> , 14 ~ 18 psi)
<b>Thermostat</b> Valve opening temperature: Valve full open lift:	80.5 – 83.5°C (177 – 182°F) 6 mm or more @95°C (203°F)

.....  
**Sealant**  
 .....

**Kawasaki Bond (Silicone Sealant): 56019-120**



**Coolant Filter Cleaning**

Refer to the chapter of carburetor in Fuel System for the cleaning procedures.

# Engine Top End

## Table of Contents


Exploded View . . . . .	4-2	Cylinder, Piston . . . . .	*
Specifications . . . . .	4-4	Cylinder Removal . . . . .	*
Special Tools . . . . .	4-5	Cylinder Installation Notes . . . . .	*
Sealant . . . . .	4-5	Piston Removal . . . . .	*
Cylinder Head Cover . . . . .	4-6	Piston Installation Note . . . . .	*
Cylinder Head Cover Removal . . . . .	4-6	Piston Ring, Piston Ring	
Cylinder Head Cover		Groove Wear . . . . .	*
Installation Notes . . . . .	4-6	Piston Ring End Gap . . . . .	*
Camshaft Chain Tensioner . . . . .	*	Cylinder Inside Diameter . . . . .	*
Chain Tensioner Removal . . . . .	*	Piston Diameter . . . . .	*
Chain Tensioner Installation . . . . .	*	Boring, Honing . . . . .	*
Camshaft Chain Tensioner Disassembly . . . . .	*	Carburetor Holder . . . . .	*
Camshaft Chain Tensioner Assembly . . . . .	*	Carburetor Holder Installation . . . . .	*
Camshaft, Camshaft Chain, Rocker Arm . . . . .	*	Muffler . . . . .	4-9
Camshaft, Rocker Arm Removal . . . . .	*	Muffler Removal . . . . .	4-9
Camshaft Installation (Including		Muffler Installation . . . . .	4-9
Chain Timing Procedure) . . . . .	*	Exhaust System Inspection . . . . .	*
Camshaft and Sprocket			
Assembly Notes . . . . .	*		
Camshaft Oil Clearance Inspection . . . . .	*		
Camshaft Chain Wear . . . . .	*		
Camshaft Chain Guide Wear . . . . .	*		
Cylinder Head . . . . .	4-6		
Compression Measurement . . . . .	4-6		
Cylinder Head Removal . . . . .	*		
Cylinder Head Installation Notes . . . . .	*		
Cylinder Head Disassembly and			
Assembly (Valve Mechanism			
Removal and Installation . . . . .	*		
Cylinder Head Warp . . . . .	*		
Cylinder Head Cleaning . . . . .	*		
Valve . . . . .	4-7		
Valve Clearance Inspection . . . . .	4-7		
Valve Clearance Adjustment . . . . .	4-8		
Valve Seat Inspection . . . . .	*		
Valve Seat Repair . . . . .	*		
Measuring Valve-to-Guide			
Clearance (Wobble Method) . . . . .	*		


\* : Base Manual

Quick Reference

# 4-2 ENGINE TOP END

## Exploded View

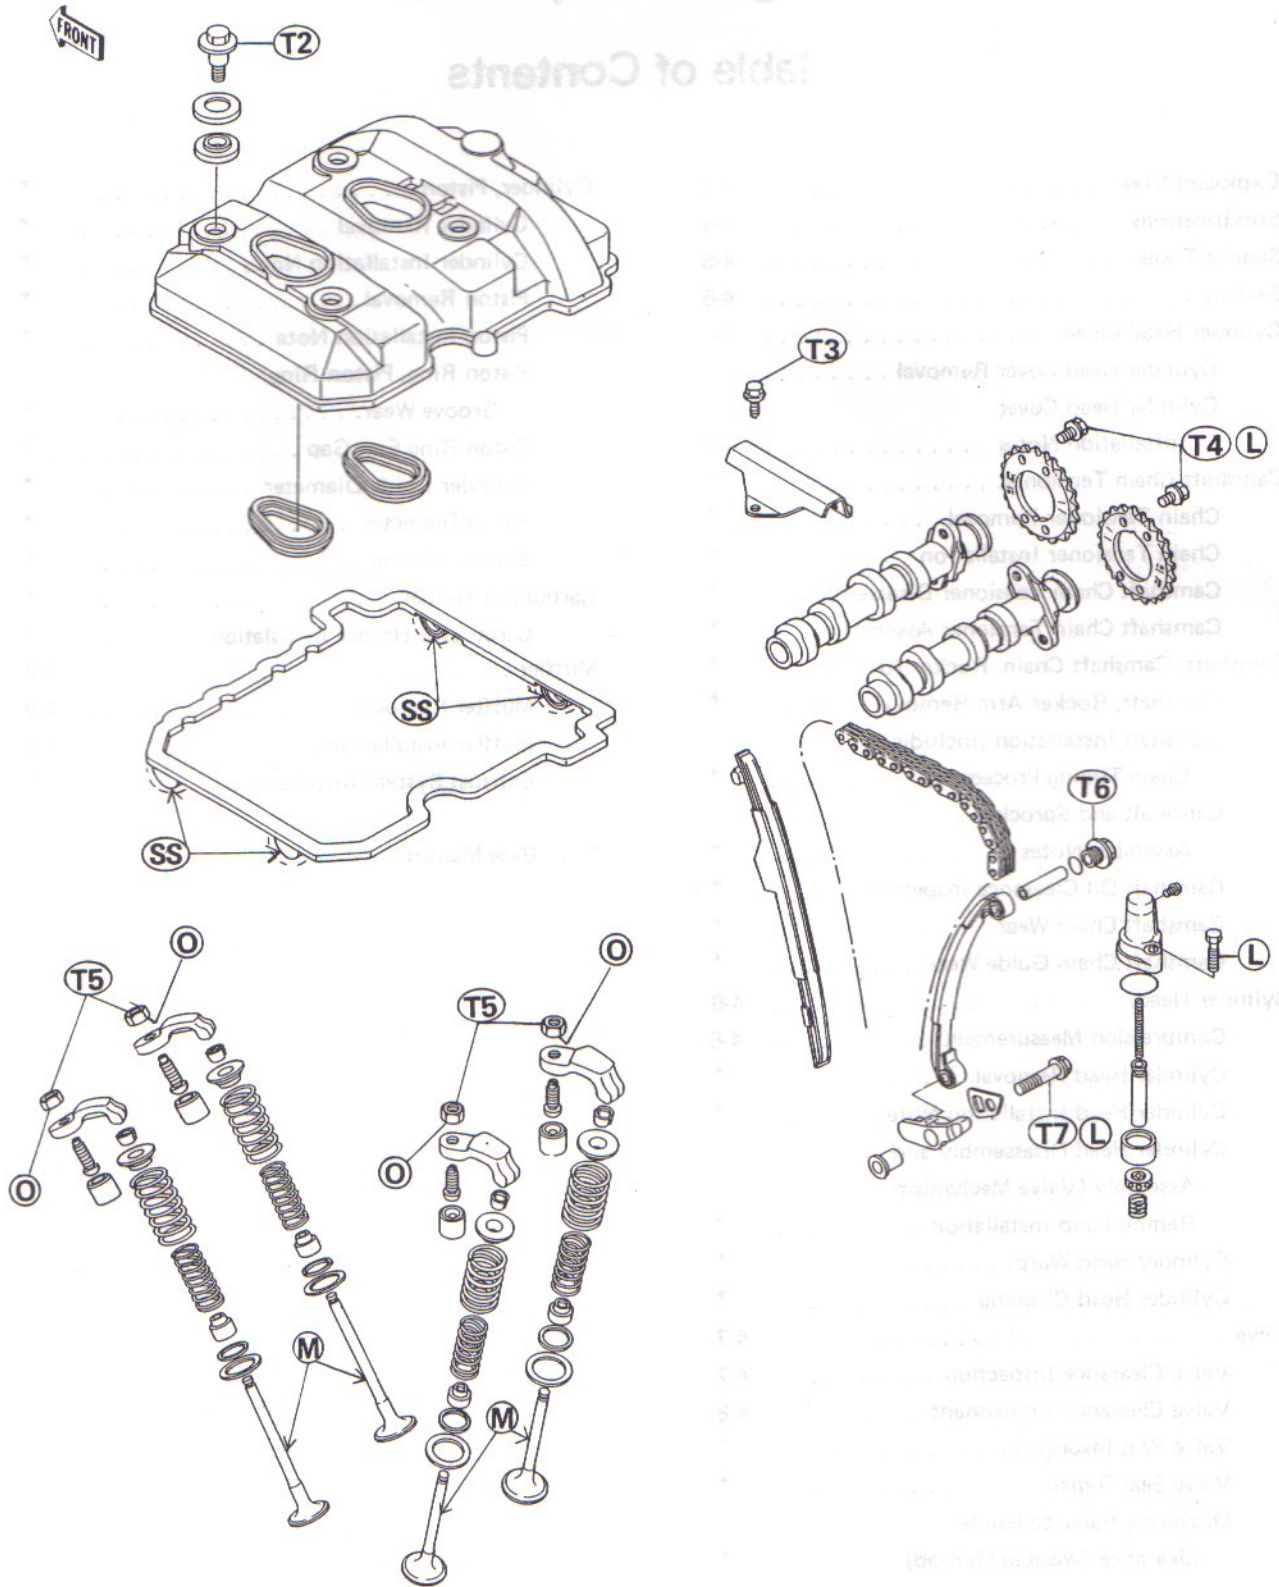

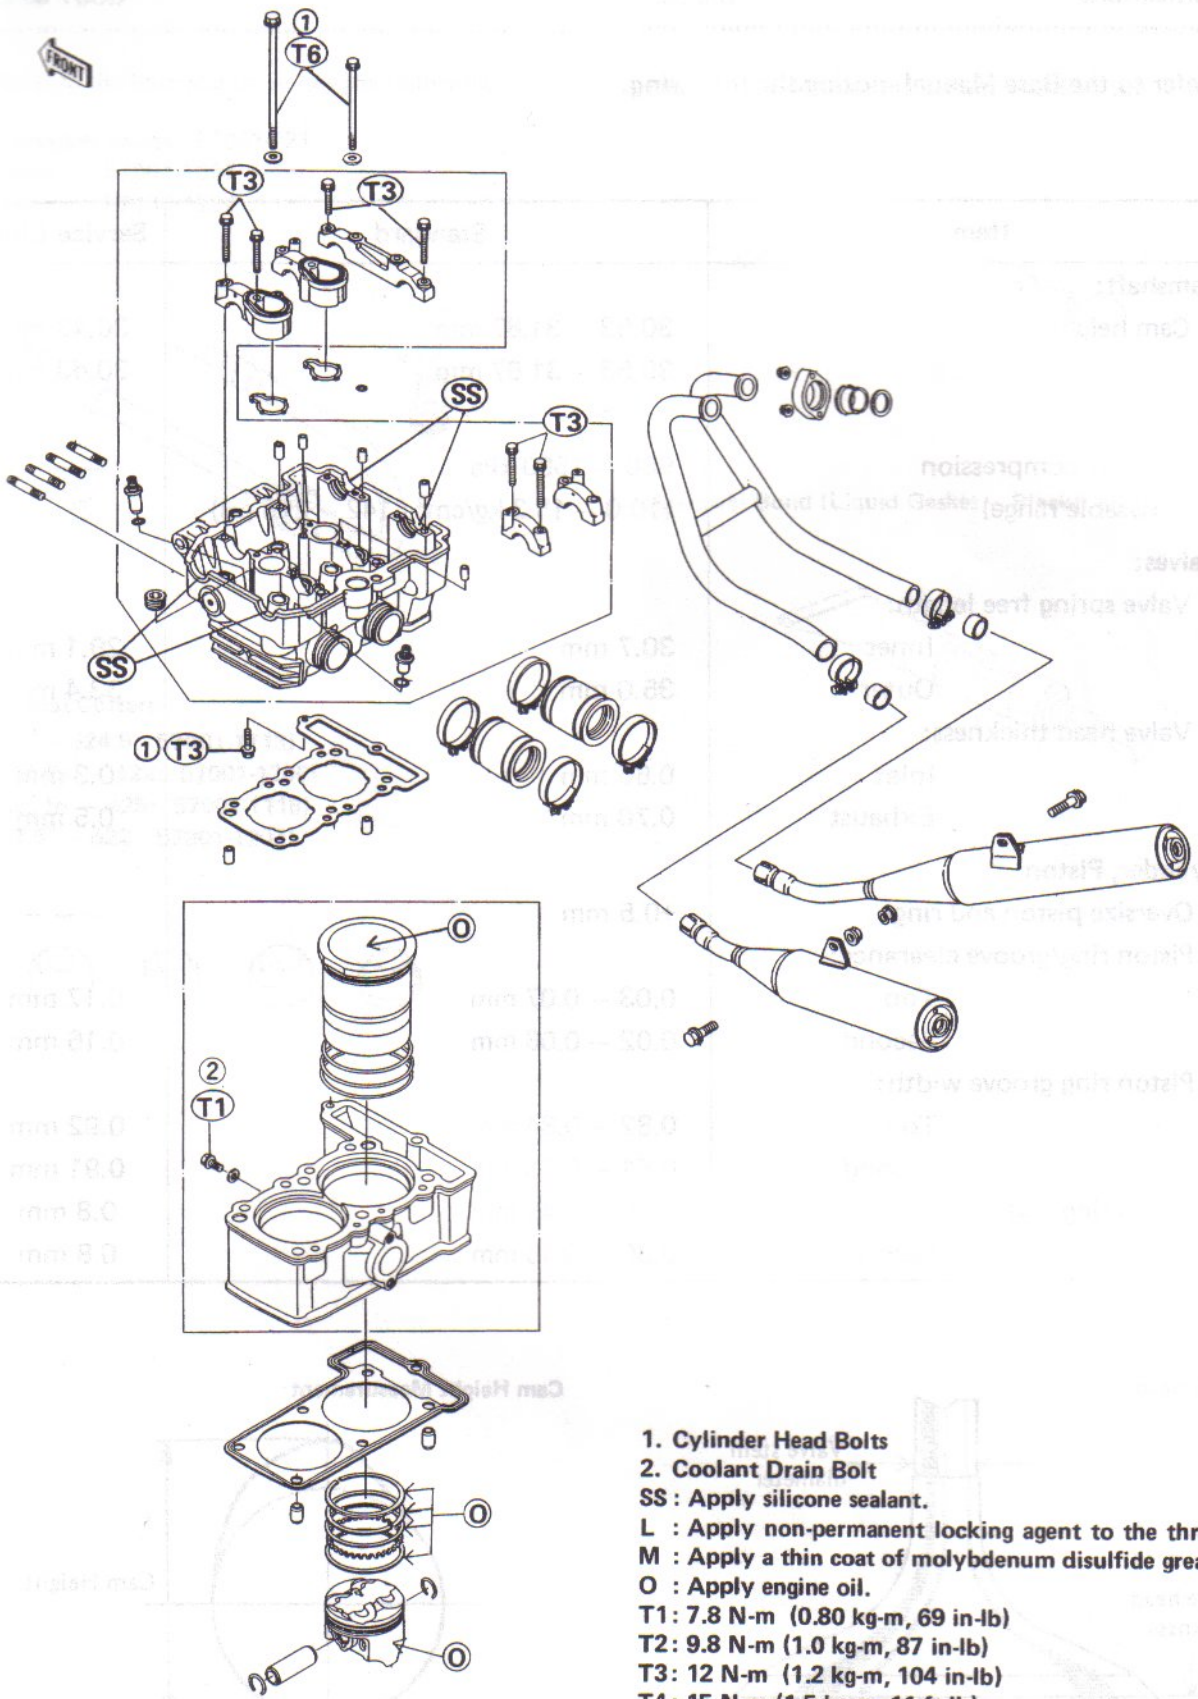

- 1. Cylinder Head Bolts
- 2. Coolant Drain Bolt
- SS : Apply silicone sealant.
- L : Apply non-permanent locking agent to the threads.
- M : Apply a thin coat of molybdenum disulfide grease.
- O : Apply engine oil.
- T1 : 7.8 N-m (0.80 kg-m, 69 in-lb)
- T2 : 9.8 N-m (1.0 kg-m, 87 in-lb)
- T3 : 12 N-m (1.2 kg-m, 104 in-lb)
- T4 : 15 N-m (1.5 kg-m, 11 ft-lb)
- T5 : 18 N-m (1.8 kg-m, 13.0 ft-lb)
- T6 : 25 N-m (2.5 kg-m, 18 ft-lb)
- T7 : 27 N-m (2.8 kg-m, 20 ft-lb)


## 4-4 ENGINE TOP END

### Specifications


Refer to the Base Manual, noting the following.

Item	Standard	Service Limit
<b>Camshaft:</b>		
Cam height: Inlet	30.53 – 31.67 mm	30.43 mm
Exhaust	30.53 – 31.67 mm	30.43 mm
<b>Cylinder Head:</b>		
Cylinder compression (Usable range)	980 – 1500 kPa (10.0 – 15.3 kg/cm <sup>2</sup> , 142 – 218 psi)	---
<b>Valves:</b>		
Valve spring free length:		
Inner	30.7 mm	29.1 mm
Outer	35.0 mm	33.4 mm
Valve head thickness:		
Inlet	0.65 mm	0.3 mm
Exhaust	0.70 mm	0.5 mm
<b>Cylinder, Piston:</b>		
Oversize piston and rings	+0.5 mm	---
Piston ring/groove clearance:		
Top	0.03 – 0.07 mm	0.17 mm
Second	0.02 – 0.06 mm	0.16 mm
Piston ring groove width:		
Top	0.82 – 0.84 mm	0.92 mm
Second	0.81 – 0.83 mm	0.91 mm
Piston ring end gap: Top	0.30 – 0.45 mm	0.8 mm
Second	0.30 – 0.45 mm	0.8 mm

Valve Head

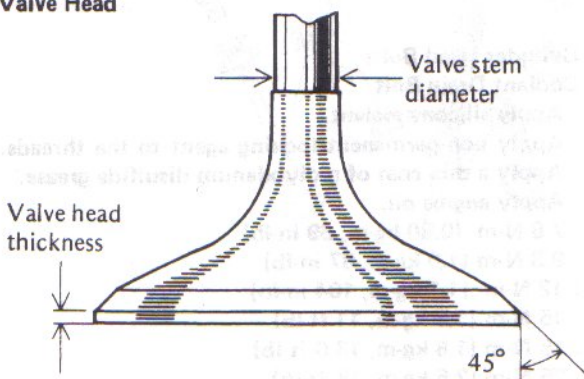

Cam Height Measurement

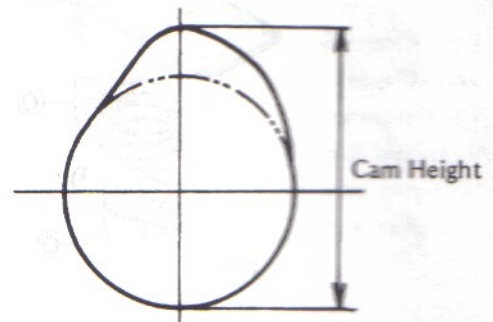


**Special Tools**

Refer to the Base Manual noting the following.

**Compression Gauge: 57001-221**

**Adapter: 57001-1255**

**Gasket: 57001-1224**

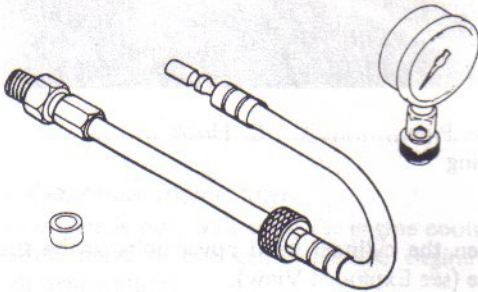


**Valve Seat Cutters:**

**(45° - φ24.5: 57001-1113)**

**(32° Ex. - φ22: 57001-1206)**

**(32° In. - φ25: 57001-1118)**

**(67.5° - φ22: 57001-1207)**

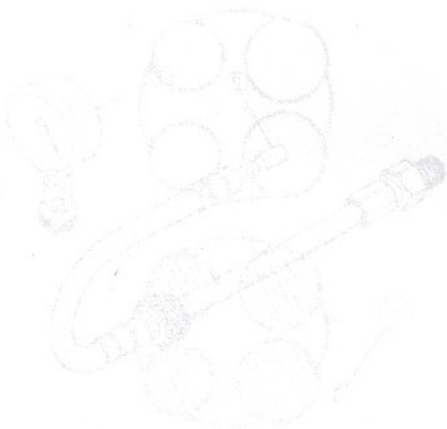


**Sealant**

**Kawasaki Bond (Silicone Sealant): 56019-120**



**Kawasaki Bond (Liquid Gasket - Black): 92104-1003**

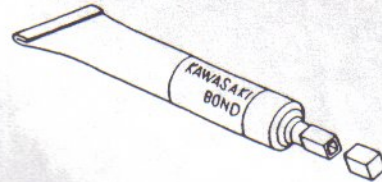

1. For Intake
2. For Exhaust
3. For Oil
4. For Oil
5. For Oil
6. For Oil
7. For Oil
8. For Oil
9. For Oil
10. For Oil


## 4-6 ENGINE TOP END

### Cylinder Head Cover

See other method of  
Rocker Cover

#### Cylinder Head Cover Removal

- Drain the coolant (see Coolant Draining in the Cooling System chapter).
- Remove the following parts.
  - Upper Fairing (see Frame chapter in this text)
  - Fuel Tank (see Fuel System chapter in this text)
  - Right-Hand Ignition Coil
- Remove the cylinder head cover bolts and lift the head cover.
- Pull the water pipe out of the cylinder head and remove the cylinder head cover from the vehicle right side.

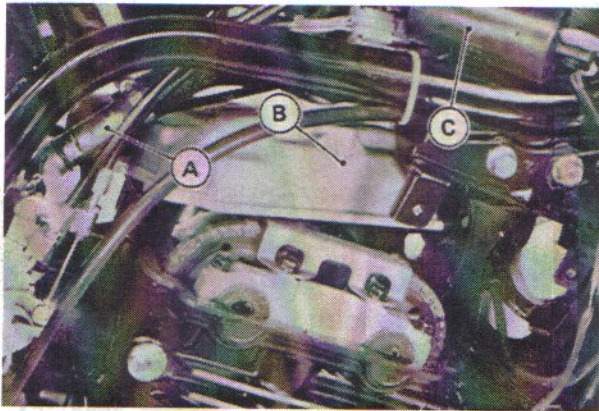


A. Water Pipe  
B. Cylinder Head Cover  
C. Ignition Coil

#### Cylinder Head Cover Installation Notes


- Replace the head cover gasket with a new one if the gasket is damaged.
- Apply silicone sealant to the cylinder head as shown.

#### Silicone Sealant Applied Area

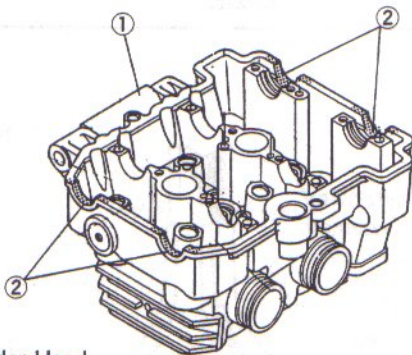

1. Cylinder Head
2. Apply silicone sealant here.

- Stick the gasket partially to the cover with a liquid gasket for installation convenience.
- Check that the O-ring is good condition, and install the water pipe as shown.

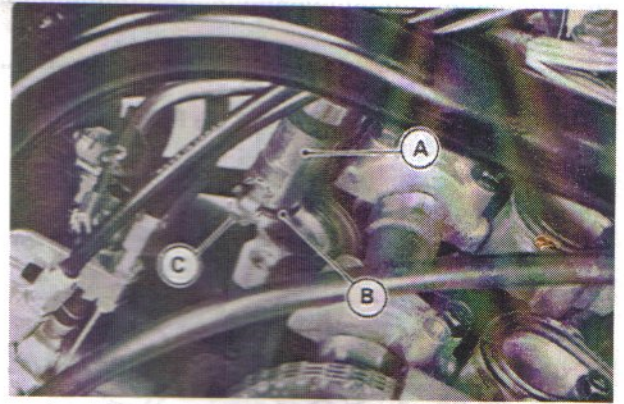

A. Water Pipe  
B. O-Ring  
C. Hook


- Tighten the cylinder head cover bolts to the specified torque (see Exploded View).

### Cylinder Head

#### Compression Measurement

- Refer to p. 4-11 in the Base Manual noting the following.
- Thoroughly warm up the engine so that engine oil between the piston and cylinder wall will help seal compression as it does during normal running.
- Stop the engine, remove the spark plugs, and fuel tank, and attach compression gauge (special tool) firmly into the spark plug hole.

#### Compression Gauge

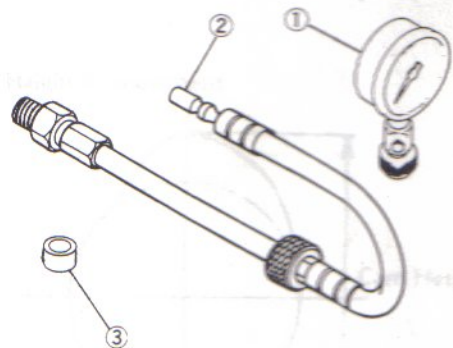

1. Compression Gauge: 57001-221
2. Adapter: 57001-1255
3. Gasket: 57001-1224

- Using the starter motor, rotate the engine over with the throttle fully open until the compression gauge stops rising; the compression is the highest reading obtainable.
- Repeat the measurement for the other cylinder.

**Cylinder Compression (Usable Range)**


980 – 1500 kPa, 470 r/min (rpm)  
 (10.0 – 15.3 kg/cm<sup>2</sup>, 142 – 218 psi)

**Valves**

**Valve Clearance Inspection**


- If the engine is hot, wait until the engine cools. Valve clearance must be checked when the engine is cold (room temperature).
- Drain the coolant.
- Remove the following parts.
  - Upper Fairing (see Frame chapter in this text)
  - Fuel Tank (see Fuel System chapter in this text)
  - Right-Hand Ignition Coil
  - Cylinder Head Cover
  - Alternator Cover Upper and Center Plugs
- Using a wrench on the crankshaft rotation bolt, turn the crankshaft counterclockwise until a TDC mark on the rotor is aligned with the timing mark in the inspection window with the piston on the compression stroke.
- Watching the movement of the Number 1 (left side) cylinder's inlet valve.
- When the valves have just finished opening and closing (moving downwards and returning upwards), turn the crankshaft in the same direction until the 1T mark on the alternator rotor is aligned with the notch in the inspection window in the alternator cover.

**Camshaft Position**

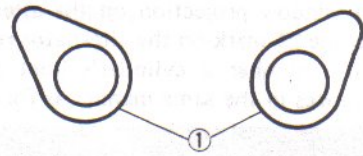


1. Number 1 Cylinder's Camshafts

- Measure the clearance of Number 1 cylinder's inlet valves by inserting the thickness gauge (special tool: limit gauge) enough between the cam lobe and rocker arm.

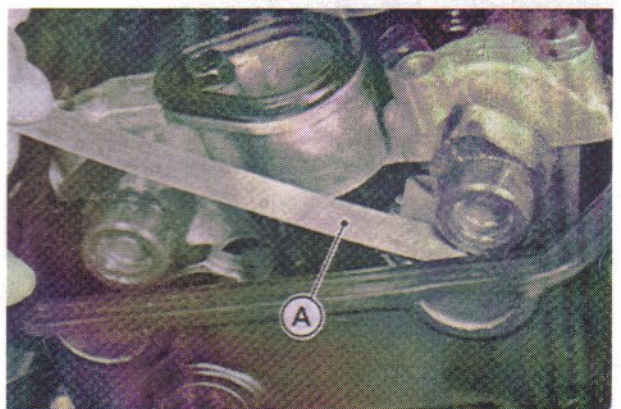

A. Thickness Gauge: 57001-1221


**Thickness Gauge: 57001-1221 Limit Gauge**

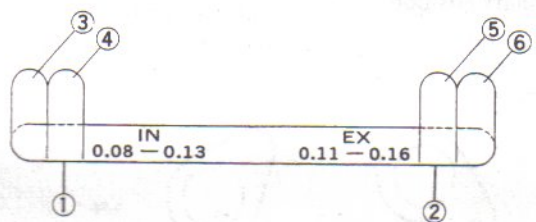

1. For Inlet Valve Inspection
2. For Exhaust Valve Inspection
3. GO End
4. NO-GO End
5. NO-GO End
6. GO END

○When the "GO" end of the gauge will fit, but not the "NO-GO" end, the valve clearance is correct.

**Measuring Valves**

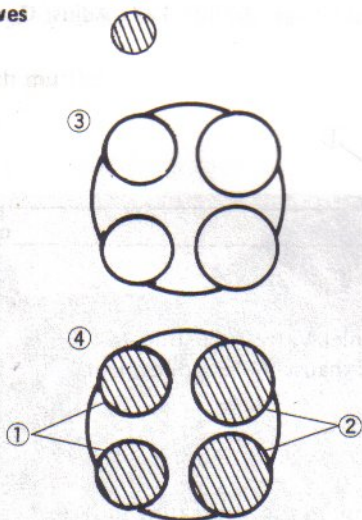


1. Exhaust Valves
2. Inlet Valves
3. Number 2 Cylinder
4. Number 1 Cylinder

## 4-8 ENGINE TOP END


- Measure the Number 1 cylinder exhaust valves in the same manner.
- Turn the crankshaft 180° counterclockwise until the inspection window projection on the alternator cover aligns with the 2T mark on the alternator rotor.
- Measure the Number 2 cylinder's inlet and exhaust valve clearances in the same manner as for the Number 1 cylinder.

### Measuring Valves

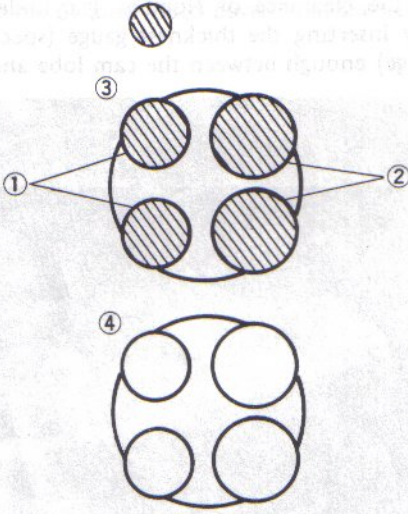

1. Exhaust Valves
2. Inlet Valves
3. Number 2 Cylinder
4. Number 1 Cylinder

### Camshaft Position

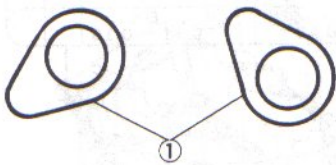


1. Number 1 Cylinders Camshafts

★ If the valve clearance is incorrect, the valve clearance must be adjusted.

### Valve Clearance Adjustment

- When adjusting the exhaust valve clearance, remove the following parts to insert the valve adjuster (special tool).
  - Radiator and Radiator Fan Motor
  - Right and Left Engine Brackets along with Ignition Coils
- Loosen the valve adjusting screw locknut by using the valve adjuster (special tool).

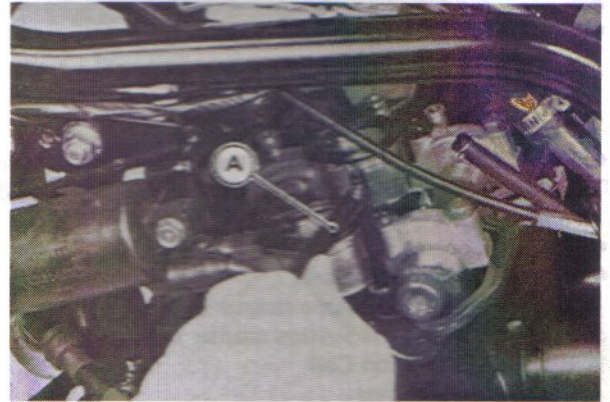

A. Valve Adjuster: 57001-1220


- Insert the thickness gauge (special tool: adjust gauge) between the cam lobe and the rocker arm.
- Turn the adjusting screw until the gauge drags in the clearance.

### Thickness Gauge: 57001-1221 Adjust Gauge



1. For Inlet Valve Adjustment
2. For Exhaust Valve Adjustment


- Apply oil to the nut seating surface.
- Tighten the locknut by the valve adjuster temporarily.
- Tighten the locknut to the specified torque (12 kg Force) while preventing the adjusting screw from turning with the locknut by using a push-pull gauge.

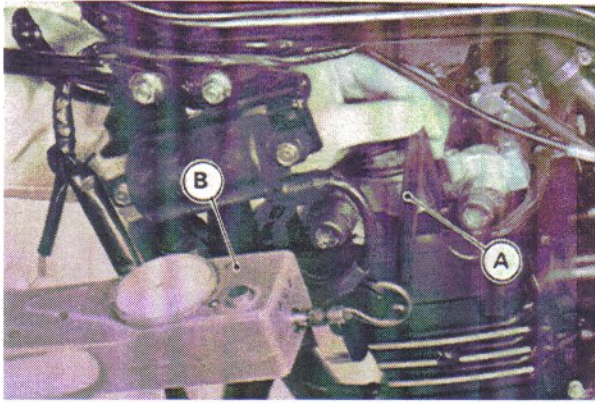

A. Valve Adjuster: 57001-1220 B. Push-Pull Gauge

- Reinstall the removed parts.
- Fill the engine with coolant and bleed air in the cooling system (see Cooling System chapter).

- Remove the following parts.
  - Lower Fairing (see Frame chapter)
  - Lower Fairing Stay
  - Exhaust Pipe Holders
  - Split Keepers

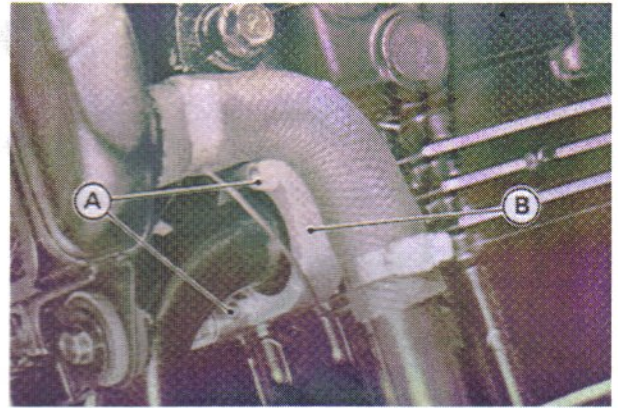

A. Nuts B. Exhaust Pipe Holder

- Pull the exhaust pipe toward the front.
- Remove the exhaust pipe holders and gaskets.

**CAUTION**

- Be careful not to touch the radiator fins during work. The fins are easily deformed.


**Muffler**

**Muffler Removal**


- Loosen the muffler clamp bolt until the clamp turns freely on the muffler.
- Remove the muffler mounting bolt and nut at the rear footpeg bracket, and take off each muffler.
- Repeat the same procedure on the other side of the vehicle.
- Take off each muffler.

**Muffler Installation**

- Refer to the Base Manual noting the following.
- The left-hand muffler has an L mark and the right-hand muffler a R mark. Be careful not to mix them up.

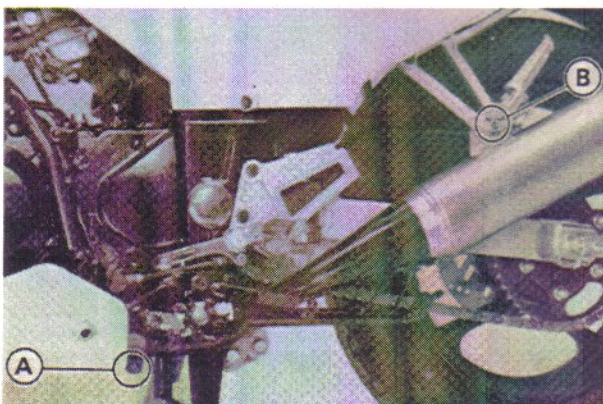

A. Clamp B. Muffler Mounting Bolt and Nut

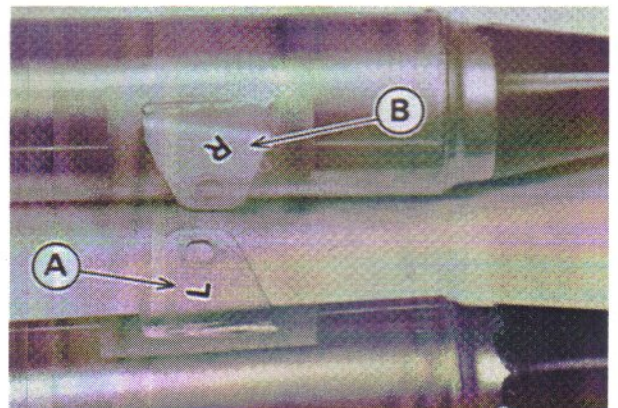

A. L Mark B. R Mark

## Other rocker cover removal method

[Back to 4 - 7](#)

### What is the adjustment procedure?

[Jeb](#) - Sun Apr 22 21:53:40 2001

Put the bike on centerstand. Take off the lower and upper fairing, side covers, and fuel tank. Carefully pull the spark plug wires by their boots, and remove the left and right coil packs (two 12mm bolts each). The service manual suggests draining the coolant so the radiator can be removed to make it easier to reach the exhaust valves, but it is possible to avoid this. I also remove the 'wings' from which the front of the engine is hung (one long 14 mm bolt), which makes it much easier to reach the exhaust valves.

Remove the alternator cover and flywheel view cap on the left engine side cover (use a very large flathead screwdriver). Take off the four valve cover bolts and lift the valve cover (do not remove the cover gasket; leave it on the top end). Using a torque lever (large socket driver), turn the engine using the alternator bolt inside the left cover housing; turn the bar forward (counter-clockwise) until the cam lobes over the left cylinder cam lobes point out and slightly up (they should mirror each other, [like this](#)). When this is done this correctly, a "1T" mark will be visible on the flywheel through the view hole (you'll need a flashlight to see it), and the tappets below the cams will wiggle when you try to move them under your finger.

[Here is a photo of the engine at TDC for cylinder 1](#)

Now take out your feeler gauges, and slide the proper gauge finger under the first cam (of four for that cylinder), between the cam lobe and the top of the valve tappet; it should slide in with little effort, and drag slightly when the clearance is correct.

If the clearance is not correct, grab a 9mm socket and loosen the tappet locknut; there's a small screw on top of the nut. Use a very small flathead screwdriver to turn the screw out a bit until the clearance is correct (if you use the looser end of the acceptable adjustment range, it will take longer before the valves need adjustment again).

#### Special tool

Rotate the engine again until the [right cylinder cam lobes are in the proper position](#) (a "2T" mark will be viewable on the flywheel), and repeat the check/adjustment process. If the exhaust valves need to be adjusted, you may need to remove the radiator retaining (four 10 mm) bolts to move it out of the way (the coolant hoses will keep the radiator loosely attached to the bike); the exhaust valves tend to take longer to work on.

Wipe the valve cover gasket clean of oil and put everything back together carefully when done. Use very little torque on the valve cover bolts; the book calls for 87 in/lbs (if you don't have a torque wrench, then tighten them by hand followed by a 1/8 turn with a 10 mm wrench to seat them).

### Why adjust valves?

### **Why do the valves need to be adjusted?**

VD - Sun Jun 15 02:22:58 2003

The valve clearances determine, to a degree, when the valves open and close, how long they stay open and how far they open. Your engine "breathes" through the valves, as these are the openings that allow the air/fuel mixture from the carburettor (intake valve) into the combustion chamber and for the piston to expel what's left after that combustion takes place (exhaust valves) out through the exhaust pipe, to make room for the next fresh charge of air/fuel mixture.

Technical crap aside, the most important reason on the 250 is that the parts inside the combustion chamber (valve heads and or valve seats on the cylinder head) wear at a faster rate than the parts under the valve cover (valve nibs, rocker arm pads, cam lobes, tappet screws). Wow, that sounds like more technical crap. Translation, the valve clearances get tighter (on the 250) as you rack up the miles, and if they get so tight that there's zero clearance, they'll melt. They valves need to fully contact the valve seats to get rid of some of the intense heat (through conduction) that builds up in them or they're toast. Many engines are just the opposite, in the fact that clearances get looser and start to make more noise, because the parts I listed above are reversed as far as wear rates are concerned.

**Back**

Cylinder 1



Cylinder 2



Valve adjust tool



Back

Quick Reference

# Clutch

## Table of Contents


Exploded View .....	5-2
Specifications .....	*
Special Tools .....	5-3
Sealant .....	5-3
Clutch .....	5-3
Clutch Adjustment Check .....	*
Clutch Adjustment .....	*
Clutch Cover Removal .....	*
Clutch Cover Installation Note .....	5-3
Clutch Release Lever (Shaft) Removal .....	5-3
Clutch Release Lever (Shaft) Installation Notes .....	*
Clutch Removal .....	*
Clutch Installation Notes .....	*
Friction Plate Wear, Damage Inspection .....	*
Friction or Steel Plate Warp Inspection .....	*
Clutch Spring Free length Measurement .....	*
Clutch Housing Finger Inspection .....	*
Clutch Hub Spline Inspection .....	*

\* : Base Manual

Quick Reference

## 5-2 CLUTCH

### Exploded View

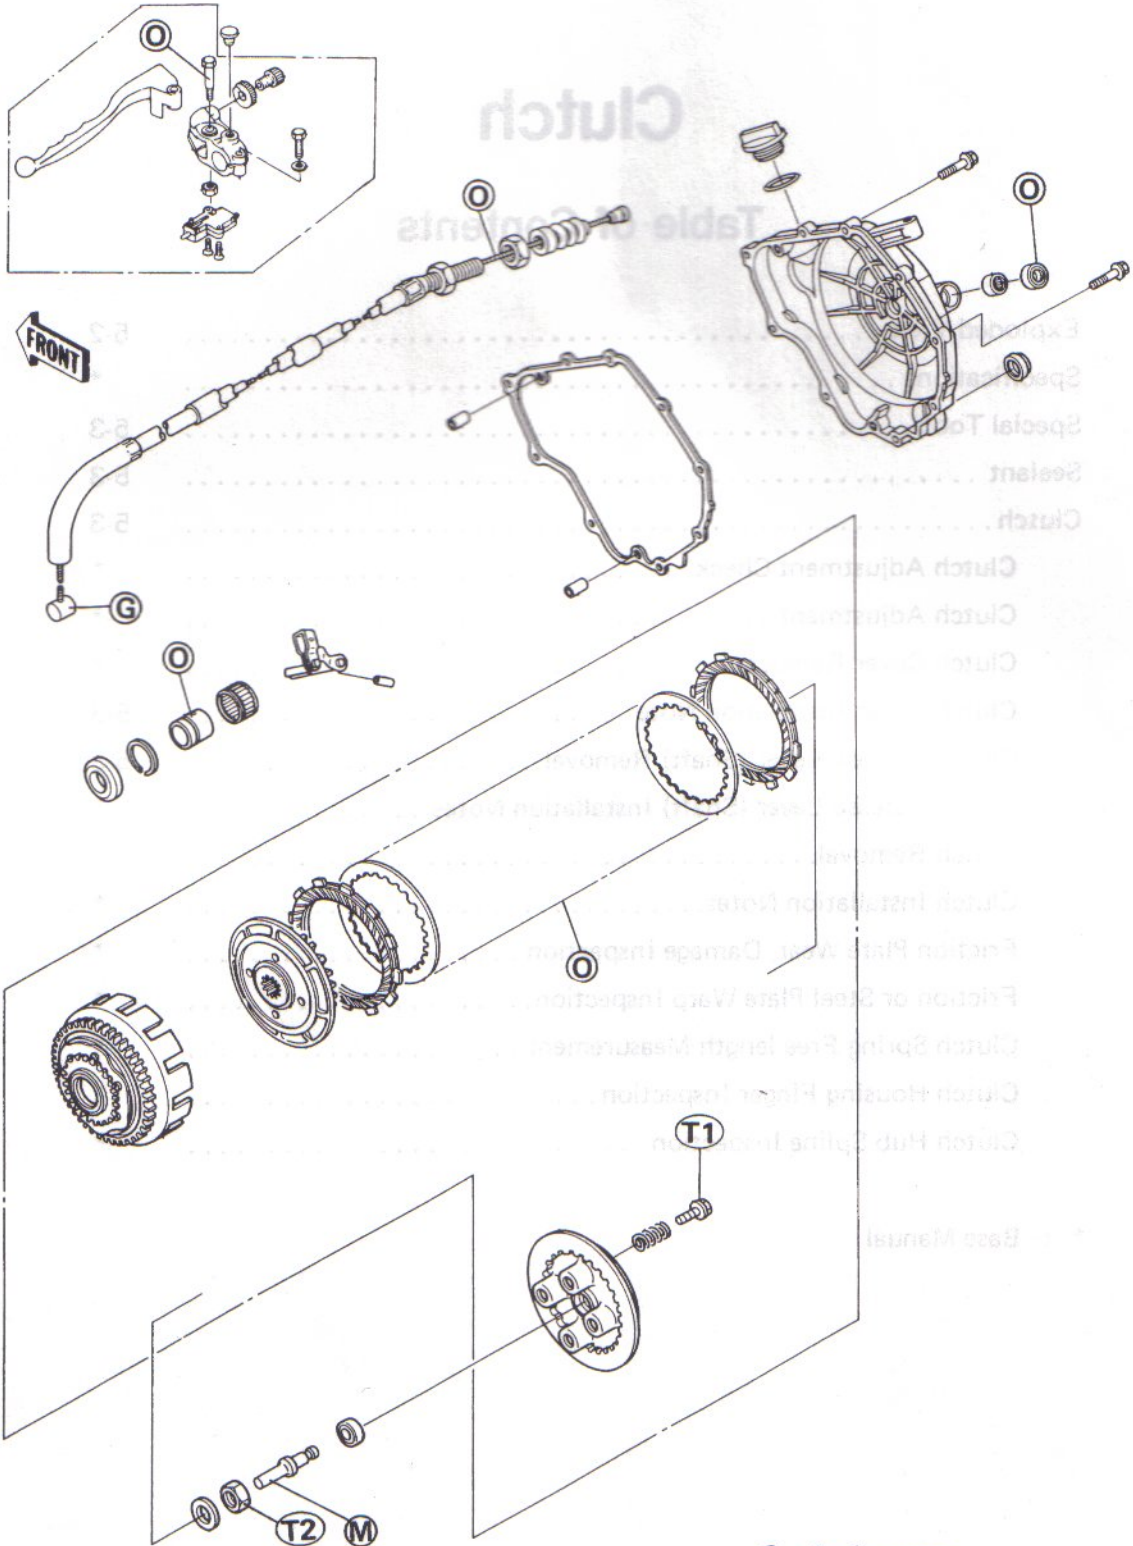

**G** : Apply grease.

**L** : Apply non-permanent locking agent.

**M** : Apply molybdenum disulfide grease.

**O** : Apply engine oil.

**T1** : 8.8 N-m (0.90 kg-m, 78 in-lb)


**T2** : 130 N-m (13.5 kg-m, 98 ft-lb)

**Special Tools**

Refer to the Base Manual noting the following.

**Clutch Holder: 57001-1243**


○This clutch holder may be used instead of the clutch holder (special tool: PN 57001-305).

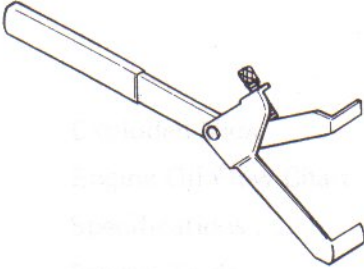

**Clutch**

**Clutch Cover Installation Notes**

- Replace the clutch cover gasket with a new one.
- Apply silicone sealant partially to the crankcase halves mating surface on the front and rear sides of the cover mount.

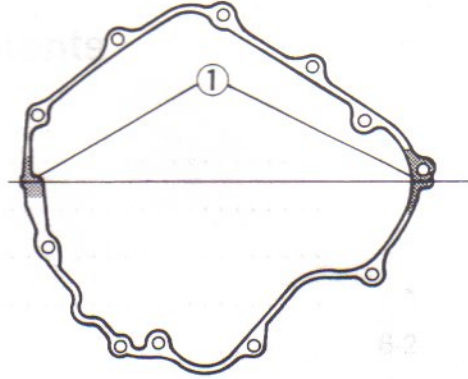

1. Silicone Sealant Applied Areas

**Sealant**

**Kawasaki Bond (Silicone Sealant): 56019-120**



**Clutch Release Lever (Shaft) Removal**

- Refer to the Base Manual noting the following.
- Do not remove the clutch release lever and shaft assembly unless it is absolutely necessary. If removed, the oil seal replacement may be required.

# Engine Lubrication System

## Table of Contents

Exploded View .....	6-2
Engine Oil Flow Chart .....	*
Specifications .....	*
Special Tools .....	*
Sealant .....	6-2
Engine Oil and Filter .....	*
Engine Oil Level Inspection .....	*
Engine Oil and/or Filter Change .....	*
Oil Filter and Mounting Bolt Removal .....	*
Oil Filter and Mounting Bolt Installation Notes .....	*
Bypass Valve Disassembly .....	*
Bypass Valve Assembly .....	*
Bypass Valve Cleaning and Inspection .....	*
Relief Valve Removal .....	*
Relief Valve Installation Note .....	*
Oil Pump .....	*
Oil Pump Removal .....	*
Oil Pump Installation Notes .....	*
Oil Pump Disassembly .....	*
Oil Pump Assembly .....	*
Oil Pressure Measurement .....	*
Oil Pump Inspection .....	*
Relief Valve Inspection .....	*

Quick Reference


1. Oil Pump  
 2. Oil Filter  
 3. Oil Pressure Gauge  
 4. Oil Pressure Switch  
 5. Relief Valve  
 6. Oil Filter  
 7. Oil Pressure Gauge  
 8. Oil Pressure Switch  
 9. Apply sealant to the threads  
 10. Apply sealant to the threads  
 11. Apply sealant to the threads  
 12. 12 Nm (1.1 kg-m, 10.4 ft-lb)  
 13. 12 Nm (1.1 kg-m, 10.4 ft-lb)  
 14. 20 Nm (1.9 kg-m, 14.7 ft-lb)

## 6-2 ENGINE LUBRICATION SYSTEM

### Exploded View

### Sealant

Kawasaki Bond (Silicone Sealant): 56019-120

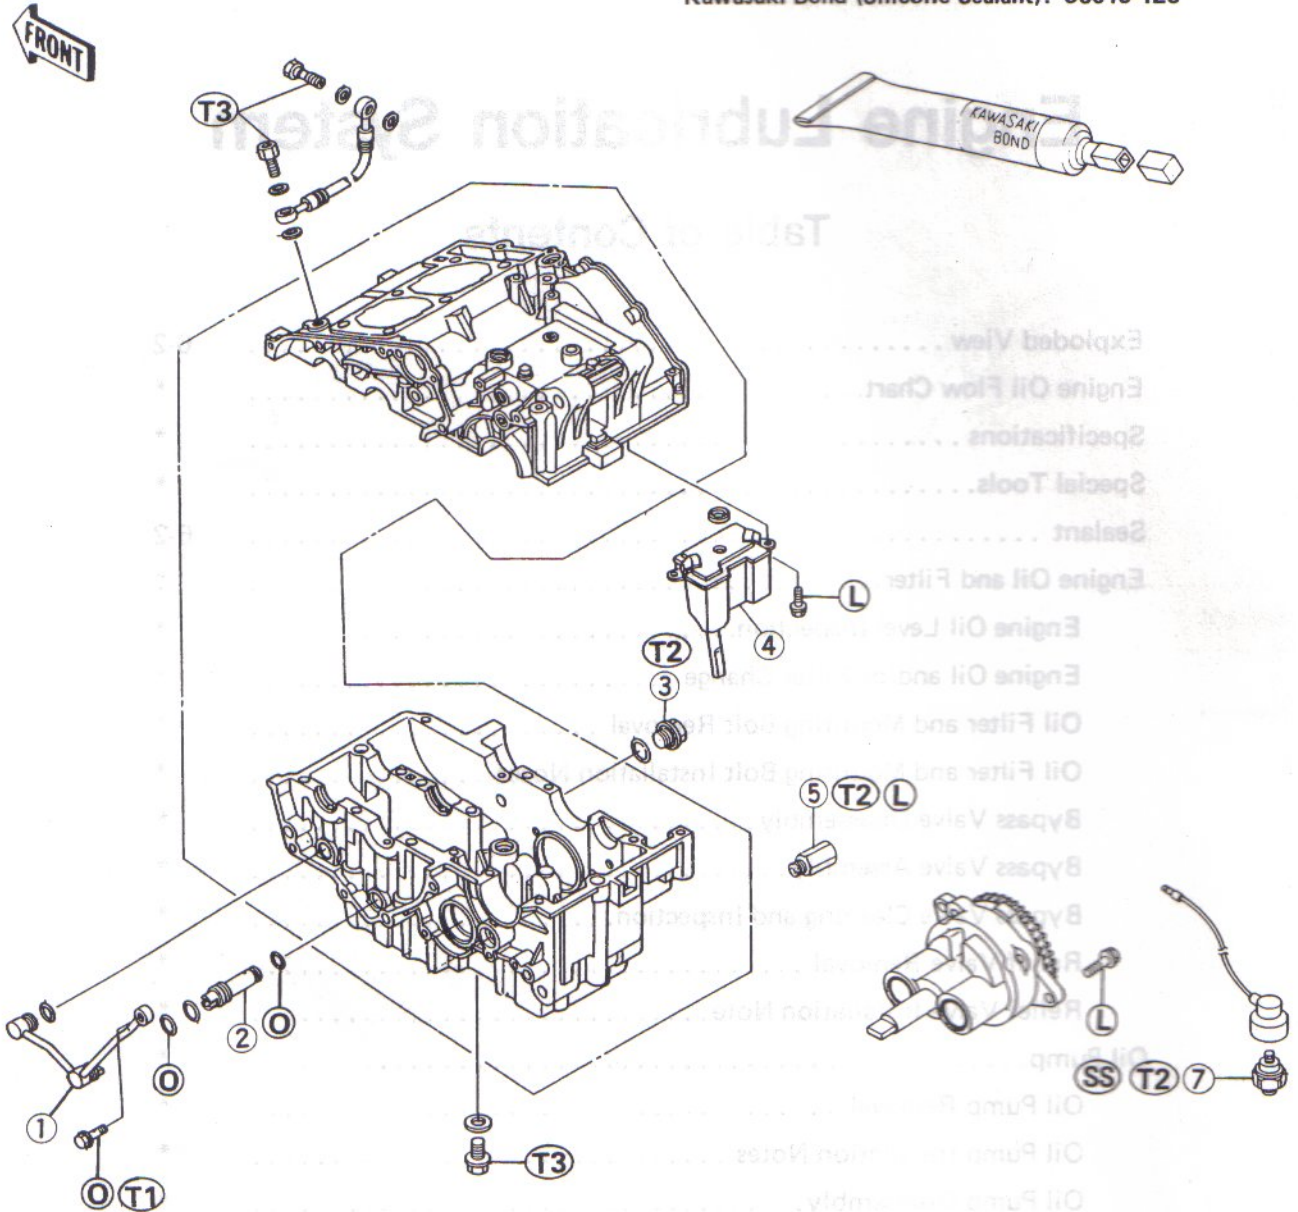

1. Oil Pipe
2. Oil Passage Pipe
3. Oil Passage Plug
4. Oil Breather
5. Relief Valve
6. Oil Filter Bolt
7. Oil Pressure Switch

L : Apply non-permanent locking agent to the threads.


O : Apply engine oil.

SS : Apply silicone sealant to the threads.

T1: 12 N-m (1.2 kg-m, 104 in-lb)

T2: 15 N-m (1.5 kg-m, 11.0 ft-lb)

T3: 20 N-m, (2.0 kg-m, 14.5 ft-lb)

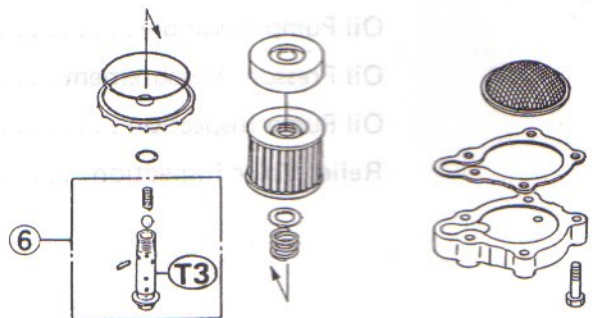

# Engine Removal/Installation

## Table of Contents

Exploded View .....	7-2
Special Tool .....	7-2
Engine Removal/Installation .....	7-2
Engine Removal .....	7-2
Engine Installation .....	*

\* : Base Manual

Quick Reference


Tool of the common tool.

CAUTION



## 7-2 ENGINE REMOVAL/INSTALLATION

### Exploded View

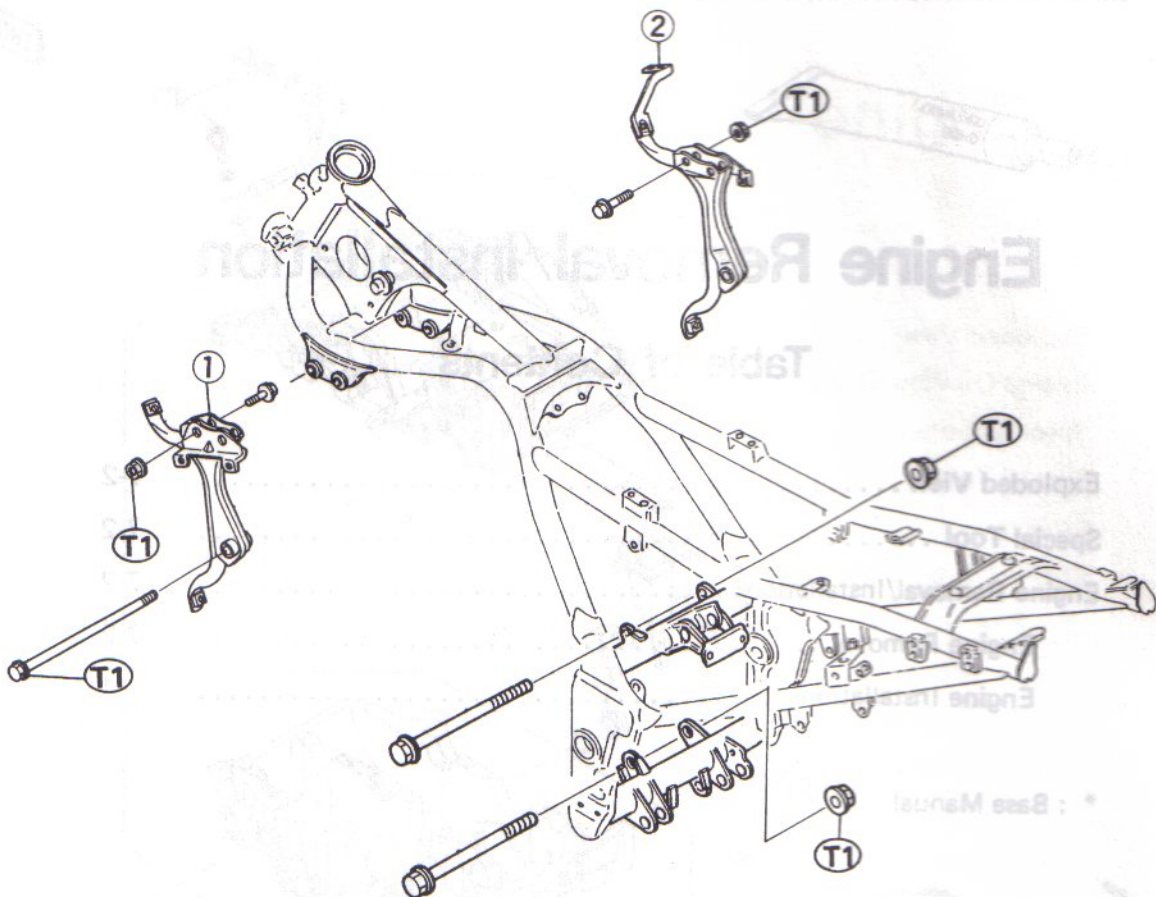


- 1. Left-Hand Engine Bracket
- 2. Right-Hand Engine Bracket
- T1: 32 N-m (3.3 kg-m, 24 ft-lb)

### Special Tool

#### Jack: 57001-1238

○ This tool may be used instead of the common tool.

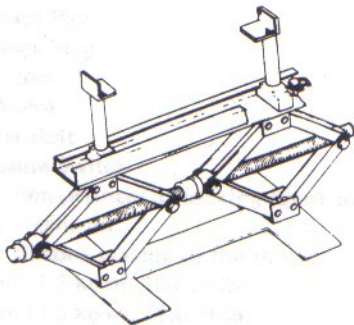

### Engine Removal/Installation

#### Engine Removal

- Refer to the Base Manual noting the following.
- The engine may be removed with the radiator left installed.
- Remove the upper and lower fairings (see Frame chapter) for engine removal.

#### CAUTION

- Be careful not to damage the radiator fins during engine removal or installation.

Quick Reference

# Crankshaft/Transmission

## Table of Contents


Exploded View . . . . .	8-2	Transmission . . . . .	8-5
Specifications . . . . .	8-4	External Shift Mechanism	
Special Tool . . . . .	*	Removal Note . . . . .	8-5
Sealant . . . . .	8-5	External Shift Mechanism	
Crankcase Splitting . . . . .	*	Installation Notes . . . . .	8-5
Crankcase Splitting . . . . .	*	External Shift Mechanism Inspection . . . . .	*
Crankcase Assembly . . . . .	*	Transmission Shaft Removal . . . . .	*
Crankcase Exchange . . . . .	*	Transmission Shaft Installation . . . . .	*
Crankshaft/Connecting Rods . . . . .	*	Drive Shaft Disassembly . . . . .	*
Crankshaft Removal . . . . .	*	Drive Shaft Assembly Notes . . . . .	*
Crankshaft Installation Notes . . . . .	*	Output Shaft Disassembly . . . . .	*
Connecting Rod Removal . . . . .	*	Output Shaft Assembly Notes . . . . .	*
Connecting Rod Installation . . . . .	*	Shift Drum and Fork Removal . . . . .	*
Crankshaft/Connecting Rod		Shift Drum and Fork Installation . . . . .	*
Cleaning . . . . .	*	Shift Drum Disassembly Note . . . . .	*
Connecting Rod Bend . . . . .	*	Shift Drum Assembly Notes . . . . .	*
Connecting Rod Twist . . . . .	*	Gear Backlash . . . . .	*
Connecting Rod Big End Side		Shift Fork Bending . . . . .	*
Clearance . . . . .	*	Shift Fork/Gear Groove Wear . . . . .	*
Connecting Rod Big End Bearing		Shift Fork Guide Pin/Shift	
Insert/Crankpin Wear . . . . .	*	Drum Groove Wear . . . . .	*
Crankshaft Runout . . . . .	*	Gear Dog/Gear Dog Hole Damage . . . . .	*
Crankshaft Main Bearing Insert/		Ball and Needle Bearing Wear . . . . .	*
Journal Wear . . . . .	*		
Crankshaft Side Clearance . . . . .	*		
Balancer . . . . .	*		
Balancer Removal . . . . .	*		
Balancer Installation Notes . . . . .	*		
Balancer Shaft Bearing Insert/			
Journal Wear . . . . .	*		
Starter Motor Clutch . . . . .	*		
Starter Motor Clutch Removal . . . . .	*		
Starter Motor Clutch			
Installation Notes . . . . .	*		
Starter Motor Clutch Disassembly . . . . .	*		
Starter Motor Clutch Assembly Note . . . . .	*		
Starter Motor Clutch Inspection . . . . .	*		




\* : Base Manual

Quick Reference

## 8-2 CRANKSHAFT/TRANSMISSION

### Exploded View

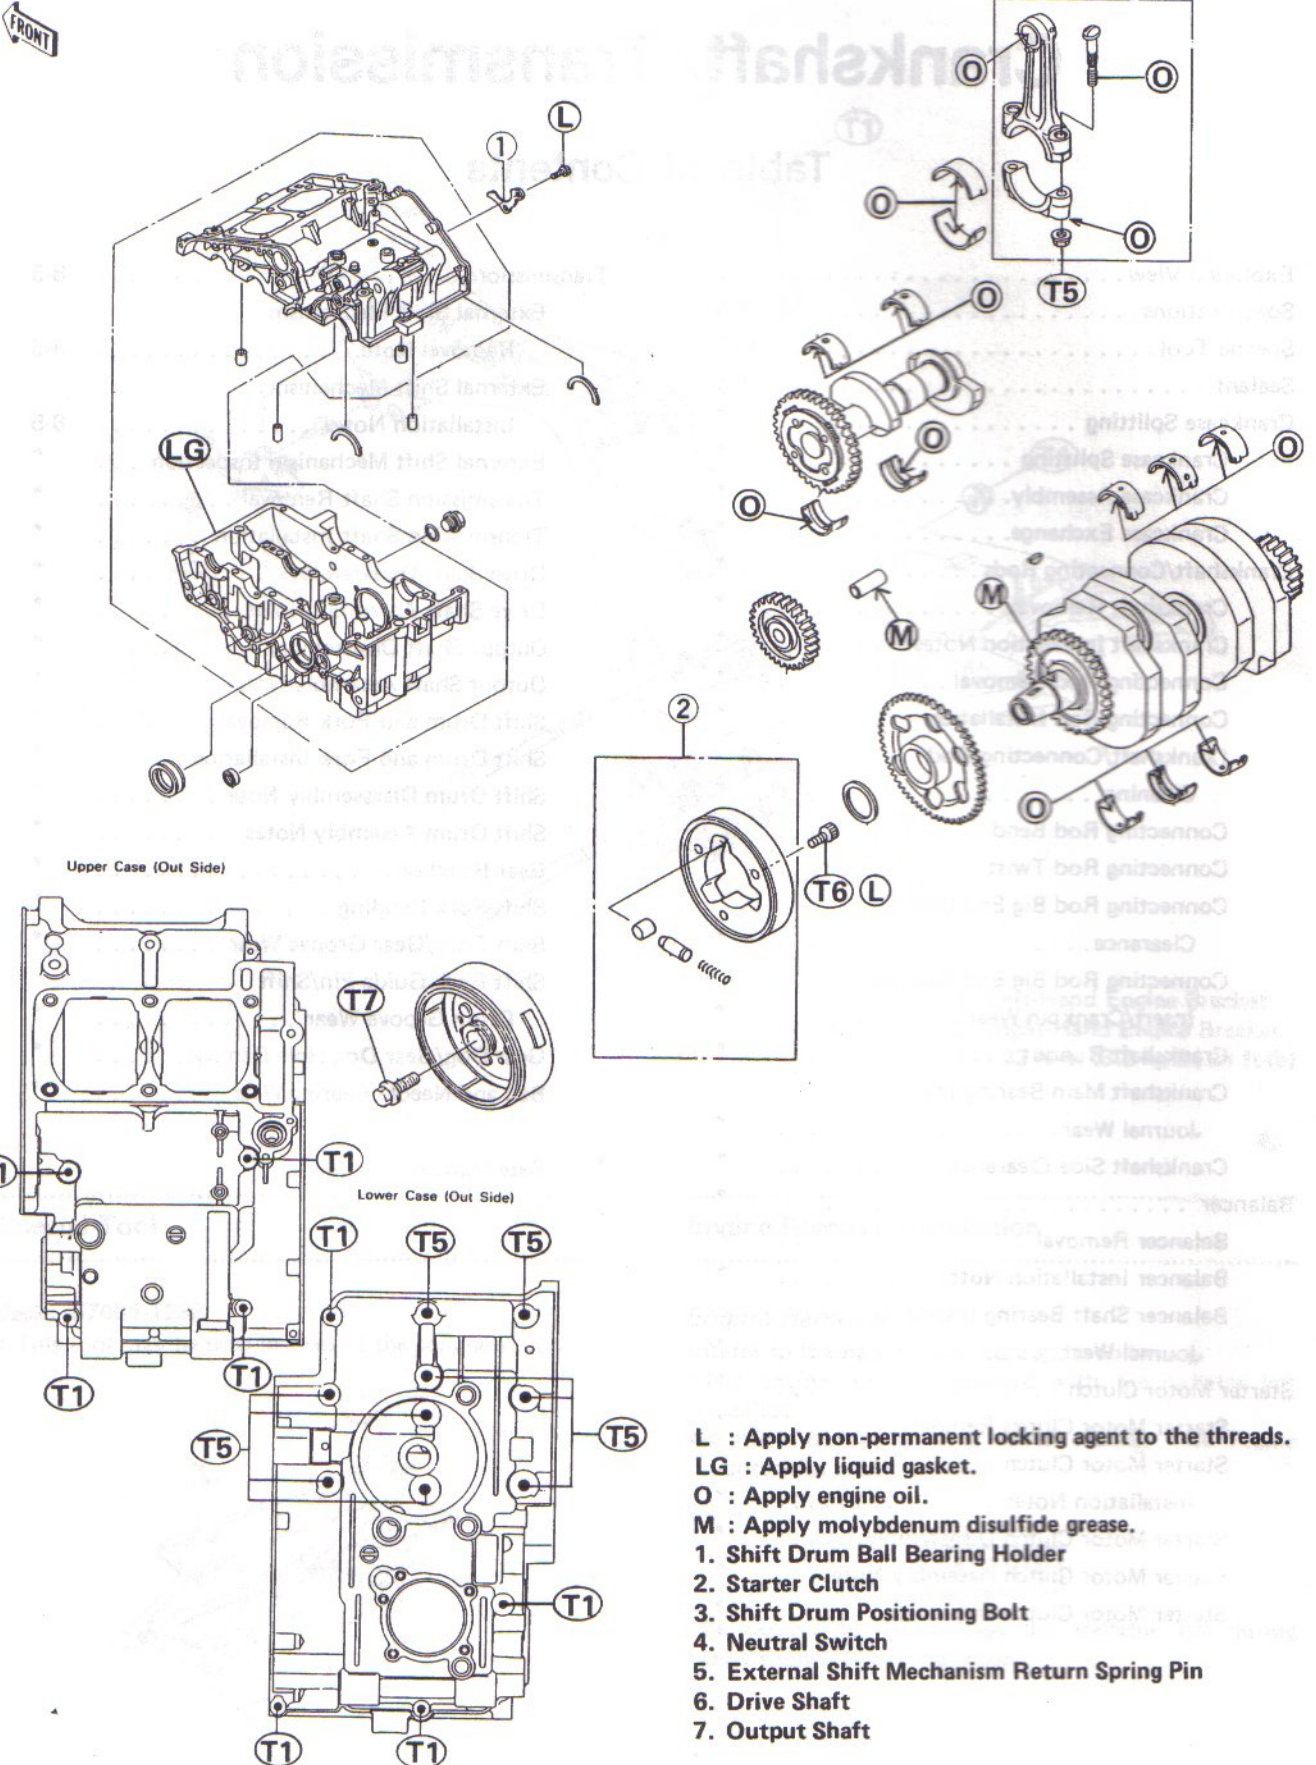

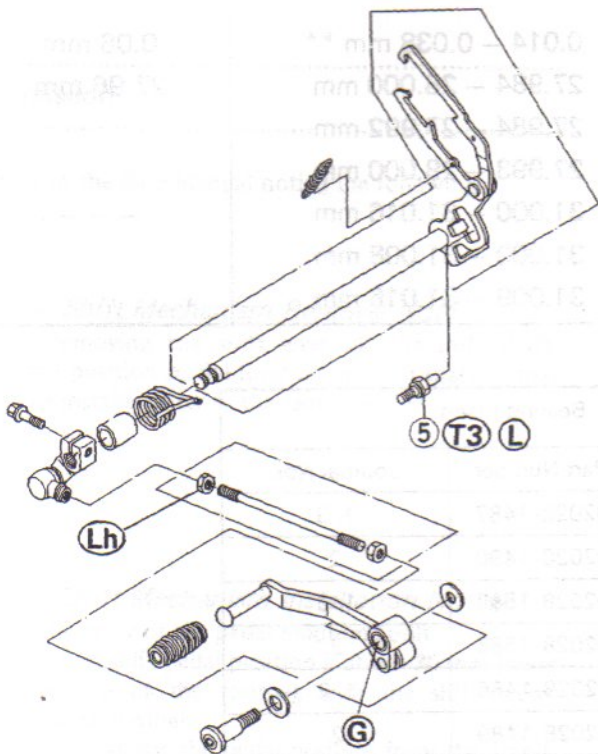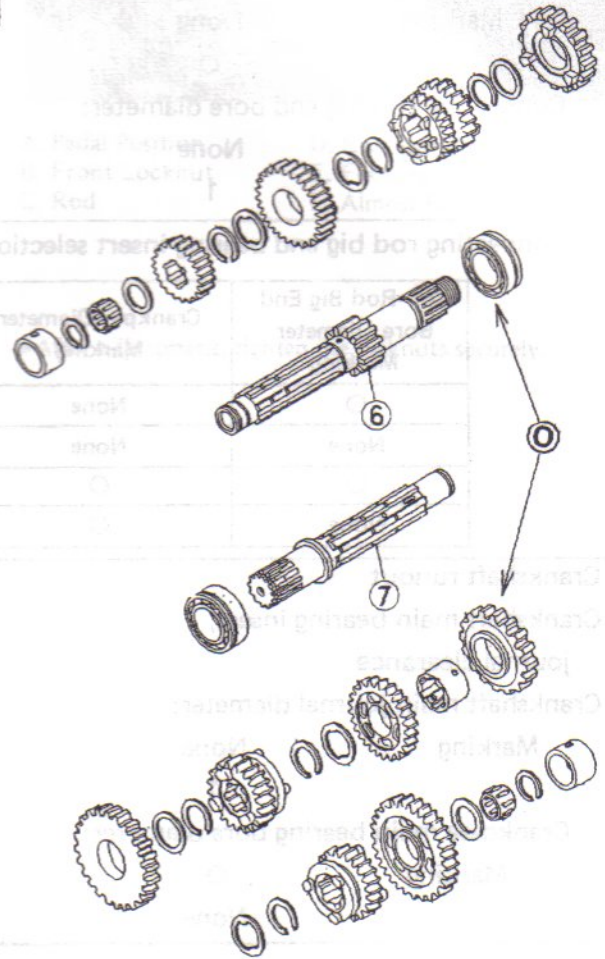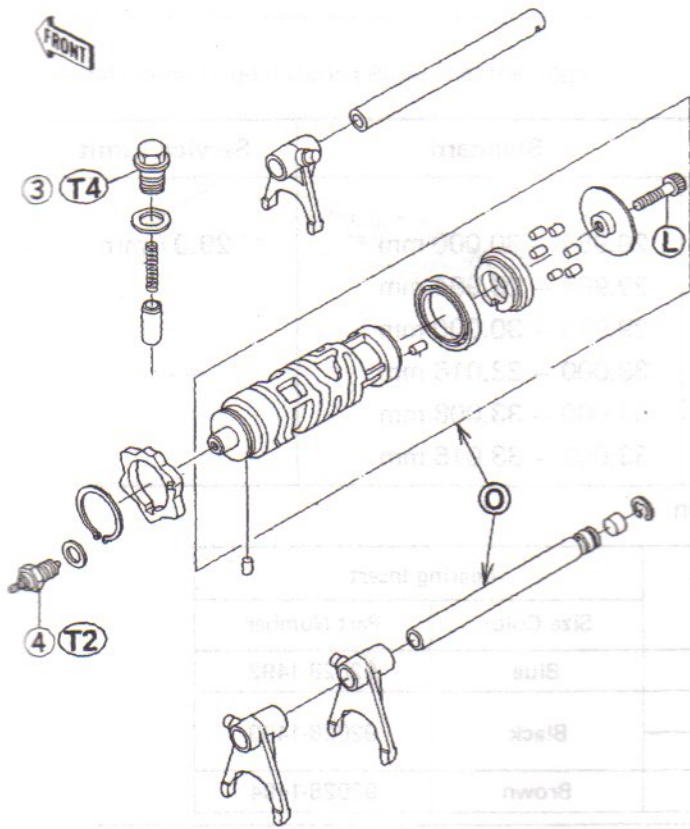

**G** : Apply grease.

**Lh** : Left-Hand Threads

**T1** : 12 N-m (1.2 kg-m, 104 in-lb)

**T2** : 15 N-m (1.5 kg-m, 11.0 ft-lb)

**T3** : 20 N-m (2.0 kg-m, 14.5 ft-lb)

**T4** : 25 N-m (2.5 kg-m, 18.0 ft-lb)

**T5** : 27 N-m (2.8 kg-m, 20 ft-lb)

**T6** : 34 N-m (3.5 kg-m, 25 ft-lb)

**T7** : 69 N-m (7.0 kg-m, 51 ft-lb)

## 8-4 CRANKSHAFT/TRANSMISSION

### Specifications

Refer to the Base Manual noting the following.

Item	Standard	Service Limit																				
<b>Crankshaft, Connecting Rods:</b>																						
Crankpin diameter:	29.984 – 30.000 mm	29.97 mm																				
Marking	None																					
	○																					
Connecting rod big end bore diameter:	33.000 – 33.016 mm	---																				
Marking	None																					
	1																					
<b>Connecting rod big end bearing insert selection:</b>																						
<table border="1"> <thead> <tr> <th rowspan="2">Con-Rod Big End Bore Diameter Marking</th> <th rowspan="2">Crankpin Diameter Marking</th> <th colspan="2">Bearing Insert</th> </tr> <tr> <th>Size Color</th> <th>Part Number</th> </tr> </thead> <tbody> <tr> <td>○</td> <td>None</td> <td>Blue</td> <td>92028-1492</td> </tr> <tr> <td>None</td> <td>None</td> <td rowspan="2">Black</td> <td rowspan="2">92028-1493</td> </tr> <tr> <td>○</td> <td>○</td> </tr> <tr> <td>None</td> <td>○</td> <td>Brown</td> <td>92028-1494</td> </tr> </tbody> </table>		Con-Rod Big End Bore Diameter Marking	Crankpin Diameter Marking	Bearing Insert		Size Color	Part Number	○	None	Blue	92028-1492	None	None	Black	92028-1493	○	○	None	○	Brown	92028-1494	
Con-Rod Big End Bore Diameter Marking	Crankpin Diameter Marking			Bearing Insert																		
		Size Color	Part Number																			
○	None	Blue	92028-1492																			
None	None	Black	92028-1493																			
○	○																					
None	○	Brown	92028-1494																			
Crankshaft runout	---	0.05 mm TIR																				
Crankshaft main bearing insert, journal clearance	0.014 – 0.038 mm **	0.08 mm																				
Crankshaft main journal diameter:	27.984 – 28.000 mm	27.96 mm																				
Marking	None																					
	1																					
Crankcase main bearing bore diameter:	31.000 – 31.016 mm	---																				
Marking	○																					
	None																					
	31.000 – 31.008 mm																					
	31.009 – 31.016 mm																					

### Crankshaft main bearing insert selection:

Crankcase Main Bearing Bore Diameter Marking	Crankshaft Main Journal Diameter Marking	Bearing Insert *		
		Size Color	Part Number	Journal Nos.
○	1	Black	92028-1487	1, 3
			92028-1490	2
None	None	Yellow	92028-1582	1, 3
			92028-1586	2
○	None	Blue	92028-1486	1, 3
			92028-1489	2
None	1			


\* The bearing inserts for No. 2 journal have an oil groove.

### NOTE\*\*

○ Journal clearance less than 0.025 mm can not be measured by plastigauge, however, using genuine parts maintains the minimum standard clearance.

.....  
**Sealant**  
 .....

Kawasaki Bond (Liquid Gasket-Black): 92104-1003

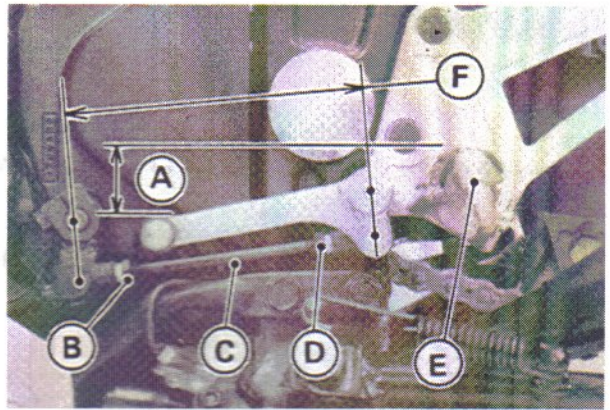

- |                   |                    |
|-------------------|--------------------|
| A. Pedal Position | D. Rear Locknut    |
| B. Front Locknut  | E. Footpeg         |
| C. Rod            | F. Almost Parallel |

● After adjustment, tighten the locknuts securely.

.....  
**Transmission**  
 .....

Refer to the Base Manual noting the following.

**External Shift Mechanism Removal Note**

- Before removing the shift lever off the shift shaft, mark the position of the lever on the shift shaft so that it can be installed alter in the same position.

**External Shift Mechanism Installation Notes**

- Grease the body of the pedal mounting bolt.
- The standard shift pedal position is about 30 mm lower than the top of the footpeg with the shift levers parallel to each other.
- ✦ If necessary, adjust the pedal position from the standard position to suit you as follows.
- Loosen the front and rear rod locknuts. The front locknut has left-hand threads.
- Turn the rod to adjust the pedal position.
- Tighten the locknuts securely.

# Wheels/Tires

## Table of Contents





Exploded View .....	9-2
Specifications .....	9-3
Special Tool .....	9-3
Wheels (Rims) .....	*
Front Wheel Removal .....	*
Front Wheel Installation .....	*
Rear Wheel Removal .....	*
Rear Wheel Installation .....	*
Wheel Inspection .....	*
Axle Inspection .....	*
Wheel Balance .....	*
Tires .....	9-3
Tire Removal .....	*
Tire Installation .....	9-3
Tire Inspection .....	*
Tire Repair .....	*
Hub Bearings .....	9-4
Front Hub Bearing Removal .....	*
Front Hub Bearing Installation .....	9-4
Rear Hub Bearing Removal .....	9-5
Rear Hub Bearing Installation .....	*
Hub Bearing Inspection and Lubrication .....	9-5
Grease Seal Inspection and Lubrication .....	*
Speedometer Gear Housing .....	*
Speedometer Gear Housing Disassembly .....	*
Speedometer Gear Housing Assembly .....	*
Speedometer Gear Housing Lubrication .....	*

\* : Base Manual

Quick Reference

## 9-2 WHEELS/TIRES

### Exploded View

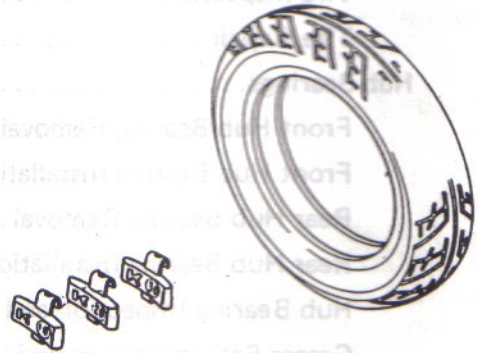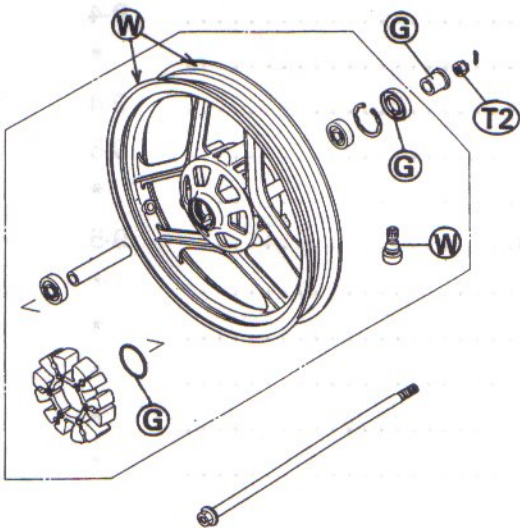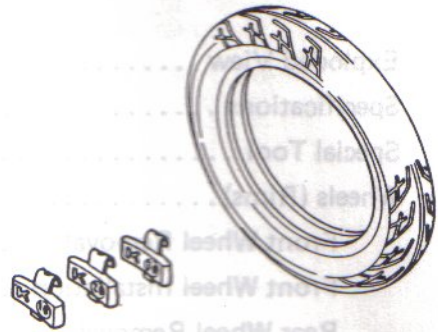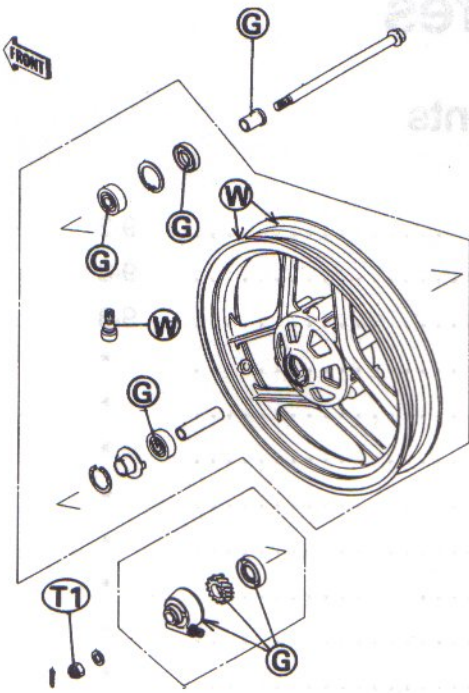

**W** : Apply soap and water solution, or Rubber Lubricant.

**G** : Apply grease.

**T1**: 88 N-m (9.0 kg-m, 65 ft-lb)

**T2**: 110 N-m (11.0 kg-m, 80 ft-lb)

**Specifications**

Refer to the Base Manual noting the following.

**Tire Tread Depth:**

**Front**

- Standard: 4.4 mm
- Service limit: 1 mm

**Rear**

- Standard: 6.4 mm
- Service limit: 2 mm, under 130 km/h (80 mph)  
3 mm, over 130 km/h (80 mph)

**Standard Tires:**

**Front**

100/80-16 50S TUBELESS  
DUNLOP K630F

**Rear**

130/80-16 64S TUBELESS  
DUNLOP K630

**Tire Air Pressure (when cold)**


- Front 200 kPa (2.0 kg/cm<sup>2</sup>, 28 psi)
- Rear up to 155 kg (342 lb):  
225 kPa (2.25 kg/cm<sup>2</sup>, 32 psi)

**Special Tool**

Refer to the Base Manual noting the following additional tool.

Jack: 57001-1238

○ This tool may be used instead of the common tool.

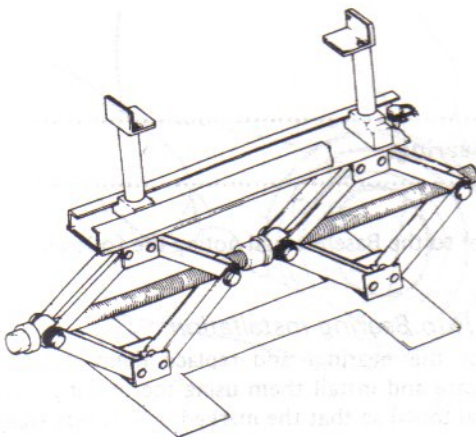

**Tires**


**Tire Installation**

- Inspect the rim and tire, and replace them if necessary.
- Clean the sealing surfaces of the rim and tire, and smooth the sealing surfaces of the rim with a fine emery cloth if necessary.
- Remove the air valve and discard it.

**CAUTION**


- Replace the air valve whenever the tire is replaced.
- Do not reuse the air valve.

**Air Valve**

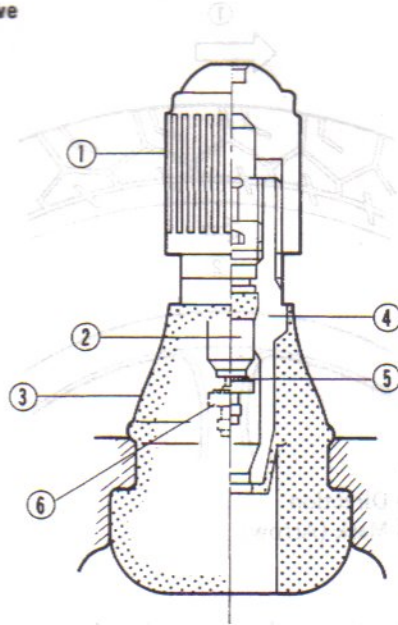

- 1. Plastic Cap
- 2. Valve Core
- 3. Stem Seal
- 4. Valve Stem
- 5. Valve Seat
- 6. Valve Opened

- Install a new air valve in the rim.
- Remove the valve cap, lubricate the stem with a soap and water solution, and pull the stem through the rim from the inside out until it snaps into place.

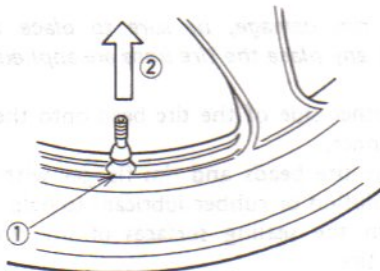

- 1. Apply soap and water solution.
- 2. Pull the stem out.


## 9-4 WHEELS/TIRES

### CAUTION

- Do not use engine oil or petroleum distillates to lubricate the stem because they will deteriorate the rubber.
- Apply a soap and water solution, or rubber lubricant to the rim flanges, rim protectors, tire beads, and tire irons.
- Check the tire rotation mark on the front and rear tires and install them on the rim accordingly.

### NOTE

- The direction of the tire rotation is shown by an arrow on the tire sidewall.

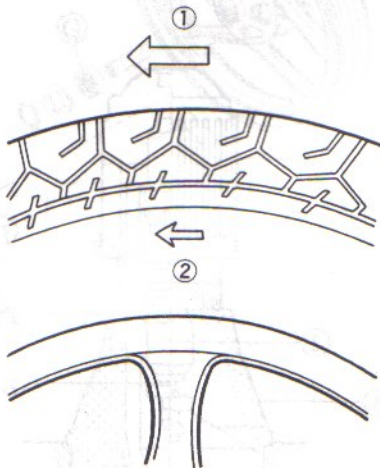

1. Rotation Direction
2. Rotation Mark (Arrow)

- Position the tire on the rim so that the valve is at the tire balance mark (the chalk mark made during removal, or the yellow paint mark on a new tire).
- By hand, slide as much as possible of the lower side of the tire bead over the rim flange.
- Fit the rim protectors and tire irons to install the remaining part of the tire bead which cannot be installed by hand. For easy tire installation, position the parts of the bead which is already over the rim flange in the rim well.

### NOTE


- To prevent rim damage, be sure to place the rim protectors at any place the tire irons are applied.

- Install the other side of the tire bead onto the rim in the same manner.
- Lubricate the tire beads and rim flanges with a soap and water solution or rubber lubricant to help seat the tire beads in the sealing surfaces of the rim while inflating the tire.
- Center the rim in the tire beads, and inflate the tire with compressed air until the tire beads seat in the sealing surfaces.

### WARNING

- Be sure to install the valve core whenever inflating the tire, and do not inflate the tire to more than 390 kPa (4.0 kg/cm<sup>2</sup>, 57 psi). Overinflation can explode the tire with possibility of injury and loss of life.
- Check to see that the rim lines on both sides of the tire sidewalls are parallel with the rim flanges.

### Rim Line

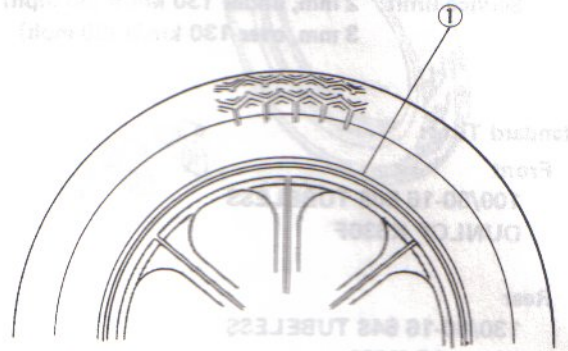

### 1. Rim Line

- If the rim flanges and tire sidewall rim lines are not parallel, remove the valve core. Lubricate the rim flanges and tire beads. Install the valve core and inflate the tire again.
- After the tire beads seat in the rim flanges, check for air leaks. Inflate the tire slightly above standard inflation. Use a soap and water solution or submerge the tire, and check for bubbles that would indicate leakage.
- Adjust the air pressure to the specified pressure (see Tire Inspection).
- Install the brake disc.
- Adjust the wheel balance (see Wheel Balance in the Base Manual).

## Hub Bearings

Refer to the Base Manual noting the following.


### Front Hub Bearing Installation

- Inspect the bearings and replace them if necessary. Lubricate and install them using the bearing driver set (special tools) so that the marked or seal side faces out.

**NOTE**

○ Since the rear hub bearings are packed with grease and sealed, they can not be lubricated.

- Turn each rear hub bearing back and forth while checking for roughness or binding.
- ★ If roughness or binding is found, replace the bearing.
- Examine the bearing seal for tears or leakage.
- ★ If the seal is torn or is leaking, replace the bearing.

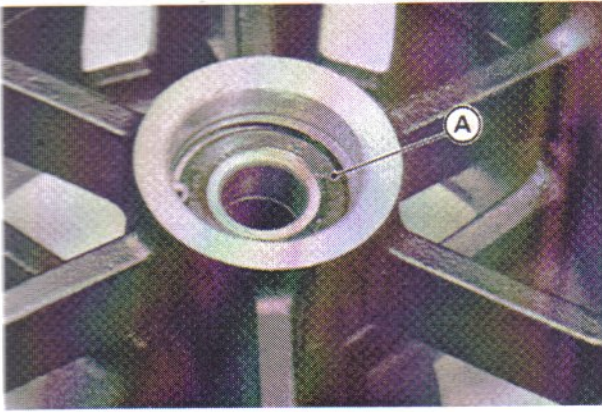

A. Bearing Seal

Quick Reference


**Rear Hub Bearing Removal**

○ Since the rear hub bearings are packed with grease and sealed, they are not required to be removed for lubrication.

**Hub Bearing Inspection and Lubrication**

- Wash the front hub bearing with a high-flash point solvent, dry it (do not spin it while it is dry), and oil it. Spin it by hand to check its condition.
- ★ If it is noisy, does not spin smoothly, or has any rough spots, it must be replaced.
- Examine the bearing seal for tears or leakage.
- ★ If the seal is torn or is leaking, replace the bearing.
- If the same bearing is to be used again, rewash it with a high-flash point solvent, dry and pack it with good quality bearing grease before installation. Turn the bearing by hand a few times to make sure the grease is distributed uniformly inside the bearing, and wipe the old grease out of the hub before bearing installation.

**Bearing Lubrication**

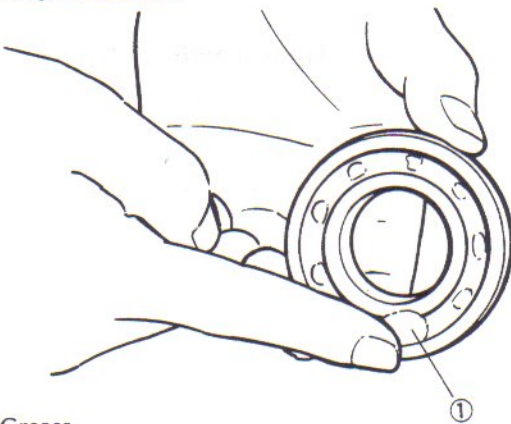

1. Grease

# Final Drive

## Table of Contents


Exploded View .....	10-2
Specifications .....	10-3
Special Tools .....	*
Drive Chain .....	*
Drive Chain Slack Inspection .....	*
Drive Chain Slack Adjustment .....	*
Wheel Alignment Inspection .....	*
Wheel Alignment Adjustment .....	*
Drive Chain Wear Inspection .....	*
Drive Chain Lubrication .....	*
Drive Chain Removal .....	*
Drive Chain Installation .....	*
Sprocket, Coupling .....	10-3
Engine Sprocket Removal .....	*
Engine Sprocket Installation .....	*
Rear Sprocket, Coupling Removal .....	*
Rear Sprocket, Coupling Installation .....	*
Sprockets Wear .....	*
Sprocket Warp .....	*
Coupling Bearing Removal .....	*
Coupling Bearing Installation .....	*
Coupling Bearing Inspection and Lubrication .....	10-3
Grease Seal Inspection and Lubrication .....	*
Damper Inspection .....	*

\* : Base Manual

Apply the following torque values to the bolts and nuts.  
 Apply grease to the bolts and nuts.  
 17.0 Nm (12.5 kg-m, 12.5 ft-lb)  
 13.0 Nm (9.4 kg-m, 9.4 ft-lb)  
 10.0 Nm (7.2 kg-m, 7.2 ft-lb)

## 10-2 FINAL DRIVE

### Exploded View

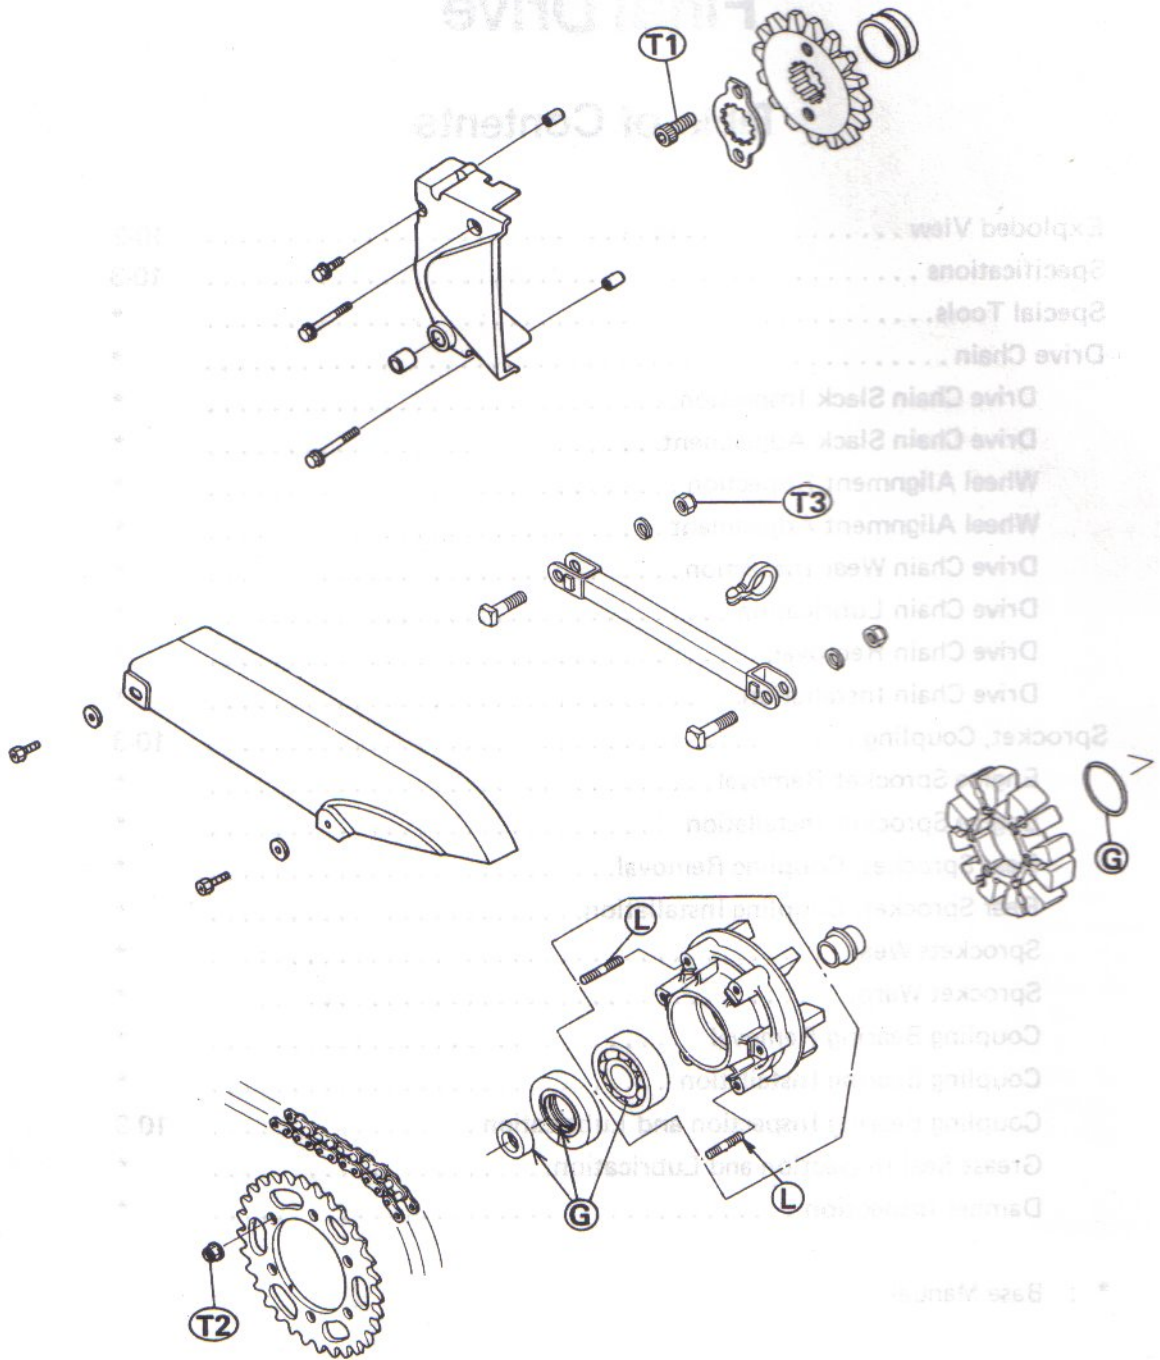

**L** : Apply non-permanent locking agent.

**G** : Apply grease.

**T1**: 9.8 N-m (1.0 k-m, 87 in-lb)

**T2**: 67 N-m (6.8 kg-m, 49 ft-lb)

**T3**: 32 N-m (3.3 kg-m, 24 ft-lb)

.....  
**Specifications**  
 .....

Item	Standard	Service Limit
<b>Drive Chain:</b> Make and type	Enuma Endless EK520 MV-O 106L	---
<b>Rear Sprocket:</b> Teeth No.	45	---
Rear sprocket diameter	217.33 – 217.88 mm	217.0 mm

Quick Reference

.....  
**Sprocket, Coupling**  
 .....

**Coupling Bearing Inspection and Lubrication**

Refer to the Base Manual noting the following.

- Periodic maintenance is not required. If necessary or whenever the coupling is removed, inspect and grease the bearings.

# Brakes

## Table of Contents

Exploded View . . . . .	11-2	Discs . . . . .	*
Specifications . . . . .	11-4	Disc Wear . . . . .	11-4
Special Tools . . . . .	11-4	Disc Cleaning . . . . .	*
Brake Adjustment . . . . .	*	Disc Warp . . . . .	*
Front Brake . . . . .	*	Brake Fluid . . . . .	*
Rear Brake . . . . .	*	Fluid Level Inspection . . . . .	*
Brake Pedal Position Inspection . . . . .	*	Brake Fluid Change . . . . .	*
Brake Pedal Position Adjustment . . . . .	*	Brake Fluid Requirement . . . . .	*
Calipers . . . . .	11-4	Changing Brake Fluid . . . . .	*
Front Caliper Removal . . . . .	*	Bleeding the Brake Line . . . . .	*
Rear Caliper Removal . . . . .	*	Bleeding the rear brake line . . . . .	*
Caliper Installation Notes . . . . .	*	Bleeding the front brake line . . . . .	*
Caliper Disassembly Notes . . . . .	11-4	Brake Hoses . . . . .	*
Caliper Assembly Notes . . . . .	11-4	Brake Hose Inspection . . . . .	*
Fluid Seal Damage . . . . .	*	Brake Hose Replacement . . . . .	*
Dust Seal and Cover Damage . . . . .	*		
Piston Cylinder Damage . . . . .	*		
Caliper Holder Shaft Wear . . . . .	*		
Brake Pads . . . . .	11-5		
Brake Pad Removal . . . . .	11-5		
Brake Pad Installation Note . . . . .	11-5		
Brake Pad Lining Wear Inspection . . . . .	11-5		
Master Cylinders . . . . .	*		
Front Master Cylinder Removal . . . . .	*		
Front Master Cylinder			
Installation Notes . . . . .	*		
Rear Master Cylinder Removal . . . . .	*		
Rear Master Cylinder			
Installation Notes . . . . .	*		
Inspection and Adjustment			
after Installation . . . . .	*		
Front Master Cylinder			
Disassembly Notes . . . . .	*		
Front Master Cylinder			
Assembly Notes . . . . .	*		
Rear Master Cylinder			
Disassembly Notes . . . . .	*		
Rear Master Cylinder			
Assembly Notes . . . . .	*		
Master Cylinder Inspection			
(Visual Inspection) . . . . .	*		
Reservoir Removal Notes . . . . .	*		
Reservoir Installation Notes . . . . .	*		

\* : Base Manual

Quick Reference

## 11-2 BRAKES

### Exploded View

#### 1. BAC (Balanced Actuation Caliper)

#### 2. Dual-Piston Caliper

G : Apply grease.

Si : Apply silicone grease.

T1: 5.9 N-m (0.60 kg-m, 52 in-lb)

T2: 7.8 N-m (0.80 kg-m, 69 in-lb)

T3: 8.8 N-m (0.90 kg-m, 78 in-lb)





T4: 18 N-m (1.8 kg-m, 13.0 ft-lb)





T5: 23 N-m (2.3 kg-m, 16.5 ft-lb)

T6: 25 N-m (2.5 kg-m, 18.0 ft-lb)

T7: 32 N-m (3.3 kg-m, 24 ft-lb)

T8: 1.5 N-m (0.15 kg-m, 13 in-lb)

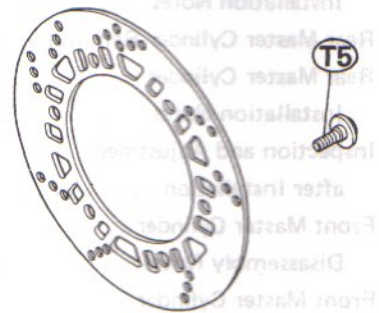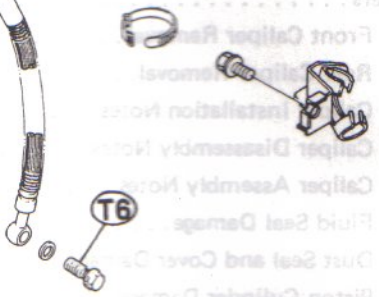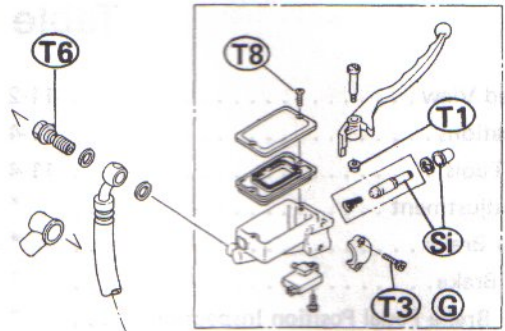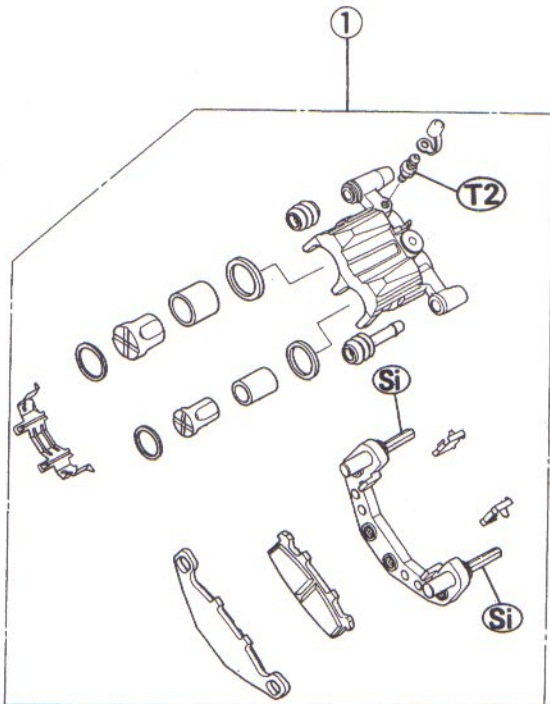

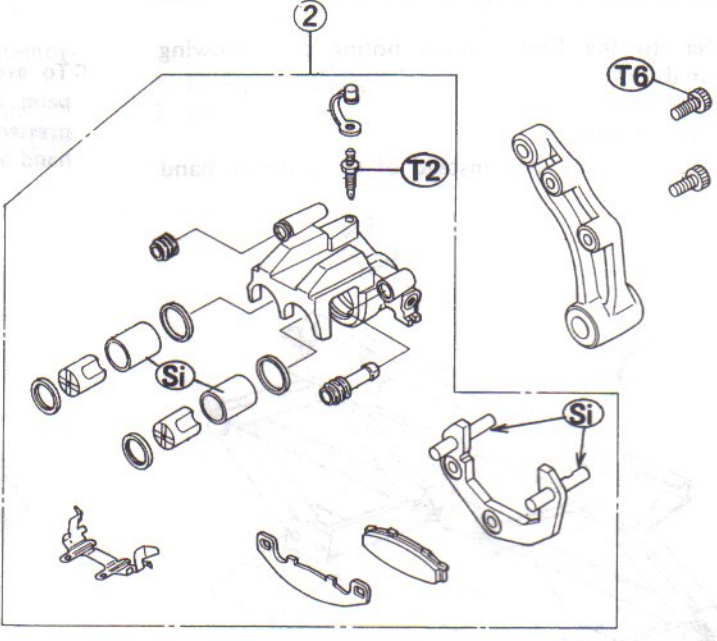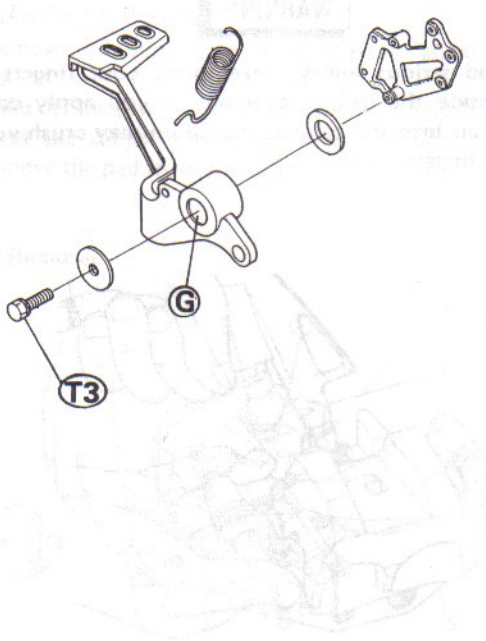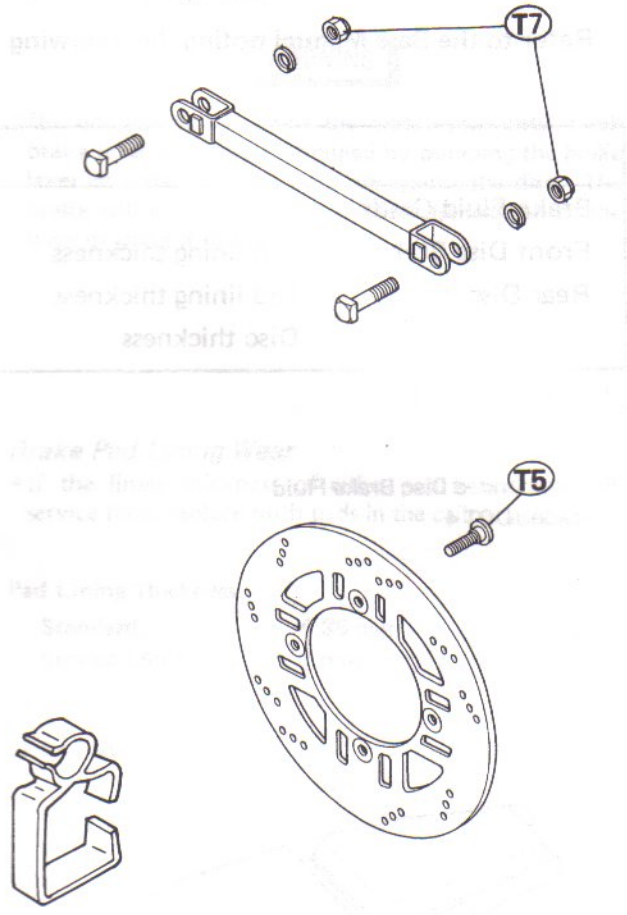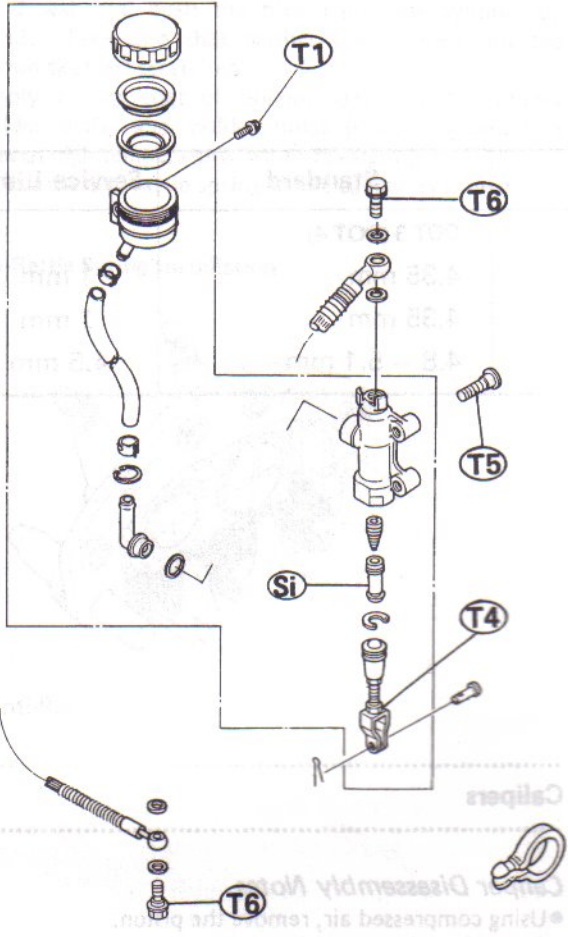

to where the brake line fits into the caliper.  
 Remove the piston by lightly tapping on the piston.  
 Cover the caliper opening with a clean, heavy cloth.  
 \*Using compressed air, remove the piston.  
 Caliper Disassembly Note  
 Calipers

Disc thickness  
 Rotor thickness  
 Rotor Tool

## 11-4 BRAKES

### Specifications

Refer to the Base Manual noting the following.

Item	Standard	Service Limit
Brake Fluid Grade	DOT 3 (DOT 4)	
Front Disc Brake: Pad lining thickness	4.35 mm	1 mm
Rear Disc Brake: Pad lining thickness	4.35 mm	1 mm
Disc thickness	4.8 – 5.1 mm	4.5 mm

( ) : EX250-F6~


Recommended Disc Brake Fluid  
Grade : DOT 4

### Special Tool

Refer to the Base Manual noting the following additional tool.

Jack: 57001-1238

○ This tool may be used instead of the common hand tool.

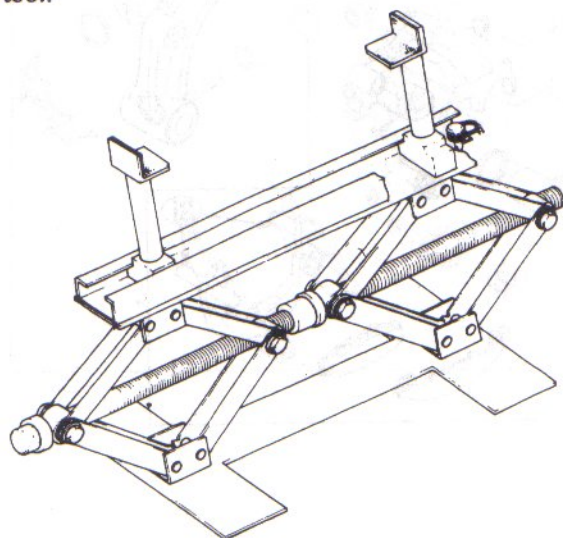


### Calipers

#### Caliper Disassembly Notes

- Using compressed air, remove the piston.
- Cover the caliper opening with a clean, heavy cloth.
- Remove the piston by lightly applying compressed air to where the brake line fits into the caliper.

#### WARNING

- To avoid serious injury, never place your fingers or palm inside the caliper opening. If you apply compressed air into the caliper, the piston may crush your hand or fingers.

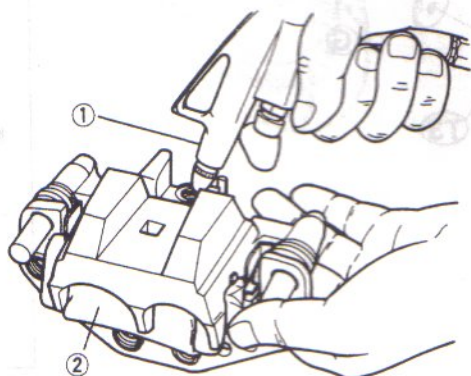


1. Apply compressed air.

2. Cloth

**Caliper Assembly Notes**

- Apply brake fluid to the outside of the piston and the fluid seal, and push the piston into the cylinder by hand. Take care that neither the cylinder nor the piston skirt get scratched.
- Apply a thin coat of silicone grease to the caliper holder shafts and holder holes (silicone grease is a special high temperature, water-resistant grease).
- Install the anti-rattle spring in the caliper as shown.

**Anti-Rattle Spring Installation**

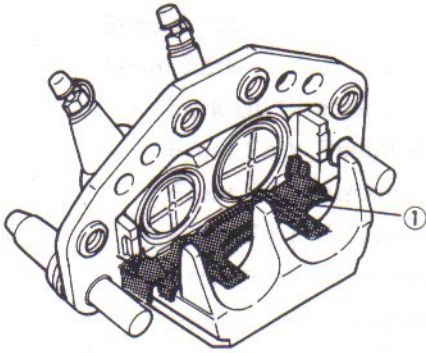

1. Anti-Rattle Spring

**Brake Pad Installation Notes**

- Push the caliper pistons in by hand as far as they will go and install the pads.

**WARNING**

- Do not attempt to drive the motorcycle until a full brake lever or pedal is obtained by pumping the brake lever or pedal until the pads are against the disc. The brake will not function on the first application of the lever or pedal if this is not done.


**Brake Pad Lining Wear**

- ★ If the lining thickness of either pad is less than the service limit, replace both pads in the caliper as a set.

**Pad Lining Thickness**

<b>Standard:</b>	<b>4.35 mm</b>
<b>Service Limit:</b>	<b>1 mm</b>

**Brake Pad**

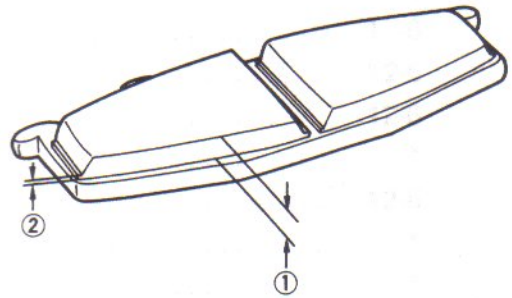


1. Lining Thickness  
2. Service Limit

**Brake Pads**

**Brake Pad Removal**

- Remove the caliper (see Front or Rear Caliper Removal).
- Take off the piston side pad from the caliper holder.
- Push the caliper holder to the piston side, and then remove the pad from the caliper holder shaft.

**Pad Removal**

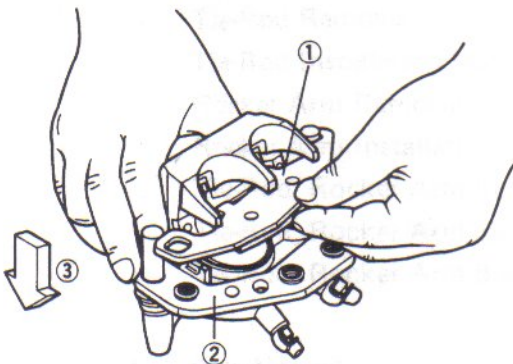

1. Pad  
2. Caliper Holder  
3. Push the caliper holder.

# Suspension

## Table of Contents

Exploded View .....	12-2
Specifications .....	12-3
Special Tool .....	12-3
Front Fork .....	12-3
Fork Oil Change .....	*
Front Fork Removal (each fork leg) .....	12-3
Front Fork Installation (each fork leg) .....	12-3
Front Fork Disassembly .....	12-4
Front Fork Assembly .....	12-5
Inner Tube Inspection .....	*
Guide Bush Inspection .....	12-5
Oil Seal and Dust Seal Inspection .....	*
Spring Tension .....	*
Rear Suspension (Uni-Trak) .....	12-6
Rear Shock Absorber .....	12-6
Rear Shock Absorber Adjustment .....	12-6
Rear Shock Absorber Removal .....	12-6
Rear Shock Absorber Installation .....	*
Rear Shock Absorber Scrapping .....	12-6
Swing Arm .....	*
Swing Arm Removal .....	*
Swing Arm Installation Notes .....	*
Swing Arm Sleeve inspection .....	*
Swing Arm Needle Bearing Inspection .....	*
Swing Arm Needle Bearing Lubrication .....	*
Tie-Rod, Rocker Arm: .....	*
Tie-Rod Removal .....	*
Tie-Rod Installation Note .....	*
Rocker Arm Removal .....	*
Rocker Arm Installation Notes .....	*
Tie-Rod, Rocker Arm Bushing Inspection .....	*
Tie-Rod, Rocker Arm Sleeve Inspection .....	*
Tie-Rod, Rocker Arm Bushing Lubrication .....	*

\* : Base Manual

Quick Reference

## 11-2 BRAKES

### Exploded View

#### 1. BAC (Balanced Actuation Caliper)

#### 2. Dual-Piston Caliper

G : Apply grease.

Si : Apply silicone grease.

T1: 5.9 N-m (0.60 kg-m, 52 in-lb)

T2: 7.8 N-m (0.80 kg-m, 69 in-lb)

T3: 8.8 N-m (0.90 kg-m, 78 in-lb)





T4: 18 N-m (1.8 kg-m, 13.0 ft-lb)





T5: 23 N-m (2.3 kg-m, 16.5 ft-lb)

T6: 25 N-m (2.5 kg-m, 18.0 ft-lb)

T7: 32 N-m (3.3 kg-m, 24 ft-lb)

T8: 1.5 N-m (0.15 kg-m, 13 in-lb)

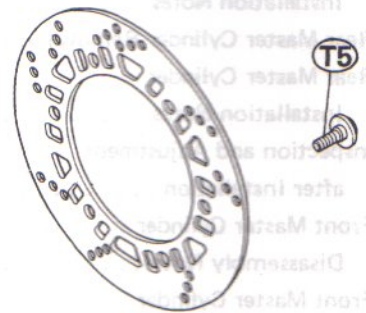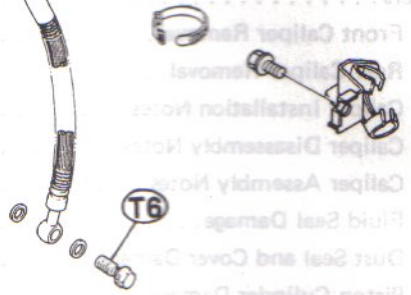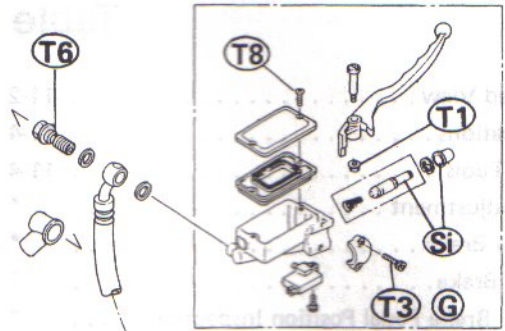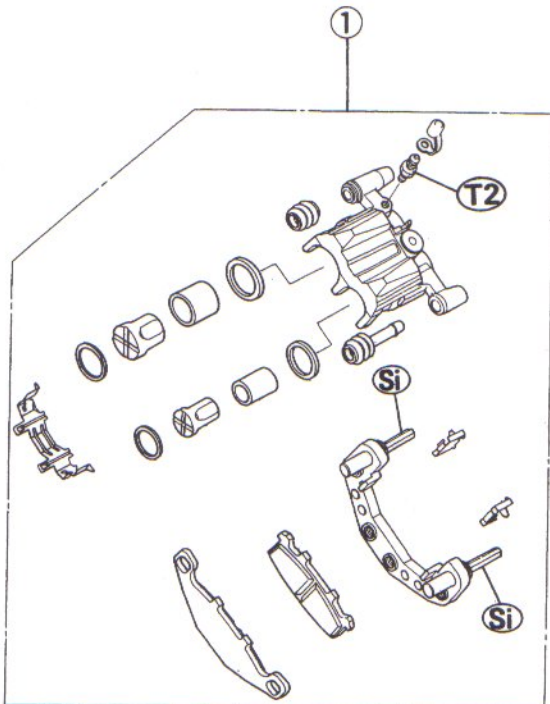

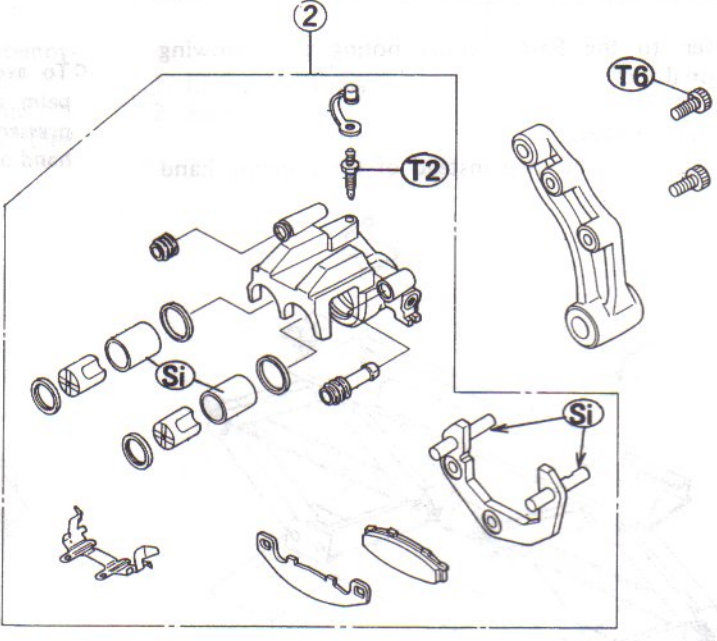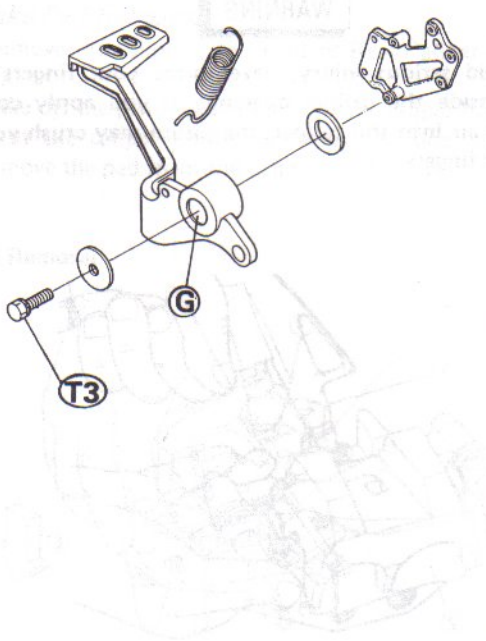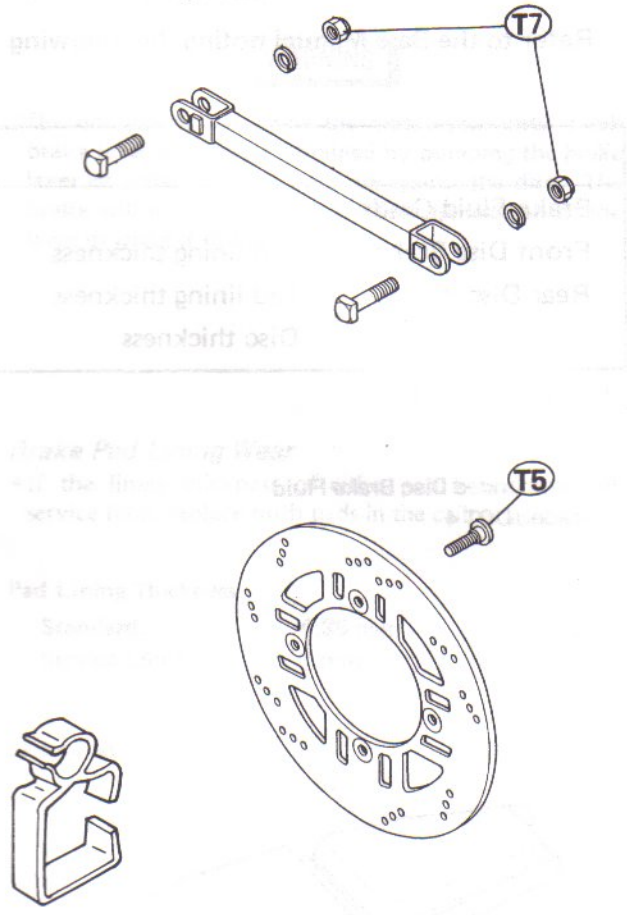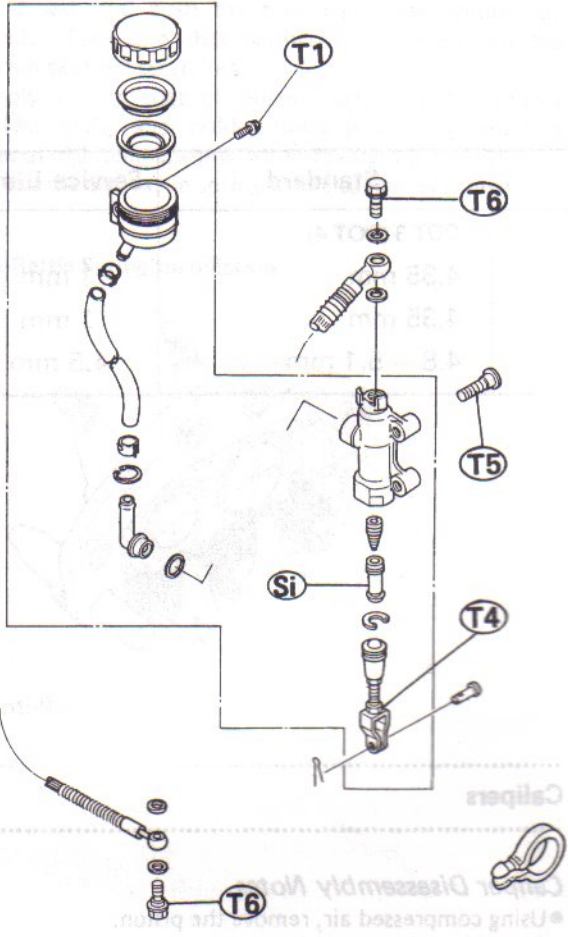

to where the brake line fits into the caliper.  
 Remove the piston by lightly tapping on the piston  
 Cover the caliper opening with a clean, heavy cloth.  
 \*Using compressed air, remove the piston.  
 Caliper Disassembly Note  
 Calipers

Disc thickness  
 Rotor Tool  
 2  
 T2  
 T6  
 Si

## 11-4 BRAKES

### Specifications

Refer to the Base Manual noting the following.

Item	Standard	Service Limit
Brake Fluid Grade	DOT 3 (DOT 4)	
Front Disc Brake: Pad lining thickness	4.35 mm	1 mm
Rear Disc Brake: Pad lining thickness	4.35 mm	1 mm
Disc thickness	4.8 – 5.1 mm	4.5 mm

( ) : EX250-F6~


Recommended Disc Brake Fluid  
Grade : DOT 4

### Special Tool

Refer to the Base Manual noting the following additional tool.

Jack: 57001-1238

○This tool may be used instead of the common hand tool.

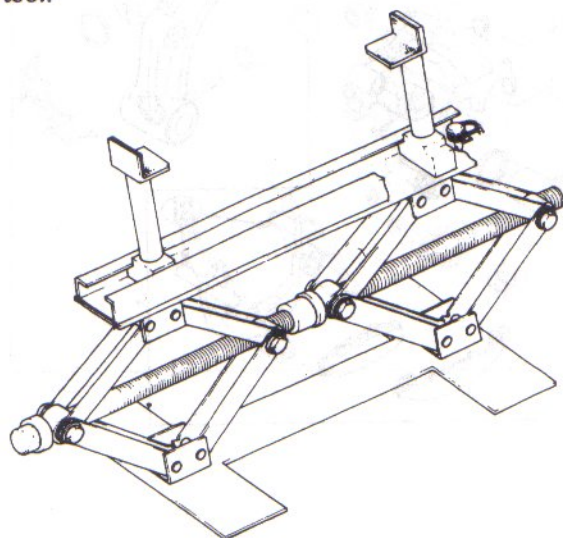


### Calipers

#### Caliper Disassembly Notes

- Using compressed air, remove the piston.
- Cover the caliper opening with a clean, heavy cloth.
- Remove the piston by lightly applying compressed air to where the brake line fits into the caliper.

#### WARNING

- To avoid serious injury, never place your fingers or palm inside the caliper opening. If you apply compressed air into the caliper, the piston may crush your hand or fingers.

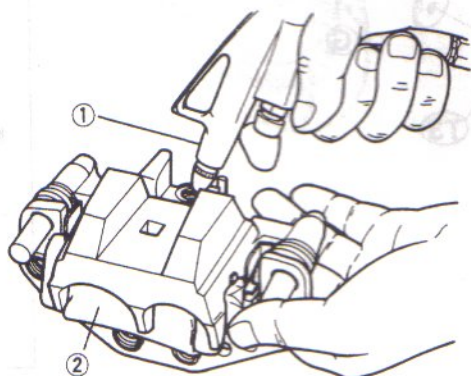


1. Apply compressed air.

2. Cloth

**Caliper Assembly Notes**

- Apply brake fluid to the outside of the piston and the fluid seal, and push the piston into the cylinder by hand. Take care that neither the cylinder nor the piston skirt get scratched.
- Apply a thin coat of silicone grease to the caliper holder shafts and holder holes (silicone grease is a special high temperature, water-resistant grease).
- Install the anti-rattle spring in the caliper as shown.

**Anti-Rattle Spring Installation**

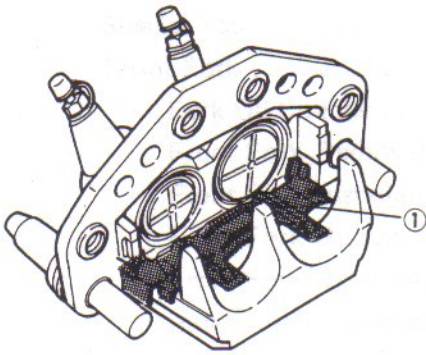

1. Anti-Rattle Spring

**Brake Pad Installation Notes**

- Push the caliper pistons in by hand as far as they will go and install the pads.

**WARNING**

- Do not attempt to drive the motorcycle until a full brake lever or pedal is obtained by pumping the brake lever or pedal until the pads are against the disc. The brake will not function on the first application of the lever or pedal if this is not done.


**Brake Pad Lining Wear**

- ★ If the lining thickness of either pad is less than the service limit, replace both pads in the caliper as a set.

**Pad Lining Thickness**

<b>Standard:</b>	<b>4.35 mm</b>
<b>Service Limit:</b>	<b>1 mm</b>

**Brake Pad**

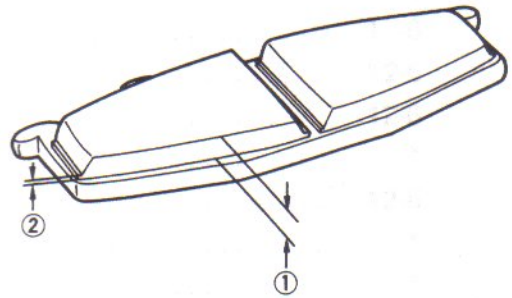


- 1. Lining Thickness
- 2. Service Limit

**Brake Pads**

**Brake Pad Removal**

- Remove the caliper (see Front or Rear Caliper Removal).
- Take off the piston side pad from the caliper holder.
- Push the caliper holder to the piston side, and then remove the pad from the caliper holder shaft.

**Pad Removal**

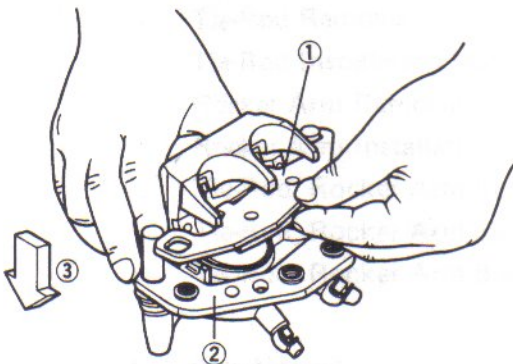

- 1. Pad
- 2. Caliper Holder
- 3. Push the caliper holder.

## 12-6 SUSPENSION

### Rear Suspension (Uni-Trak)


#### Rear Shock Absorber:

##### Rear Shock Absorber Adjustment

- The spring preload can not be adjusted.


##### Rear Shock Absorber Removal

- The shock absorber upper mounting nut is welded on the frame.
- It is not necessary to remove the coolant reservoir tank and the IC igniter for rear shock removal.
- Remove the following parts.
  - Seat (see Frame chapter in this text)
  - Left Side Cover (see Frame chapter in this text)
- Loosen the upper shock absorber nut. Do not remove it yet.

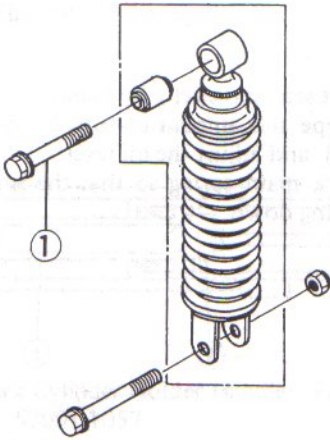

1. Upper Shock Absorber Bolt

- Remove the lower shock absorber bolt and the tie-rod lower bolt and nut.

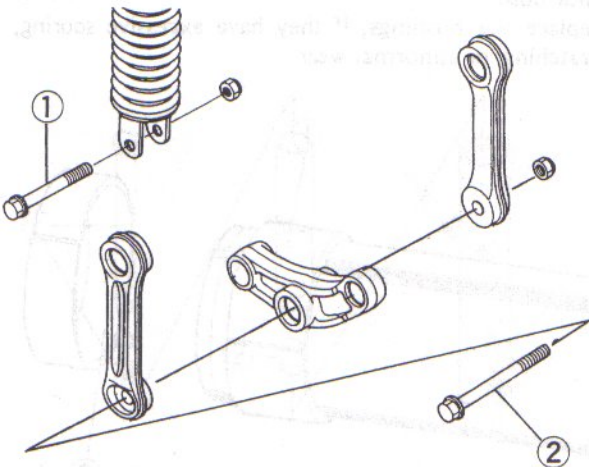


1. Lower Shock Absorber Bolt and Nut
2. Tie-Rod Lower Bolt and Nut

- Set the motorcycle on its center stand to lift the rear wheel off the ground.
- Remove the upper shock absorber bolt, then take off the rear shock absorber unit toward the ground.

##### Rear Shock Absorber Scrapping

#### WARNING

- Since the rear shock absorber contains nitrogen gas, do not incinerate the rear shock absorber without first releasing the gas or it may explode.
- Before a rear shock absorber is scrapped, drill a hole at a point about 40 mm up from the bottom of the cylinder to release the nitrogen gas completely. Wear safety glasses when drilling the hole, as the gas may blow out bits of drilled metal when the hole opens.

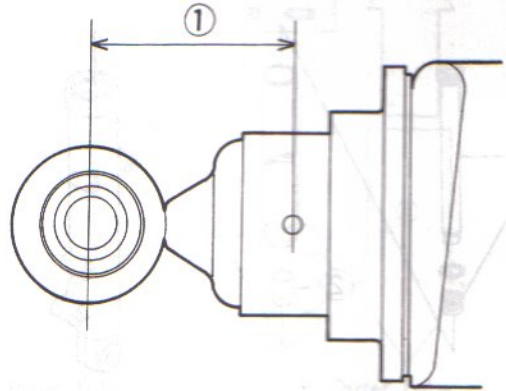

1. 40 mm

# Steering

## Table of Contents

Exploded View .....	13-2
Special Tool .....	13-3
Handlebar .....	13-3
Handlebar Holder Installation Notes .....	13-3
Steering Adjustment .....	*
Steering Inspection .....	*
Checking for Steering Too Tight .....	*
Checking for Steering Too Loose .....	*
Steering Adjustment .....	*
Steering Removal/Installation .....	13-3
Steering Stem Removal .....	*
Steering Stem Installation .....	13-3
Steering Maintenance .....	*
Steering Stem Bearing Lubrication .....	*
Bearing Wear, Damage .....	*
Stem Cap Deterioration, Damage .....	*
Steering Stem Warp .....	*

\* : Base Manual

Quick Reference




**Special Tool**

Refer to the Base Manual noting the following additional tool.

**Jack: 57001-1238**

○ This tool may be used instead of the common tool.

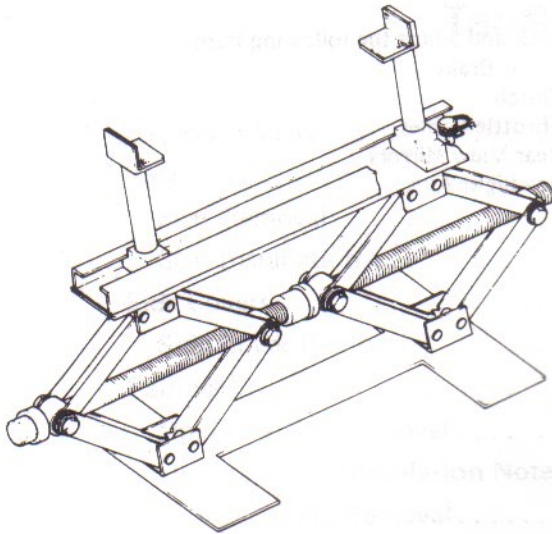


**Steering Removal/Installation**

*Steering Stem Installation*

**NOTE**

○ Do not confuse the adjustment procedure with the new bearing installation procedure. Installation of new bearings requires that you torque the stem locknut to seat the races, then loosen the locknut and proceed with the adjustment procedure.

● Apply oil to the outer races, and drive the races into the head pipe using the bearing driver and bearing driver holder (special tools). Be sure to drive them in until they stop at the stepped portion in the head pipe.

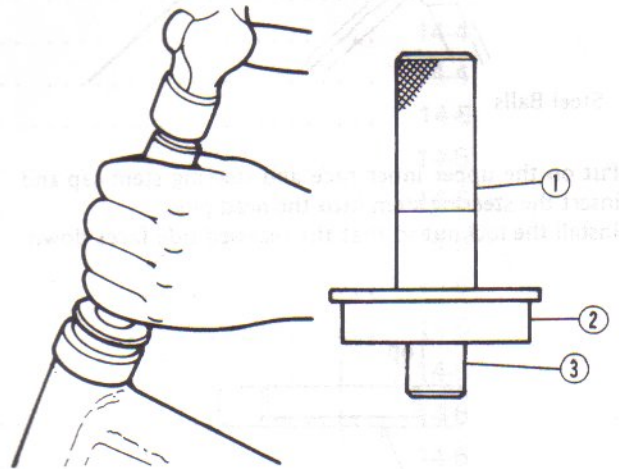


- 1. Bearing Driver Holder
- 2. Bearing Driver
- 3. Bearing Driver

**Handlebar**


*Handlebar Holder Installation Notes*

● When tightening the handlebar holder mounting bolts, with handlebar end and holder pushed as forward as possible, tighten the holder mounting Allen bolts to the specified torque (see Exploded View). This prevents the left switch housing from hitting the fuel tank when the steering is turned fully left.

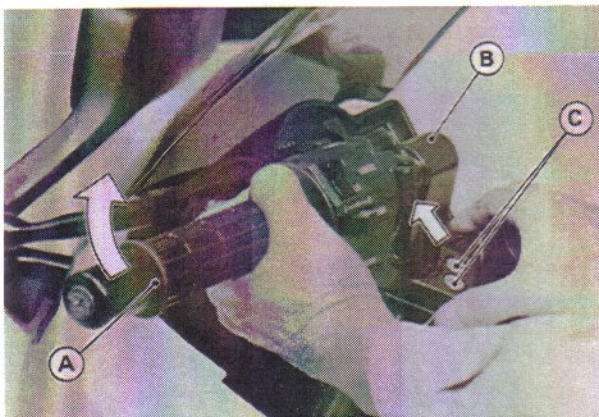

- A. Handlebar Ends
- B. Handlebar Holders
- C. Mounting Allen Bolts

● Apply oil to the lower inner race, and drive it onto the steering stem using the stem bearing driver and adapter (special tools). Be sure to press it in until it stops at the stem base.

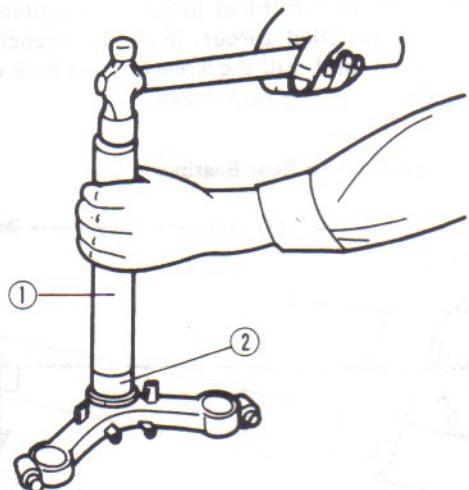

- 1. Stem Bearing Driver: 57001-137
- 2. Adapter: 57001-294



# Frame

## Table of Contents


Exploded View .....	14-2
Seat .....	14-4
Seat Removal .....	14-4
Seat Installation .....	14-4
Side Covers .....	14-4
Side Cover Removal .....	14-4
Fairings .....	14-5
Upper Fairing Removal .....	14-5
Upper Fairing Installation Notes .....	14-5
Lower Fairing Removal .....	14-5
Upper Fairing Stay Removal .....	14-6
Fenders .....	14-6
Rear Part of Rear Fender Removal .....	14-6
Seat Cover Removal .....	14-6
Front Part of Rear Fender Removal .....	14-6
Front Part of Rear Fender Installation .....	14-7
Footpeg Bracket .....	14-7
Left Footpeg Bracket Removal .....	14-7
Left Footpeg Bracket Installation Note .....	14-7
Right Footpeg Bracket Removal .....	14-7

\* : Base Manual

Quick Reference

# 14-2 FRAME

## Exploded View

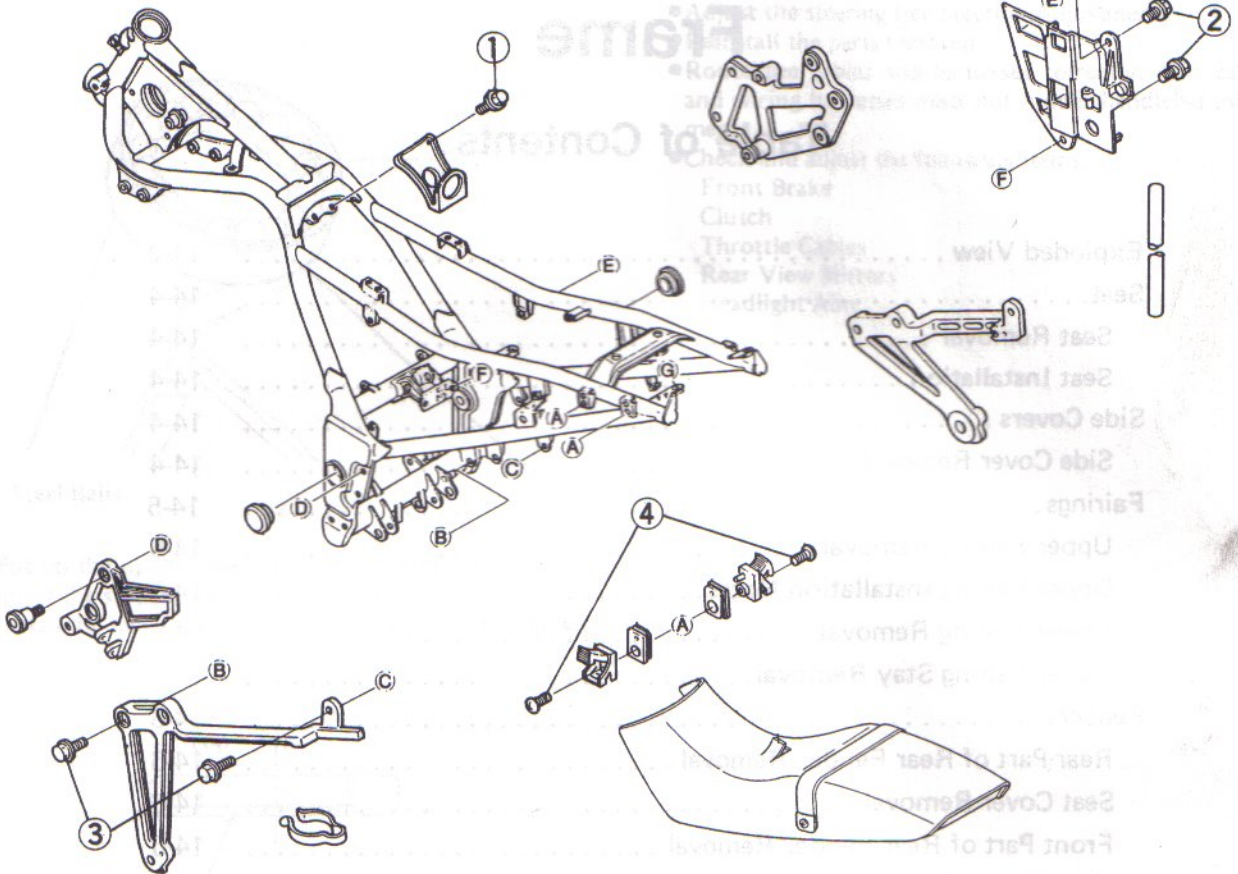










**G** : Apply grease.

**L** : Apply non-permanent locking agent.

**T1**: 44 N-m (4.5 kg-m, 33 ft-lb)

1. Bolts, 6 x 10
2. Bolts, 6 x 14
3. Bolts, 8 x 20
4. Screws, 6 x 25
5. Screws, 6 x 18
6. Allen Bolts, 6 x 18
7. Bolts, 6 x 10
8. Bolts, 8 x 20
9. Bolts, 6 x 25
10. Bolts, 6 x 25
11. Bolts, 6 x 25
12. Bolts, 8 x 16
13. Screws, 5 x 16
14. Screws, 6 x 20
15. Bolts, 10 x 25
16. Bolts, 6 x 14
17. Bolts, 6 x 16
18. Bolts, 6 x 14
19. Bolts, 6 x 20
20. Screws, 6 x 28

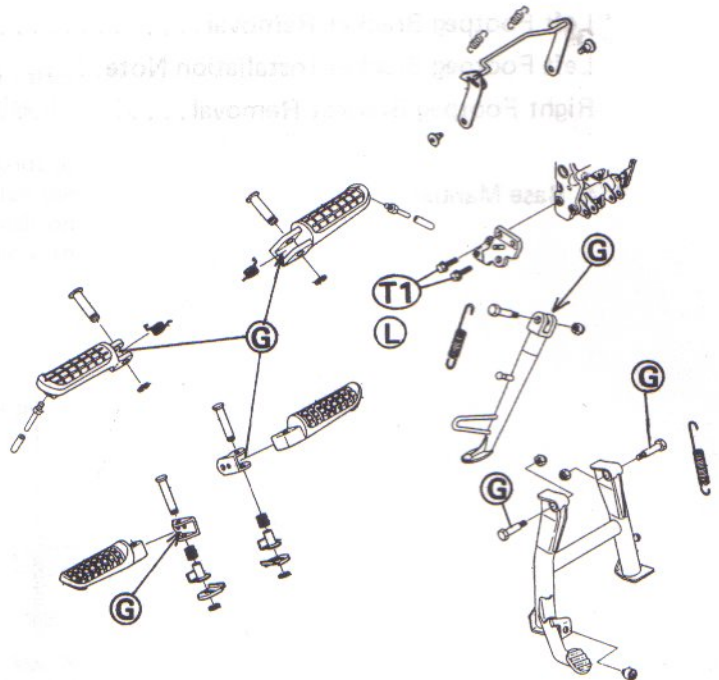

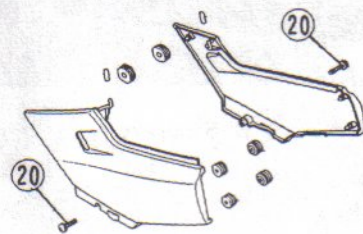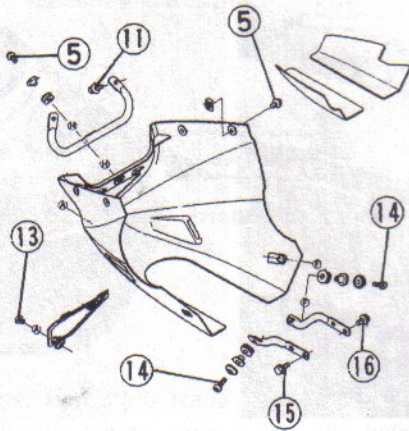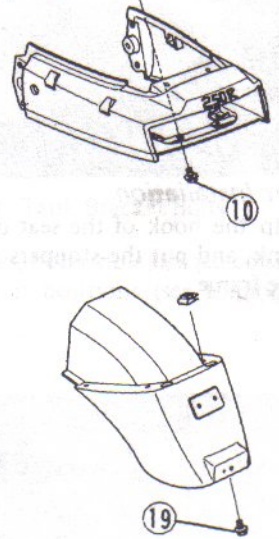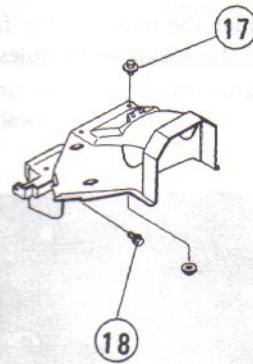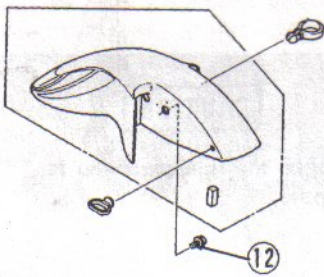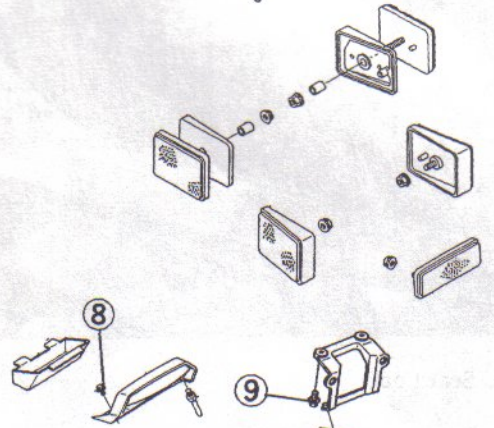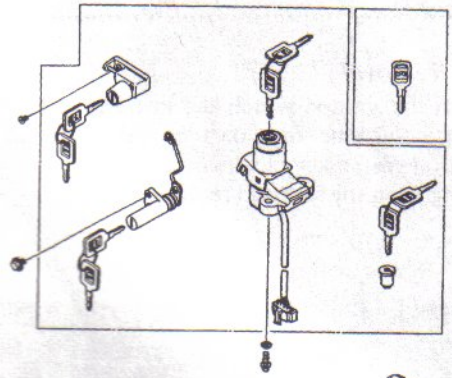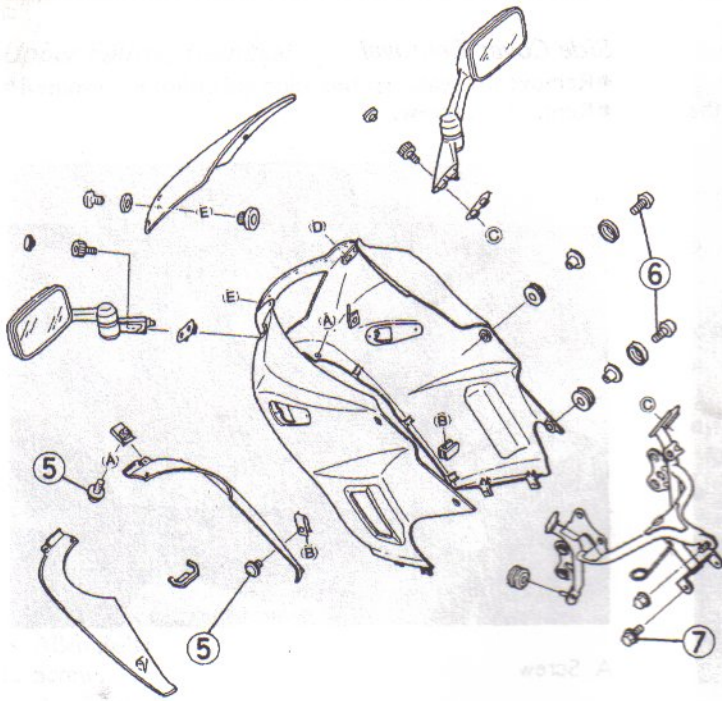


## 14-4 FRAME

### Seat

#### Seat Removal

- Insert the ignition switch key into the seat lock.
- Push down the rear part of the seat and turn the ignition switch key clockwise.
- Swing open the seat and remove it.

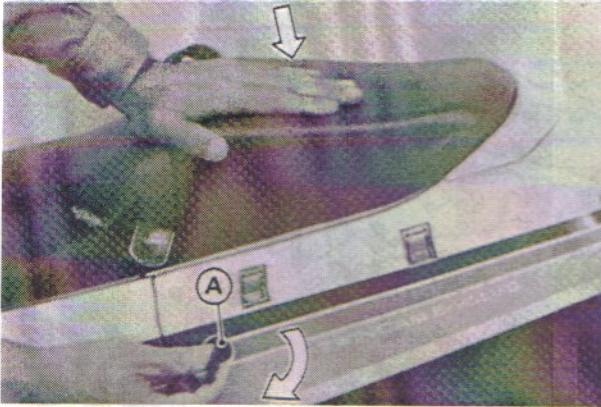

A. Seat Lock

#### Seat Installation

- Slip the hook of the seat under the brace on the fuel tank, and put the stoppers of the seat into the holes in the frame.



A. Hook


B. Stoppers

- Push down the rear part of the seat until the lock clicks.

### Side Covers

#### Side Cover Removal

- Remove the seat.
- Remove the screw.

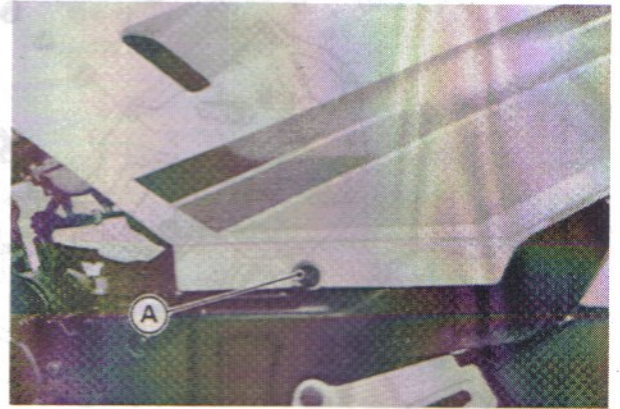


A. Screw

- Pull the rear part and front part of the side cover evenly outward to clear the stoppers.

#### CAUTION

- Do not bend open the side cover too far. This could damage the stopper.

- Push down the rubber damper to clear the fuel tank.
- Remove the side cover.

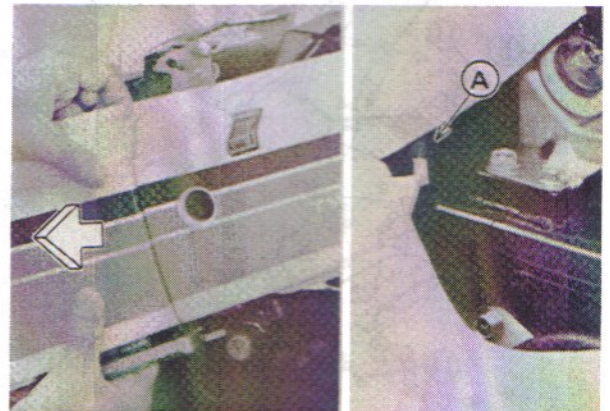


A. Rubber Damper

**Fairings**

**Upper Fairing Removal**

- Remove the following bolts and screws.

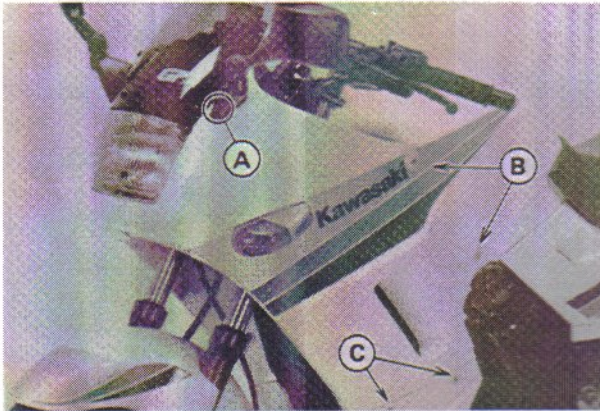

- A. Rear View Mirror Mounting Bolts
- B. Allen Bolts
- C. Screws

- Pull off the turn signal light connectors.
- Move the upper fairing forward while bending the fairing outward, and remove it.



**CAUTION**

- Be careful not to scratch the painted surface during removal or installation.


**Upper Fairing Installation Notes**

- Fit each fairing stopper into the hole in the fairing stay.



A. Fairing Stopper

- If the upper fairing bolts are difficult to install on the fuel tank because of misalignment, loosen the tank bracket bolts and adjust the tank position.

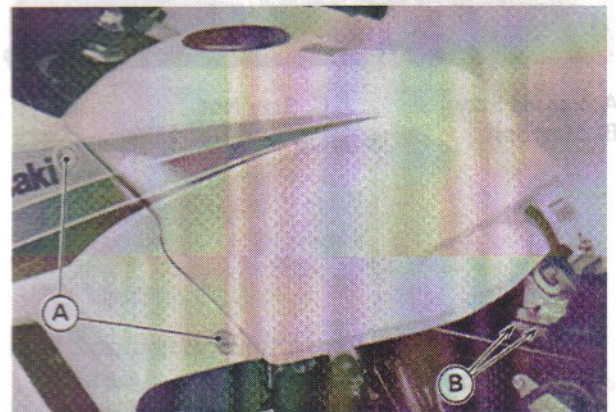

A. Upper Fairing Bolts    B. Tank Bracket Bolts

- Install the mounting screws, bolts, nuts flanged collars, and washers in the original positions (see Exploded View).

**Lower Fairing Removal**

- Remove the following screws to remove the lower fairing.




A. Screws

## 14-6 FRAME

### Upper Fairing Stay Removal


- Remove the following parts.
  - Upper Fairing
  - Headlight Unit
  - Meter Unit
- Take off the stay bolt and nut, then remove the fairing stay.

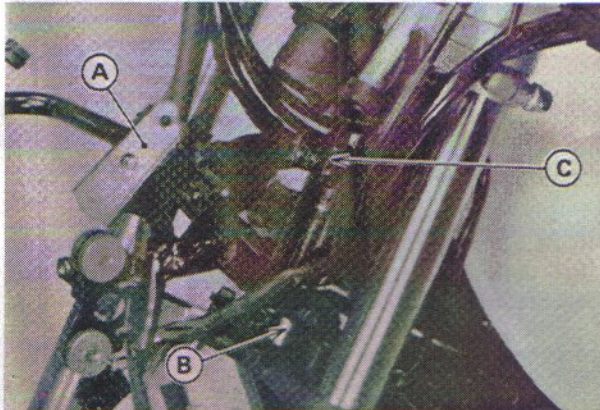

A. Fairing Stay  
B. Stay Bolt  
C. Stay Nut


### Seat Cover Removal

- Remove the following parts.
  - Rear Part of Rear Fender
  - Seat
  - Side Covers
  - Taillight Connectors
- Remove the seat cover mounting bolts and screws.

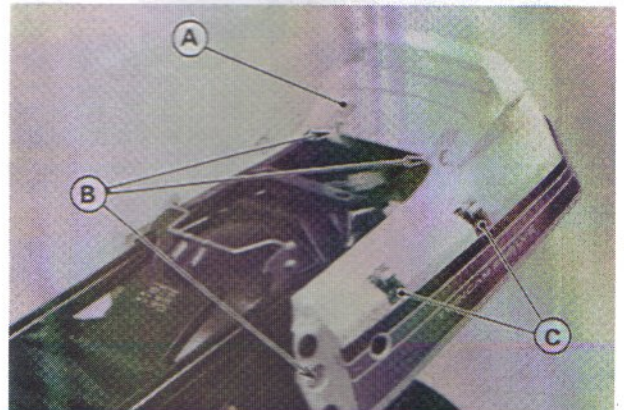

A. Seat Cover  
B. Mounting Bolts  
C. Mounting Screws


- Move the seat cover rearward while bending the cover outward, and remove it.

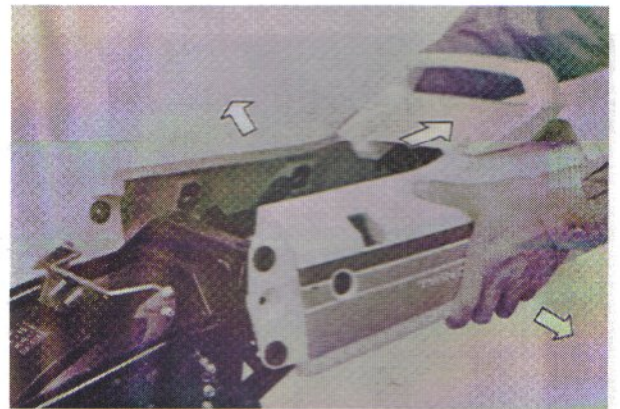

## Fenders

### Rear Part of Rear Fender Removal


- Take off the mounting bolts to remove the rear fender.

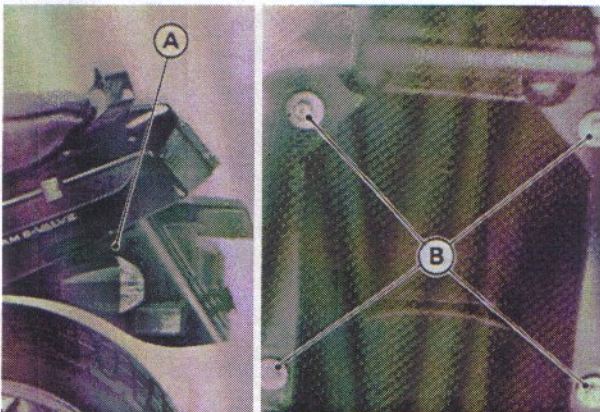


A. Rear Fender  
B. Mounting Bolts

### Front Part of Rear Fender Removal

- Remove the following parts.
  - Rear Part of Rear Fender
  - Seat Cover
  - Regulator/Rectifier Unit (on the right side)
  - IC Igniter (see Electrical System chapter)
  - Coolant Reservoir Tank
  - Air Cleaner Housing Rubber Band
  - Battery and Fender Mounting Bolts (bottom of the battery)
  - Seat Lock Lever Springs
- Remove the two upper and two lower mounting bolts.

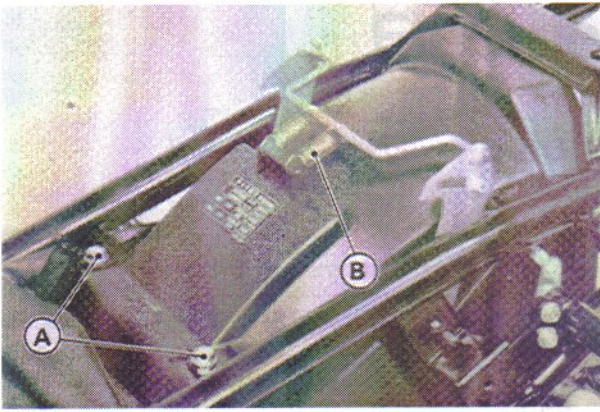


A. Upper Mounting Bolts      B. Lock Lever Springs

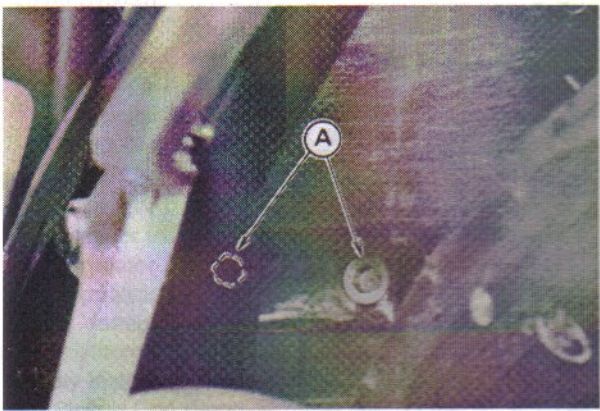

A. Lower Mounting Bolts

- Move the front part of the rear fender backward and remove it.

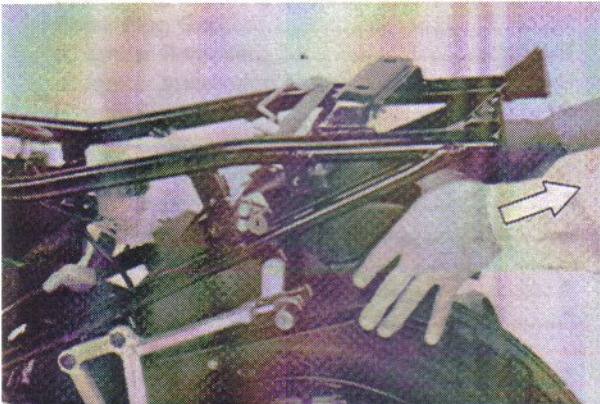


**Front Part of Rear Fender Installation**

- Install the mounting bolts and washers in the original position (see Exploded View).

**Footpeg Bracket**

**Left Footpeg Bracket Removal**

- Remove the external shift mechanism (see External Shift Mechanism Removal in the Crankshaft/Transmission chapter in this manual).
- Remove the footpeg bracket Allen bolts and take off the footpeg bracket.

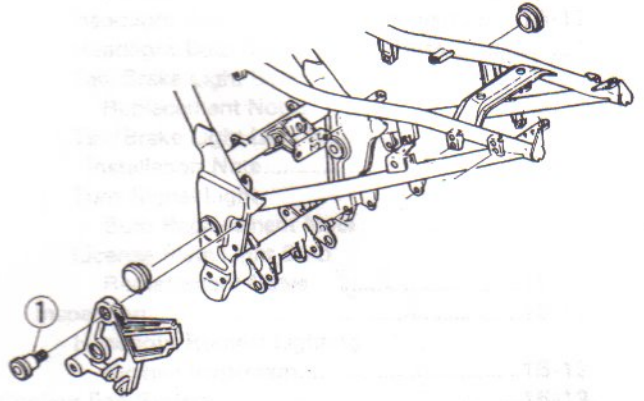

1. Footpeg Bracket Allen Bolts

**Left Footpeg Bracket Installation Note**

Refer to External Shift Mechanism Installation Notes in the Crankshaft/Transmission chapter in this manual.

**Right Footpeg Bracket Removal**

- Refer to the Base Manual noting the following.
- It is not necessary to remove the muffler mounting bolt.

# Electrical System


## Table of Contents

Precautions.....*	Lighting System .....15-11
Exploded View.....15-2	Headlight Beam
Parts Locations.....15-4	Horizontal Adjustment.....*
Specifications.....15-5	Headlight Beam Vertical Adjustment.....15-11
Special Tools.....15-5	Headlight Bulb Replacement Notes.....*
Sealant.....15-5	Tail/Brake Light Bulb
Battery.....15-6	Replacement Notes.....*
Charging Condition Inspection.....15-18	Tail/Brake Light Lens Removal/ Installation Note.....*
Refreshing Charge.....15-18	Turn Signal Light
Level Inspection.....*	Bulb Replacement Note.....*
Charging System.....15-6	License Plate Light Bulb
Alternator Cover Removal.....*	Replacement Notes.....15-12
Alternator Cover Installation Note.....15-6	Inspection.....15-12
Alternator Rotor Removal.....*	Headlight Reserve Lighting
Alternator Rotor Installation Notes.....*	System Inspection.....15-12
Stator Coil Removal.....*	Cooling Fan System.....15-13
Stator Coil Installation Notes.....15-6	Fan System Circuit Inspection.....*
Alternator Inspection.....*	Fan Inspection.....*
Rectifier Inspection.....*	Fan Relay Inspection.....*
Regulator Inspection.....*	Meters and Gauge.....15-13
Regulator/Rectifier Output	Meters and Gauge Removal.....15-13
Voltage Inspection.....15-7	Meters and Gauge Disassembly.....15-14
Ignition System.....15-7	Meters and Gauge Replacement.....15-14
Safety Instructions.....*	Meter or Gauge Assembly Note.....15-14
Pickup Coil Removal.....*	Bulb Replacement Notes.....*
Pickup Coil Installation Notes.....15-7	Tachometer Inspection.....15-14
Spark Plug Removal.....15-7	Water Temperature Gauge
Spark Plug Installation Note.....15-7	Operation Inspection.....*
Ignition Coil Removal.....15-8	Switches and Sensors.....15-15
Ignition Coil Installation Notes.....15-8	Front Brake Light Testing.....*
Pickup Coil Inspection.....15-9	Rear Brake Light Testing.....*
Ignition Coil Inspection.....15-9	Rear Brake Light Switch
Spark Plug Cleaning Inspection.....*	Position Adjustment.....*
Spark Plug Gap.....*	Switch Removal Note.....*
IC Igniter Removal.....15-9	Switch Inspection.....15-15
IC Igniter Installation Notes.....15-9	Fan Switch Inspection.....*
IC Igniter Inspection.....15-10	Water Temperature
Electric Starter System.....15-10	Sensor Inspection.....*
Starter Motor Removal.....*	Junction Box.....15-15
Starter Motor Installation Notes.....*	Fuse Removal.....*
Starter Motor Disassembly.....*	Fuse Installation notes.....15-15
Starter Motor Assembly.....*	Fuse Inspection.....*
Brush Inspection.....*	Junction Box Fuse
Brush Spring Inspection.....*	Circuit Inspection.....15-15
Commutator Cleaning	Headlight and Starter Circuit
and Inspection.....*	Relay Circuit Inspection.....15-16
Armature Inspection.....*	Diode Circuit Inspection.....15-16
Brush Lead Inspection.....*	Electrical Wiring.....*
Brush Plate Inspection.....*	Wiring Inspection.....*
Starter Relay Inspection.....*	Wiring Diagrams.....15-21
	* : Base Manual

Quick Reference







## 15-2 ELECTRICAL SYSTEM

### Exploded View

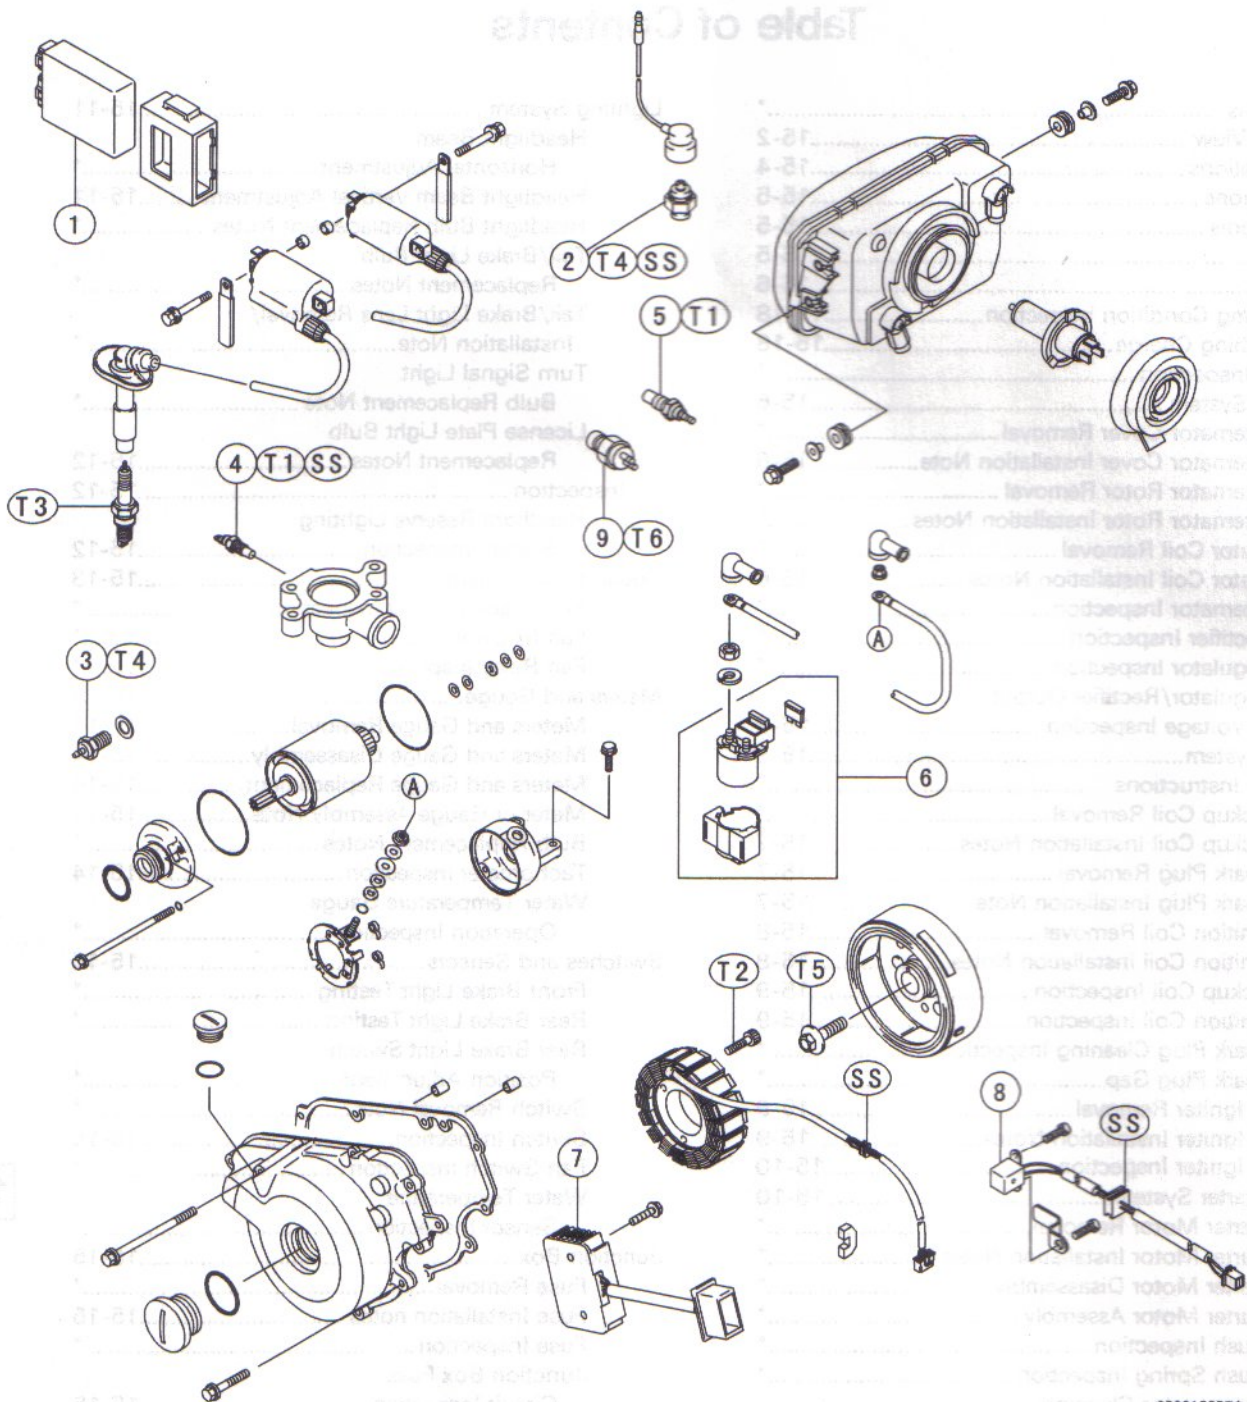


1. IC Igniter
2. Oil Pressure Switch
3. Neutral Switch
4. Water Temperature Sensor
5. Fan Switch (EX250-F2 ~ F4)
6. Starter Relay
7. Regulator/Rectifier
8. Pickup Coil

9. Fan Switch (EX250-F6 ~)
- SS: Apply silicone sealant to the threads.  
 T1: 7.8 N·m (0.80 kg·m, 69 in·lb)  
 T2: 12 N·m (1.2 kg·m, 104 in·lb)  
 T3: 13 N·m (1.3 kg·m, 113 in·lb)  
 T4: 15 N·m (1.5 kg·m, 11.0 ft·lb)  
 T5: 69 N·m (7.0 kg·m, 51 ft·lb)

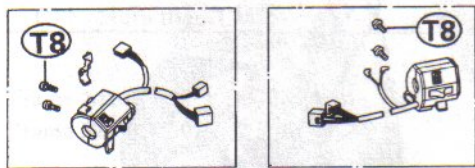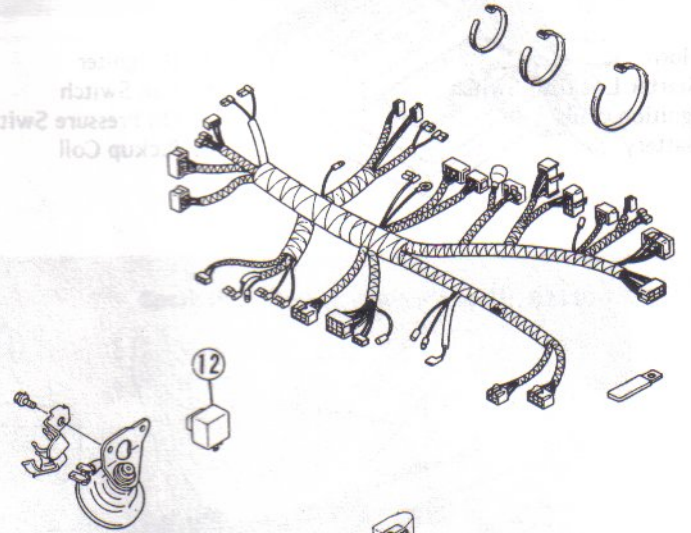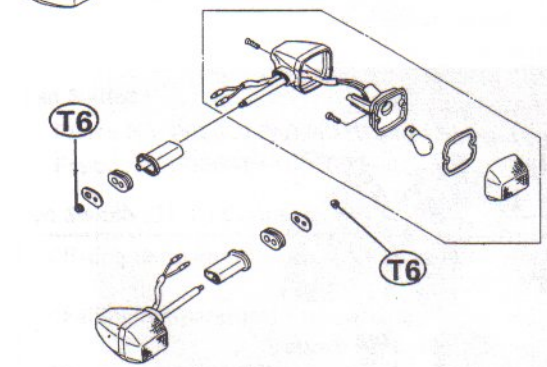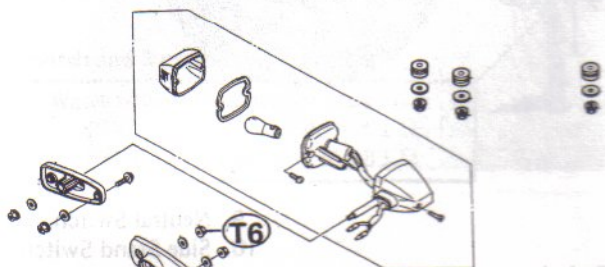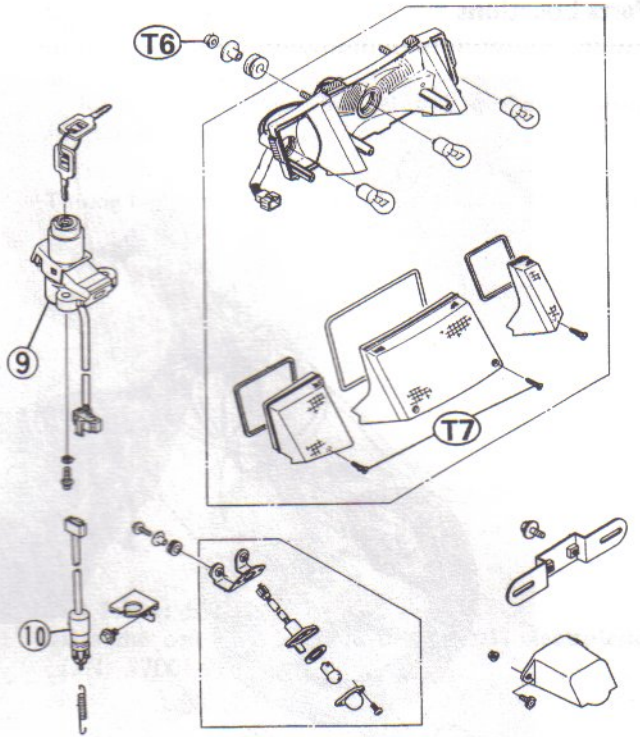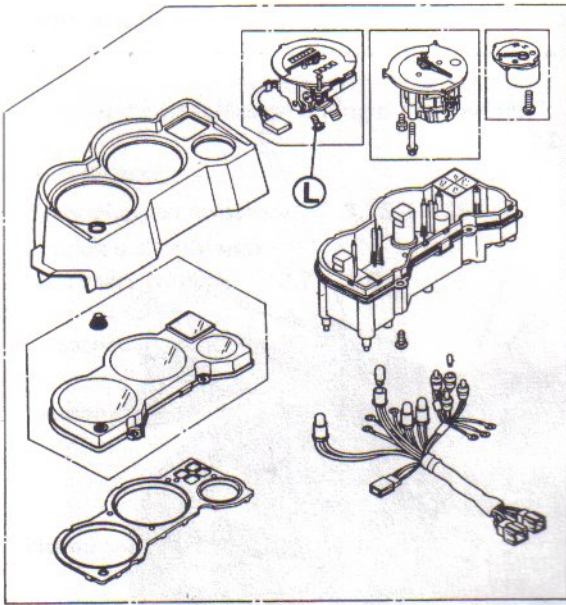


- 9. Ignition Switch
- 10. Rear Brake Light Switch
- 11. Side Stand Switch
- 12. Turn Signal Relay
- 13. Junction Box
- 14. Fuse

L : Apply non-permanent locking agent.  
 T6: 5.9 N-m (0.60 kg-m, 52 in-lb)  
 T7: 1.0 N-m (0.10 kg-m, 9 in-lb)  
 T8: 3.4 N-m (0.35 kg-m, 30 in-lb)

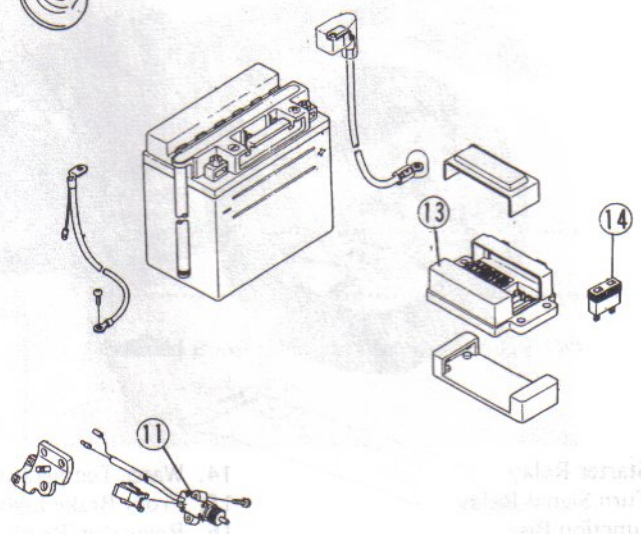

## 15-4 ELECTRICAL SYSTEM


### Parts Locations

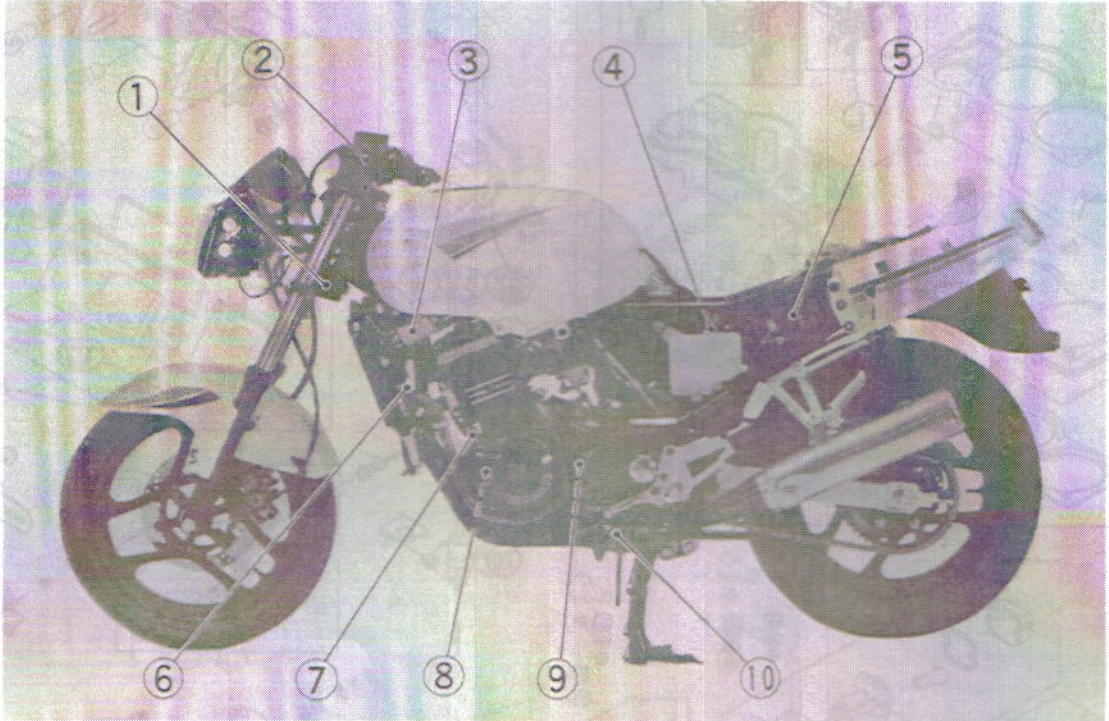

- 1. Horn
- 2. Starter Lockout Switch
- 3. Ignition Coils
- 4. Battery

- 5. IC Igniter
- 6. Fan Switch
- 7. Oil Pressure Switch
- 8. Pickup Coil

- 9. Neutral Switch
- 10. Side Stand Switch

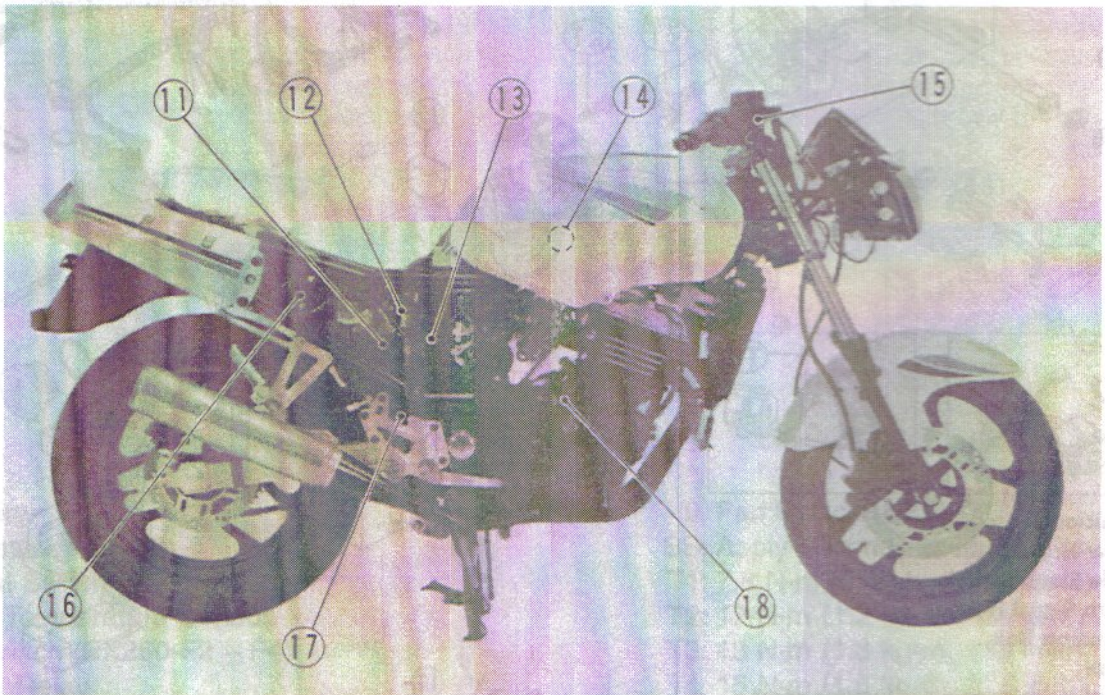

- 11. Starter Relay
- 12. Turn Signal Relay
- 13. Junction Box

- 14. Water Temperature Sensor
- 15. Front Brake Light Switch
- 16. Regulator/Rectifier

- 17. Rear Brake Light Switch
- 18. Starter Motor

## Specifications

Refer to the Base Manual noting the following.

### Ignition System

Spark plug cap resistance: 3.75 – 6.25 k $\Omega$

#### Ignition coil resistance

Primary winding: 2.2 – 3.5  $\Omega$

Secondary winding: 10 – 16 k $\Omega$

(with plug cap removed)

Ignition timing: 10° BTDC @1300 r/min (rpm) –  
42° BTDC @4500 r/min (rpm),

Ca 5° BTDC @1300 r/min (rpm) –  
42° BTDC @4500 r/min (rpm)

Pickup coil resistance: 100 – 150  $\Omega$

IC Igniter Internal Resistance: in the text.

### Switch and Sensors

Water temperature sensor resistance

80°C (176°F) : 42 – 62  $\Omega$

100°C (212°F) : 22 – 33  $\Omega$

### Fan Switch

Frame No. 000001 ~ 004010 and

Frame No. 004601 ~ 005001

### Fan Switch (97°C) Connections

○Rising temperature: From OFF to ON  
at 94 ~ 100°C (201 ~ 212°F)

○Falling temperature: From ON to OFF  
above 90°C (194°F)

ON: Less than 0.5 $\Omega$

OFF: More than 1 M $\Omega$

Frame No. 04011 ~ 004600 and

Frame No. 005002 ~

### Fan Switch (98°C) Connections

○Rising temperature: From OFF to ON  
at 96 ~ 100°C (205 ~ 212°F)

○Falling temperature: From ON to OFF  
above 91°C (196°F)


ON: Less than 0.5 $\Omega$

OFF: More than 1 M $\Omega$

## Special Tools


Refer to the Base Manual noting the following additional tools.

Timing Light: 57001-1241

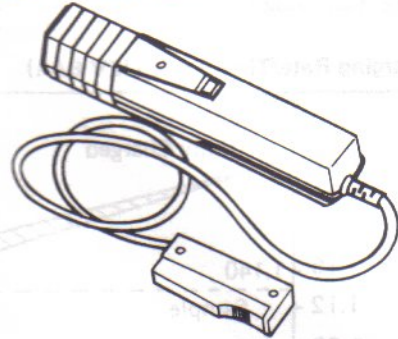


Coil Tester: 57001-1242

○Use the coil tester instead of Kawasaki electrotester (PN: 57001-980).

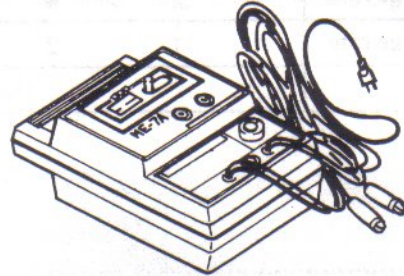


Spark Plug Wrench (Owner's tool): 92110-1132



## Sealant

Kawasaki Bond (Silicone Sealant): 56019-120

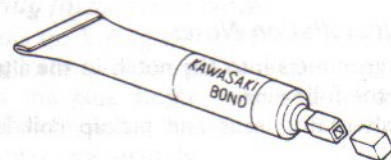

# 15-6 ELECTRICAL SYSTEM

## Battery

### Battery Ordinary Charging


●Use the following table when charging the battery.

### Battery Charging:

#### Battery Condition

★If the specific gravity is below 1.200 (charge 60%), the battery needs to be charged.


**Battery Charging Rate/Time Table (12V 8Ah)**

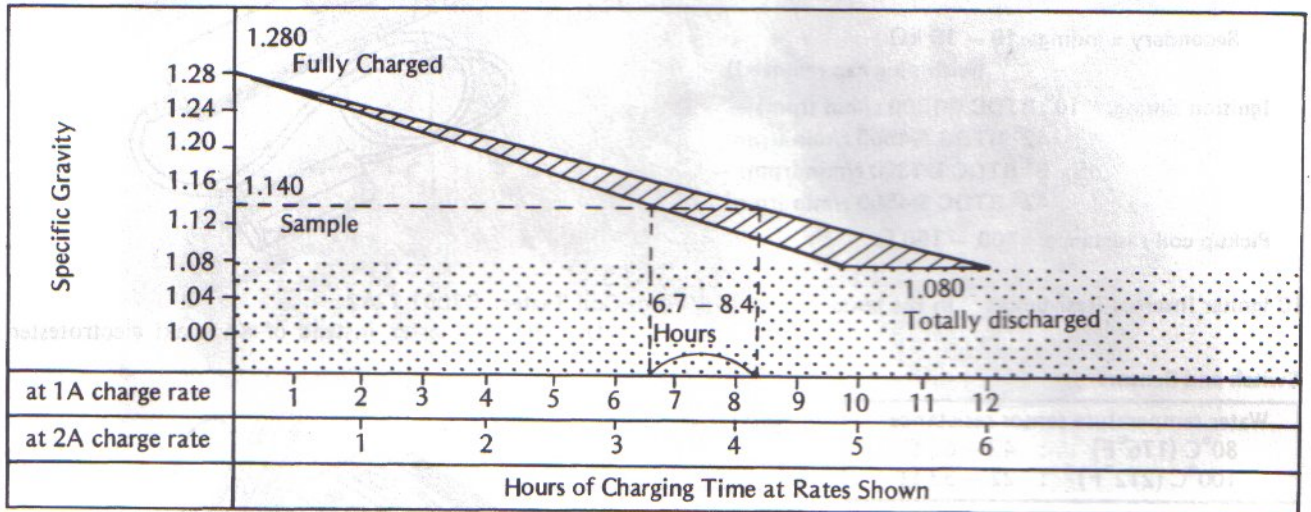

## Charging System

### Alternator Cover Installation Note

●Apply **silicone sealant** to the crankcase halves mating surface on the front and rear side of the cover mount.

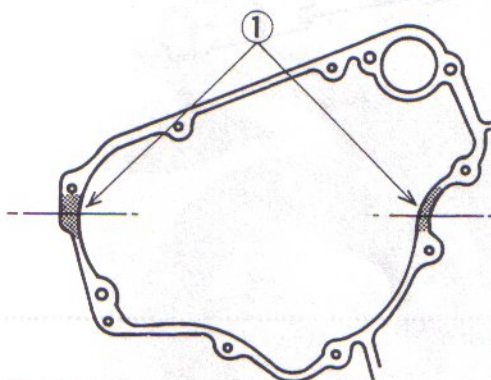


1. Silicone Sealant Applied Areas

○Apply **silicone sealant** to the grommets, and fit the grommets as shown.

●Install the pickup coil (see Pickup Coil Installation).

●Tighten the stator Allen bolts to the specified torque (see Exploded View).

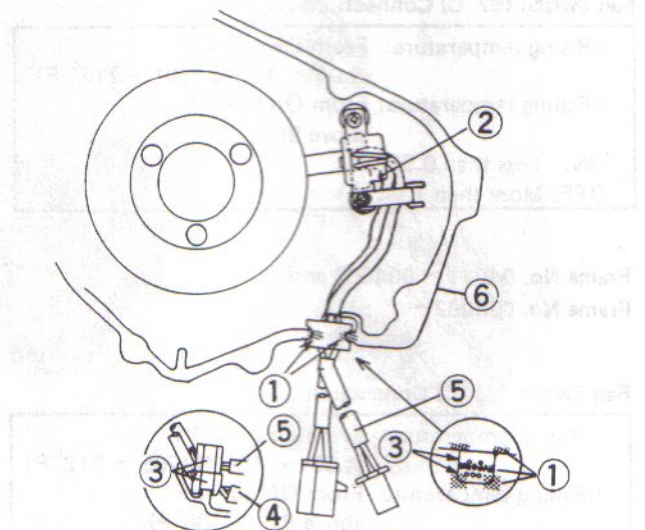

- 1. Silicon Sealant Applied Area
- 2. Pickup Coil
- 3. Grommets
- 4. Alternator Lead
- 5. Pickup Coil lead
- 6. Alternator Cover

### Stator Coil Installation Notes


●Fit the lead grommets into the notch in the alternator cover. Note the following.

○Clamp the alternator leads and pickup coil leads as shown.

**Regulator/Rectifier Output Voltage Measurement**

- Remove the seat.
- Warm up the engine to obtain actual alternator operating conditions.
- Stop the engine and connect the hand tester (special tool: 57001-983) to the battery leads as shown.

**Regulator/Rectifier Output Voltage**

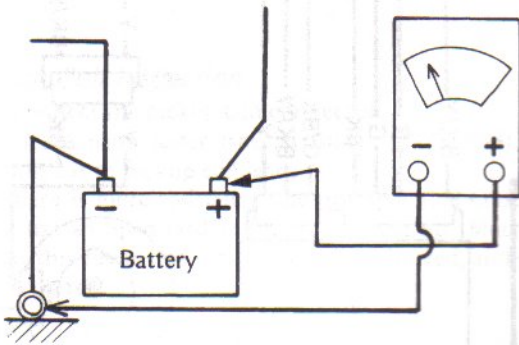

- Start the engine, and note the voltage readings at various engine speeds with the headlight turned on and then turned off (To turn off the headlight of US and Canada models, disconnect the headlight connector).
- ★ The readings should show nearly battery voltage when the engine speed is low, and as the engine speed rises, the readings should also rise. But they must stay within the specified range.
- ★ If the output voltage is much higher than the specification, the regulator/rectifier is defective.
- ★ If the output voltage does not rise as the engine speed increases, then the regulator/rectifier is defective or the alternator output is insufficient for the loads. Check the alternator and regulator/rectifier to determine which part is defective.

**Regulator/Rectifier Output Voltage**

<b>Meter range:</b>	25 V DC
<b>Connection:</b>	Battery lead (connected)
<b>Meter (+) –</b>	Battery + terminal
<b>Meter (–) –</b>	BK/Y lead
<b>Reading:</b>	Battery voltage to 14.0 to 15.0 V


**Ignition System**

**Pickup Coil Installation Notes**

- Install the lead clamp between the ribs on the alternator cover as shown.
- Apply **silicone sealant** to the grommets, and fit the grommets as shown in the figure (see Starter Coil Installation in this chapter).

**Spark Plug Removal**

- Remove the right side cover (see Side Cover Removal in the Frame chapter).
- Pull off the spark plug cap.
- Remove the spark plugs using the spark plug wrench (owner's tool).

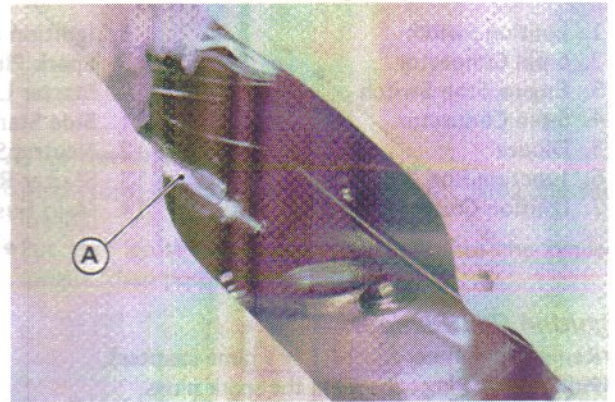


A. Spark Plug Wrench: 92110-1132

**Spark Plug Installation Notes**

- Insert the spark plug vertically into the plug hole with the plug installed in the plug wrench.
- Tighten the plug finger tight and to the specified torque (see Exploded View).
- Fit the plug caps securely.

# 15-8 ELECTRICAL SYSTEM


## Ignition System Wiring Diagram

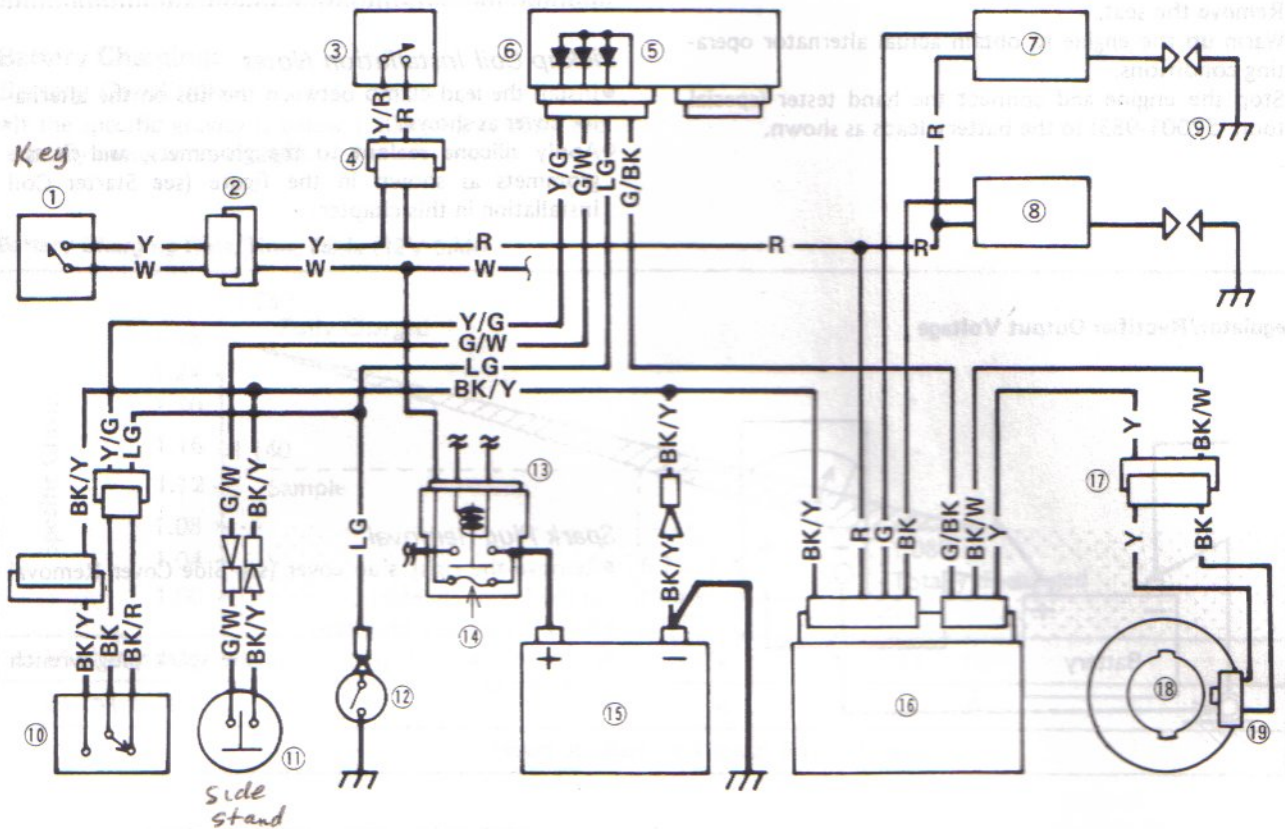

- |                              |                              |                                 |
|------------------------------|------------------------------|---------------------------------|
| 1. Ignition Switch           | 8. Ignition Coil #1 Cylinder | 15. Battery                     |
| 2. 6-pin Connector           | 9. Spark Plugs               | 16. IC Igniter                  |
| 3. Engine Stop Switch        | 10. Starter Lockout Switch   | 17. 2-pin Connector             |
| 4. 6-pin Connector           | 11. Side Stand Switch        | 18. Alternator Rotor            |
| 5. Diodes                    | 12. Neutral Switch           | 19. Pickup Coil #1, #2 Cylinder |
| 6. Junction Box              | 13. Starter Relay            |                                 |
| 7. Ignition Coil #2 Cylinder | 14. Main Fuse 30A            |                                 |

### Ignition Coil Removal

- Remove the upper fairing (see Frame chapter).
- Pull out the plug caps from the spark plugs.
- Disconnect the ignition coil primary lead connectors.

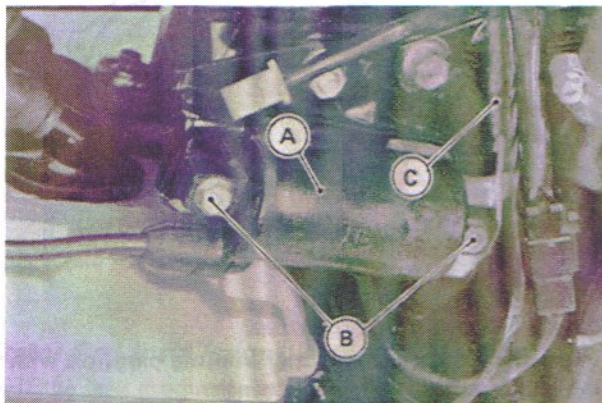


A. Ignition Coil  
 B. Mounting Bolts  
 C. Primary Lead

- Remove the ignition coil mounting nuts and take off the coils.

### Ignition Coil Installation Notes

- Connect the primary leads to the primary coil terminals as follows:  
 Black and red leads → No. 1 ignition coil  
 Green and red leads → No. 2 ignition coil
- The ⊕ and ⊖ markings next to the primary coil terminals on the ignition coil body indicate the polarity of the terminals. The polarity of the two spark plug leads are shown when the primary leads are connected as indicated in the figure.

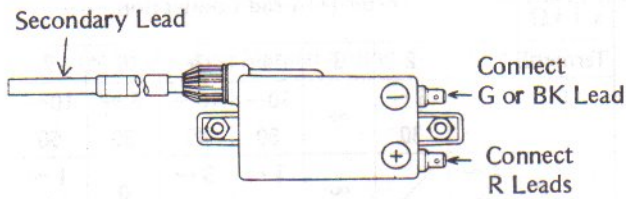**Polarity of Ignition Coil****Pickup Coil Inspection**

- Disconnect the pickup coil connector.
- Zero the hand tester (special tool: 57001-983), and connect it to pickup coil leads.
- ★ If there is more resistance than the specified value, the coil has an open lead and must be replaced. Much less than this resistance means the coil is shorted, and must be replaced.

**Pickup Coil Resistance**

100 – 150 Ω

- Using the highest resistance range of the hand tester, measure the resistance between the pickup coil leads and chassis ground.
- ★ Any meter reading less than infinity ( $\infty$ ) indicates a short, necessitating replacement of the pickup coil assembly.

**Ignition Coil Inspection**

Refer to the Base Manual noting the following.


- Use the coil tester (special tool: 57001-1242) instead of Kawasaki electrotester for ignition coil inspection.

**IC Igniter Removal**

- Remove the left side cover (see Frame chapter in this text).
- Pull the igniter outward evenly as far as it will go.
- Pull the igniter upper side out of the rear fender tongue just enough to clear the tongue, then pull the lower side out.

**CAUTION**

- Pulling either side of the igniter too far out may break the fender tongue, and the rear fender will need to be replaced.

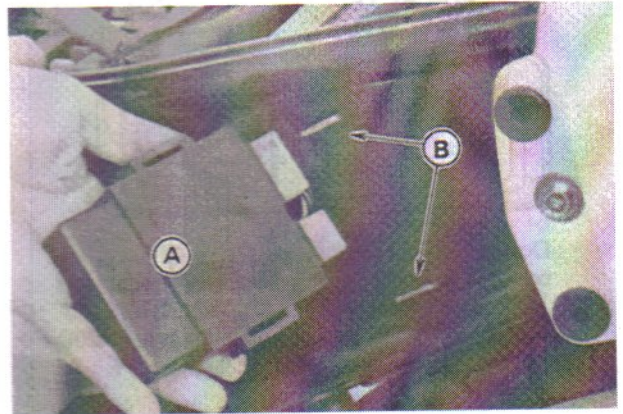

A. Igniter

B. Rear Fender Tongues

- Pull off the connector and remove the igniter.

**IC Igniter Installation Note**

- Installation is the reverse of removal. Note the following.
- Put the igniter lower side halfway into the fender tongue, then push on the upper side.

**CAUTION**

- Forcing either side of the igniter may break the fender tongue, and the rear fender will need to be replaced.




## 15-10 ELECTRICAL SYSTEM

### IC Igniter Inspection

- Refer to p. 15-21 in the Base Manual noting the following.
- Be sure to set the tester to the  $\times 1 \text{ k}\Omega$  range.

Terminal No. of IC Igniter(EX250-F1 ~ F8)

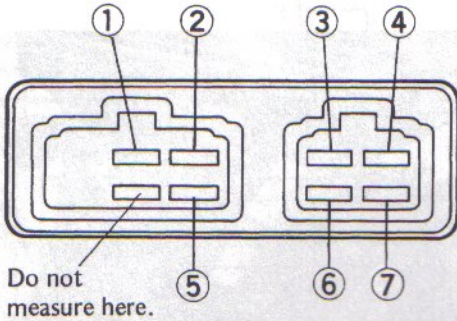

- Refer to page 15-17 for on and after the EX250-F9 model's IC Igniter internal resistance.

### IC Igniter Internal Resistance


unit :  $\text{k}\Omega$

Range $\times 1 \text{ k}\Omega$	Tester (+) Lead Connection							
Terminal	1	2	3	4	5	6	7	
Tester (-) Lead Connection	1	6 ~ 30	$\infty$	10 ~ 50	10 ~ 45	6 ~ 30	10 ~ 50	
	2	4 ~ 20	$\infty$	1 ~ 8	3 ~ 20	0	1 ~ 8	
	3	9 ~ 40	2 ~ 15		6 ~ 30	8 ~ 40	2 ~ 15	6 ~ 30
	4	$\infty$	$\infty$	$\infty$		$\infty$	$\infty$	$\infty$
	5	8 ~ 35	4 ~ 20	$\infty$	7 ~ 35		4 ~ 20	7 ~ 35
	6	4 ~ 20	0	$\infty$	1 ~ 8	3 ~ 20		1 ~ 8
	7	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$	$\infty$

### Electric Starter System

Refer to the Base Manual noting the following.

#### Electric Starter Circuit

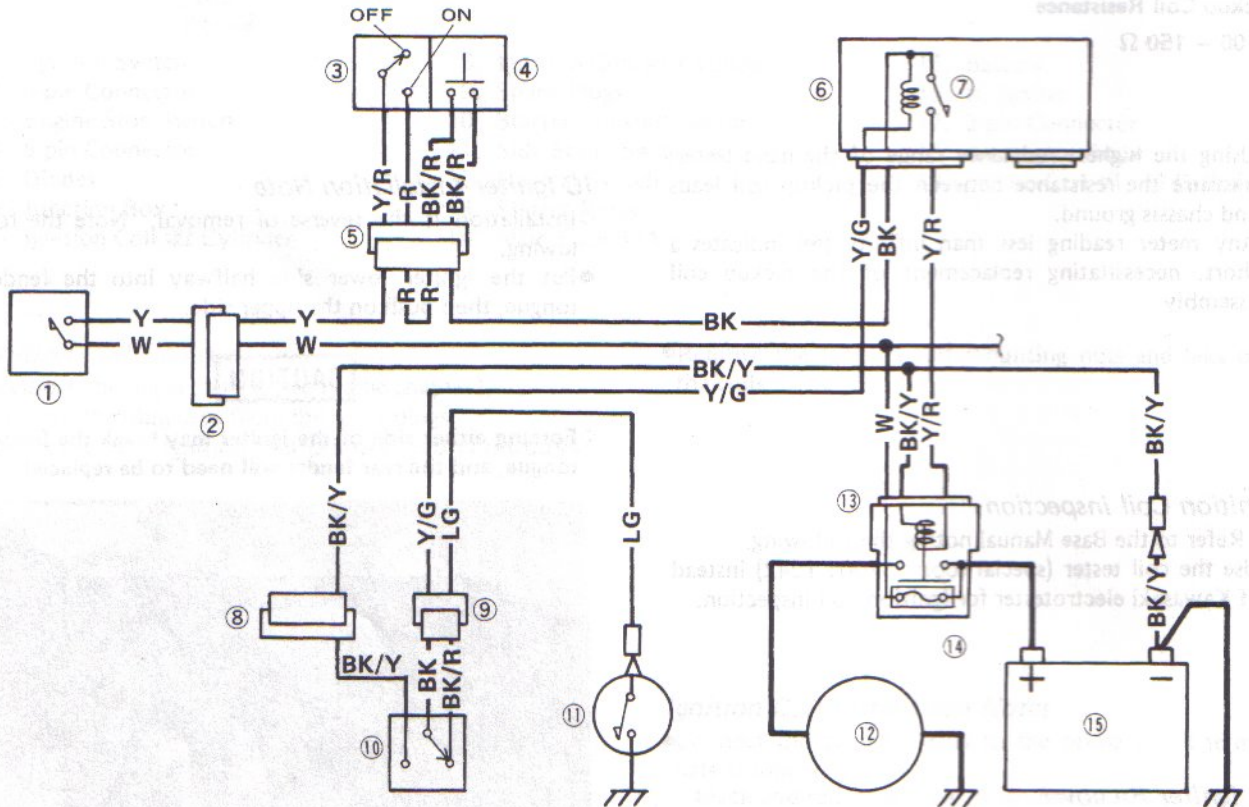

1. Ignition Switch
2. 6-pin Connector
3. Engine Stop Switch
4. Starter Button
5. 4-pin Connector,  
Ⓢ 6-pin Connector

6. Junction Box
7. Starter Circuit Relay
8. 9-pin Connector
9. 2-pin Connector
10. Starter Lockout Switch

11. Neutral Switch
12. Starter Motor
13. Starter Relay
14. Main Fuse 30A
15. Battery

**Lighting System**


Refer to the Base Manual noting the following.

**Headlight Beam Vertical Adjustment**

The headlight beam is adjustable vertically. If adjusted too low, neither low nor high beam will illuminate the road far enough ahead. If adjusted too high, the high beam will fail to illuminate the road close ahead, and the low beam will blind oncoming drivers.


- Put a Phillips screwdriver into the vertical adjuster guide.
- Turn the adjuster on the headlight in or out to adjust the headlight vertically.

**Headlight Beam Adjustment**

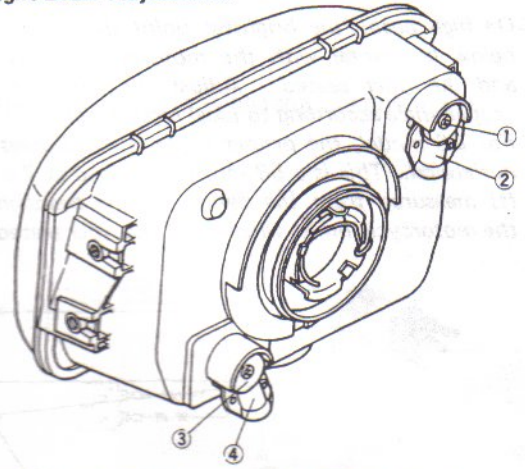

- 1. Horizontal Adjuster
- 2. Adjuster Guide
- 3. Vertical Adjuster
- 4. Adjuster Guide

**Headlight Circuit (US Model)**

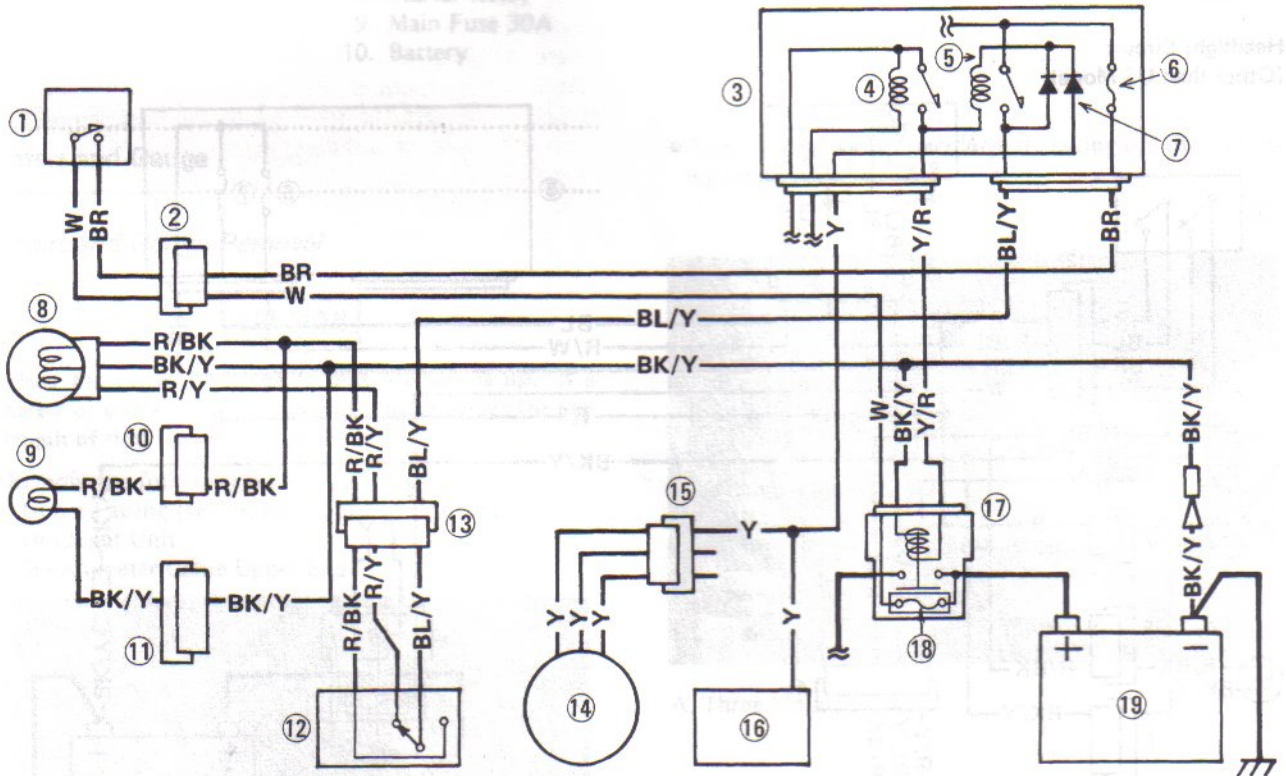


- |                          |                              |                         |
|--------------------------|------------------------------|-------------------------|
| 1. Ignition Switch       | 7. Diodes                    | 14. Alternator          |
| 2. 6-pin Connector       | 8. Headlight                 | 15. 3-pin Connector     |
| 3. Junction Box          | 9. High Beam Indicator Light | 16. Regulator/Rectifier |
| 4. Starter Circuit Relay | 10. 6-pin Connector          | 17. Starter Relay       |
| 5. Headlight Relay       | 11. 6-pin Connector          | 18. Main Fuse 30A       |
| 6. Headlight Fuse 10A    | 12. Dimmer Switch            | 19. Battery             |
|                          | 13. 9-pin Connector          |                         |

## 15-12 ELECTRICAL SYSTEM


### NOTE

- On high beam, the brightest point should be slightly below horizontal with the motorcycle on its wheels and the rider seated. Adjust the headlight to the proper angle according to local regulations.
- For US model, the proper angle is 0.4 degrees below horizontal. This is a 50 mm (2 in) drop at 7.6 m (25 ft) measured from the center of the headlight with the motorcycle on its wheels and the rider seated.

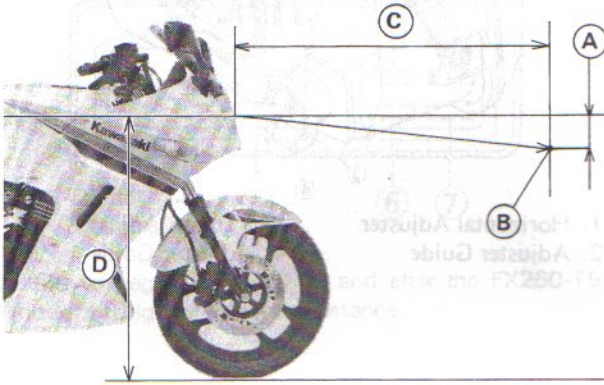

- A. 50 mm (2 in)
- B. Center of Brightest Spot
- C. 7.6 m (25 ft)
- D. Height of Headlight Center

### Headlight Circuit (Other than US Model)

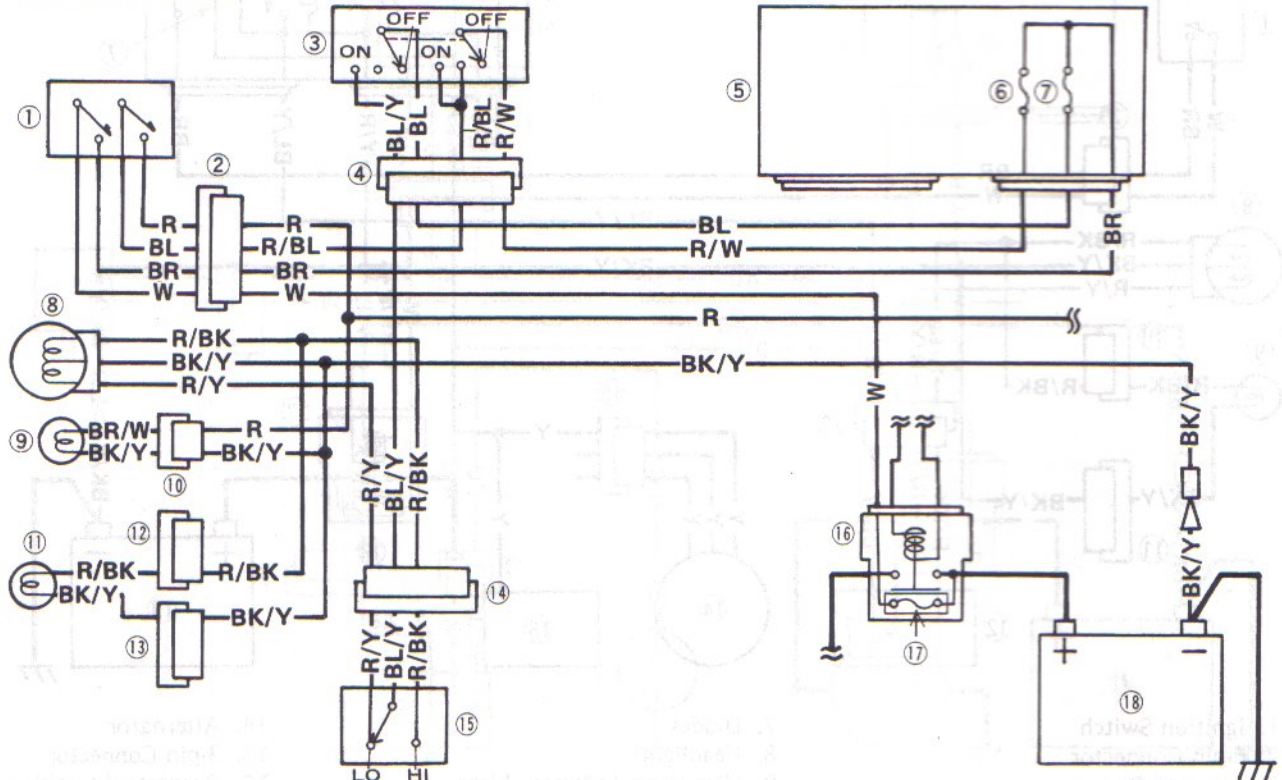


- 1. Ignition Switch
- 2. 6-pin Connector
- 3. Headlight Switch
- 4. 6-pin Connector
- 5. Junction Box
- 6. Taillight Fuse 10A
- 7. Headlight Fuse 10A
- 8. Headlight
- 9. City Light
- 10. 2-pin Connector
- 11. High Beam Indicator Light
- 12. 6-pin Connector

- 13. 4-pin Connector
- 14. 9-pin Connector
- 15. Dimmer Switch
- 16. Starter Relay
- 17. Main Fuse 30A
- 18. Battery

### License Plate Light Bulb Replacement Notes

- Install the bulb lens so that the "TOP" mark on the lens points up.
- Do not overtighten the lens mounting screws.

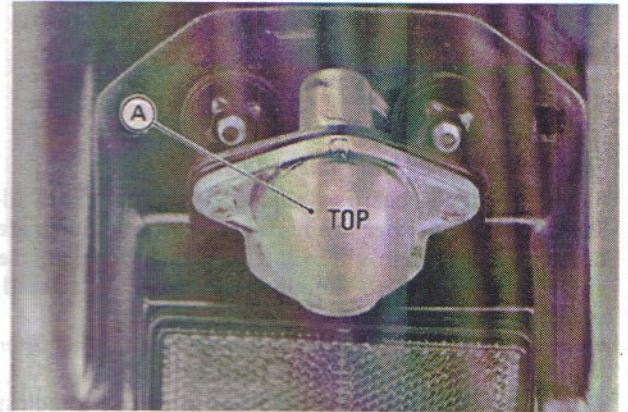

A. "TOP" Mark

### Inspection:

#### Headlight Reserve Lighting System Inspection


- Since the headlight reserve lighting system on the US model is discontinued, omit the inspection.

**Cooling Fan System**

Refer to the Base Manual noting the following.


Frame No. 000001 ~ 004010 and  
004601 ~ 005001

**Cooling Fan Circuit**

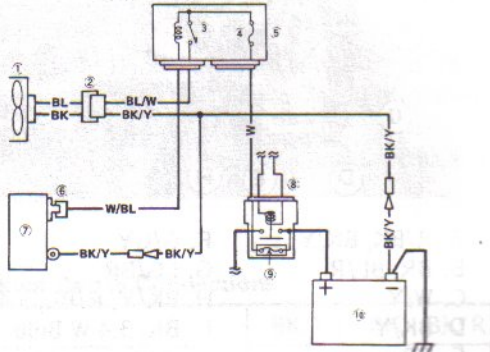

1. Cooling Fan
2. 2-pin Connector
3. Fan Relay
4. Fan Fuse 10A
5. Junction Box
6. Fan Switch
7. Radiator
8. Starter Relay
9. Main Fuse 30A
10. Battery

Frame No. 004011 ~ 004600 and 005002 ~

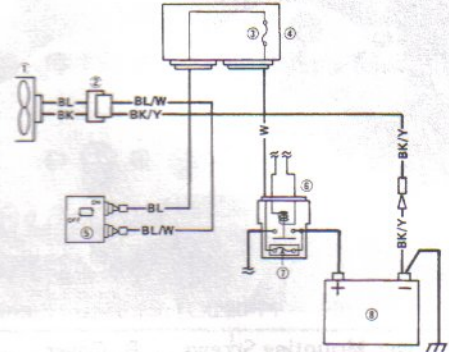

1. Cooling Fan
2. 2-pin Connector
3. Fan Fuse 10A
4. Junction Box
5. Cooling Fan Switch
6. Starter Relay
7. Main Fuse 30A
8. Battery


**Meters and Gauge**

**Meters and Gauge Removal**


**CAUTION**

- Place the meter or gauge so that the face is up. If a meter or gauge is left upside down or sideways for any length of time, it will malfunction.
- Remove the following parts.
  - Upper Fairing (see Frame chapter in this text)
  - Headlight Unit
  - Speedometer Cable Upper End

- Remove the meters and gauge by taking off the mounting nuts.

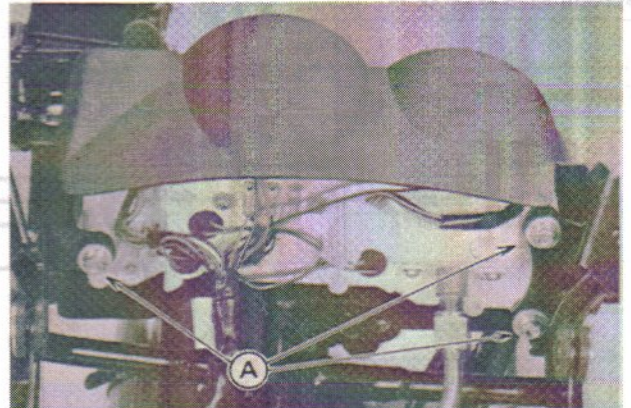

A. Three Mounting Nuts

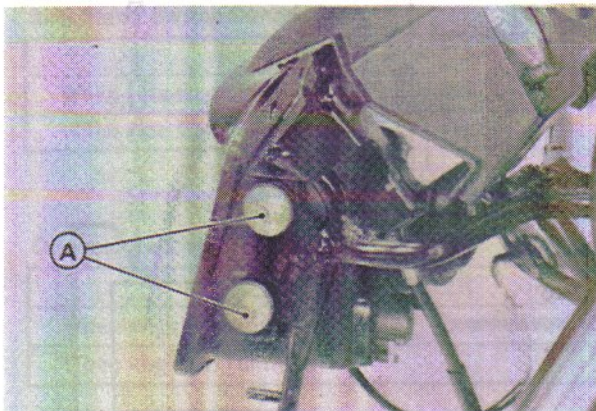


A. Headlight Unit Mounting Bolts


## 15-14 ELECTRICAL SYSTEM

### Meters and Gauge Disassembly

- Remove the cover mounting screws.

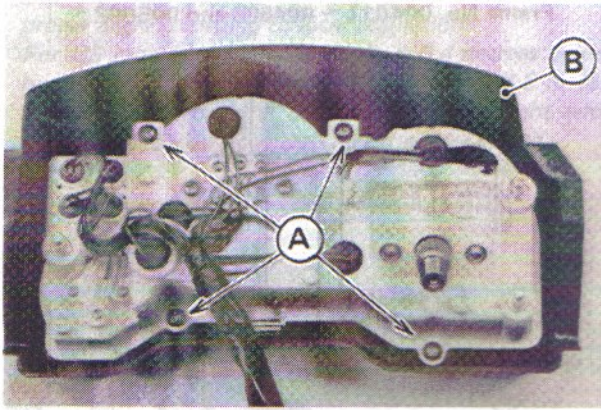

A. Four Cover Mounting Screws B. Cover

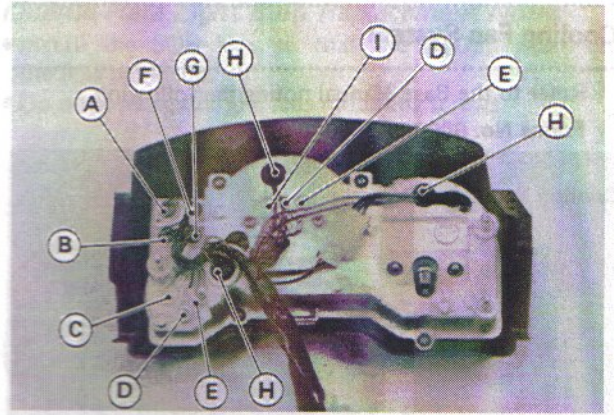

A. R/BK, BK/Y  
B. BR, BL/R  
C. W/Y  
D. BK/Y  
E. BR  
F. G/GY  
G. LG/BR  
H. BK/Y, R/BL, 3.4 W Bulbs  
I. BK, 3.4 W Bulb

- Remove the transparent cover. The rubber knob cap comes off with the cover.
- Separate each meter or gauge by removing the mounting screws and the terminal screws.

### Meter or Gauge Replacement

- Replace the meter or the gauge along with the pointer if necessary.


### Meter and Gauge Assembly Note

- Install each lead on the original position shown.

### Tachometer Inspection

- Check the tachometer circuit wiring (see Tachometer Circuit and Wiring Inspection).
- ★ If all wiring and components other than the tachometer unit check out good, the unit is suspect. Check the unit as shown.
- Turn the ignition switch ON.
- Remove the BK lead of the ignition coil.
- Open or connect the BK lead to the battery positive terminal using an auxiliary lead. Then the pointer should flick.
- Turn the ignition switch OFF.
- ★ If the pointer does not flick, replace the tachometer unit.

### Tachometer Circuit

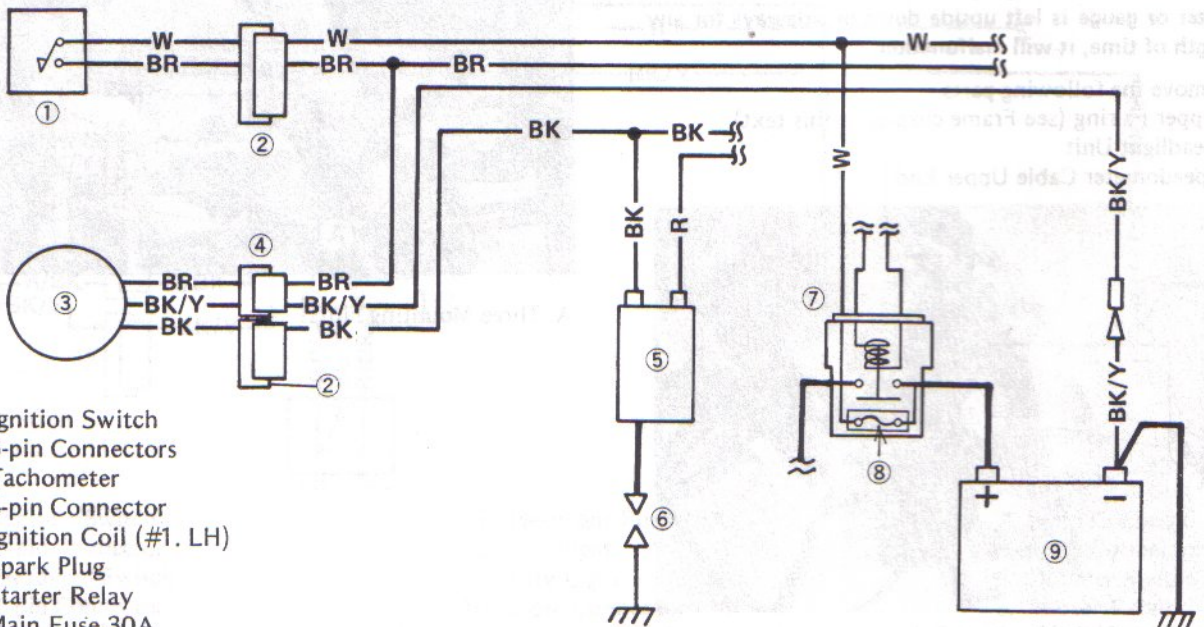

1. Ignition Switch
2. 6-pin Connectors
3. Tachometer
4. 4-pin Connector
5. Ignition Coil (#1. LH)
6. Spark Plug
7. Starter Relay
8. Main Fuse 30A
9. Battery

**Switches and Sensors**

○Refer to the Base Manual noting the following.

**Switch Inspection**

- Using the Kawasaki Hand Tester (special tool: 57001-983), check to see that only the connections shown have continuity (about zero ohms).
- ★If the switch has an open or short, repair it or replace it with a new one.

**Starter Lockout Switch Connections**

	BK/Y	BK	BK/R
When clutch lever is pulled in			
When clutch lever is released			

**Starter Button Connections**

	BK/R	BK/R
Free		
Push on		

**Dimmer Switch Connections**

	R/BK	BL/Y	R/Y
HI			
LO			

**Front Brake Light Switch Connections**

	BK	BK
When brake lever is pulled in		

**Side Stand Switch Connections**

	G/W	BK/Y
When side stand is up		
When side stand is down		

**Oil Pressure Switch Connections\***

	BL/R	
When engine is stopped		
When engine is running		

\*: Engine lubrication system is in good condition.

**Junction Box**

Refer to the Base Manual noting the following.

**Fuse Installation Notes**

- The main 30A fuse is installed on the top of the starter relay.

**Junction Box Fuse Circuit Inspection**

Refer to the Base Manual noting the following.

**Fuse Circuit Inspection (EX250-F1 ~ F8)**

Tester Connection	Tester Reading (Ω)
1 - 2	0
1 - 3 A/B	0
6 - 7	0
6 - 17	0
1 - 7	∞
8 - 17	∞

**Fuse Circuit Inspection (On and after EX250-F9)**

Tester Connection	Tester Reading (Ω)
1 - 2	0
1 - 3B	0
3A - 4	0
5 - 6	0
6 - 7	0
6 - 10	0
6 - 17	0
1 - 4	∞
1 - 5	∞
3A - 10	∞
8 - 17	∞

## 15-16 ELECTRICAL SYSTEM

### Headlight and Starter Circuit Relay Circuit Inspection

- Remove the junction box.
- Check conductivity of the following numbered terminal by connecting the hand tester and one 12 V battery to the junction box as shown.
- ★ If the relay does not work as specified, replace the junction box.

#### Special Tool -

Hand Tester (V.O.M): 57001-983

#### Relay Circuit Inspection (With the battery disconnected)

	Meter Connection	Meter Reading ( $\Omega$ )
Fan	2 - 5	$\infty$
Relay	4 - 5	$\infty$
Headlight	7 - 8	$\infty$
Relay	7 - 13	$\infty$
Starter	11 - 13	$\infty$
Relay	12 - 13	$\infty$

#### Relay Circuit Inspection (with the battery connected)

	Meter Connection	Battery Connection + -	Meter Reading ( $\Omega$ )
Fan	2 - 5	2 - 4	0
Headlight	7 - 8	9 - 13	0
starter	11 - 13	11 - 12	0

#### Diode Circuit Inspection

- Remove the junction box.
- Check conductivity of the following pair of terminals.

#### Diode Circuit Inspection

Tester Connection	11-12, *13-8, *13-9, 12-14, 15-14, 16-14
-------------------	---


(\*): U.S. and Canadian Models only

- ★ The resistance should be low in one direction and more than ten times as much in the other direction. If any diode shows low or high in both directions, the diode is defective and the junction box must be replaced.


#### NOTE

- The actual meter reading varies with the meter used and the individual diodes, but, generally speaking, the lower reading should be from zero to one half the scale.

#### Junction Box Internal Circuit (EX250-F1 ~ F8)

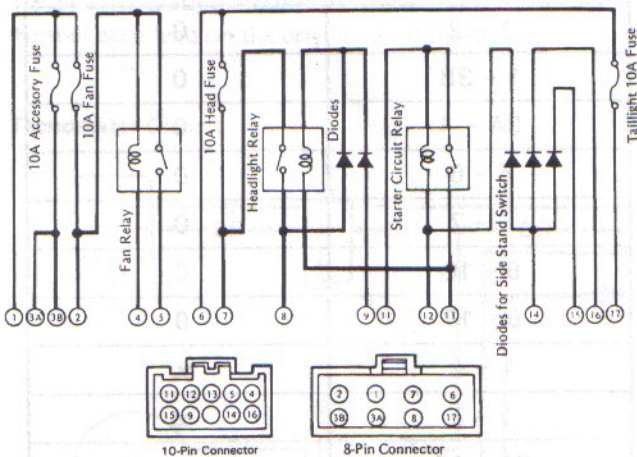

#### (On and after EX250-F9)

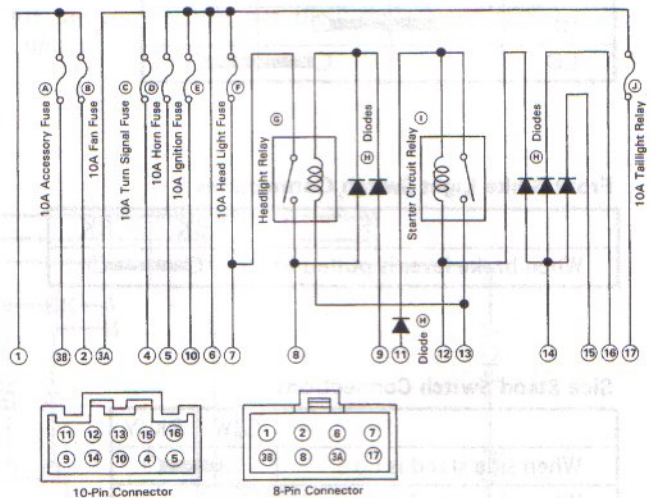

Terminal Application Chart (EX250-F1 ~ F8)


	Model	1	3A	3B	2	4	5	6	7	8	9	11	12	13	14	15	16	17
US, Canada Models	F/No. 000001 to 004010, 004601 to 005001	x	x	x	NA	x	x	x	x	x	x	x	x	x	x	x	x	x
	F/No. 005002 to 044000	x	x	x	NA	NA	NA	x	x	x	NA	NA	x	x	x	x	x	x
General Models	F/No. 004011 to 004600 and 005002 to 044000	x	x	x	x	NA	NA	x	x	x	x	x	x	x	x	x	x	x
	EX250-F6 ~ F8 Australia Model	x	NA	NA	x	NA	NA	x	x	x	x	x	x	x	x	x	x	x

NOTE: x : Apply  
NA : Not Apply


Terminal Application Chart (On and after EX250-F9)

	1	2	3A	3B	4	5	6	7	8	9	10	11	12	13	14	15	16	17
U.S. Canada and Australia Models	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x	x
U.K. Model	x	x	x	x	x	x	x	x	NA	NA	x	x	x	x	x	x	x	x

Terminal No. of IC Igniter (On and after EX250-F9)

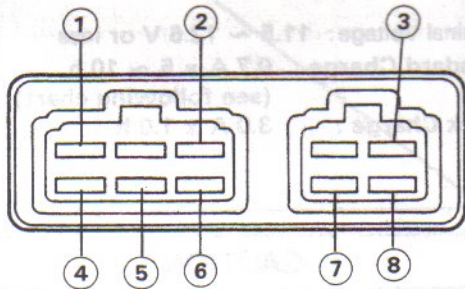

○ Refer to page 15-10 for the EX250-F1 ~ F8 IC Igniter internal resistance.

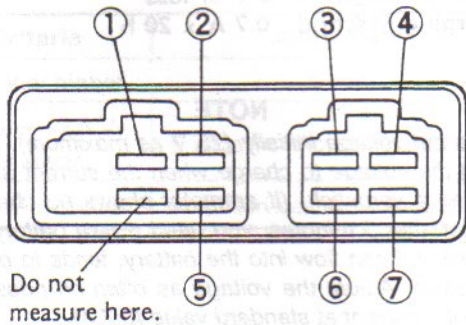

IC Igniter Internal Resistance (On and after EX250-F9)

Unit : kΩ

Range x 1 kΩ	Tester (+) Lead Connection								
	Terminal	1	2	3	4	5	6	7	8
Tester (-) Lead Connection	1	∞	∞	∞	∞	∞	∞	∞	∞
	2	6.6~ 27	∞	2.8~ 12	6.6~ 27	9~ 36	2.8~ 12	3.1~ 13	10~ 40
	3	1.7~ 7	40~ 160	∞	1.7~ 7	4.1~ 16	0	0.2~ 0.8	4.2~ 17
	4	∞	∞	∞	∞	∞	∞	∞	∞
	5	7.5~ 30	45~ 180	4.2~ 17	7.5~ 30	∞	4.2~ 17	4.5~ 18	8.5~ 34
	6	1.7~ 7	40~ 160	0	1.7~ 7	4.1~ 16	∞	0.2~ 0.8	4.2~ 17
	7	2~ 8.1	40~ 160	0.2~ 0.8	2~ 8.1	4.2~ 17	0.2~ 0.8	∞	4.2~ 17
	8	12~ 48	50~ 200	6.3~ 27	12~ 48	10~ 42	6.3~ 27	7~ 28	∞

(-)\* : Tester (-) Lead Connection

## 15-18 ELECTRICAL SYSTEM

### Battery

#### Sealed Battery

A sealed battery is installed on and after EX250-F9 model. The sealed battery is a sealed type, and so cannot be performed the electrolyte level check and topping-up. For the battery information of the EX250-F1 ~ F8, refer to Electrical System of the base Service Manual.

#### Charging Condition Inspection

Battery charging condition can be checked by measuring battery terminal voltage.

- Remove:
  - Seat
  - IC Igniter
  - Diode
- Disconnect the battery terminal leads.

#### CAUTION

Be sure to disconnect the negative terminal lead first.

- Measure the battery terminal voltage.


#### NOTE

- Measure with a digital voltmeter which can be read one decimal place voltage.

★ If the reading is below the specified, refreshing charge is required.

#### Battery Terminal Voltage

Standard: 12.6 V or more

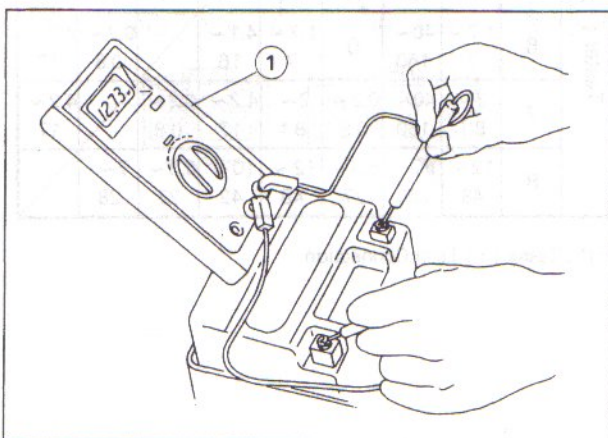


1. Digital Voltmeter

#### Refreshing Charge

- Remove the battery.
- Refresh-charge by following method according to the battery terminal voltage.

#### CAUTION

This battery is sealed type. Never remove sealing caps even at charging. Never add water. Charge with current and time as stated below.

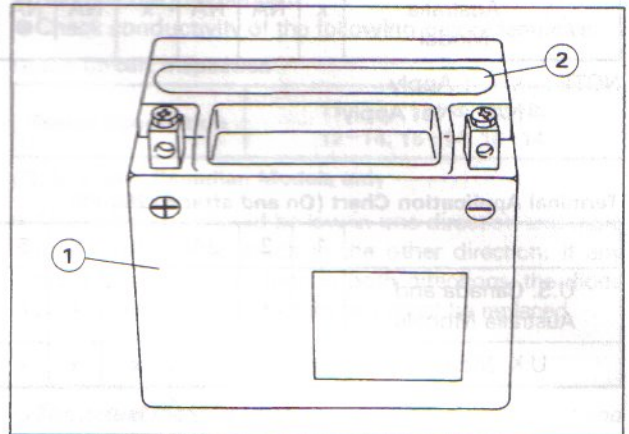

1. Battery 2. Sealing Cap

- Terminal Voltage : 11.5 ~ 12.6 V or less
- Standard Charge : 0.7 A × 5 ~ 10 h  
(see following chart)
- Quick Charge : 3.0 A × 1.0 h


#### CAUTION

If possible, do not quick charge. If the quick charge is done due to unavoidable circumstances, do standard charge later on.

- Terminal Voltage : 11.5 V or less
- Charging Method : 0.7 A × 20 h


#### NOTE

- Raise the voltage initially (25 V as maximum), and let down the voltage to charge when the current starts to flow as a yardstick. (If ammeter shows no change in current after 5 minutes, you need a new battery.) The current, if it can flow into the battery, tends to become excessive. Adjust the voltage as often as possible to keep the current at standard value (0.7 A).

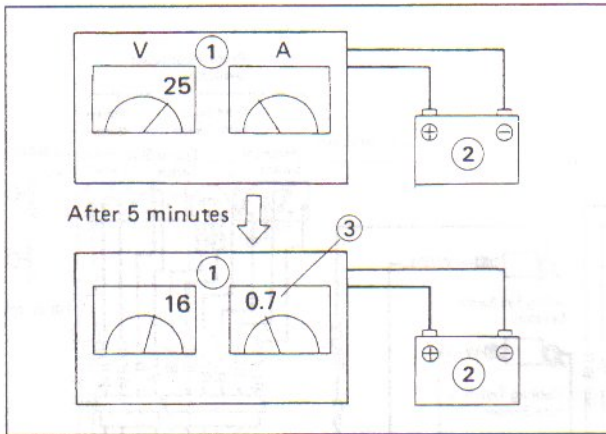

- 1. Battery Charger
- 2. Battery
- 3. Standard Value: 0.7 A


**Battery Standard Charge Time Chart**  
**(0.7 A x 5 ~ 10 h Regular Current Charge)**  
 - For Reference

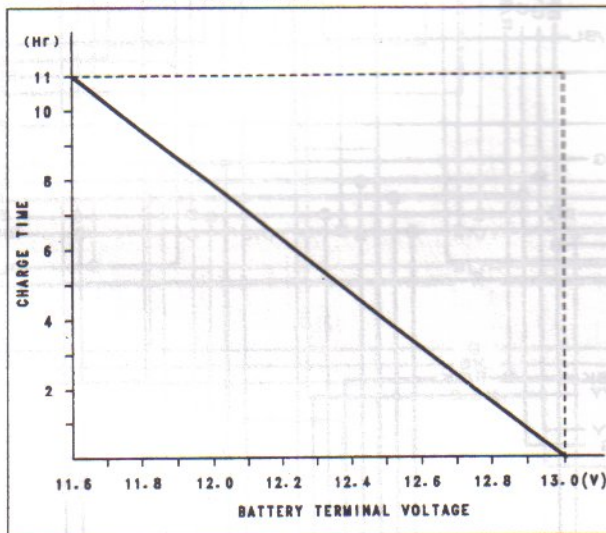

- Determine battery condition after refreshing charge.
- Determine the condition of the battery 30 minutes after completion of the charge by measuring the terminal voltage according to the table below.


Criteria	Judgement
12.6 V or higher	Good
12.0 ~ 12.6 V or lower	Charge insufficient → Recharge.
12.0 V or lower	Unserviceable → Replace.

**EX250-F2 ~ F8 Wiring Diagram**  
**F2: Australia model**  
**F2 ~ F8: Europe models**

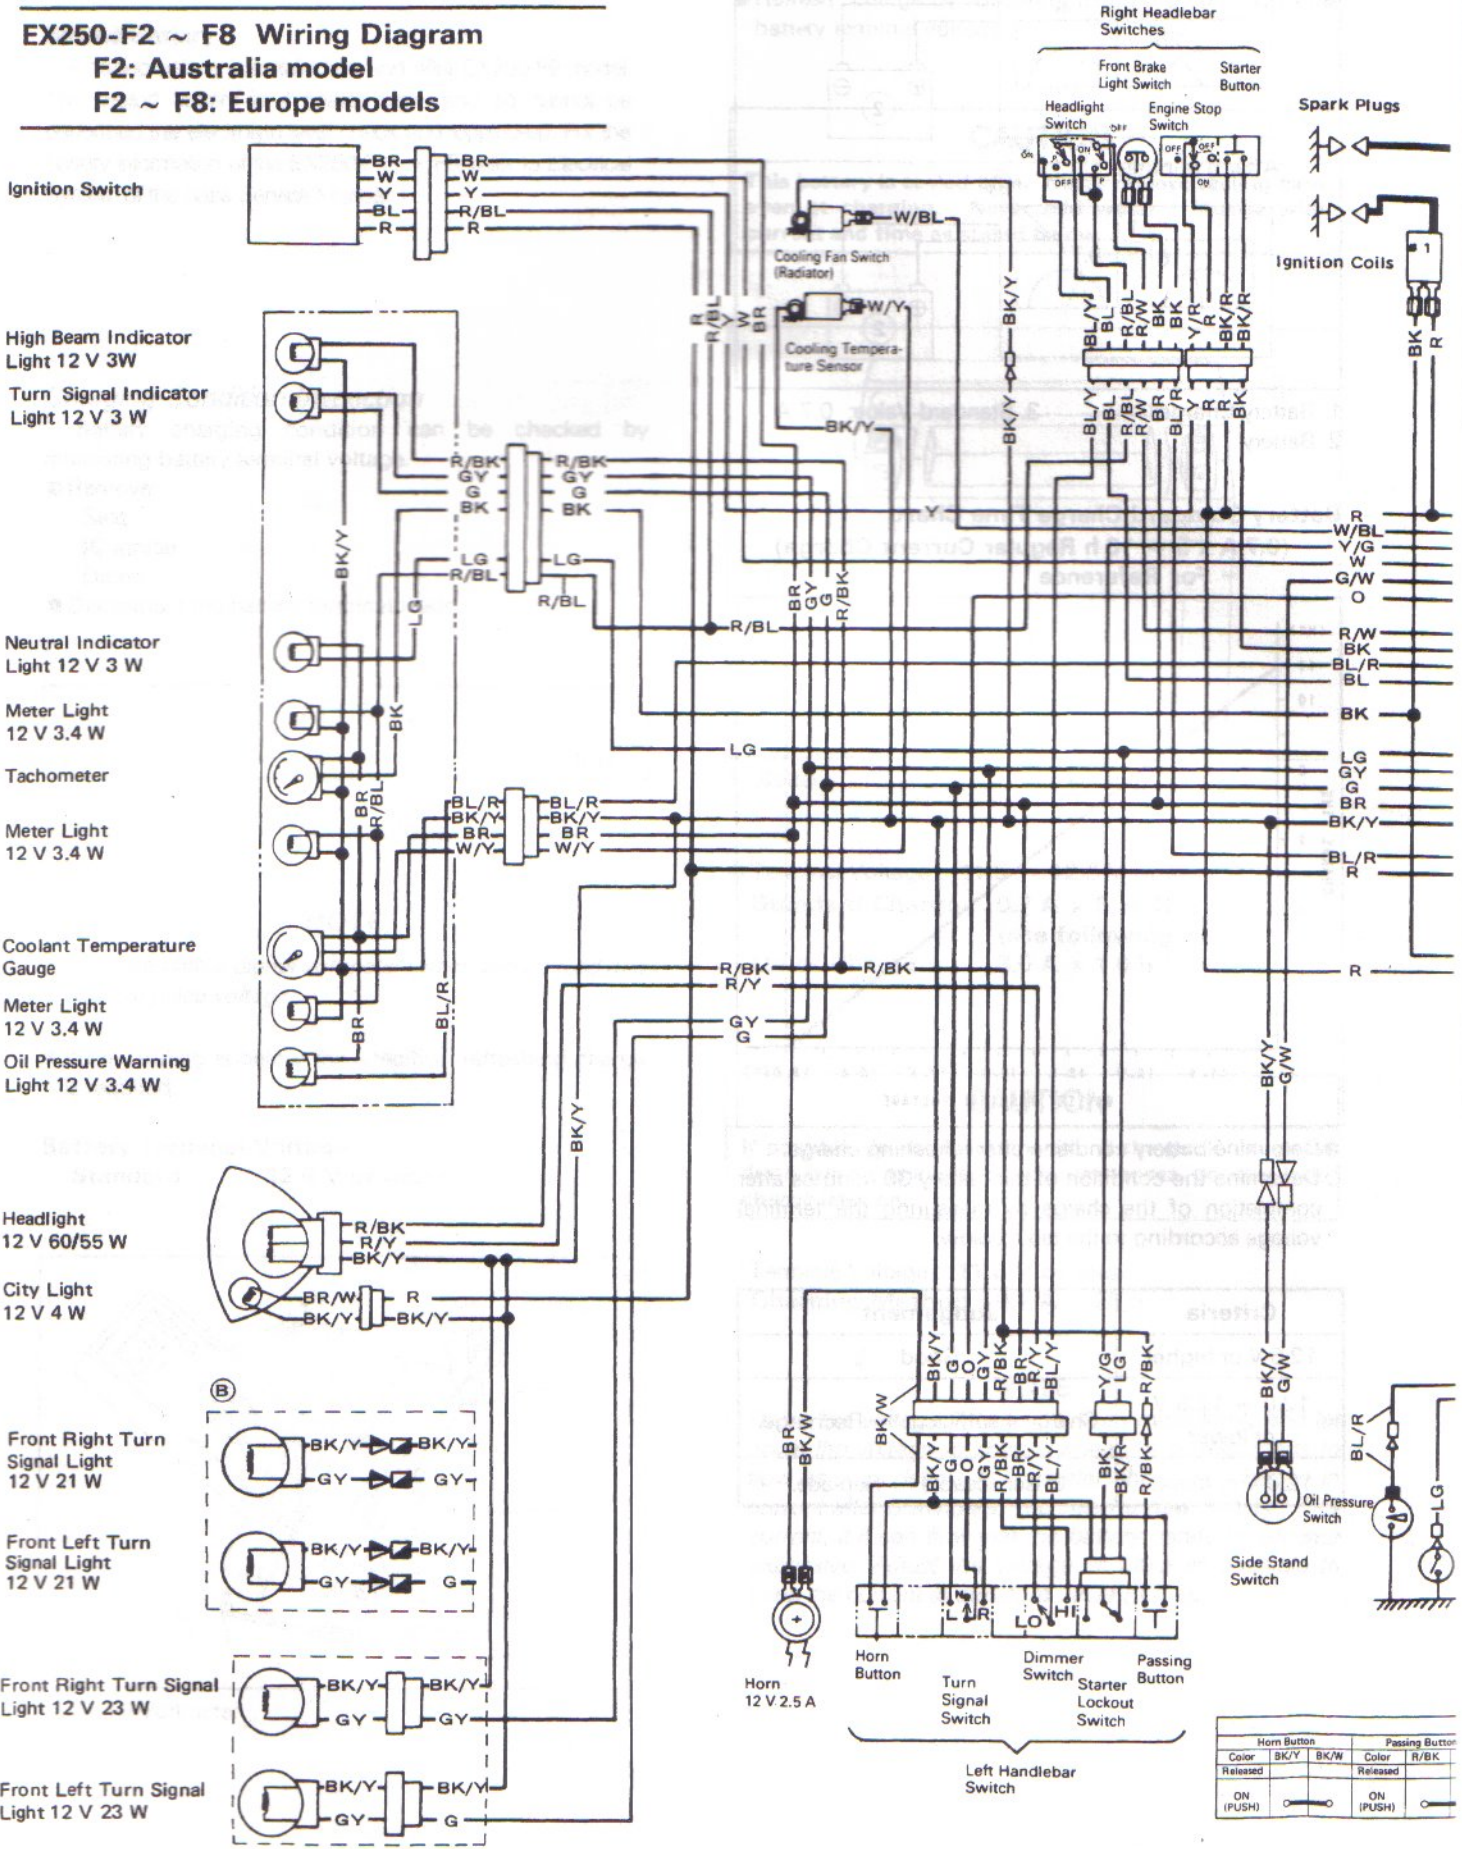

Horn Button		Passing Button	
Color	Released	Color	Released
BK/Y	BK/W	R/BK	R/BK
ON (PUSH)	ON (PUSH)	ON (PUSH)	ON (PUSH)

Ⓑ: UK model

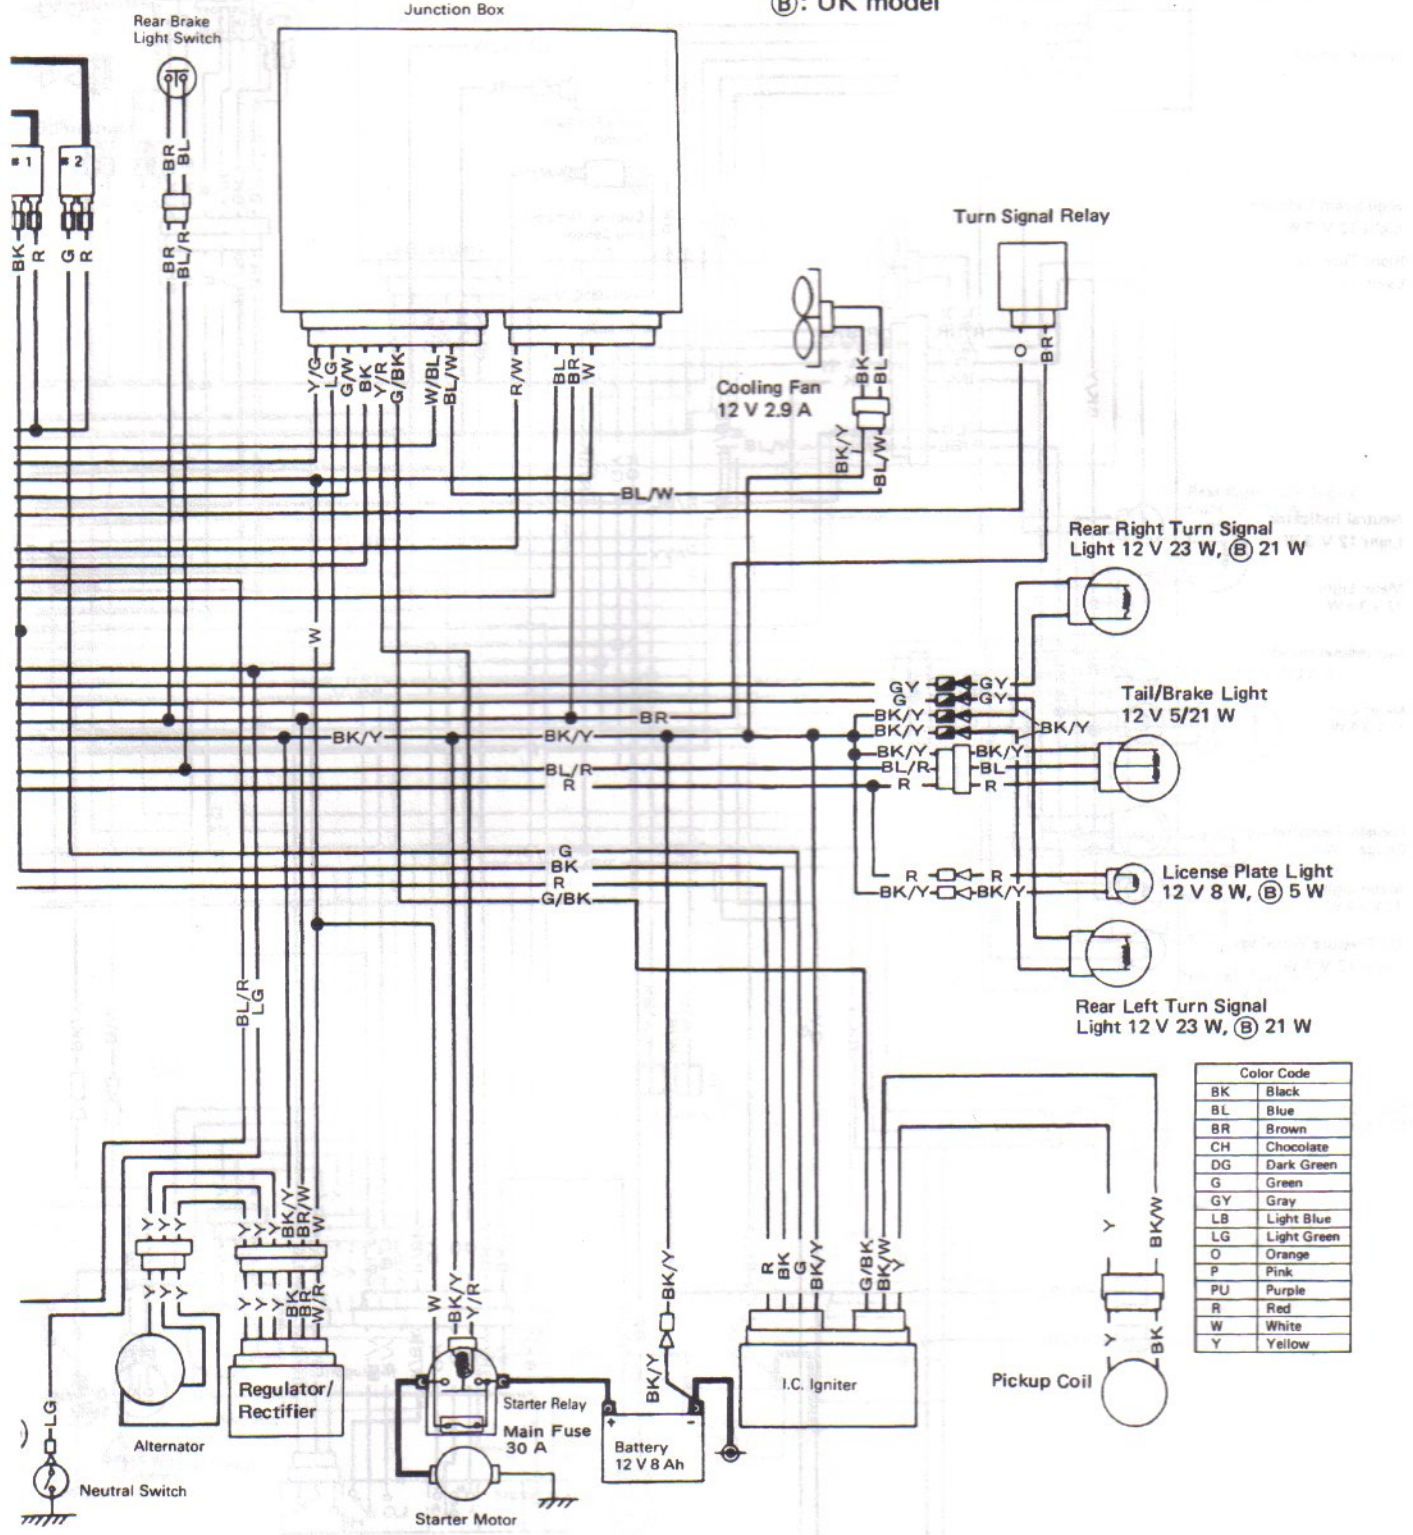

Color Code	
BK	Black
BL	Blue
BR	Brown
CH	Chocolate
DG	Dark Green
G	Green
GY	Gray
LB	Light Blue
LG	Light Green
O	Orange
P	Pink
PU	Purple
R	Red
W	White
Y	Yellow


LEFT HANDLEBAR SWITCH CONNECTIONS			
ing Button	Turn Signal Switch	Dimmer Switch	Starter Lockout Switch
R/BK	BR	Color	R/BK BL/Y R/Y
	Color	HI	Color
	R	LO	Released
	N		PULL
	L		

IGNITION SWITCH CONNECTIONS				
Color	Ignition	Battery	Ignition	Tail 1 Tail 2
Color	BR	W	Y	BL R
OFF. LOCK				
ON				
P (PARK)				


RIGHT HANDLEBAR SWITCH CONNECTIONS				
Engine Stop Switch	Starter Button	Headlight Switch		
Color	Color	Color	R/W	R/BL BL/Y
Y/R R	BK/R BK/R	Color		
OFF	PUSH	OFF		
RUN	Released	ON		

# 15-22 ELECTRICAL SYSTEM

## EX250-F2 ~ F8 Wiring Diagram (US and Canada models)

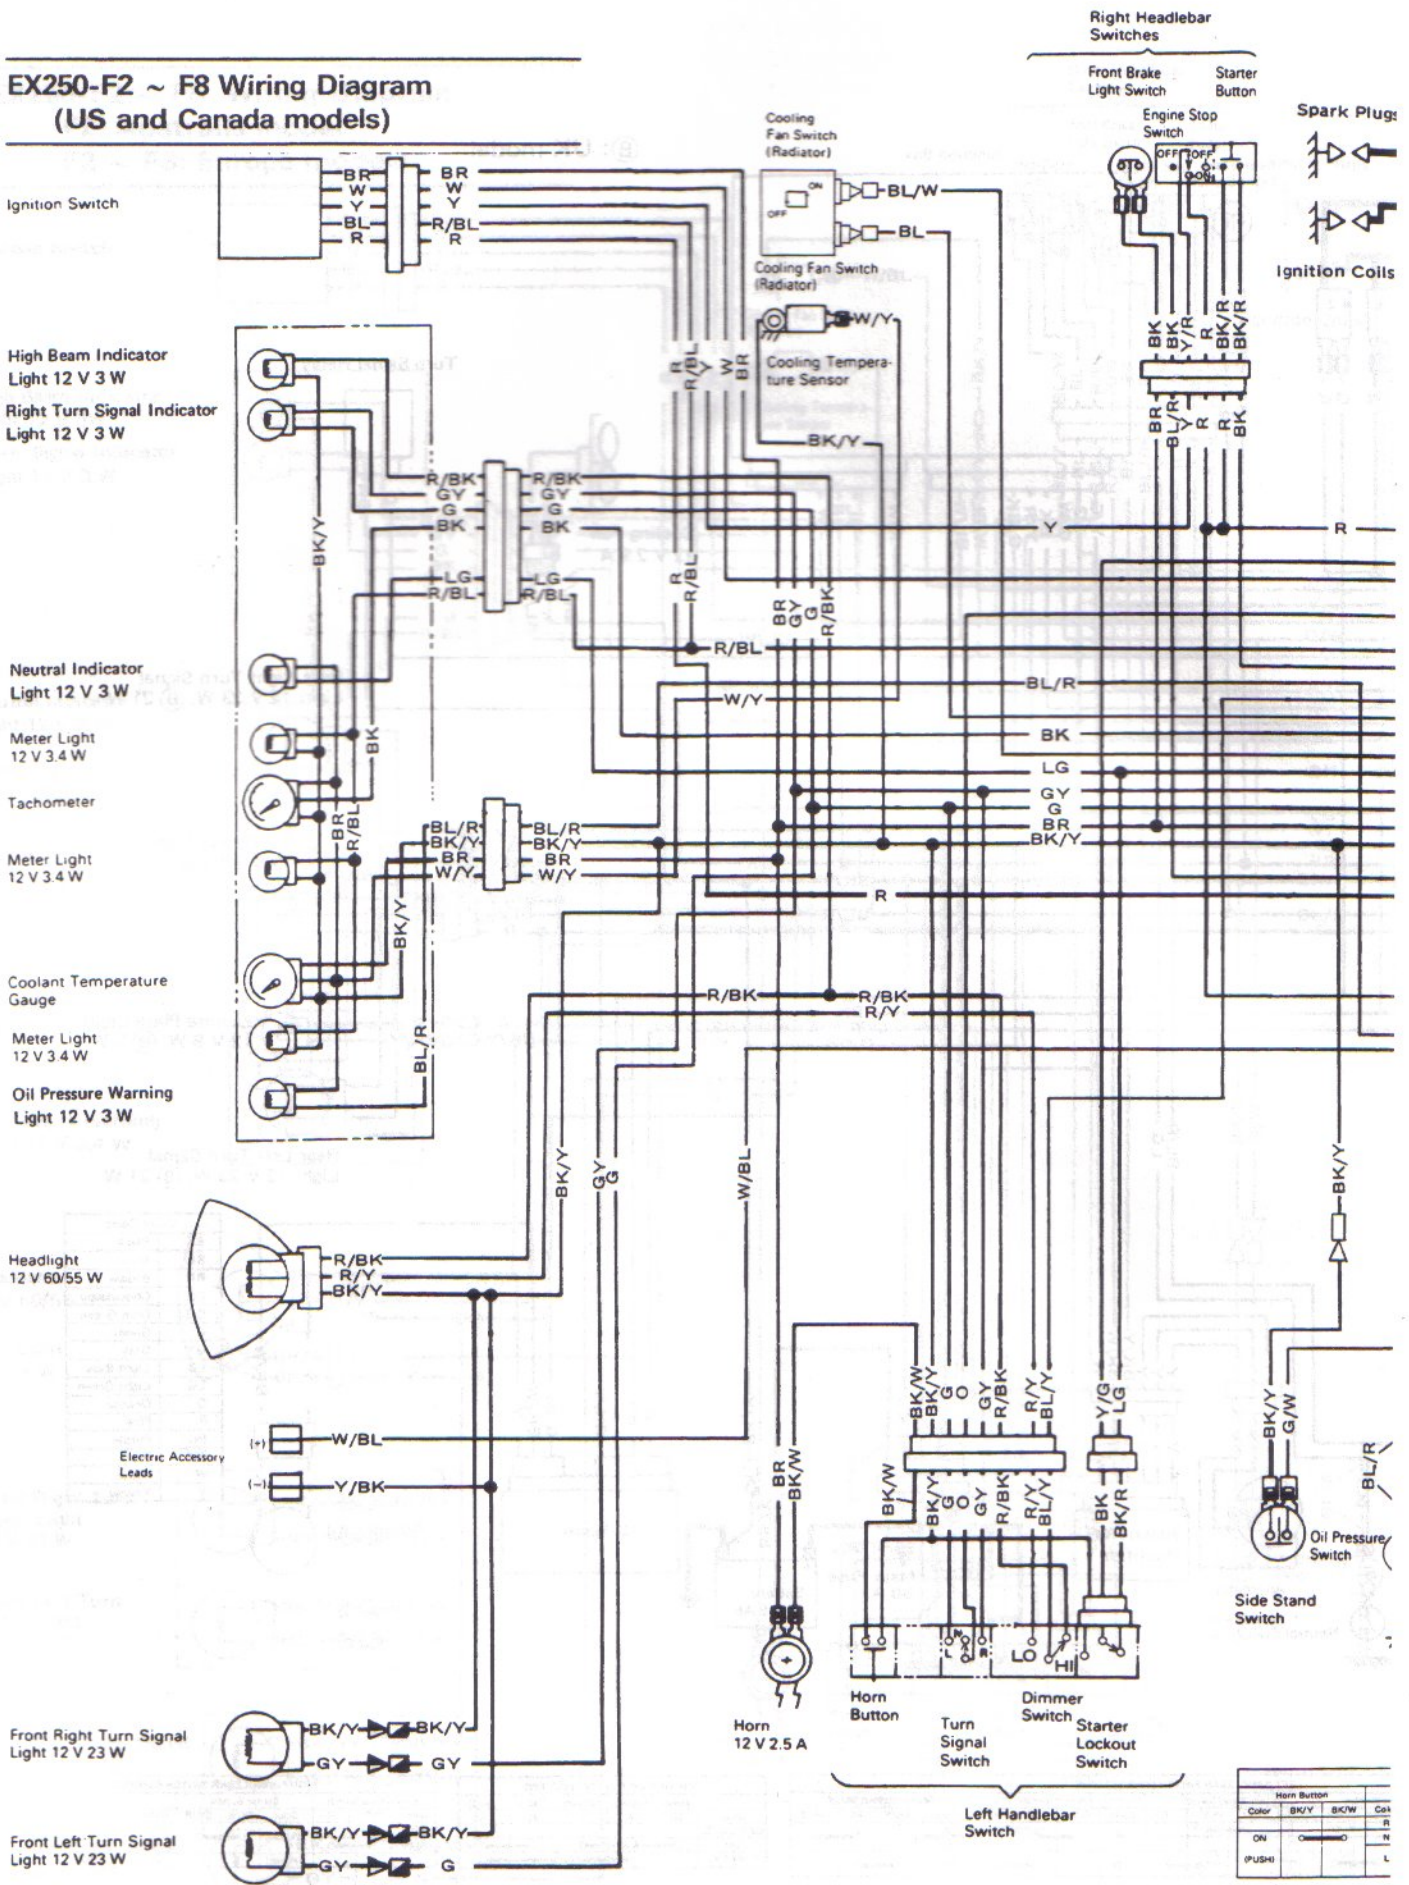

Horn Button			
Color	BK/Y	BK/W	Col
ON	<input type="checkbox"/>	<input type="checkbox"/>	R
(PUSH)	<input type="checkbox"/>	<input type="checkbox"/>	L

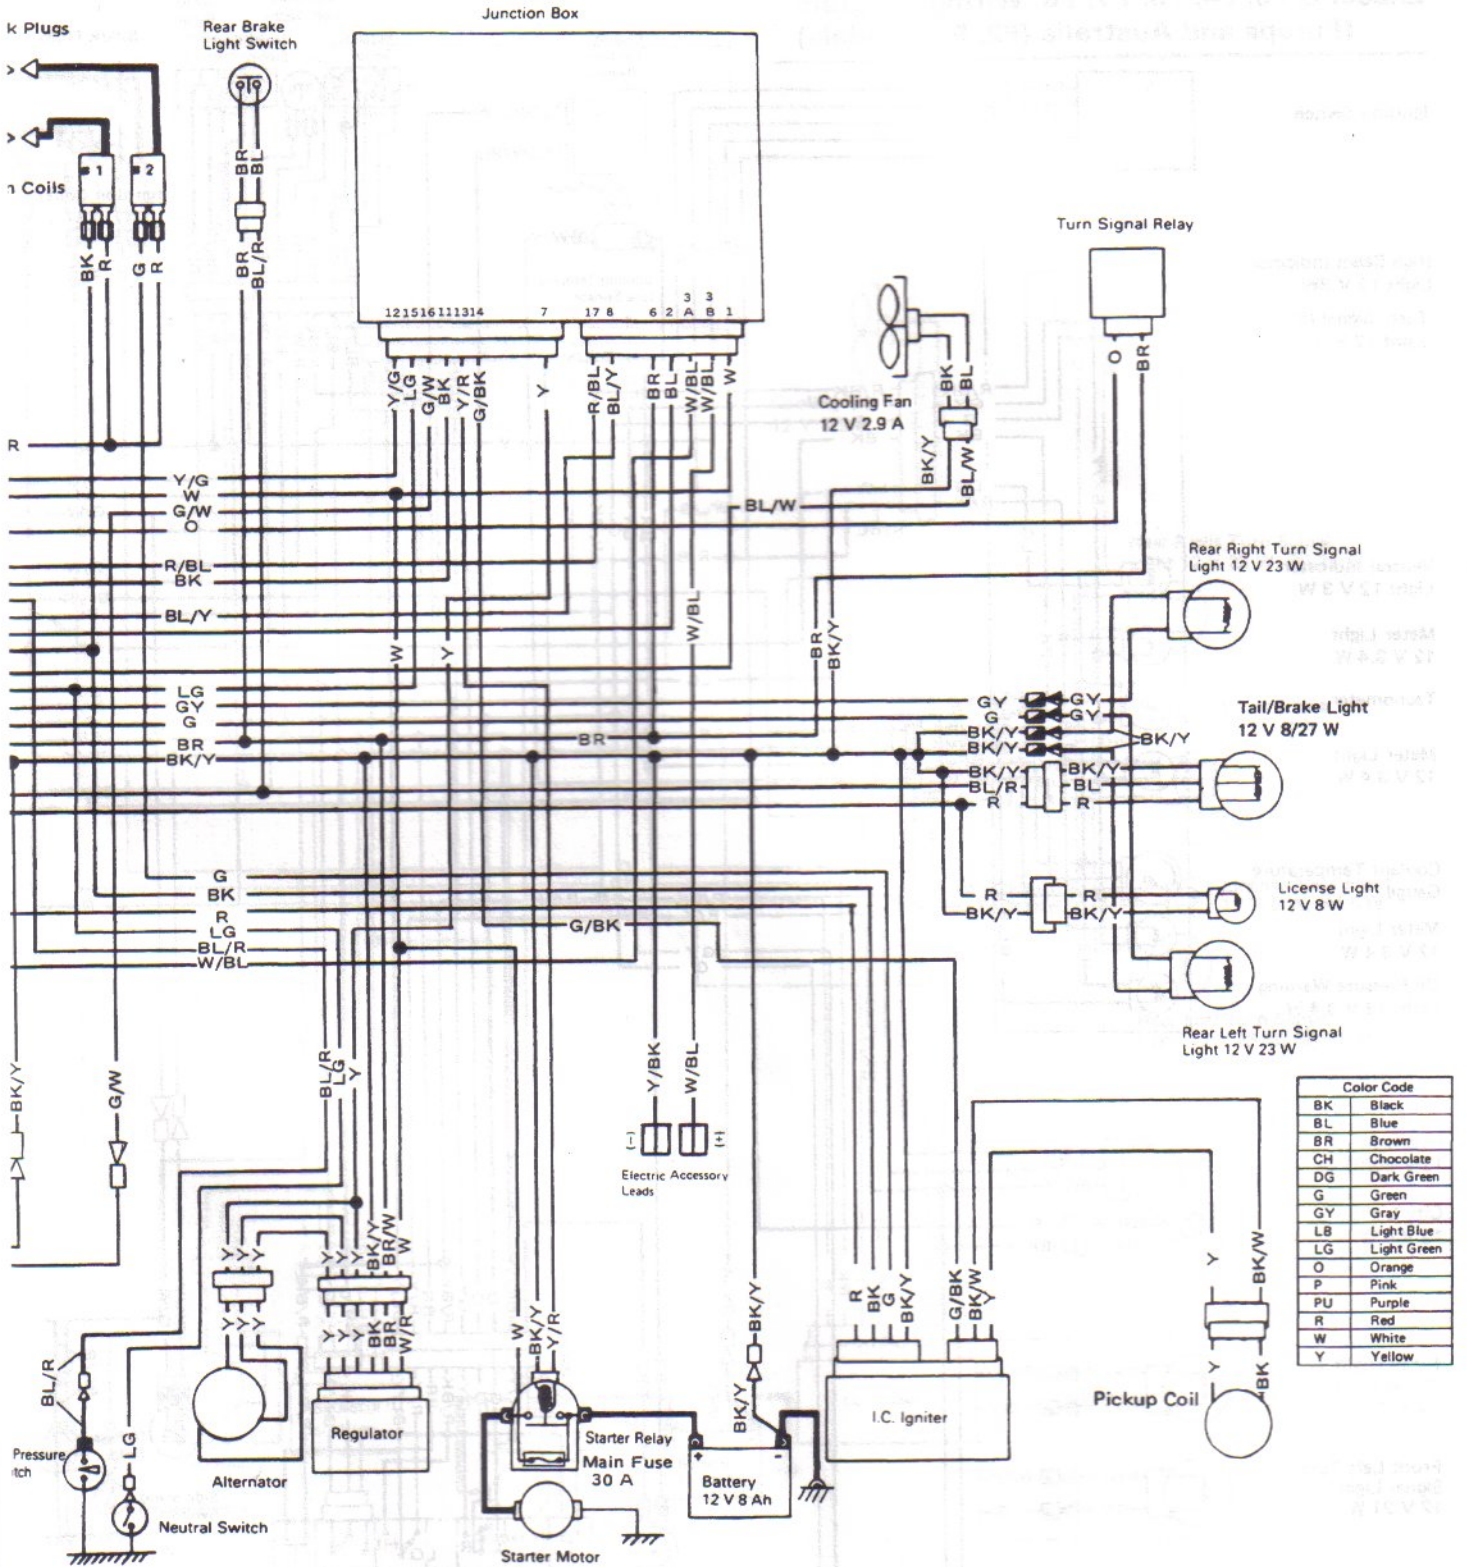

**LEFT HANDLEBAR SWITCH CONNECTIONS**

Turn Signal Switch	Dimmer Switch	Starter Lockout Switch
Color: BK/W, R	Color: HI	Color: BK/Y, BK, BK/R
Color: GY, G	Color: R/BK, BL/Y, R/Y	Color: BK/Y, BK, BK/R
Color: N	Color: LO	Color: Released, Pulled In
Color: L		

**IGNITION SWITCH CONNECTIONS**


Color	Ignition	Battery	Ignition	Tail 1	Tail 2
Color: OFF, LOCK	Color: BR	Color: W	Color: Y	Color: BL	Color: R
Color: ON					
Color: P (PARK)					

**RIGHT HANDLEBAR SWITCH CONNECTION**

Engine Stop Switch	Starter Button
Color: Y/R, R	Color: BK/R, BK/R
Color: OFF	Color: Push
Color: RUN	Color: Push



ⓑ: UK model

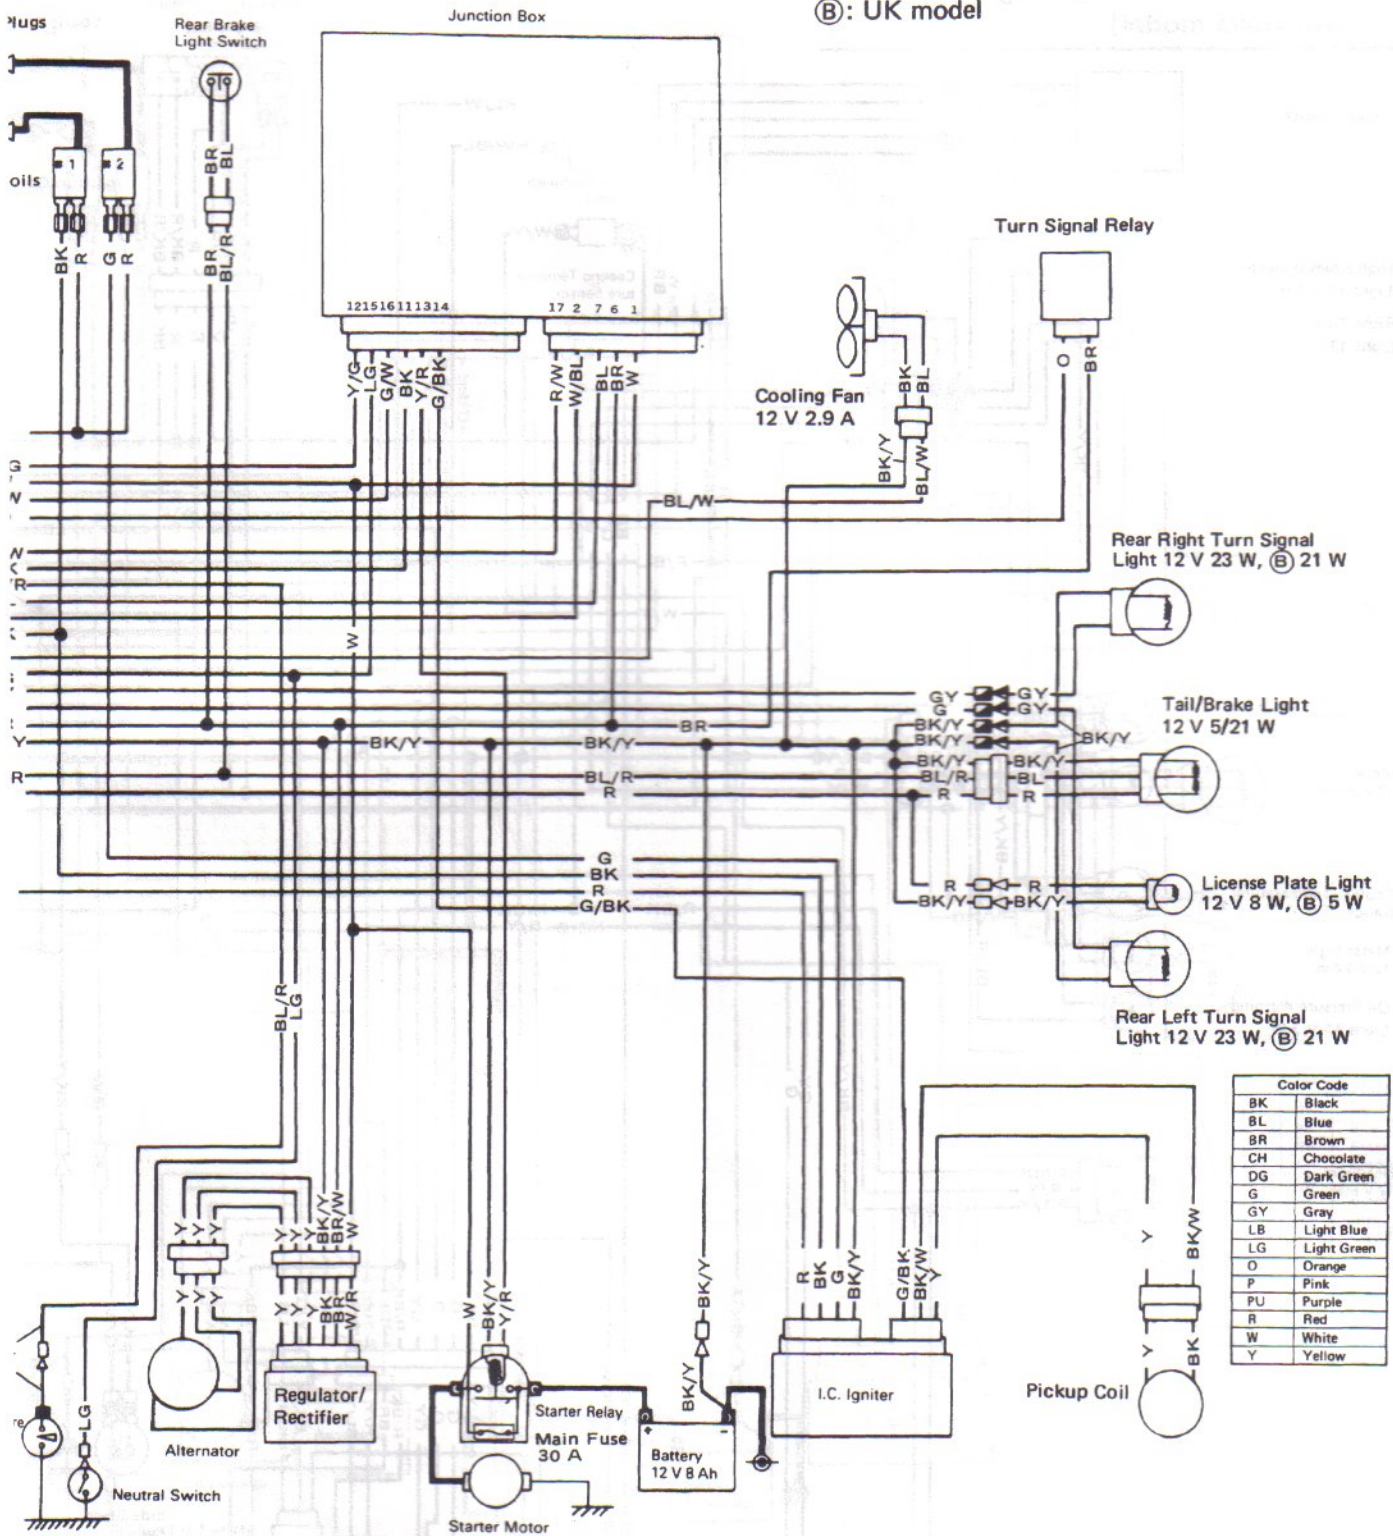


Color Code	
BK	Black
BL	Blue
BR	Brown
CH	Chocolate
DG	Dark Green
G	Green
GY	Gray
LB	Light Blue
LG	Light Green
O	Orange
P	Pink
PU	Purple
R	Red
W	White
Y	Yellow

LEFT HANDLEBAR SWITCH CONNECTIONS											
Turn Signal Switch		Dimmer Switch		Starter Lockout Switch							
Color	GY	O	G	Color	R/BK	BL/Y	R/Y	Color	BK/Y	BK	BK/R
R	○	○	○	HI	○	○	○	Released	○	○	○
N	○	○	○	LO	○	○	○	PULL	○	○	○
L	○	○	○		○	○	○		○	○	○

IGNITION SWITCH CONNECTIONS					
Color	Ignition	Battery	Ignition	Tail 1	Tail 2
Color	BR	W	Y	BL	R
OFF, LOCK	○	○	○	○	○
ON	○	○	○	○	○
P (PARK)	○	○	○	○	○

RIGHT HANDLEBAR SWITCH CONNECTIONS										
Engine Stop Switch		Starter Button		Headlight Switch						
Color	Y/R	R	Color	BK/R	BK/R	Color	R/W	R/BL	BL	BL/Y
OFF	○	○	PUSH	○	○	OFF	○	○	○	○
RUN	○	○	Released	○	○	ON	○	○	○	○
P (PARK)	○	○		○	○		○	○	○	○



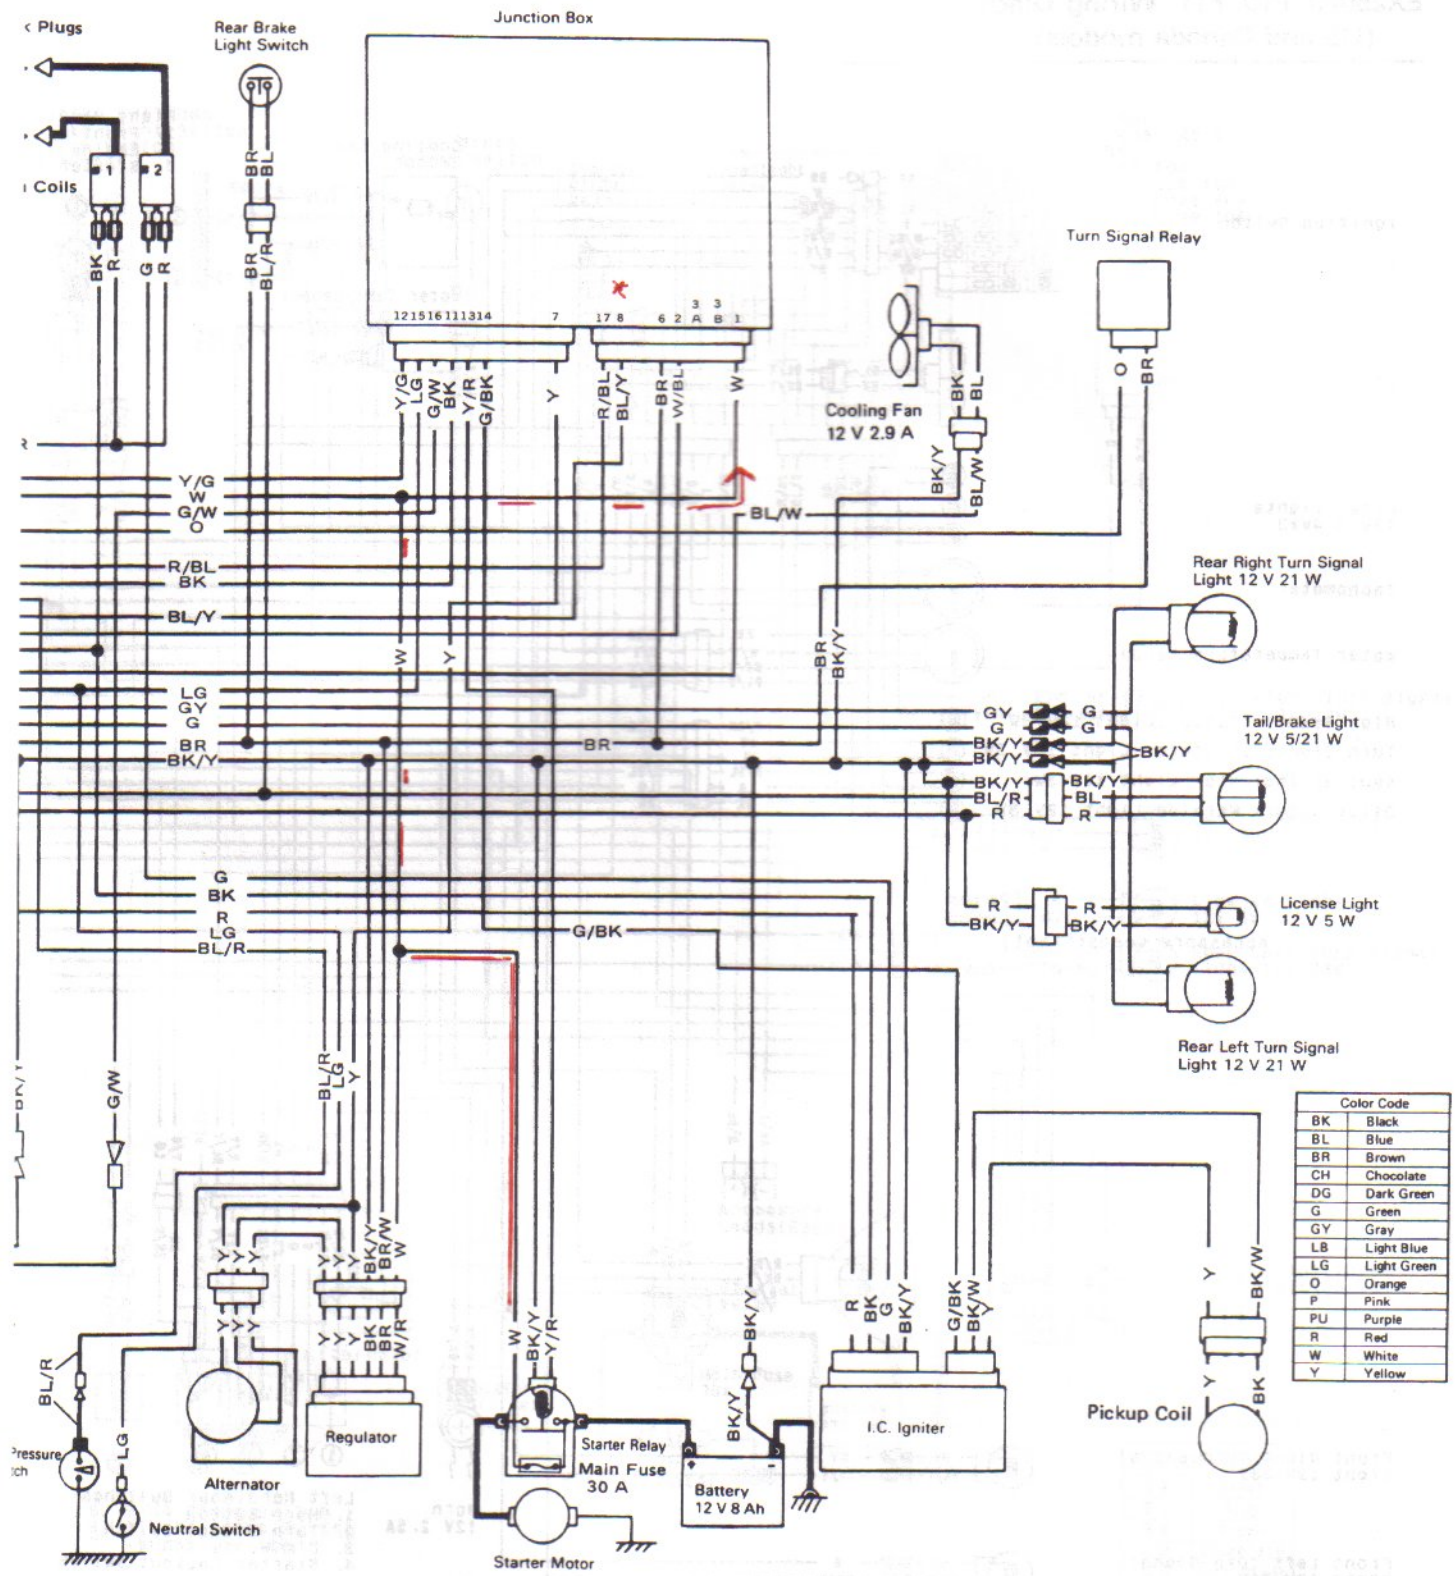


Color Code	
BK	Black
BL	Blue
BR	Brown
CH	Chocolate
DG	Dark Green
G	Green
GY	Gray
LB	Light Blue
LG	Light Green
O	Orange
P	Pink
PU	Purple
R	Red
W	White
Y	Yellow

LEFT HANDLEBAR SWITCH CONNECTIONS																	
Horn Button		Passing Button		Turn Signal Switch		Dimmer Switch		Starter Lockout Switch									
Color	BK/Y	BK/W	Color	R/BK	BR	Color	GY	D	G	Color	R/BK	BL/Y	R/Y	Color	BK/Y	BK	BK/R
Released	ON (PUSH)	ON (PUSH)	Released	N	L	HI	LO	Released	PULL	Released	ON	ON	ON	Released	ON	ON	ON


IGNITION SWITCH CONNECTIONS					
	Ignition	Battery	Ignition	Tail 1	Tail 2
Color	BR	W	Y	BL	R
OFF, LOCK	ON	ON	ON	ON	ON
P (PARK)	ON	ON	ON	ON	ON

RIGHT HANDLEBAR SWITCH CONNECTION					
Engine Stop Switch		Starter Button			
Color	Y/R	R	Color	BK/R	BK/R
OFF	ON	ON	ON	ON	ON
RUN	ON	ON	ON	ON	ON
	ON	ON	ON	ON	ON

# EX250F9, F10, F11 Wiring Diagram (US and Canada models)

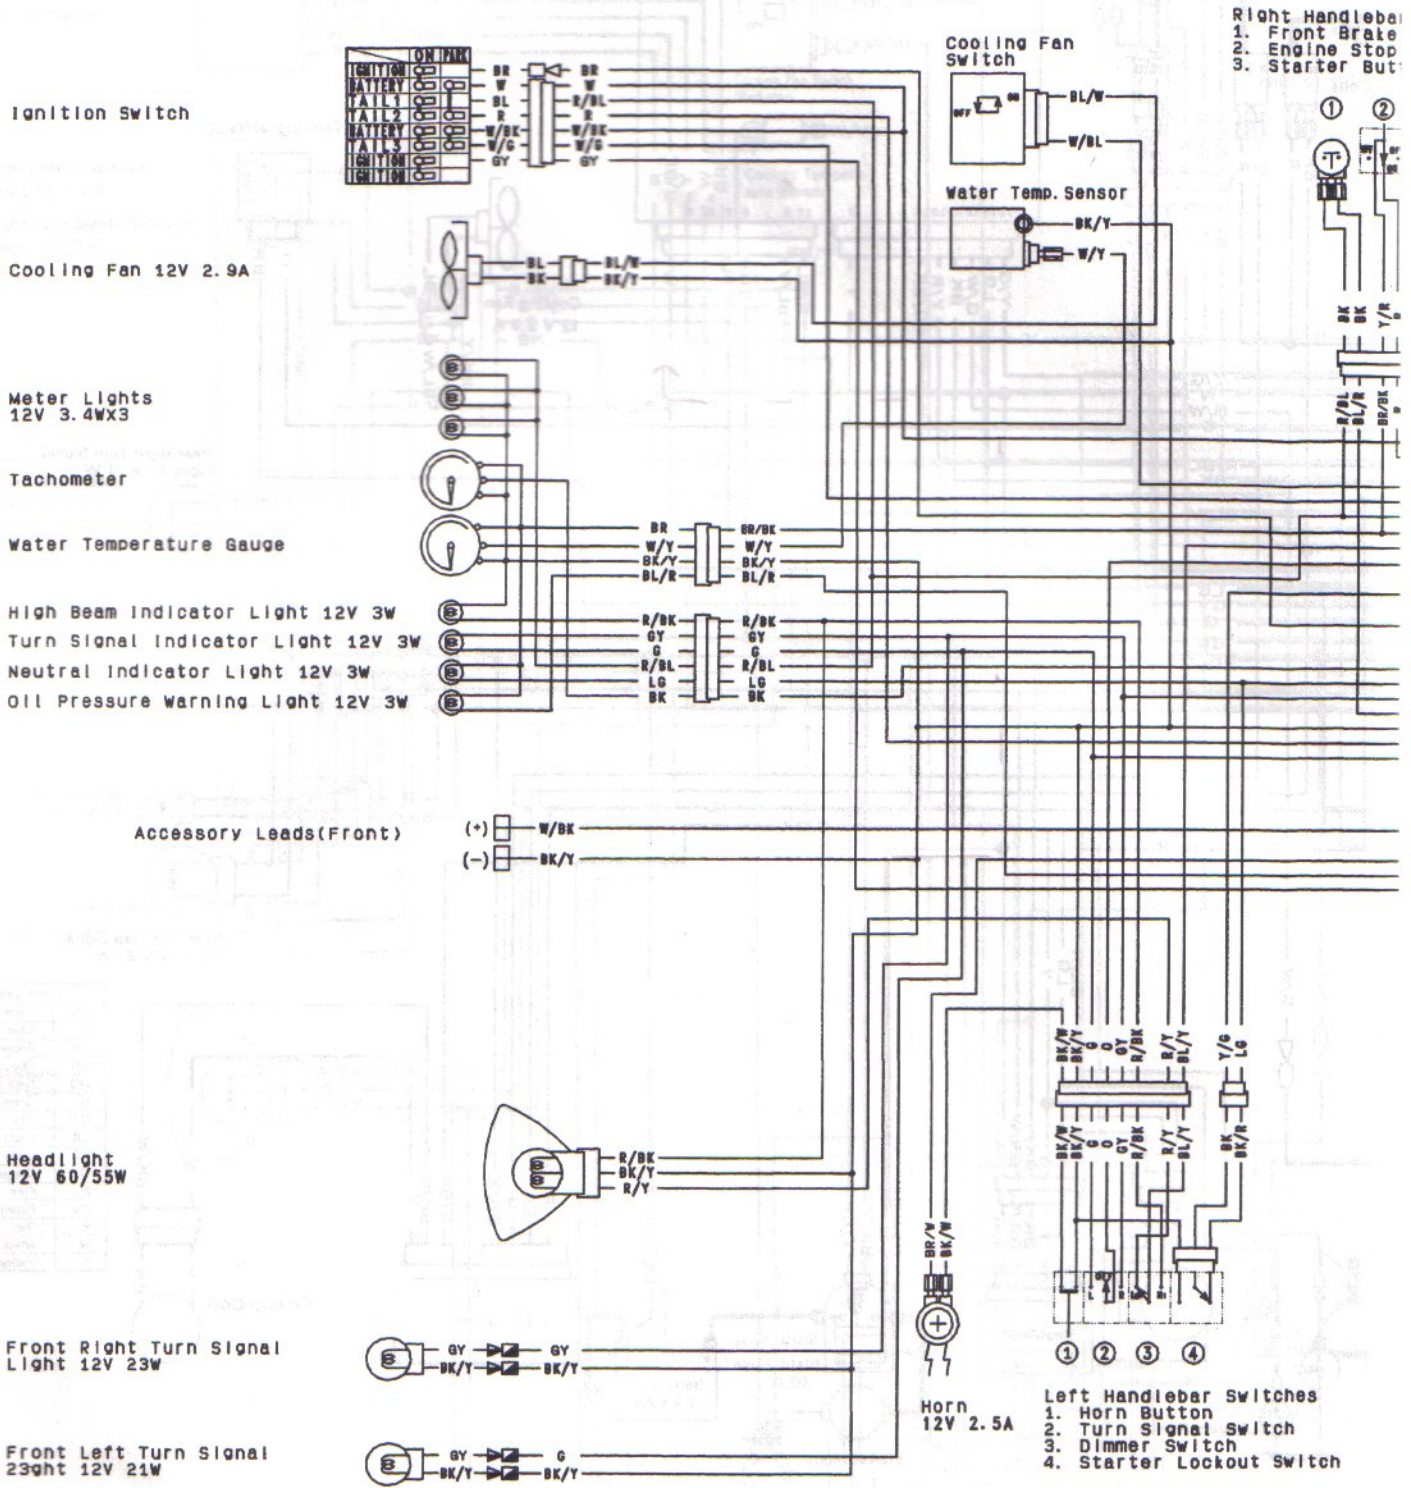

LEFT HANDLEBAR SWITCH CONNECTIONS							
Horn Button	Turn Signal Switch	Dimmer Switch			Starter Lockout Switch		
Color	BK/WBK/Y	Color	G	O	GY	Color	R/Y/BL/YR/BK
Push	<input checked="" type="checkbox"/>	R	<input type="checkbox"/>	<input type="checkbox"/>	LO	<input type="checkbox"/>	Clutch Lever
Released	<input type="checkbox"/>	OFF(Push)	<input type="checkbox"/>	<input type="checkbox"/>	HI	<input type="checkbox"/>	Released
		L	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	Pulled In

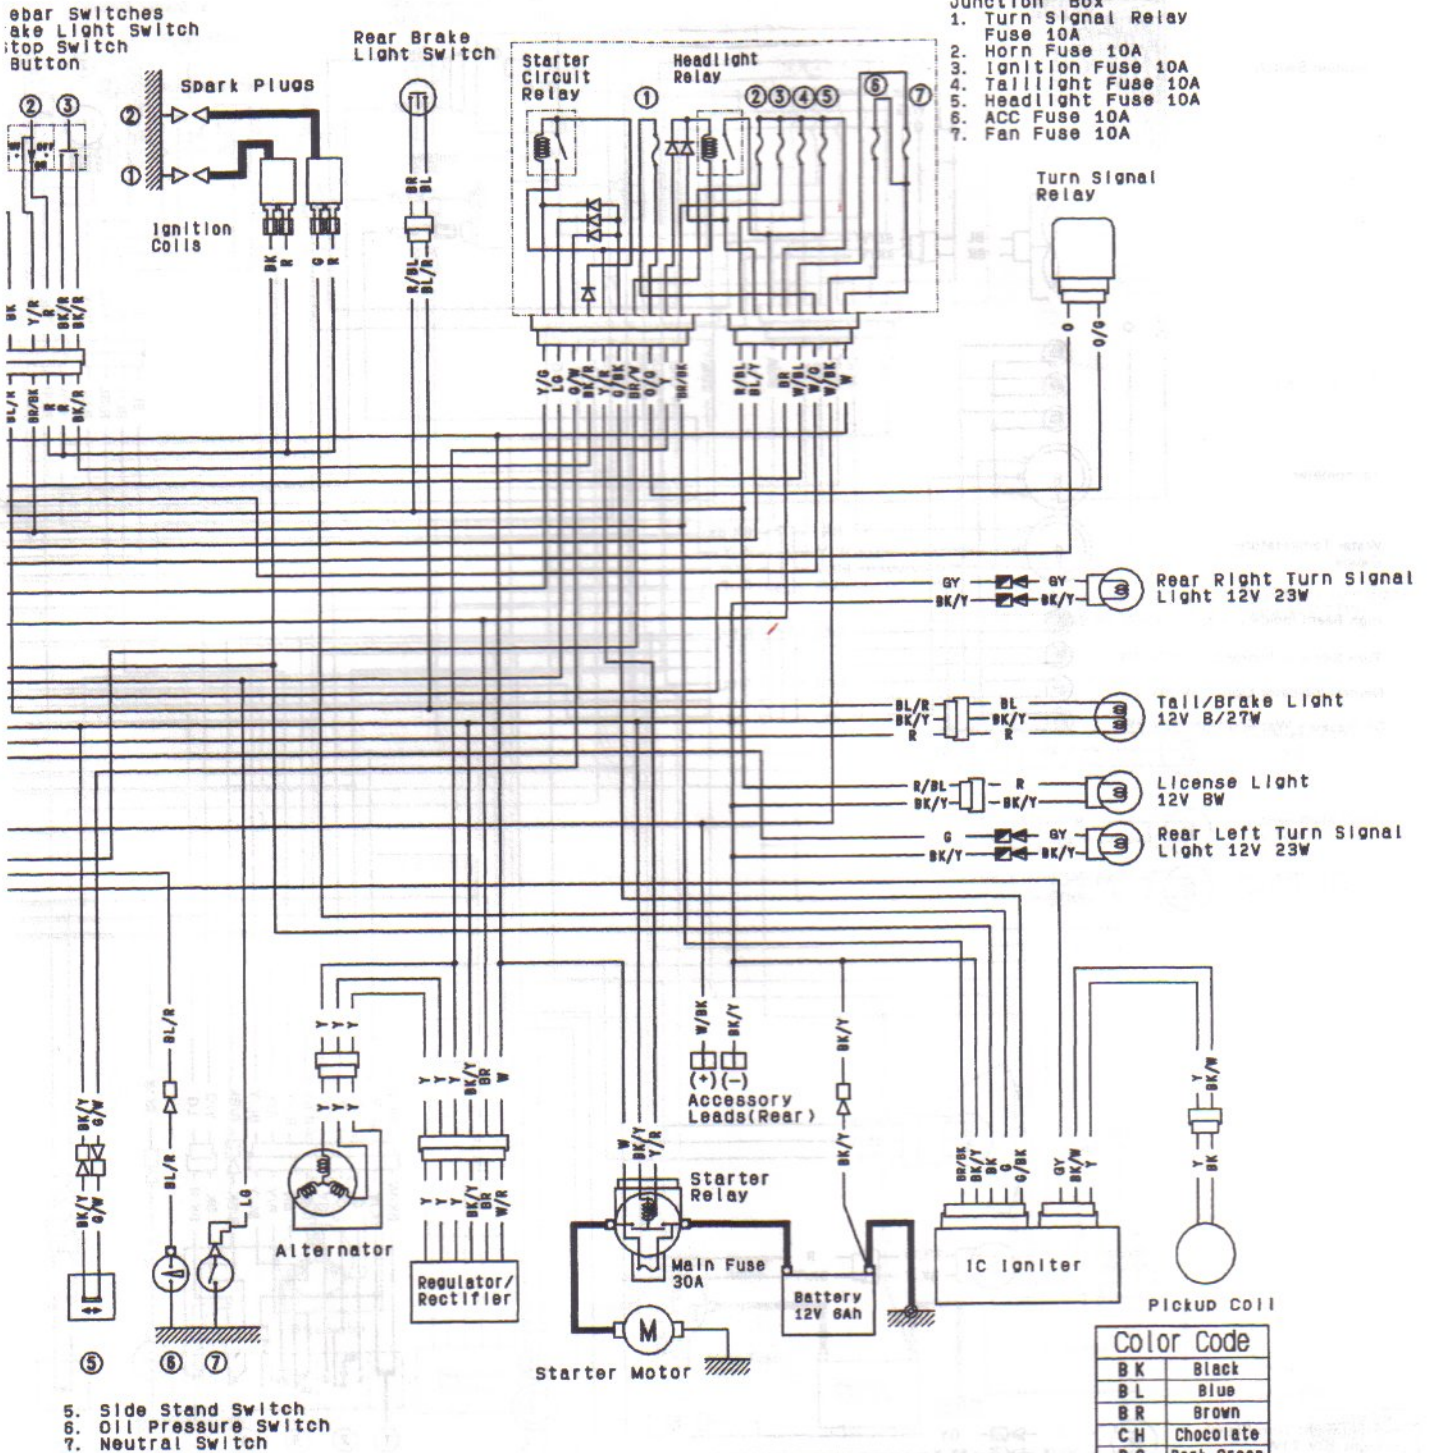


Switch	IGNITION SWITCH CONNECTIONS							
	Ignition	Battery	Ignition	Tail1	Tail2	Battery	Tail3	
BK/R	Color	BR	W	GY	BL	R	W/BK	W/G
OFF, LOCK		○	○	○	○	○	○	○
ON		○	○	○	○	○	○	○
P(PARK)		○	○	○	○	○	○	○

Switch	RIGHT HANDLEBAR SWITCH CONNECTIONS					
	Front Brake Light Switch	Engine Stop Switch	Starter Button	Color	BK	BK/R
Color	BK	BK	OFF	Y/R	R	Color BK/R BK/R
Brake Lever	○	○	○	○	○	○
Pulled In	○	○	○	○	○	○
Released	○	○	○	○	○	○


# 15-26 ELECTRICAL SYSTEM

## EX250F9, F11 Wiring Diagram (Europe models)

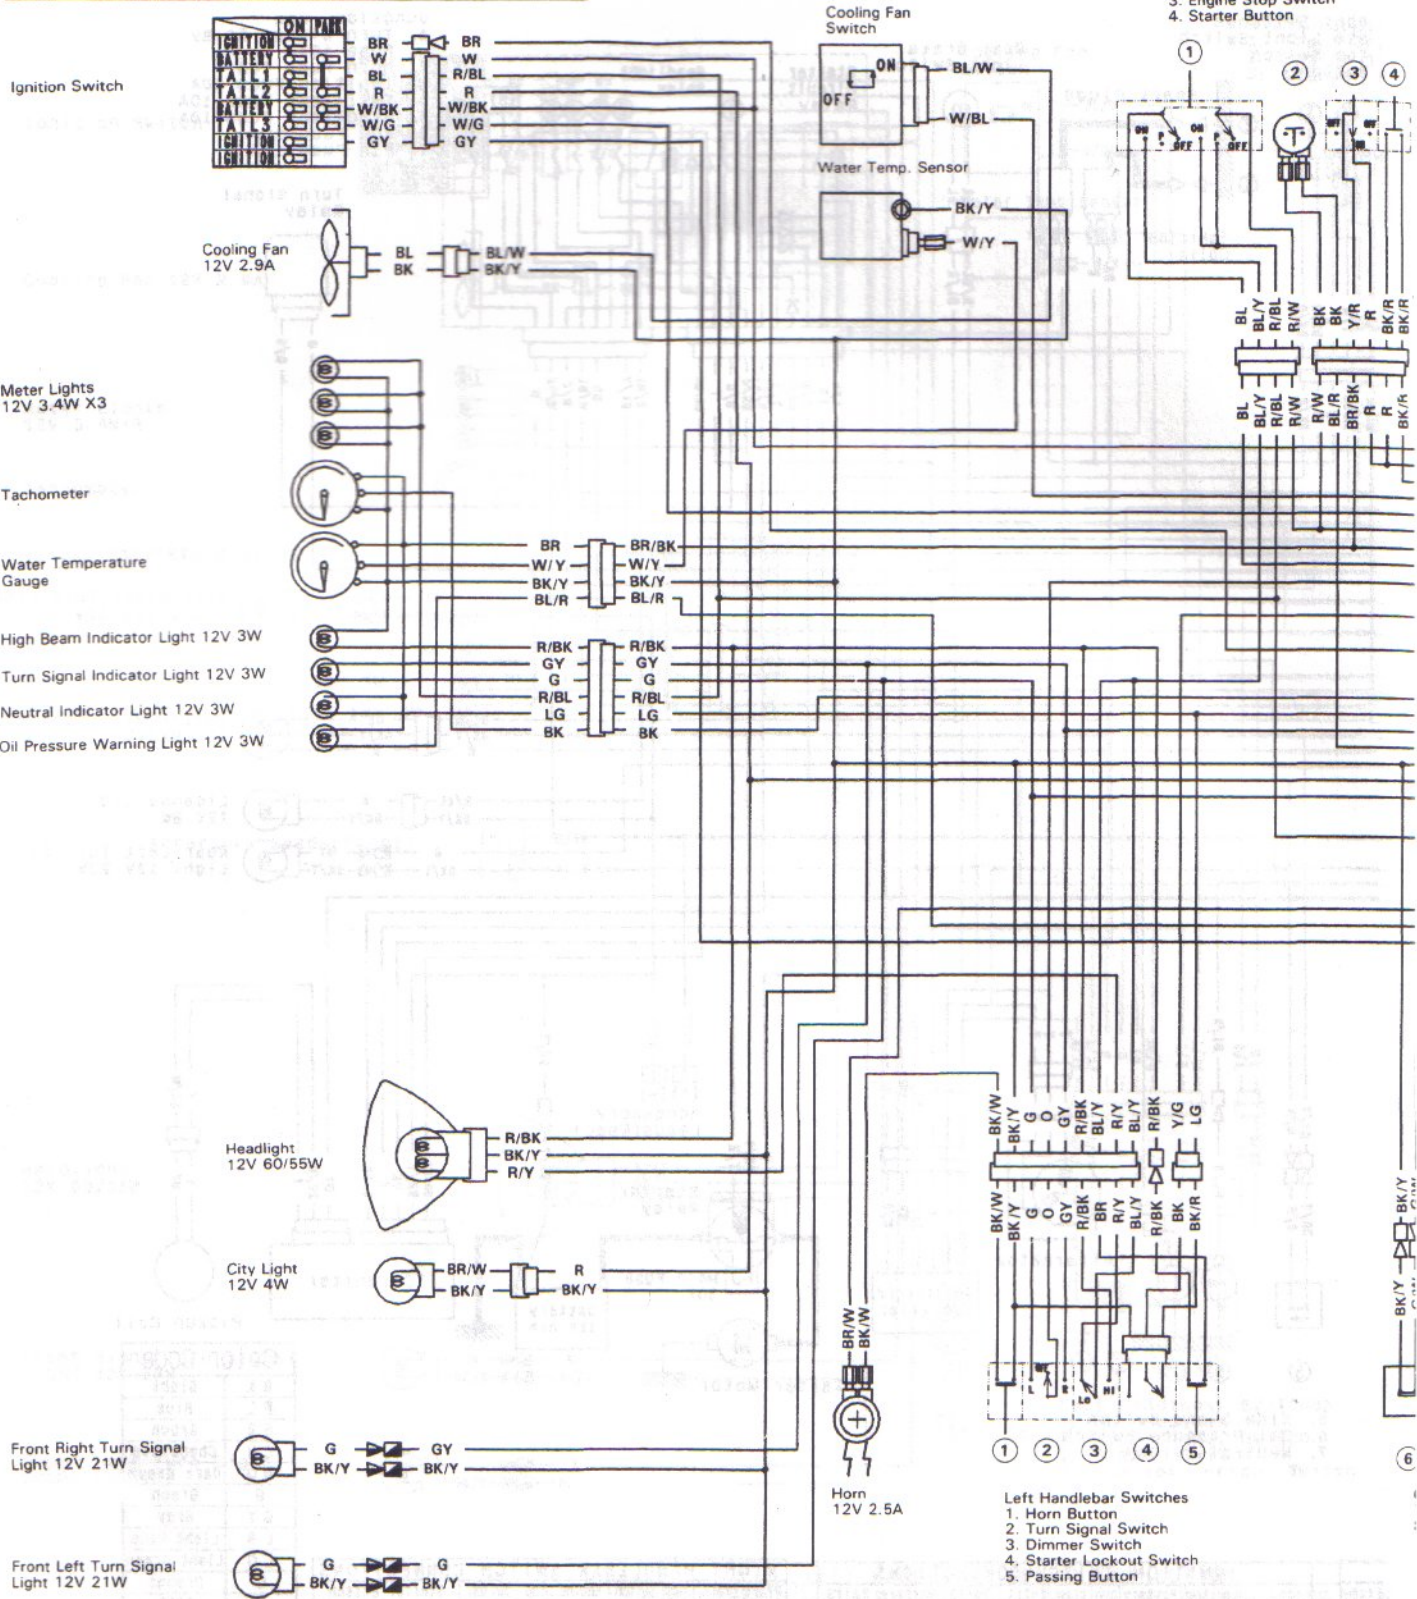

**LEFT HANDLEBAR SWITCH CONNECTIONS**


Horn Button		Passing Button		Turn Signal Switch			Dimmer Switch		Starter Lockout Switch								
Color	BK/Y	BK/W	Color	R/BK	BR	Color	GY	O	G	Color	R/BK	BL/Y	R/Y	Color	BK/Y	BK	BK/R
Released			Released			R				HI				Released			
ON (PUSH)	○		ON (PUSH)	○		N						○					
						L				LO		○		PULL			

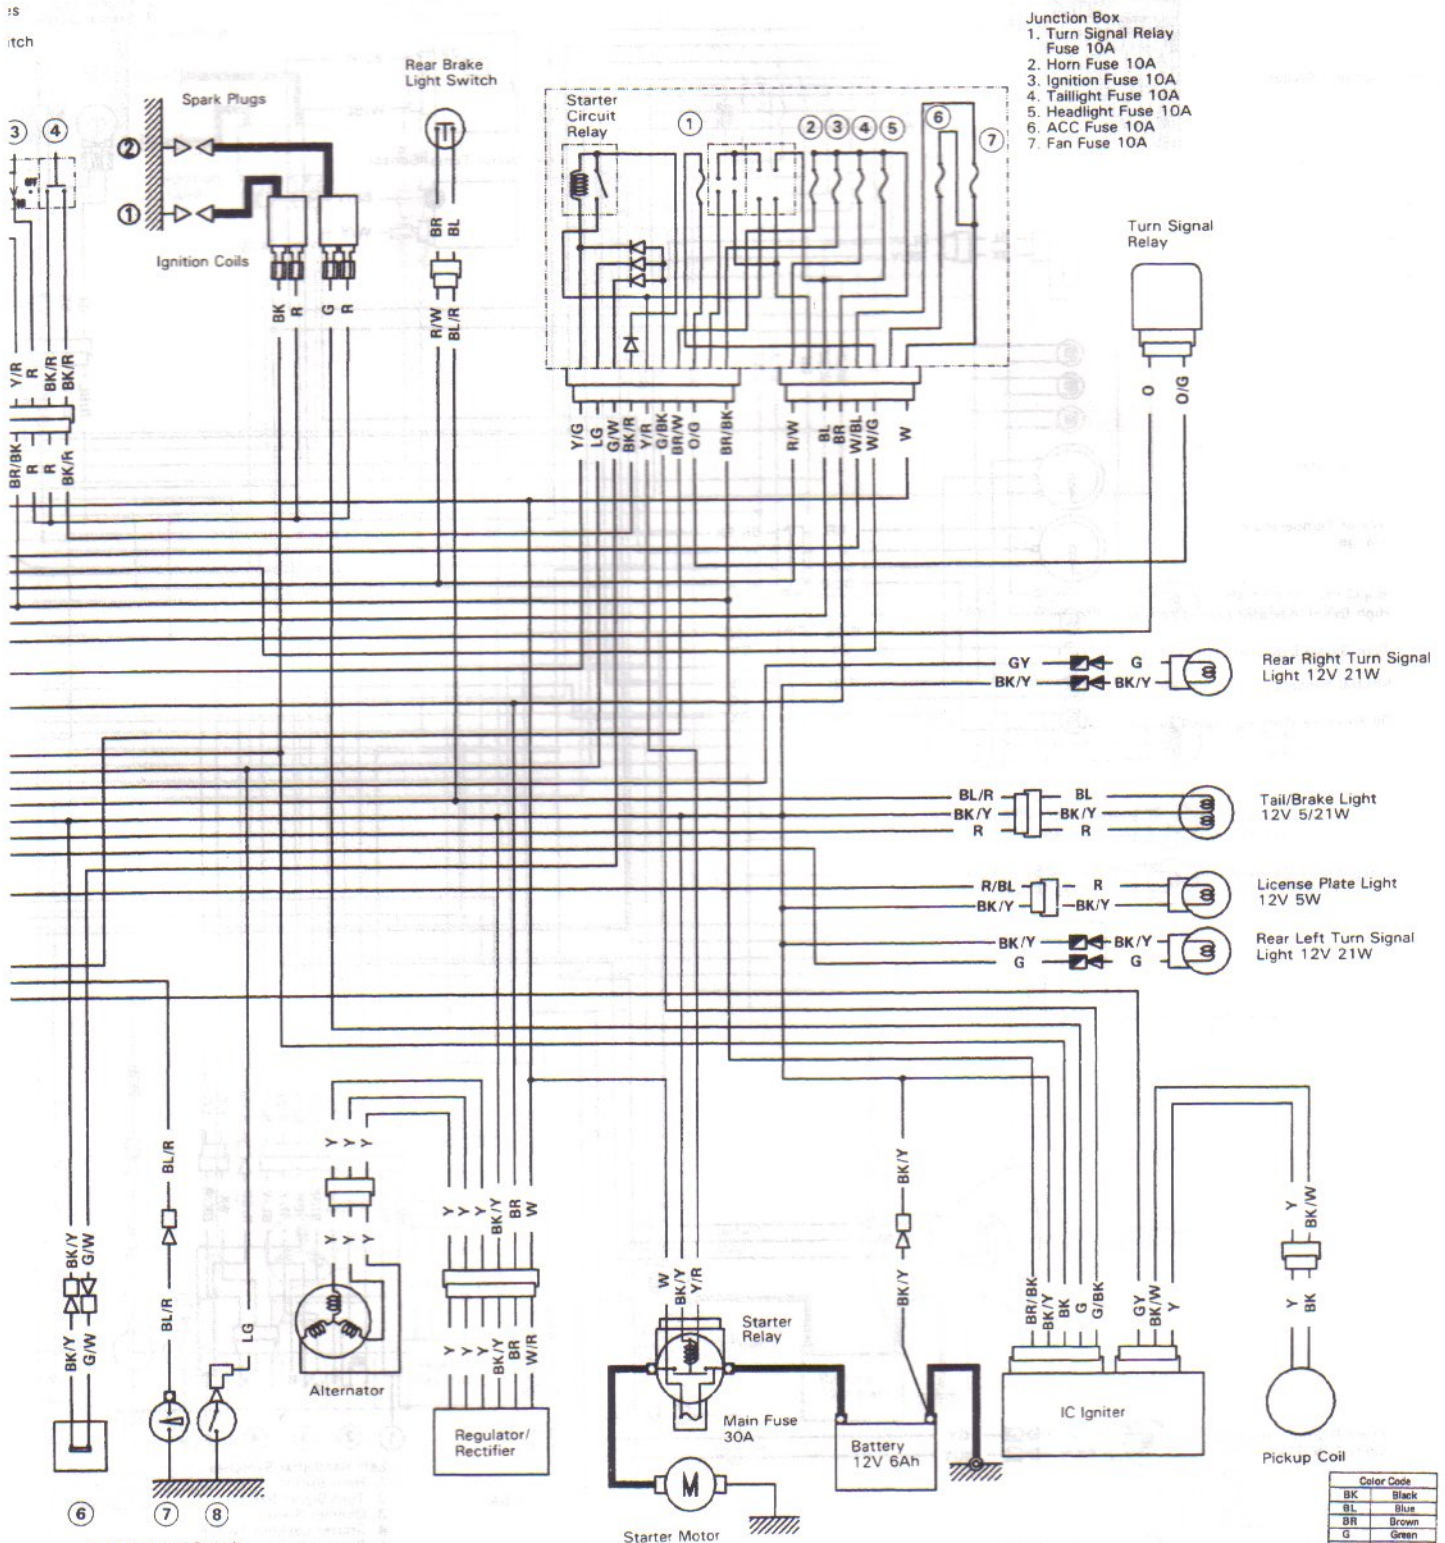

- Junction Box**
1. Turn Signal Relay Fuse 10A
  2. Horn Fuse 10A
  3. Ignition Fuse 10A
  4. Taillight Fuse 10A
  5. Headlight Fuse 10A
  6. ACC Fuse 10A
  7. Fan Fuse 10A

6. Side Stand Switch
7. Oil Pressure Switch
8. Neutral Switch


Color Code	
BK	Black
BL	Blue
BR	Brown
G	Green
GY	Gray
LB	Light Blue
LG	Light Green
O	Orange
P	Pink
R	Red
W	White
Y	Yellow



IGNITION SWITCH CONNECTIONS								
Switch	Ignition	Battery	Ignition	Ignition	Tail 1	Tail 2	Battery	Tail 3
Color	BR	W	GY	---	BL	R	W/BK	W/G
OFF, LOCK								
ON								
PARK								

RIGHT HANDLEBAR SWITCH CONNECTIONS										
Engine Stop Switch	Starter Button		Headlight Switch							
Color	Y/R	R	Color	BK/R	BK/R	Color	R/W	R/BL	BL	BL/Y
OFF			Color			OFF				
RUN			PUSH			ON				
			Released							



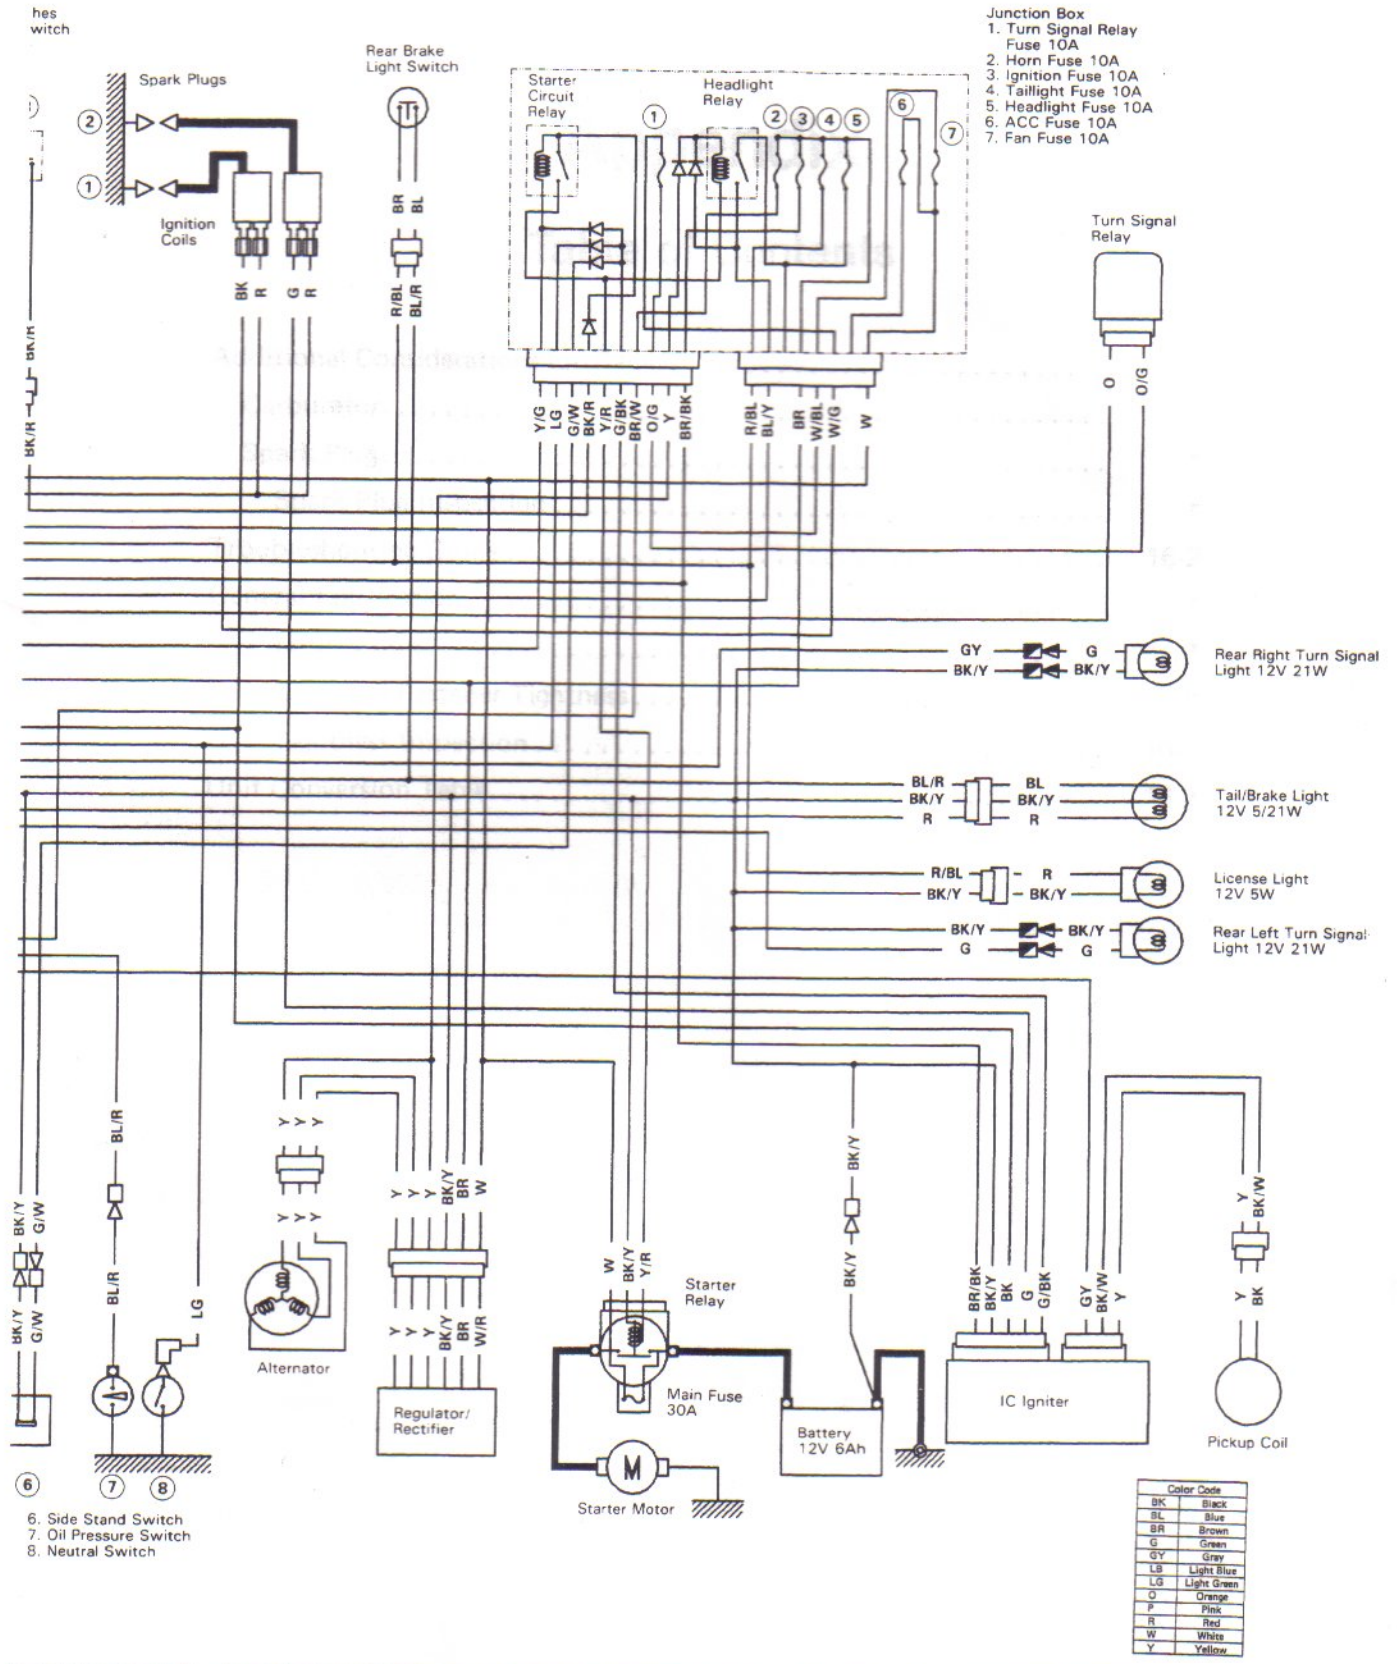

- Junction Box**
1. Turn Signal Relay Fuse 10A
  2. Horn Fuse 10A
  3. Ignition Fuse 10A
  4. Taillight Fuse 10A
  5. Headlight Fuse 10A
  6. ACC Fuse 10A
  7. Fan Fuse 10A

6. Side Stand Switch
7. Oil Pressure Switch
8. Neutral Switch

**Starter Lockout Switch**

for	BK/Y	BK	BK/R
used	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
LL	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**IGNITION SWITCH CONNECTIONS**

	Ignition	Battery	Ignition	Ignition	Tail 1	Tail 2	Battery	Tail 3
Color	BR	W	GY	—	BL	R	W/BK	W/G
OFF/LOCK	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
ON	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>
PARK	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>	<input type="checkbox"/>

**RIGHT HANDLEBAR SWITCH CONNECTIONS**

Engine Stop Switch			Starter Button		
Color	Y/R	R	Color	BK/R	BK/R
OFF	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>
RU/N	<input type="checkbox"/>	<input type="checkbox"/>		<input type="checkbox"/>	<input type="checkbox"/>
			Push	<input type="checkbox"/>	<input type="checkbox"/>

# Appendix

## Table of Contents

Additional Considerations for Racing .....	*
Carburetor .....	*
Spark Plug .....	*
Spark Plug Inspection .....	*
Troubleshooting Guide .....	16-2
General Lubrication .....	*
Lubrication .....	*
Nut, Bolt, and Fastener Tightness .....	16-2
Tightness Inspection .....	16-2
Unit Conversion Table .....	16-3

### Quick Reference

Units of Force	Conversion Factor	Units
N	x	kg
N	x	JN
kg	x	PS
kg	x	PS

Units of Temperature:

$$C = \frac{F - 32}{1.8}$$

$$F = 1.8C + 32$$

## 16-2 APPENDIX

---

### Troubleshooting Guide

---

Refer to the Base Manual noting the following.

#### Clutch Operation Faulty:

##### Clutch slipping:

Clutch spring plate misalignment

##### Clutch not disengaging properly:

Clutch spring plate misalignment  
Incorrect installation of friction plates

---

### Nut, Bolt, and Fastener Tightness

---

#### *Tightness Inspection*

Refer to the Base Manual noting the following.

#### Nut, Bolt, and Fastener to be checked

##### Wheels:

Rear Sprocket Mounting Nuts

##### Steering:

Stem Head Bolt  
Handlebar Mounting Bolts  
Handlebar Clamp Bolts

##### Others:

Side Stand Bolt  
Side Stand Bracket Bolts

Unit Conversion Table

Prefixes for Units:

Prefix	Symbol	Power
mega	M	x 1,000,000
kilo	k	x 1,000
centi	c	x 0.01
milli	m	x 0.001
micro	μ	x 0.000001

Units of Mass:

kg	x	2.205	=	lb
g	x	0.03527	=	oz

Units of Volume:

L	x	0.2642	=	gal (US)
L	x	0.2200	=	gal (imp)
L	x	1.057	=	qt (US)
L	x	0.8799	=	qt (imp)
L	x	2.113	=	pint (US)
L	x	1.816	=	pint (imp)
mL	x	0.03381	=	oz (US)
mL	x	0.02816	=	oz (imp)
mL	x	0.06102	=	cu in

Units of Force:

N	x	0.1020	=	kg
N	x	0.2248	=	lb
kg	x	9.807	=	N
kg	x	2.205	=	lb

Units of Length:

km	x	0.6214	=	mile
m	x	3.281	=	ft
mm	x	0.03937	=	in

Units of Torque:

N-m	x	0.1020	=	kg-m
N-m	x	0.7376	=	ft-lb
N-m	x	8.851	=	in-lb
kg-m	x	9.807	=	N-m
kg-m	x	7.233	=	ft-lb
kg-m	x	86.80	=	in-lb

Units of Pressure:

kPa	x	0.01020	=	kg/cm <sup>2</sup>
kPa	x	0.1450	=	psi
kPa	x	0.7501	=	cm Hg
kg/cm <sup>2</sup>	x	98.07	=	kPa
kg/cm <sup>2</sup>	x	14.22	=	psi
cm Hg	x	1.333	=	kPa

Units of Speed:

km/h	x	0.6214	=	mph
------	---	--------	---	-----


Units of Power:

kW	x	1.360	=	PS
kW	x	1.341	=	HP
PS	x	0.7355	=	kW
PS	x	0.9863	=	HP

Units of Temperature:

$$\frac{9 (^\circ\text{C} + 40)}{5} - 40 = ^\circ\text{F}$$

$$\frac{5 (^\circ\text{F} + 40)}{9} - 40 = ^\circ\text{C}$$

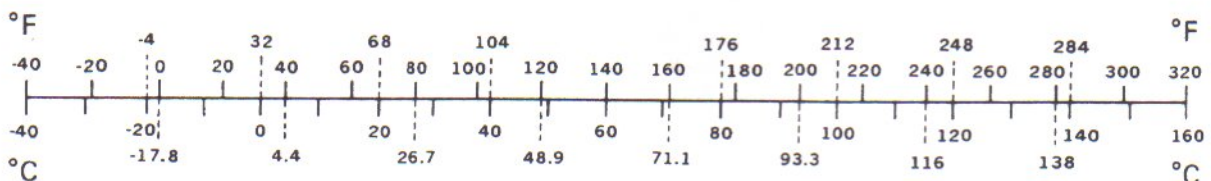

# Supplement - 2000 Model

## Table of Contents

Foreword .....	17-2
General Information .....	17-3
Model Identification .....	17-3
General Specifications .....	17-4
Fuel System .....	17-5
Specifications .....	17-5
Electrical System .....	17-5
Specifications .....	17-5
Ignition System .....	17-6
Electric Starter System .....	17-7
Lighting System .....	17-8
Cooling Fan System .....	17-9
Meters and Gauge .....	17-10

Quick Reference

Foreword

---

**How to Use this Manual**

This "Supplement - 2000 Model" designed to be used in conjunction with the front part of this manual (up to 16-3) and/or Base Manual Ninja250R(GPZ250R) Service Manual - Part No.99924-1066-01. The specifications and maintenance procedures described in this chapter are only those that are unique to the EX250 - F14 model.

Complete and proper servicing the EX250 - F14 model therefore requires mechanics to read both this chapter and the front of this manual.

17-1	Foreword
17-2	How to Use this Manual
17-3	Specifications
17-4	Electrical System
17-5	Specifications
17-6	Ignition System
17-7	Starting System
17-8	Lighting System
17-9	Cooling Fan System
17-10	Meters and Gauges

17

General Information

Model Identification

EX250 - F14 Left Side View



EX250 - F14 Right Side View



## General Specification

Items	EX250-F14
<b>Engine:</b>	
Type	4-stroke, DOHC, 2-cylinder
Cooling system	Liquid-cooled
Bore and stroke	62.0 × 41.2 mm
Displacement	248 mL
Compression ratio	12.4
Maximum horsepower	27.9 kW (38 PS) @ 11 000 r/min (rpm), (US) —, (AS) 27.9 kW (38 PS) @ 12 000 r/min (rpm)
Maximum torque	24.5 N·m (2.5 kgf·m, 18.1 ft·lb) @ 10 000 r/min (rpm), (US)
Carburetion system	Carburetors, Keihin CVK30 × 2
Starting system	Electric starter
Ignition system	Battery and coil (transistorized)
Timing advance	Electronically advance
Ignition timing	From 10° BTDC @ 1 300 r/min (rpm) to 42° BTDC @ 4 500 r/min (rpm), (CA) From 5° BTDC @ 1 300 r/min (rpm) to 42° BTDC @ 4 500 r/min (rpm)
Spark plug (STD)	NGK CR8HSA or ND U24FS-U (AS) NGK C8HA or ND U24FS-L
Cylinder numbering method	Left to right, 1-2
Firing order	1-2
Valve timing:	
Inlet	Open 26° BTDC Close 66° ABDC Duration 272°
Exhaust	Open 66° BBDC Close 26° ATDC Duration 272°
Lubrication system	Forced lubrication (wet sump)
Engine oil:	
Grade	SE, SF or SG class
Viscosity	SAE 10W-40, 10W-50, 20W-40, or 20W-50
Capacity	1.9 L
<b>Electrical Equipment:</b>	
Battery	12V 6Ah
Headlight:	
Type	Semi-sealed beam
Bulb	12V 60/50 W (quartz - halogen)
Tail/brake light	12V 8/27 W × 2, (AS) 12V 5/21 W × 2
Alternator:	
Type	Three - phase AC
Rated output	17A/14V @ 1000 r/min (rpm)

Specifications are subject to change without notice and may not apply to every country.

(AS) : Australia Model

(CA) : California Model

(US) : U.S.A. Model

**Fuel System**

**Specifications**

**Carburetor Specifications**

- Make, Type: Keihin, CVKD30  
 Main Jet: #105  
 Main Air Jet: #100 (AS)#80  
 Needle Jet Mark: N161  
 Pilot Jet (Slow Jet) #38  
 Pilot Air Jet (Slow Air Jet) #90  
 Pilot Screw (Turns Out): (AS) 2 1/8, (US)(CA) –  
 Starter Jet: #52  
 Idle Speed: 1 300 ± 50 r/min (rpm)  
 Service Fuel Level: 0.5 mm below ~ 1.5 mm above  
 from carburetor body bottom edge  
 Float height: 17.0 ± 2 mm  
 High Altitude Carburetor Specifications ((US)(CA)) –  
 Main Jet: #102  
 Pilot Jet: #35  
 Optional Parts  
 Main Jet: #100, 102, 108, 110  
 Pilot Jet: (CA)(US) #35  
 (AS): Australia Model  
 (CA): California Model  
 (US): U.S.A. Model

**Electrical System**


**Specifications**

**Spark plug specifications**

	STD	Option
U.S.A. & California Model	NGK CR8HSA ND U24FS-U	NGK CR7HSA ND U22FS-U
Australia Model	NGK C8HA ND U24FS-L	NGK C7HA ND U22FS-L

Ignition System


Ignition Circuit

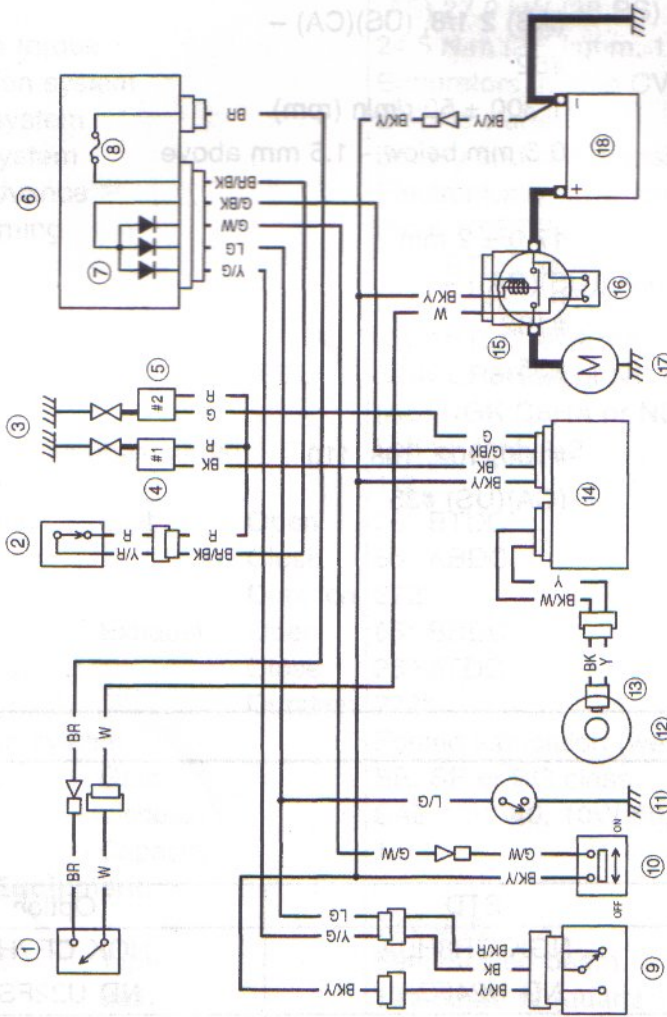

- |                       |                           |                    |                   |
|-----------------------|---------------------------|--------------------|-------------------|
| 1. Ignition Switch    | 6. Junction Box           | 11. Neutral Switch | 16. Main Fuse 30A |
| 2. Engine Stop Switch | 7. Diodes                 | 12. Alternator     | 17. Starter Motor |
| 3. Spark Plugs        | 8. Ignition Fuse 10A      | 13. Pickup Coil    | 18. Battery       |
| 4. Ignition Coil (#1) | 9. Starter Lockout Switch | 14. Igniter        |                   |
| 5. Ignition Coil (#2) | 10. Side Stand Switch     | 15. Starter Relay  |                   |

Electric Starter System

Electric Starter Circuit

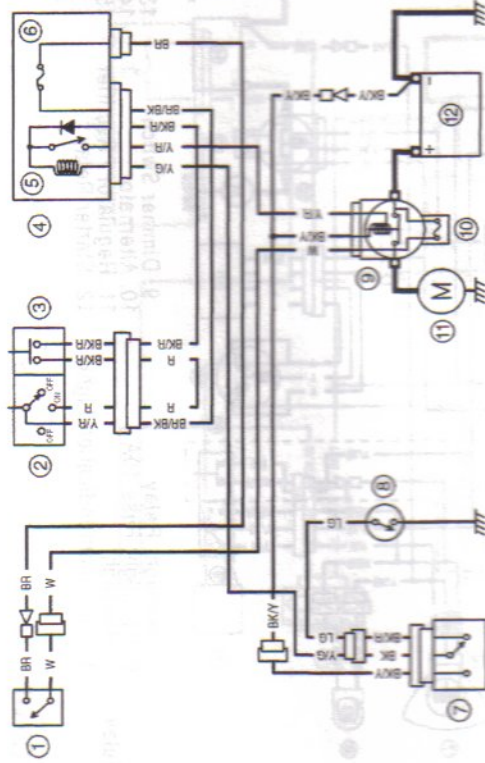


- 1. Ignition Switch
- 2. Engine Stop Switch
- 3. Starter Relay
- 4. Junction Box
- 5. Starter Circuit Fuse 10A
- 6. Ignition Fuse 10A
- 7. Starter Lockout Switch
- 8. Neutral Switch
- 9. Starter Relay
- 10. Main Fuse 30A
- 11. Starter Motor
- 12. Battery

Lighting System

Headlight Circuit


--- Australian Model

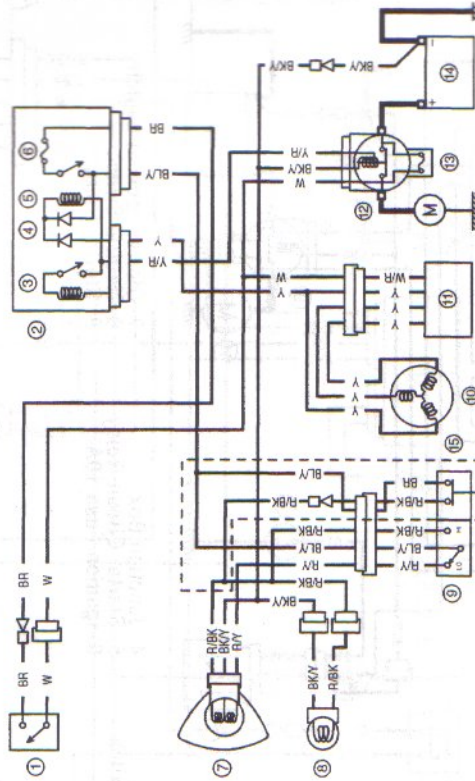

- 1. Ignition Switch
- 2. Junction Box
- 3. Starter Circuit Relay
- 4. Diodes
- 5. Headlight Relay
- 6. Headlight Fuse 10A
- 7. Headlight
- 8. High Beam Indication Light
- 9. Dimmer Switch
- 10. Alternator
- 11. Regulator / Rectifier
- 12. Starter Relay
- 13. Main Fuse 30A
- 14. Battery
- 15. Passing Switch (Australian Model)
- 16. Starter Motor
- 17. Battery

Cooling Fan System

Cooling Fan Circuit

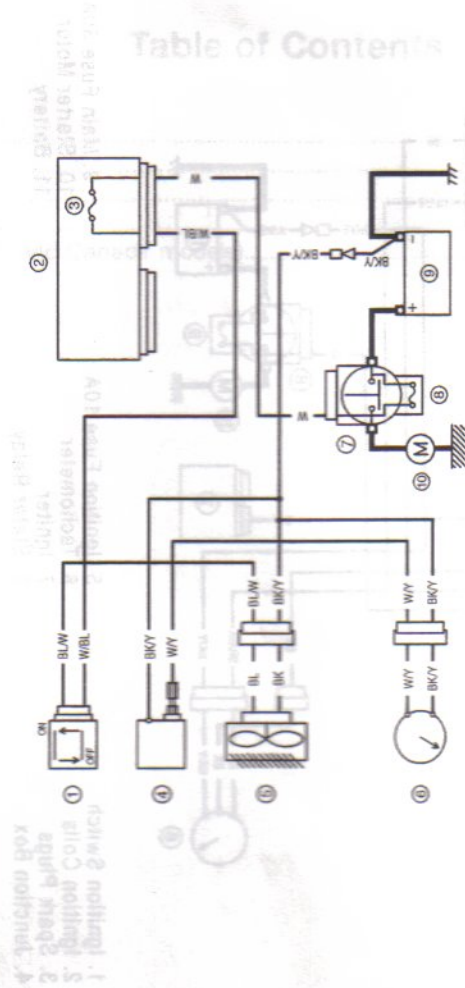


- 1. Radiator Fan Switch
- 2. Junction Box
- 3. Fan Fuse 10A
- 4. Water Temperature Sensor
- 5. Fan
- 6. Water Temperature Meter
- 7. Starter Relay
- 8. Main Fuse 30A
- 9. Battery
- 10. Starter Motor

Meters and Gange

Cooling Fan System

Tachometer Circuit

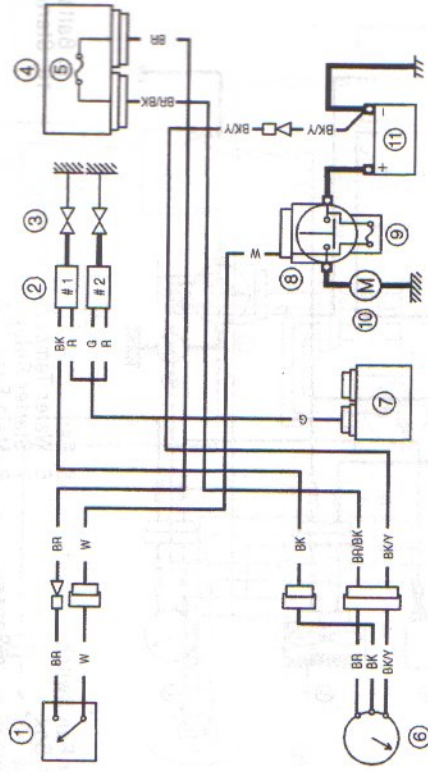

- 1. Ignition Switch
- 2. Ignition Coils
- 3. Spark Plugs
- 4. Junction Box
- 5. Ignition Fuse 10A
- 6. Tachometer
- 7. Igniter
- 8. Stater Relay
- 9. Main Fuse 30A
- 10. Starter Motor
- 11. Battery

# Supplement-2001 Model

## Table of Contents

Foreword.....	18-2
General Information.....	18-3
General Specifications.....	18-3
Electrical System.....	18-4
EX250-F15 Wiring Diagram (US and Canada models).....	18-4

### Quick Reference

Ignition timing (initial)	Open	25° BTDC
	Close	65° ABDC
	Duration	272°
Exhaust	Open	66° BBDC
	Close	26° ATDC
	Duration	272°
Lubrication system		Forced lubrication (oil pump)
Engine oil grade		API SE, SF or SG class (API Service SAE 10W-40, 10W-50, 15W-50, 15W-60)
Capacity		1.9 L
Mechanical equipment		
Battery		12V 5 Ah
Headlight type		2-pin sealed beam
Bulb		17W 55/85 W (part 714000)
Tail brake light		17W 55/85 W
Amplifier type		Transformer AC
Rider speed		120 km/h (74.6 mph) (rpm)
Specifications (US and Canada models)		Specifications may not apply to many other models

# 18-2 SUPPLEMENT-2001 MODEL

## Foreword

### How to Use this Manual

This "Supplement-2001 Model" designed to be used in conjunction with the front part of this manual (up to 17-10) and/or Base Manual Ninja250R(GPZ250R) Service Manual-Part No.99924-1066-01. The specifications and maintenance procedures described in this chapter are only those that are unique to the EX250-F15 model.

Complete and proper servicing the EX250-F15 model therefore requires mechanics to read both this chapter and the front of this manual.

Supplement-2001 Model

### Table of Contents

18-1	Frontal
18-2	General Information
18-3	General Specifications
18-4	Electrical System
18-5	EX250-F15 Wind-Up System

Main Fuse 30A  
Starter Motor  
Battery

Ignition Switch  
Ignition Coil  
Starter Motor  
Battery



General Information

General Specifications

Items	EX250-F15
<b>Engine</b>	
Type	4-stroke, DOHC, 2-cylinder
Cooling system	Liquid cool
Bore and stroke	62.0 x 41.2 mm
Displacement	248 mL
Compression ratio	12.4
Maximum horsepower	27.9 KW (38PS) @12 000 r/min (rpm), (US) -
Maximum torque	24.5 N-m (2.5 kgf-m, 18.1 ft-lb) @10 000 r/min (rpm) (US) -
Carburetion system	Carburetors, Keihin CVKD 30 x 2
Starting system	Electric starter
Ignition system	Battery and coil (transistorized)
Timing advance	Electronically advanced
Ignition timing	From 10° BTDC @1 300 r/min (rpm) to 42° BTDC @4 500 r/min (rpm), (CA) From 5° BTDC @1 300 r/min (rpm) to 42° BTDC @4 500 r/min (rpm),
Spark plug STD	NGK CR 8HSA or NDU 24 FS-U (AS) NGK C8HA or NDU 24 FS-L
Cylinder numbering method	Left to Right, 1-2
Firing order	1-2
Valve timing : Inlet	Open 26° BTDC Close 66° ABDC Duration 272°
Exhaust	Open 66° BBDC Close 26° ATDC Duration 272°
Lubrication system	Forced lubrication (wet sump)
Engine oil : Grade	API SE, SF or SG class / API SH or SJ with JASO MA class
Viscosity	SAE 10W-40, 10W-50, 20W-40, or 20W-50
Capacity	1.9 L
<b>Electrical Equipment</b>	
Battery	12V 6 Ah
Headlight : Type	Semi - sealed beam
Bulb	12V 60/55 W (quartz-halogen)
Tail / brake light	12V 5/21 W
Alternator : Type	Three-phase AC
Rated output	17A/14V @10 000 r/min (rpm)

Specifications are subject to change without notice and may not apply to every country.

(AS) : Australia Model


(CA) : California Model

(US) : U.S.A. Model

# 18-4 SUPPLEMENT-2001 MODEL


## Electrical System

### EX250-F15 Wiring Diagram (US and Canada models)

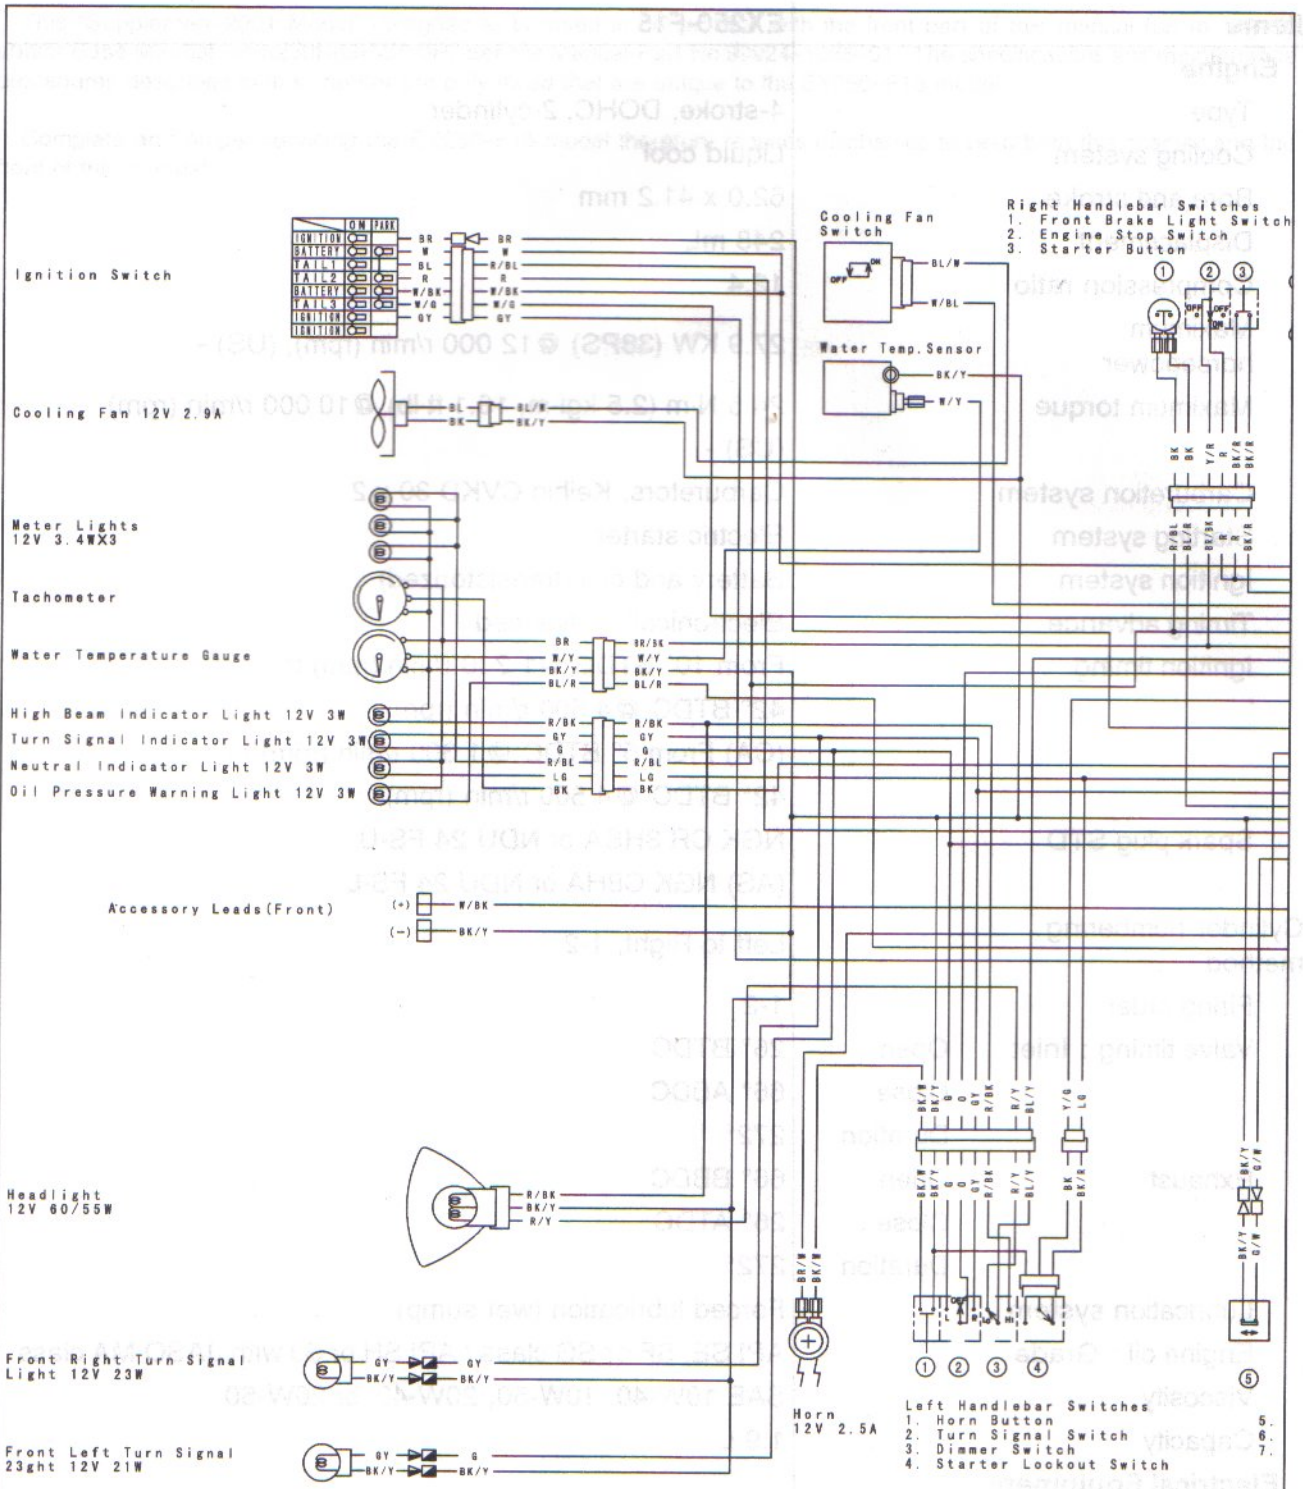

LEFT HANDLEBAR SWITCH CONNECTIONS						
Horn Button	Turn Signal Switch	Dimmer Switch	Starter Lockout Switch			
Color BK/WBK/Y	Color G O GY	Color R/Y BL/YR/BK	Color BK/Y BK BK/R	Color	Color	Color
Push	R	LO	Clutch Lever			OFF, LO
Released	OFF (Push) L	HI	Released			ON
			Pulled in			P(PAR)

Electrical System

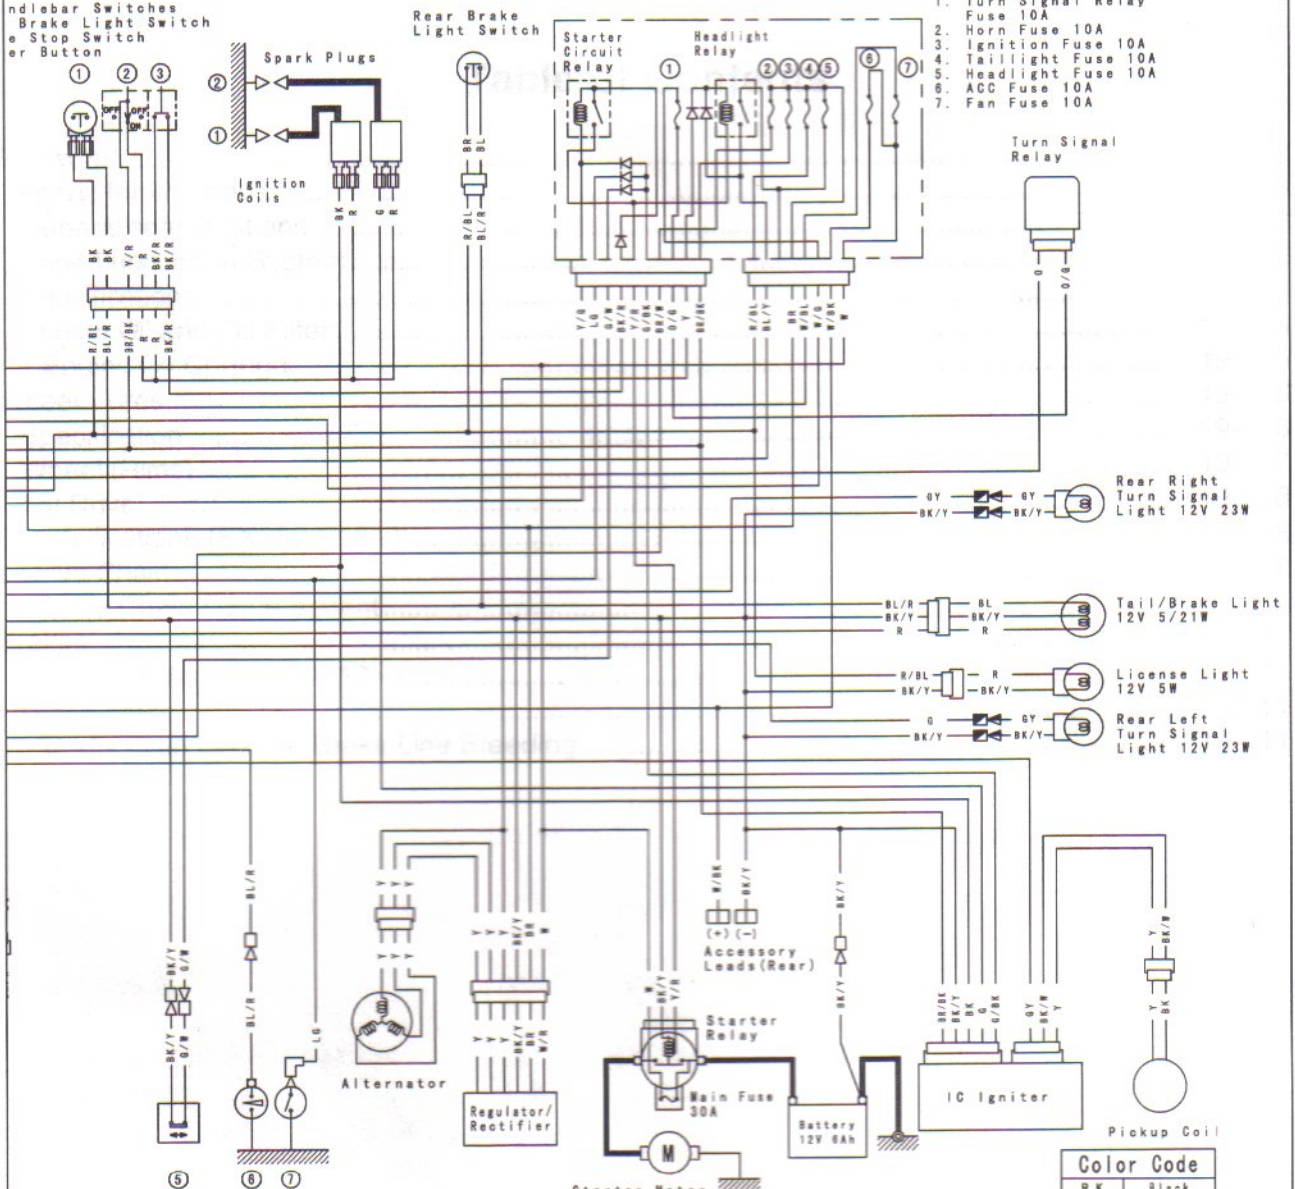

5. Side Stand Switch  
6. Oil Pressure Switch  
7. Neutral Switch

Lockout Switch	BK/Y	BK	BK/R
OFF	○	○	○
ON	○	○	○
P(PARK)	○	○	○

IGNITION SWITCH CONNECTIONS	Ignition	Battery	Ignition	Tail1	Tail2	Battery	Tail3	
	Color	BR	W	GY	BL	R	W/BK	W/G
OFF/LOCK	○	○	○	○	○	○	○	○
ON	○	○	○	○	○	○	○	○
P(PARK)	○	○	○	○	○	○	○	○

RIGHT HANDLEBAR SWITCH CONNECTIONS					
Front Brake Light Switch	Engine Stop Switch	Starter Button	Color	BK	BK/R
Color	BK	BK	Color	Y/R	R
Brake Lever	OFF	Push	Color	BK/R	BK/R
Pulled In	○	Released	Color	BK/R	BK/R
Released	○	Color	BK/R	BK/R	BK/R

(98051-1520B) C

# Supplement-2002 ~ 2005 Models

## Table of Contents

Foreword .....	19- 2
General Information .....	19- 3
General specifications .....	19- 3
Engine Lubrication System .....	19- 5
Specifications .....	19- 5
Engine Oil and Oil Filter .....	19- 5
Engine Oil Change .....	19- 5
Wheels/Tires .....	19- 6
Specification .....	19- 6
Wheel (Rims) .....	19- 7
Final Drive .....	19- 8
Specifications (EX250-F18 ~) .....	19- 8
Drive Chain .....	19- 8
Drive Chain Replacement .....	19- 8
Brakes .....	19- 11
Specifications (EX250-F17 ~) .....	19- 11
Brake Fluid .....	19- 11
Brake Fluid Change/Brake Line Bleeding .....	19- 11

### Quick Reference

42° BTDC @ 4.500 RPM  
 (CA) From 5° BTDC  
 42° BTDC @ 4.500 RPM  
 NGK CR8HSA or 70  
 (ASI) NGK CR8HA or 70  
 Left to right, 1-2  
 1-2  
 26° BTDC  
 66° ABDC  
 272°  
 66° BBDC  
 26° ATDC  
 272°  
 For top lubrication (over valve)  
 API 15, GF or SG  
 20W-50 or S1 with JASO MA  
 20W-50/40

(Continued on next page)

## Foreword

### How to Use this Manual

This "Supplement-2002 ~ 2005 Models" designed to be used in conjunction with the front part of this manual (up to 18-5) and/or Base Manual Ninja250R (GPZ250R) Service Manual-Part No.99924-1066-01. The specifications and maintenance procedures described in this chapter are only those that are unique to the EX250-F16 ~ F19 models.

Complete and proper servicing the EX250-F16 ~ F19 models therefore requires mechanics to read both this chapter and the front of this manual.

19-2	Foreword
19-3	General Information
19-3	General Specifications
19-5	Engine Lubrication System
19-5	Specifications
19-5	Engine Oil and Oil Filter
19-5	Engine Oil Change
19-6	Wheels/Tires
19-8	Specifications
19-7	Wheels
19-9	Front Fork
19-9	Front Fork Oil
19-10	Drive Chain Replacement
19-11	Brakes
19-11	Specifications (EX250-F16 ~ F19)
19-11	Brake Fluid
19-11	Brake Fluid Change/Brake Line Bleeding

General Information

General specifications

Items		EX250-F16	EX250-F17 ~ F19
<b>Dimensions:</b>			
Overall length		2 035 mm	
Overall width		710 mm	
Overall height		1 095 mm	
Wheelbase		1 400 mm	
Road clearance		155 mm	
Seat height		745 mm	
Dry weight		138 kg, (CA) 138.5 kg	
Curb weight:	Front	76 kg	
	Rear	85 kg, (CA) 85.5 kg	
Fuel tank capacity		18.0 L	
<b>Performance:</b>			
Minimum turning radius		2.8 m	
<b>Engine:</b>			
Type		4-stroke, DOHC, 2-cylinder	
Cooling system		Liquid-cooled	
Bore and stroke		62.0 x 41.2 mm	
Displacement		248 mL	
Compression ratio		12.4	
Maximum horsepower		27.9 kW (38 PS) @ 11 000 r/min (rpm), (US) -, (AS) 27.9 kW (38 PS) @ 12 000 r/min (rpm)	
Maximum torque		24.5 N-m (2.5 kgf-m, 18.1 ft-lb) @ 10 000 r/min (rpm), (US) -	
Carburetion system		Carburetors, Keihin CVK30 x 2	
Starting system		Electric starter	
Ignition system		Battery and coil (transistorized)	
Timing advance		Electronically advance	
Ignition timing		From 10° BTDC @ 1 300 r/min (rpm) to 42° BTDC @ 4 500 r/min (rpm), (CA) From 5° BTDC @ 1 300 r/min (rpm) to 42° BTDC @ 4 500 r/min (rpm)	
Spark plug		NGK CR8HSA or ND U24FS-U (AS) NGK C8HA or ND U24FS-L	
Cylinder numbering method		Left to right, 1-2	
Firing order		1-2	
Valve timing:	Inlet	Open	26° BTDC
		Close	66° ABDC
	Exhaust	Open	66° BBDC
		Close	26° ATDC
Duration		272°	
Lubrication system		Forced lubrication (wet sump)	
Engine oil: Type		API SE, SF or SG API SH or SJ with JASO MA	
Viscosity		SAE 10W-40	
Capacity		1.9 L	

(Continued on next page.)

# 19-4 SUPPLEMENT-2002 ~ 2005 MODELS

## General Information

Items		EX250-F16	EX250-F17 ~ F19
<b>Drive Train:</b>			
Primary reduction system:	Type	Gear	
	Reduction ratio	3.806 (71/23)	
Clutch type		Wet multi disc	
Transmission:	Type	6-speed, constant mesh, return shift	
	Gear ratio:	2.600 (39/15)	
	1st	1.789 (34/19)	
	2nd	1.409 (31/22)	
	3rd	1.160 (29/25)	
	4th	1.000 (27/27)	
	5th	0.892 (25/28)	
	6th		
Final drive system:	Type	Chain drive	
	Reduction ratio	3.214 (45/14)	
	Overall drive ratio	8.859 @ Top gear	
<b>Frame</b>			
Type		Tubular, diamond	
Caster (rake angle)		27°	
Trail		83 mm	
Front tire:	Type	Tubeless	
	Size	100/80-16 50S	100/80-16 M/C 50S
Rear tire:	Type	Tubeless	
	Size	130/80-16 64S	130/80-16 M/C 64S
Front suspension:	Type	Telescopic fork	
	Wheel travel	140 mm	
Rear suspension:	Type	Swing arm (Uni-Trak)	
	Wheel travel	130 mm	
Brake type:	Front	Single disc	
	Rear	Single disc	
<b>Electrical Equipment</b>			
Battery		12 V 6 Ah	
Headlight:	Type	Semi-sealed beam	
	Bulb	12 V 60/55 W (quartz-halogen)	
Tail/brake light		12 V 5/21 W	
Alternator:	Type	Three-phase AC	
	Rated output	17A/14V @ 10 000 r/min (rpm)	

Specifications are subject to change without notice and may not apply to every country.

(AS) : Australia Model

(CA) : California Model

(US) : U.S.A. Model

Engine Lubrication System

Specifications

Item	Standard	Service Limit
<b>Engine Oil</b>		
Type	API SE, SF or SG API SH or SJ with JASO MA	—
Viscosity	SAE 10W-40	—
Capacity	1.5 L (when filter is not removed) 1.9 L (when filter is removed)	—
Level	Between upper and lower level lines	—

Engine Oil and Oil Filter

Engine Oil Change

Recommended Engine Oil


Type : API SE, SF or SG  
API SH or SJ with JASO MA

Viscosity : SAE 10W-40

Capacity : 1.5 L (when filter is not removed)  
1.9 L (when filter is removed)

**NOTE**

○Although 10W-40 engine oil is the recommended oil for most conditions, the oil viscosity may need to be changed to accommodate atmospheric conditions in your riding area.

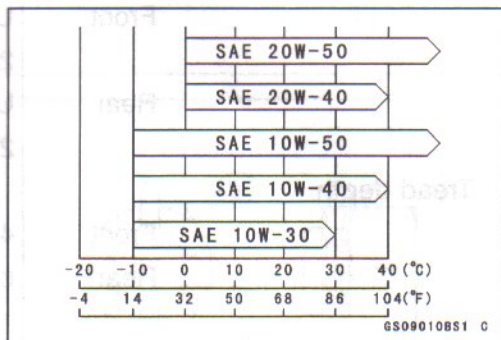

# 19-6 SUPPLEMENT-2002 ~ 2005 MODELS

## Wheels/Tires

### Specification

Item	Standard		Service Limit
	EX250-F16	EX250-F17 ~ F19	
<b>Wheel (Rims):</b>			
Rim runout:			
Axial	—		0.5 mm (0.020 in.)
Radial	—		0.8 mm (0.031 in.)
Axle runout/100 mm (4 in.)	Under 0.05 mm (0.0020 in.)		0.2 mm (0.008 in.)
<b>Tires:</b>			
Air pressure (when cold):			
Front	Up to 155 kg (342 lb) load: 200 kPa (2.0 kg/cm <sup>2</sup> , 28 psi)		—
Rear	Up to 155 kg (342 lb) load: 225 kPa (2.25 kg/cm <sup>2</sup> , 32 psi)		—
Tread depth			
Front	4.4 mm (0.17 in.)		1 mm (0.04 in.)
Rear	6.4 mm (0.25 in.)		2 mm (0.08 in.)
			[Up to 130 km/h (80 mph)]
			3 mm (0.12 in.)
			[Over 130 km/h (80 mph)]
Standard tire:			
Front	100/80-16 50S, Tubeless	100/80-16 M/C 50S, Tubeless	—
Rear	DUNLOP K630F		
	130/80-16 64S, Tubeless	130/80-16 M/C 64S, Tubeless	—
	DUNLOP K630		

**Wheels/Tires**

**Wheel (Rims)**


○ Install the axle from the left side of the wheel, and tighten the axle nut.

**Torque - Rear Axle Nut: 110 N·m (11.0 kgf·m, 80 ft·lb)**

● Insert a new cotter pin [A].

**NOTE**

- When inserting the cotter pin, if the slots in the nut do not align with the cotter pin hole in the axle, tighten the nut clockwise [B] up to next alignment.
- It should be within 30 degree.
- Loosen once and tighten again when the slot goes past the nearest hole.

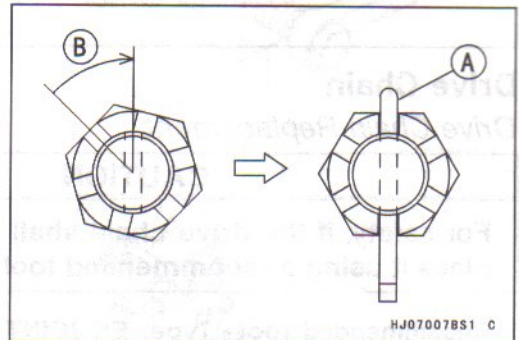


HJ07007BS1 C

● Bend the cotter pin [A] over the nut [B].


● Check the rear brake.

**⚠ WARNING**


**Do not attempt to drive the motorcycle until a full brake pedal is obtained by pumping the brake pedal until the pads are against the disc. The brake will not function on the first application of the pedal if this is not done.**

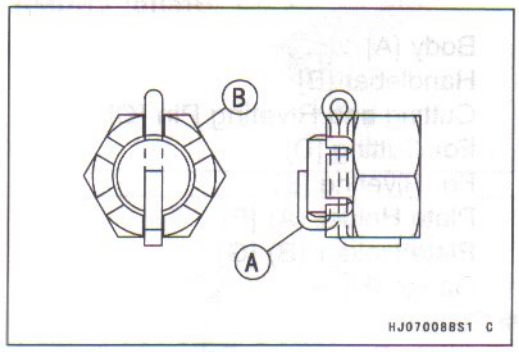

HJ07008BS1 C

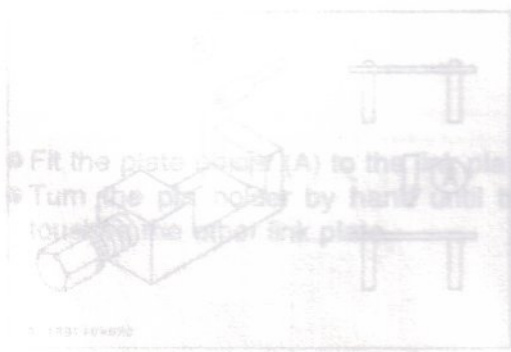

● Fit the plate holder (A) to the link plate.  
 ● Turn the pin holder by hand until the plate holder (B) touches the other link plate.

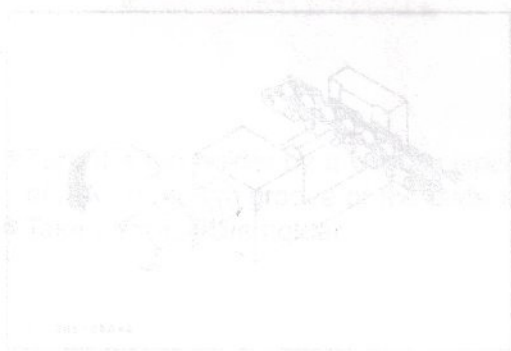

● Tighten the pin holder (A) clockwise until the pin is flush with the link plate.



# 19-8 SUPPLEMENT-2002 ~ 2005 MODELS

## Final Drive

### Specifications (EX250-F18 ~)

Item	Standard	Service Limit
Drive Chain: Make and type	Enuma Endless EK520 SR02 106L	---

### Drive Chain

#### Drive Chain Replacement

#### CAUTION

For safety, if the drive chain shall be replaced, replace it using a recommended tool.




Recommended Tool - Type: EK JOINT Tool #50  
Brand: ENUMA

- Body [A]
- Handlebar [B]
- Cutting and Riveting Pin [C]
- For Cutting [D]
- For Riveting [E]
- Plate Holder (A) [F]
- Plate Holder (B) [G]
- Gauge [H]

- Remove:
  - Chain Cover (see Drive Chain Removal)
  - Engine Sprocket Cover (see Engine Sprocket Removal)


- Grind [A] the pin head to make it flat.
- Set the cutting and rivetting pin [B] as shown.

- Screw the pin holder until it touches the link pin.
- Be sure that the cutting pin hits center of the link pin.

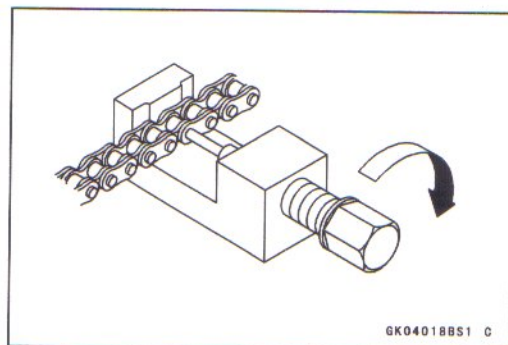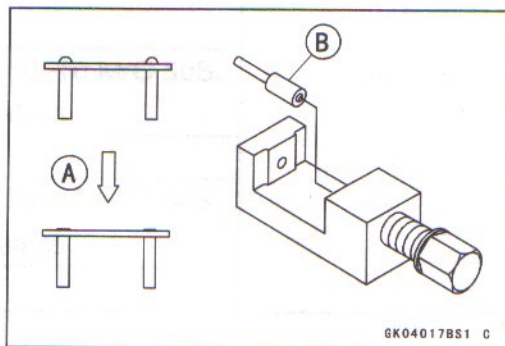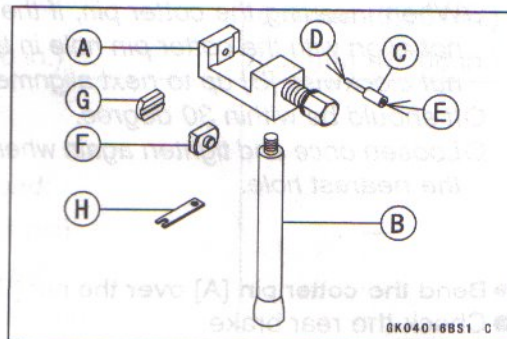


**Final Drive**


- Screw the handlebar [A] into the body.
- Turn the pin holder with the wrench [B] clockwise to extract the link pin.

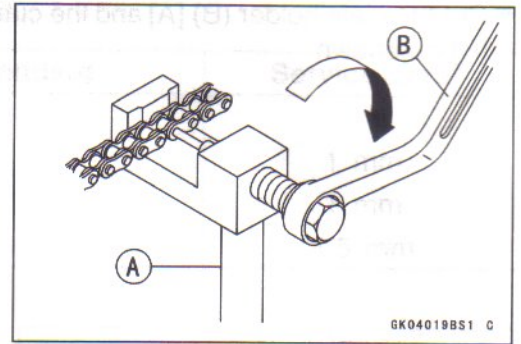


- Replace the link pin, link plate and grease seals.
- Apply grease to the link pins [A] and grease the seals [B].
- Engage the drive chain on the engine and rear sprockets.
- Insert the link pins in the drive chain ends.
- Install the grease seals [C].
- Install the link plate [D] so that the mark faces out.
- Push the link plate by hand or plier to fix it.
- Be sure to set the grease seals correctly.

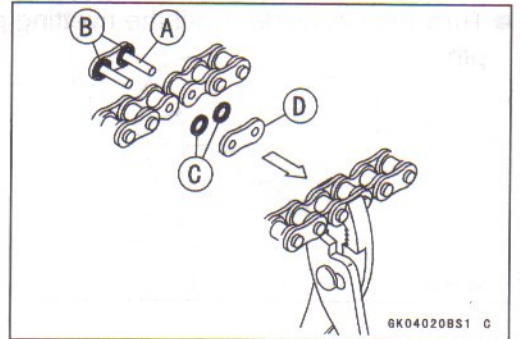


- Set the plate holder (A) [A] and plate holder (B) [B] on the body.

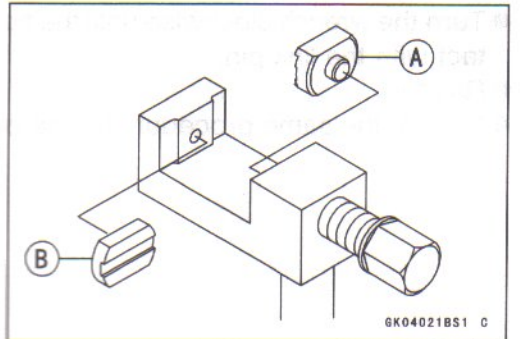

- Fit the plate holder (A) to the link plate.
- Turn the pin holder by hand until the plate holder (B) touches the other link plate.

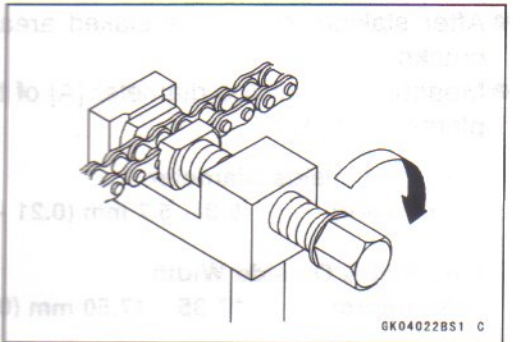


- Turn the pin holder by a wrench clockwise until two pins of link come into groove of the plate holder (A).
- Take off the plate holder.

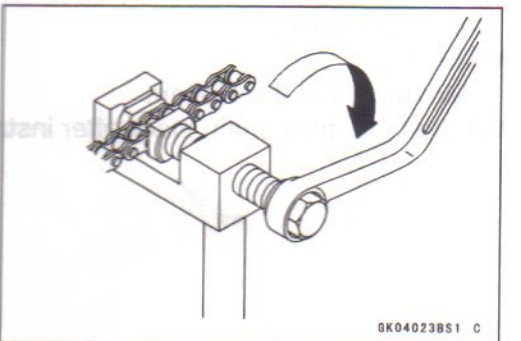


Final Drive


- Set the plate holder (B) [A] and the cutting and riveting pin [B] as shown.

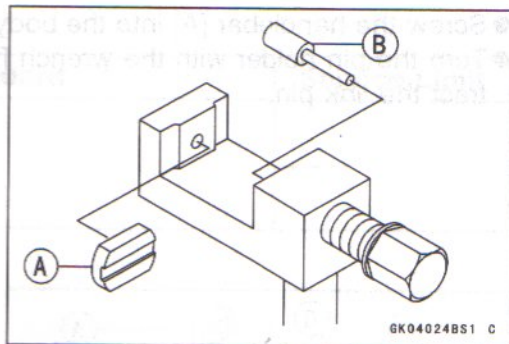

- Turn the pin holder until the rivetting pin touches the link pin.

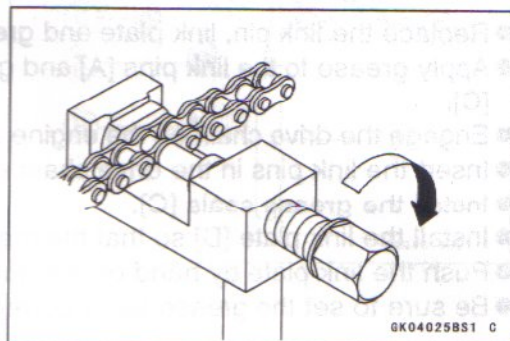

- Turn the wrench clockwise until the tip of rivetting pin contact with the link pin.
- Rivet it.
- Repeat the same procedure for the other link pin.

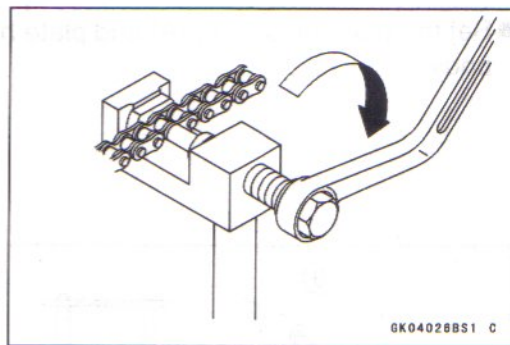

- After staking, check the staked area of the link pin for cracks.
- Measure the outside diameter [A] of the link pin and link plates width [B].

**Link Pin Outside Diameter**

Standard: 5.3 ~ 5.7 mm (0.21 ~ 0.22 in.)

**Link Plates Outside Width**


Standard: 17.35 ~ 17.50 mm (0.68 ~ 0.69 in.)

- ★ If the reading exceeds the specified length, cut and rejoin the chain again.

- Check:

Movement of the Rollers

- Adjust the drive chain slack after installing the chain.

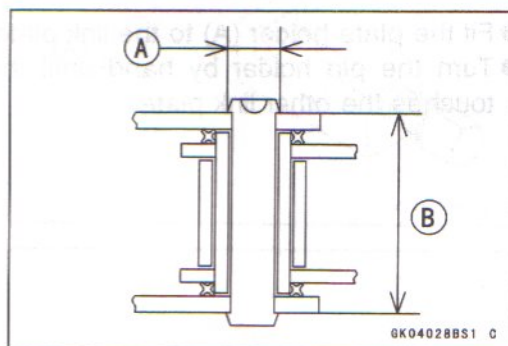

**Brakes**


**Specifications (EX250-F17 ~)**

Item	Standard	Service Limit
Brake Fluid Grade	DOT 4	
Front Disc Brake: Pad Lining thickness	4.3 mm	1 mm
Rear Disc Brake: Pad Lining thickness	4.35 mm	1 mm
Disc thickness	4.8 ~ 5.2 mm	4.5 mm

**Brake Fluid**

*Brake Fluid Change/Brake Line Bleeding*

- Follow the procedure below to install the rear brake fluid reservoir cap correctly.
- First, tighten the rear brake fluid reservoir cap [B] clock-wise [C] by hand until the resistance is felt fully; then, tighten the cap an additional 1/6 turn [D] while holding the brake fluid reservoir [A] body.

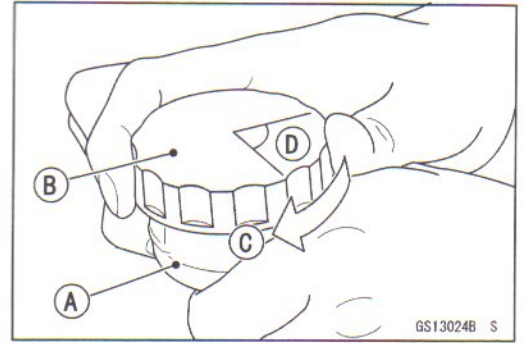

Quick Reference

## MODEL APPLICATION

Year	Model	Beginning Frame No.
1988	EX250-F2	JKAEXMF1□JA000001, or JKAEXMF1□JA008946, or EX250-F000001, or <input checked="" type="checkbox"/> EX250F-008946
1989	EX250-F3	JKAEXMF1□KA004604, or JKAEXMF1□JA009501, or EX250-F004601, or EX250F-009501
1990	EX250-F4	JKAEXMF1□LA014001
1992	EX250-F6	JKAEXMF1□NA021701, or EX250F-021701
1993	EX250-F7	JKAEXMF1□PA030001
1994	EX250-F8	JKAEXMF1□RA038001, or EX250F-038001
1995	EX250-F9	JKAEXMF1□SA044001, or EX250F-044001
1996	EX250-F10	JKAEXMF1□TA049001, or EX250F-049001
1997	EX250-F11	JKAEXMF1□VA052001, or EX250F-052001
2000	EX250-F14	JKAEXMF1□YA069001
2001	EX250-F15	JKAEXMF1□1A077001
2002	EX250-F16	JKAEXMF1□2A086001
2003	EX250-F17	JKAEXMF1□3A096001
2004	EX250-F18	JKAEXMF1□4DA00001
2005	EX250-F19	JKAEXMF1□5DA10001

□: This digit in the frame number changes from one machine to another.



KAWASAKI HEAVY INDUSTRIES, LTD.  
Consumer Products & Machinery Company

Part No.99924-1109-63

Printed in Japan